

Service Service Service

HD 2570/C
HD 2572/C



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

Voltage : 220-240V
Frequency : 50-60Hz
Power consumption : 1200W

SERVICE INFORMATION

| | HD2570/C | HD2572/C |
|-------------|----------|----------|
| Crumb tray | x | x |
| Toasti rack | x | x |
| Bun warmer | - | x |

- Max. timer setting : 200 ± 20 sec.
- In case a technical defect, toaster have to be replaced.
- Only numbered items are serviceable parts.

| | |
|---------------------------|----------------|
| 1 Bun warmer Ivory | 9965 000 01183 |
| 2 Crumb tray Gray | 9965 000 01182 |
| 3 Toasti rack (1 piece) | 9965 000 04871 |

IMPORTANT

Toasti rack 9965 000 04871 CAN NOT be used for the following type number

HD2570/A
HD2570/B
HD2572/A
HD2572/B

