

Service  
Service  
Service



Philips Domestic Appliances and Personal Care

# Service Manual

## PRODUCT INFORMATION

Small-volume brush head

Active tip

Controlled Pressure System

End-rounded bristles

2 speeds

Timer : Red light signal to indicate the two minutes brushing time

Charging light : When the battery in the toothbrush is being charged, the pilot light is green and blinks. If the battery has been fully charged, the pilot light burns continuously.

“Battery low“ indication : Pilot light is red and blinks for 10 seconds after the tooth brush has been switched off.

Number of brushes inserted in luxury carton : 2

Topography colour V-shape : blue

## TECHNICAL DATA

Voltage : 110-127 V; 200-240 V,  
50-60 Hz

Power consumption : 3 Watts

Speed (top) : up to 15.000 brush strokes  
per minute

Pressure control click at : 250 gr.

Charging time (empty to full) : 16 hours

Operating time (full to empty) :  $\pm$  25 minutes

Battery type : NiCd

## SERVICE INFORMATION

### Hand unit tooth brush (1)

Never open the hand unit of the tooth brush, because the unit is not water tight anymore.

In case of a defect, then complete unit must be replaced.

### Charging unit (2)

In case of a defective charging unit or cordset, the complete charging unit must be replaced.

## NOTES

When discarding the appliance, remove the built-in rechargeable battery.


The battery should be completely empty of charge.

**Product meets the requirements regarding interference suppression on radio and TV.**



**PHILIPS**

# EXPLODED VIEW + PARTS LIST HX 2550

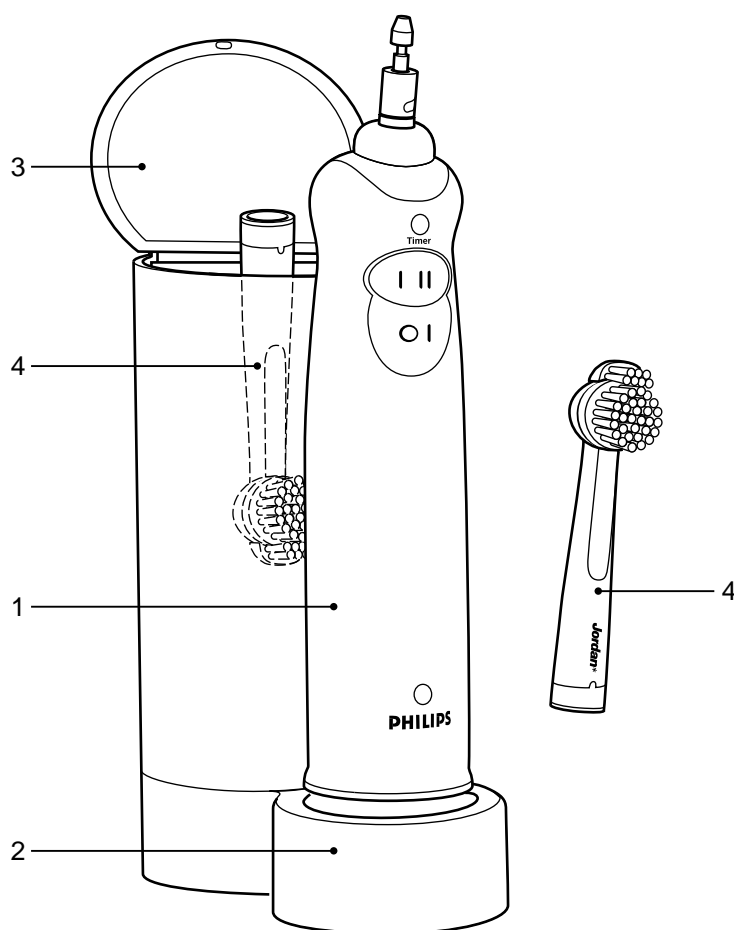

Pos	Description	Service code
1	Rechargeable hand unit (NiCd)	4822 218 12093
	Rechargeable hand unit (NiMh)	4822 218 12095
2	Charging unit 200-240 V. Euro plug	4822 219 10757
	Charging unit 220 V. Korean plug	4822 219 10758
	Charging unit 110-127 V. Taiwan - flat pin plug	4822 219 10759
	Charging unit 220-240 V. Australia/N.Z.	4822 219 10761
3	Cover container	4822 442 01902
4	Set of brushes (2 pcs in blister pack)	4822 479 20272
	Dir. for use: UK, D, N, S, SF, D and Gr	4822 736 17093
	Dir. for use: UK, D, F, NL, E, P, I and TR	4822 736 17092
	Dir. for use: Far East languages + UK	4822 736 17095
	All East European languages	4822 736 17094