**HX** 2565





# **Philips Domestic Appliances and Personal Care**

# ServiceManual

## **PRODUCT INFORMATION**

- Gum Protection System : The brush automatically clicks back

when brushing too hard. Because of this clear signal, the right brushing

force can be adopted.

- Active tip : Cleans in between the teeth

- 2 speeds

- Timer : Red light signal to indicate the two

minutes brushing time

- Charging light : When the battery in the tooth

brush is being charged, the pilot light is green and blinks. If the battery has been fully charged, the pilot light burns

continuously.

- "Battery low" indication : Pilot light is red and blinks for

10 seconds after the tooth brush

has been switched off.

- Number of brush heads inserted into luxury carton: 2

- Topography colour V-shape: blue

# **TECHNICAL DATA**

Voltage : 110-127 V; 200-240 V, 50-60 Hz

Power consumption : 3 Watts

Speed (top) : up to 15.000 brush strokes

per minute

Pressure control click at : 250 gr.

Charging time (empty to full) : 16 hours

Operating time (full to empty) : ± 25 minutes

Battery type : NiCd

#### SERVICE INFORMATION

## Hand unit tooth brush (1)

Never open the hand unit of the tooth brush, because the unit is not water tight anymore.

In case of a defect, the complete unit must be replaced.

## Charging unit (2)

In case of a defective charging unit or cordset, the complete charging unit must be replaced.

## **NOTES**

When discarding the appliance, remove the built-in rechargeable battery.

The battery should be completely empty of charge.

Product meets the requirements regarding interference suppression on radio and TV.

Published by Philips Domestic Appliances and Personal Care


Printed in the Netherlands

© Copyright reserved

Subject to modification





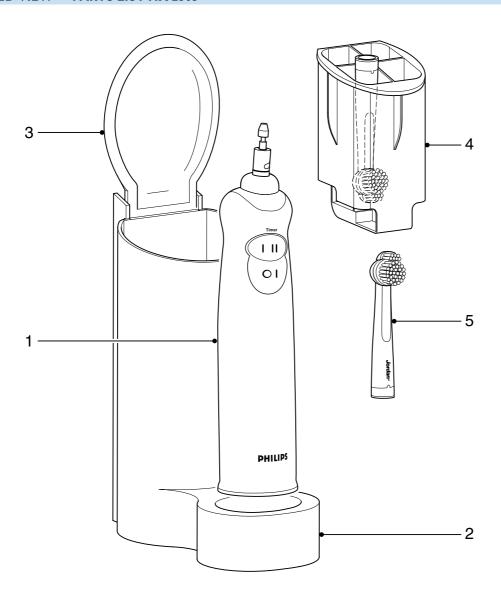

Pos	Description	Service code
ı	Rechargeable hand unit (NiCd)	4822 218 12093
2	Charging unit 200-240 V. EURO plug Charging unit 200-240 V. UK plug Charging unit 110-127V. Taiwan - flat pin plug Charging unit 220 V. Korean plug	4203 035 75580 4203 035 75590 4203 035 75600 4203 035 75610
3	Cover container	4822 442 01902
4	Insert container	4203 035 75620
5	Set of brushes (2 pack)	8812 012 30020