


# Service Manual

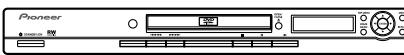

DV-260-S

ORDER NO.  
**RRV2723**

DVD PLAYER

# DV-260-S DV-263-K

**THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).**

Model	Type	Power Requirement	Region No.	Serial No. Please confirm 3rd & 4th alphabetical letters.
DV-260-S	KUXU/CA	AC120V	1	&&PG#####\$\$
DV-260-S	KUXQ/CA	AC120V	1	&&CP#####\$\$
DV-260-S	KUXCN/CA	AC120V	1	&&TE#####\$\$
DV-263-K	KUXU/CA	AC120V	1	&&PG#####\$\$



For details, refer to "Important symbols for good services".

**PIONEER CORPORATION** 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan

**PIONEER ELECTRONICS (USA) INC.** P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

**PIONEER EUROPE NV** Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

**PIONEER ELECTRONICS ASIACENTRE PTE. LTD.** 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2003

T-ZZE FEB. 2003 printed in Japan

# SAFETY INFORMATION



**This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.**

**Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.**

## WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

## NOTICE

### (FOR CANADIAN MODEL ONLY)

Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

## REMARQUE

### (POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


### (FOR USA MODEL ONLY)

#### 1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

#### LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

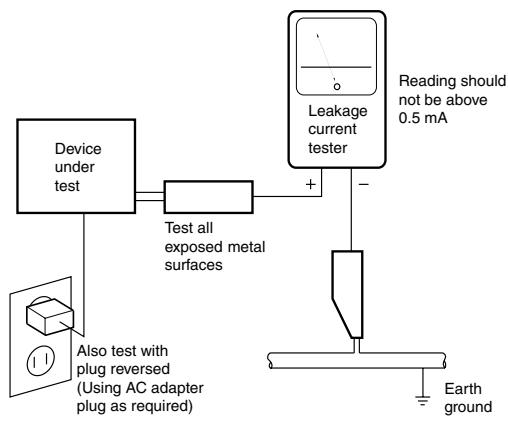

**ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.**

#### 2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

**[ Important symbols for good services ]**

In this manual, the symbols shown below indicate that adjustments, settings or cleaning should be made securely. When you find the procedures bearing any of the symbols, be sure to fulfill them:

**1. Product safety**

You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

**2. Adjustments**

To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

**3. Cleaning**

For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

**4. Shipping mode and shipping screws**

To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

**5. Lubricants, glues, and replacement parts**

Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount. For replacement parts or tools, the prescribed ones should be used.

A

B

C

D

E

F

# CONTENTS

A	SAFETY INFORMATION .....	2
	1. SPECIFICATIONS .....	5
	2. EXPLODED VIEWS AND PARTS LIST .....	6
	2.1 PACKING .....	6
	2.2 EXTERIOR SECTION .....	8
	2.3 FRONT PANEL SECTION .....	10
	2.4 LOADING MECHA ASSY .....	12
	2.5 TRAVERSE MECHA ASSY-S .....	14
	3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM .....	16
	3.1 BLOCK DIAGRAM .....	16
	3.2 WAVEFORMS .....	18
	3.3 LOAB ASSY and OVERALL WIRING DIAGRAM .....	20
B	3.4 DVDM ASSY 1/3 [FRONT END BLOCK] .....	22
	3.5 DVDM ASSY 2/3 [BACK END BLOCK] .....	24
	3.6 DVDM ASSY 3/3 [AUDIO/VIDEO BLOCK] .....	26
	3.7 FLKY and IRKY ASSYS .....	28
	3.8 POWER SUPPLY UNIT [VWR1365] .....	30
	3.9 POWER SUPPLY UNIT [VWR1367] .....	31
C	4. PCB CONNECTION DIAGRAM .....	33
	4.1 LOAB ASSY .....	33
	4.2 DVDM ASSY .....	34
	4.3 FLKY ASSY .....	38
	4.4 IRKY ASSY .....	39
	4.5 POWER SUPPLY UNIT [VWR1365] .....	40
	4.6 POWER SUPPLY UNIT [VWR1367] .....	41
	5. PCB PARTS LIST .....	42
	6. ADJUSTMENT .....	44
	6.1 ADJUSTMENT ITEMS AND LOCATION .....	44
	6.2 JIGS AND MEASURING INSTRUMENTS .....	44
	6.3 NECESSARY ADJUSTMENT POINTS .....	45
	6.4 TEST MODE .....	46
	6.5 MECHANISM ADJUSTMENT .....	47
D	7. GENERAL INFORMATION .....	50
	7.1 DIAGNOSIS .....	50
	7.1.1 TEST MODE .....	50
	7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE .....	52
	7.1.3 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY .....	53
	7.1.4 SPECIFICATION OF MODEL INFORMATION DISPLAY .....	54
	7.1.5 FUNCTIONAL SPECIFICATION OF THE SERVICE MODE .....	55
	7.1.6 MECHANICAL ERROR HISTORY .....	56
	7.1.7 ID NUMBER AND ID DATA SETTING .....	59
	7.1.8 SEQUENCE AFTER POWER ON .....	62
	7.1.9 DISASSEMBLY .....	63
	7.2 IC .....	70
	7.3 DISC / CONTENT FORMAT PLAYBACK COMPATIBILITY .....	84
	7.4 CLEANING .....	85
E	8. PANEL FACILITIES .....	86

# 1. SPECIFICATIONS

## General

System . . . . .	DVD player
Power requirements . . . . .	AC 120 V, 60 Hz
Power consumption . . . . .	11 W
Power consumption (standby) . . . . .	0.12 W
Weight . . . . .	2.3 kg / 5 lb 1 oz

Dimensions:

DV-260/DV-263 . . . 420 (W) x 53 (H) x 283 (D) mm  
(16.5 (W) x 2.1 (H) x 11.1 (D) in.)

Operating temperature . . . . . +5°C to +35°C  
(+41°F to +95°F)

Operating humidity . . . . . 5% to 85%  
(no condensation)

## Component video output

Y (luminance) - Output level . . . . .	1 Vp-p (75 Ω)
P <sub>B</sub> (color) - Output level . . . . .	0.7 Vp-p (75 Ω)
P <sub>R</sub> (color) - Output level . . . . .	0.7 Vp-p (75 Ω)
Jack. . . . .	RCA jacks

## S-video output

Y (luminance) - Output level . . . . .	1 Vp-p (75 Ω)
C (color) - Output level . . . . .	286 mVp-p (75 Ω)
Jack. . . . .	S-video jack

## Video output

Output level . . . . .	1 Vp-p (75 Ω)
Jack. . . . .	RCA jack

## Audio output (1 stereo pair)

Output level . . . . .	During audio output 200 mVrms (1 kHz, -20 dB)
Number of channels . . . . .	2

Jacks . . . . . RCA jack

## Digital audio characteristics

Frequency response . . . . .	4 Hz to 44 kHz (DVD fs: 96 kHz)
S/N ratio . . . . .	115 dB
Dynamic range . . . . .	101 dB
Total harmonic distortion . . . . .	0.0016 %
Wow and flutter. . . . .	Limit of measurement (±0.001% W. PEAK) or lower

## Digital output

Optical digital output . . . . .	Optical digital jack
Coaxial digital output . . . . .	RCA jack

## Accessories

Audio/video cable . . . . .	1
Power cable . . . . .	1
Remote control . . . . .	1
AA/R6P dry cell batteries. . . . .	2
Operating Instructions . . . . .	1
Warranty card . . . . .	1



### Note

- The specifications and design of this product are subject to change without notice, due to improvement.


- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.*
- "DTS" and "DTS Digital Out" are registered trademarks of Digital Theater Systems, Inc.*
- TruSurround and the  symbol are trademarks of SRS Labs, Inc. TruSurround technology is incorporated under license from SRS Labs, Inc.*

## 2. EXPLODED VIEWS AND PARTS LIST

**A** NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  $\nabla$  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.  
(In the case of no amount instructions, apply as you think it appropriate.)

### 2.1 PACKING

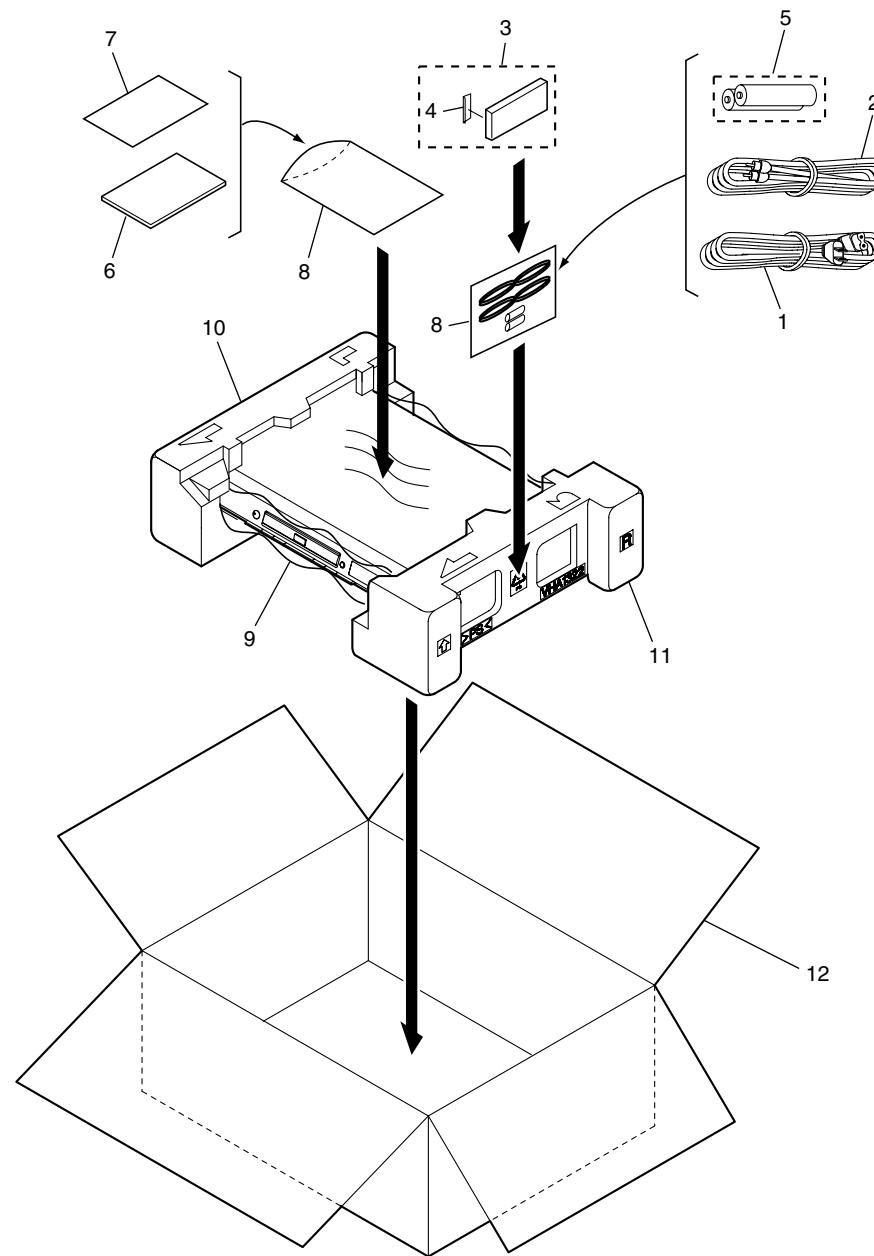

## PACKING parts List

<b>Mark No.</b>	<b>Description</b>	<b>Part No.</b>	<b>Mark No.</b>	<b>Description</b>	<b>Part No.</b>
△ 1	Power Cable	See Contrast table (2)	NSP 7	Warranty Card (Pusa 90)	ARY7063
2	Audio / Video Cable	See Contrast table (2)	8	Polyethylene Bag	VHL1051
3	Remote Control	VXX2865	9	Sheet	See Contrast table (2)
4	Battery Cover	VNK4997	10	Pad L	See Contrast table (2)
NSP 5	AA/R6P Dry Cell Batteries	See Contrast table (2)	11	Pad R	See Contrast table (2)
6	Operating Instructions (English)	VRB1307	12	Packing Case	See Contrast table (2)

## (2) CONTRAST TABLE

DV-260-S/KUXU/CA, KUXQ/CA, KUXCN/CA and DV-263-K/KUXU/CA are constructed the same except for the following :

Mark	No.	Symbol and Description	DV-260-S/KUXU/ CA	DV-260-S/KUXQ/ CA	DV-260-S/ KUXCN/CA	DV-263-K/KUXU/ CA
△	1	Power Cable	ADG7021	ADG7021	ADG7022	ADG7021
NSP	2	Audio / Video Cable	VDE1077	VDE1077	VDE1078	VDE1077
	5	AA/R6P Dry Cell Batteries	VEM1030	VEM1030	VEM1010	VEM1030
	9	Sheet	Z23-007	Z23-007	VHL1006	Z23-007
	10	Pad L	VHA1321	VHA1321	VHA1330	VHA1321
	11	Pad R	VHA1322	VHA1322	VHA1331	VHA1322
	12	Packing Case	VHG2330	VHG2354	VHG2334	VHG2302

B

C


D

E


F

## 2.2 EXTERIOR SECTION


A

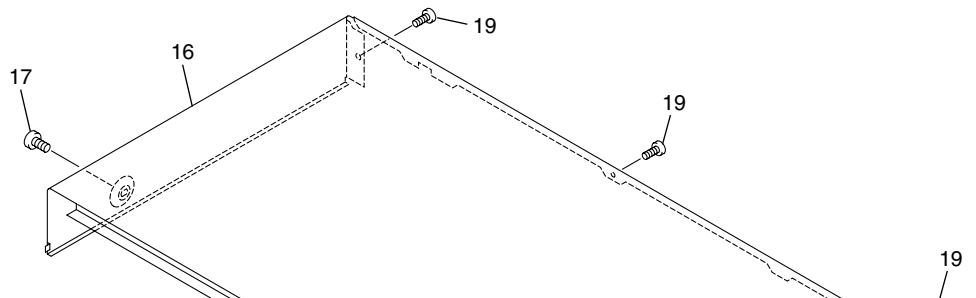


B

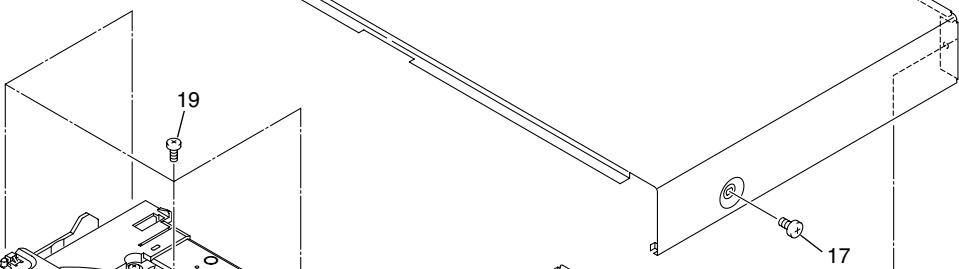


C

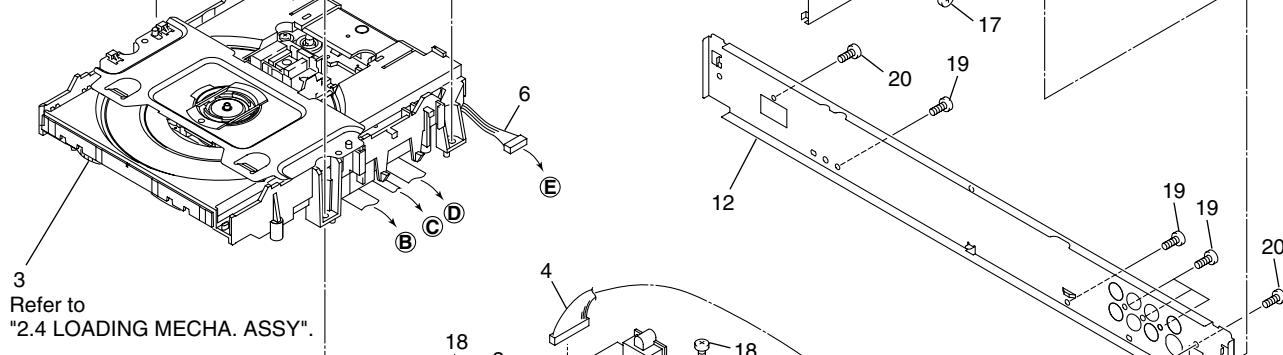

D

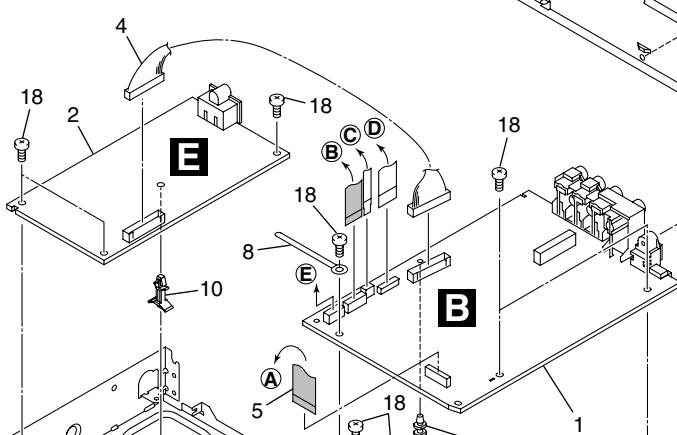


E

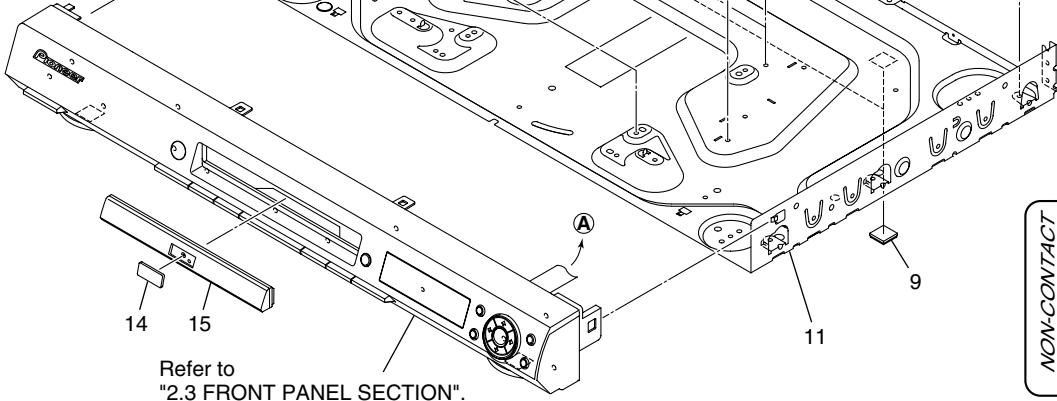

F

Refer to "2.3 FRONT PANEL SECTION".

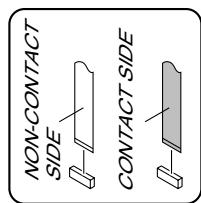

## EXTERIOR SECTION parts List


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	DVDM Assy	VWS1555	NSP 11	Base Chassis	See Contrast table (2)
△ 2	POWER SUPPLY Unit	VWR1365 (or VWR1367)	12	Rear Panel	See Contrast table (2)
NSP 3	Loading Mecha. Assy	VWT1207	13	PCB Base	See Contrast table (2)
4	Connector Assy	See Contrast table (2)	14	DVD V Plate	See Contrast table (2)
5	Flexible Cable (15P)	See Contrast table (2)	15	Tray Panel	See Contrast table (2)
6	Connector Assy (5P)	See Contrast table (2)	16	Bonnet Case S	See Contrast table (2)
NSP 7	PCB Spacer (3X6)	AEC7156	17	Screw	See Contrast table (2)
8	Cord Clamper	RNH-184	18	Screw	BBZ30P060FMC
9	Rubber Foot	VEB1349	19	Screw	BBZ30P080FZK
10	PCB Support	VEC2184	20	Screw	PPZ30P080FMC

### (2) CONTRAST TABLE

DV-260-S/KUXU/CA, KUXQ/CA, KUXCN/CA and DV-263-K/KUXU/CA are constructed the same except for the following :

Mark	No.	Symbol and Description	DV-260-S/KUXU/CA	DV-260-S/KUXQ/CA	DV-260-S/KUXCN/CA	DV-263-K/KUXU/CA
NSP	4	Connector Assy	PF13PP-D25	PF13PP-D25	VKP2280	PF13PP-D25
	5	Flexible Cable (15P)	VDA1963	VDA1963	VDA1962	VDA1963
	6	Connector Assy (5P)	VKP2301	VKP2301	VKP2299	VKP2301
	11	Base Chassis	VNA2614	VNA2614	VNA2562	VNA2614
	12	Rear Panel	VNA2572	VNA2572	VNA2572	VNA2538
	13	PCB Base	VNE2278	VNE2278	VNE2279	VNE2278
	14	DVD V Plate	VAM1135	VAM1135	VAM1135	VAM1120
	15	Tray Panel	VNK5155	VNK5155	VNK5155	VNK5154
	16	Bonnet Case S	VXX2823	VXX2823	Not used	VXX2831
	16	Bonnet Case	Not used	Not used	VNA2403	Not used
	17	Screw	BCZ40P060FNI	BCZ40P060FNI	BCZ40P060FNI	BCZ40P060FZK

## 2.3 FRONT PANEL SECTION

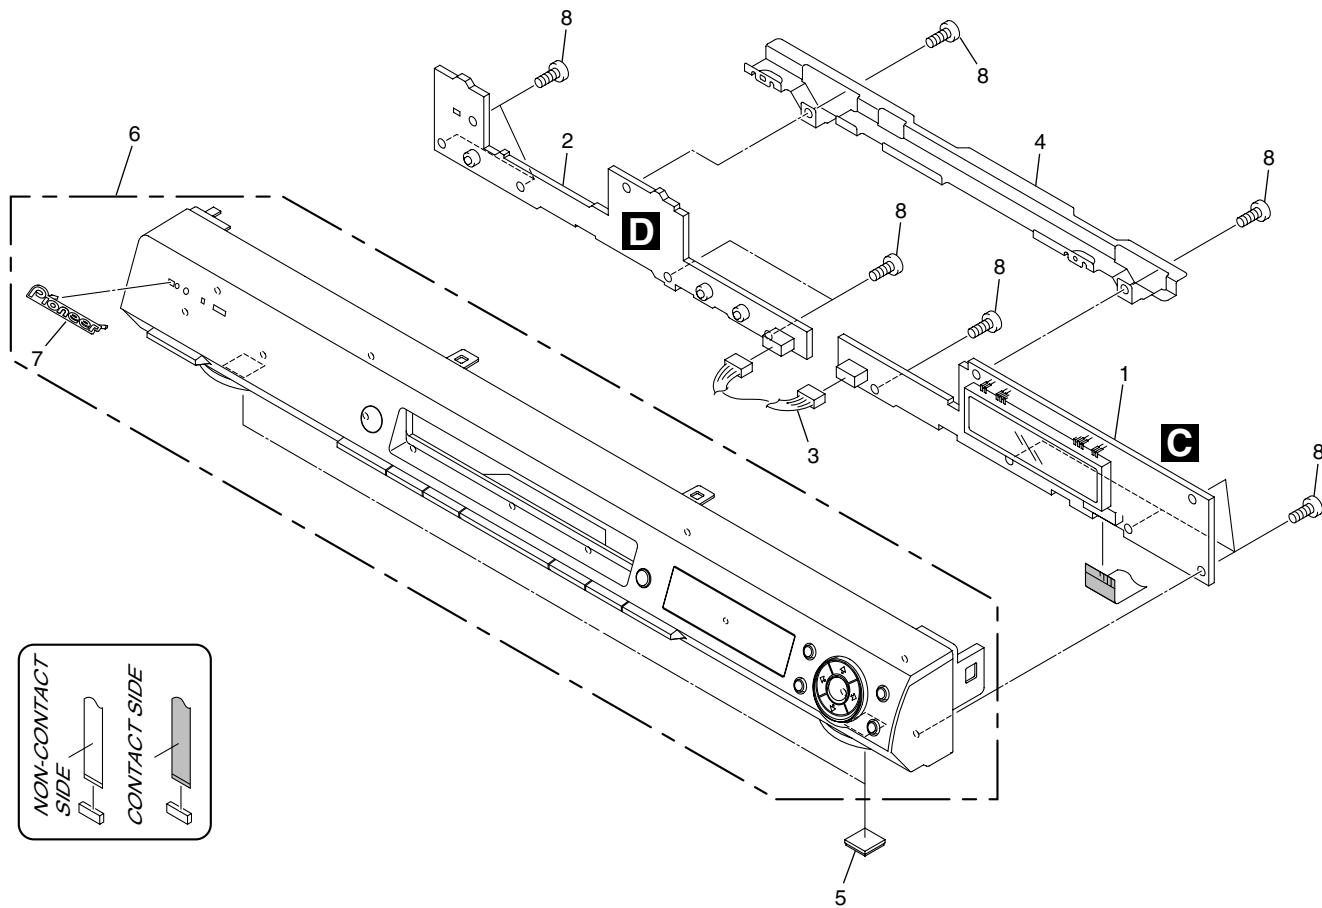

## FRONT PANEL SECTION parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	FLKY Assy	VWG2407			
2	IRKY Assy	VWG2414	6	Front Panel Assy	See Contrast table (2)
3	Connector Assy (4P)	See Contrast table (2)	7	Pioneer Name Plate	See Contrast table (2)
4	FP Angle	See Contrast table (2)	8	Screw	PPZ30P080FMC
5	Rubber Foot	VEB1349			

### (2) CONTRAST TABLE

DV-260-S/KUXU/CA, KUXQ/CA, KUXCN/CA and DV-263-K/KUXU/CA are constructed the same except for the following :

Mark	No.	Symbol and Description	DV-260-S/KUXU/ CA	DV-260-S/KUXQ/ CA	DV-260-S/ KUXCN/CA	DV-263-K/KUXU/ CA
NSP	3	Connector Assy (4P)	VKP2300	VKP2300	VKP2298	VKP2300
	4	FP Angle	VNE2297	VNE2297	Not used	VNE2297
	4	FP Angle	Not used	Not used	VNE2308	Not used
	6	Front Panel Assy	VXA2564	VXA2564	VXA2564	VXA2548
	7	Pioneer Name Plate	VAM1129	VAM1129	VAM1129	VAM1130

A

B

C

D

E


F

## 2.4 LOADING MECHA ASSY

**Note :**






Refer to  
"Application of Lubricant".

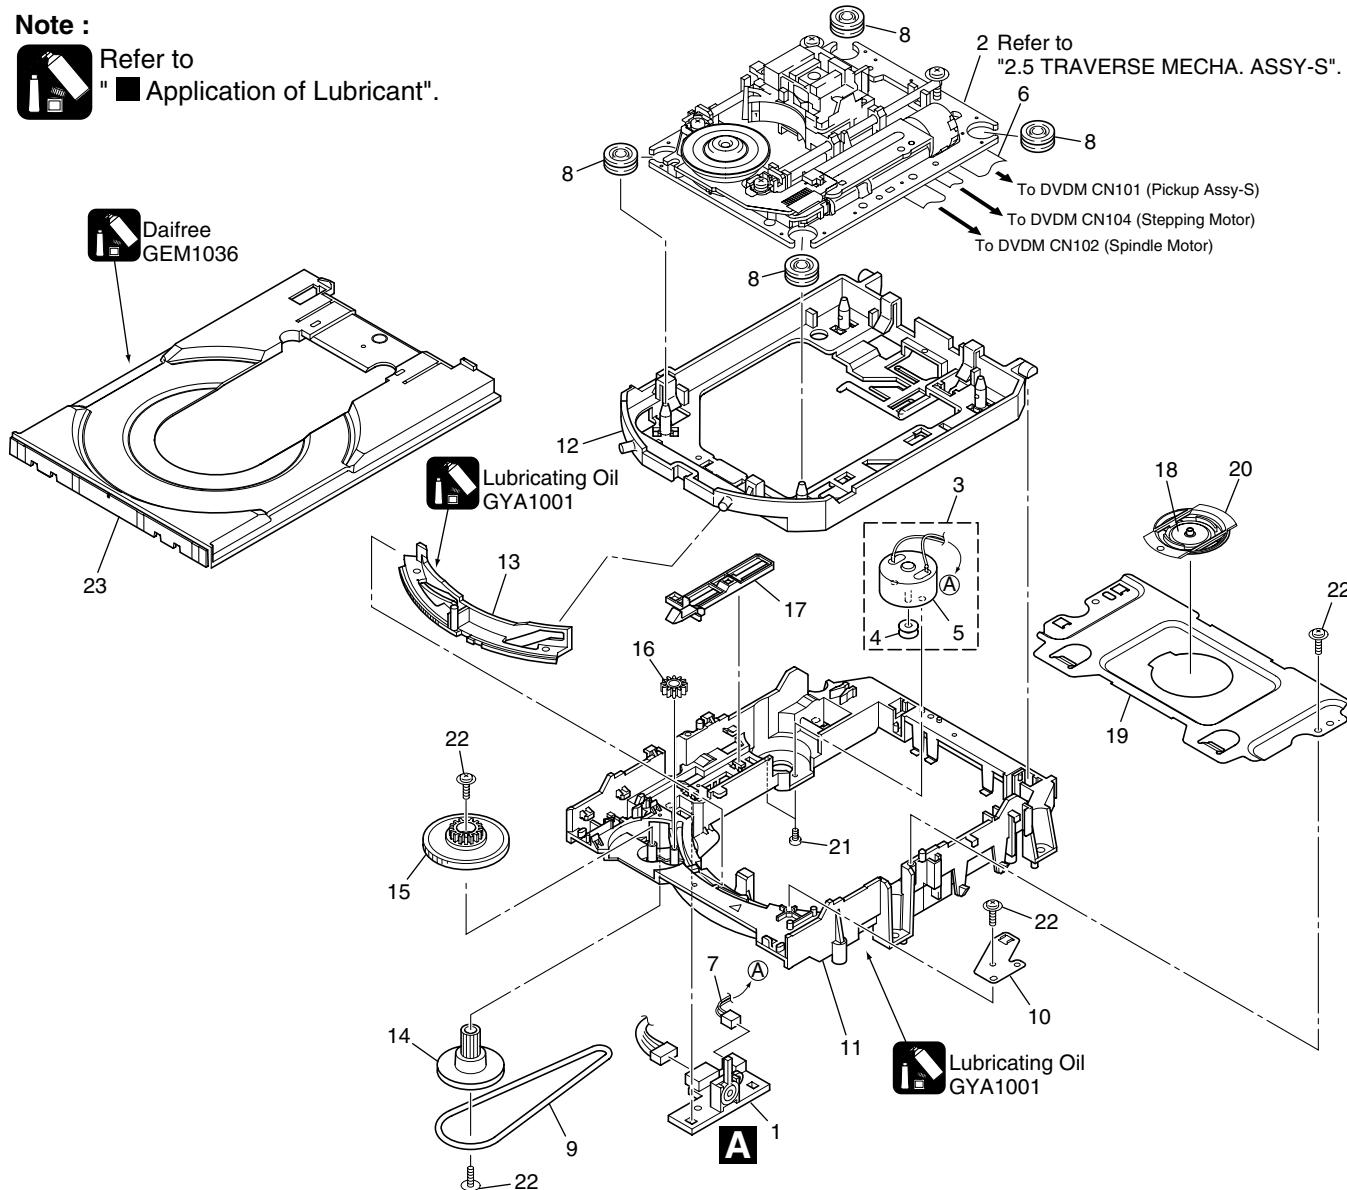

### LOADING MECHA ASSY parts List



	<b>Mark No.</b>	<b>Description</b>	<b>Part No.</b>		<b>Mark No.</b>	<b>Description</b>	<b>Part No.</b>
E	1	LOAB Assy	VWG2426		17	SW Lever	VNL1925
	2	Traverse Mecha. Assy-S	VXX2871		18	Clamper Plate	VNE2251
	3	Loading Motor Assy	VXX2872		19	Bridge	VNE2252
	4	Motor Pulley	PNW1634		20	Clamper	VNL1924
	5	Motor	VXM1105		21	Screw	JGZ17P028FMC
	6	Flexible Cable (24P)	VDA1945		22	Screw	Z39-019
	7	Connector Assy 2P	VKP2253		23	Tray	VNL1920
	8	Floating Rubber	VEB1351				
	9	Belt	VEB1330				
	10	Stabilizer	VNE2253				
F	11	Loading Base	VNL1917				
	12	Float Base DVD	VNL1918				
	13	Drive Cam	VNL1919				
	14	Gear Pulley	VNL1921				
	15	Loading Gear	VNL1922				
	16	Drive Gear	VNL1923				

## ■ Application of Lubricant

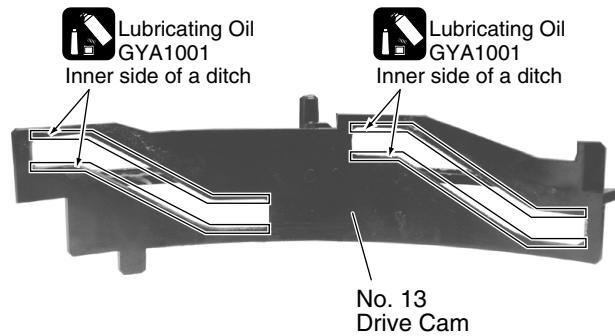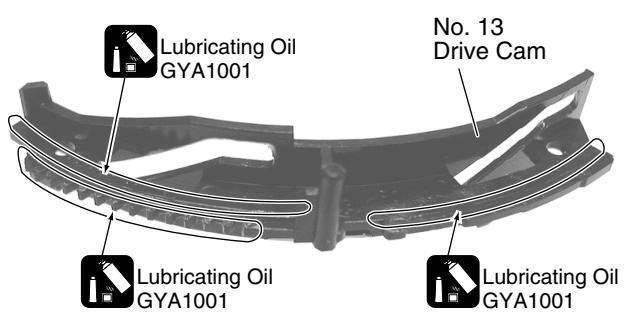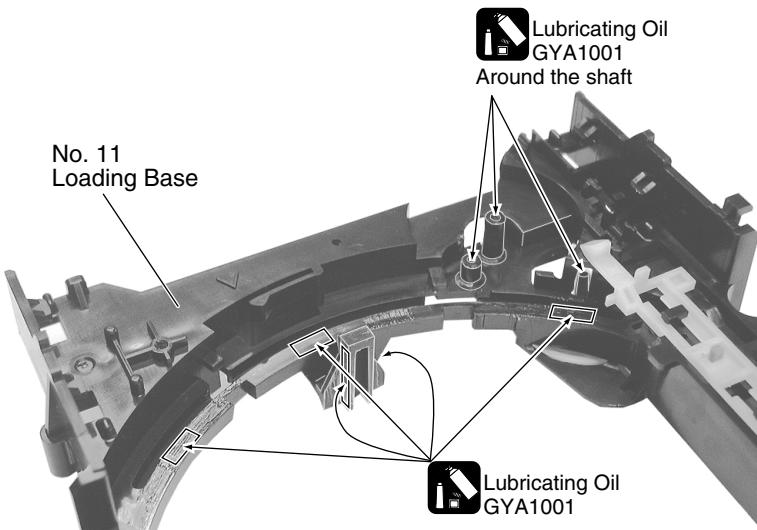

● Front View

● Rear View

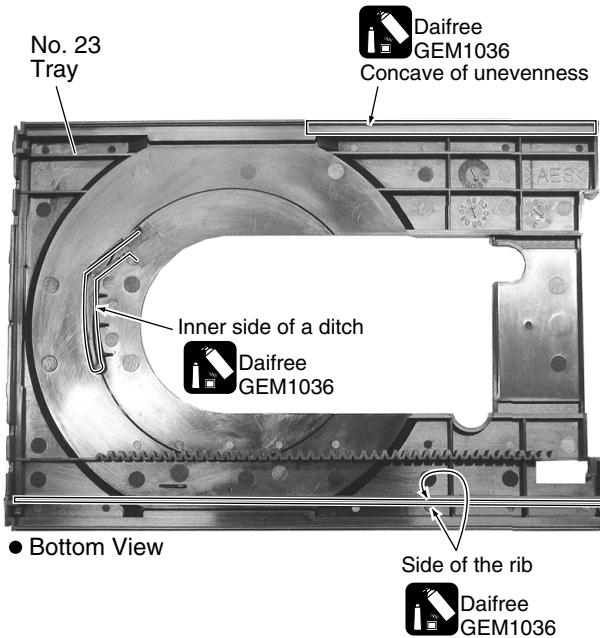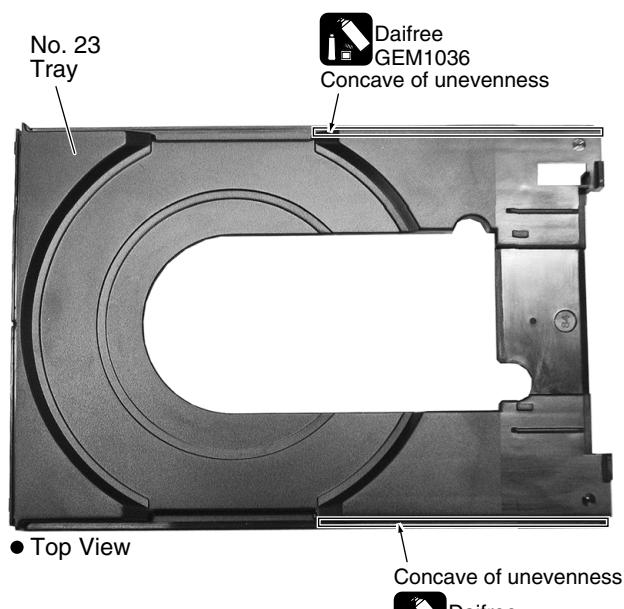


● Top View

● Bottom View

## 2.5 TRAVERSE MECHA ASSY-S

A

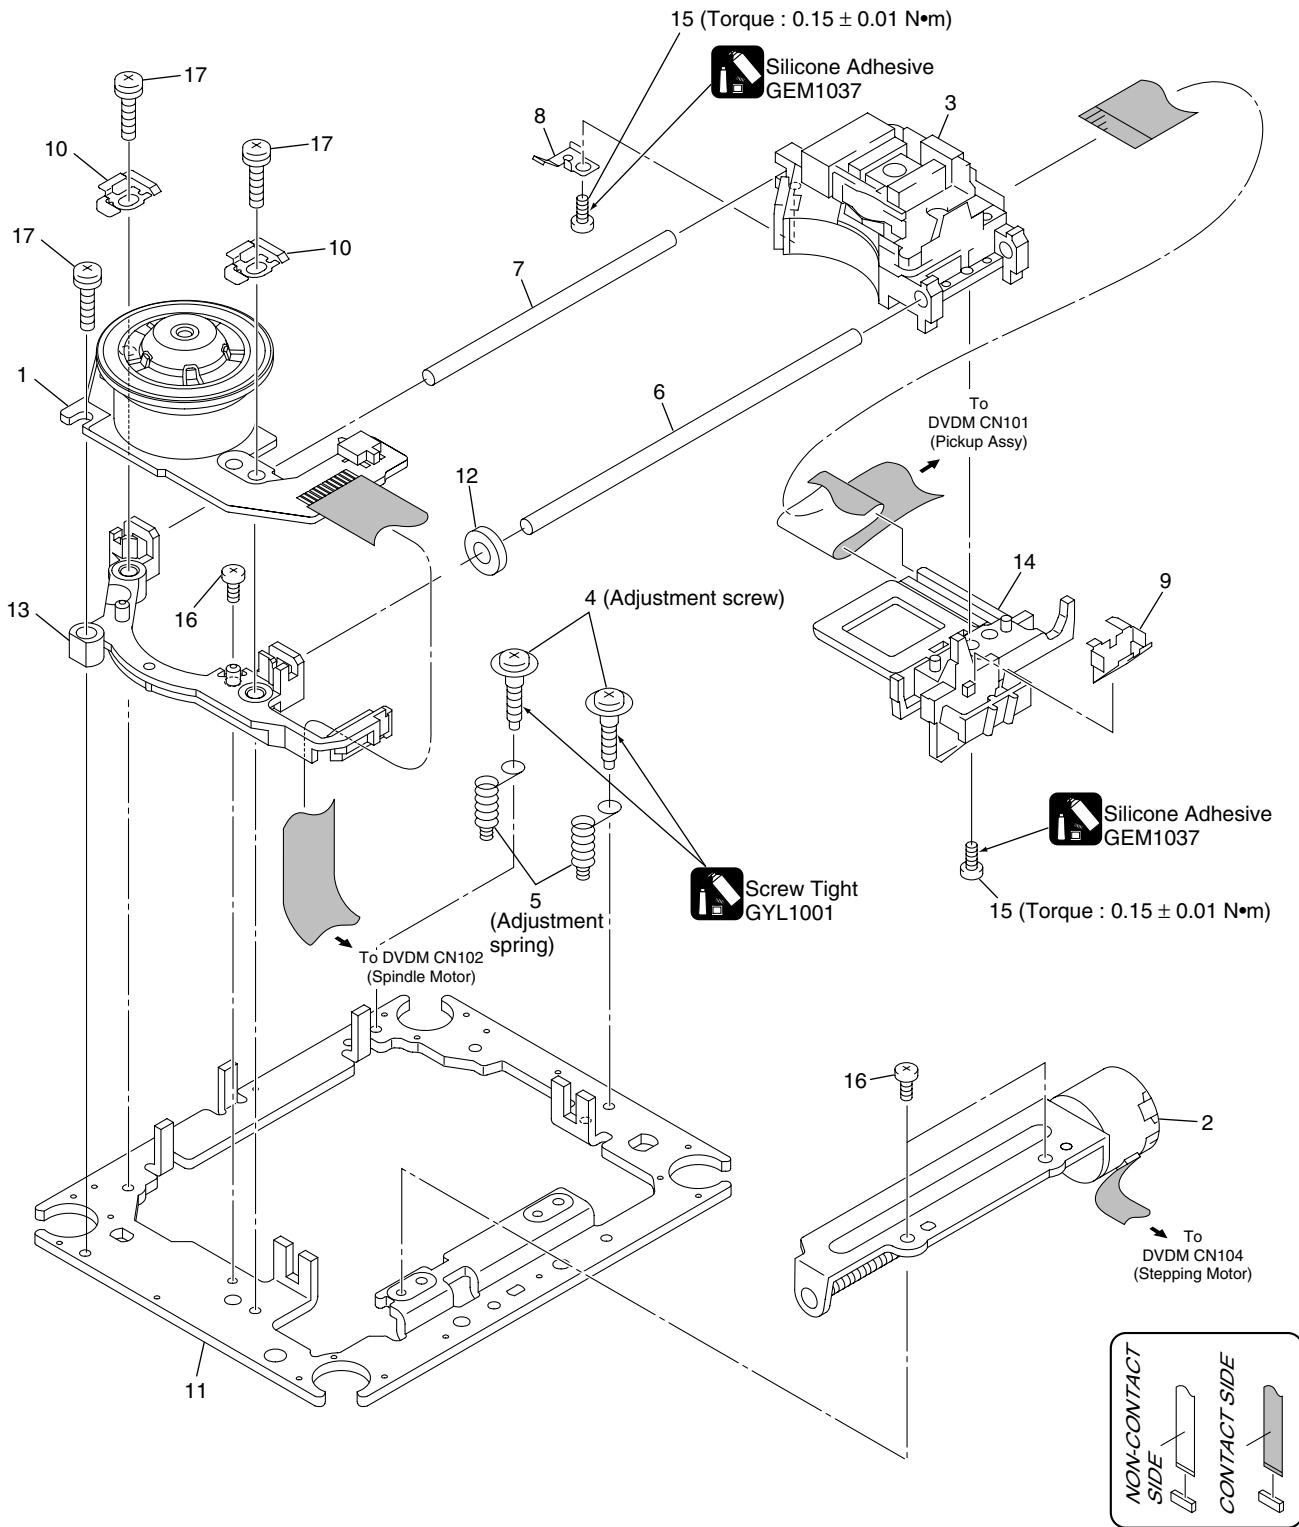

## TRAVERSE MECHA ASSY-S parts List

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Spindle Motor	VXM1099
2	Stepping Motor	VXM1101
3	Pickup Assy-S	OXX8005
4	Skew Screw	VBA1080
5	Skew Spring	VBH1335
6	Guide Bar	VLL1514
7	Sub Guide Bar	VLL1515
8	Leaf Spring	VNC1023
9	Joint Spring	VNC1019
10	Support Spring	VNC1020
NSP 11	Mecha.Chassis	VNE2248
12	Damper Sheet	VEB1335
13	Spacer	VNL1913
14	Joint 03	VNL1949
15	Tapping Screw	OBA8016
16	Screw	BBZ20P050FZK
17	Screw	PMA26P100FMC

A

B

C

D


E

F


### 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

#### 3.1 BLOCK DIAGRAM


A

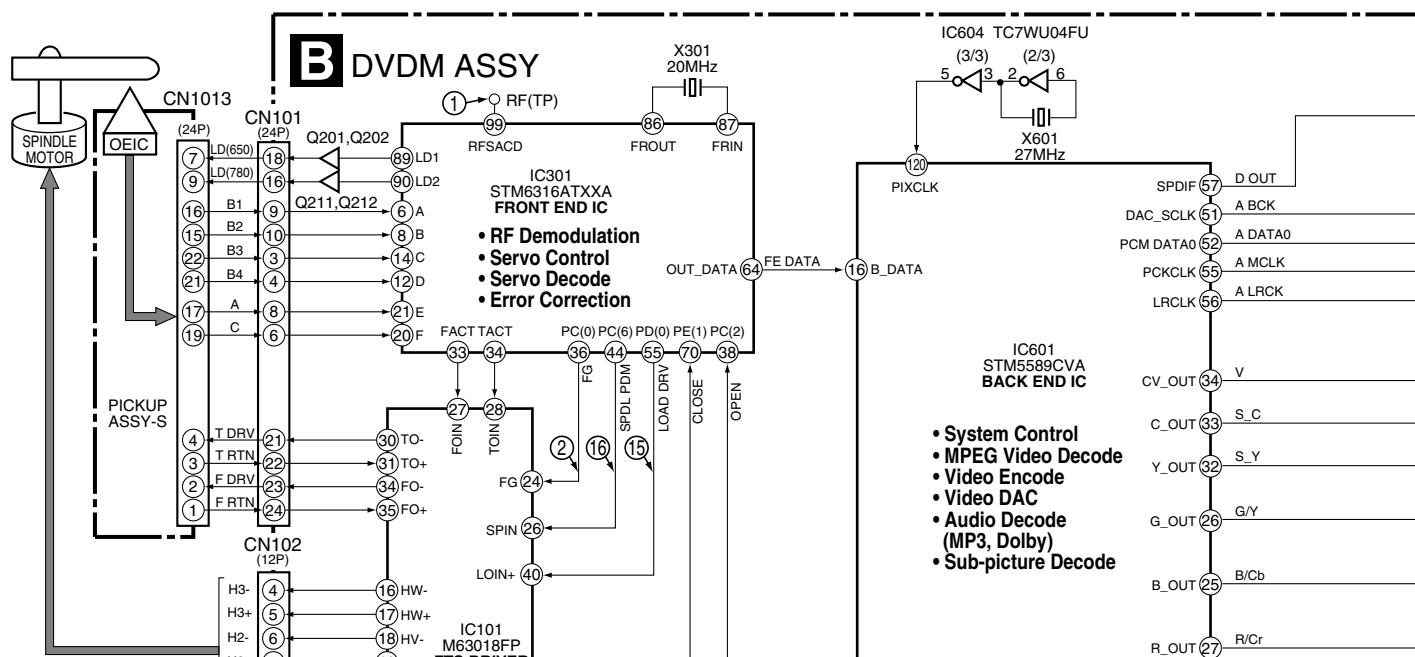


B

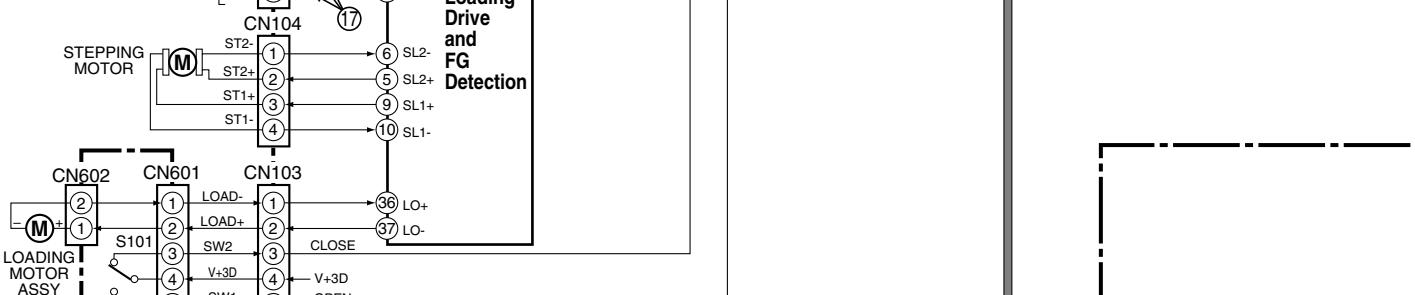



C

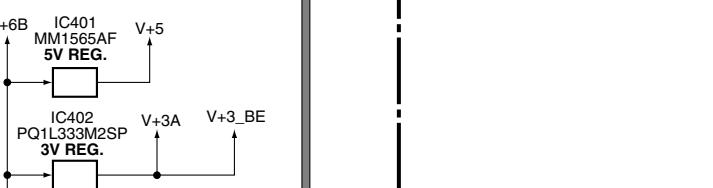

D

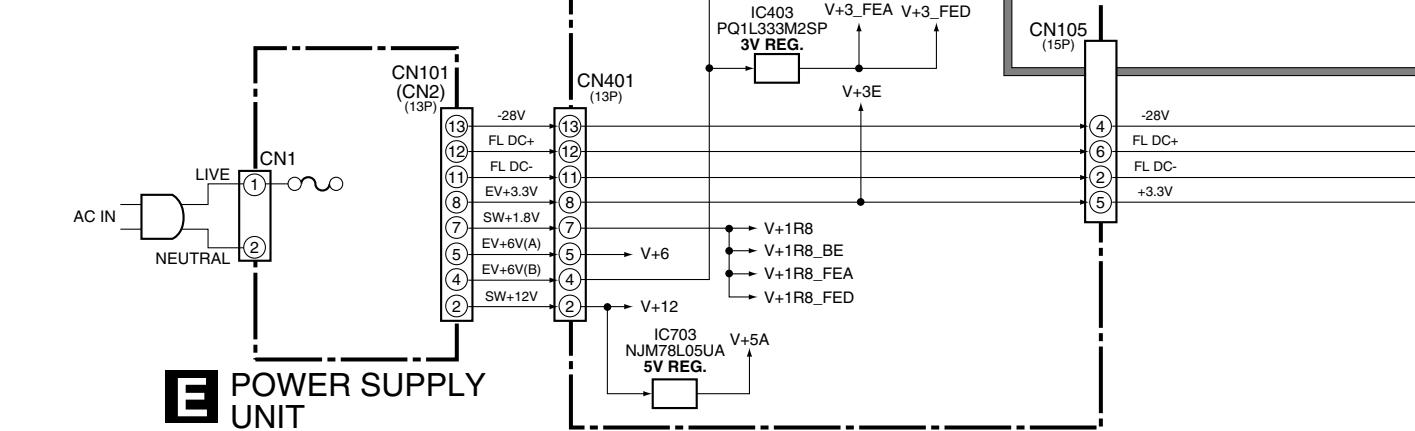

①—⑯: Refer to "3.2 WAVEFORMS".

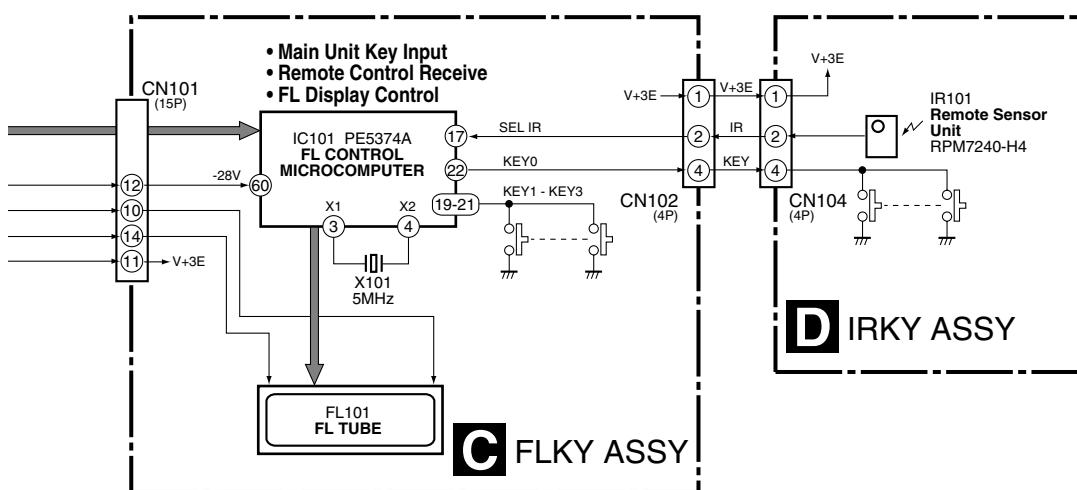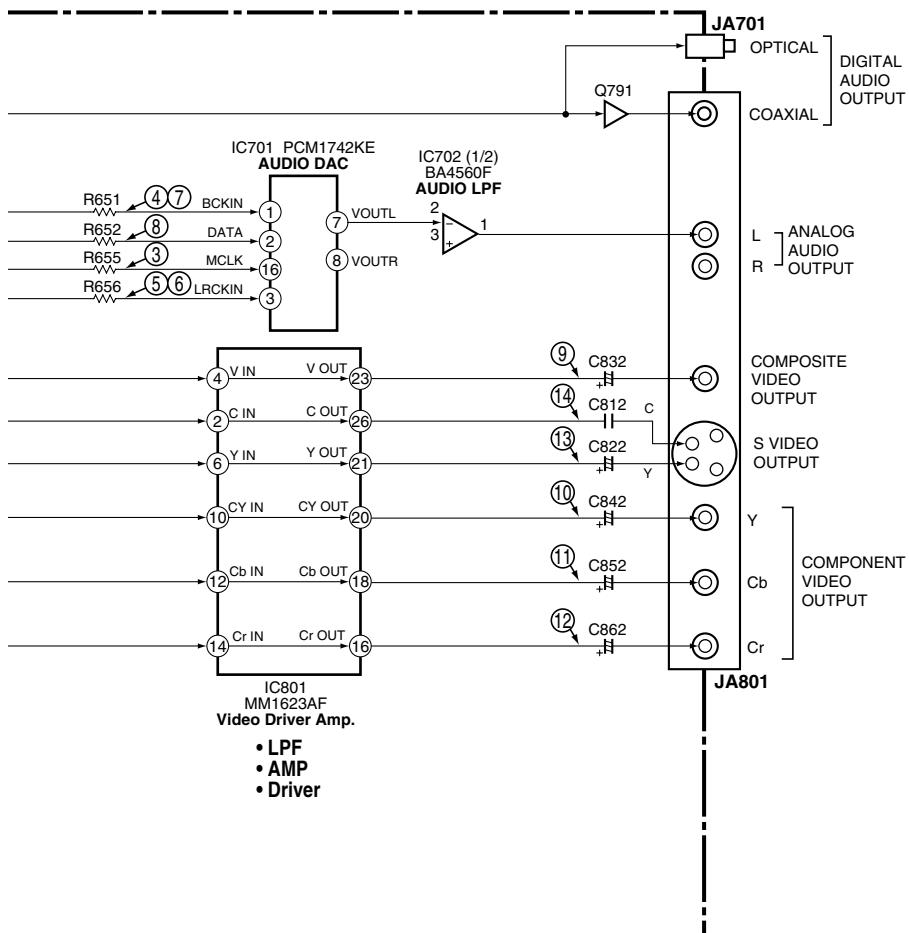


## 3.2 WAVEFORMS

A Note : The encircled numbers denote measuring point in the schematic diagram.

Measurement condition : No. 1 to 2 and 9 to 14 : reference A1 (DVD), T2-chp 19, Color-bar  
No. 3 to 8 : reference A1 (DVD), T2-chp 1

### B DVDM ASSY

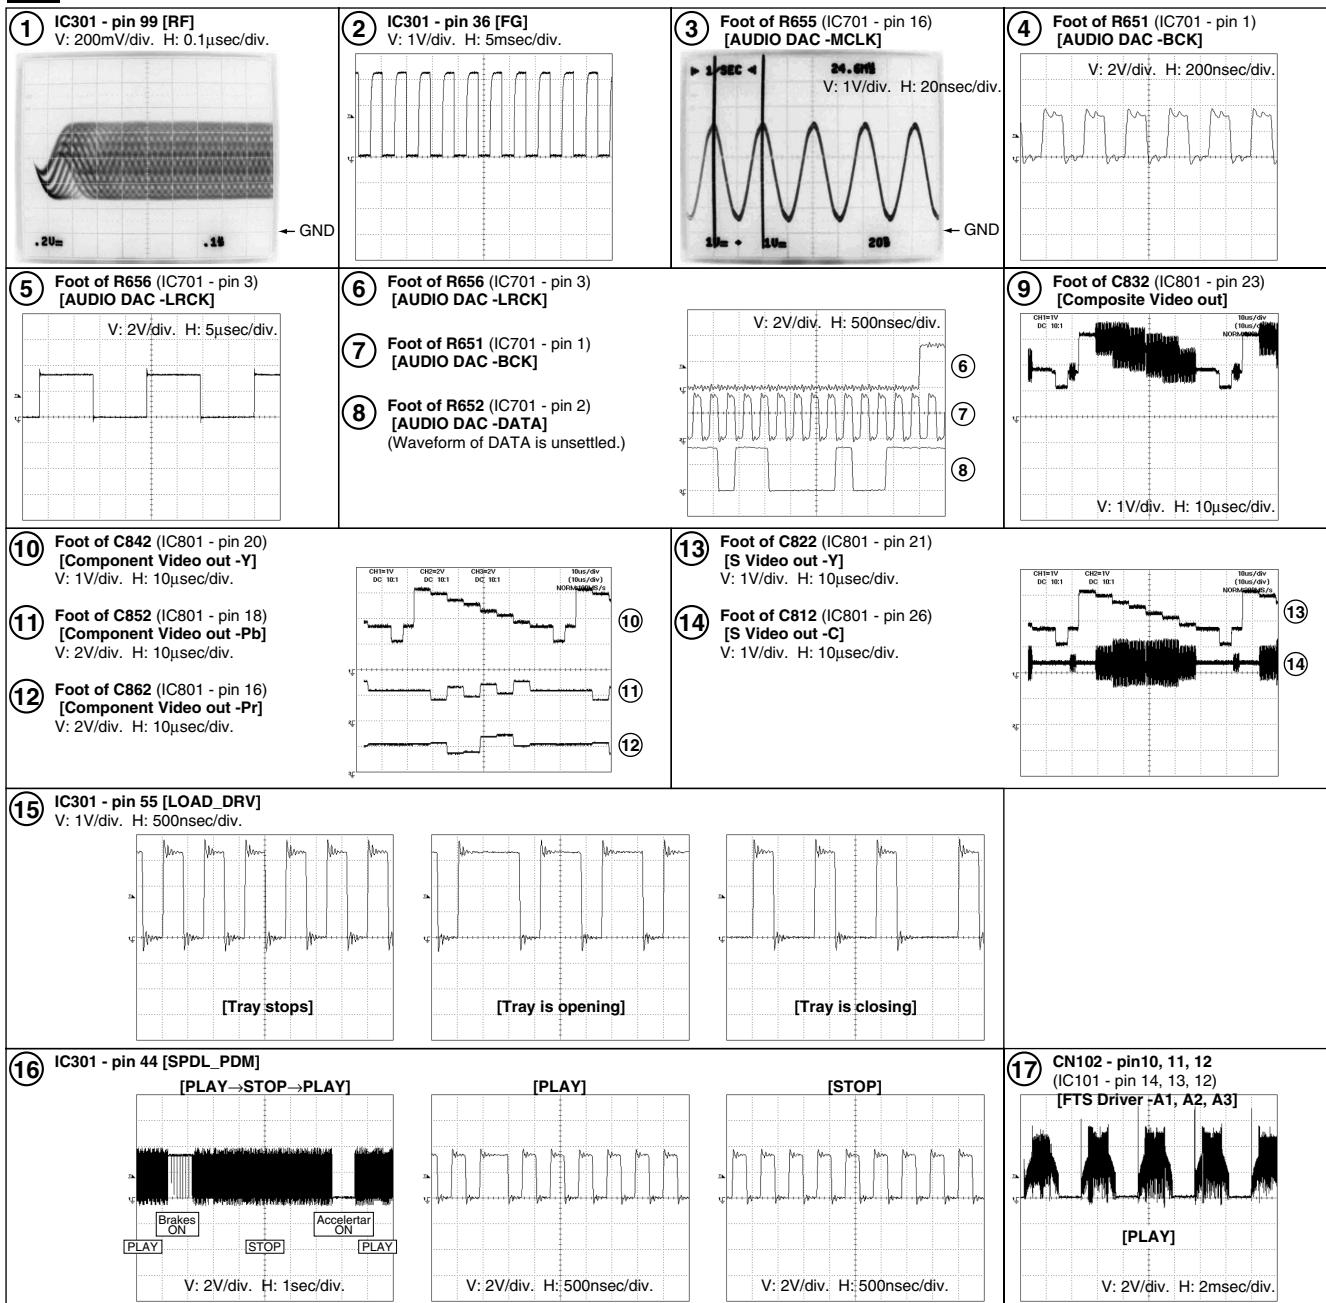

5

6

7

8

A

B

C

D

E

F


### 3.3 LOAB ASSY and OVERALL WIRING DIAGRAM

A

B


Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

C

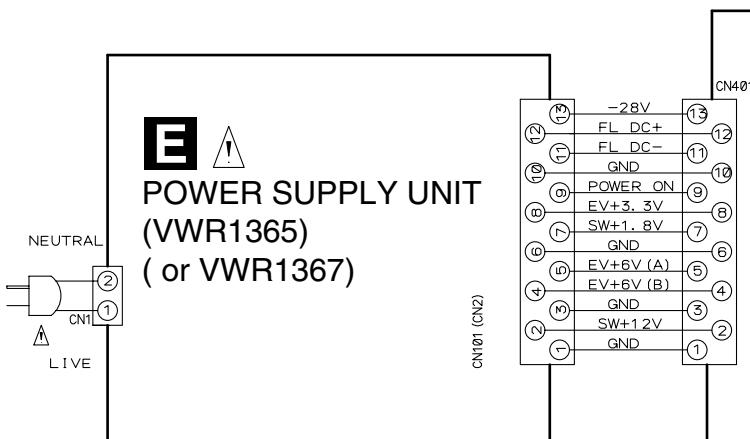

D


**B** DVDM ASSY  
(VWS1555)

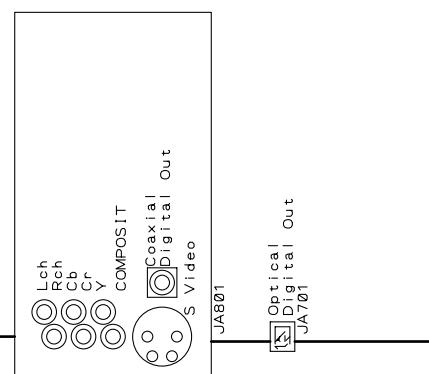

E

F


(F) : FOCUS SERVO LOOP LINE  
 (T) : TRACKING SERVO LOOP LINE  
 (S) : STEPPING SERVO LOOP LINE

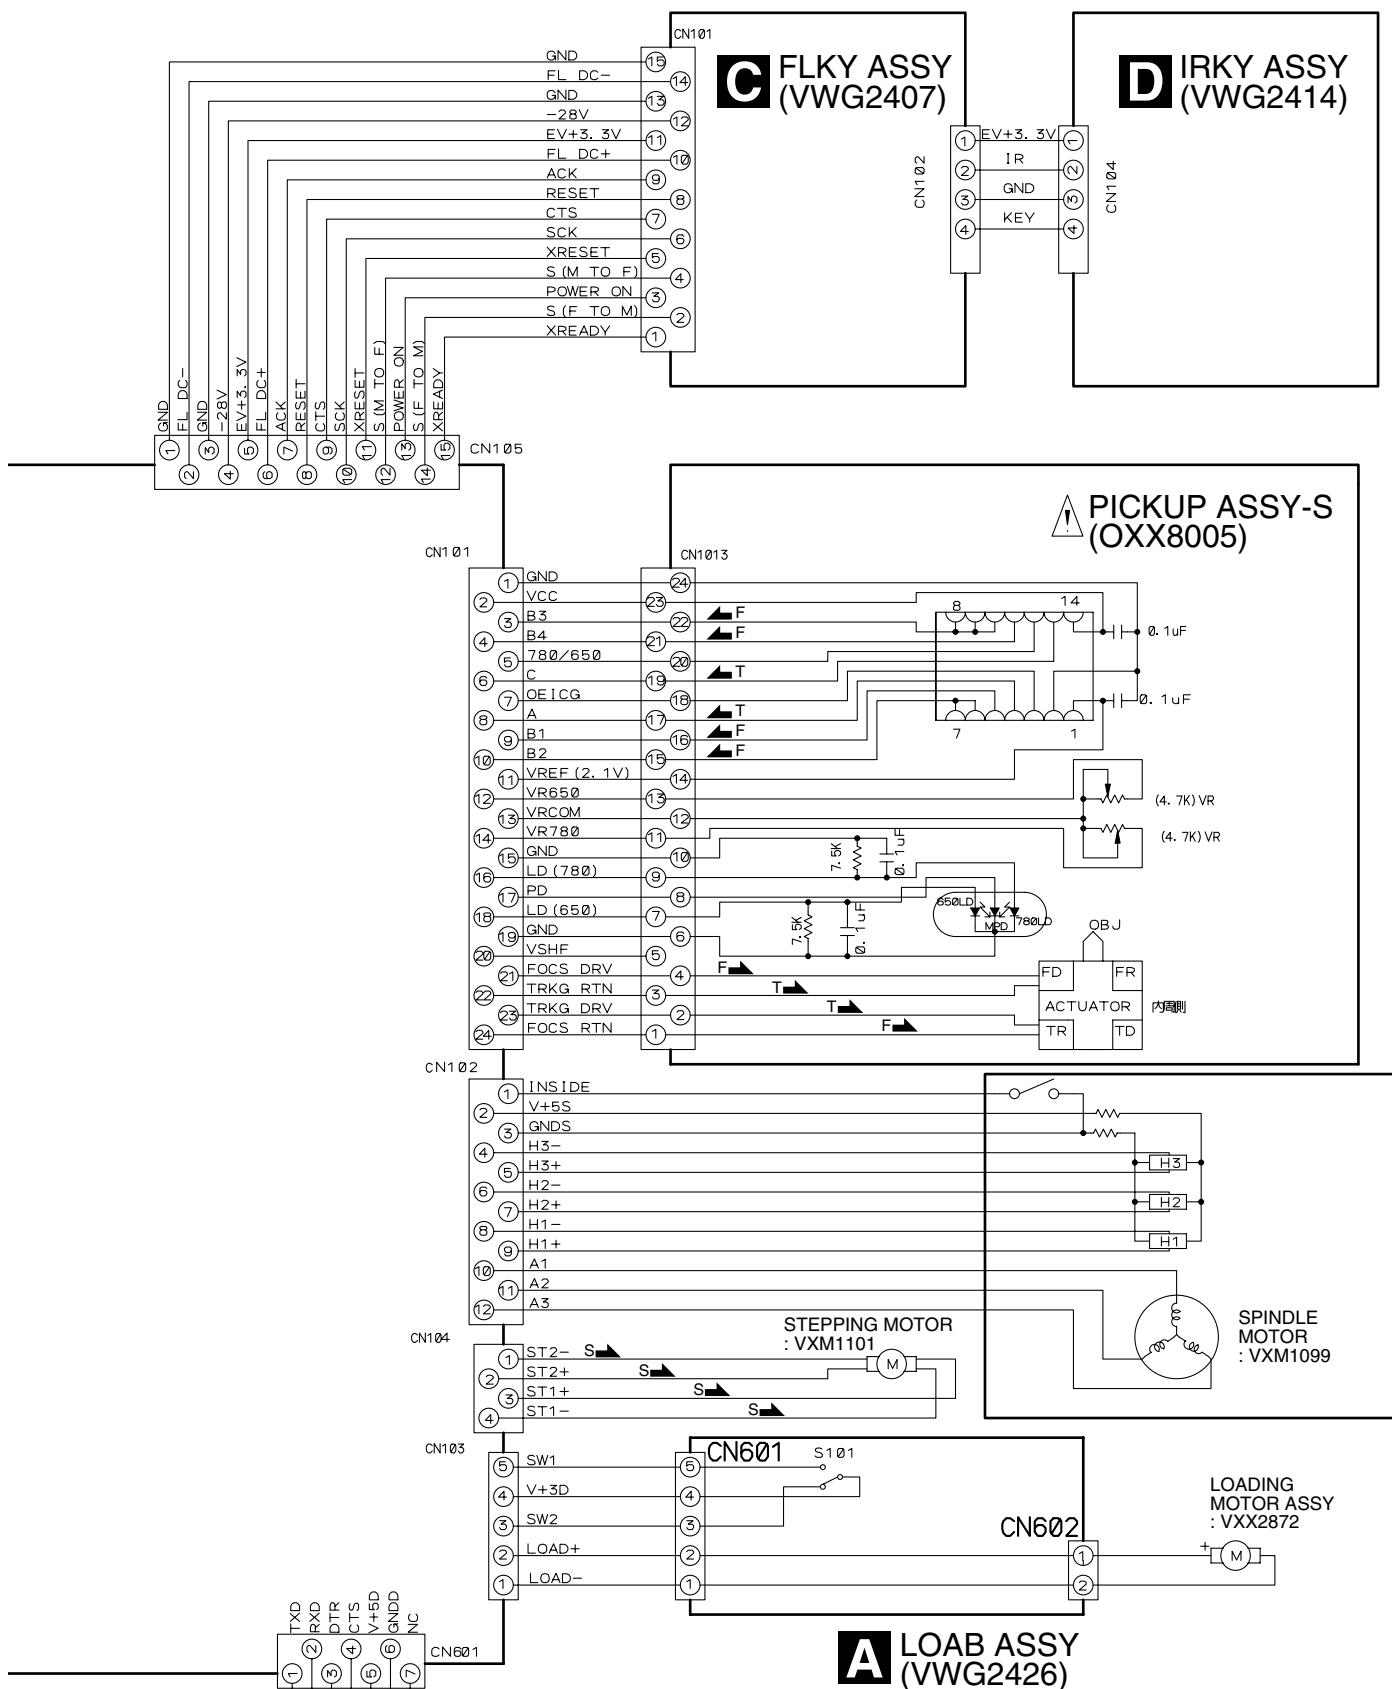

### 3.4 DVDM ASSY 1/3 [FRONT END BLOCK]


A

#### B 1/3 DVDM ASSY (VWS1555)

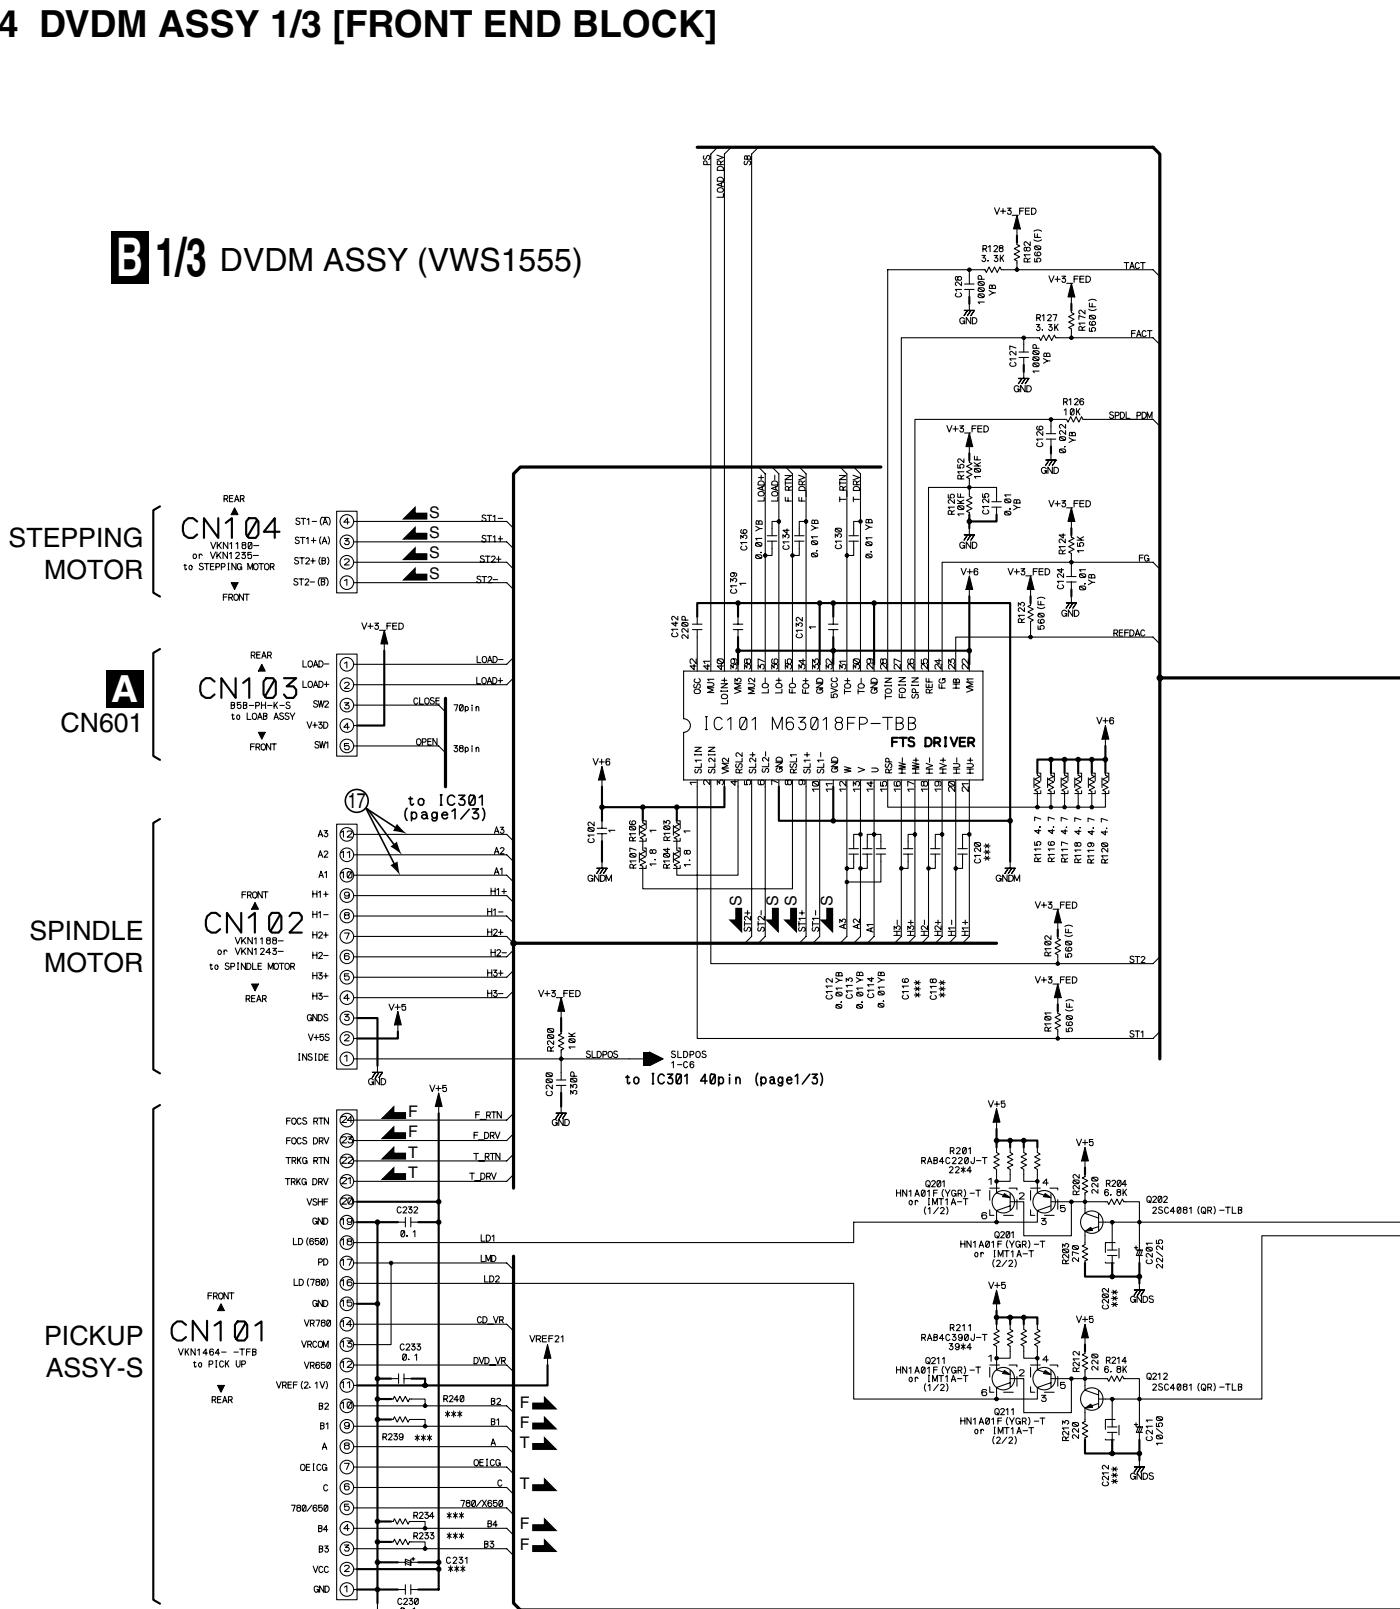


B 1/3


①, ②, ⑯—⑰ Refer to "3.2 WAVEFORMS".

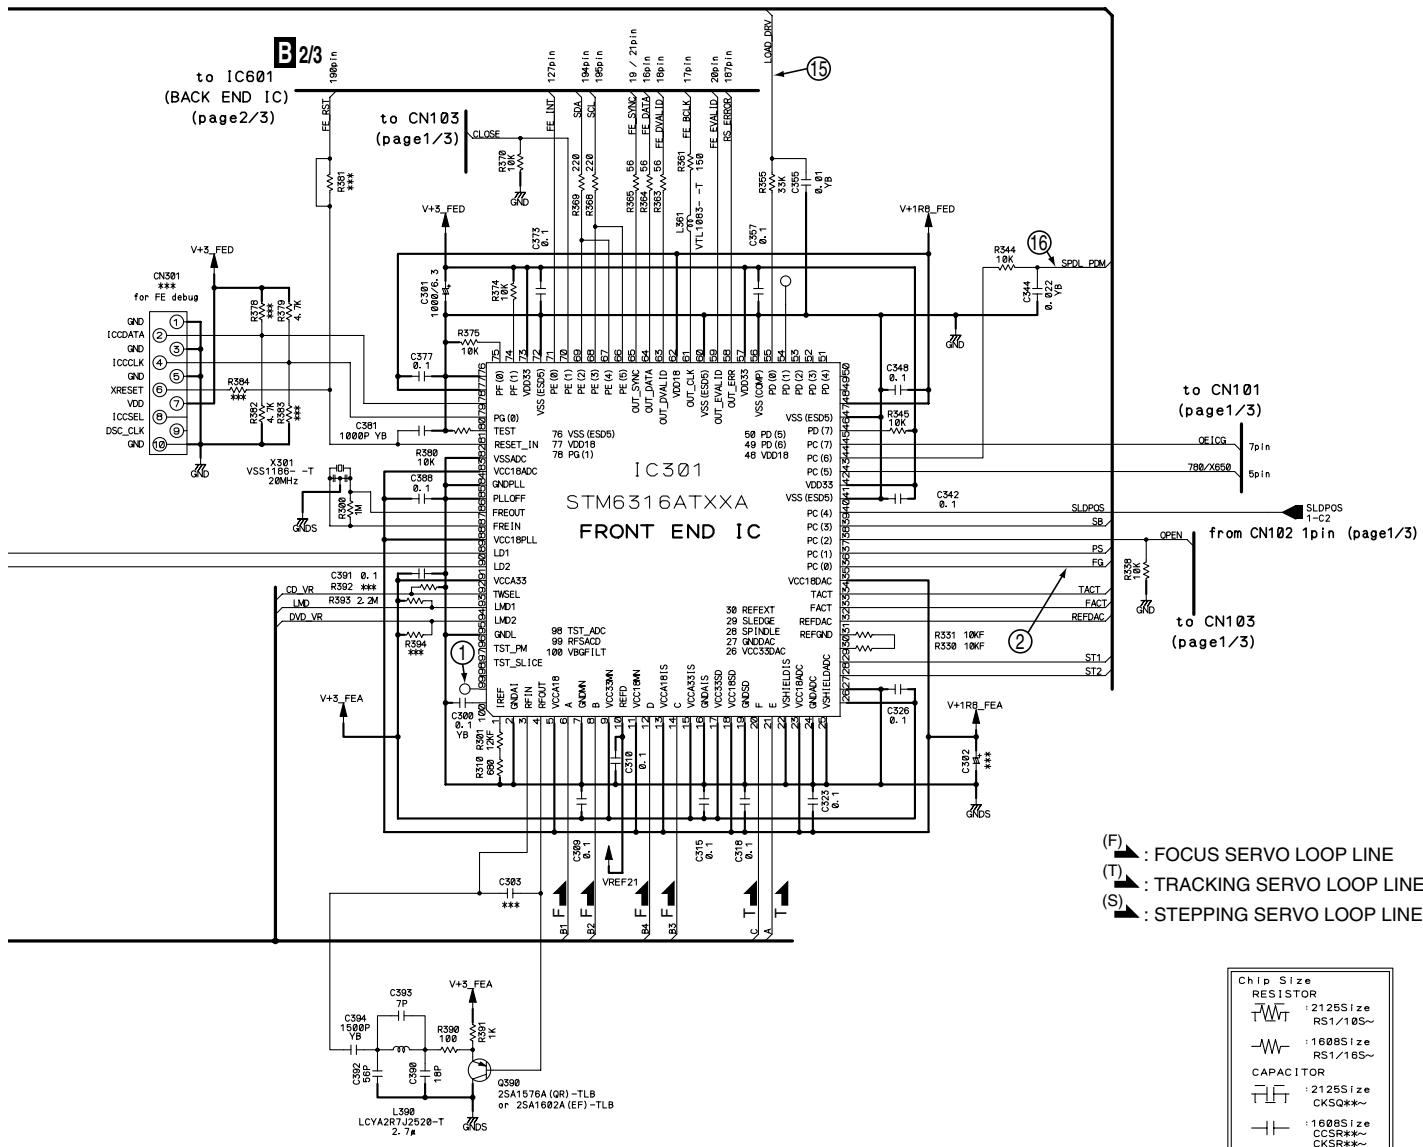

### 3.5 DVDM ASSY 2/3 [BACK END BLOCK]

#### B 2/3 DVDM ASSY (VWS1555)

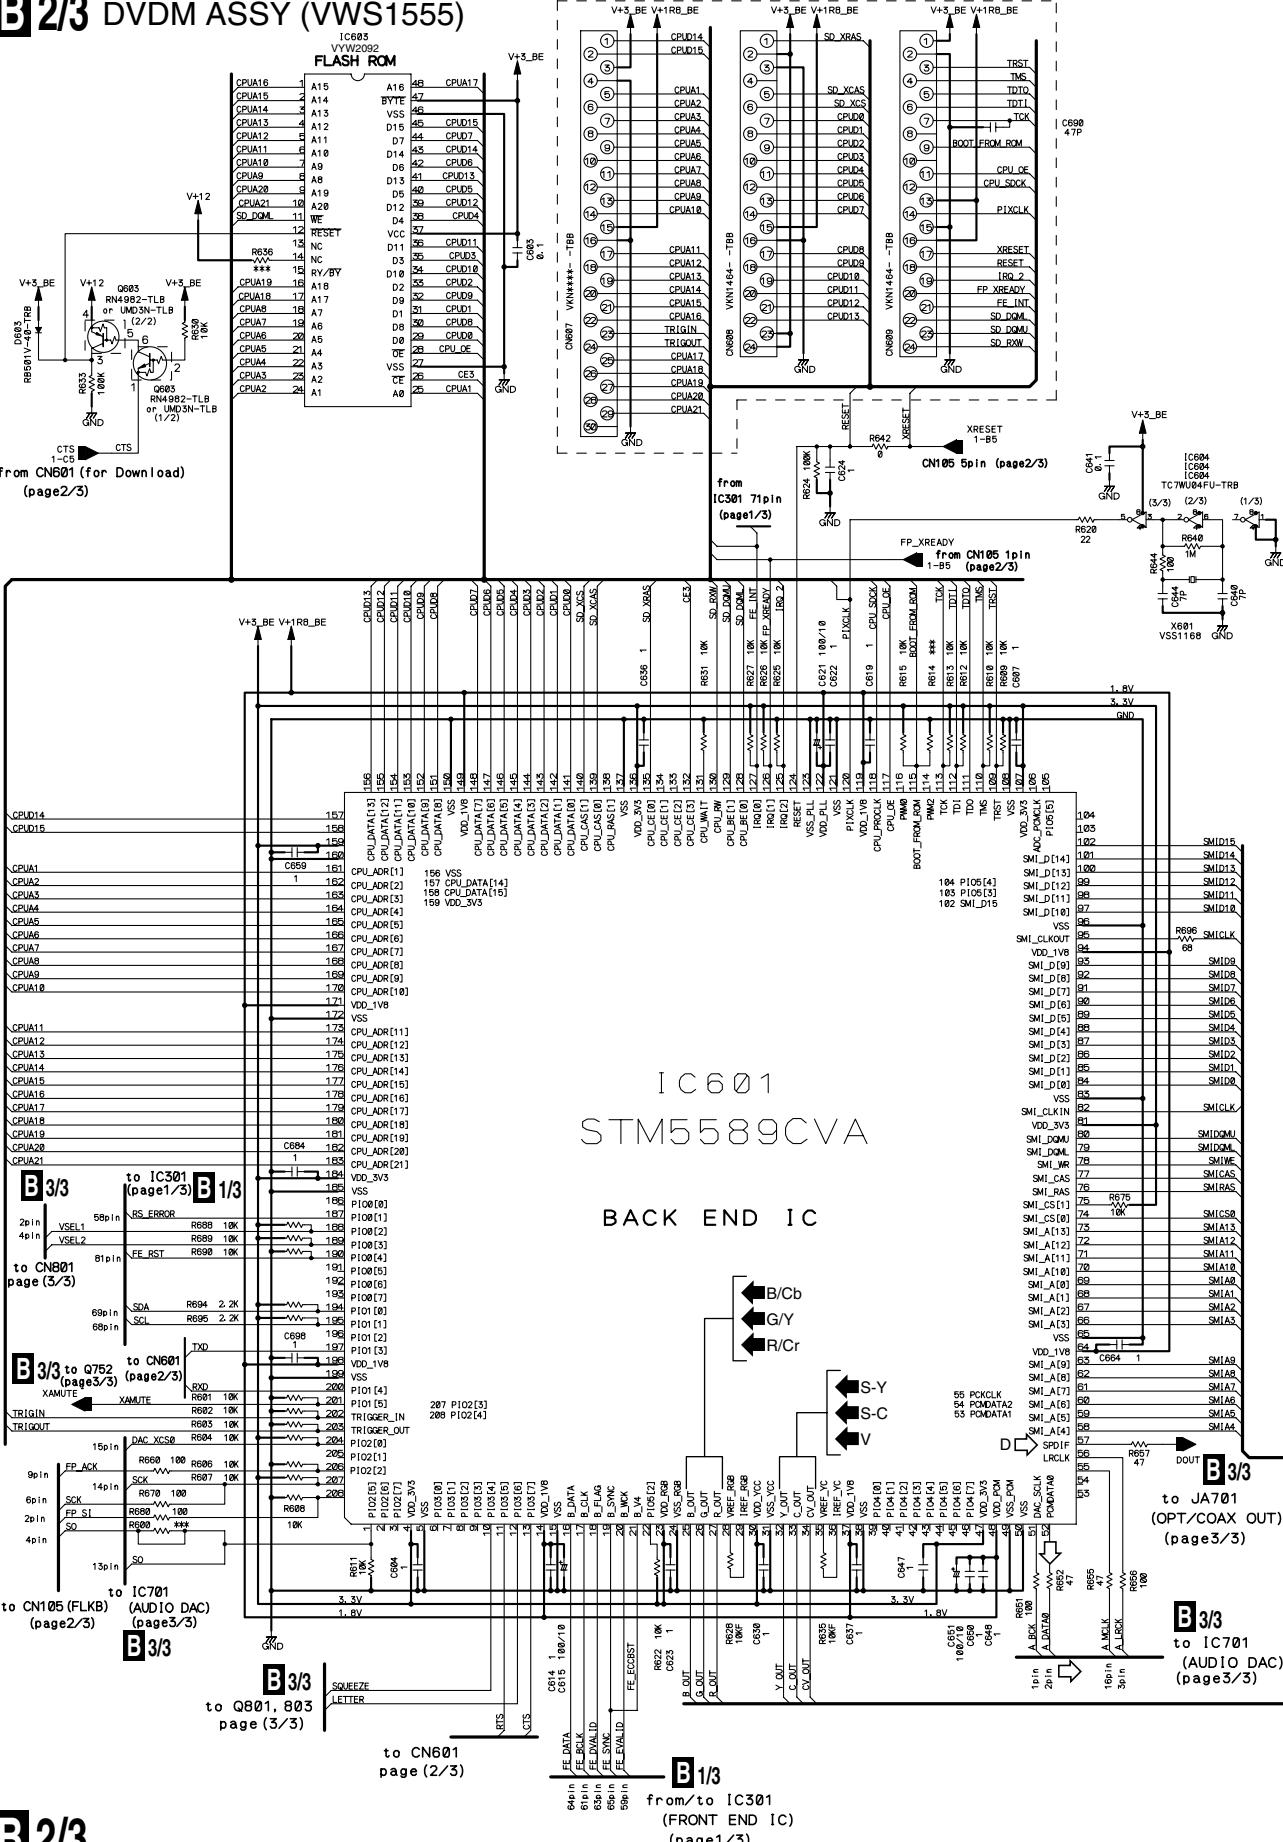


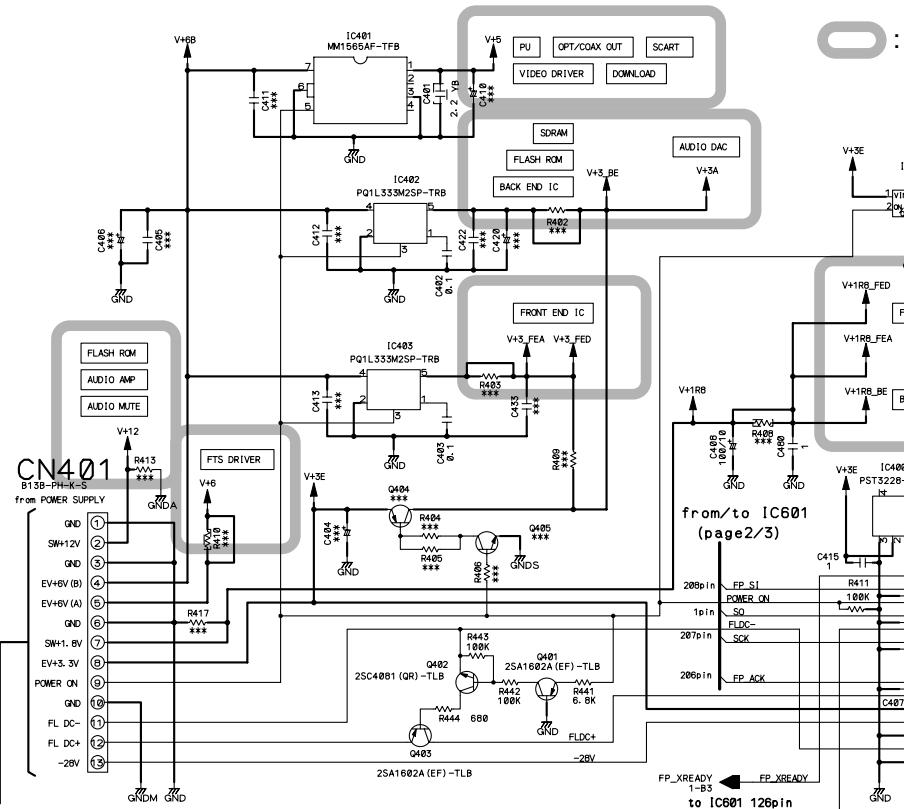

: The power supply is shown with the marked box.

<b>RESISTOR</b>	12125 size RS1/10S~
<b>CAPACITOR</b>	16085 size RS1/16S~
<b>CHIP SIZE</b>	12125 size CKSO**~,
	16085 size CKSR**~



for function checker

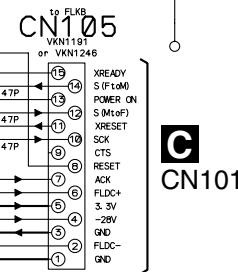

**C**

**CN101**

VWR1365: CN101  
VWR1367: CN2

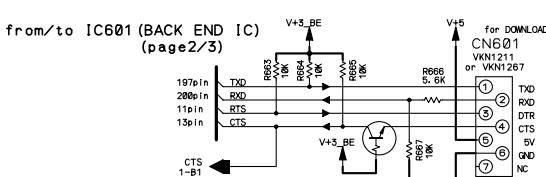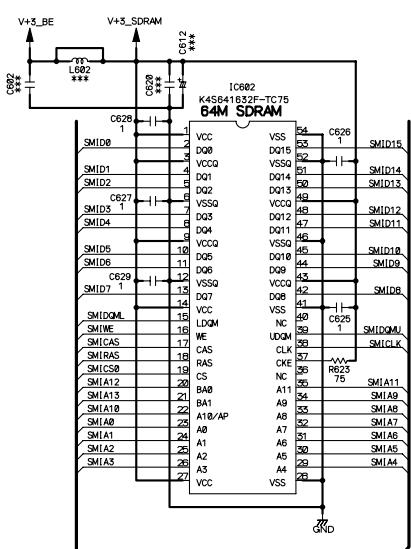

**B 3/3**

**B 3/3**

: V SIGNAL ROUTE

: S-VIDEO OUT C SIGNAL ROUTE

: S-VIDEO OUT Y SIGNAL ROUTE

: R/Cr SIGNAL ROUTE

: G/Y SIGNAL ROUTE


: B/Cb SIGNAL ROUTE

: AUDIO SIGNAL ROUTE

: AUDIO(DIGITAL) SIGNAL ROUTE


\*\*\* : parts not mounted

### 3.6 DVDM ASSY 3/3 [AUDIO/VIDEO BLOCK]

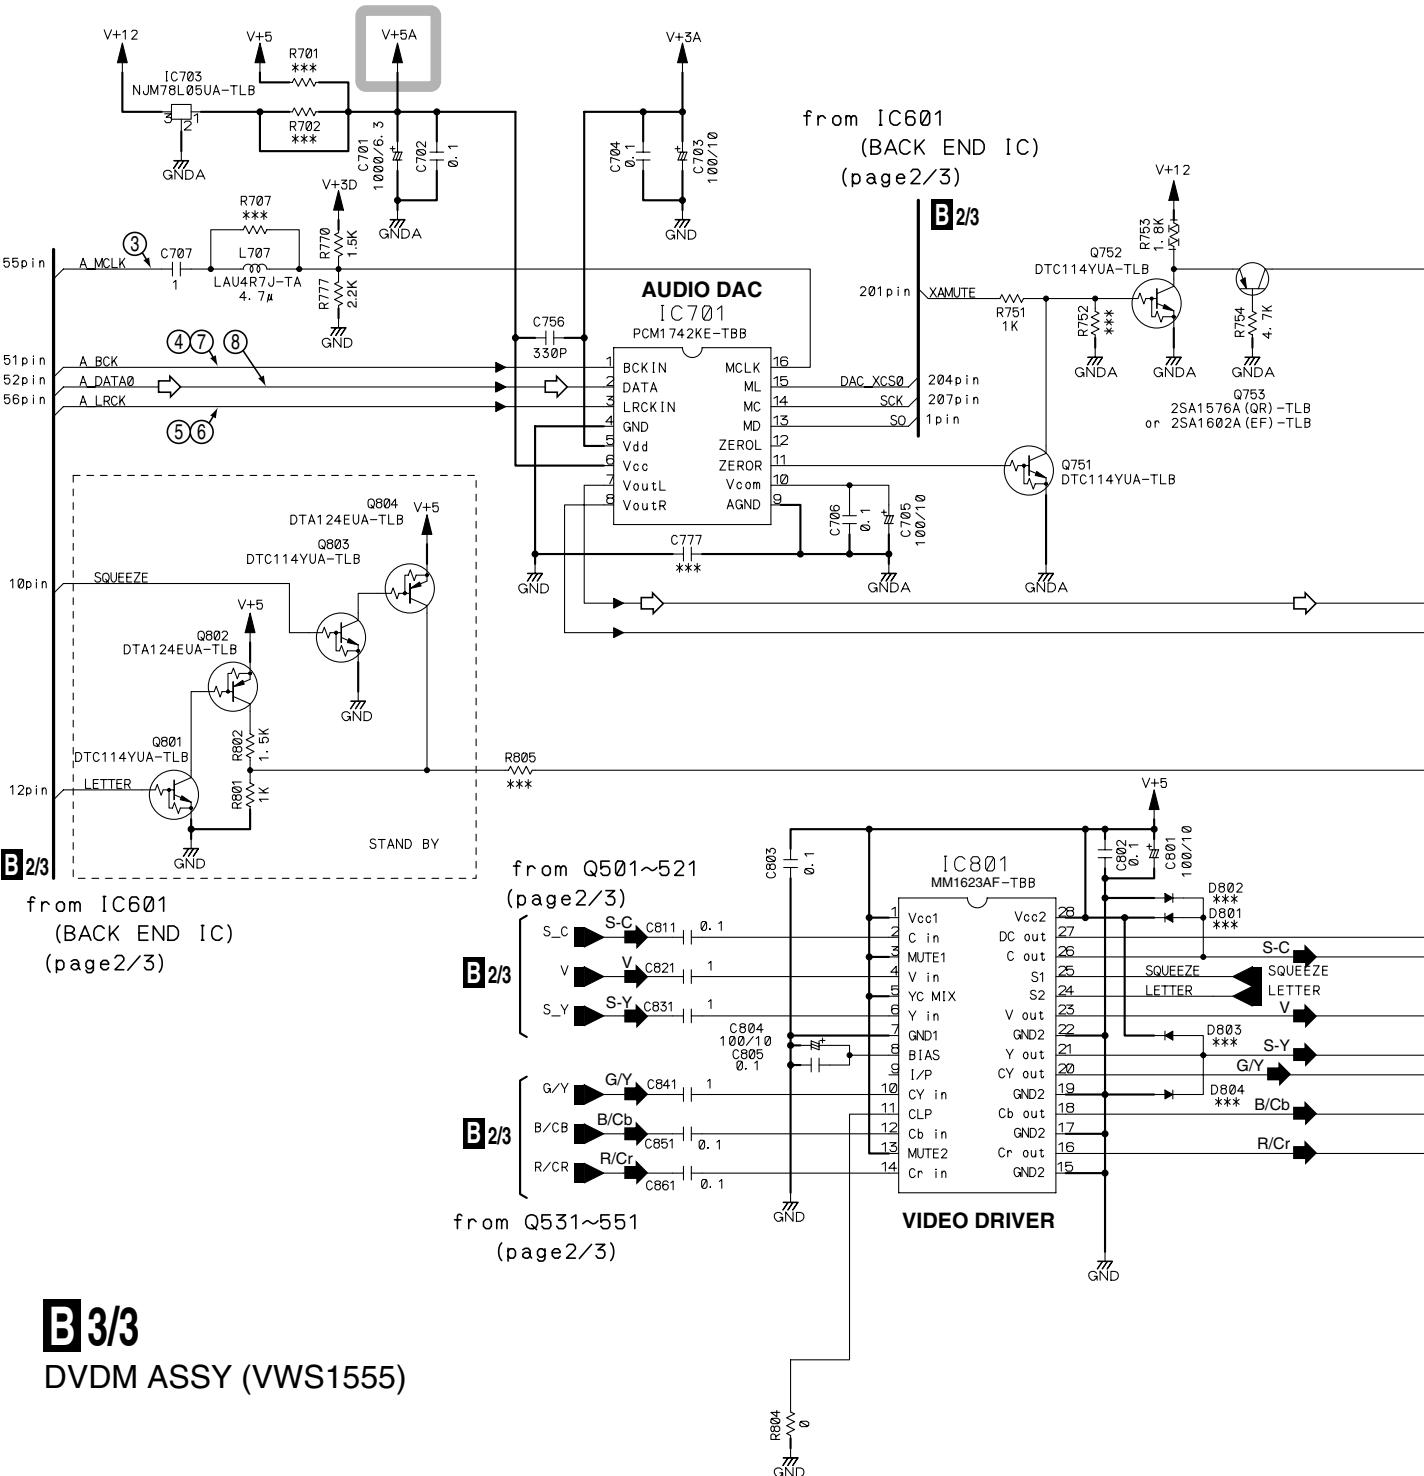

<b>Chip Size</b>	
RESISTOR	
	: 2125S size RS1/10S~
	: 1608S size RS1/16S~
CAPACITOR	
	: 2125S size CKSQ**~
	: 1608S size CCSR**~ CKSR**~

**B 3/3**

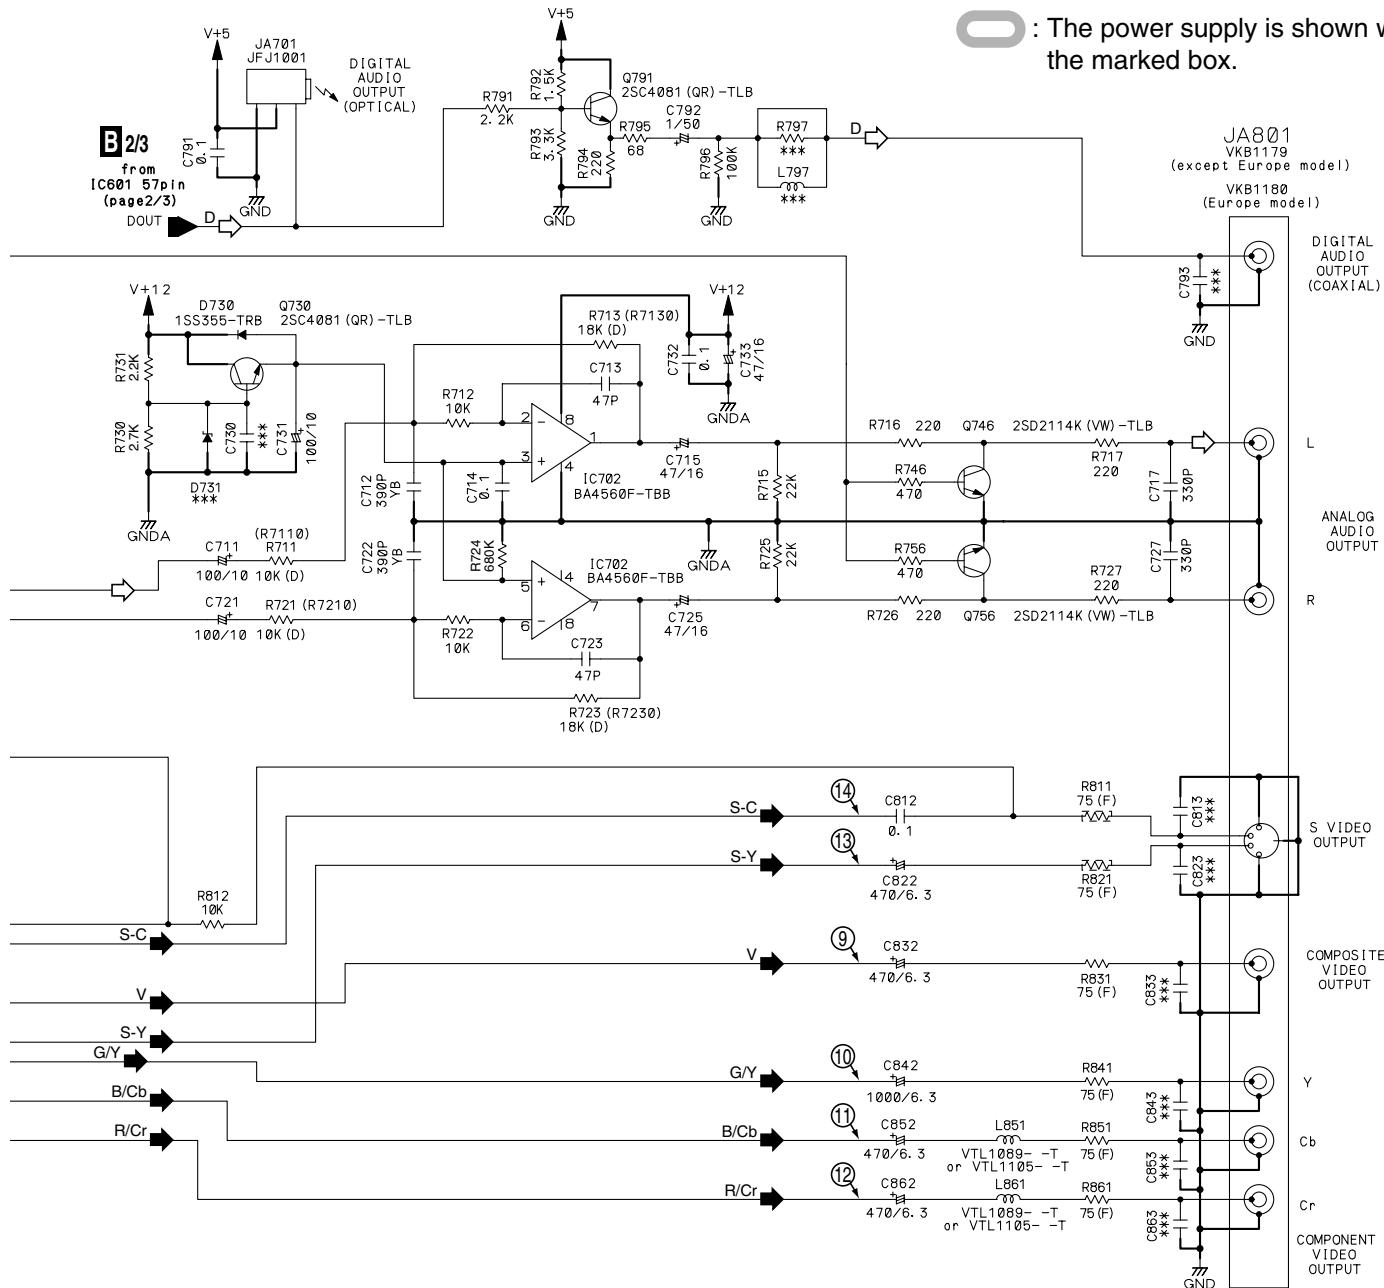

(3– ⑯: Refer to "3.2 WAVEFORMS".


- V SIGNAL ROUTE
- S-C : S-VIDEO OUT C SIGNAL ROUTE
- S-Y : S-VIDEO OUT Y SIGNAL ROUTE
- R/Cr : R/Cr SIGNAL ROUTE
- G/Y : G/Y SIGNAL ROUTE
- B/Cb : B/Cb SIGNAL ROUTE
- : AUDIO SIGNAL ROUTE
- : AUDIO(DIGITAL) SIGNAL ROUTE



\*\*\*: parts not mounted

**B 3/3**

### 3.7 FLKY and IRKY ASSYS


**C** FLKY ASSY  
(VWG2407)

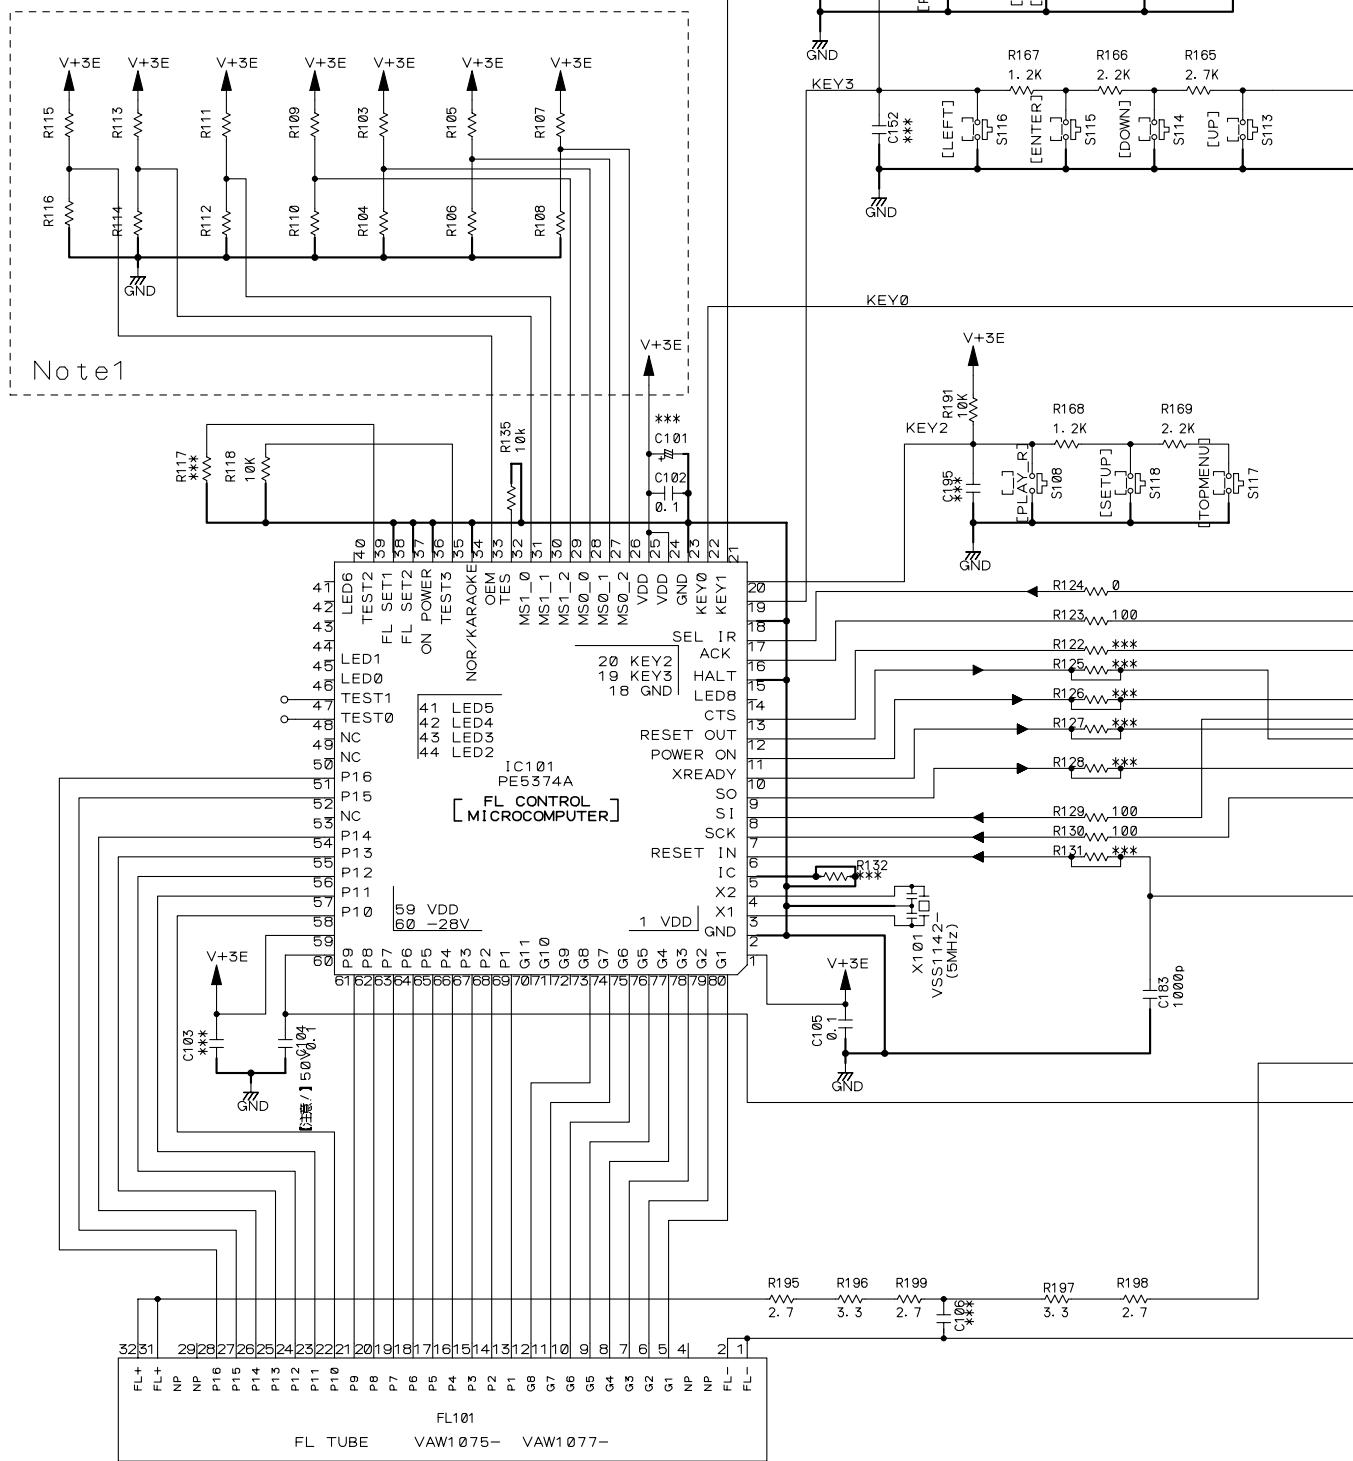

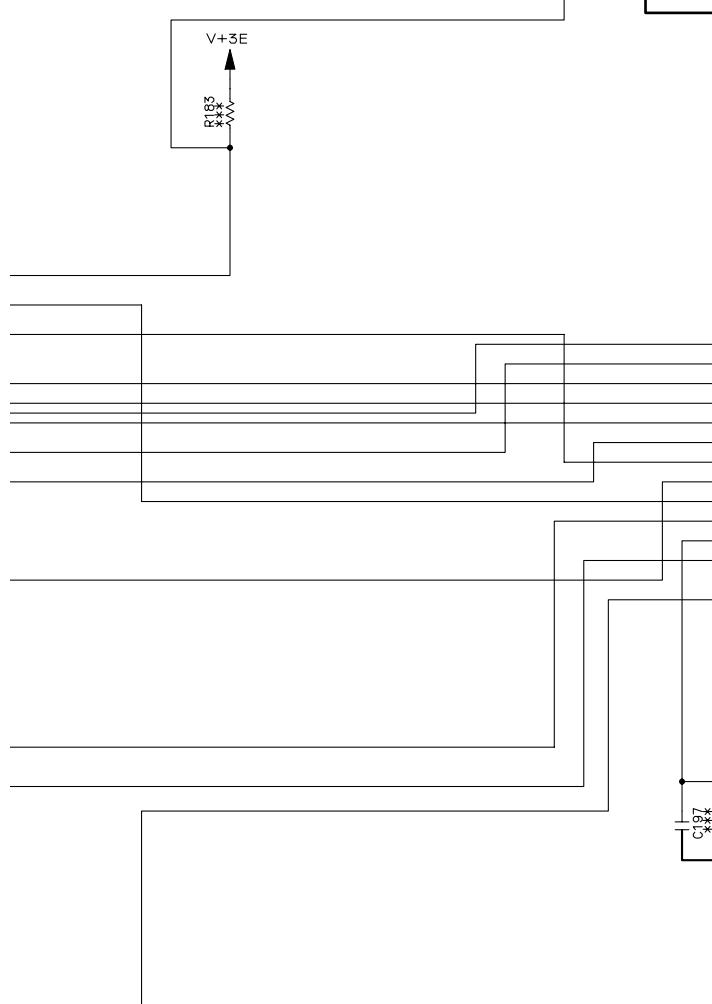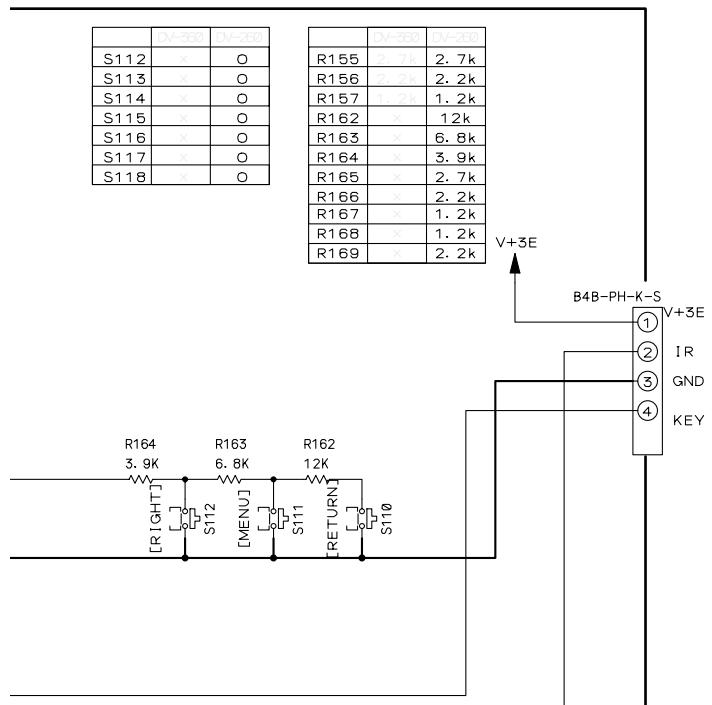

: The power supply is shown with the marked box.

ALL TACT SWITCHES = ASG7013- -T

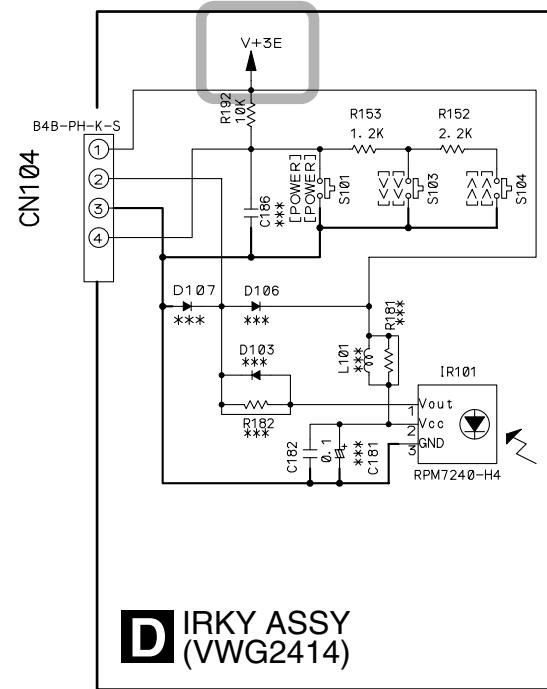

#### D IRKY ASSY (VWG2414)

#### FLKY ASSY

- S105 : ■
- S106 : □
- S107 : ▲
- S109 : ▶
- S110 : RETURN
- S111 : MENU
- S112 : ➤
- S113 : ↑
- S114 : ↓
- S115 : ENTER
- S116 : ←
- S117 : TOP MENU
- S118 : HOME MENU

#### IRKY ASSY

- S101 : ○ STANDBY ON
- S103 : ↙ ↘ ↛
- S104 : ↛ ↛ ↛

\*\*\*: PARTS NOT MOUNTED

C D

## 3.8 POWER SUPPLY UNIT [VWR1365]


**CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
**REPLACE ONLY WITH SAME TYPE NO. 491.800 MFD, BY**  
**LITTELFUSE INC. FOR P301 (AEK7063).**

**CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
**REPLACE ONLY WITH SAME TYPE NO. 491.016 MFD, BY**  
**LITTELFUSE INC. FOR P101 (AEK7066).**

### E POWER SUPPLY UNIT (VWR1365)

#### « NOTE OF SPARE PARTS IN POWER SUPPLY (SYPS) UNIT »

- In case of repairing, use the described parts only to prevent an accident.
- Please write the red ✓ mark on the board when the primary section of POWER SUPPLY (SYPS) Unit is repaired.
- Please take care to keep the space, not touching other parts when replacing the parts.

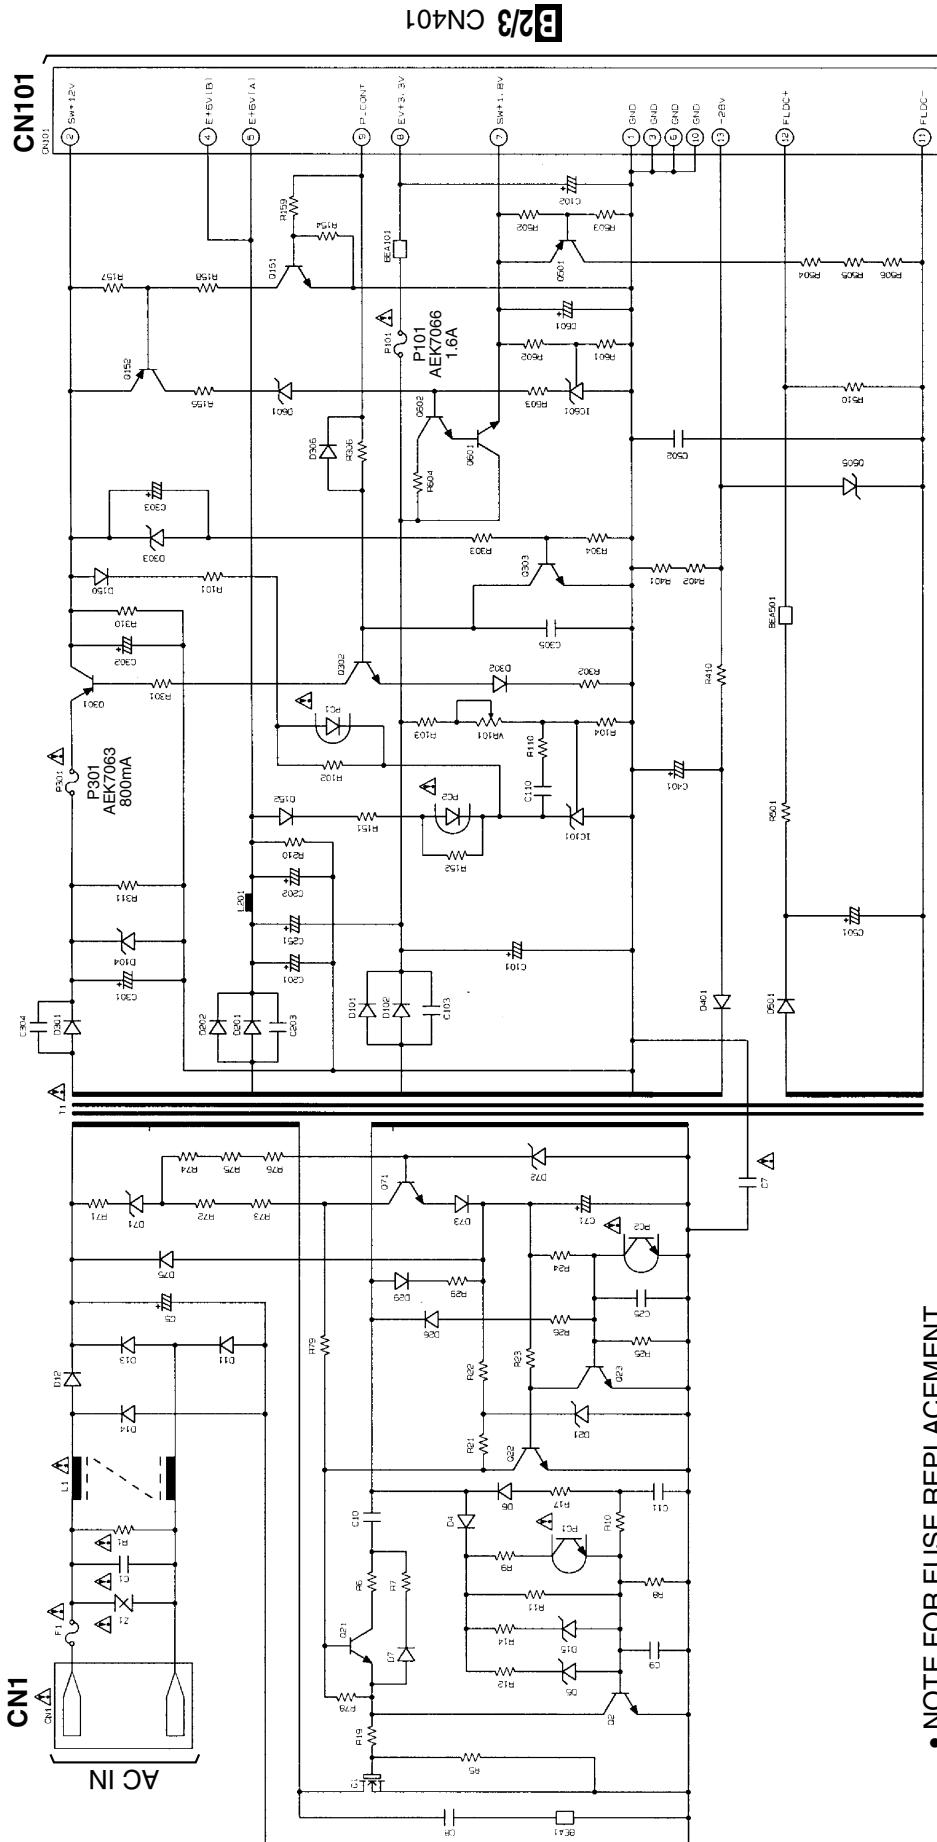

**• NOTE FOR FUSE REPLACEMENT**  
**• CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
**REPLACE WITH SAME TYPE AND RATINGS ONLY.**

## **E** POWER SUPPLY UNIT (VWR1367)


### « NOTE OF SPARE PARTS IN POWER SUPPLY (SYPS) UNIT »

- In case of repairing, use the described parts only to prevent an accident.
- Please write the red √ mark on the board when the primary section of POWER SUPPLY (SYPS) Unit is repaired.
- Please take care to keep the space, not touching other parts when replacing the parts.

**CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
REPLACE ONLY WITH SAME TYPE NO. 49101.800 MFD, BY  
LITTELFUSE INC. FOR CP1(AEK7008).

**CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
REPLACE ONLY WITH SAME TYPE NO. 49101.6 MFD, BY  
LITTELFUSE INC. FOR CP4(AEK7012).

△ T1

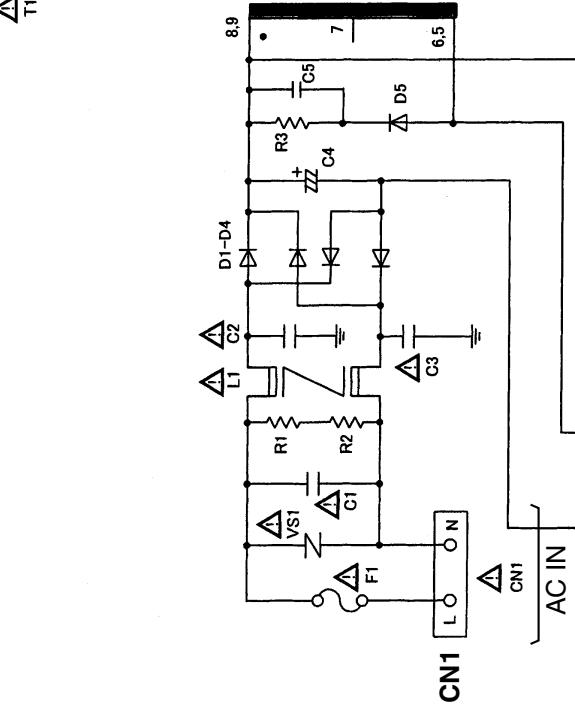

## **3.9 POWER SUPPLY UNIT [VWR1367]**

**CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
REPLACE ONLY WITH SAME TYPE NO. 49101.800 MFD, BY  
LITTELFUSE INC. FOR CP1(AEK7008).

**CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
REPLACE ONLY WITH SAME TYPE NO. 49101.6 MFD, BY  
LITTELFUSE INC. FOR CP4(AEK7012).

**B23 CN401**

**NOTE FOR FUSE REPLACEMENT**  
**CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.**  
REPLACE WITH SAME TYPE AND RATINGS ONLY.

■ 1

■ 2

■ 3

■ 4

A

B

C

D

E

F

## 4. PCB CONNECTION DIAGRAM


### 4.1 LOAB ASSY

#### NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator



3. The parts mounted on this PCB include all necessary parts for several destinations.
- For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

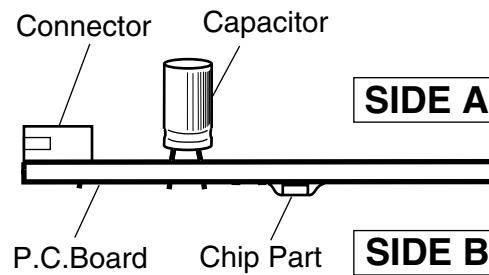

**SIDE A**

**SIDE B**

#### A LOAB ASSY (VNP1910-A)

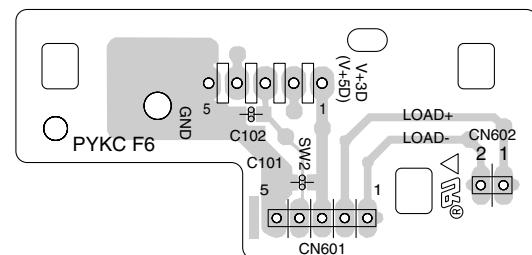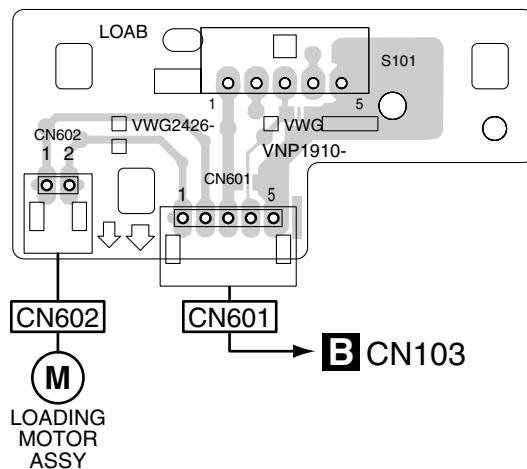


**B** CN103

**A**

**A**


## 4.2 DVDM ASSY

**SIDE A**

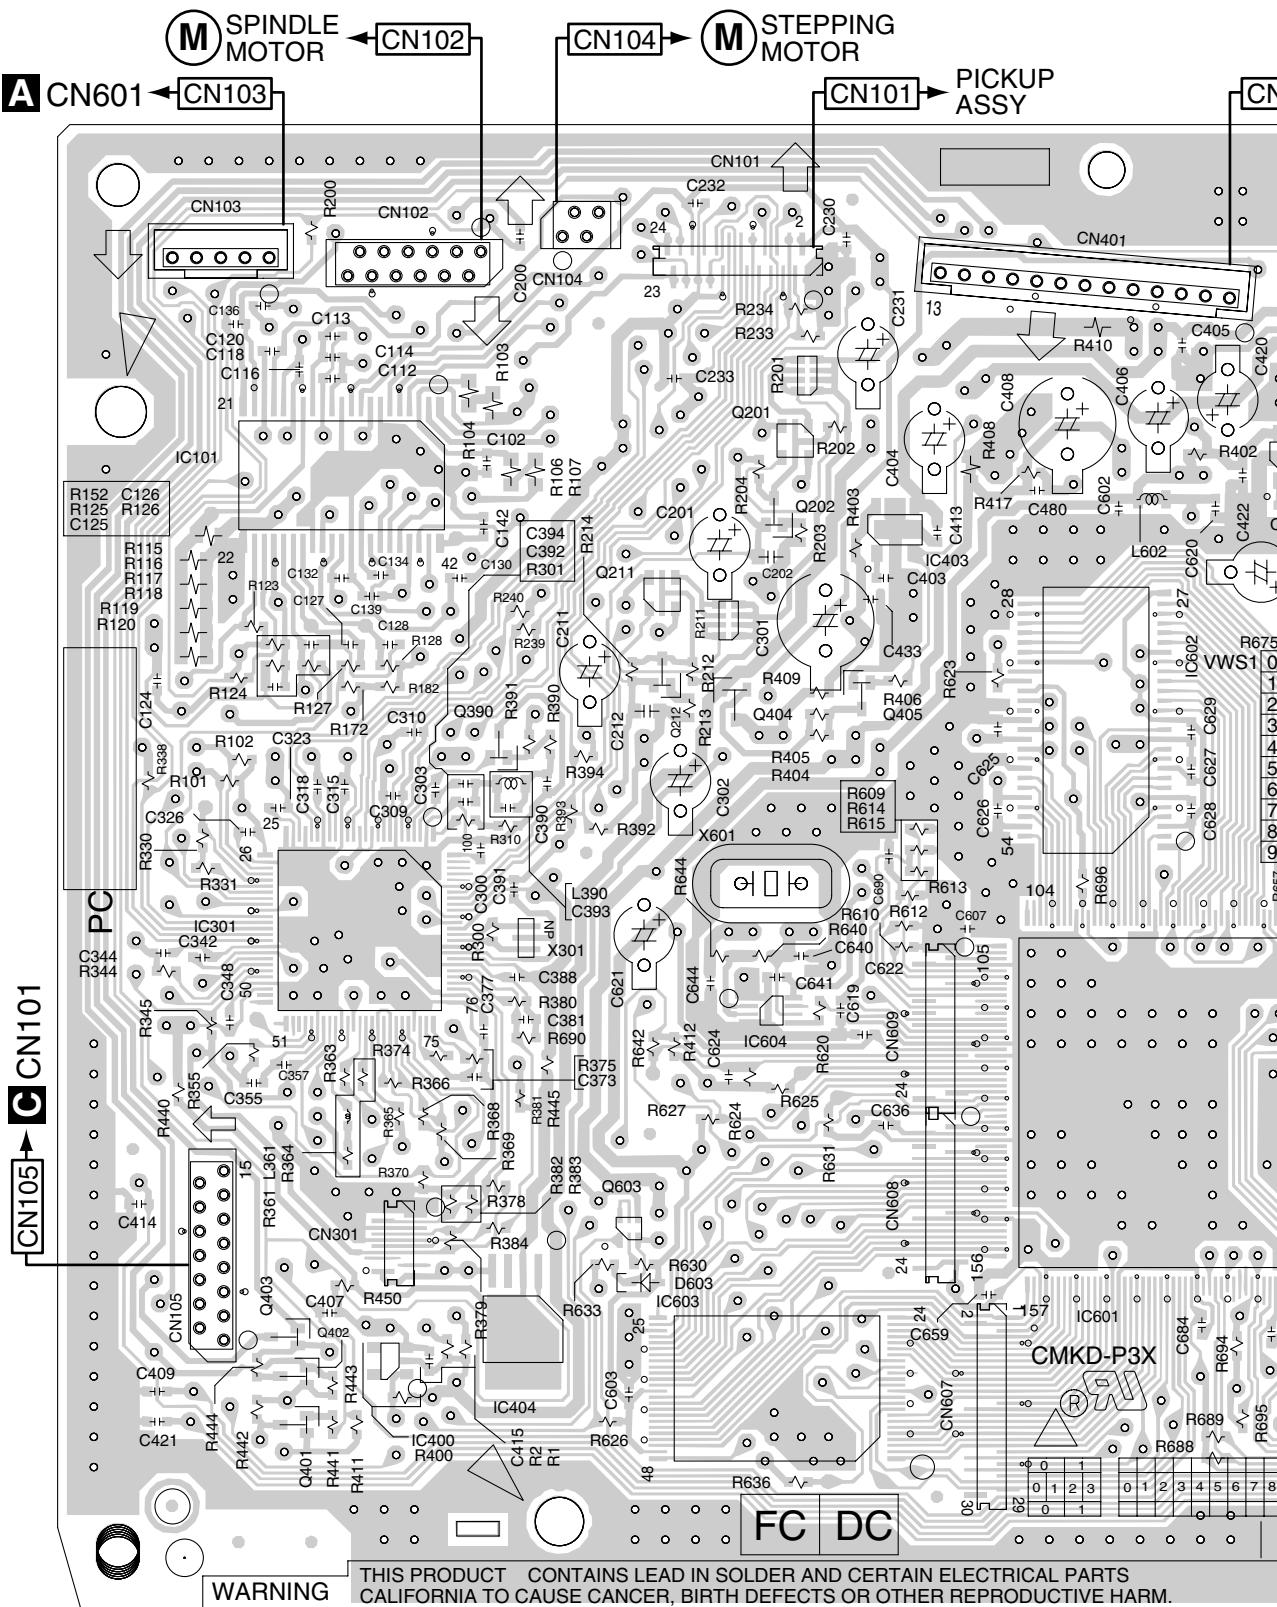

**B**


SIDE A

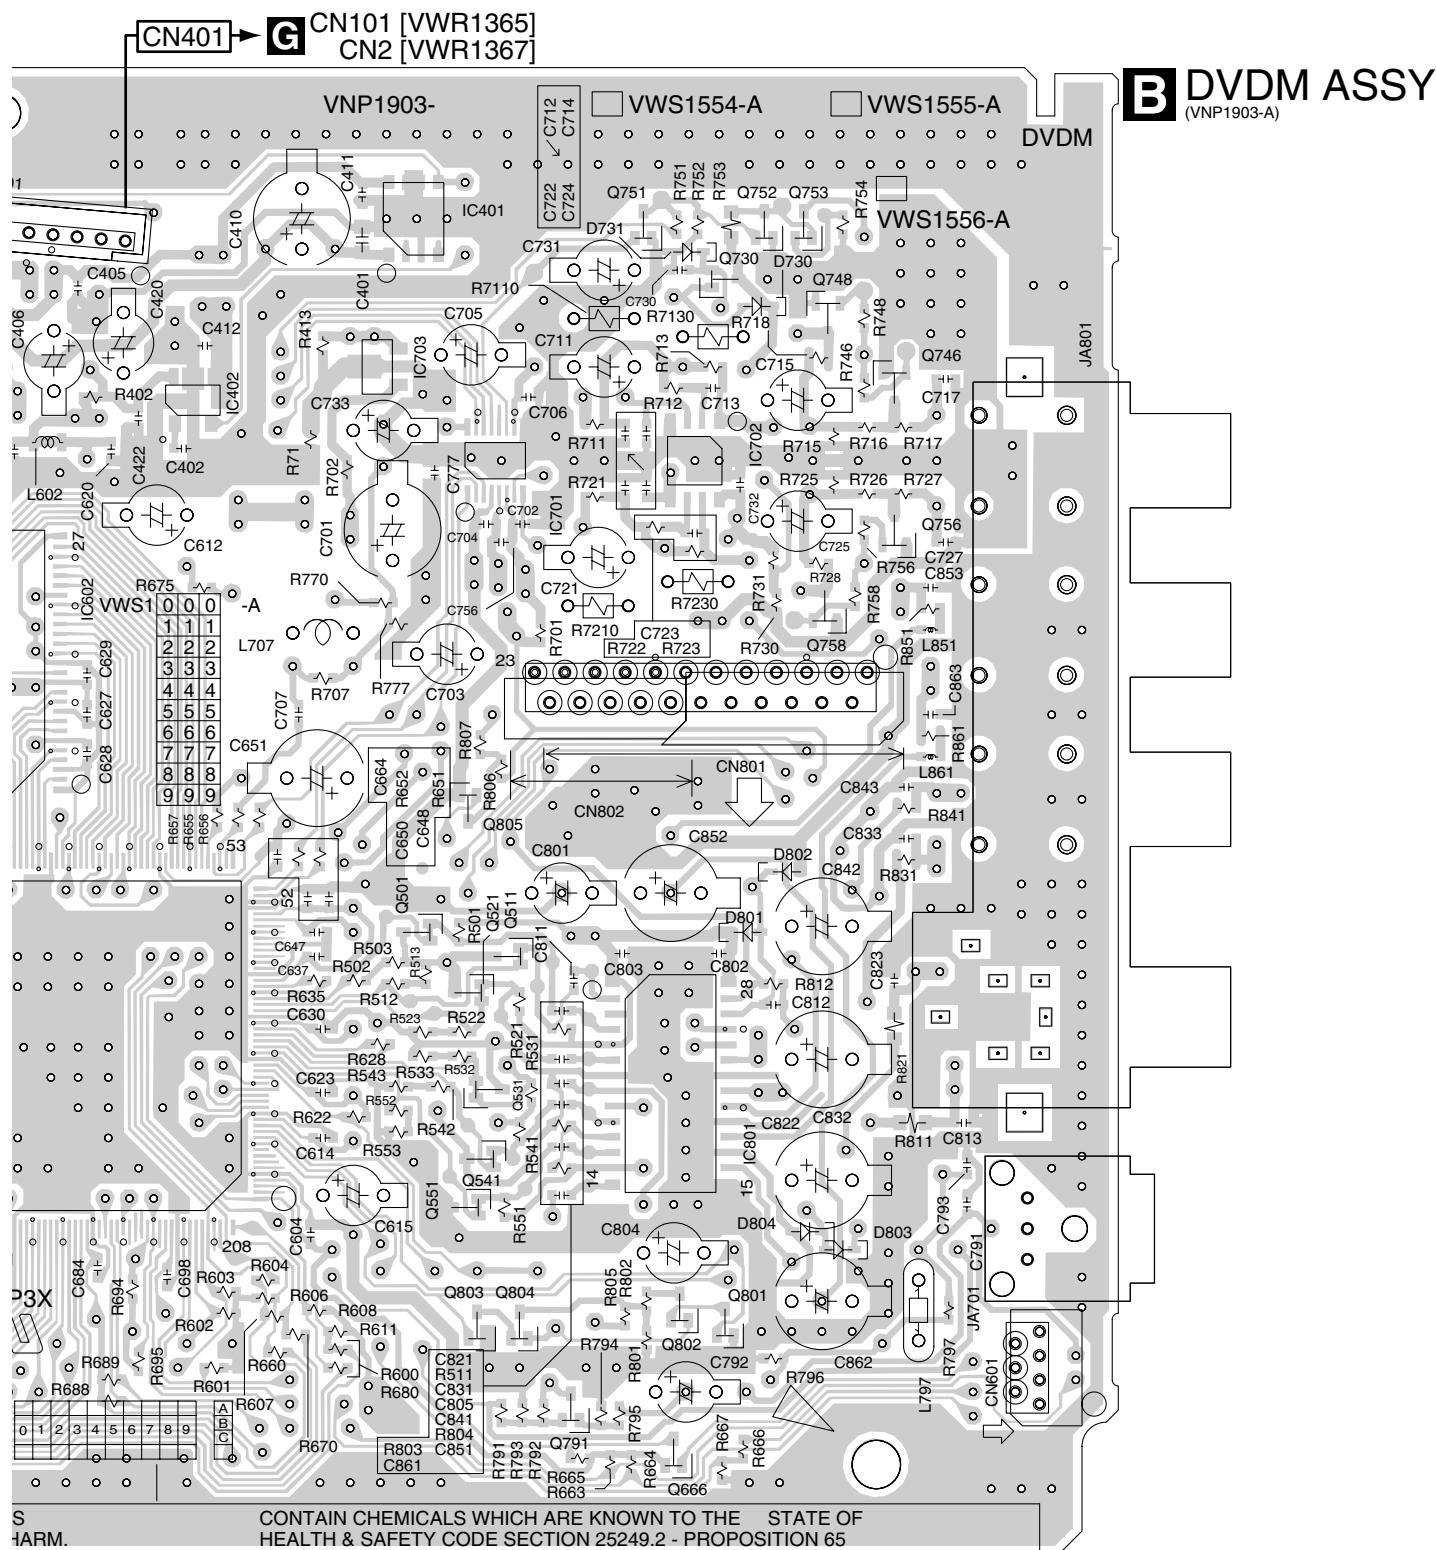

IC602	IC402	IC703	IC401	IC701	IC702	IC801
		Q501	Q541	Q531	Q802	
				Q791	Q751	Q666
					Q752	Q748
					Q753	Q746
					Q758	Q756
					Q801	Q754
					Q802	Q752
					Q792	Q753
					Q791	Q754
					R795	Q755
					R796	Q756
					L797	Q757
					C793	Q758
					C791	Q759
					JAT01	Q760
					CN601	Q761

B

A

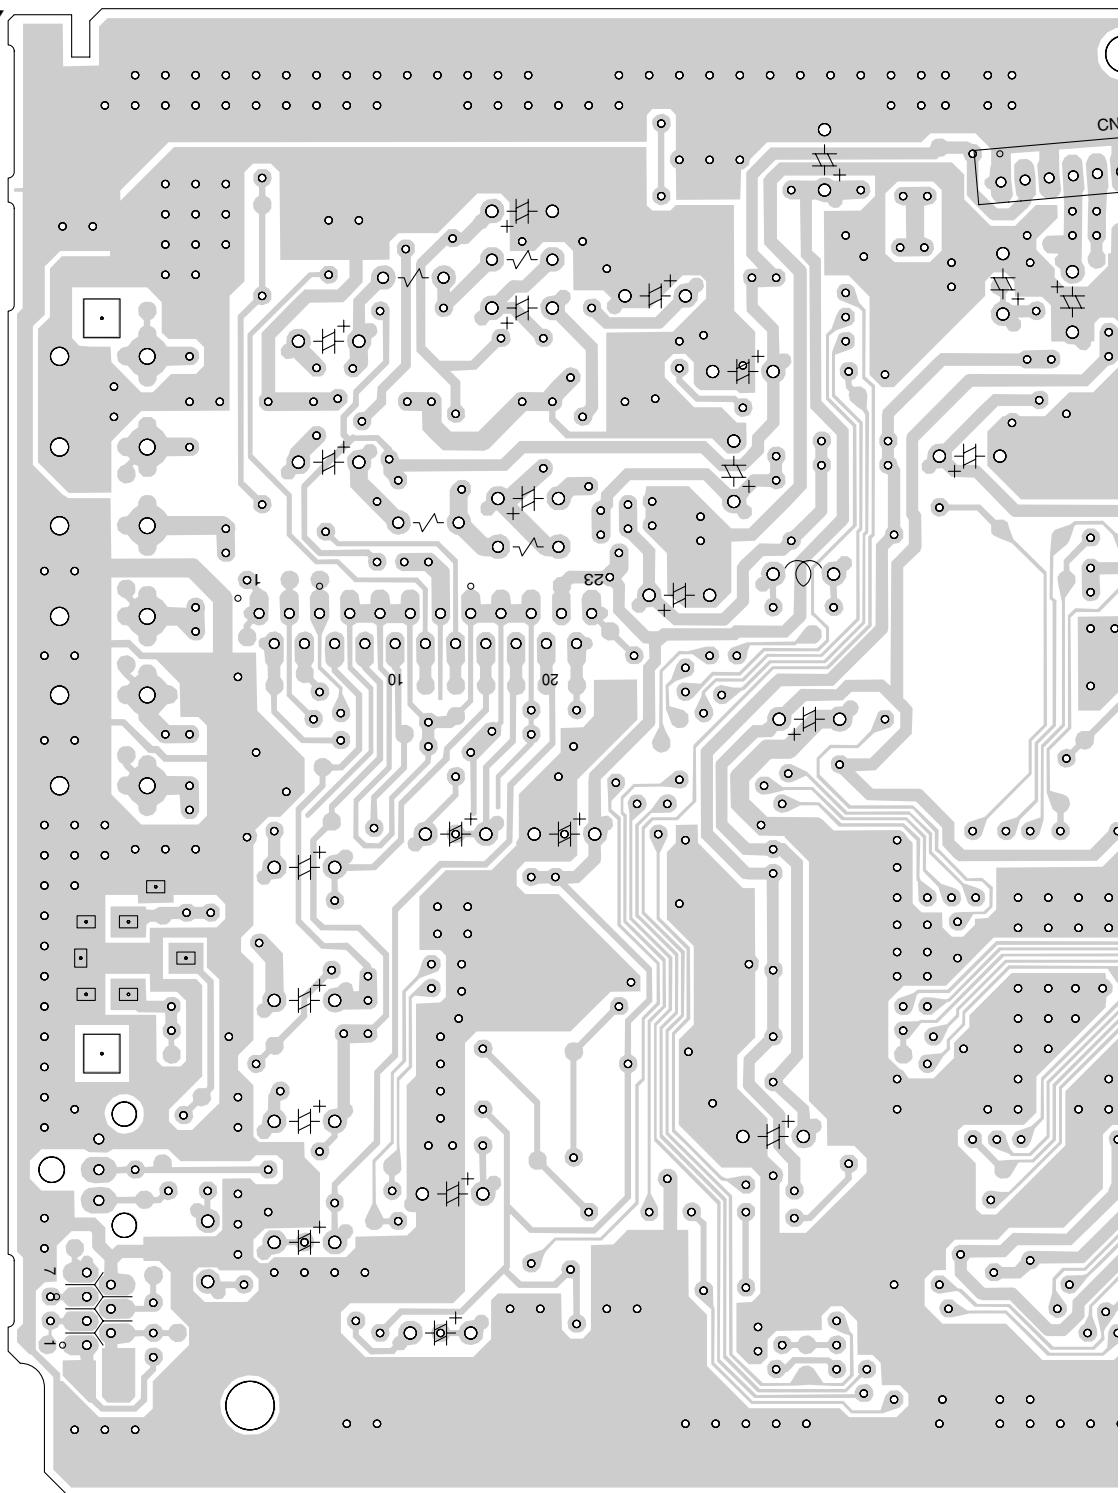**SIDE B****B DVDM ASSY**  
(VNP1903-A)

B

C

D

E

F


**B**

**SIDE B**

A

**CN401****CN101****CN104****CN102****CN103**

B

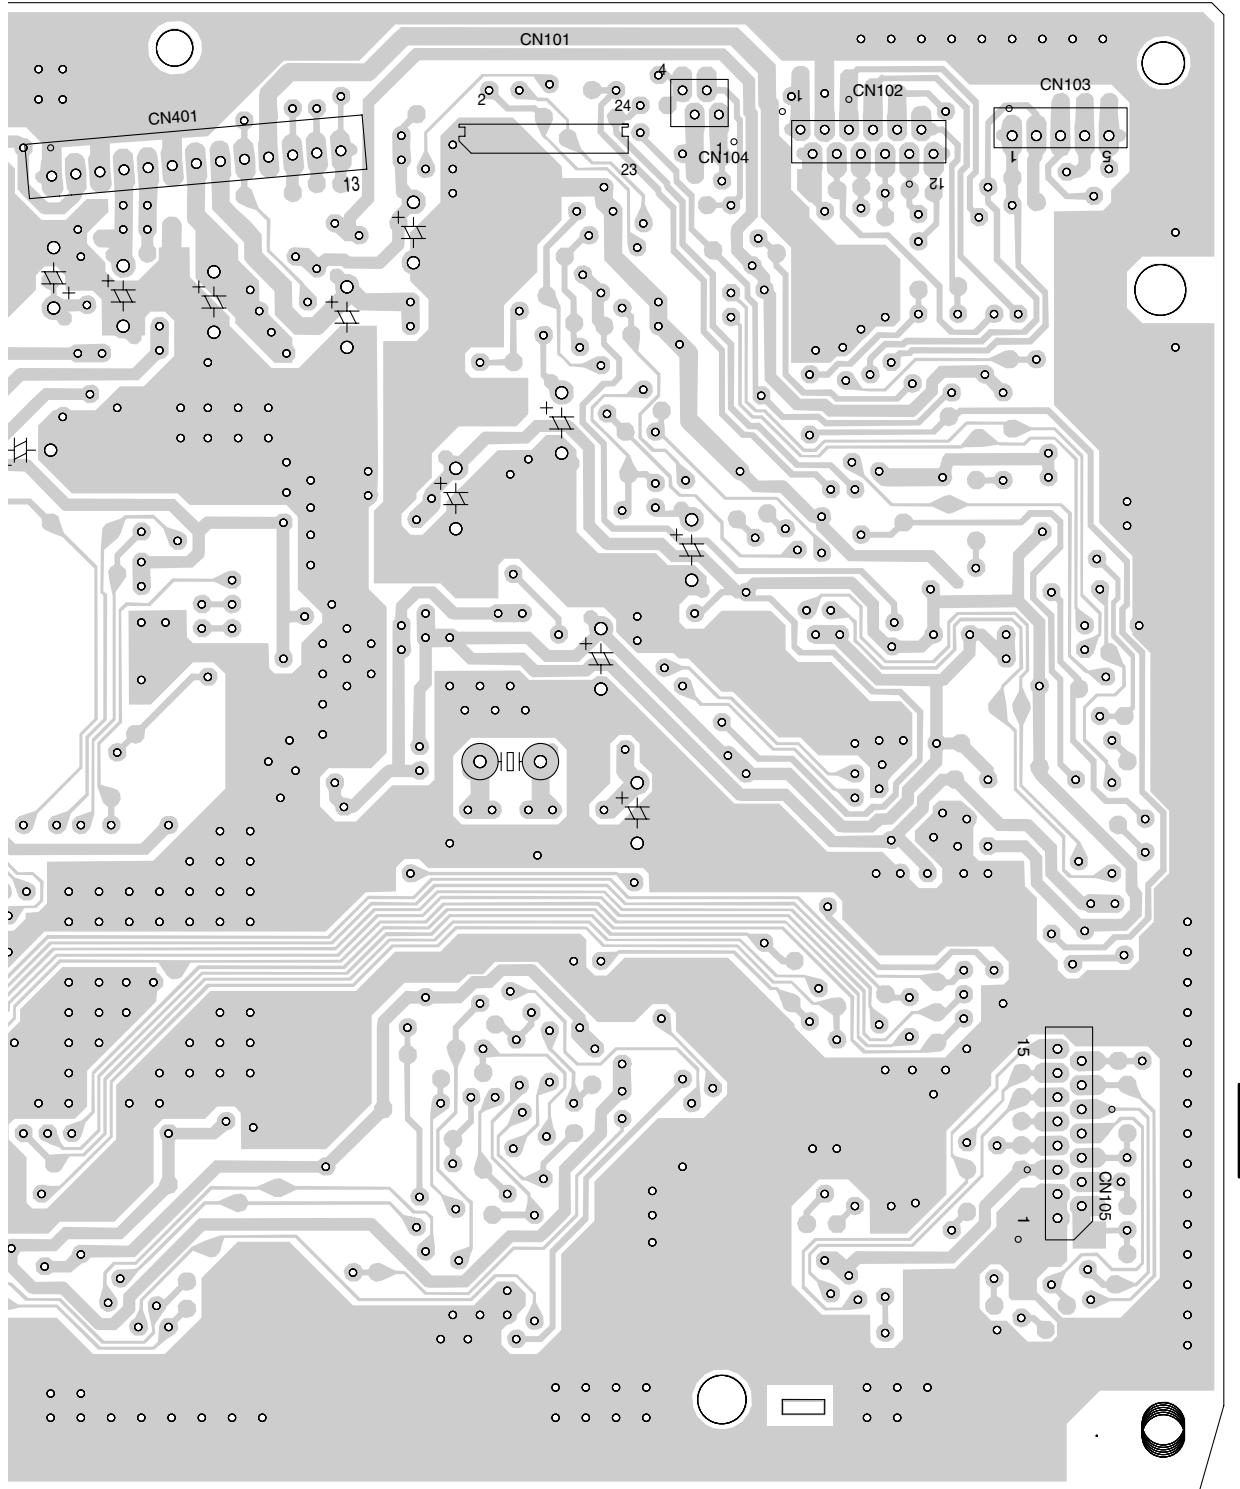

C


D

E


F

**B**

## 4.3 FLKY ASSY

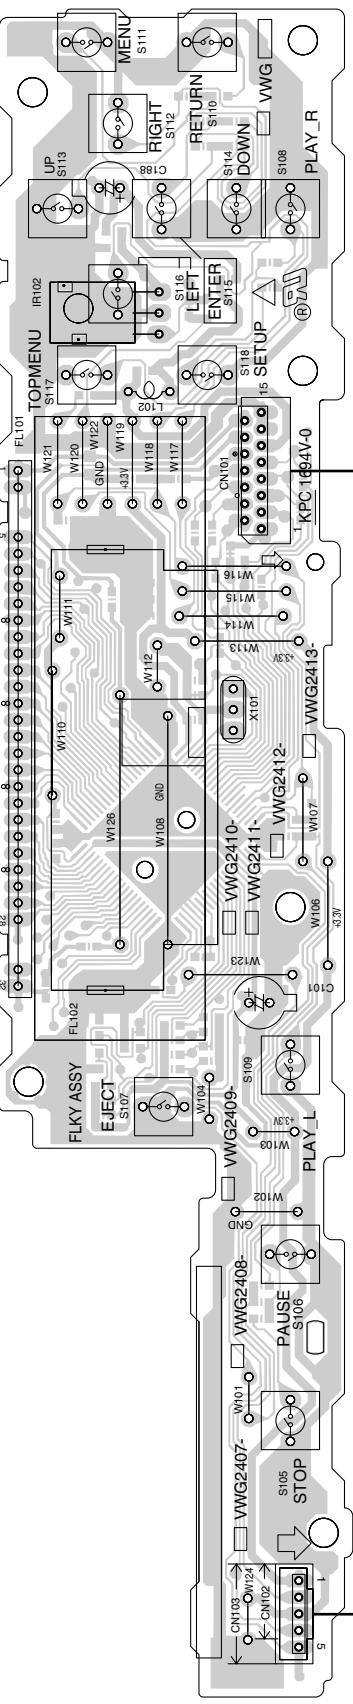

**C FLKY ASSY**  
(VNP1900-B)

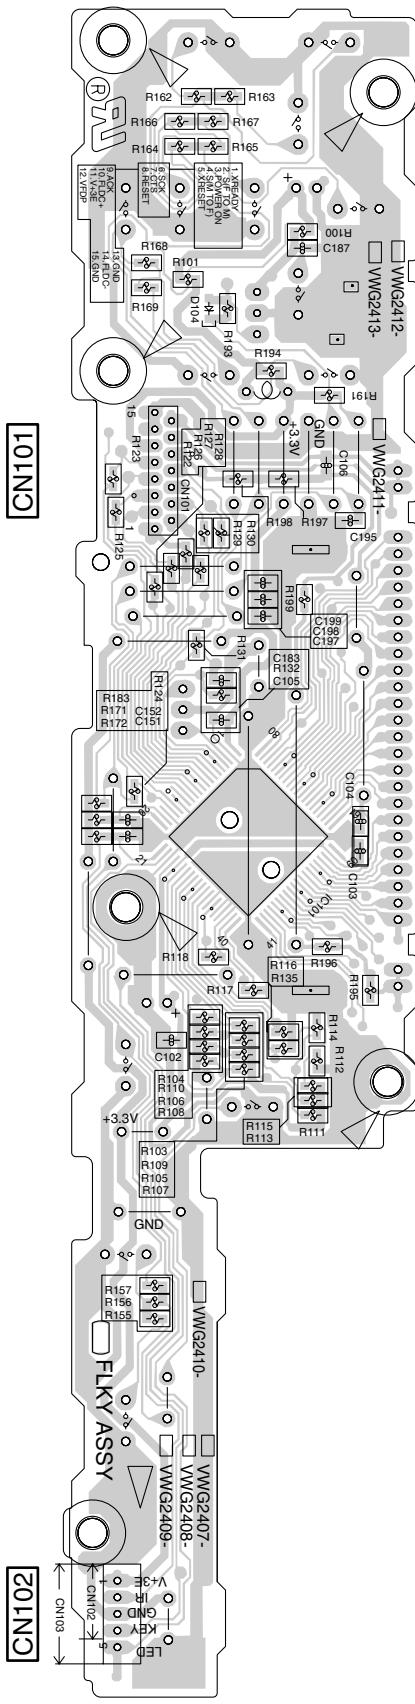

**B CN105**

**D CN104**

**CN102**


**CN103**

## 4.4 IRKY ASSY

**SIDE A**

**D** IRKY ASSY  
(VNP1900-B)

**SIDE B**

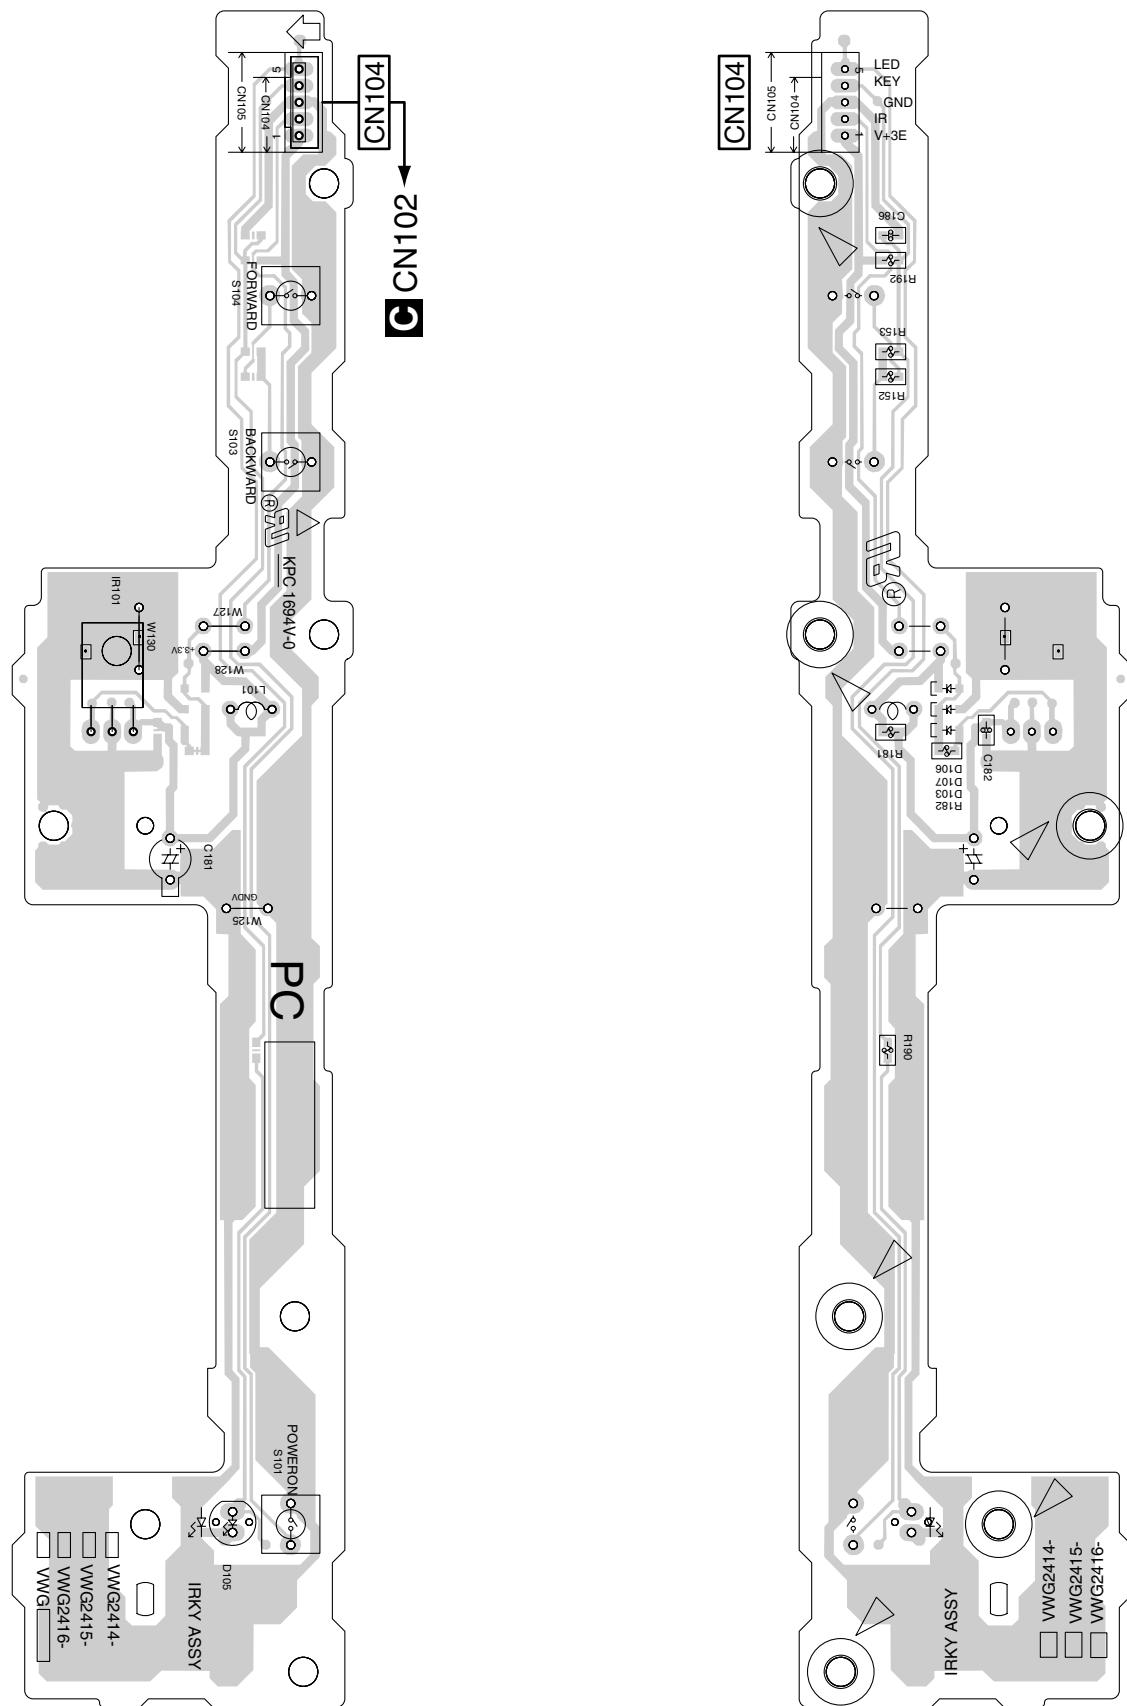



**D**

## 4.5 POWER SUPPLY UNIT [VWR1365]

**SIDE A**

**SIDE B**

### E POWER SUPPLY UNIT [VWR1365]

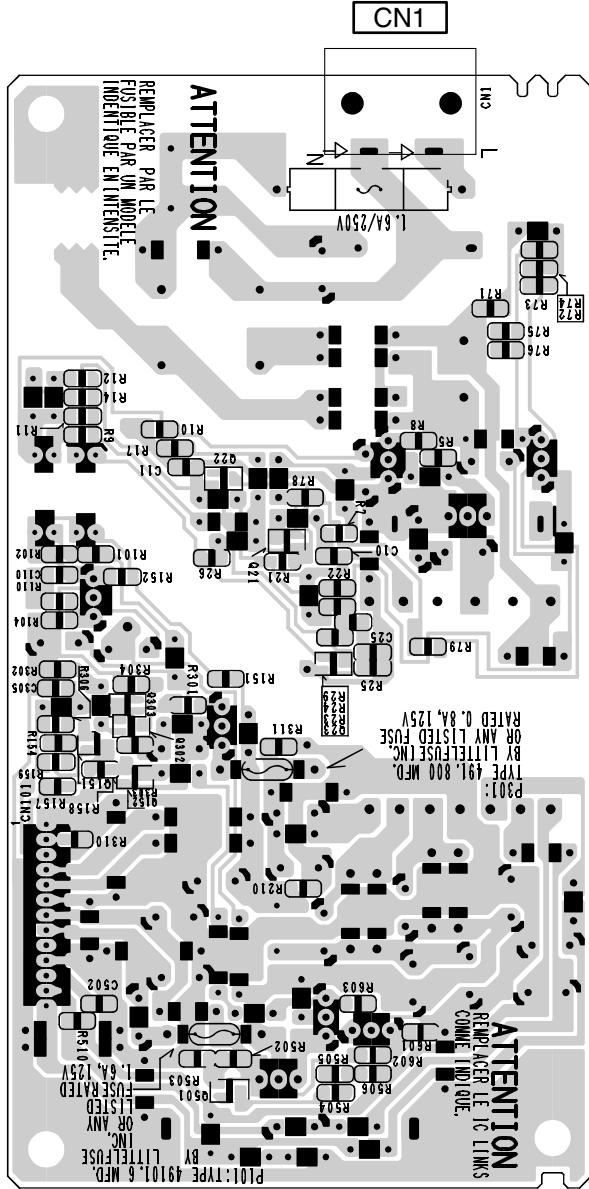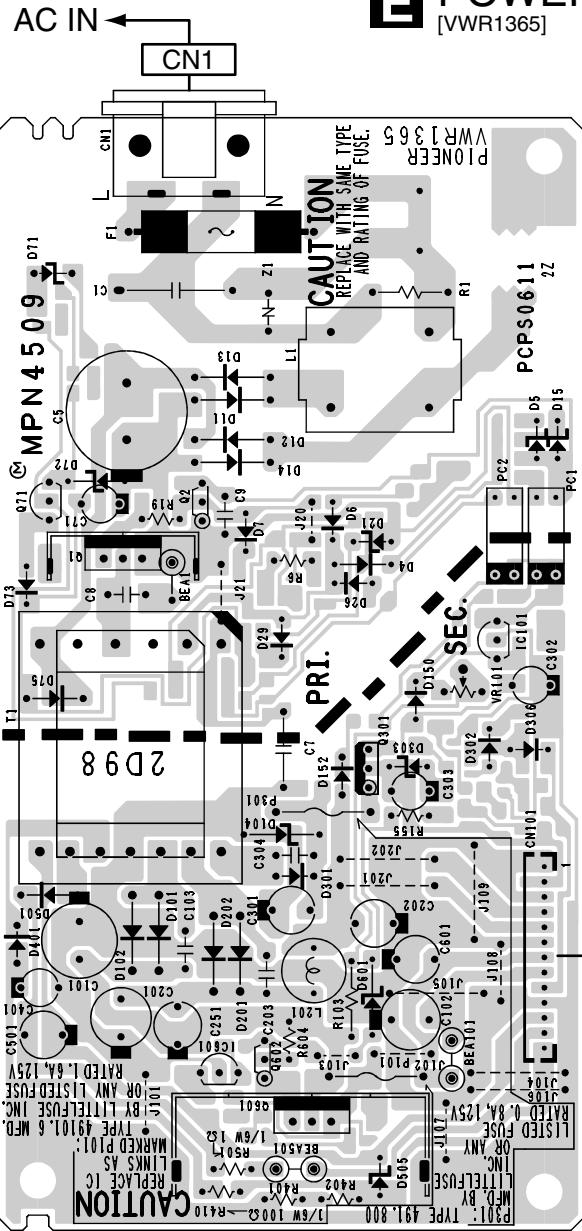

**E**


**E**

## 4.6 POWER SUPPLY UNIT [VWR1367]

**SIDE A**

**SIDE A**

### E POWER SUPPLY UNIT [VWR1367]

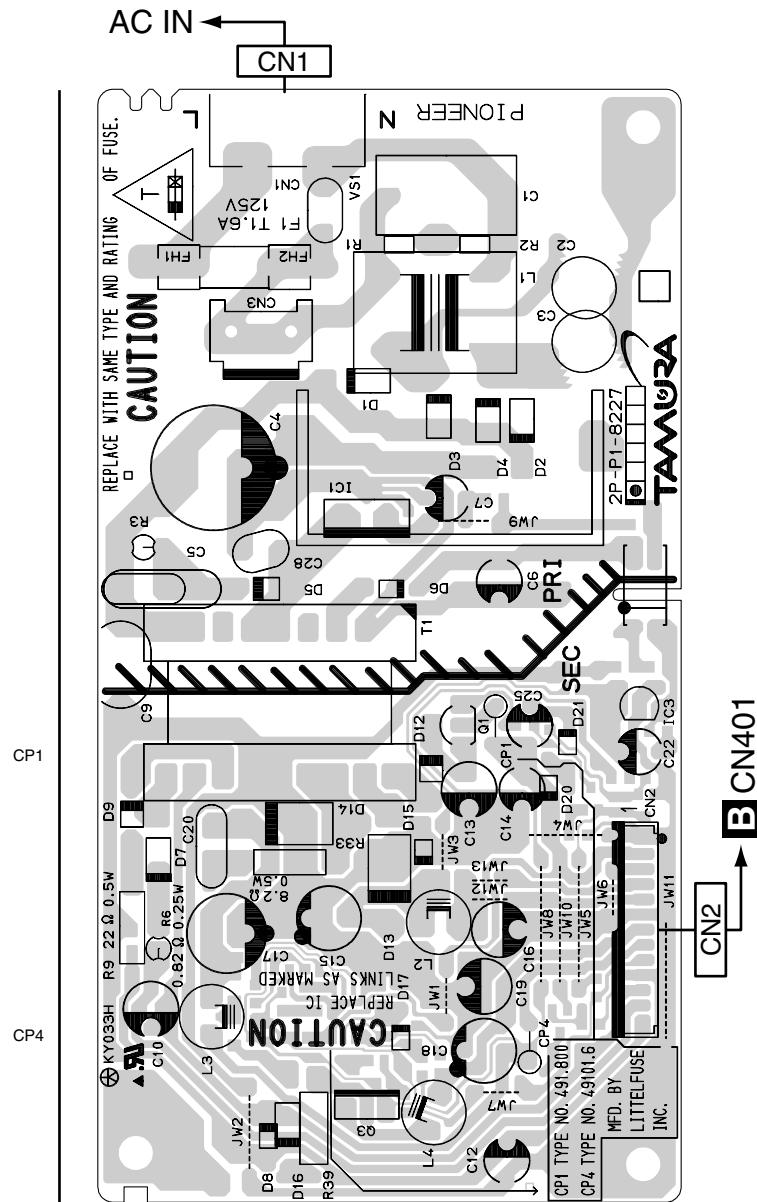

**E**

**E**

## 5. PCB PARTS LIST

- A** NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
  - The mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
  - When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 × 10<sup>1</sup> → 561 ..... RD1/4PU5|6|1J

47k Ω → 47 × 10<sup>3</sup> → 473 ..... RD1/4PU4|7|3J

0.5 Ω → R50 ..... RN2H|R|5|0K

1 Ω → 1R0 ..... RS1P|R|R|0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 × 10<sup>1</sup> → 5621 ..... RNI/4PC5|6|2|1F

B	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
<b>LIST OF ASSEMBLIES</b>						
	NSP 1..LOADING MECHA. ASSY	VWT1207		Q603		RN4982
	NSP 2..LOAB ASSY	VWG2426		D730		1SS355
<b>COILS AND FILTERS</b>						
	1..DVDM ASSY	VWS1555		L707		LAU4R7J
	NSP 1..FLKB ASSY	VWM2170		L390		LCYA2R7J2520
	2..FLKY ASSY	VWG2407		L361 CHIP BEADS		VTL1083
	2..IRKY ASSY	VWG2414		L851, L861 CHIP BEADS		VTL1089
<b>CAPACITORS</b>						
C	⚠ 1..POWER SUPPLY UNIT	VWR1365 (or VWR1367)		C390		CCSRCH180J50
				C142		CCSRCH221J50
				C200, C717, C727, C756		CCSRCH331J50
				C407, C409, C414, C421, C690		CCSRCH470J50
				C713, C723		CCSRCH470J50
<b>Mark No.</b> <b>Description</b> <b>Part No.</b>						
<b>A LOAB ASSY [VWG2426]</b>						
<b>SWITCHES AND RELAYS</b>						
	S101 REAF SWITCH	VSK1011		C392		CCSRCH560J50
				C393, C640, C644		CCSRCH7R0D50
				C211		CEAT100M50
				C408, C615, C621, C651, C703		CEAT101M10
				C705, C711, C721, C731, C801		CEAT101M10
<b>OTHERS</b>						
D	CN602 CONNCTOR	S2B-PH-K		C804		CEAT101M10
	CN601 CONNCTOR	S5B-PH-K		C301, C701, C842		CEAT102M6R3
	PRINTED CIRCUIT BOARD	VNP1910		C792		CEAT1R0M50
				C201		CEAT220M25
				C715, C725, C733		CEAT470M16
<b>B DVDM ASSY [VWS1555]</b>						
<b>SEMICONDUCTORS</b>						
	IC702	BA4560F		C822, C832, C852, C862		CEAT471M6R3
	IC602	K4S641632F-TC75		C401		CKSQYB225K10
	IC101	M63018FP		C127, C128, C381		CKSRYB102K50
	⚠ IC401	MM1565AF		C112-C114, C124, C125, C130		CKSRYB103K50
	IC801	MM1623AF		C134, C136, C355		CKSRYB103K50
				C300		CKSRYB104K16
E	⚠ IC703	NJM78L05UA		C394		CKSRYB152K50
	IC701	PCM1742KE		C126, C344		CKSRYB223K50
	⚠ IC402, IC403	PQ1L333M2SP		C712, C722		CKSRYB391K50
	IC400	PST3228		C230, C232, C233, C309, C310		CKSRYF104Z25
	IC601	STM5589CVA		C315, C318, C323, C326, C342		CKSRYF104Z25
				C348, C357, C373, C377, C388		CKSRYF104Z25
	IC301	STM6316ATXXA		C391, C402, C403, C603, C641		CKSRYF104Z25
	IC604	TC7WU04FU		C702, C704, C706, C714, C732		CKSRYF104Z25
	IC603	VYW2092		C791, C802, C803, C805		CKSRYF104Z25
	Q390, Q753	2SA1576A		C811, C812, C851, C861		CKSRYF104Z25
	Q401, Q403	2SA1602A		C102, C132, C139, C415, C480		CKSRYF105Z10
				C604, C607, C614, C619		CKSRYF105Z10
F	Q202, Q212, Q402, Q730, Q791	2SC4081		C622-C630, C636, C637		CKSRYF105Z10
	Q746, Q756	2SD2114K		C647, C648, C650, C659, C664		CKSRYF105Z10
	Q666	DTC114TUA		C684, C698, C707, C821, C831		CKSRYF105Z10
	Q751, Q752	DTC114YUA		C841		CKSRYF105Z10
	Q201, Q211	HN1A01F				

**Mark No.****Description****Part No.****RESISTORS**

R201	RAB4C220J
R211	RAB4C390J
R711, R721	RN1/16SE1002D
R713, R723	RN1/16SE1802D
R753	RS1/10S182J
 R103, R106	RS1/10S1R0J
R104, R107	RS1/10S1R8J
R115-R120	RS1/10S4R7J
R811, R821	RS1/10S75R0F
R125, R152, R330, R331, R628	RS1/16S1002F
 R635	RS1/16S1002F
R301	RS1/16S1202F
R502, R512, R522, R532, R542	RS1/16S1500F
R552	RS1/16S1500F
R101, R102, R123, R172, R182	RS1/16S5600F
 R831, R841, R851, R861	RS1/16S75R0F
Other Resistors	RS1/16S###J

**OTHERS**

CN401	CONNECTOR	B13B-PH-K
CN103	CONNECTOR	B5B-PH-K
JA701	OPT. LINK OUT	JFJ1001
	FLEXIBLE CABLE	VDA1681
JA801	JACK	VKB1179
 CN104	4P CONNECTOR	VKN1180
CN102	12P CONNECTOR	VKN1188
CN105	15P CONNECTOR	VKN1191
CN601	7P CONNECTOR	VKN1211
CN101	24P CONNECTOR	VKN1464
 X601	(27MHz)	VSS1168
X301	(20MHz)	VSS1186

**C FLKY ASSY [VWG2407]****SEMICONDUCTORS**

IC101	PE5374A
-------	---------

**SWITCHES AND RELAYS**

S105-S107, S109-S118	ASG7013
----------------------	---------

**CAPACITORS**

C183	CKSRYB102K50
C102, C105	CKSRYF104Z25
C104	CKSRYF104Z50

**RESISTORS**

All Resistors	RS1/16S###J
---------------	-------------

**OTHERS**

CN102	CONNECTOR	B4B-PH-K
V101	FLUORESCENT TUBE	VAW1077
CN101	15P CONNECTOR	VKN1219
	FL HOLDER(FE)	VNE2313
X101	(5MHz)	VSS1142

**D IRKY ASSY [VWG2414]****SWITCHES AND RELAYS**

S101, S103, S104	ASG7013
------------------	---------

**CAPACITORS**

C182	CKSRYF104Z25
------	--------------

**Mark No.****Description****Part No.****RESISTORS**

All Resistors

RS1/16S###J

A

**OTHERS**CN104 CONNECTOR  
IC103 REMOTE RECEIVERB4B-PH-K  
RPM7240-H4**E POWER SUPPLY UNIT [VWR1365]****OTHERS**⚠ P301 PROTECTOR(800mA)  
⚠ P101 PROTECTOR(1.6A)AEK7063  
AEK7066

B

**E POWER SUPPLY UNIT [VWR1367]****OTHERS**⚠ CP1 PROTECTOR(800mA)  
⚠ CP4 PROTECTOR(1.6A)AEK7008  
AEK7012

C

**OTHERS**

CN401	CONNECTOR	B13B-PH-K
CN103	CONNECTOR	B5B-PH-K
JA701	OPT. LINK OUT	JFJ1001
	FLEXIBLE CABLE	VDA1681
JA801	JACK	VKB1179
 CN104	4P CONNECTOR	VKN1180
CN102	12P CONNECTOR	VKN1188
CN105	15P CONNECTOR	VKN1191
CN601	7P CONNECTOR	VKN1211
CN101	24P CONNECTOR	VKN1464
 X601	(27MHz)	VSS1168
X301	(20MHz)	VSS1186

**C****FLKY ASSY [VWG2407]**

D

**SEMICONDUCTORS**

IC101	PE5374A
-------	---------

**SWITCHES AND RELAYS**

S105-S107, S109-S118	ASG7013
----------------------	---------

**CAPACITORS**

C183	CKSRYB102K50
C102, C105	CKSRYF104Z25
C104	CKSRYF104Z50

**RESISTORS**

All Resistors	RS1/16S###J
---------------	-------------

**OTHERS**

CN102	CONNECTOR	B4B-PH-K
V101	FLUORESCENT TUBE	VAW1077
CN101	15P CONNECTOR	VKN1219
	FL HOLDER(FE)	VNE2313
X101	(5MHz)	VSS1142

**D****IRKY ASSY [VWG2414]**

E

**SWITCHES AND RELAYS**

S101, S103, S104	ASG7013
------------------	---------

**CAPACITORS**

C182	CKSRYF104Z25
------	--------------

F

# 6. ADJUSTMENT

## 6.1 ADJUSTMENT ITEMS AND LOCATION

### A ■ Adjustment Items

[Mechanism Part]


- ① Tangential and Radial Height Coarse Adjustment
- ② DVD Jitter Adjustment
- ③ Initialize the Focus Sweep Setting

[Electrical Part]

Electrical adjustments are not required.

### B ■ Adjustment Points (Mechanism Part)

**Cautions:** After adjustment, adjustment screw locks with the Screw tight.

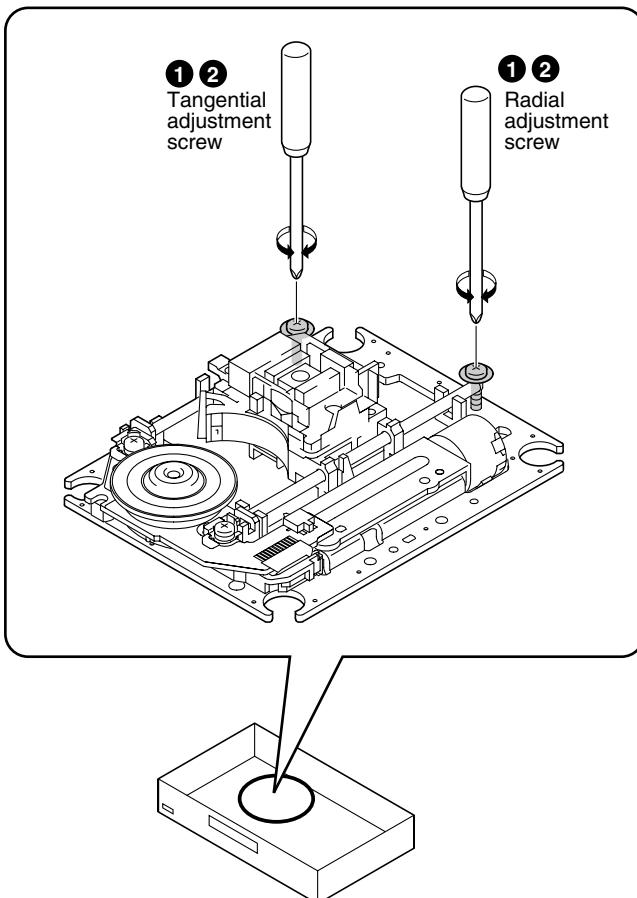

## D 6.2 JIGS AND MEASURING INSTRUMENTS

④ Screwdriver (large)	④ Screwdriver (medium)	TV monitor	Test mode remote control unit (GGF1067)
④ Precise screwdriver	DVD test disc (GGV1025)	Soldering iron	Screw tight (GYL1001)

## 6.3 NECESSARY ADJUSTMENT POINTS

When

Adjustment Points

### ■ Exchange Parts of Mechanism Assy

Exchange the Pickup

Mechanical point

①, ②, ③

\* After adjustment, screw locks with the Screw tight.

Electric point

Exchange the Traverse Mechanism

Mechanical point

③

Electric point

Exchange the Spindle Motor

Mechanical point

②, ③

\* After adjustment, screw locks with the Screw tight.

Electric point

### ■ Exchange PCB Assy

Exchange PC Board

Mechanical point


LOAB and DVDM ASSYS

Electric point

\*

**Purpose:** To set the sweep which was correct with the individual Traverse mechanism.

Be sure to perform the following step finally when replaced Pickup, Traverse Mechanism and Spindle Motor.

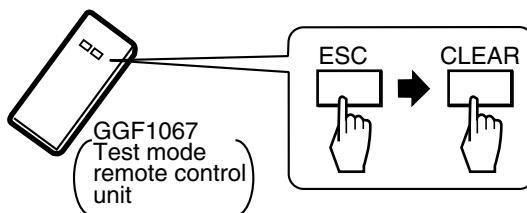


(It is necessary when performed adjustment procedure ②.)

## 6.4 TEST MODE


- A • The TEST MODE functions that are used only during adjustment are described here. For details, see "7.1.1 TEST MODE".

### TEST MODE: ON

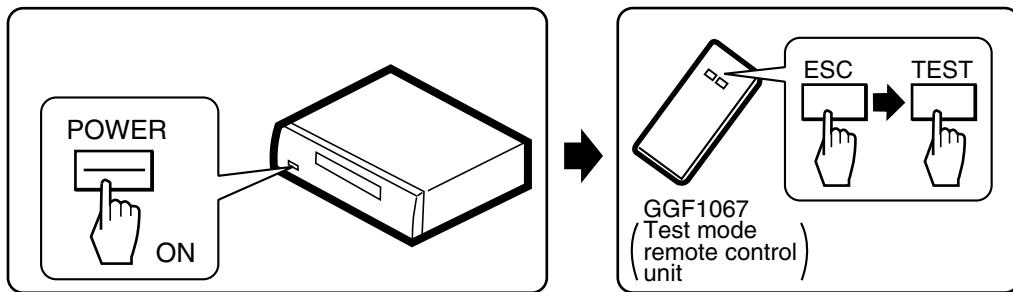


### TEST MODE: DISC SET

#### <TRAY OPEN>

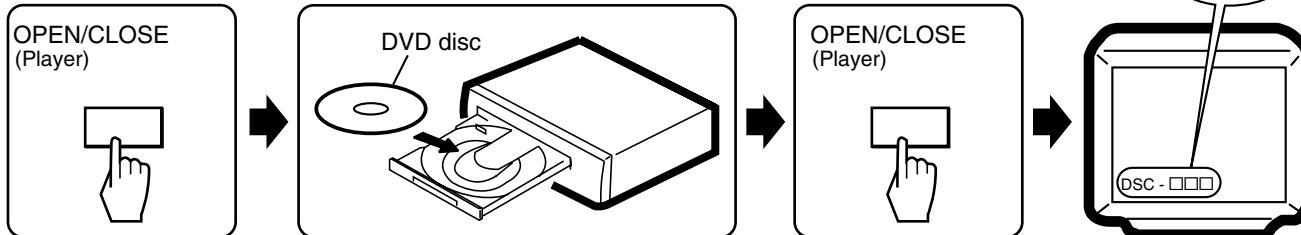

### TEST MODE: PLAY


#### <PLAY>

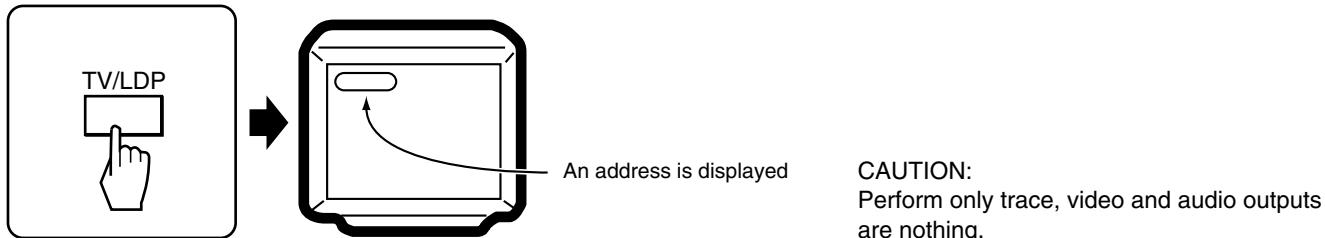


#### < When playback with the target address of disc (DVD)>

For example, when playback with # 30000

During PLAY    +10 → 3 → 0 → 0 → 0 → 0 → CHP/TIM    Press keys in order

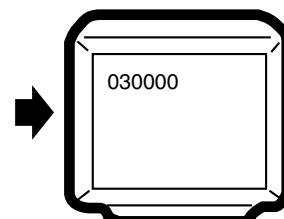

### TEST MODE: OFF

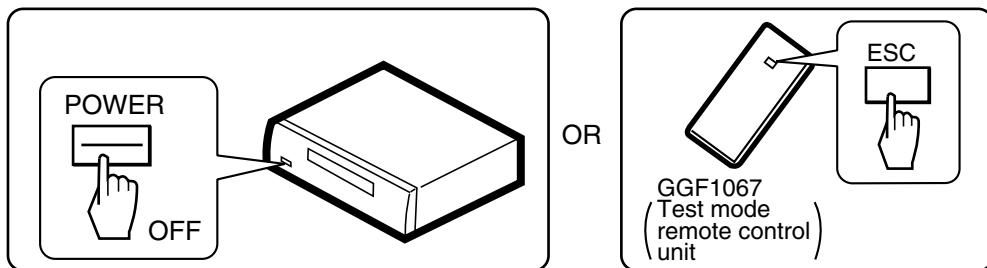


## 6.5 MECHANISM ADJUSTMENT



### 1 Tangential and Radial Height Coarse Adjustment

#### START

- Remove the Loading Mecha. Assy.
- Remove a Spacer for height adjustment attached to the back side (shaded area) of the Loading Mecha. Assy (Float Base) with nippers.

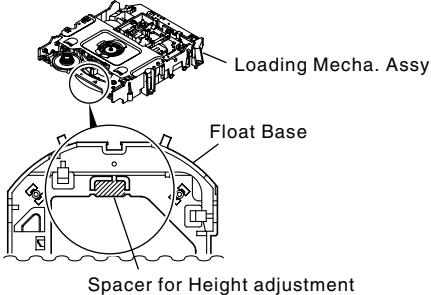

#### Note:


Before removing the flexible cable for the pickup, soldering of the pickup circuit is necessary.  
For details, see "7.1.9 DISASSEMBLY".

#### Cautions:

Because there is not a Spacer for height adjustment in adjustment after the second time, will keep it at need.  
(This parts is Traverse mechanism exclusive use of a model for 2003 years)




Put a spacer between a Tangential (or Radial) adjustment screw and Mechanism Base and turn each screw to adjust the height. (Refer to "6.1 ADJUSTMENT ITEMS AND LOCATION".)

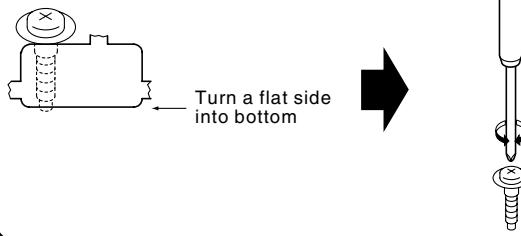

## ② DVD Jitter Adjustment


- Playback method of inner and outer address for the purpose is referred to "6.4 TEST MODE".
- Jitter indication of the monitor is referred to "7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE".

Use disc: GGV1025

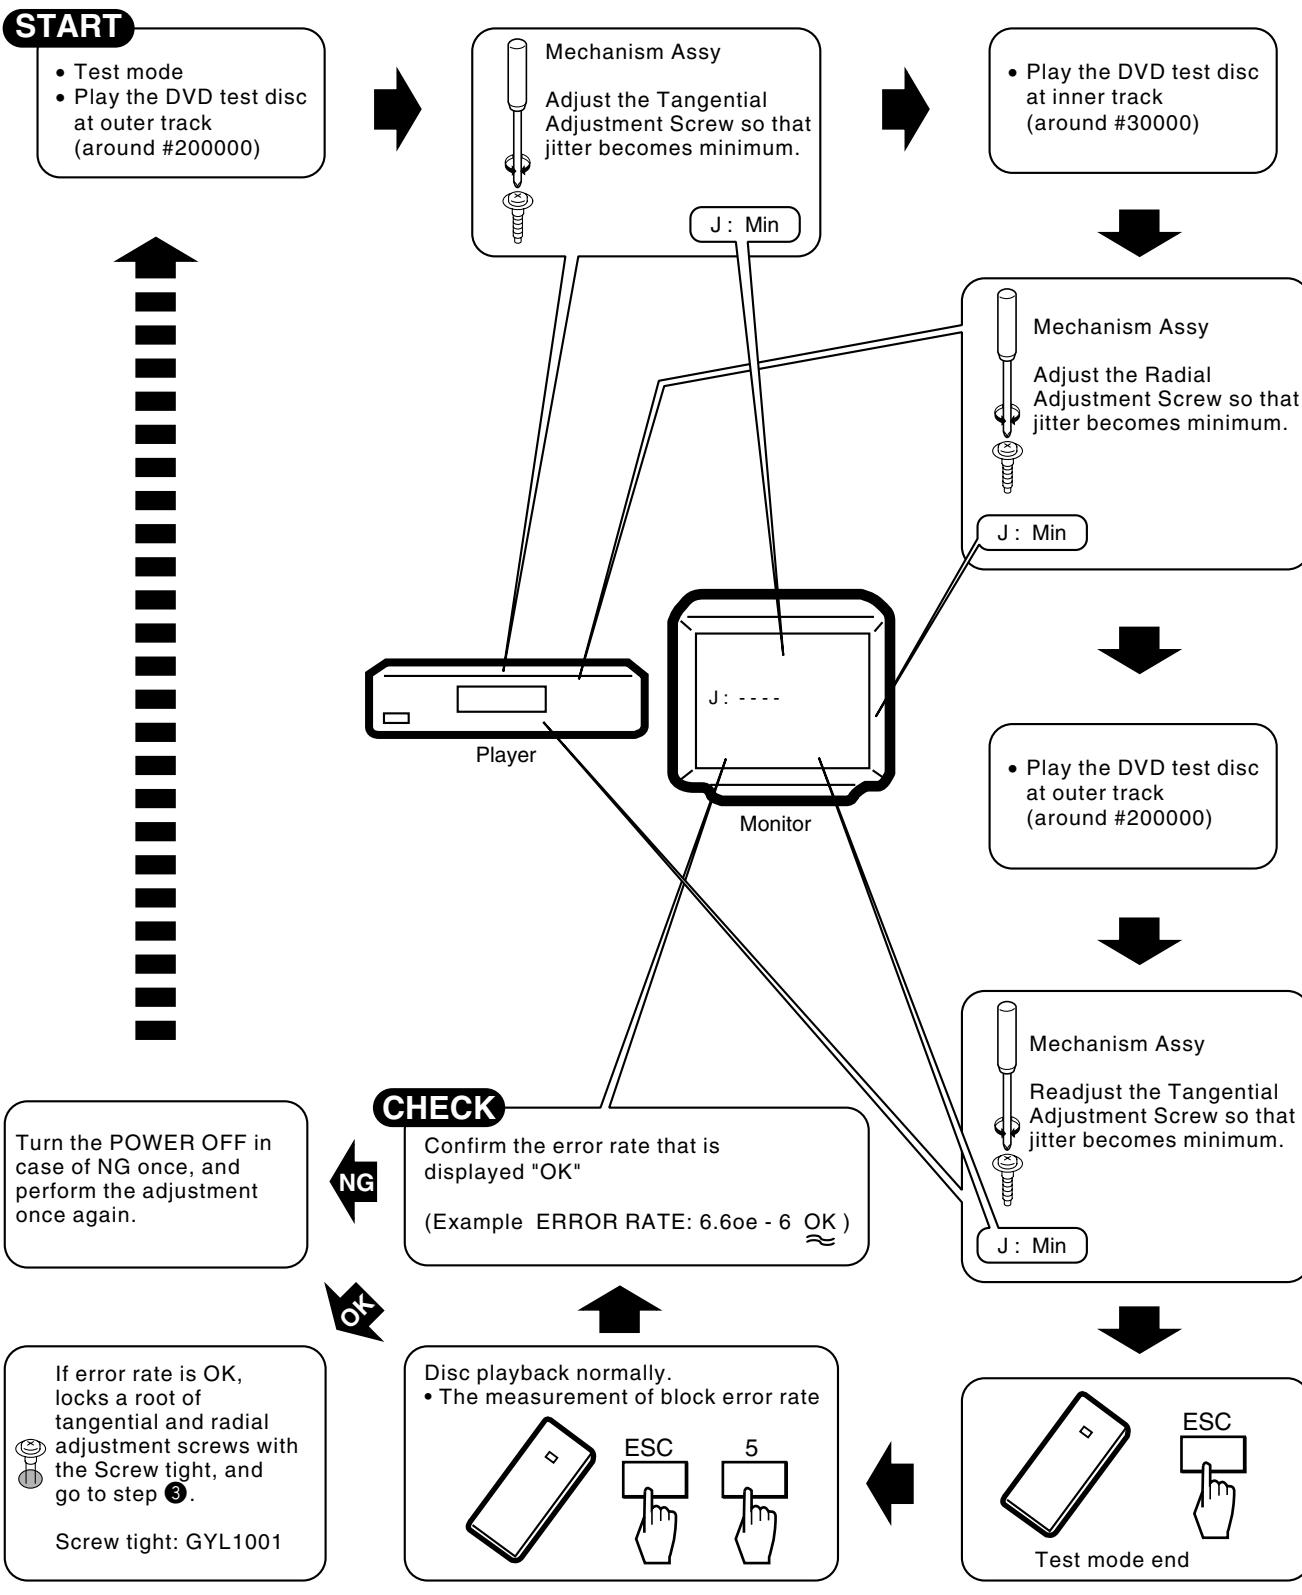

### ③ Initialize the Focus Sweep Setting

**Purpose:** To set the sweep which was correct with the individual Traverse mechanism.

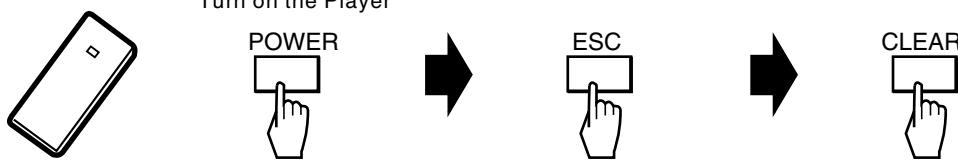

**Note:** Be sure to perform this step when replaced the Pickup or Traverse mechanism.

# 7. GENERAL INFORMATION

## 7.1 DIAGNOSIS

### 7.1.1 TEST MODE

#### ■ Test Mode Functional Specification

##### ① Test mode entry

In the power ON state, press the [ESC] (A8-5F) key and [TEST / RANDOM] (A8-5E) key in order of the Test mode remote control unit.

- Light the all FL and LEDs, and goes out the FL and LEDs when pressing the keys of something.
- OSD displays test mode. Refer to the "7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE".

##### ② Release the Test mode

- Turn off the power.
- Press the [ESC] (A8-5F) key of the remote control unit and reset it.

##### ③ Tray open / close

- Press the [REPEAT A-B] (A8 - 48) key of the remote control unit.
- Press the [OPEN / CLOSE] key of the main unit from the stop state.

##### ④ Playback stop

1. Press the [REPEAT] (A8 - 44) key of the remote control unit from the playback state.
2. Press the [STOP] key of the remote control unit or main unit from the playback state.  
(Playback stops, but the loaded disc keeps rotating.)

##### ⑤ LD ON

DVD : Press the [TEST] (A8-5E) and [1] (A8-01) keys in order, and turn on the laser diode (650n).  
CD : Press the [TEST] (A8-5E) and [4] (A8-04) keys in order, and turn on the laser diode (780n).

##### ⑥ Focus on / sweep

1. Lock the focus by pressing the [TEST] (A8-5E) and [2] (A8-02) keys in order.
2. Repeat focus sweep by pressing the [TEST] (A8-5E) and [3] (A8-03) keys in order.

##### ⑦ Spindle FG servo

CAV : Press the [TEST] (A8-5E) and [5] (A8-05) keys in order, then rise up the spindle and FG servo becomes on.  
CLV : Press the [TEST] (A8-5E) and [9] (A8-09) keys in order, then rise up the spindle and FG servo becomes on.

##### ⑧ Tracking open / close

1. Open tracking by pressing the [STEP FWD] (A8-54) key of the remote control unit in the play state.
2. Close tracking by pressing the [STEP REV] (A8-50) key of the remote control unit in the play state.

##### ⑨ Slider servo on/off

1. Turn on the slider servo by pressing the [TEST] (A8-5E) and [CX] (A8-0E) keys in order.
2. Turn off the slider servo by pressing the [TEST] (A8-5E) and [TV/LDP] (A8-0F) keys in order.

##### ⑩ Slider in / out

Slider in : In the tracking off state, press the [SCAN REV] (A8-11) key of the remote control unit.  
Slider out : In the tracking off state, press the [SCAN FWD] (A8-10) key of the remote control unit.

##### ⑪ Play (perform only the ID search and trace to the specified location)

Press the [TV/LDP] (A8-0F) key of the remote control unit from the stop state.  
Perform only trace, video and audio outputs are nothing.

##### ⑫ Screen display ON/OFF

1. Turn off the display by pressing the [AUDIO] (A8-1E) key of the remote control unit.
2. Turn on the display by pressing the [DISPLAY] (A8-43) key of the remote control unit.

## ⑬ Search

### 1. Search address input entry

- It becomes the address input mode when pressing the [+10] (A8-1F) key. (Most significant digit of an address displays "<".)
- In this time, display the last address as the initial state.

A

### 2. Search address input

- Press the [0] to [9] (A8-00 to 09) keys of the remote control unit. In the DVD, set an address with hexadecimal.
- In the address input mode, turn to the hexadecimal input by pressing the [PROGRAM] (A8-4C) key (display a "\*" mark), and [1] to [6] keys are each input as A to F.
- Hexadecimal input and decimal input can switch with toggle.
- In case of CD, perform only the absolute time search.

B

### 3. Search execution

- Press the [CHP/TM] (A8-13) key of the remote control unit.
- After the search, perform only trace and video and audio outputs are nothing.

B

### 4. Release the Search address input

- Clear the address by pressing the [CLEAR] (A8-45) key. Release the address input mode when pressing the [CLEAR] key once again.

C


D

E

F

## 7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE

A

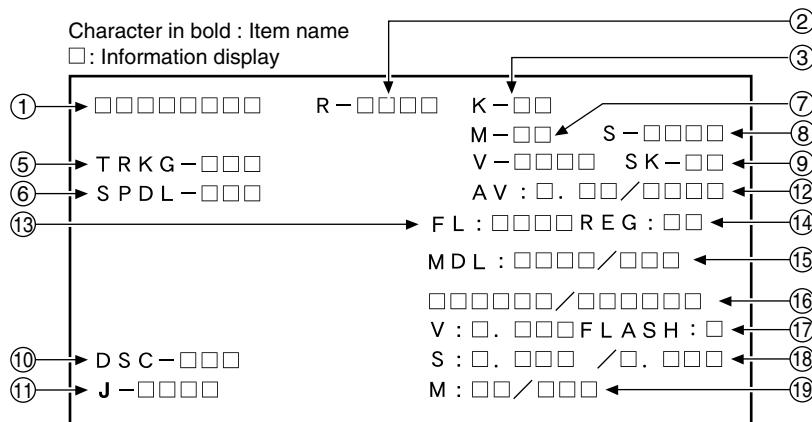

B

### ① Address indication

The address being traced is displayed in number.  
(as for the DVD, indication of decimal number is possible.)  
DVD : ID indication (hexadecimal number, 8 digits)

[\*\*\*\*\*]

CD : A-TIME (min. sec.) [0 0 0 \*\*\*\*\*]

### ② Code indication of remote control unit [R – \* \* \* \*]

In case of double code, display a 2nd code.

### ③ Main unit keycode indication [K – \* \*]

### ⑤ Tracking status [TRKG – \* \* \*]

Tracking on : [ON]  
Tracking off : [OFF]

### ⑥ Spindle status [SPDL – \* \* \*]

[OFF], [ACC/BRK], [CAV], [CLV]

### ⑦ Mechanism (loading) position value [M – \* \*]

Unknown	: [01] or [41]
Open state	: [04]
Close state	: [08]
During opening	: [12]
During closing	: [22]

### ⑧ Slider position [S – \* \* \* \*]

In Side Switch ON : [01]  
In Side Switch OFF : [00]

### ⑨ Output video system [V – \* \* \* \*]

NTSC system	: [NTSC]
PAL system	: [PAL]
Automatic setting	: [AUTO]

### Scart terminal output [SK – \* \*]

(Display only the WY model which can do the output setting of scart terminal.)

VIDEO	: [00]
S-VIDEO	: [01]
RGB	: [02]

### ⑩ Disc sensing [DSC – \* \* \*]

The type of discs loaded is displayed.  
[DVD], [CD], [VCD], [ ]

### ⑪ Jitter value [J – \* \* \*]

### ⑫ Version of the AV-1 chip / version of firmware [AV: \* \* / \* \* \* \* \*]

### ⑬ Version of the FL controller [FL: \* \* \*]

### ⑭ Region setting of the player [REG: \*]

Setting value : [1] to [6]

### ⑮ Destination setting of the FL controller

[MDL: \* \* \* / \* \*]

Four characters in the front represent the type of model.  
Three characters in the back represent the destination code.  
J: /J, K: /KU, /KC, /KU/KC, R: /RL/RD, RAM : /RAM,  
LB: /LB, WY: /WY

### ⑯ Part number of the flash ROM and system controller [\* \* \* \* \* / \* \* \* \*]

### ⑰ Version of the flash ROM [V: \*, \* \* \*] Flash ROM size [FLASH = \* \*]

### ⑱ Revision of the system controller [S: \*. \* \* \* / \*. \* \* \*] version . revision / build number of the ST core

### ⑲ Revision of the DVD mechanism controller

[M: \* \* / \* \*]

Kinds of version / firmware of the FE.  
RAM or ROM

E

F

### 7.1.3 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY

Only during normal playback, the following shortcut keys can be assigned by pressing a required key after pressing the ESC key of the remote control unit. To quit, press the ESC key

Command Contents	Conditions	Remote Control Key Name	Remote Control Code
Memory clear and resin / revision indication		CLEAR (*1)	A8-45
Average value measurement of DVD error rate		5 (*1)	A8-05
CD error rate measurement		5 (*1)	A8-05
Aspect : Pan scan		2	AF-A2
Aspect : Letter box		3	AF-A3
Aspect : Wide		4	AF-A4
Digital : AC3		5	AF-A5
Digital : AC-3 > PCM		6	AF-A6
Virtual surround : OFF	Only for models having the corresponding functions	7	AF-A7
Virtual surround : TruSurround		8	AF-A8
Digital output ON		REPEAT A	AF-E8
Digital output OFF		REPEAT B	AF-E4
DTS Digital output ON		STEP FWD	AF-B7
DTS Digital output OFF		STEP REV	AF-B8
Scart terminal output : VIDEO	WY, models equipped with Scart terminal	AUDIO	AF-BE
Scart terminal output : S-VIDEO		SUBTITLE	AF-36
Scart terminal output : RGB		ANGLE	AF-B5
Progressive OFF	Only for progressive models	R_SKIP	A3-9D
Progressive ON		F_SKIP	A3-9C
Audio 5.1 CH ON	Only for models having the corresponding functions	KD_ENTER	AF-EF
FL indication of EDC / ID error		CX (*1)	A8-0E
FL indication of ID number		STEREO (*1)	A8-4A
ZOOM ON (X4)		ZOOM	AF-37
ZOOM OFF		< X3 (*1)	A8-59
Service mode indication (error rate indication, etc.)		CHP/TIM (*1)	A8-13
Model information indication		CHAP (*1)	A8-40
Background color change		+10 (*1)	A8-1F
Audio last stage mute ON		9	AF-A9
Audio last stage mute OFF		0	AF-A0
Title search Input mode IN Title No. input Search execution		SIDE A (*1) Numbers (*1) PLAY (*1)	A8-4D A8-00 to A8-09 A8-17
Region confirmation mode		AUDIO (*1) Numbers (*1)	A8-1E A8-01 to A8-08

- **Service mode indication (ESC + CHP/TIM keys)**

\*1 : Test mode remote control unit

ID Address

The error rate is always displayed in exponential notation, e.g., \*.\* \* e - \*, for both DVDs and CDs.

EDC/ID/AV 1 error history (ID Address, EDC/ID/AV 1 Error, last eight errors)

Self-diagnosis functions (If a mechanical error has occurred, the mechanical-error history is also displayed.)

- **Calculation of the average error rate (ESC + "5" [Test mode remote control unit] keys)**

The average of the last eight error rates is calculated and indicated in exponential notation. After the calculation is completed, "OK" or "NG" is displayed. If "NG" is displayed, the disc tray will open (for both DVDs and CDs)

For DVDs: OK with 5.0e-4 or less, for CDs: OK with 7.6e-3 or less

- **Indication of model information (ESC + CHAP keys)**

The items from 12 to 19 of the TEST MODE Indications are displayed. However, in the indications, S in the standard test mode is changed to B.E VERSION, and M is changed to F.E VERSION. For details, see 7.1.4.

- **Change of the background colors (ESC + "+10" [Test mode remote control unit] keys)**

Every time the keys are pressed, the background color is changed between blue and green alternately.  
(The green background is used in SETUP NAVIGATOR.)

- **Region confirmation mode (ESC + AUDIO [Test mode remote control unit] + "1"- "8" [Test mode remote control unit] keys)**

After you press the AUDIO key while holding the ESC key pressed and then input the region number, if the number is different from that set in the unit, an error message is displayed, and the tray opens.


## 7.1.4 SPECIFICATION OF MODEL INFORMATION DISPLAY

To display model information : Press the ESC key then the CHAP key.

To close the model information display : Press the ESC key.

A

- Display contents

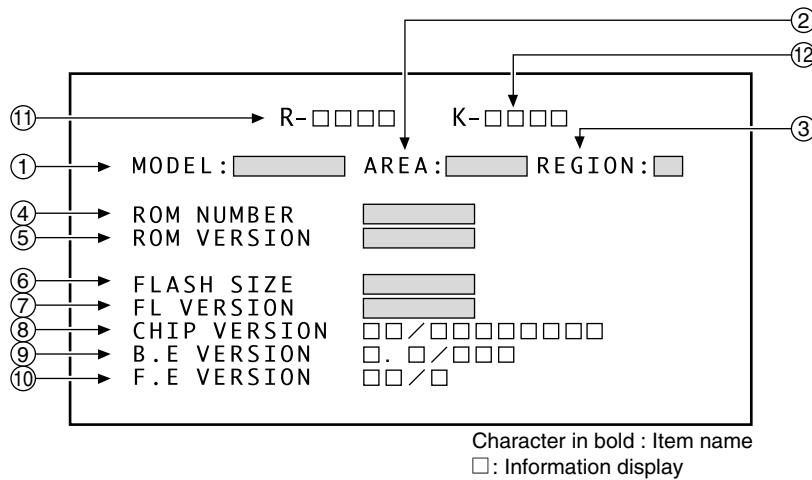

B

**① Model name**

Display it according to model information set from the FL controller.

**② Destination indication**

Display it according to model information set from the FL controller.

**③ Region No.**

**④ Part number**

**⑤ ROM version**

**⑥ Flash size**

**⑦ FL controller version**

D

**⑧ CHIP VERSION**

Version of ST CHIP

CUT ID / JTAG ID

↑      ↓

(two columns) (eight columns)

**⑨ B.E VERSION**

Version of BACK END (version of ST core software)

□. □ / □□□

softwareVersion . softwareRevision / buildNumber

**⑩ F.E VERSION**

Version of FRONT END (version of mechanism controller CHIP software)

□□/□

MainVersion / Kinds of firmware RAM or ROM

**⑪ Remote control code**

**⑫ Key code of Main unit**


E

F

## 7.1.5 FUNCTIONAL SPECIFICATION OF THE SERVICE MODE

### • EDC / ID error FL display (shortcut function)

EDC/ID error is displayed on the FL display if you press the CX key while holding the ESC key on the TEST MODE remote control unit pressed. To quit while an EDC/ID error is displayed, press the ESC key.

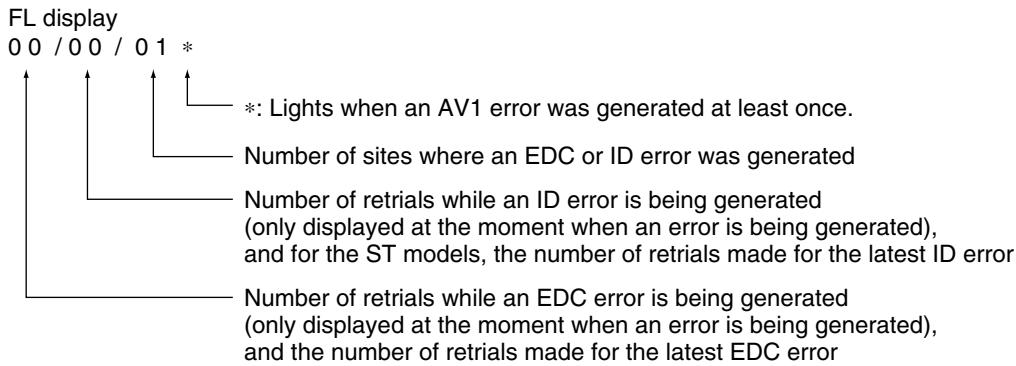


### • Display during Service Mode

To enter Service Mode, press the CHP/TIM key while holding the ESC key pressed.  
To quit, press the ESC key.

#### Service mode display

① ID Address

② Error rate (always displayed), in exponential notation

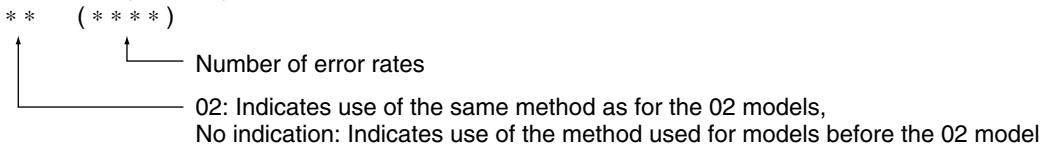

③ EDC/ID/AV1 error history (ID Address, EDC/ID/AV1 errors, last eight errors)

Description of AV1 errors

BIT0: In BE code, an EDC error, FEC I/F buffer overflow, or "not valid" is generated (B.E error)

BIT1: In BE code, the ID is different from that of the target (B.E error)

BIT2: An error was generated in FE-added 2-byte EDC data. (F.E error)

④ Self-diagnosis functions

Whether F.E is normal or not is checked.

FE OK: No abnormality in F.E

FE Error: Abnormality is recognized in F.E.

Pressing the CHP/TIM key again displays the mechanical error history. Each press of the CHP/TIM key changes the displays between the mechanical error history and the Service Mode display.

For details on the mechanical error history, refer to the addendum.

Indication plan contents



AV1 ERR	BIT		
	2	1	0
00	0	0	0
01	0	0	1
02	0	1	0
03	0	1	1
04	1	0	0
05	1	0	1
06	1	1	0
07	1	1	1

## 7.1.6 MECHANICAL ERROR HISTORY


Only if a mechanical error (FE error) has been generated, a mechanical error history containing up to the last eight errors is displayed if you press the CHP/TIM key in Service Mode.

Errors are displayed in descending order, with the latest one at the top.

### Description of the mechanical error history

#### ① Error number

The first two digits are for the error code, and the second two digits are for the servo state.

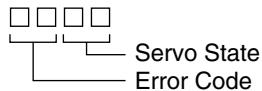

Note: When an error has been generated, if the servo state is "Disc judge," the disc tray opens, and if the servo state is other than "Disc judge," the unit stops (excluding a case of a device error with the error code 0xd\*).

#### ② Error number

The elapsed time from the time when the system was turned on until an error was generated is displayed.


Note: If a later error time is shorter than the previous error time, it means that the unit was turned off then on again.

#### ③ Description of errors

Error messages are displayed.

Example: If the error code is 0x13 (Focus lost timeout) and the servo state is 0x05 (Disc judge), the message becomes "Focus lost timeout in Disc judge."

### Indication contents

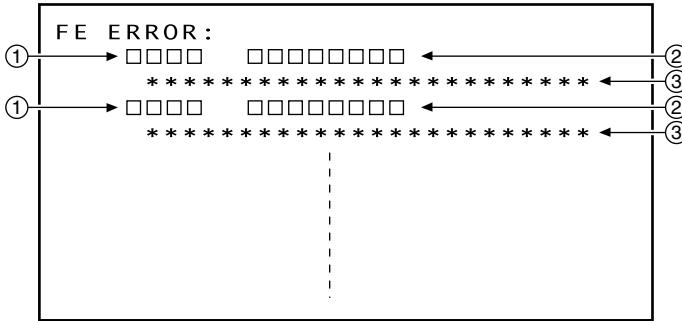

### • List of the error codes

<b>FOCUS ERROR</b>	0x0*	<b>FOCUS TIMEOUT</b>	0x1*
Focus on error	0x01	Focus on timeout	0x11
Focus off error	0x02	Focus off timeout	0x12
Focus lost error	0x03	Focus lost timeout	0x13
Focus balance adjust error	0x04	Focus balance adjust timeout	0x14
Focus gain adjust error	0x05	Focus gain adjust timeout	0x15
Focus sweep error	0x06	Focus sweep timeout	0x16
Focus reflection error	0x07	Focus reflection timeout	0x17
<b>TRACKING ERROR</b>	0x2*	<b>TRACKING TIMEOUT</b>	0x3*
Tracking on error	0x21	Tracking on timeout	0x31
Tracking off error	0x22	Tracking off timeout	0x32
Tracking lost error	0x23	Tracking lost timeout	0x33
Tracking balance adjust error	0x24	Tracking balance adjust timeout	0x34
Tracking gain adjust error	0x25	Tracking gain adjust timeout	0x35
<b>STEPPING ERROR</b>	0x4*	<b>STEPPING TIMEOUT</b>	0x5*
Stepping on error	0x41	Stepping on timeout	0x51
Stepping off error	0x42	Stepping off timeout	0x52
Stepping lost error	0x43	Stepping lost timeout	0x53
Stepping move error	0x44	Stepping move timeout	0x54
<b>SPINDLE ERROR</b>	0x6*	<b>SPINDLE TIMEOUT</b>	0x7*
Spindle on error	0x61	Spindle on timeout	0x71
Spindle off error	0x62	Spindle off timeout	0x72
Spindle lost error	0x63	Spindle lost timeout	0x73
Spindle CAV error	0x64	Spindle CAV timeout	0x74
Spindle CLV error	0x65	Spindle CLV timeout	0x75
<b>ACQUISITION ERROR</b>	0x8*	<b>ACQUISITION TIMEOUT</b>	0x9*
PLL lost error	0x83	PLL lost timeout	0x93
<b>DECODER ERROR</b>	0xa*	<b>DECODER TIMEOUT</b>	0xb*
ID lost error	0xa3	ID lost timeout	0xb3
<b>DEVICE ERROR</b>	0xd*		
SRAM error	0xd1		

### • List of the servo states

0x00	Reset
0x01	Stop (inside position)
0x02	Stop (any position)
0x03	Braking for stop
0x04	New disc
0x05	Disc judge
0x06	Reserved 1
0x07	Playing
0x08	Start up
0x09	Seeking
0x0A	Pausing
0x0B	Reading BCA
0x0C	Reserved 2
0x0D	
0x0E	Tray open
0x0F	Tray moving

Note : 0 x

code  
(Only this part is displayed to a display)

## ■ ERROR CODE TABLE

Error Name	No.	Causes	Check Item	Possibility of Trouble	Remarks
<b>FOCUS ERROR (0 x 0*)</b>					
Focus on error	0 x 01	Focus on could not be completed	Are not there a dirt or a scratch in the Disc? Does LD become weak? Does the lens move up and down?	1. Pickup 2. Driver 3. Front End IC	A
Focus off error	0 x 02	Focus off could not be completed	Unknown		
Focus lost error	0 x 03	Focus servo is lost	Are not there a dirt or a scratch in the Disc? Does LD become weak?	1. Pickup	
Focus balance adjust error	0 x 04	AFB on could not be completed			
Focus gain adjust error	0 x 05	Focus AGC could not be completed			
Focus sweep error	0 x 06				
Focus reflection error	0 x 07	Dimensions of S curve did not reach to the aim value	Does LD become weak?	1. Pickup	
<b>FOCUS TIMEOUT (0 x 1*)</b>					
Focus on timeout	0 x 11	Did timeout at focus on	Are not there a dirt or a scratch in the Disc? Does LD become weak? Does the lens move up and down?	1. Pickup 2. Driver 3. Front End IC	B
Focus off timeout	0 x 12	Did timeout at focus off			
Focus lost timeout	0 x 13	Did timeout at focus backup			
Focus balance adjust timeout	0 x 14	Did timeout at AFB			
Focus gain adjust timeout	0 x 15	Did timeout at AGC			
Focus sweep timeout	0 x 16				
<b>TRACKING ERROR (0 x 2*)</b>					
Tracking on error	0 x 21	Tracking on could not be completed		1. Pickup 2. Driver 3. Front End IC	C
Tracking off error	0 x 22	Tracking off could not be completed			
Tracking lost error	0 x 23	Tracking servo is lost		1. Pickup	
Tracking balance adjust error	0 x 24	ATB could not be completed		1. Pickup	
Tracking gain adjust error	0 x 25	AGC could not be completed		1. Pickup	
Tracking jump error	0 x 26	Tracking jump could not be completed			
<b>TRACKING TIMEOUT (0 x 3*)</b>					
Tracking on timeout	0 x 31	Did timeout at tracking on	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Driver 3. Front End IC	D
Tracking off timeout	0 x 32	Did timeout at tracking off			
Tracking lost timeout	0 x 33	Did timeout at tracking backup	Are not there a dirt or a scratch in the Disc?	1. Pickup	
Tracking balance adjust timeout	0 x 34	Did timeout at ATB		1. Pickup	
Tracking gain adjust timeout	0 x 35	Did timeout at AGC		1. Pickup	
Tracking jump timeout	0 x 36	Did timeout at tracking jump			
<b>STEPPING ERROR (0 x 4*)</b>					
Stepping on error	0 x 41	Stepping on could not be completed		1. Pickup 2. Driver 3. Front End IC	E
Stepping off error	0 x 42	Stepping off could not be completed			
Stepping lost error	0 x 43	Stepping servo is lost			
Stepping move error	0 x 44	Stepping could not move	Do move to inner and outer periphery of the stepping in the test mode? Do indicate "S-04" at the most inner periphery of the stepping?	1. Stepping motor 2. Inside switch 3. Driver	
<b>STEPPING TIMEOUT (0 x 5*)</b>					
Stepping on timeout	0 x 51	Did timeout at stepping on		1. Pickup 2. Driver 3. Front End IC	
Stepping off timeout	0 x 52	Did timeout at stepping off			
Stepping lost timeout	0 x 53	Did timeout at stepping backup			
Stepping move timeout	0 x 54	Did timeout at stepping movement	Do move to inner and outer periphery of the stepping in the test mode? Do indicate "S-04" at the most inner periphery of the stepping?	1. Stepping motor 2. Inside switch 3. Driver	

	Error Name	No.	Causes	Check Item	Possibility of Trouble	Remarks
<b>SPINDLE ERROR (0 x 6*)</b>						
	Spindle on error	0 x 61	Spindle on could not be completed			
	Spindle off error	0 x 62	Spindle off could not be completed			
	Spindle lost error	0 x 63	Spindle lost control			
	Spindle CAV error	0 x 64	CAV on could not be completed			
	Spindle CLV error	0 x 65	CLV on could not be completed			
<b>SPINDLE TIMEOUT (0 x 7*)</b>						
	Spindle on timeout	0 x 71	Did timeout at spindle on			
	Spindle off timeout	0 x 72	Did timeout at spindle stop			
B	Spindle lost timeout	0 x 73	Did timeout at spindle backup	Are not there a dirt or a scratch in the Disc? Is FG output from the driver?	1. Spindle motor 2. Spindle driver	
	Spindle CAV timeout	0 x 74	Did timeout at CAV on	Is spindle rotating? Is FG output from the driver? Is the PDM output from L6315?	1. Spindle motor 2. Spindle driver 3. Front End IC	
	Spindle CLV timeout	0 x 75	Did timeout at CLV on			
<b>ACQUISITION ERROR (0 x 8*)</b>						
	PLL lost error	0 x 83	PLL is lost	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>ACQUISITION TIMEOUT (0 x 9*)</b>						
	PLL lost timeout	0 x 93	Did timeout at PLL backup	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>DECODER ERROR (0 x a*)</b>						
C	ID lost error	0 x a3	ID is not readable	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>DECODER TIMEOUT (0 x b*)</b>						
	ID lost timeout	0xb3	Did timeout at ID backup	Are not there a dirt or a scratch in the Disc?	1. Pickup 2. Front End IC	
<b>DEVICE ERROR (0 x d*)</b>						
	SRAM error	0 x d1	Cannot access SRAM	Power supply of SRAM Is not bus line short-circuiting?	1. SRAM 2. Front End IC 3. Front End-SRAM bus line	
<b>FAILSAFE (0 x e*)</b>						
	Unexpected error	0 x e1	Unexpected error		1. software runaway 2. Software bug	

A

C

D

E

F

## 7.1.7 ID NUMBER AND ID DATA SETTING

### Caution:

For the DVD players compatible with DVD-RW, for playback of a DVD-RW disc (CPRM), it is necessary that an individual ID number and ID data are set for each player. If the ID number and ID data be not properly set in the manner described below, future operations cannot be guaranteed. The ID number is written on the yellow label at the rear panel of the player.  
**If there is no yellow label, before downloading FLASH ROM, take note of the ID number set following the procedures outlined in "ID Number Confirmation Mode" on the next page.**


**Note:** Enter ID numbers while the unit is in Stop mode so that the values set will be immediately written to the flash ROM.  
The following operations are all made with the TEST MODE remote control unit (GGF1067).

### ID Number Input Mode

- ① To enter ID Number Input Mode, with no ID number set, such as in a case of immediately after upgrading the firmware, press the ESC key then the STEREO key.

**Note:** If a previous ID number and ID data, such as a factory-preset ID number and ID data, are maintained, the unit enters ID Number Confirmation Mode when the above keys are pressed. However, if only an ID number is maintained, the unit enters ID Data Input Mode.


- ② Enter a 9-digit ID number. The ID number is also displayed on the FL display.  
③ By pressing the CLEAR key without having input a number, you can exit this mode. Each press of this key after a number has been input deletes one digit.

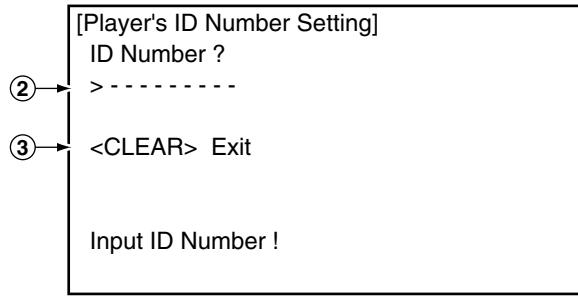

- ④ After entering all 9 digits, if you press the PLAY key, the unit enters Compare mode. Enter the same ID number again. Only if your two input numbers match, the ID number is set. Compare mode helps eliminate mistyping of the ID number.


**Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ② without doing anything else.

- ⑤ After entering all 9 digits, if you press the SEARCH key, the unit unconditionally sets the input number as the ID number. Then the unit automatically enters Player's Data Input Mode. (The SEARCH key is not accepted after all 9 digits have been entered.)

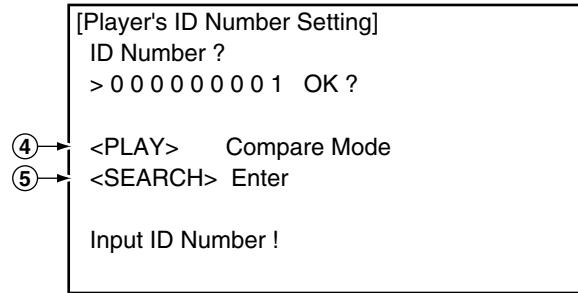


- ⑥ This display appears when the PLAY key is pressed in Step 4. Enter a 9-digit number to compare. The number is also displayed on the FL display.

- ⑦ By pressing the CLEAR key without having input a number, the unit returns to Step ② without doing anything else. Each press of this key after a number has been input deletes one digit.

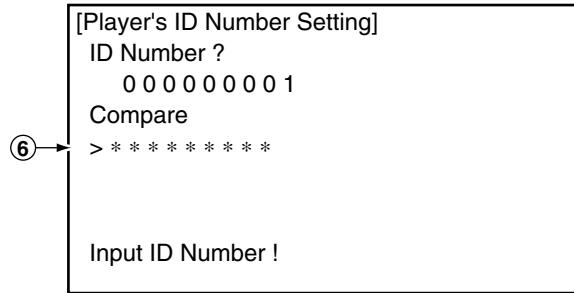


- ⑧ After entering all 9 digits, if you press the PLAY key, the unit compares the numbers input in Steps ② and ⑥, and only if the numbers match, that number is set as the ID. Then the unit automatically enters ID DATA Input Mode. If the numbers do not match, the disc tray is opened, and the unit exits ID Number Input Mode.

**Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ⑥ without doing anything else.

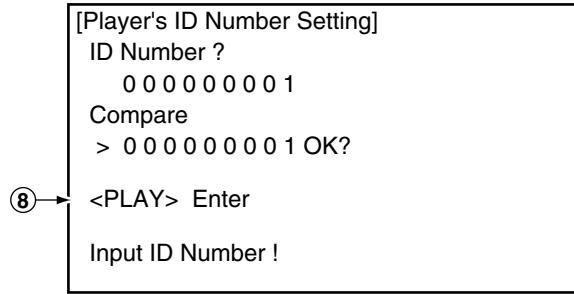

## A ■ ID Number Confirmation Mode

- ① To enter ID Number Confirmation Mode after the ID number and the ID data are set, press the ESC key then the STEREO key.
- ② The ID number already set is displayed.  
(It is also displayed on the FL display.)
- ③ Enter a 9-digit number for comparison. This is not required when you only wish to check the ID number visually.  
(The number is also displayed on the FL display.)
- ④ By pressing the CLEAR key without having input a number, you can exit this mode. Each press of this key after a number has been input deletes one digit.

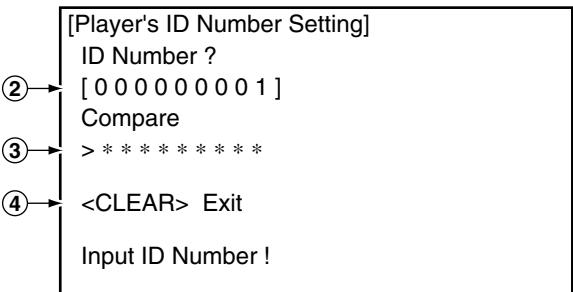

### • Indication of an ID number already set

An ID number already set is displayed in the following cases:

- 1) When the ESC key then the CLEAR key are pressed, user settings are cleared, then the ID number set is displayed on the screen. In this case, the ID number is not displayed on the FL display.
  - 2) When the unit enters ID Number Confirmation Mode by your pressing the ESC key then the CLEAR key, the ID number set is displayed. In this case, the ID number is also displayed on the FL display.
- If you only need to confirm the ID number, you can exit this mode by pressing the CLEAR key or turning off the power.

### • Indication when no ID number is set


If no ID number is set, the message "No ID Number!" flashes on the screen and FL display for a few seconds after the power is turned on or during Stop mode.



- C ⑤ After entering all 9 digits, if you press the PLAY key, the unit compares the number entered in Step ② with the ID number set, and only if the numbers match, the unit automatically exits ID Number Confirmation Mode. If an ID data has not been entered, the unit enters ID DATA Input Mode. If the numbers do not match, the disc tray is opened, and the unit exits ID Number Confirmation Mode.


**Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ④ without doing anything else.

- D ⑥ After entering all 9 digits, if you press the STOP key, the unit compares the number entered in Step ③ with the ID number set, and only if the numbers match, the unit automatically deletes the ID number and exits this mode. If the numbers do not match, the disc tray is opened, and the unit exits this mode.  
(The STOP key is not accepted after all 9 digits have been entered.)

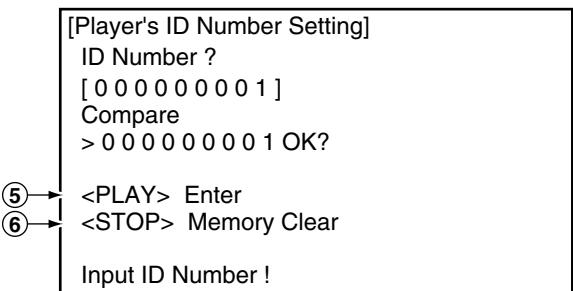

## ■ ID DATA Input Mode


- ① To enter ID DATA Input Mode, with the ID number set, press the ESC key then the STEREO key.
- ② When the STEREO key is pressed, the unit enters ID DATA Input Mode.

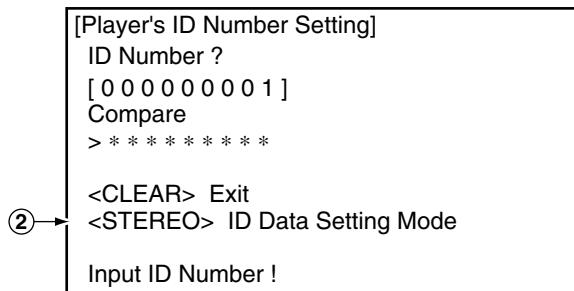

②


- ⑤ When writing of the data read from the disc to flash ROM is completed, "Rom Write OK!" is displayed. After seeing this message, you can exit this mode by pressing the CLEAR key.

**Note:** Whether or not the data have been written to flash ROM can be confirmed by watching for the message "Rom Write OK!" being displayed after the disc is read.

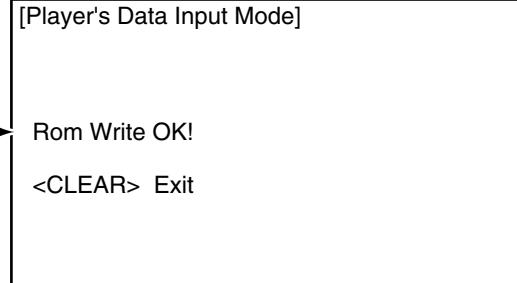


⑤

- ③ If the ID DISC (GGV1085) is loaded in this mode, the unit automatically starts reading the data.  
(If the ID DISC has already been loaded, the unit does not start reading the data. In this case, open then close the tray.)
- ④ To exit this mode, press the CLEAR key. While data are being read from the ID DISC (GGV1085), you cannot exit this mode.

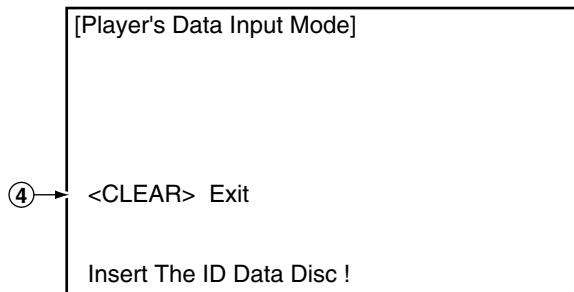

④

- ⑥ If the data cannot be read from the disc, "Disc Error!" is displayed on the screen, and the disc is ejected.

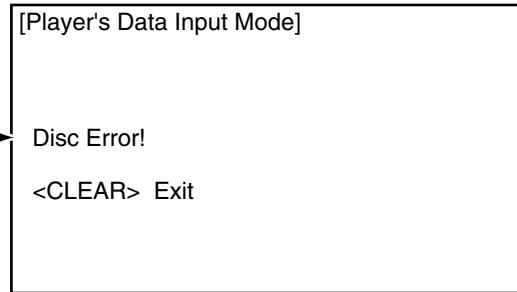

⑥



### • Indication when the data have not been set

If no ID data are set after the ID number is changed, the message "NO ID DATA" flashes on the screen and FL display for a few seconds after the power is turned on or during Stop mode.

## 7.1.8 SEQUENCE AFTER POWER ON

### ■ Flow chart from power on to the picture output

A

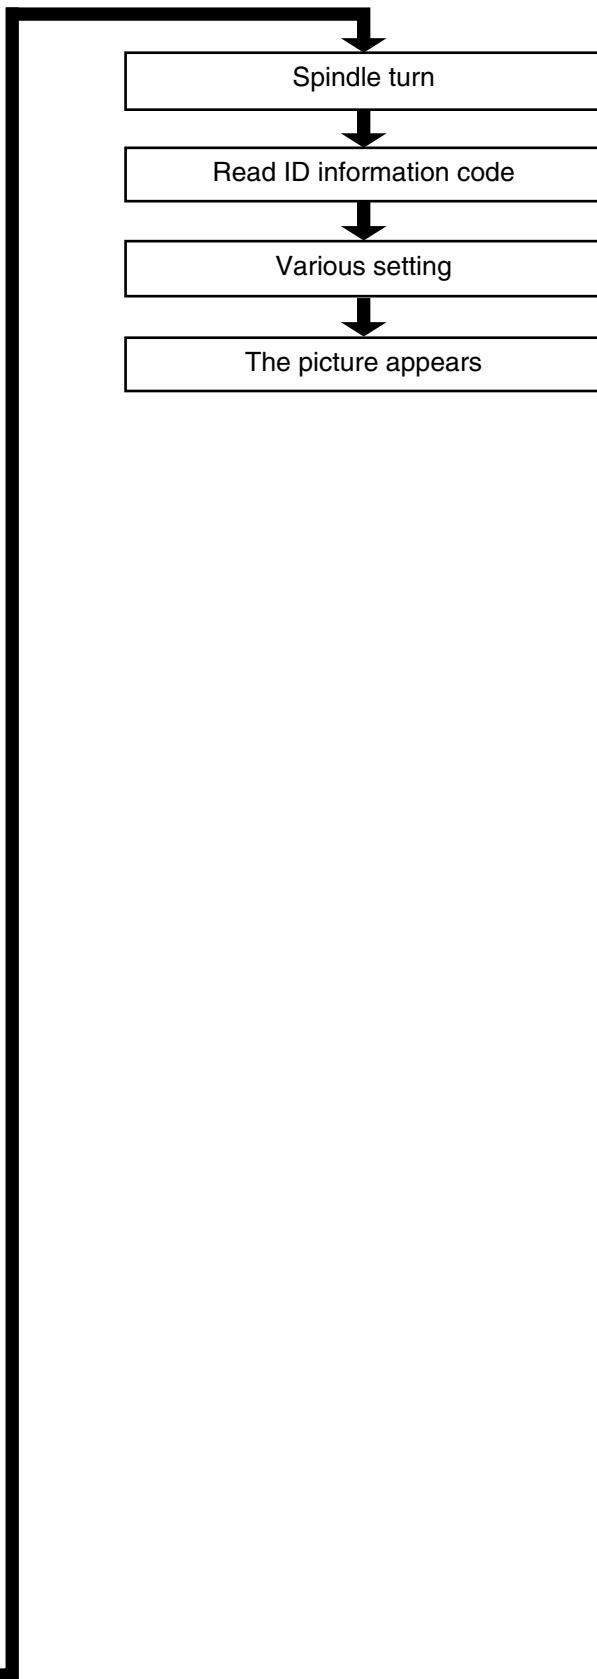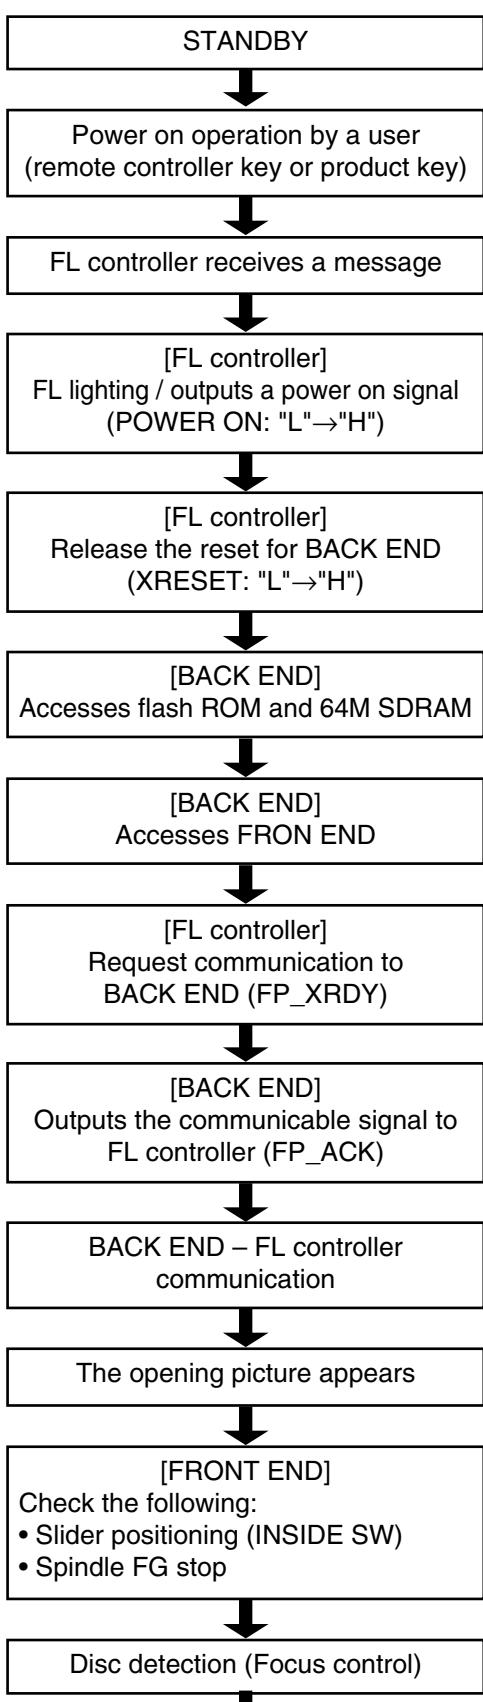


## 7.1.9 DISASSEMBLY

**Note:** Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

### Diagnosis of the DVDM Assy



#### 1 Bonnet and Tray Panel

- ① Remove the Bonnet by removing the five screws.
- ② Press the  STANDBY/ON button to turn on the power.
- ③ Press the  button to open the Tray.
- ④ Remove the Tray Panel.
- ⑤ Press the  button to close the Tray.
- ⑥ Press the  STANDBY/ON button to turn off the power.

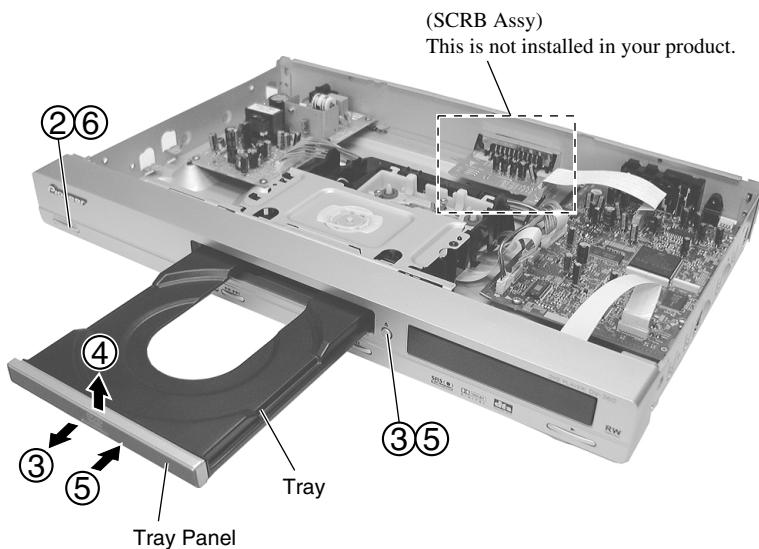


#### How to open the Tray when the power cannot be on

Insert a screwdriver (small) into the slit located at the bottom of the unit, and slide the projection of the Drive Gear in the Loading Mecha. Assy in the direction of the arrow, as indicated in the photo. If the Tray pops out a little, fully pull it out by hand.

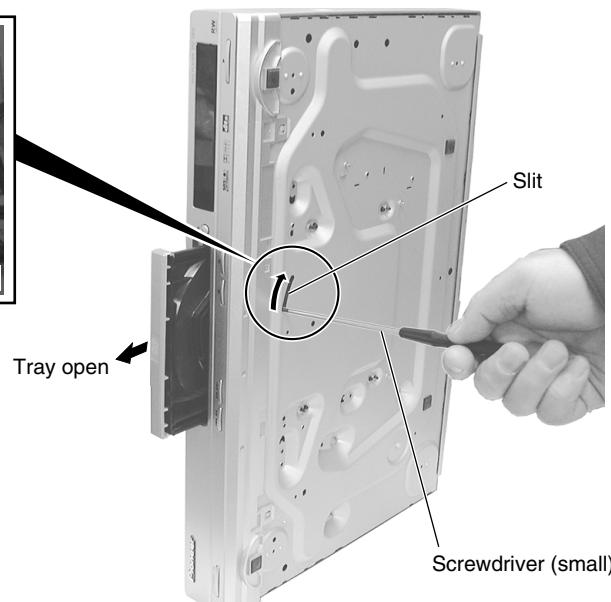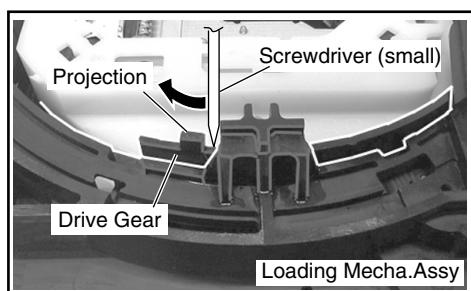



## 2 Front Panel Section

- A  
 ① Remove the six hooks.  
 ② Remove the front panel section.

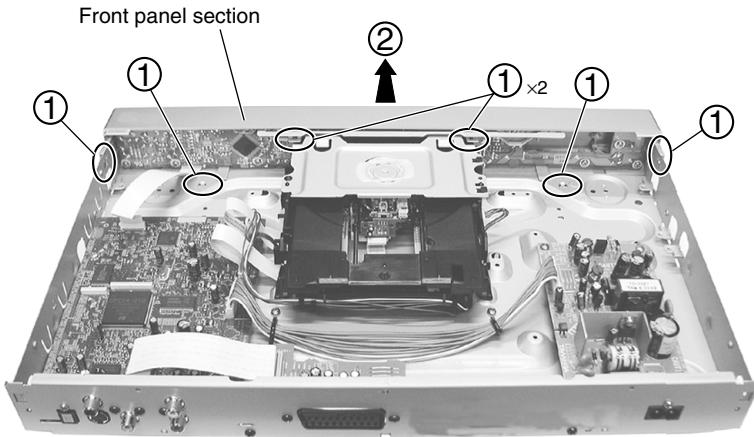


## 3 DVDM Assy

- B  
 ① Remove the four screws.  
 ② Remove the three screws.

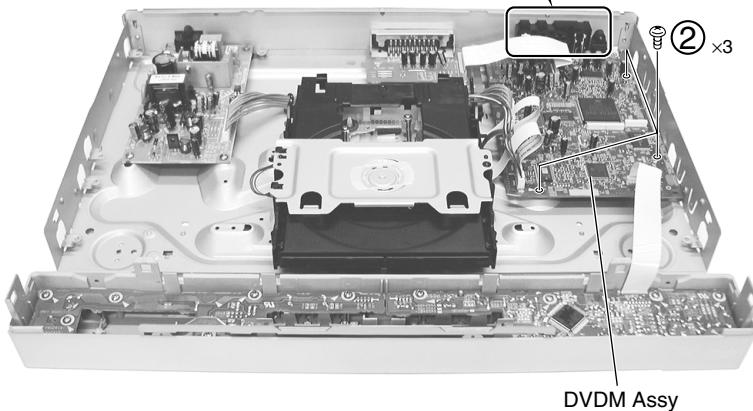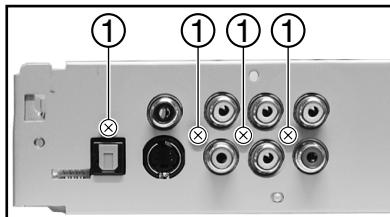


- D  
 ③ Remove the DVDM Assy and stand it against the other parts.

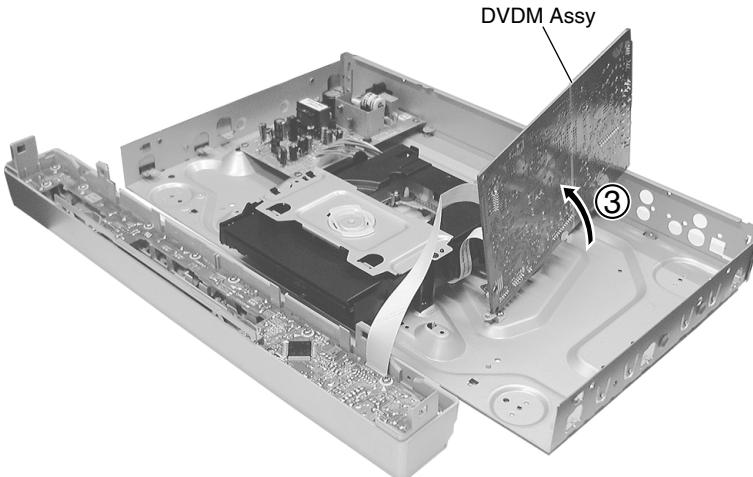

## Removing the Traverse Mecha. Assy-S and Pickup Assy-S


### 1 Loading Mecha. Assy

- ① Remove the bridge by removing the one screw.
  - ② Pull out the tray, then remove it by pressing the hook.
  - ③ Short-circuit two points of C and D by soldering.
- Note:** After replacement, connect the flexible cable, then remove the soldered joint (open).
- ④ Remove the four connectors from the Loading Mecha. Assy.
  - ⑤ Remove the four screws that secure the Loading Mecha. Assy to the unit.

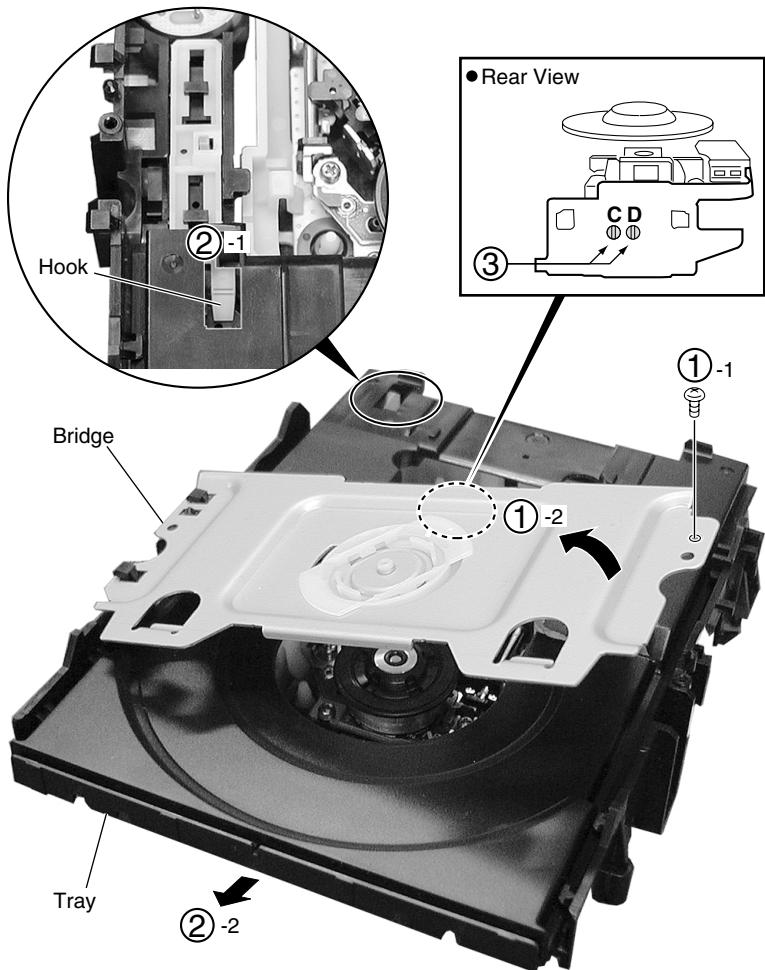


### Note when reinserting the Tray

When reinserting the Tray, first align the triangle printed on the Loading Base and the pin of the Drive Cam, then insert the Tray.

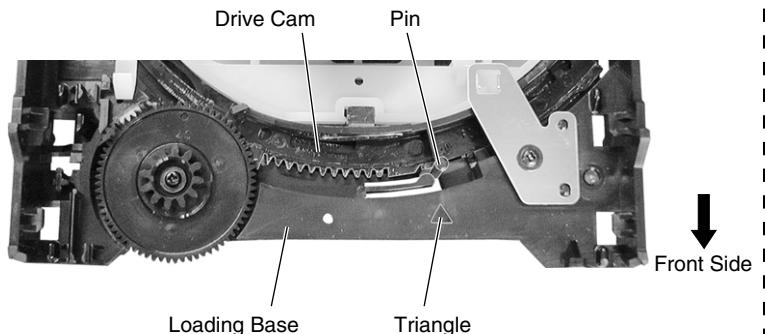


## 2 Traverse Mecha. Assy-S

- A ① Dislodge the flexible cables from their factory placement.

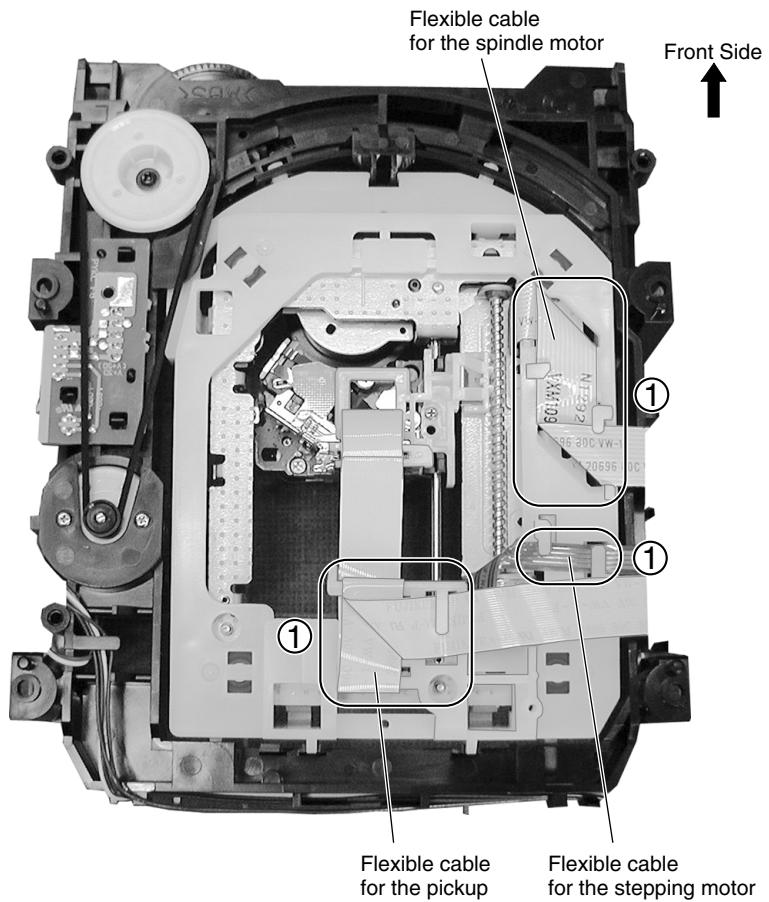

- D ② Remove the four hooks.


- E ③ Remove the Traverse Mecha. Assy-S.

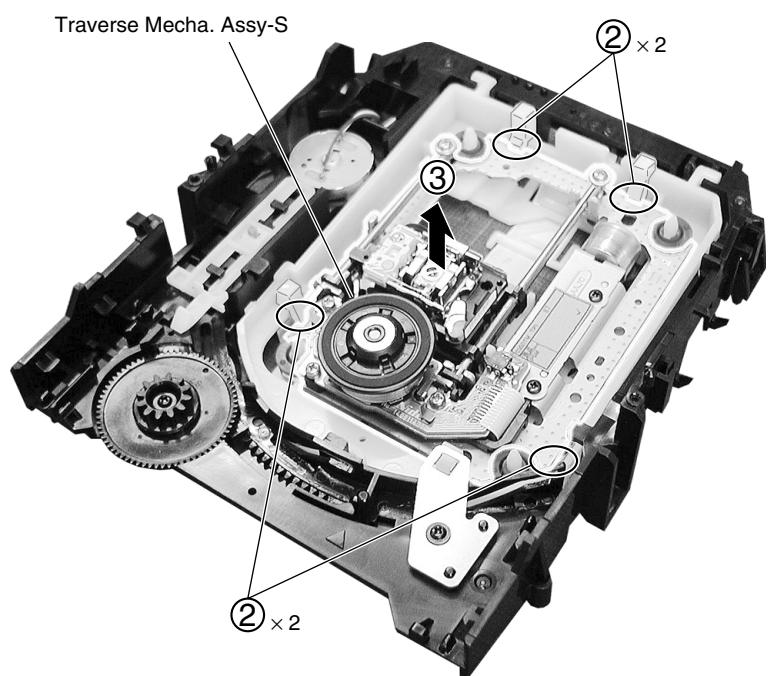


### 3 Pickup Assy-S

**Note:** The Pickup Assy-S can be removed without removing the Traverse Mecha. Assy-S. (shown as Step 2.)

- ① Dislodge the flexible cable for the pickup from its packaged placement.
- ② Remove the flexible cable for the pickup.

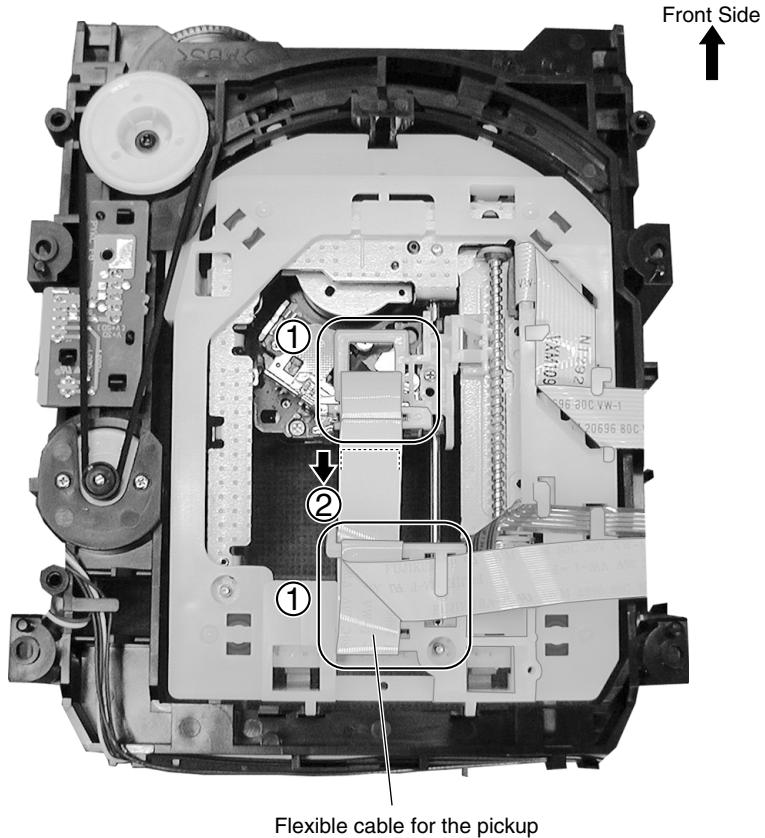


- ③ Remove the two adjustment screws and two adjustment springs.
- ④ Remove the Pickup Assy-S.

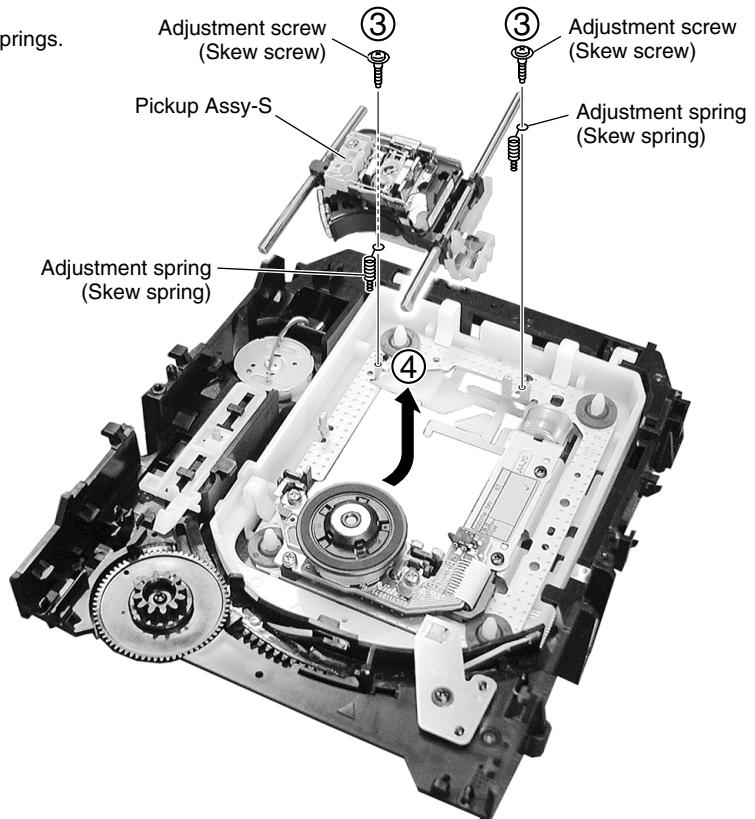

**⑤** Remove the two screws.

**Note:** The screws are secured with epoxy.  
Make sure to apply epoxy after reattaching the screws.

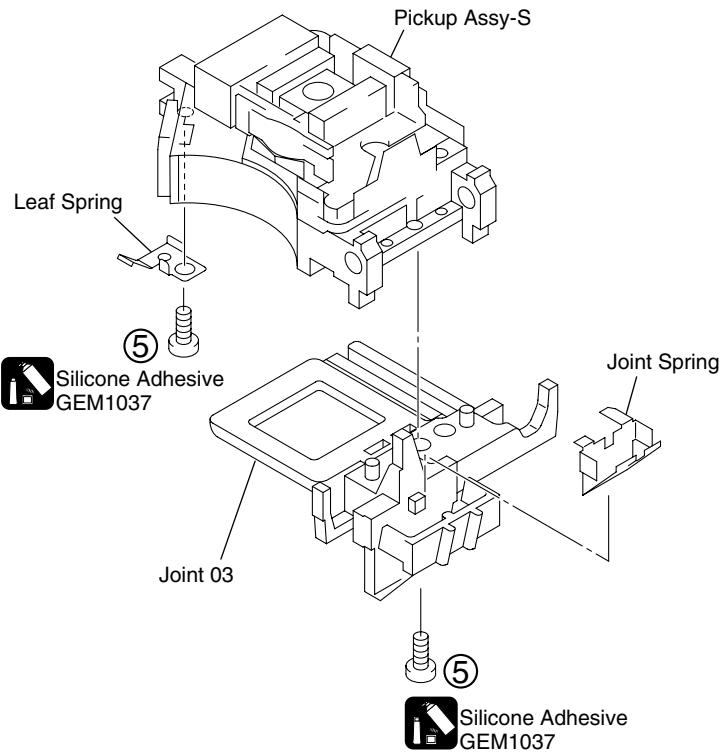

A

B

C


D

E

F

#### Arrangement of the flexible cable for the spindle motor


: Conductive surface

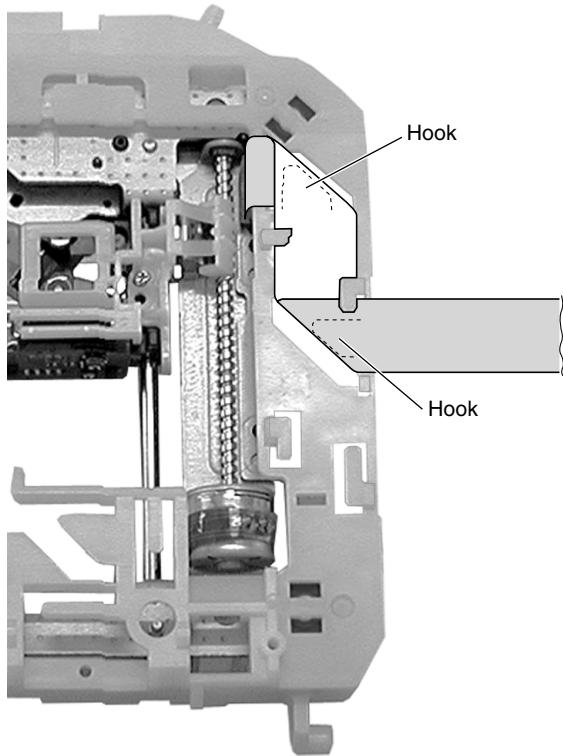

• Bottom View

#### Arrangement of the flexible cable for the stepping motor

: Conductive surface

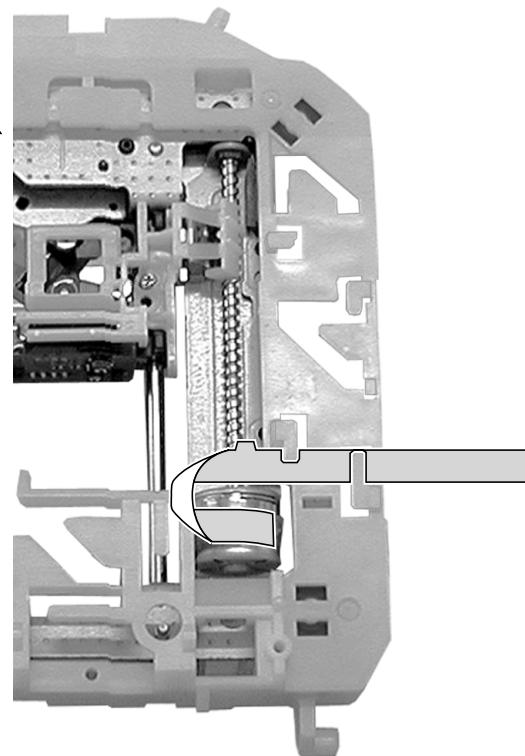

• Bottom View

## Arrangement of the flexible cable for the pickup

: Conductive surface


### Note:

Be sure to move the Pickup Assy-S to the innermost perimeter.

- Fold the flexible cable inward at the position of the reference line.


- Attach the flexible cable of the pickup to the connector.

- Fold the flexible cable of the pickup with the backing inward.

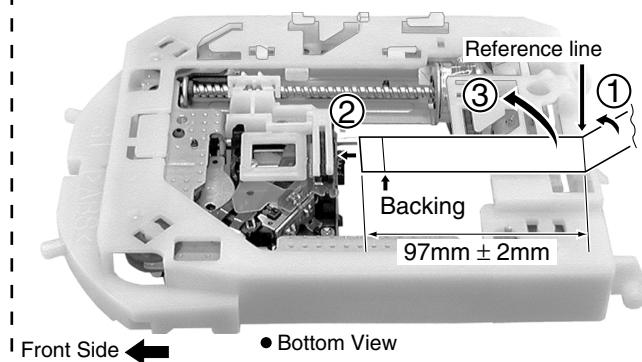


- Pass the flexible cable below the hook, and fold it back.


Make sure that the cable does not have any slack

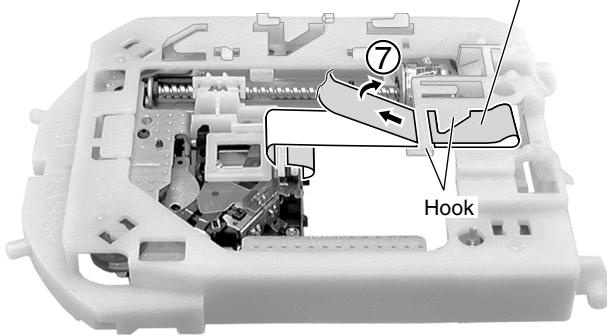

- Pass the flexible cable through the hook not allowing any slack.

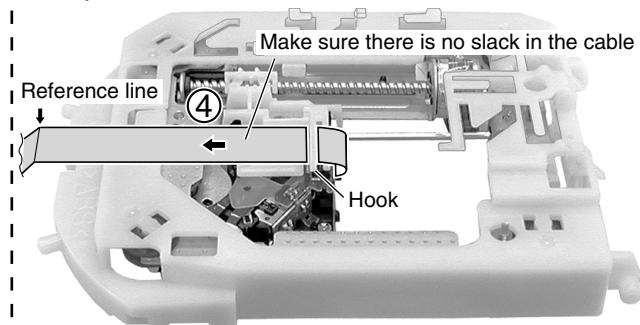


- Fold the flexible cable back at the hook.

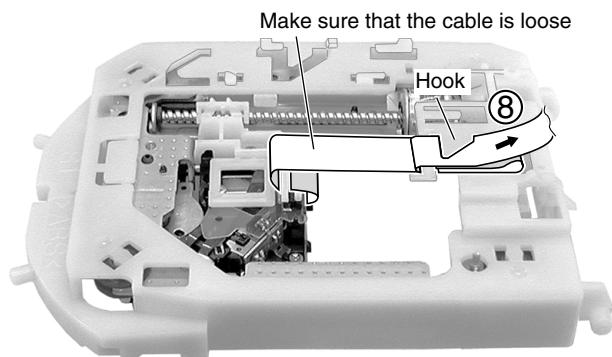


- Fold the flexible cable as indicated in the photo.

- Hook the part folded in Step ① to the hook.

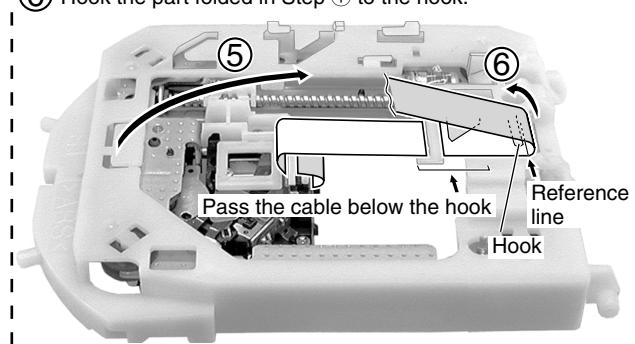

- Fold the flexible cable along the hook.

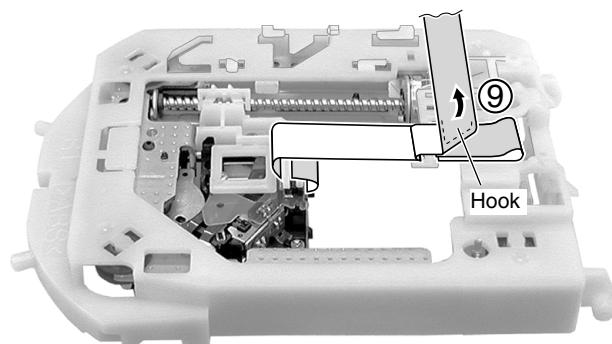

## 7.2 IC

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.


- List of IC**

STM6316ATXXA, STM5589CVA, M63108FP, PE5374A

### ■ STM6316ATXXA (DVDM ASSY : IC301)

- FRONT END IC

- Block Diagram

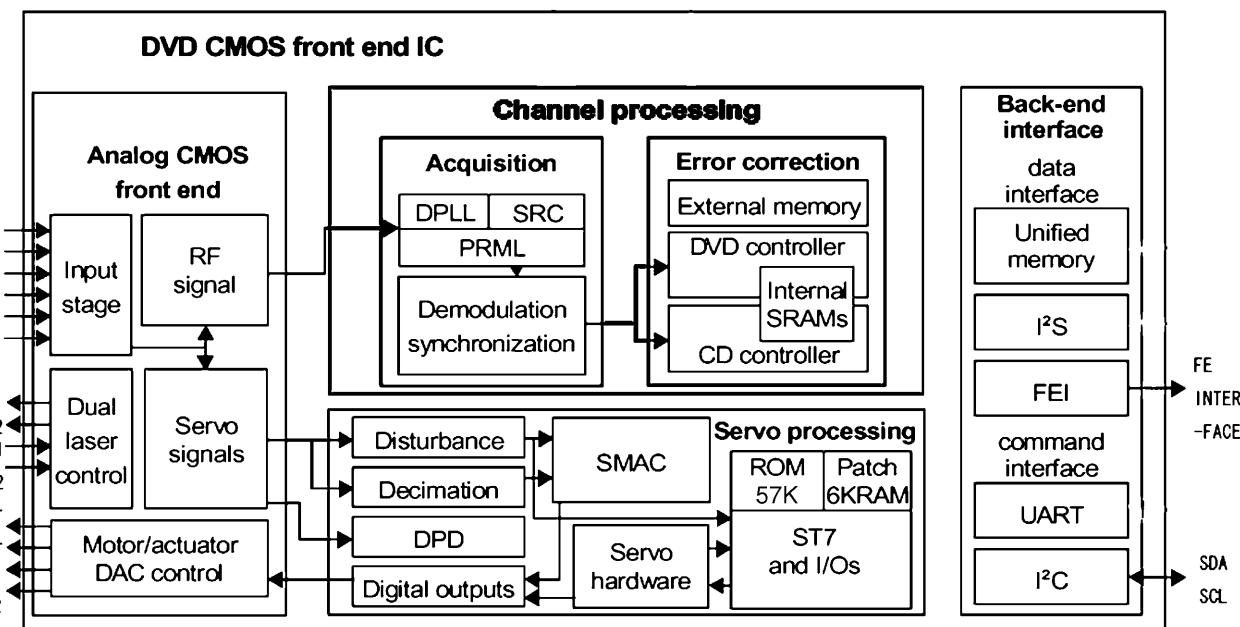

## ● Pin Function

No.	PIN name	description	detail
1	IREF	12.7kF	Analog block reference part
2	GNDAI	GNDA	analog gnd
3	RFIN	capacitor	RF signal C association input to a demodulation block
4	RFOUT	capacitor	B1+B2+B3+B4 mixture listing from an analog block
5	VCCA18	1V8A	analog 1V8
6	A	B1	PU - B1 input
7	GNDMN	GNDA	analog gnd
8	B	B2	PU - B2 input
9	VCC33MN	3V3A	analog 3V3
10	REFD	to pick up	2V1 output for PU
11	VCC18MN	1V8A	analog 1V8
12	D	B4	PU - B4 input
13	VCCA18IS	1V8A	analog 1V8
14	C	B3	PU - B3 input
15	VCCA33IS	3V3A	analog 3V3
16	GNDAIS	GNDA	analog gnd
17	VCC33SD	3V3A	analog 3V3
18	VCC18SD	1V8A	analog 1V8
19	GNDSD	GNDA	analog gnd
20	F	C	PU-3 beam C input
21	E	A	PU-3 beam A input
22	VSHIELDIS	GNDA	analog gnd
23	VCC18ADC	1V8A	analog 1V8
24	GNDADC	GNDA	analog gnd
25	VSHIELDDAC	GNDA	analog gnd
26	VCC33DAC	3V3A	analog 3V3
27	GNDDAC	GNDA	analog gnd
28	SPINDLE	560ohm(st2)	DAC current listing for stepper drive
29	SLEDGE	560ohm(st1)	DAC current listing for stepper drive
30	REFEXT	20K1%	Reference for DAC
31	REFGND	refext	analog gnd
32	REFDAC	560ohm1%	DAC reference
33	FACT	560ohm1%	DAC current listing for focus
34	TACT	560ohm1%	DAC current listing for tracking
35	VCC18DAC	1V8A	analog 1V8
36	PC0	FG	FG pulse input
37	PC1	PS	Driver control signal
38	PC2	tray SW1(open)	SW input for tray OPEN position
39	PC3	SB	Driver control signal
40	PC4	SLD position	Inside SW input

A

No.	PIN name	description	detail	
41	VSS	GNDD	digital gnd	
42	VDD33	3V3D	digital 3V3	
43	PC5	780/X650	780nm/650nmLD change control signal	
44	PC6	spinde PDM	Control PDM listing for spindle drive	
45	PC7	opicgain	OEIC gain control signal	
46	PD7	03PU/X02PU	Pull-up settlement	
B	47	VSS	GNDD	digital gnd
48	VDD18	1V8D	digital 1V8	
49	PD6	(debug)	test	
50	PD5	(debug)	test	
51	PD4	(DSPclk)	test	
52	PD3	(DSPdata)	test	
53	PD2	(DSPstrb1)	test	
54	PD1	error monitor	Terminal for TRKG error monitor (30KHzLPF add need)	
C	55	PD0	tray PDM drive	Control PDM signal for tray drive
56	VSS	GNDD	digital gnd	
57	VDD33	3V3D	digital 3V3	
58	OUT_ERR	RS_ERROR	BE DATA I/F	
59	OUT_VALID	RS_ERR_EN	BE DATA I/F	
60	VSS	GNDD	digital gnd	
D	61	OUT_CLK	RS_BCLK	BE DATA I/F
62	VDD18	1V8D	digital 1V8	
63	OUT_DVALID	RS_DVALID	BE DATA I/F	
64	OUT_DATA	RS_DATA	BE DATA I/F	
65	OUT_SYNC	RS_ECCBST	BE DATA I/F	
66	PE5	SCL(DMA)	FE routine download input	
67	PE4	SDA(DMA)	FE routine download input	
68	PE3	SCL	BE command I/F	
69	PE2	SDA	BE command I/F	
E	70	PE1	tray SW2(close)	SW input for tray CLOSE position
71	PE0	DXXINT	FE status propagation signal	
72	VSS	GNDD	digital gnd	
73	VDD33	3V3D	digital 3V3	
74	PF1	10K-pullup	Built-in facility setting terminal	
75	PF0	10K-pulldown	Built-in facility setting terminal	
76	VSS	GNDD	digital gnd	
77	VDD18	1V8D	digital 1V8	
78	PG1	to EMULATOR	Built-in facility setting terminal	
79	PG0	to EMULATOR	Built-in facility setting terminal	
80	TEST	10K-pulldown	test	

A

No.	PIN name	description	detail
81	RESET_N	RESET	RESET input
82	VSSADC	GNDA	analog gnd
83	VDD18ADC	1V8A	analog 1V8
84	GNDPLL	GNDA	analog gnd
85	PLLOFF	GNDA	analog gnd
86	FREOUT	20MXtal	SYSTEMCLK oscillating circuit
87	FREIN	20MXtal	SYSTEMCLK oscillating circuit
88	VCC18PLL	1V8A	analog 1V8
89	LD1	650nmLD	650nmLD driving signal
90	LD2	780nmLD	780nmLD driving signal
91	VCCA33	3V3A	digital 3V3
92	TWSEL	CD_VR/GND	Monitor diodes VR junction terminal for CD
93	LMD1	LMD/LMD1	Monitor voltage junction terminal
94	LMD2	DVD_VR/LMD2	Monitor diodes VR junction terminal for DVD
95	GNDL	GNDA	analog gnd
96	TST_PM	nc	tset
97	TST_SLICE	nc	test
98	TST_ADC	nc	test
99	RFSACD	SACD_IC	RF signal output
100	VBGFILT	capacitor	Condenser junction terminal for inside reference stability

B

C

D

E

F

## ■ STM5589CVA (DVDM ASSY : IC601)

- BACK END IC

A

- Pin Function

No.	Pin Name	Dir.	Pin Function
1	FP_SO	OUT	Front Panel / DAC interface. Serial transfer data output.
2	A_DATA3	OUT	reserved
3	VCLK	OUT	reserved
4	VDD_3V3	-	3.3 V Power supply
5	VSS	-	Ground
6	B_DATA	OUT	reserved
7	B_BCLK	OUT	reserved
8	B_FLAG	OUT	reserved
9	TRYPOS	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Tray rotation pulse input. CAPTURE_IN0 can be used.
10	SQUEEZE	OUT	Output signal for S-Video output S1/S2 control. 'H' : squeeze output mode.
11	RTS	OUT	UART(RS-232C) Request To Send signal output.
12	LETTER	OUT	Output signal for S-Video output S1/S2 control & EURO(SCART) connector (FUNCTION SWITCHING) signal. 'H' : letter-box output mode.
13	CTS	IN	UART(RS-232C) Clear To Send signal input.
14	VDD_1V8	-	1.8 V Power supply
15	VSS	-	Ground
16	FE_DATA	IN	Front-End L6316 stream interface. Serial data input.
17	FE_BCLK	IN	Front-End L6316 stream interface. Serial clock input.
18	FE_DVALID	IN	Front-End L6316 stream interface. Data valid flag input.
19	FE_SYNC	IN	Front-End L6316 stream interface. Serial synchronize flag input.
20	FE_EVALID	IN	Front-End L6316 stream interface. Error valid flag for RS_split.
21	FE_ECCBST	IN	Front-End L6316 stream interface. ECC block start flag for RS_split.
22	I/XP	OUT	Output signal for a change of interlace/Progressive output for video driver. 'L' : progressive 'H' : interlace
23	VDD_RGB	-	RGB circuit 3.3 V Power supply
24	VSS_RGB	-	RGB circuit Ground
25	B_OUT	OUT	B / Cb
26	G_OUT	OUT	G / Y
27	R_OUT	OUT	R / Cr
28	VREF_RGB	IN	RGB DAC reference
29	IREF_RGB	IN	RGB DAC current reference
30	VDD_YCC	-	YC circuit 3.3 V Power supply
31	VSS_YCC	-	YC circuit Ground
32	Y_OUT	OUT	Y
33	C_OUT	OUT	C
34	CV_OUT	OUT	CV
35	VREF_YCC	IN	YCC DAC reference
36	IREF_YCC	IN	YCC DAC current reference
37	VDD_1V8	-	1.8 V Power supply
38	VSS	-	Ground

No.	Pin Name	Dir.	Pin Function
39	XDRVMMUTE	OUT	It is not connected except 5 Disc Changer.
			Only 5 Disc Changer. Output signal for motor driver muting. 'L' : muting
40	OPEN	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Input signal for tray position. 'H' : complete OPEN position.
41	CLOSE	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Input signal for tray position. 'H' : complete CLOSE position.
42	CLAMP	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Input signal for showing disc clamp position. 'H' : complete disc clamp position.
43	UNCLAMP	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Input signal for showing disc un-clamp position. 'H' : complete disc clamp position.
44	DISC_SNS	OUT	It is not connected except 5 Disc Changer.
		IN	Only 5 Disc Changer. Input signal for disc existing. 'L' : existing
45	XDRVMMUTE2	OUT	reserved
46	TP-x	OUT	reserved
47	VDD_3V3	-	3.3 V Power supply
48	VDD_PCM	-	1.8 V Power supply
49	VSS_PCM	-	Ground
50	VSS	-	Ground
51	A_BCK	OUT	Audio DAC clock
52	A_DATA0	OUT	Audio DAC Front L,R data
53	A_DATA1	OUT	reserved
54	A_DATA2	OUT	reserved
55	A_MCLK	OUT	Audio DAC Master clock
56	A_LRCK	OUT	Audio DAC L/R clock
57	A_DOUT	OUT	S/PDIF(IEC60958) digital audio output.
58	SMI_A4	OUT	SMI SDRAM Address
59	SMI_A5		
60	SMI_A6		
61	SMI_A7		
62	SMI_A8		
63	SMI_A9		
64	VDD_1V8	-	1.8 V Power supply
65	VSS	-	Ground
66	SMI_A3	OUT	SMI SDRAM Address
67	SMI_A2		
68	SMI_A1		
69	SMI_A0		
70	SMI_A10		
71	SMI_A11		
72	SMI_A12		
73	SMI_A13		

A

No.	Pin Name	Dir.	Pin Function
74	SMI_CS0	OUT	SMI SDRAM chip select 'L'.
75	SMI_CS1	OUT	reserved
76	SMI_RAS	OUT	SMI SDRAM RAS 'L'
77	SMI_CAS	OUT	SMI SDRAM CAS 'L'
78	SMI_WE	OUT	SMI SDRAM Write Enable 'L'
79	SMI_DQML	OUT	SMI SDRAM Lower DQM 'L': Lower select
80	SMI_DQMU	OUT	SMI SDRAM Upper DQM 'L': Upper select
81	VDD_3V3	-	3.3 V Power supply
82	SMI_CLKIN	IN	External SDRAM clock input.
83	VSS	-	Ground
84	SMI_D0	I/O	SMI SDRAM Data
85	SMI_D1		
86	SMI_D2		
87	SMI_D3		
88	SMI_D4		
89	SMI_D5		
90	SMI_D6		
91	SMI_D7		
92	SMI_D8		
93	SMI_D9		
94	VDD_1V8	-	1.8 V Power supply
95	SMI_CLKOUT	OUT	SDRAM clock output.
96	VSS	-	Ground
97	SMI_D10	I/O	SMI SDRAM Data
98	SMI_D11		
99	SMI_D12		
100	SMI_D13		
101	SMI_D14		
102	SMI_D15		
103	TRACK_CROSS	OUT	reserved
104	DSD_XPCM	OUT	reserved
105	DAC_XRST	OUT	reserved
106	ADC_PCMCLK	OUT	reserved
107	VDD_3V3	-	3.3 V Power supply
108	VSS	-	Ground
109	XTRST	IN	Diagnostic Control Unit interface
110	TMS	IN	Diagnostic Control Unit interface
111	TDO	OUT	Diagnostic Control Unit interface
112	TDI	IN	Diagnostic Control Unit interface
113	TCK	IN	Diagnostic Control Unit interface
114	ROTDRV	OUT	Only 5 disc changer. PWM output for tray rotation.
115	BOOT_FROM_ROM	IN	Boot select 'L' : Boot from DCU. 'H' : Boot form ROM.
116	LOAD_DRV	OUT	Only 5 disc changer. PWM output for tray Open/Close drive.
117	CPU_OE	OUT	OE signal for 16M bits FLASH memory for firmware. 'L': enable

F

No.	Pin Name	Dir.	Pin Function
118	CPU_SDCK	OUT	CLOCK for 64M bits SDRAM for debugging firmware.
119	VDD_1V8	-	1.8 V Power supply
120	PIXCLK	IN	Master 27MHz system clock input.
121	VSS	-	Ground
122	VDD_PLL	-	Clock PLL circuit 1.8 V Power supply
123	VSS_PLL	-	Clock PLL circuit Ground
124	XRESET	IN	Power ON system RESET signal. 'L': reset
125	SACD_IRQ	IN	reserved
126	FP_XRDY	IN	Front Panel interface. Hand-shake input.
127	FE_INT	IN	Interrupt input signal from Front-End L6316.
128	F_XWE, SD_DQML	OUT	Flash memory write enable. Debug SDRAM/SRAM Lower DQM. 'L': enable, Lower select.
129	SD_DQMU	OUT	Debug SDRAM/SRAM Upper DQM 'L':upper select
130	SD_RXW	OUT	Debug SDRAM Read/Write 'L':write, 'H':read
131	CPU_WAIT	IN	CPU wait 'H' input
132	CE_FLASH	OUT	Flash memory Chip Enable 'L'.
133	CPU_CE2	OUT	reserved
134	CPU_CE1	OUT	reserved
135	SD_XRAS	OUT	Debug SDRAM RAS 'L' Debug SRAM chip enable 'L'
136	VDD_3V3	-	3.3 V Power supply
137	VSS	-	Ground
138	CPU_RAS1	OUT	reserved
139	SD_XCAS	OUT	Debug SDRAM CAS 'L'
140	SD_XCS	OUT	Debug SDRAM Chip Select 'L'
141	CPU_D0	I/O	FLASH, Debug SDRAM/SRAM data
142	CPU_D1		
143	CPU_D2		
144	CPU_D3		
145	CPU_D4		
146	CPU_D5		
147	CPU_D6		
148	CPU_D7		
149	VDD_1V8	-	1.8 V Power supply
150	VSS	-	Ground
151	CPU_D8	I/O	FLASH, Debug SDRAM/SRAM data
152	CPU_D9		
153	CPU_D10		
154	CPU_D11		
155	CPU_D12		
156	CPU_D13		
157	CPU_D14		
158	CPU_D15		
159	VDD_3V3	-	3.3 V Power supply
160	VSS	-	Ground

A

No.	Pin Name	Dir.	Pin Function
161	CPU_A1	OUT	FLASH, Debug SDRAM/SRAM Address
162	CPU_A2		
163	CPU_A3		
164	CPU_A4		
165	CPU_A5		
166	CPU_A6		
167	CPU_A7		
168	CPU_A8		
169	CPU_A9		
170	CPU_A10		
171	VDD_1V8	-	1.8 V Power supply
172	VSS	-	Ground
173	CPU_A11	OUT	FLASH, Debug SDRAM/SRAM Address
174	CPU_A12		
175	CPU_A13		
176	CPU_A14		
177	CPU_A15		
178	CPU_A16		
179	CPU_A17		
180	CPU_A18		
181	CPU_A19		
182	CPU_A20		
183	CPU_A21		
184	VDD_3V3	-	3.3 V Power supply
185	VSS	-	Ground
186	XEXPE	OUT	reserved
187	FE_ERROR	IN	Front-End L6316 stream interface. ECC Error flag
188	VSEL1	OUT	EURO(SCART) connector (BLINKING) output signal 'L' : RGB output disable 'H' : RGB output enable
189	VSEL2	OUT	EURO(SCART) connector V/Y, R/C signal. 'L' : VRGB output = YCGB 'H' : VRGB output = VRGB
190	FE_RST	OUT	Front-End L6316. Hardware reset output. 'L' : reset
191	SACD_XRST	OUT	reserved
192	XMMUTE	OUT	reserved
193	B_SYNC	OUT	reserved
194	SDA	I/O	Front-End L6316 command interface I2C bus serial data line.
195	SCL	OUT	Front-End L6316 command interface I2C bus serial clock line.
196	B_WCLK	OUT	reserved
197	TXD	OUT	UART(RS-232C) data output
198	VDD_1V8		1.8 V Power supply
199	VSS	-	Ground
200	RXD	IN	UART(RS-232C) data input

F

A

No.	Pin Name	Dir.	Pin Function
201	XAMUTE	OUT	Output signal for analog audio output line muting. 'L' : muting
202	TRIGIN	IN	Diagnostic Control Unit interface
203	TRIGOUT	OUT	Diagnostic Control Unit interface
204	DAC_XCS0	OUT	Chip enable for audio DAC serial control. 'L' : enable
205	DAC_XCS1	OUT	reserved
206	FP_ACK	OUT	Front Panel / DAC interface. Hand-shake (acknowledge) output 'H'.
207	FP_SCK	OUT	Front Panel / DAC interface. Serial transfer clock output.
208	FP_SI	IN	Front Panel interface. Serial transfer data input.

B

C

D


E

F


## ■ M63018FP (DVDM ASSY : IC101)

- BTL Driver IC

- Pin Arrangement

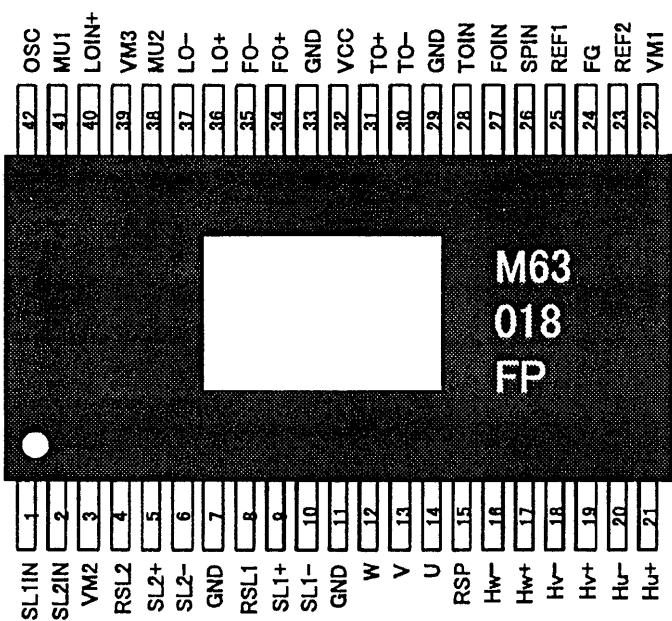

- Block Diagram

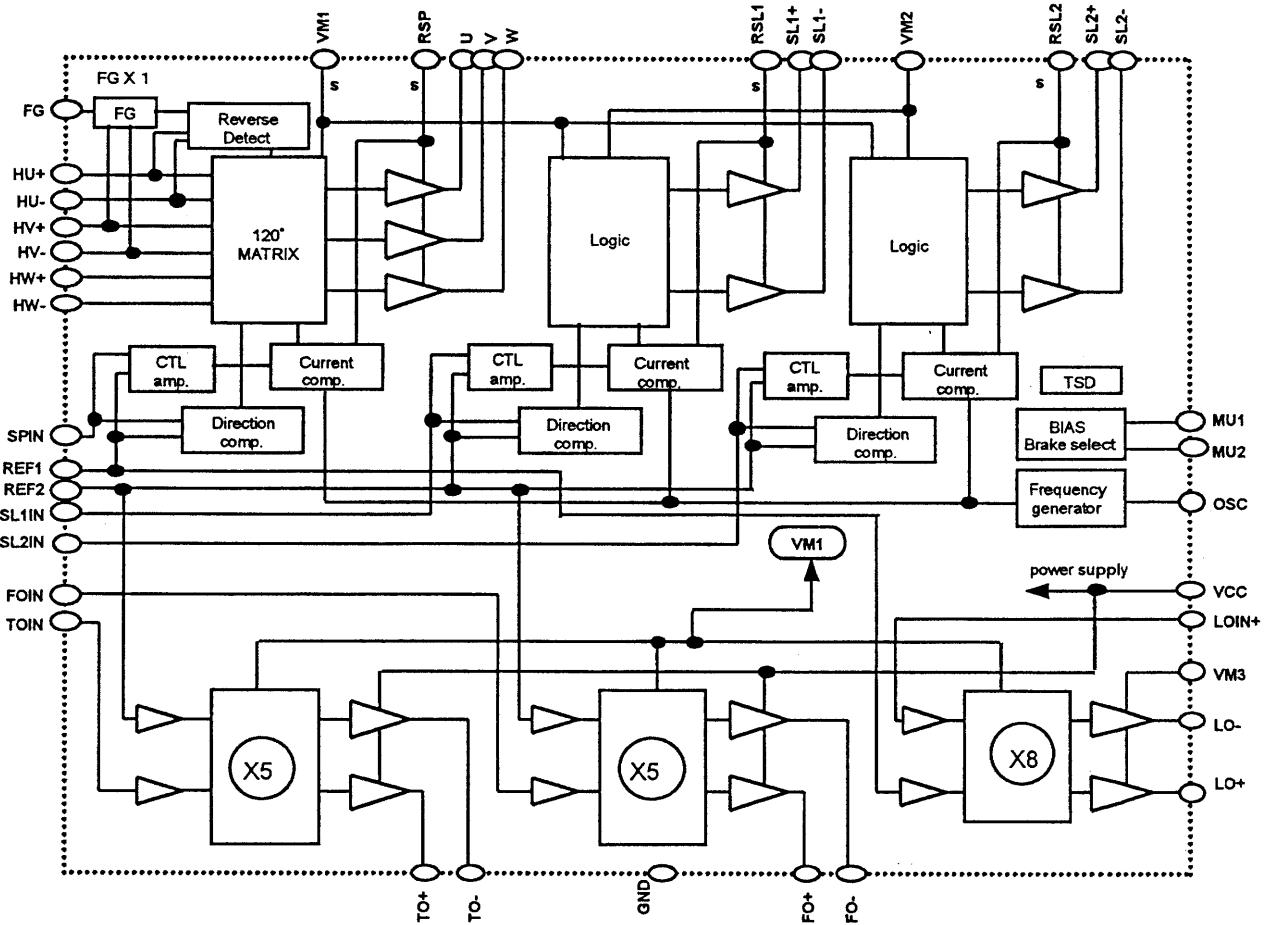

### ● Pin Function

TERMINAL	SYMBOL	TERMINAL FUNCTION	TERMINAL	SYMBOL	TERMINAL FUNCTION
1	SL1IN	Slide control voltage input 1	4 2	OSC	PWM carrier oscillation set
2	SL2IN	Slide control voltage input 2	4 1	MU1	mute / brake select terminal 1
3	VM2	Motor Power Supply 2 (for Slide)	4 0	LOIN+	Loading control input(+)
4	RSL2	Slide current sense 2	3 9	VM3	Power Supply3 (for Loading)
5	SL2+	Slide non-inverted output 2	3 8	MU2	mute / brake select terminal 2
6	SL2-	Slide inverted output 2	3 7	LO-	Loading inverted output
7	GND	GND	3 6	LO+	Loading non-inverted output
8	RSL1	Slide current sense 1	3 5	FO-	Focus inverted output
9	SL1+	Slide non-inverted output 1	3 4	FO+	Focus non-inverted output
10	SL1-	Slide inverted output 1	3 3	GND	GND
11	GND	GND	3 2	VCC	Power Supply (for FS ,TS)
12	W	Motor drive output W	3 1	TO+	Tracking non-inverted output
13	V	Motor drive output V	3 0	TO-	Tracking inverted output
14	U	Motor drive output U	2 9	GND	GND
15	RSP	Spindle current sense	2 8	TOIN	Tracking control voltage input
16	HW-	HW- sensor amp. input	2 7	FOIN	Focus control voltage input
17	HW+	HW+ sensor amp. input	2 6	SPIN	Spindle control voltage input
18	HV-	HV- sensor amp. input	2 5	REF1	Reference voltage input 1 (for Spindle,Loading)
19	HV+	HV+ sensor amp. input	2 4	FG	Frequency generator output
20	HU-	HU- sensor amp. input	2 3	REF2	Reference voltage input 2 (for Slide-Focus Tracking)
21	HU+	HU+ sensor amp. input	2 2	VM1	Motor Power Supply 1 (for Spindle)

## ■ PE5374A (FLKY ASSY : IC101)

- FL Control IC

A ● Pin Function

No.	Pin Name	I/O	Function
1	VDD1	—	Positive Power Supply (3.3 V)
2	VSS1	—	Ground Potential
3	X1	IN	
4	X2	—	Crystal Connection for Main System Clock Oscillation
5	IC	—	Internally Connected (Directly connect to VSS1)
6	RESET	IN	Reset Input
7	SCK1	IN	Serial Clock Input of Serial Interface
8	SI1	IN	Serial Data Input of Serial Interface
9	SO1	OUT	Serial Data Output of Serial Interface
10	XRDY	OUT	Hand-shake (Ready) Output of Serial Interface
11	POWER ON	OUT	Power Control Output
12	RESET OUT	OUT	System Reset Output
13	RESERVE OUT	OUT	Reserved (NC on this model)
14	NC	OUT	NC
15	HALT	IN	Halt Port "NC" : Use Halt Mode
16	ACK	IN	Hand-shake (Acknowledge) Input of Serial Interface
17	SEL IR	IN	Remote Control Input (Timer input of 8-bit remote control timer)
18	AVSS	—	Ground Potential for A/D Converter
19	KEY3	IN	8 digit model(DV-260,263) : Key3 Input (Analog input for A/D converter)
20	KEY2	IN	Key Input 2 (Analog input for A/D converter)
21	KEY1	IN	Key Input 1 (Analog input for A/D converter)
22	KEY0	IN	Key Input 0 (Analog input for A/D converter)
23	VSS0	—	Ground Potential to Ports
24	AVDD	—	Analog Power/Reference Voltage Input to A/D Converter (3.3 V)
25	VDD0	—	Positive Power Supply to Ports (3.3 V)
26	MS0_2	IN	Model (of player) Select (Set with a combination of this 3 ports)
27	MS0_1	IN	
28	MS0_0	IN	
29	MS1_2	IN	Destination (of player) Select (Set with a combination of this 3 ports)
30	MS1_1	IN	
31	MS1_0	IN	
32	TES	IN	H" : No System Reset mode , "L" : General m
33	OEM	IN	H" : OEM Model , "L" : Pioneer Mo
34	MIC IN	IN	Detection of Microphone "H" : Microphone connected
35	CHECKER	IN	H" : Checker Mode "L" : General m
36	ON POWER	IN	H" : Primary Power Switch Model , "L" : Secondary Power Switch Mo
37	FL SET2	IN	FL-Controller Mode Select FL SET1 / 2 = "L" / "L" : 8 digit model
38	FL SET1	IN	
39	TEST2	OUT	(Test Port)
40	STAND BY LED	OUT	Stand By LED Port

No.	Pin Name	I/O	Function
41	LED5	OUT	LED Port 5
42	LED4	OUT	LED Port 4
43	LED3	OUT	LED Port 3
44	LED2	OUT	LED Port 2
45	LED1	OUT	LED Port 1
46	LEDO	OUT	LED Port 0
47	TEST1	OUT	(Test Port)
48	TEST0	OUT	(Test Port)
49	NC	OUT	NC
50	NC	OUT	NC
51	P16	OUT	FIP Segment 17 Output
52	P15	OUT	FIP Segment 16 Output
53	NC	OUT	FIP Segment 15 Output
54	P14	OUT	FIP Segment 14 Output
55	P13	OUT	FIP Segment 13 Output
56	P12	OUT	FIP Segment 12 Output
57	P11	OUT	FIP Segment 11 Output
58	P10	OUT	FIP Segment 10 Output
59	VDD2	-	Positive Power Supply to FIP Controller/Driver (3.3 V)
60	VLOAD	-	Pull-down Resistor Connection of FIP Controller/Driver (-28V)
61	P9	OUT	FIP Segment 9 Output
62	P8	OUT	FIP Segment 8 Output
63	P7	OUT	FIP Segment 7 Output
64	P6	OUT	FIP Segment 6 Output
65	P5	OUT	FIP Segment 5 Output
66	P4	OUT	FIP Segment 4 Output
67	P3	OUT	FIP Segment 3 Output
68	P2	OUT	FIP Segment 2 Output
69	P1	OUT	FIP Segment 1 Output
70	NC	OUT	FIP Grid 11 Output
71	NC	OUT	FIP Grid 10 Output
72	NC	OUT	FIP Grid 9 Output
73	G8	OUT	FIP Grid 8 Output
74	G7	OUT	FIP Grid 7 Output
75	G6	OUT	FIP Grid 6 Output
76	G5	OUT	FIP Grid 5 Output
77	G4	OUT	FIP Grid 4 Output
78	G3	OUT	FIP Grid 3 Output
79	G2	OUT	FIP Grid 2 Output
80	G1	OUT	FIP Grid 1 Output

## 7.3 DISC / CONTENT FORMAT PLAYBACK COMPATIBILITY

### A Disc / content format playback compatibility

#### B General disc compatibility

This player was designed and engineered to be compatible with software bearing one or more of the following logos:



DVD-Video



DVD-R



DVD-RW



Audio CD



Video CD



CD-R



CD-RW



Fujicolor CD

- Kodak Picture CD
- is a trademark of Fuji Photo Film Co. Ltd.

D Other formats, including but not limited to the following, are not playable in this player:

#### E DVD-Audio / SACD / DVD-RAM

#### F DVD-ROM / CD-ROM\*

\* Except those that contain MP3, WMA or JPEG. See also Compressed audio compatibility and JPEG file compatibility below.

DVD-R/RW and CD-R/RW discs (Audio CDs and Video CDs) recorded using a DVD recorder, CD recorder or personal computer may not be playable on this unit. This may be caused by a number of possibilities, including but not limited to: the type of disc used; the type of recording; damage, dirt or condensation on either the disc or the player's pick-up lens. See below for notes about particular software and formats.

### G CD-R/RW compatibility

- This unit will play CD-R and CD-RW discs recorded in CD Audio or Video CD format, or as a CD-ROM containing MP3, WMA or JPEG files. However, any other content may cause the disc not to play, or create noise/distortion in the output.
- This unit cannot record CD-R or CD-RW discs.
- Unfinalized CD-R/RW discs recorded as CD Audio can be played, but the full Table of Contents (playing time, etc.) will not be displayed.

### H DVD-R/RW compatibility

- This unit will play DVD-R/RW discs recorded using the DVD-Video format that have been finalized using a DVD-recorder.
- This unit will play DVD-RW discs recorded using the Video Recording (VR) format.
- **DVD-RW** shows in the display when a VR format DVD-RW disc is loading.
- When playing a VR format DVD-RW discs that was edited on a DVD recorder, the screen may go momentarily black at edited points and/or you may see scenes from immediately before the edited point.
- This unit cannot record DVD-R/RW discs.
- Unfinalized DVD-R/RW discs cannot be played in this player.

### I PC-created disc compatibility

- If you record a disc using a personal computer, even if it is recorded in a "compatible format" as listed above, there will be cases in which the disc may not be playable in this machine due to the setting of the application software used to create the disc. In these particular instances, check with the software publisher for more detailed information.
- Check the DVD-R/RW or CD-R/RW software disc boxes for additional compatibility information.

## 7.4 CLEANING



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

A

B

C


D

E

F

## 8. PANEL FACILITIES

### Front panel

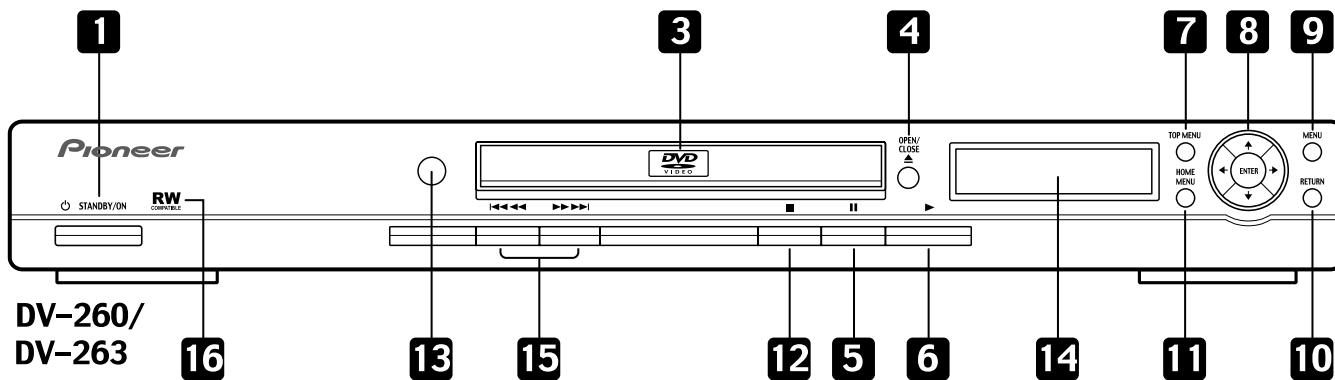

#### 1 Ⓛ STANDBY/ON

Press to switch the player on or into standby.

#### 3 Disc tray

#### 4 ▲ OPEN/CLOSE

Press to open or close the disc tray.

#### 5 II

Press to pause playback. Press again to restart.

#### 6 ▶

Press to start or resume playback.

#### 7 TOP MENU

Press to display the top menu of a DVD disc.

#### 8 ENTER & cursor buttons

Use to navigate on-screen displays and menus. Press **ENTER** to select an option or execute a command.

#### 9 MENU

Press to display a DVD disc menu, or the Disc Navigator if a VR format DVD-RW, CD, Video CD, MP3, WMA or JPEG disc is loaded.

#### 10 RETURN

Press to return to a previous menu screen.

#### 11 HOME MENU

Press to display (or exit) the on-screen display.

#### 12 ■

Press to stop the disc (you can resume playback by pressing ▶ (play)).

#### 13 Remote control sensor

The remote control has a range of up to about 7m (23ft).

#### 14 Display


#### 15 ▲◀◀ and ▶▶▶

- Press and hold for fast reverse/forward scanning.
- Press to jump to the previous/next chapter or track.

#### 16 Ⓛ RW COMPATIBLE

This mark indicates compatibility with DVD-RW discs recorded on a DVD recorder in Video Recording mode.

## Rear panel connections

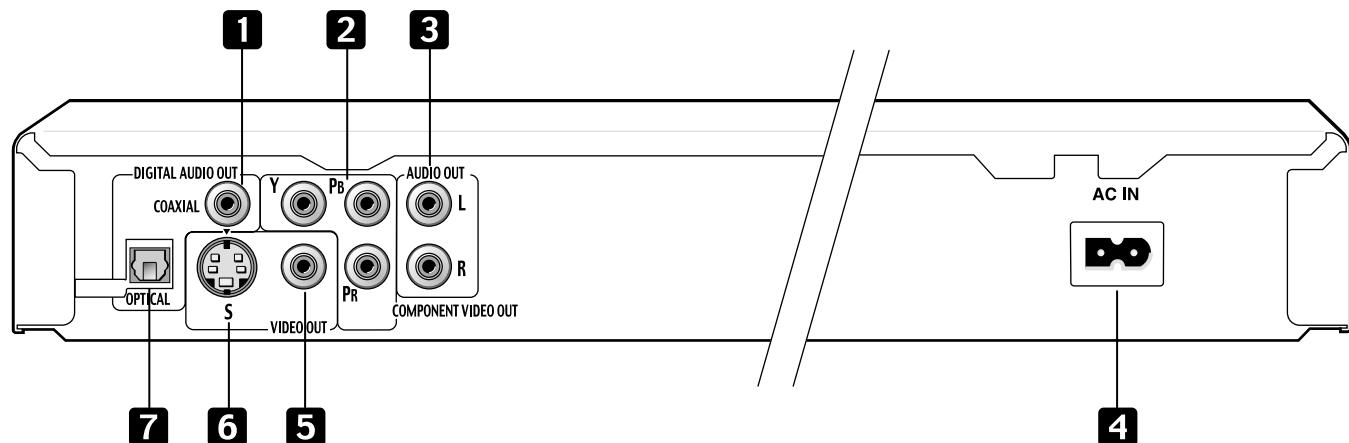

### **1 DIGITAL AUDIO OUT – COAXIAL**

This is a digital audio output for connection to a PCM, Dolby Digital, DTS and/or MPEG-compatible AV receiver that has a coaxial digital input.

Connect using a commercially available coaxial digital audio cable.

### **2 COMPONENT VIDEO OUT**

This is a high quality video output for connection to a TV, monitor or AV receiver that has component video inputs.

Connect using a commercially available three-way component video cable. Be careful to match the colors of the jacks and cables for correct connection.

### **3 AUDIO OUT L / R**

This pair of analog audio outputs connects to your TV, AV receiver or stereo system. Even if you are connecting up one of the digital outputs, we still recommend you connect these jacks.

Use the supplied audio/video cable when connecting these jacks. Match the colors of the jacks and cables for correct stereo sound.

### **4 AC IN**

Connect the supplied power cable here, then plug into a power outlet.

### **5 VIDEO OUT**

This is a standard video output that you can connect to your TV or AV receiver using the supplied audio/video cable.

### **6 S (S-video output)**

This is an S-video output that you can use instead of the video output described in **5** above.


### **7 DIGITAL AUDIO OUT – OPTICAL**

This is a digital audio output for connection to a PCM, Dolby Digital, DTS and/or MPEG-compatible AV receiver that has an optical digital input.

Connect using a commercially available optical digital audio cable.

## Display

A

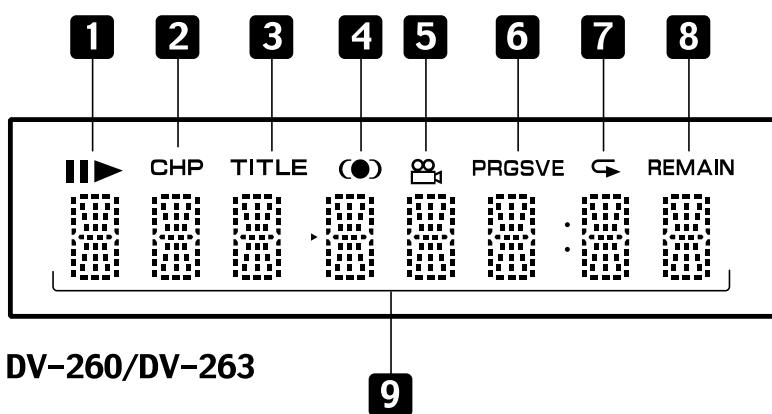

B

### 1 and

Indicates whether a disc is playing or paused.

### 7

Lights in any of the repeat play modes.

### 2 CHP

Indicates that the character display is showing a DVD chapter number.

### 8 REMAIN

Indicates that the character display is showing the disc or title/chapter/track remain time.

### 3 TITLE

Indicates that the character display is showing a DVD title number.

### 9 Character display

### 4

Lights when DTV/SRS TruSurround is selected.

### D 5

Lights during multi-angle scenes on a DVD disc.

### 6 PRGSVE


Lights when the player is set to output progressive scan video.

C

E

F

## Remote control

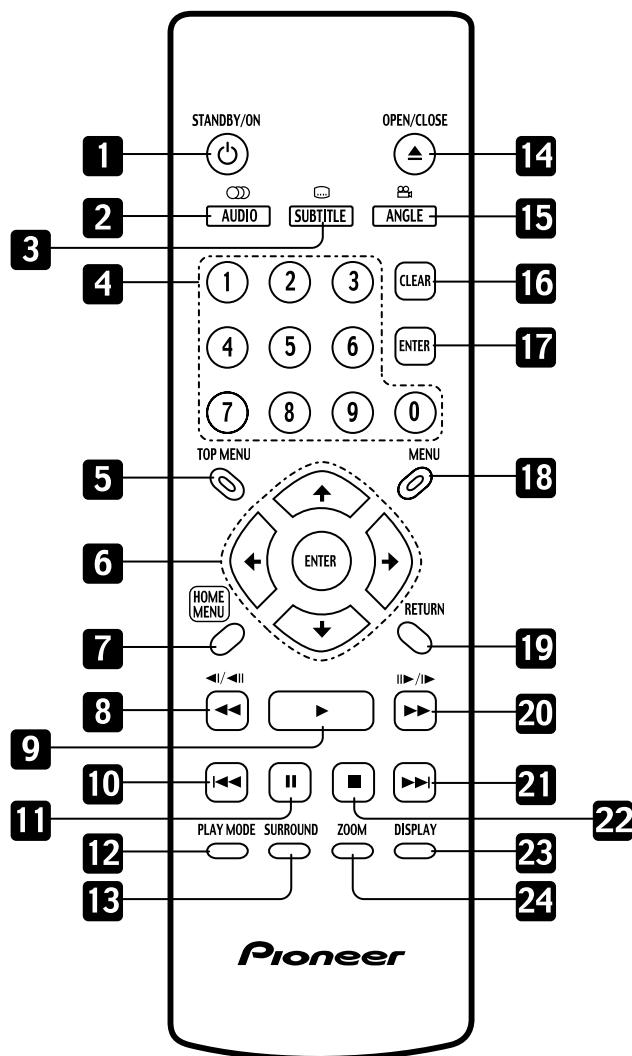

### 1 ⏹ STANDBY/ON

Press to switch the player on or into standby.

### 2 AUDIO

Press to select the audio channel or language.

### 3 SUBTITLE

Press to select a subtitle display.

### 4 Number buttons

### 5 TOP MENU

Press to display the top menu of a DVD disc.

### 6 ENTER & cursor buttons

Use to navigate on-screen displays and menus. Press **ENTER** to select an option or execute a command.

### 7 HOME MENU

Press to display (or exit) the on-screen display.

### 8 ◀◀ and ◀◀/◀

Use for reverse slow motion playback, frame reverse and reverse scanning.

### 9 ▶

Press to start or resume playback.

### 10 ▶◀

Press to jump to the beginning of the current chapter or track, then to previous chapters/tracks.

### 11 II

Press to pause playback; press again to restart.

### 12 PLAY MODE

Press to display the Play Mode menu. (You can also get to the Play Mode menu by pressing **HOME MENU** and selecting Play Mode).

**13 SURROUND**

A Press to activate/switch off DOLBY/SRS TruSurround.

**14 ▲ OPEN/CLOSE**

Press to open or close the disc tray.

**15 ANGLE**

Press to change the camera angle during DVD multi-angle scene playback.

**16 CLEAR**

B Press to clear a numeric entry.

**17 ENTER**

C Use to select menu options, etc. (works exactly the same as the **ENTER** button in **6** above).

**18 MENU**

D Press to display a DVD disc menu, or the Disc Navigator if a VR format DVD-RW, CD, Video CD , MP3, WMA or JPEG disc is loaded.

E

F

**19 RETURN**

Press to return to a previous menu screen.

**20 ►► and ▶▶/||▶**

Use for forward slow motion playback, frame advance and forward scanning.

**21 ►►**

Press to jump to the next chapter or track.

**22 ■**

Press to stop the disc (you can resume playback by pressing ► (play)).

**23 DISPLAY**

Press to display information about the disc playing.

**24 ZOOM**

Press to change the zoom level.