

**Service  
Service  
Service**

**HD2400  
HD2401  
HD2402**




Philips Domestic Appliances and Personal Care

# Service Manual

**PRODUCT INFORMATION**

Voltage : 220-240V  
115V  
Frequency : 50-60Hz  
Power : 700W  
Color setting : Ivory with orange knob  
White with green knob  
Dark aubergine with light aubergine knob

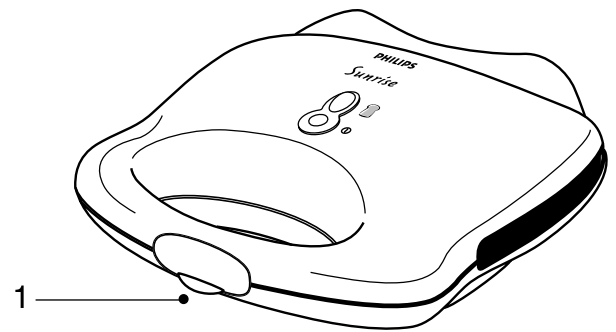

	<b>HD2400</b>	<b>HD2401</b>	<b>HD2402</b>
<b>Non-stick plate</b>	Seal & cut	Shell	Grill
<b>Capacity (Slice)</b>	2	2	1

**SERVICE INFORMATION**

- Thermal fuse cut-off temp. : 240°C
- In case of a technical defect, sandwich maker has to be replaced.
- Catch knob can be replaced by loosening screws A.

1. Catch Knob (Orange) 4822 410 12112  
Catch Knob (Green) 4822 410 12111  
Catch Knob (Aubergine) 4822 410 12109

