Service Information

1997-04-01
HR7715
HR7717

Domestic Appliances and Personal Care

MSH-coding 8837 715 00000 8837 717 00000

Use Service Manual 4822 729 21717


Electronic circuit / Switch bracket / Housing Items 9 / 8 / 4


Alterations: From serial number 7014 on, the Off and Pulse functions were separated and thus the

following alterations took place:

Item 9Electronic circuit: a third micro-switch was added on the board.4822 214 12271Item 8Switch braket: it was added another driving flap for the third micro-switch.4822 464 10292Item 4Housing: the panel was modified with the creation of the Pulse switch.4822 441 11984


Former situation

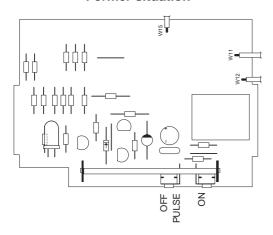


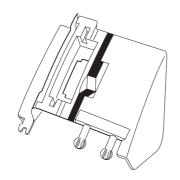



Current situation

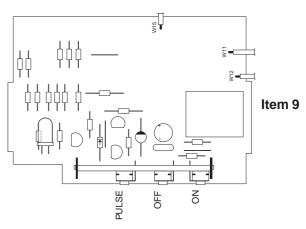

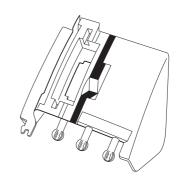

Item 8



Item 4



PCS 88 424 4822 729 21804

Interchangeability: Only the modified parts (current situation) will be available as spare parts and in

order to use them in old sets the following changes must be made:


Electronic circuit: On the copper side (opposite side to the one (item 9) shown in the figure):

 Using a flexible wire, make a jumper between the inner contacts of the Off and

Pulse micro-switchs (detail A).Using solder, make a jumper between the points indicated in detail B.

On the component side (as shown in the figure):

 Remove the transistor (detail C), cutting its 3 terminals off.

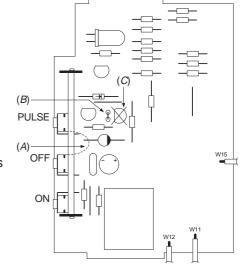

Switch braket: (item 8)

Total interchangeable.

Housing (item 4)

Not interchangeable. It can only be used in old sets (serial numbers up to 6523) if

the electronic circuit and the switch bracket are also replaced.