

# MHC-GX45/RG440S

## SERVICE MANUAL

Ver 1.0 2003. 07

- MHC-GX45/RG440S are composed of following models.  
As for the service manual, it is issued for each component model, then, please refer to them.

*US Model*  
*Canadian model*  
*MHC-GX45*

*AEP Model*  
*UK Model*  
*Australian Model*  
*MHC-RG440S*

### COMPONENT MODEL NAME

	MHC-GX45	MHC-RG440S
COMPACT DISC DECK RECEIVER SYSTEM	HCD-GX45	HCD-RG440
FRONT SPEAKER SYSTEM	SS-RG440	SS-RG440
SUB WOOFER SPEAKER SYSTEM	SS-WG990	SS-WG990

### PARTS LIST

<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
	ACCESSORIES *****	
1-477-716-11	COMMANDER, STANDARD (RM-SRG440)	
1-501-374-52	ANTENNA, LOOP (AM)	
1-754-243-11	ANTENNA (FM)	
△ 1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (UK)	
4-228-953-01	COVER, BATTERY (for RM-SRG440)	
4-236-961-01	FOOT	
4-245-555-11	MANUAL, INSTRUCTION (ENGLISH)	
4-245-555-21	MANUAL, INSTRUCTION (FRENCH) (Canadian)	
4-245-555-41	MANUAL, INSTRUCTION (FRENCH,SPANISH) (AEP)	
4-245-555-51	MANUAL, INSTRUCTION (GERMAN,DUTCH,ITALIAN) (AEP)	
4-245-555-61	MANUAL, INSTRUCTION (SWEDISH,POLISH) (AEP)	
4-245-556-11	MANUAL, INSTRUCTION (DANISH,FINNISH) (AEP)	
4-245-556-21	MANUAL, INSTRUCTION (PORTUGUESE) (AEP)	
4-245-556-41	MANUAL, INSTRUCTION (GREEK) (AEP)	
4-245-556-51	MANUAL, INSTRUCTION (CZECH,HUNGARIAN) (AEP)	
4-245-556-61	MANUAL, INSTRUCTION (TURKISH) (AEP)	
4-245-556-71	MANUAL, INSTRUCTION (SLOVAKIAN) (AEP)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

## MINI HI-FI COMPONENT SYSTEM

9-961-067-01  
2003G04-1  
© 2003. 07

**Sony Corporation**  
Home Audio Company  
Published by Sony Engineering Corporation

# SONY®

