


CORDLESS TELEPHONE


Voxtel D220BT

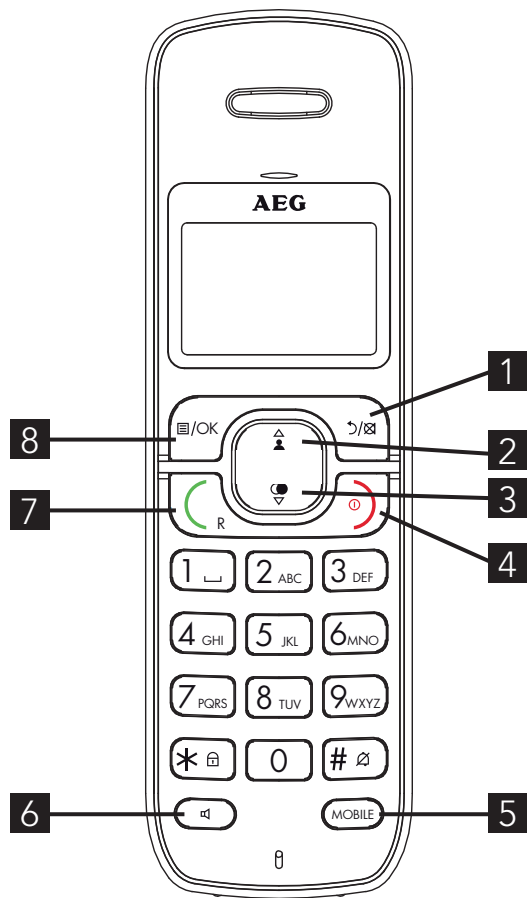


P1




P2

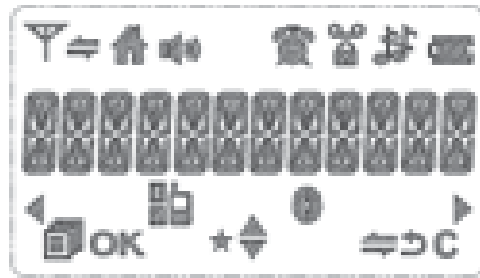


P3

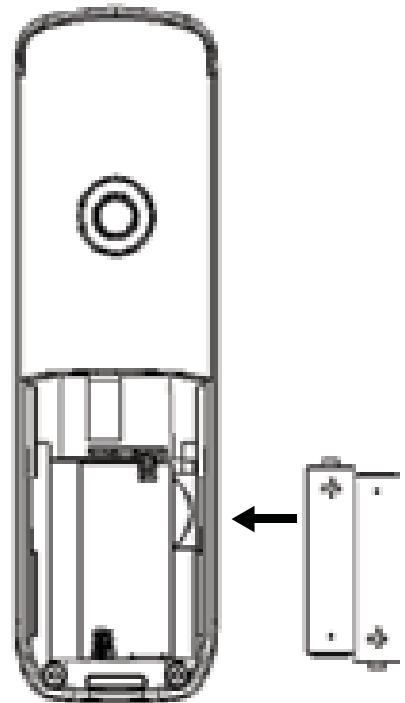

P4

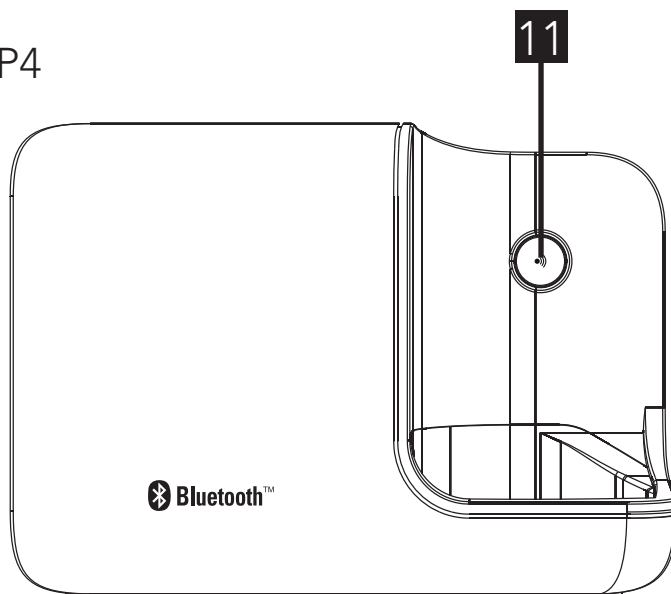

P5

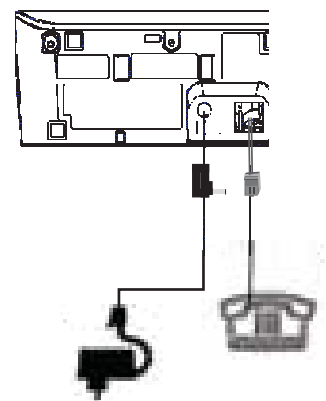

1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefor save trees to be cut for making this paper. A full and detailed user guide with all the features described can be found on our website **www.aegtelephones.eu**. Please download the full user guide in case you want to make use of all the advanced features of your product. To save the environment we ask you not to print this full user guide. Thank you for supporting us to protect our environment.

2 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Keep your phone away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water (for example, near a bath tub , kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
 - When the power supply cord or plug is damaged.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.

7. NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities
10. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. Damage may be caused to the batteries.
12. Please ensure the batteries are inserted in the correct polarity.
13. Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

3 INTENDED USE

This telephone is intended to be connected to a public analogue telephone network or to an analogue extension of a compatible PBX system.




4 UNPACKING YOUR PHONE




The package contains the following items:


- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 Rechargeable batteries
- 1 User manual

5 GETTING TO KNOW YOUR PHONE

5.1 Handset overview (see P1)










#		Meaning
1		Right soft key (clear/back/mute/intercom) <ul style="list-style-type: none"> • In main menu mode: Press to go back to idle screen • In sub-menu mode: Press to go back to previous level • In sub-menu mode: Press and hold to go back to idle screen • In editing / predialling mode: Press to clear a character / digit • In editing / predialling mode: Press and hold to delete all the characters / digits • During a call: Press to mute/unmute the microphone • In idle mode: Press to intercom another handset
2		Up <ul style="list-style-type: none"> • In idle mode: Press to access the call list • In menu mode: Press to scroll up the menu items • In Phonebook list / Redial list / Call List: Press to scroll up the list • During a call: Press to increase the earpiece volume • During ringing: Press to increase the ringer volume
3		Down <ul style="list-style-type: none"> • In idle mode: Press to access the redial list • In menu mode: Press to scroll down the menu items • In Phonebook list / Redial list / Call List: Press to scroll down the list • During a call: Press to decrease the earpiece volume • During ringing: Press to decrease the ringer volume












4		<p>Off</p> <ul style="list-style-type: none"> • During a call: Press to end a call and go back to idle screen • In menu / editing mode: Press to go back to previous menu • In idle mode: Press and hold to power off the handset • In idle mode (when the handset is powered off): Press and hold to power on the handset.
5	MOBILE	<p>Mobile</p> <ul style="list-style-type: none"> • In idle mode: Press to predial with mobile line if only one mobile connected or show the mobile list if two mobiles connected. • In predial mode: Press to dial to the number with mobile line or show the mobile list for selection first if two mobiles connected. • During ringing in mobile line: Press to answer the mobile line call. • In Call List / Redial List: Press to dial the selected number with mobile line or show the mobile list for selection first if two mobiles connected.
6		<p>Speakerphone</p> <ul style="list-style-type: none"> • During a call: Press to turn on / off the speakerphone. • Call List / Phonebook entry : Press to make a call with speakerphone • During ringing: Press to answer a call with speakerphone
7	 R	<p>Talk/Flash</p> <ul style="list-style-type: none"> • In idle / predialling mode: Press to make a call • In Redial list / Call List / Phonebook list: Press to make a call to the displayed entry. • During ringing: Press to answer a call • During a call: Press to dial a flash

8		Left soft key <ul style="list-style-type: none"> • In idle mode: Press to access the main menu • In sub-menu mode: Press to confirm the selection • During a call: Press to access Intercom/Phonebook/Redial List/ Call List
---	-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


5.2 Cordless handset display (see P2)

The LCD display gives you information on the current status of the telephone.





#		Meaning
		Steadily on when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
		Steadily on when an intercom is in progress. Flashes when there is an incoming internal call.
		Indicates a home call is in progress. Flashes when a home call is on hold.
		Indicates that hands free are being used.
		Indicates that the ringer is switched off.
		Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
		Indicates that the keypad is locked.
		Indicates when there are received new Voice Message Waiting (VMWI) not yet read. Disappears when all the voice messages have been read.
		Indicates when the battery is fully charged. Whole icon flashes when the battery performs initial charging. Internal block icon flashes when the battery is in final charging stage.

		Indicates when the battery needs charging. Flashes when low battery power level is detected.
		Indicates when a mobile call is in progress. Flashes when a mobile call is on hold.
		Indicates there is (are) Bluetooth device(s) paired. Flashes when Bluetooth device is being paired.
		Indicates when Bluetooth device #1 or #2 is connected with the telephone base.
		Indicates when more characters are existed before the text currently displayed.
		Indicates when more characters are existed after the text currently displayed.
		Press to select more menu options if applicable.
	OK	Press to confirm the current selection if applicable.
		Steady when new call list. Turn off when new call has been read.
		Scroll up / down the menu items / Phonebook list / Redial list / Call List.
		Press to conduct Intercom call when idle.
		Press to go back to previous menu level or cancel the current action if applicable.
	C	Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.

5.3 Corded Base Station

#		Meaning
11		Paging/Find Press to page your registered handset(s). Press and hold to start the registration process.

5.4 Menu Structure




- In idle mode, press /OK to go to "CALL LIST", the first option in the menu list.
- Press  to go to other options in the menu list.
- Press /OK to enter a sub-menu or function.
- Press  to go back to the previous level.
- Refer to the following for the menu structure.

5.5 Text and Digit Entry Table

The following table shows you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text with the  keys to amend the text entry.
- Press  to delete the last character.
- Press and hold  to delete the entire text string.

5.5.1 English Character Set

	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, or P (if press and hold)
*	*	?	/	\	()					*
#	°	'	,	-	&						

Some other characters are available with some of the alternative handset language options.

6 INSTALLING YOUR PHONE

6.1 Connecting the base station (see P5)

- Plug the power supply and line cord into the base station.
- Plug the power adapter into a 210 - 240Vac, 50Hz mains socket and the line cord into your telephone line socket.
- Always use the cables provided in the box

Warning:

Use only the provided adaptor, using other power supplies may cause a hazard.

Warning:

Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket. Never try to lengthen the mains power cable.

Note:

The base unit needs mains power for normal operation, not just for charging the handset batteries.

6.2 Installing and charging the batteries (see P3)

- Place the 2 supplied batteries into the battery compartment with the polarity markings as shown. Use only the NiMH rechargeable battery type provided.
- Position the battery compartment cover over the batteries and slide up to click into place.
- Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

7 USING YOUR PHONE**7.1 Introducing Bluetooth**

Your new telephone system with Bluetooth wireless technology has the following features:

- Pairing a Bluetooth enabled mobile phone with the telephone base. Two Bluetooth devices can be paired up and connected.
- Connecting a Bluetooth enabled mobile phone to make and receive MOBILE calls. Two mobile phones can be connected but only one of them can be used at a time.
- Making and receiving calls using your Bluetooth enabled mobile phone plan while benefiting from the ease and comfort of your home telephone system.

Glossary of terms

Below are some terms used in this User's Guide to help you become familiar with using your Bluetooth devices and your new telephone system.

Bluetooth mobile phone - Refers to a Bluetooth enabled mobile telephone.

MOBILE line - The communications service provided through your Bluetooth enabled mobile phone.

HOME line - Your conventional telephone land line.

Pairing - This refers to the process of two Bluetooth devices registering device information with each other. The telephone base must be paired with a Bluetooth enabled mobile phone before the Bluetooth device can be used.





IMPORTANT INFORMATION

- Refer to your mobile phone user's guide for more information about its Bluetooth function.
- Make sure that your Bluetooth enabled mobile phone is between one to 2 m away from the telephone base in order to maintain a clear and consistent connection between your Bluetooth mobile phone, telephone base and cell tower.
- Make sure that your Bluetooth enabled mobile phone has sufficient signal strength. You may need to move the Bluetooth enabled mobile phone and telephone base to a location where the mobile signal may be stronger.
- Charge your Bluetooth mobile phone while it is connected to the telephone base because your mobile phone's battery will discharge faster while it is connected wirelessly to the telephone base.
- Monitor your mobile phone's usage because airtime is deducted from your mobile plan for the duration of the MOBILE calls.

7.2 Bluetooth Setup

7.2.1 Setup Mobile

To pair and connect a Bluetooth enabled mobile phone:

- Place your cell phone near the handset and base unit.
- Press /OK and then  to select "MOBILE SETUP".
- Press /OK and display will show "READY?".
- Press /OK and display will show "DISCOVERING". The Bluetooth feature is activated.
- Using your Bluetooth enabled mobile phone, turn on the Bluetooth feature and search for a new device.
- Once your Bluetooth enabled mobile phone has found the AEG-BT telephone, select it.
- Using your Bluetooth enabled mobile phone, enter the PIN code of the telephone (the default PIN code is 0000) to continue the pairing process.

- Pairing will be confirmed when you hear a tone and the Bluetooth icon appears on the handset.

Refer to the user's manual of your Bluetooth enabled mobile phone to learn how to search for or add new Bluetooth devices.







Notes:

Paired device(s) will be connected automatically and stored into the Paired Devices list.

- > When a device is successfully connected, corresponding device icon will be displayed on screen and Bluetooth device LED on base will be on.
- > If you would like to pair up another Bluetooth device, please repeat the steps as above.

7.2.2 Replace a paired device

If you have already paired up two Bluetooth devices, you will need to replace one of them if you would like to pair up another device. Follow the below steps to replace and pair up a new device.

- Press /OK and then  to select "MOBILE SETUP".
- Press /OK and the display will show the already paired devices and then you are requested to select the device to be replaced.
- Press  to select the desired device.
- Press /OK to confirm. Display will show "REPLACE?".
- Press /OK to confirm, and the device will be removed from paired list.
- You will be requested to pair up the new Bluetooth device. Refer to Section 7.2.1 to proceed with the next steps.

Note:

When pairing a new mobile, the connected mobile has to be disabled temporarily.

7.2.3 Paired Devices

The mobile(s) paired up will be displayed in the paired devices list, no matter it (they) is (are) connected or not. You can choose to connect, or remove the mobile from this menu.

- Press /OK and then  to select "PAIRED UNITS".


- Display will show the mobile name of paired device(s).

Note:




Display will show "EMPTY" if there is no device paired.

- Press /OK and then Δ/∇ to select the desired mobile device.

For the connected mobile device:

- Press /OK to remove the mobile device.
- Press /OK to confirm.

For the mobile phone that is not connected:

- Press /OK and then Δ/∇ to select "CONNECT" or "REMOVE".
- Press /OK to confirm. If you select "REMOVE", press /OK again to confirm.

Notes:

When the connected mobile is removed, corresponding Bluetooth device icon and LED on base will be off.

>When the disconnected mobile is connected, corresponding device or will be on.

>When the mobile is removed, the device name will be removed and "EMPTY" will be displayed instead in the paired device list.

7.3 Make a Call

7.3.1 Preparatory dialing

Using the home line

Enter the phone number and press  or  to dial the number with home line.

Using the mobile line

Enter the phone number and press MOBILE to dial the number with mobile line. If there are two mobile devices connected, you have to select one device from the list.

Note:


If no mobile device connected, display will show "NO MOBILE" and then back to idle.

7.3.2 Direct dialling

Using the home line

Press  or  to take the home line and enter the phone number.


Using the mobile line

- Press MOBILE and , then enter the phone number.
- Press MOBILE to dial with mobile line. If there are two mobile devices connected, you have to select one device from the list.

Note:

If no mobile device connected, display will show "NO MOBILE" and then back to idle.

7.3.3 Call from the phonebook

- Press , then OK to access the phonebook to get the desired phonebook entry.




Using the home line

- Press  or  to dial the selected phonebook entry with home line.

Using the mobile line

- Press MOBILE to dial the selected phonebook entry with mobile line.

7.3.4 Call from the call list

- Press  to access the call list and then press / to select the desired call list entry.




Using the home line

- Press  or  to dial the selected call list entry with home line.

Using the mobile line

- Press MOBILE to dial the selected call list entry with mobile line.

7.3.5 Call from the redial list

- Press  to access the redial list and then press / to select the desired redial number.

Using the home line

- Press  or  to dial the selected redial list entry with home line.

Using the mobile line

- Press MOBILE to dial the selected redial list entry with mobile line.

7.3.6 Call timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call ends. It is shown in hours, minutes and seconds format (HH:MM:SS).

7.4 Answer a call


Answering a home call

If handset is not on the charging cradle:

When the phone rings, press  or  to answer a call:

Answering a mobile call

If handset is not on the charging cradle.

When the phone rings, press MOBILE or  to answer a call.

If the handset is on the charging cradle or the base station, and Auto Answer is turned on: When the phone rings, pick up the handset to answer a call.

Note:

Refer to Section 10.5 for the details about setting Auto Answer.


7.5 End a call

- During a call press  to end the call.

OR

- Put the handset on the base station or charger to end the call.



7.6 Handset speakerphone

During a call, you can press  to alternate between hands-free speakerphone and normal handset use.

7.7 Adjust volume

There are 5 levels ("VOLUME 1" to "VOLUME 5") to choose from for each of the earpiece and speaker volumes.

During a call:



- Press / to select volume 1-5. The current setting is shown.

> When you end the call, the setting will remain at the last selected level.

7.8 Mute a call

You can talk to someone nearby without letting the caller hear you during a call.


During a call:

- Press  to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you.
- Press  again to unmute the microphone.

7.9 Turn off the handset ringer

In idle, press and hold **#** to turn off the handset ringer. The  icon is displayed on the LCD.


Note:

The display will still flash the call icon  and show "CALL" or the caller display number, when there is an incoming call, even if the ringer is turned off.


- To turn the ringer back on, press and hold **#** again.

7.10 Turn on the keypad lock

You can lock the keypad so that it cannot be used accidentally while carrying it around.

- In idle, press and hold ***** to turn on the keypad lock and the  icon will display.

Note:

You can still use  to answer a call when the handset is ringing. To turn the keypad lock off, press and hold ***** again.

7.11 Redial the last number

You can redial any of the 10 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead.


The most recent last number will display at the top of the redial list.

7.11.1 Redial a number from the redial list

- In idle mode, press  to access the redial list.

Note:





If the redial list entry shows a name, press # to view the number of this entry.

- Press Δ/∇ to browse the redial list.
- Press  to dial to the selected redial number.

Note:


If there are no numbers in the redial list, the display shows "EMPTY".

7.11.2 Store a redial number into the phonebook



- Follow Steps 1 and 2 in Section 7.11.1.
- Press /OK and Δ/∇ to select "ADD TO PB".
- Press /OK and then enter the name you want to use in the phonebook.
- Press /OK and then modify the number, if necessary.
- Press /OK to show "MELODY 1".
- Press Δ/∇ to browse the ringtone list. The respective ringtone will be played when browsing the ringtone list.

Note




The selected melody will only be played when you receive a call if you subscribe to Caller Display and the incoming number matches the stored number.

- Press /OK to confirm, and the entry will be stored.

7.11.3 Delete a redial number

- Follow Steps 1 and 2 in Section 7.11.1.
- Press /OK and Δ/∇ to select "DELETE".
- Press /OK to confirm, and the entry will be deleted.

7.11.4 Delete all redial list entries

- Follow Steps 1 and 2 in Section 7.11.1.
- Press /OK and Δ/∇ to select "DELETE ALL".
- Press /OK to display "CONFIRM?".
- Press /OK to confirm. All entries will be deleted and the display will show "EMPTY".

7.12 Find the handset

You can locate the handset by pressing the Find button in the middle of the front of the base station. All the handsets registered to the base will produce the paging tone and show "PAGING" on the display for 60 seconds.

You can stop the paging by pressing (/ ) /  on any handset or  on the base again.

Note:



If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

7.13 Make an internal call (Multi-handset versions only)



This feature is only applicable when there are at least two registered handsets or at least one handset and a headset.

It allows you to make internal calls, transfer external calls from one handset to another handset / headset and make conference calls. If the called handset / headset is not answered within 60 seconds, the called handset / headset will stop ringing and the calling handset will return to standby mode.

Note:

If only one handset is registered to the base station, when  /  is pressed, it will display "NOT POSSIBLE".

7.13.1 Intercom another handset

- In idle mode, press  and all the other registered handset numbers will display, along with a "9".
- Enter the number of the handset that you want to call, or enter 9 to call all handsets.
- The called handset rings and  must be pressed on that handset to establish the intercom call.


Note:

If only one other handset is registered to the base station, pressing  will call the other handset immediately.

Note:







If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answer the external call.

7.13.2 Call all handsets


- In idle mode, press  and the registered handset numbers will display.
- Press the 9 key to ring to all registered handsets.

7.13.3 Transfer an external call to another handset

During an external call:

- Press /OK and / to select "INTERCOM".
- Press /OK to show all the other registered handset numbers, plus 9. Enter the number for the handset you want to transfer the call to.
- The external call is put on hold automatically and the called handset rings.
- Press  on the called handset to establish an internal call.
- Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
> The external call is transferred to the called handset.

Note:


If the other handset has not answered the intercom call, you can stop the intercom and return to the external call by pressing .

7.13.4 Make a 3-way conference call

The conference call feature allows one external call to be shared with two handsets or one handset and a headset (in intercom). The three parties can share the conversation and no additional network subscription is required.

During an external call:

- Follow Steps 1 to 4 in Section 7.13.3.
- Press and hold the star key * on the calling handset to establish the conference call.

Either handset can exit the conference by pressing , leaving the other handset still connected to the external call.

8 PRIVATE PHONEBOOK

Each handset can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note: the different ringtones only play when you receive a call if you subscribe to Caller Display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.

8.1 Add a new phonebook entry

In idle:

- Press /OK and Δ/∇ to select "PHONEBOOK" and then press /OK to access the phonebook.
- Press /OK to show "ADD".
- Press /OK and then enter the name.
- Press /OK and then enter the number.
- Press /OK and Δ/∇ to select the desired ringtone for your phonebook entry.
- Press /OK to store the phonebook entry.

8.2 Search for a phonebook entry

In idle:

- Press /OK and Δ/∇ to select "PHONEBOOK" and then press /OK to access the phonebook.
- Enter the first letter of the name using the alphanumeric keys (e.g. if it begins with C, press the 2 key three times) and then Δ/∇ to scroll to the entry you want.

8.3 View a phonebook entry

In idle:

- Press /OK and Δ/∇ to select "PHONEBOOK" and then press /OK to access the phonebook.
- Press Δ/∇ to select the desired phonebook entry.
- Press /OK and Δ/∇ to select "VIEW".
- Press /OK and Δ/∇ to review the name, number and ringtone of the selected phonebook entry.

Note:

If the number is more than 12 digits, press /OK or /X to view the remaining digits.

8.4 Edit a Phonebook Entry

In idle:

- Press /OK and to select "PHONEBOOK" and then press /OK to access the phonebook.
- Press to select the desired phonebook entry.
- Press /OK and to select "EDIT".
- Press /OK to display the current name.
- Edit the name and press /OK.
- Edit the number and press /OK.
- Press to select the ringtone and press /OK to confirm.

8.5 Delete a Phonebook Entry

In idle:

- Press /OK and to select "PHONEBOOK" and then press /OK to access the phonebook.
- Press to select the desired phonebook entry.
- Press /OK and to select "DELETE".
- Press /OK to confirm, and the entry will be deleted.


8.6 Delete all Phonebook entries

- Press /OK and to select "PHONEBOOK" and then press /OK to access the phonebook.
- Press /OK and to select "DELETE ALL".
- Press /OK to display "CONFIRM?".
- Press /OK to confirm. All entries will be deleted and the display will show "EMPTY".

8.7 Check the Phonebook Usage

You can check how many phonebook entries are stored in your handset and how many phonebook entries are available for you to store in the phonebook.

- Press /OK and to select "PHONEBOOK" and then press /OK to access the phonebook.
- Press /OK and to select "PB STATUS".

- Press /OK to display how much of the phonebook is being used, for example "14/50" means 14 entries are stored out of the total 50 available spaces.

9 CALLER DISPLAY (NETWORK DEPENDENT)


This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 20 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, "WITHHELD" will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, "OUT OF AREA" will display.








If you've got new Caller Display records, the handset will display "X NEW CALLS" in standby mode. The New Calls indication will remain until all the new call records have been viewed on that handset.

9.1 View the call list






All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a  icon at the centre of the bottom line of the display.

- Press  to access the call list.



OR Press /OK and / to show "CALL LIST", then press OK.

- Press / to select the desired entry.
- Press # to view the caller's number if applicable.
- Press /OK, / to show "DETAILS", and then /OK to display the date and time of the call. Press /OK to go back to the previous screen.

9.2 Store a call list number into the phonebook




- Follow Steps 1 and 2 in Section 9.1.
- Press /OK and Δ/∇ to show "ADD TO PB".
- Press /OK and then enter the name.
- Press /OK and the selected call list number is displayed.
- Edit the number if necessary.
- Press /OK and Δ/∇ to select the ringtone.
- Press /OK to store the phonebook entry and return to the calls list.

9.3 Delete an entry in the call list

- Follow Steps 1 and 2 in Section 9.1.
- Press /OK and Δ/∇ to select "DELETE".
- Press /OK to confirm.

9.4 Delete all call list entries

Follow steps 1 and 2 in Section 9.1.

- Press /OK and Δ/∇ to select "DELETE ALL".
 - Press /OK to display "CONFIRM?".
 - Press /OK to confirm.
- > All entries will be deleted and the display will show "EMPTY".

10 PHONE SETTINGS




Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.



10.1 Date and Time Settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call.





The Caller Display service only sends the month and date, not the year, so you may need to set the year.

10.1.1 Change the Date Format






- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "DATE & TIME".
- Press /OK and Δ/∇ to select "DATE FORMAT".

- Press /OK and Δ/∇ to select your desired date format ("DD-MM-YY" or "MM-DD-YY").
- Press /OK to confirm.

10.1.2 Change the Time Format

- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "DATE & TIME".
- Press /OK and Δ/∇ to select "TIME FORMAT".
- Press /OK and Δ/∇ to select your desired time format ("12 HR" or "24 HR").
- Press <MENU/OK> to confirm.






10.1.3 Set the Time

- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "DATE & TIME".
- Press /OK and Δ/∇ to select "SET TIME".
- Press /OK and then enter the time information in 24 hour format.
- Press /OK to confirm.

Note:

If time has been set before, the current time will display, otherwise, "HH:MM" will display.

10.1.4 Set the Date

- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "DATE & TIME".
- Press /OK and Δ/∇ to select "SET DATE".
- Press /OK and then enter the date information in the format you set in Section 10.1.1.
- Press /OK to confirm.


Note:

If date has been set before, the current date will display, otherwise, "DD-MM-YY" will display.



10.2 Alarm settings

You can set an alarm time on this phone. When an alarm is set, the alarm icon  is shown on the handset display. When the alarm time is reached, the alarm icon  and "ALARM ON" flash on the handset





display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm.

If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold  while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

- A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to "VOLUME OFF", the alarm still sounds at "VOLUME 1" level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time. Once the user presses any key or presses and holds  to disable the alarm, the display will revert to the call duration.
- During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.




10.2.1 Turn on/off the alarm

- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "ALARM".
- Press /OK and Δ/∇ to select "ON/OFF".
- Press /OK to confirm.

Note:





If ON is selected, you will be asked to set the alarm time.

10.2.2 Set the alarm time (if alarm time is set to be ON)

- Follow Steps 1 to 4 in Section 10.2.1.
- Enter the alarm time in 24 hour format.
- Press /OK to display "SNOOZE".
- Press /OK and Δ/∇ to select snooze "ON" or "OFF".
- Press /OK to confirm.

10.3 Handset settings

10.3.1 Set the ringer melody for internal calls





- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "RING SETUP".
- Press /OK and Δ/∇ to select "INT RING".
- Press /OK and Δ/∇ to select the melody you want to hear for internal calls.

Note:

The respective melody will be played while browsing the ringtone list.

- Press /OK to confirm.

10.3.2 Set the ringer melody for external calls





- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "RING SETUP".
- Press /OK and Δ/∇ to select "EXT RING".
- Press /OK and Δ/∇ to select melody you want to hear for external calls.

Note:


The respective melody will be played while browsing the ringtone list.

- Press /OK to confirm.

10.3.3 Set the Ringer Volume

- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "RING SETUP".
- Press /OK and Δ/∇ to select "RING VOLUME".
- Press /OK and Δ/∇ to select the desired ringer volume (a total of 6 ringer volume levels including "VOLUME OFF").

Note:










The respective ringer volume will be played during your selection. If "VOLUME OFF" is selected, the  icon will be displayed.

- Press /OK to confirm.








10.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired. Key Tone - a single beep is emitted when you press a key. Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.








Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- Press /OK and  to select "HS SETTINGS".
- Press /OK and  to select "TONE SETUP".
- Press /OK and  to select "KEY TONE" / "BATTERY TONE" / "OUT OF RANGE".
- Press /OK and  to turn on or off these tones.
- Press /OK to confirm.

10.4 Set the handset language








- Press /OK and  to select "HS SETTINGS".
- Press /OK and  to select "LANGUAGE".
- Press /OK and  to select the desired language.
- Press /OK to confirm.

10.4.1 Rename the handset

- Press /OK and  to select "HS SETTINGS".
- Press /OK and  to select "RENAME HS".
- Press /OK and change the name of your handset, using /X to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
- Press /OK to confirm.

10.4.2 Choose the information to be displayed in idle

You can choose to display the time or handset name in your idle screen.





- Press /OK and  to select "HS SETTINGS".
- Press /OK and  to select "HS DISPLAY".
- Press /OK and  to select "HANDSET NAME" or "TIME".
- Press /OK to confirm.

Note:

If "TIME" is selected, but no time has been set the display will show -----.




10.5 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

- Press /OK and Δ/∇ to select "HS SETTINGS".
- Press /OK and Δ/∇ to select "AUTO ANSWER".
- Press /OK and Δ/∇ to turn on or off the auto answer feature.
- Press /OK to confirm.

10.6 Base Settings

10.6.1 Set the Base Ringer Melody




- Press /OK and Δ/∇ to select "BS SETTINGS".
- Press /OK and Δ/∇ to select "BS RINGER".
- Press /OK and Δ/∇ to select the desired melody you want from a choice of 5.

Note:

The respective ringer melody will be played while browsing the melody list.

- Press /OK to confirm.

10.6.2 Set the Ringer Volume

- Press /OK and Δ/∇ to select "BS SETTINGS".
- Press /OK and Δ/∇ to select "RING VOLUME".
- Press /OK and Δ/∇ to select the desired ringer volume (a total of 6 ringer volume levels including "VOLUME OFF").

Note:

The respective ringer volume will be played during your selection.

- Press /OK to confirm.






10.6.3 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced.

You will need to enter the 4-digit system PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna flashing and "REGISTER" on the display.





Note:

You cannot de-register the handset that you are currently using.

- Press /OK and Δ/∇ to select "BS SETTINGS".
- Press /OK and Δ/∇ to select "DELETE HS".
- Press /OK and the display shows "PIN?----".
- Enter the 4-digit system PIN.
- Press /OK and the first handset number is displayed.
- Press Δ/∇ to step through the list of registered handsets, and select the number of the handset you want to de-register.
- Press /OK to confirm, and the chosen handset will be de-registered.






10.6.4 Change the Flash (Recall) Time

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are "SHORT" (the default value of 100ms), "MEDIUM" (300ms) or "LONG" (600ms).

- Press /OK and Δ/∇ to select "BS SETTINGS".
- Press /OK and Δ/∇ to select "FLASH TIME".
- Press /OK and Δ/∇ to select your desired flash time ("SHORT", "MEDIUM", "LONG", with the current setting indicated by an asterisk).
- Press /OK to confirm.

10.6.5 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorised use. The default system PIN code is 0000.

- Press /OK and Δ/∇ to select "BS SETTINGS".
- Press /OK and Δ/∇ to select "CHANGE PIN".
- Press /OK and the display shows "PIN?-----".
- Enter the old system PIN.
- Press /OK to display "NEW PIN?-----", and enter your new 4-digit system PIN.
- Press /OK to display "CONFIRM?-----", and enter your new 4-digit system PIN again.

Note:

If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5 you must enter the new system PIN at step 5 again.

- Press /OK to confirm.

10.7 Registration






Important:


When you purchase your phone system, all handsets are already registered to your base, so you do not need to register them.


Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:






- Press and hold  on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press /OK and  to select "REGISTRATION".
- Press /OK to display "PIN?-----".
- Enter the 4-digit system PIN (default 0000).
- Press /OK to confirm, and the display will show "PLEASE WAIT".

If the handset registration is successful, you will hear a confirmation tone and the  will stop flashing.


The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.

10.8 Reset your phone

You can reset your phone to the default settings. After a reset, all your personal settings, call list entries and redial list entries will be deleted but your phonebook remains unchanged.

- Press /OK and  to select "DEFAULT".
- Press /OK to display "PIN?-----".
- Enter the 4-digit system PIN (default 0000).
- Press /OK to display "CONFIRM?"
- Press /OK to confirm, and the phone will be reset to its default settings.

11 TROUBLESHOOTING

Problem	Causes	Solutions
No dialling tone when pressing  key	<ul style="list-style-type: none"> • The connection cord of the base station is not plugged in. • The adapter cord is not plugged in correctly in the base station. • Another handset is using the base to make a call. • Wrong telephone line cord 	<ul style="list-style-type: none"> • Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket. • Check the base station plug and the 230V plug (remove and plug-in). • Wait until the line is unoccupied. • Use the original telephone line cord supplied
When connect to a PBX, no and/or wrong connection after dialling.	Dialling prefix is needed.	Insert the dialling prefix.
„SEARCHING“ is displayed.	<ul style="list-style-type: none"> • Base station out of range. • Base station not connected to mains. 	Reduce the range. Connect base station to mains.
The call does not work.	Service not activated or wrong setting.	Check your Subscription with network or change the dial mode.
No display.	Empty battery.	Recharge battery.

12 GUARANTEE AND SERVICE

The phone is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales (till) receipt this is your proof of guarantee.

12.1 While the unit is under Guarantee

- Disconnect the base unit from the telephone line and the mains electricity supply.
- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

12.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via **www.aegtelephones.eu**

This product works with rechargeable batteries only. If you put nonrechargeable batteries in the handset and place it on the base, the handset will be damaged and this is NOT covered under the warranty conditions.

13 TECHNICAL DETAILS

Standard	Digital Enhanced Cordless (DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; Up to 50m indoors
Operating time	Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0° C to 40° C, Storage -20° C to 60° C

Electrical power

Base:

Ten Pao - S004LB0600030 / S004LV0600030
input 100-240VAC 50/60Hz 150mA, output
6VDC 300mA

Charger unit:

Ten Pao - S004LB0600030 / S004LV0600030
input 100-240VAC 50/60Hz 150mA, output
6VDC 300mA

14 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on:

www.aegtelephones.eu

15 DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicate this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.

16 CLEANING AND CARE

Do not clean any part of your phone with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

When necessary, clean it with a damp cloth.

Keep your phone system away from **hot, humid conditions or strong sunlight**, and **don't let it get wet.**

© 2012 Binatone Electronics International Limited

All rights reserved

Subject to availability. Rights of modification reserved.

AEG is a registered trademark used under license from AB Electrolux (publ)

www.aegtelephones.eu

