


Service
Service
Service



Service Manual



HD 2603

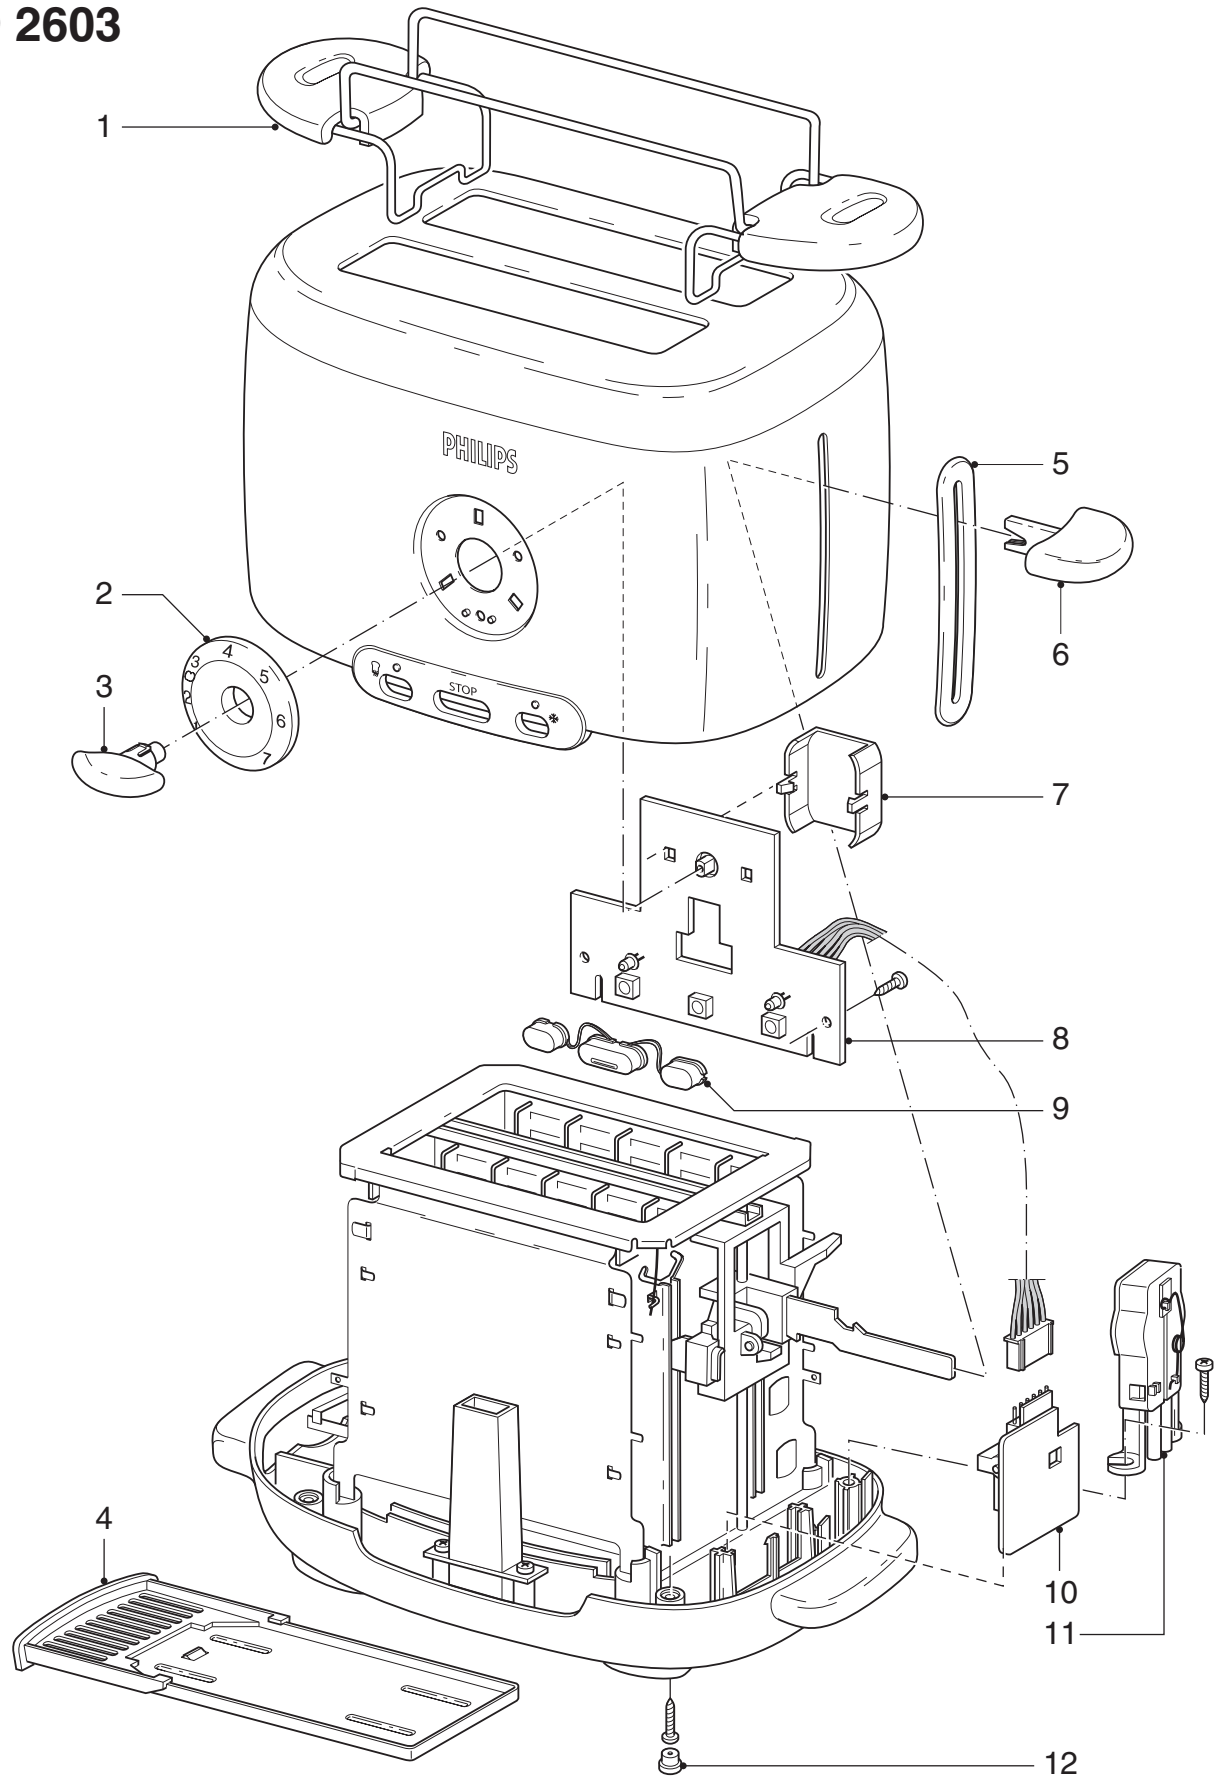

| Pos | Description | | Service code |
|-----|--------------------|-------|----------------|
| 1 | Bunwarmer | White | 9965 000 14822 |
| 2 | Control knob cover | White | 9965 000 14814 |
| 3 | Control knob | White | 9965 000 14815 |
| 4 | Crumtray complete | White | 9965 000 14816 |
| 5 | Push slot | White | 9965 000 14817 |
| 6 | Push knob | White | 9965 000 14818 |

| Pos | Description | | Service code |
|-----|------------------------|-------|----------------|
| 7 | PCB cover | | 9965 000 14807 |
| 8 | Function PCB assembly | | 9965 000 14819 |
| 9 | Future button (3x) | White | 9965 000 14820 |
| 10 | Main PCB (Magnet unit) | | 9965 000 14821 |
| 11 | Mains switch assy | | 9965 000 14811 |
| 12 | Rubber foot | White | 9965 000 14812 |