

Service
Service
Service



HD 4850/A
HD 4850/B
HD 4851/A
HD 4851/B
HD 4852/B
HD 4854/B
HD 4855/B

Service Manual

MSH code



8824 850 0000
8824 851 0000
8824 852 0000
8824 854 0000
8824 855 0000

SERVICE MANUAL 4822 729 21698 IS HEREWITH CANCELLED

PRODUCT INFORMATION

Voltage : 220-240V
Frequency : 50-60Hz
Power consumption : 1050W
Color setting : Ivory with orange parts
White with green parts

	Cover	Bunwarmer	Max. timer setting
HD4850/A	-	-	180 sec. ±15%
HD4850/B	-	-	160 sec. ±15%
HD4851/A	-	-	180 sec. ±15%
HD4851/B	-	-	160 sec. ±15%
HD4852/B	-	x	160 sec. ±15%
HD4854/B	-	x	160 sec. ±15%
HD4855/B	x	x	160 sec. ±15%

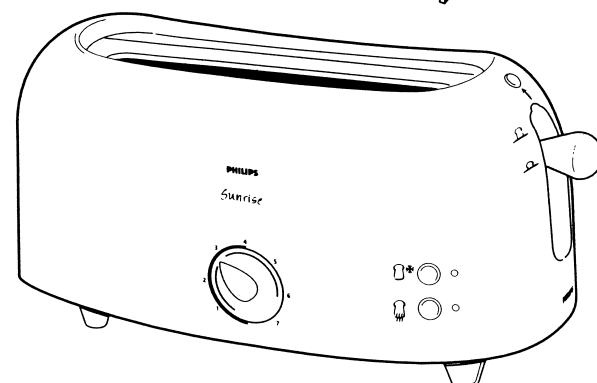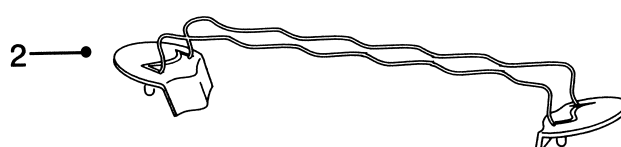

SERVICE INFORMATION

- Crumbtray for all toasters
- In case of a technical defect, toasters have to be replaced
- Only numbered items are serviceable parts

1	Dust cover (orange)	4822 442 00632
2	Bunwarmer (ivory)	4822 690 10097
3	Crumbtray (orange)	4822 418 10215
	Crumbtray (green)	4822 418 10358

Published by Philips Domestic Appliances and Personal Care Printed in Hong Kong ©Copyright reserved Subject to modification

4822 729 21968
04/98
Ver. 2



PHILIPS