

Service
Service
Service




Philips Domestic Appliances and Personal Care

Service Manual

SAP coding HD 4653/41

PRODUCT INFORMATION

Voltage	: 110 V, 120 V, 220 - 240 V
Frequency	: 50 - 60 Hz
Power consumption	: 1500 W, 2000 - 2400 W
Coloursetting	: Misty celadon / icicle blue
Contents	: 100 - 1700 cc

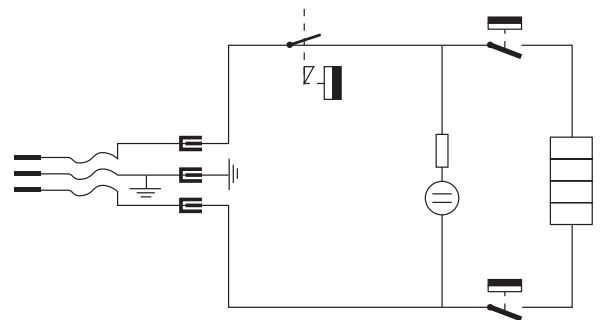

Descaling

Regular descaling will prolong the life of the appliance.

1. Fill the kettle with water up to three-quarters of the MAX capacity and bring the water to the boil.
2. After the appliance has switched off, add white vinegar (8%) to the MAX level.
3. Leave the solution in the kettle overnight.
4. Empty the kettle and rinse the inside thoroughly.
5. Fill the kettle with clean water and boil the water.
6. Empty the kettle and rinse it with clean water again.

Repeat this procedure if there is still some scale in the kettle.

Cleaning the filter

The triple-action filter can be cleaned as follows:

1. Remove the basket from the filter by sliding it.
2. Take the stainless steel mesh out of the basket and clean it by squeezing and rotating it under a running tap.

Repair instructions


To reach the components in the steamguide, the switch lever has to be pulled out with a little bit of force.

The best way to do that without damaging the switch lever is to use a pair of tongs with a soft rubber surface or to tape the switch lever.

This product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

HD 4653/41

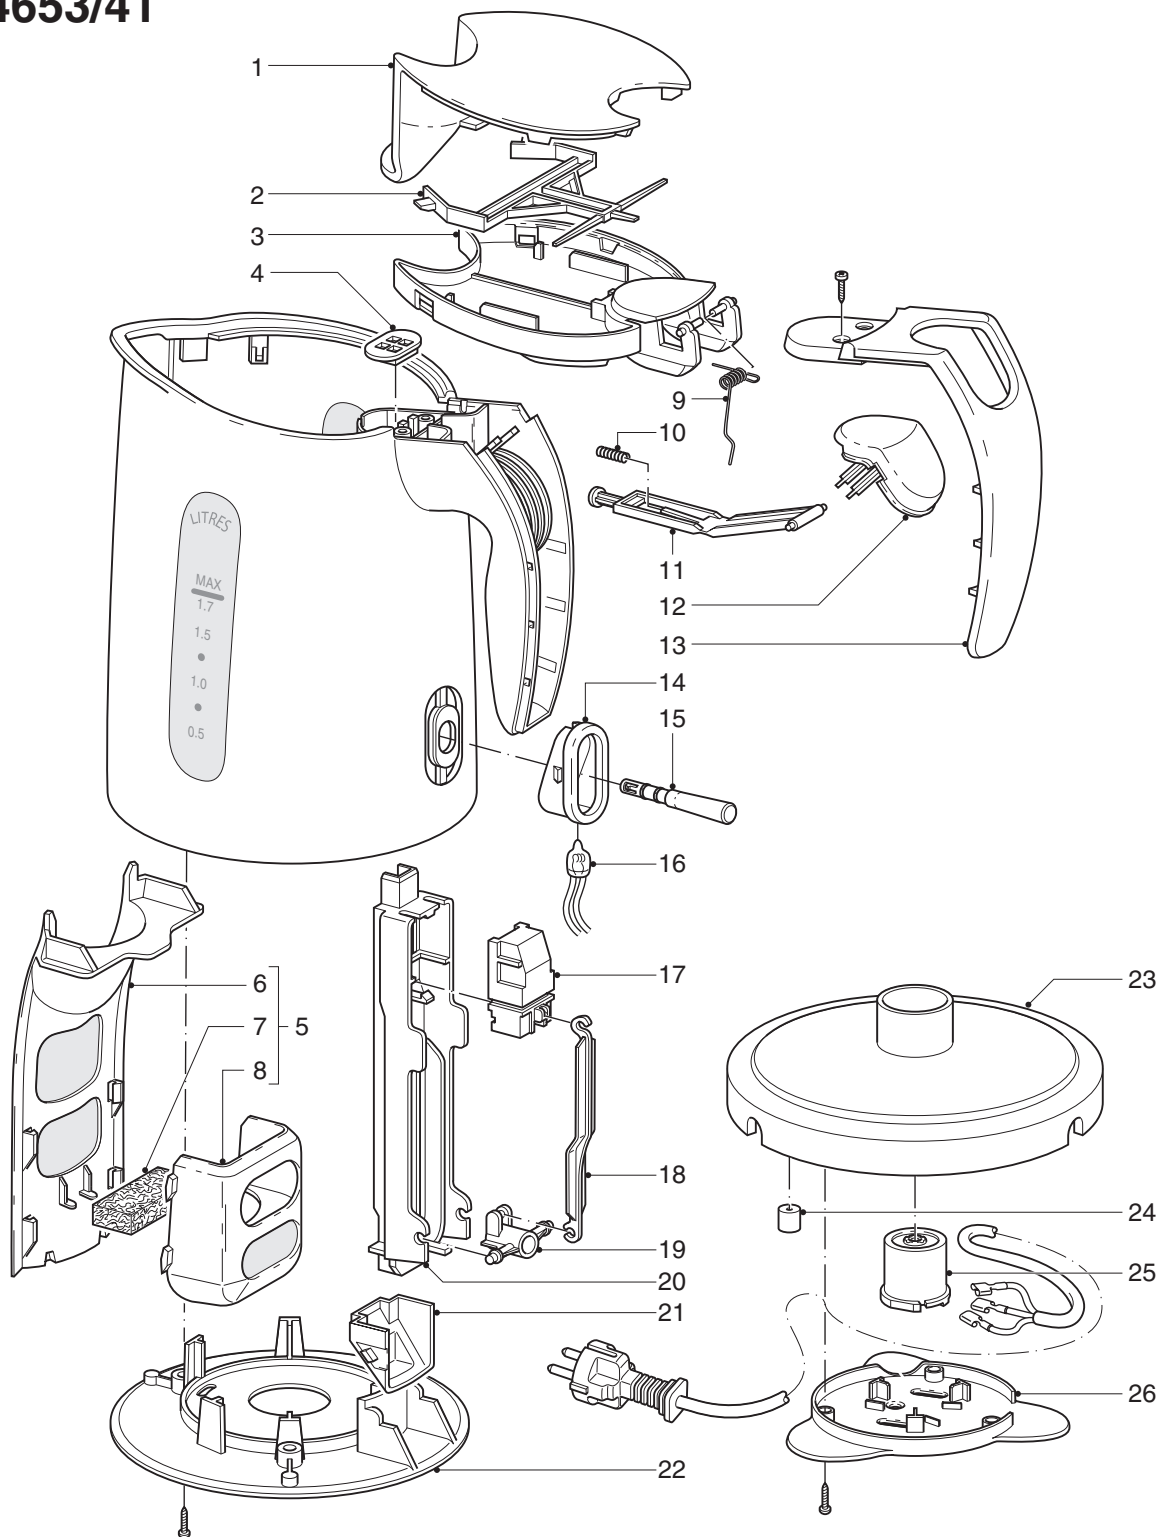

Pos	Description		Service code
1	Lid upper	icicle blue	4213 247 49320
2	Lid latch	vapour dusk	4213 247 49200
3	Lid lower	misty celadon	4213 247 49330
4	Plug		4213 247 49560
5	Filter assy	HD 4976 1.7 L	4213 263 34350
6	Filter	white 1.7 L	4213 248 40580
7	Scale collector		4213 240 11280
8	Filter basket	white	4213 248 40590
9	Latch spring		4213 240 11270
10	Lid spring		4213 240 11260
11	Latch actuator	vapour dusk	4213 247 49210
12	Release button	icicle blue	4213 247 49340
13	Handle cover	misty celadon	4213 247 49290
14	Light guide		4213 247 49250

Pos	Description		Service code
15	Switch lever		4213 263 30360
16	Lamp assy	220-240 V	4213 263 33620
	Lamp assy	110-120 V	4213 263 33660
17	Steam switch	Z5	4213 258 93880
18	Switch linkage	1.7 Litre	4213 247 49730
19	Switch actuator		4213 247 49240
20	Steamguide		4213 247 49230
21	Shield		4213 247 49670
22	Element cover	misty celadon	4213 247 49310
23	Base upper	icicle blue	4213 247 49350
24	Foot		4213 247 05250
25	Connector socket	CS4	4213 258 93380
26	Base lower	naturel	4213 247 48770