

Service  
Service  
Service



Philips Domestic Appliances and Personal Care

# Service Manual

## PRODUCT INFORMATION

Type	HP 735
Mains supply 120 Volt	x
200 - 240 Volt	x
Battery NiMh	x
NiCd	x
Charge indication light	x
Interval light	x
Oscillating brush head + active tip	x
Topography, colour v - shape	green
Variable speed	-
Speed	45/60 Hz
Container for 4 brushes	x
Wall holder facility	x

## SERVICE INFORMATION

### Hand unit tooth brush (1)

Never open the hand unit of the tooth brush, because the unit is not water tight anymore.  
Incase of a defect, the complete unit must be replaced.

### Charging unit (2)

Incase of a defective charging unit or cordset, the complete charging unit must be replaced.


## NOTES

When discarding the appliance, remove the built-in rechargeable battery.  
The battery should be completely empty of charge.

**This product meets the requirements regarding interference suppression on radio and TV.**



HP 735

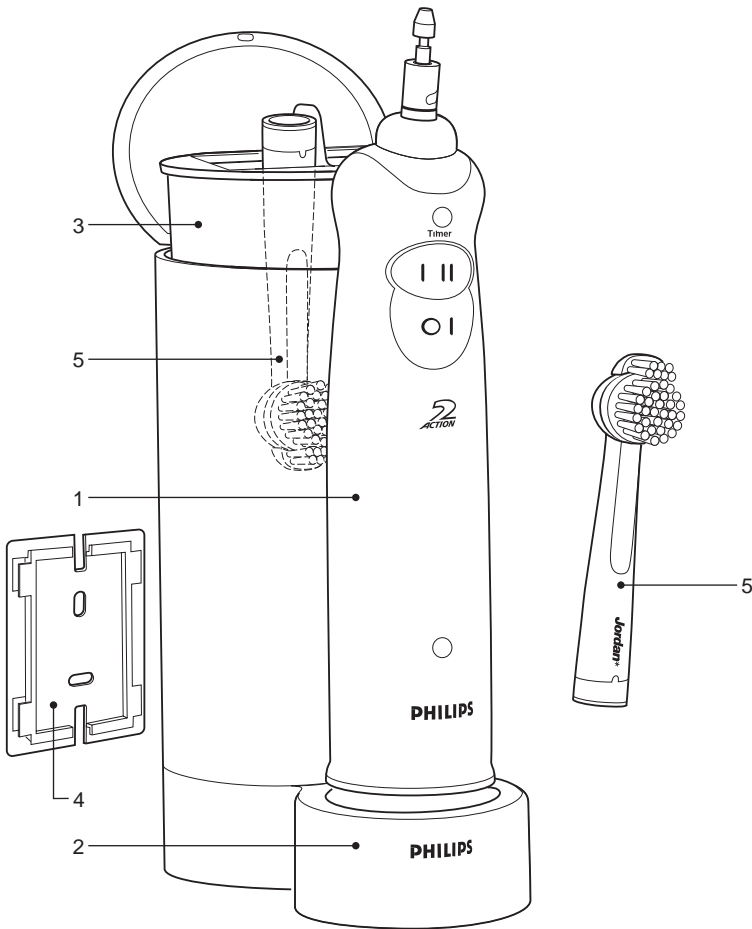

Pos	Description	Service code
I	hand unit tooth brush NiMh	4822 690 10142
I	hand unit tooth brush NiCd	4822 690 10143
2	charging unit 200-240 V, Euro plug	4822 219 10378
2	charging unit 220 V, Korean plug	4822 219 10379
2	charging unit 120 V, flat pin plug	4822 219 10381
2	charging unit 200-240 V, Australian plug	4822 219 10382
3	insert brushes container	4822 418 10296
4	wall bracket	4822 402 10872
5	set tooth brushes HP 790 / 2	4822 479 20218