HD 7612/6

SAP coding HD 7612/6





Philips Domestic Appliances and Personal Care

Manua

PRODUCT INFORMATION

Voltage : 230V Frequency 50 - 60Hz Power consumption: 1400W/850W Contents jug 1200 cc Coloursetting Black

SERVICE INFORMATION

Thermostat switch-off temp : 160°C (T1) Thermostat switch-off temp : 140°C (T2) Thermal fuse cut-off temp: 227°C

REPAIR INSTRUCTIONS

1. Electrical circuit


When the appliance does not work, check the electrical circuit. If the thermal fuse or thermostat prove defective. the complete pump unit has to be replaced.

2. De-scaling

If the water system is nearly or less clogged by scale then operate the coffeemaker a few times with vinegar or with a 10-15% solution of either vinegar-acid, citric acid or tartar-acid, into cold tap water.

Do not use other de-scaling agents as these may harm the appliance.

If this procedure does not restore the function, then switch off the coffeemaker when the acid has passed through during appr. 3 min. Keep the appliance in this condition overnight and continue/repeat the cleaning operation. After the de-scaling procedure, operate the coffeemaker twice with tap water in order to rinse away any residual substances.

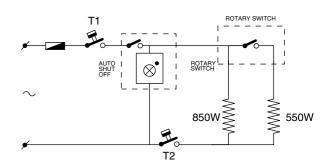

3. Pump unit removal

To separate the pump unit (item 24) from the hotplate unit (item 22), the two plastic snaps at place A have to be loosened. Then the pump unit can be lifted out easily.

4. Exchanging the switch unit

Remove the panel (11) by carefully pushing a small screwdriver into the chink at point A and moving it towards to point B (see exploded view). Do not damage the housing. If the panel has been damaged, get a new one.

5. Thermosjug handgrip removal (bajonet catch)

To separate the handgrip 18 from the metal jug, lift up the small cover B and unscrew the screw C. Then put a small screwdriver at place D. Lift up the handgrip and turn simultaneous the handgrip anti-clockwise 45°. Before (re)placing the handgrip, apply a drop of detergent to the sealing ring 19. This will make it easier to position the handgrip by pushing it downwards and rotating.


Published by Philips Domestic Appliances and Personal Care Printed in The Netherlands

©Copyright reserved Subject to modification

4322 277 00284 00/03





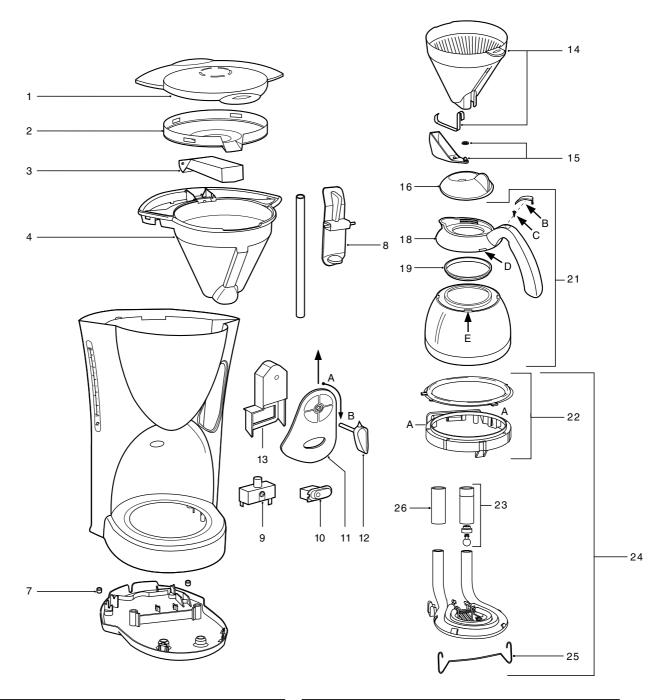

1	4822 442 01697	Tank lid	
2	4822 466 12151	Spout disc	
3	4822 529 10423	Spout	
4	4822 256 10543	Rim	
7	4822 462 40374	Stud	
8	4822 402 11252	Jug lever	salmon
9	4822 273 10332	Rota switch	
10	4822 276 13968	Aso switch	
11	4222 259 01020	Panel printed	
12	4822 410 11105	Rota button	
13 14 15 16 18		Switch casing Filterholder Drip stop assy Lid assy Carrier assy (pos.	18 + B + screw C)

19 48	822 532 12886	Sealing ring	
21 48	822 418 10411	Thermos jug assy	
22 42	222 259 01820	Hotplate unit therm	
23 48	822 360 50864	Valve hose assy	
24 42	222 259 29470	Pump 1400 W therm	
		•	
25 48	822 492 71174	Wire spring	
25 48	822 532 21371	Hose piece	
*** 42	222 001 77760	DFU	GBR, DEU, FRA, NLD
			ESP, PRT, ITA, TUR.
			ESP, PRI, IIA,

- 1) Optional part for use as an insert in item 5: 4822 480 50479 Permanent filter nylon
 4822 480 50402 Permanent filter gold coated
 2) Commercial trade number of the complete thermosjug
- is HD 7950