**HQ 304/A** 



**Domestic Appliances and Personal Care** 

## **HINTS FOR REPAIRS**


### DISASSEMBLY

- Remove the shaving unit, to prevent damages during repairs.
- Remove the batterieholder.
- Unlock the snaplocks from the tailpart.
- Lift the motor unit out of the housing.
- Loosen the motor clamp springs on the bearing. block of the motor with a small screwdriver.
- Unlock the peg-clamping 'Z' (2X) between frame (item 8) and hair chamber (item 5).
- To remove the trimmer, first disassemble the trimmer slide by pushing down the locking pegs 'V' (2X) and move slide slightly outwards.
- Maken room between trimmer and cover with a small screwdriver, to release the peg fastening 'Y'.

# **ASSEMBLY**

- The assembly must be carried out in the reverse order of what is discribed under Disassembly.
- When fitting the shaver it must be checked if wiring is correctly positioned.

SAP Coding HQ 304

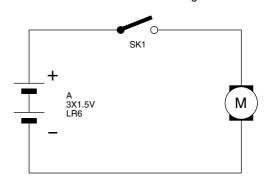

## **TECHNICAL DATA**

: 4.5V = Operating voltage

: 3X AA/LR6 battery Power supply Shaving heads : 2X HQ3 Comfort control : fixed setting Trimmer pop-up system

PRODUCTS MEETS THE REQUIREMENTS REGARDING INTERFERENCE SUPPRESION ON RADIO AND TELEVISION.

AFTER THE PRODUCT HAS BEEN REPAIRED IT SHOULD FUNCTION PROPERLY AND HAS TO MEET THE SAFETY REQUIREMENTS AS LAID DOWN OFFICIALLY ESTABLISHED AT THIS MOMENT.

Published by Philips Domestic Appliances and Personal Care

Printed in The Netherlands ©Copyright reserved

Subject to modification





