

MHC-DX30/RG40

SERVICE MANUAL

Ver 1.0 2001.05

US Model
Canadian Model
AEP Model
MHC-RG40
E Model
Australian Model
MHC-DX30

- MHC-DX30/RG40 are composed of following models.
As for the service manual, it is issued for each component model, then, please refer to them.

- Abbreviation
AR : Argentina model
AUS : Australian model
E2 : 120 V AC Area in E model
E51 : Chilean and peruvian model
KR : Korea model
MX : Mexican model
SP : Singapore model
TH : Thai model

COMPONENT MODEL NAME

	MHC-DX30	MHC-RG40
COMPACT DISK DECK	HCD-DX30	HCD-RG40
RECEIVER SYSTEM		
SPEAKER SYSTEM	SS-DX30	SS-RG40

PARTS LIST

Part No.	Description	Remark
ACCESSORIES & PACKING MATERIALS *****		
1-476-503-11	COMMANDER, STANDARD (RM-SR210) (DX30,RG40:AEP)	
1-476-512-11	COMMANDER, STANDARD(RM-SR210AU)	(RG40:US,Canadian)
1-501-374-11	ANTENNA, LOOP	
1-501-594-11	ANTENNA (FM) (RG40:AEP,DX30:KR)	
1-501-659-41	ANTENNA (FM)	(DX30:AUS,E2,E51,MX,SP,AR,TH,RG40:US,Canadian)
4-210-254-01	CUSHION (FOOT)	
4-223-953-01	COVER,BATTERY(FOR RM-SR210) (DX30,RG40:AEP)	
4-228-953-01	COVER,BATTERY(FOR RM-SR210AU) (RG40:US,Canadian)	
4-233-605-11	MANUAL, INSTRUCTION (ENGLISH) (RG40)	
4-233-605-21	MANUAL, INSTRUCTION (FRENCH) (RG40:Canadian)	
4-233-605-41	MANUAL, INSTRUCTION (FRENCH,SPANISH) (RG40:AEP)	
4-233-605-51	MANUAL, INSTRUCTION (GERMAN,DUTCH,ITALIAN,SWEDISH,POLISH) (RG40:AEP)	
4-234-236-11	MANUAL, INSTRUCTION (ENGLISH)	(DX30:AUS,E2,E51,SP,AR)
4-234-236-31	MANUAL, INSTRUCTION (SPANISH) (DX30:E51,MX)	
4-234-236-41	MANUAL, INSTRUCTION (FRENCH,SPANISH) (DX30:E2,SP)	
4-234-236-61	MANUAL, INSTRUCTION (CHINESE) (DX30:SP)	
4-234-236-71	MANUAL, INSTRUCTION (KOREAN) (DX30:KR)	
4-234-994-11	MANUAL, INSTRUCTION (THAI,ENGLISH) (DX30:TH)	

MINI Hi-Fi COMPONENT SYSTEM

9-873-150-01
2001E1600-1
© 2001.5

Sony Corporation
Home Audio Company
Shinagawa Tec Service Manual Production Group

SONY®

