

Service
Service
Service




Philips Domestic Appliances and Personal Care

Service Manual

SAP coding HD 4653/01

PRODUCT INFORMATION

| | |
|-------------------|-----------------------------|
| Voltage | : 110 V, 120 V, 220 - 240 V |
| Frequency | : 50 - 60 Hz |
| Power consumption | : 1500 W, 2000 - 2400 W |
| Coloursetting | : White / vapour dusk |
| Contents | : 100 - 1700 cc |

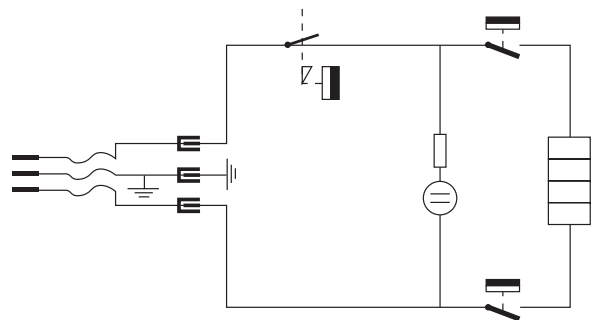

Descaling

Regular descaling will prolong the life of the appliance.

1. Fill the kettle with water up to three-quarters of the MAX capacity and bring the water to the boil.
2. After the appliance has switched off, add white vinegar (8%) to the MAX level.
3. Leave the solution in the kettle overnight.
4. Empty the kettle and rinse the inside thoroughly.
5. Fill the kettle with clean water and boil the water.
6. Empty the kettle and rinse it with clean water again.

Repeat this procedure if there is still some scale in the kettle.

Cleaning the filter

The triple-action filter can be cleaned as follows:

1. Remove the basket from the filter by sliding it.
2. Take the stainless steel mesh out of the basket and clean it by squeezing and rotating it under a running tap.

Repair instructions


To reach the components in the steamguide, the switch lever has to be pulled out with a little bit of force.

The best way to do that without damaging the switch lever is to use a pair of tongs with a soft rubber surface or to tape the switch lever.

This product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

HD 4653/01

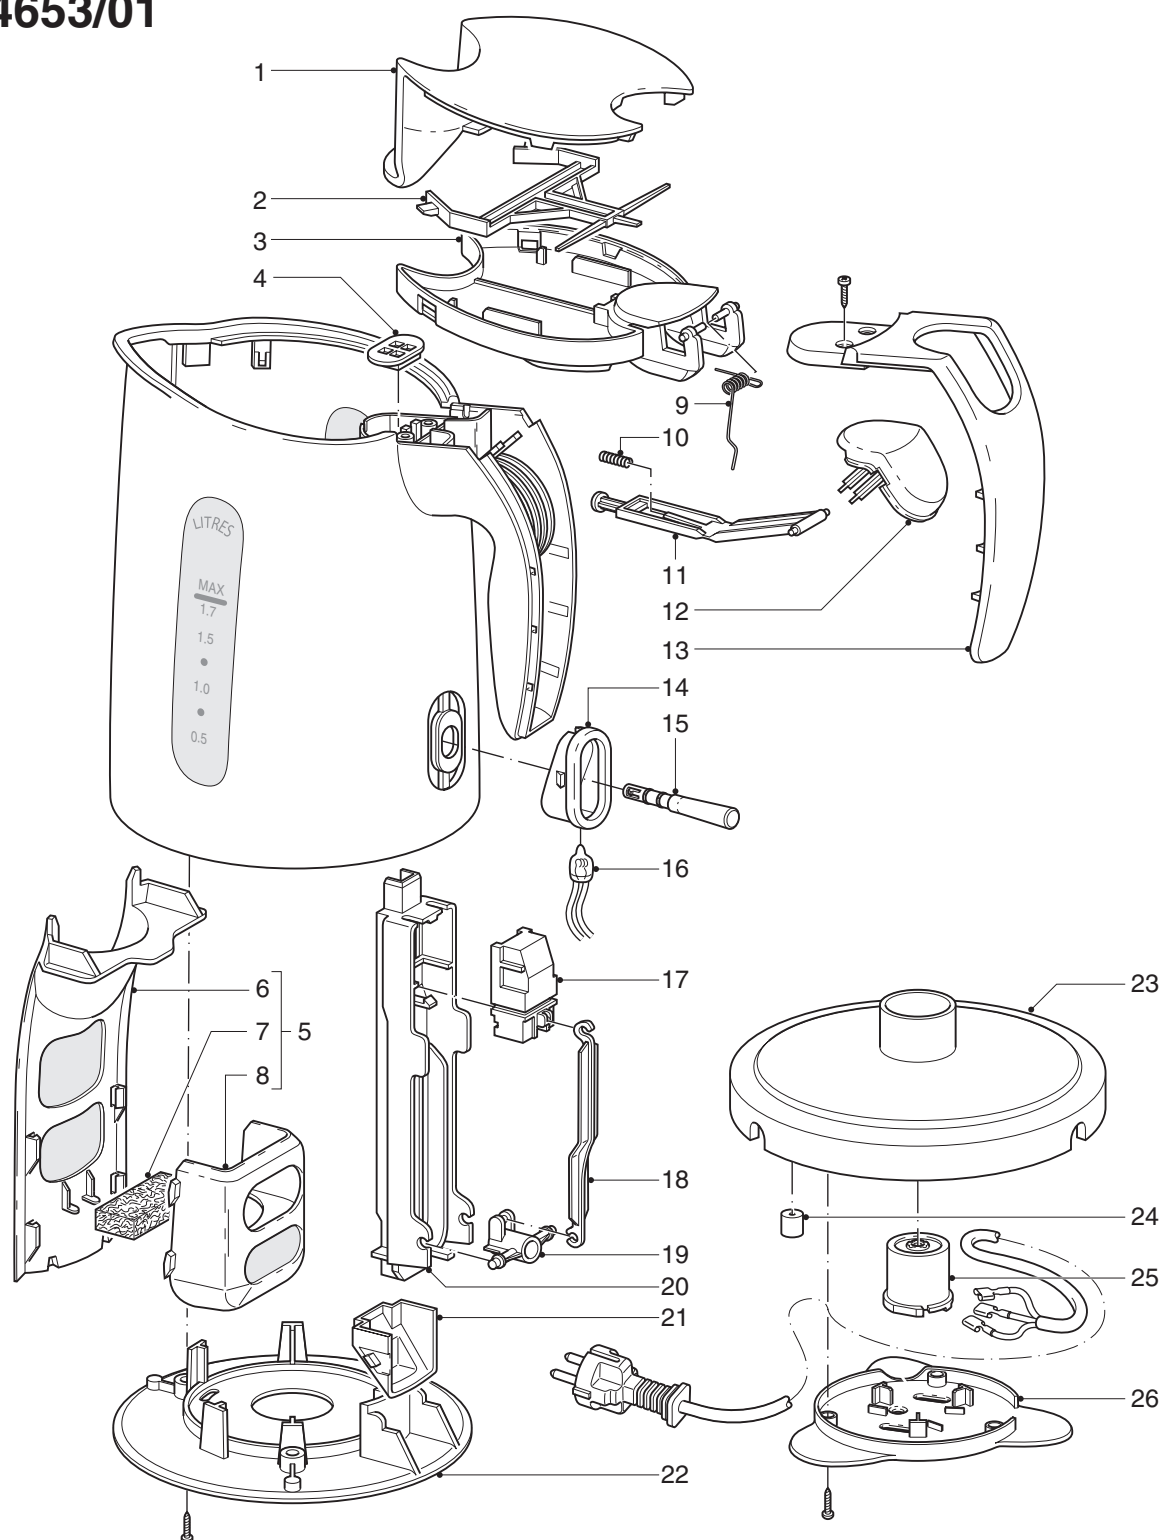

| Pos | Description | | Service code |
|-----|-----------------|---------------|----------------|
| 1 | Lid upper | vapour dusk | 4213 247 49180 |
| 2 | Lid latch | vapour dusk | 4213 247 49200 |
| 3 | Lid lower | white | 4213 247 49190 |
| 4 | Plug | | 4213 247 49560 |
| 5 | Filter assy | HD 4976 1.7 L | 4213 263 34350 |
| 6 | Filter | white 1.7 L | 4213 248 40580 |
| 7 | Scale collector | | 4213 240 11280 |
| 8 | Filter basket | white | 4213 248 40590 |
| 9 | Latch spring | | 4213 240 11270 |
| 10 | Lid spring | | 4213 240 11260 |
| 11 | Latch actuator | vapour dusk | 4213 247 49210 |
| 12 | Release button | vapour dusk | 4213 247 49220 |
| 13 | Handle cover | white | 4213 247 49150 |
| 14 | Light guide | | 4213 247 49250 |

| Pos | Description | | Service code |
|-----|------------------|-------------|----------------|
| 15 | Switch lever | | 4213 263 30360 |
| 16 | Lamp assy | 220-240 V | 4213 263 33620 |
| | Lamp assy | 110-120 V | 4213 263 33660 |
| 17 | Steam switch | Z5 | 4213 258 93880 |
| 18 | Switch linkage | 1.7 Litre | 4213 247 49730 |
| 19 | Switch actuator | | 4213 247 49240 |
| 20 | Steamguide | | 4213 247 49230 |
| 21 | Shield | | 4213 247 49670 |
| 22 | Element cover | white | 4213 247 49170 |
| 23 | Base upper | vapour dusk | 4213 247 49260 |
| 24 | Foot | | 4213 247 05250 |
| 25 | Connector socket | CS4 | 4213 258 93380 |
| 26 | Base lower | naturel | 4213 247 48770 |