



Philips Domestic Appliances and Personal Care

Service Manual 4322 277 00211 is herewith cancelled

Service Manual

PRODUCT INFORMATION

	Battery type	Color setting	Operation time (fully charged)
HR 6062/A	NiCd	Pale green / thistel	>9 minutes
HR 6062/B	NiCd	Pale gray / lilac	>9 minutes
HR 6063/A	NiMH	Pale green / thistel	>12 minutes
HR 6063/B	NiMH	Pale gray / lilac	>12 minutes

TECHNICAL SPECIFICATION

Transformer AC / AC	: 230V / 7V AC
Rechargeable batteries	: 3 x 1.2V
Charge indicator	: LED
Dust capacitor	: 0.3 Liter
Weight	: 0.75 kg
Dimensions	: 16.7 x 11.2 x 40.4 cm
Cord length	: 1.8 m


SERVICE INFORMATION

- The dust container and wall holder are all interchangeable for all versions, only with color difference.
- Washable permanent filter is available under type number HR6918.
- The rechargeable batteries contained substances, which may pollute the environment. Dispose unused cells at especially assigned places.
- If a repair has been executed, ensure that all the functions of the appliance are working correctly.

This product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

HR 6062/A
HR 6062/B
HR 6063/A
HR 6063/B

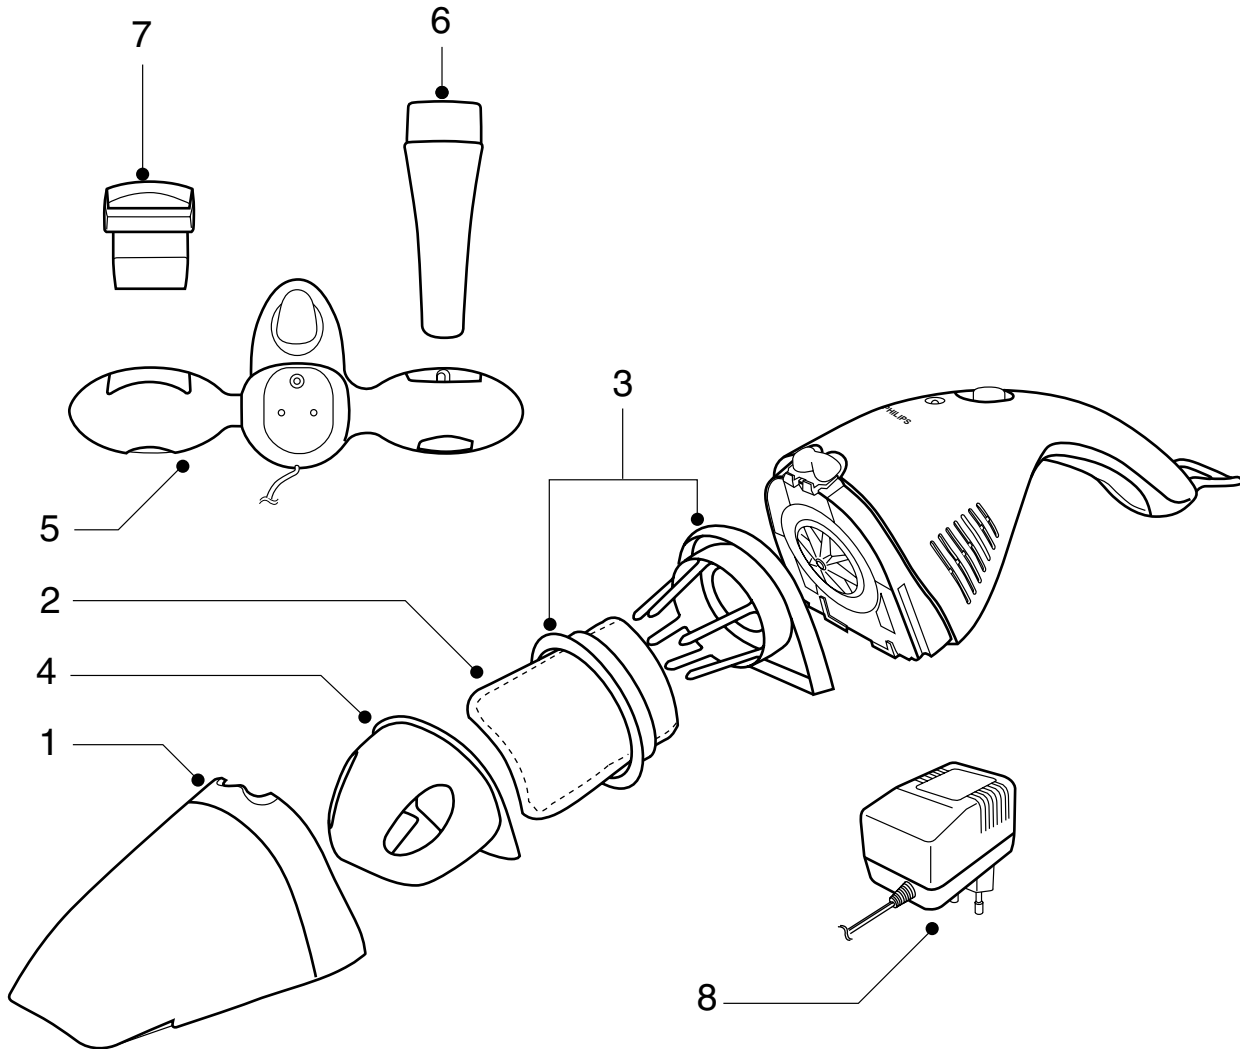

Item	Description		Service
1	Dust container	HR 606X/A	9965 000 04832
	Dust container	HR 606X/B	9965 000 04833
2	Dust bag	HR 6918	9965 000 06729
3	Filter holder assy		9965 000 04826
4	Deflector		9965 000 04834
5	Wall holder	HR 606X/A	9965 000 04835
	Wall holder	HR 606X/B	9965 000 04836
6	Extension tube	HR 606X/A	9965 000 04837
	Extension tube	HR 606X/B	9965 000 04831
7	Squeegee	HR 606X/A	9965 000 04838
	Squeegee	HR 606X/B	9965 000 04839
8	Adapter 230V EU		9965 000 04829