

Service  
Service  
Service



Philips Domestic Appliances and Personal Care

# Service Manual

## PRODUCT INFORMATION

Type	HP 610
Mains supply 120 Volt	x
200 - 240 Volt	x
Battery NiMh	x
NiCd	x
Oscillating brush head + active tip	x
Topography, colour v - shape	green
Speed	60 Hz
Wall holder facility	x

## SERVICE INFORMATION

### Hand unit tooth brush (1)

Never open the hand unit of the tooth brush, because the unit is not water tight anymore.

Incase of a defect, the complete unit must be replaced.

### Charging unit (2)

Incase of a defective charging unit or cordset, the complete charging unit must be replaced.

### NOTES


When discarding the appliance, remove the built-in rechargeable battery.

The battery should be completely empty of charge.

**This product meets the requirements regarding interference suppression on radio and TV.**



## HP 610

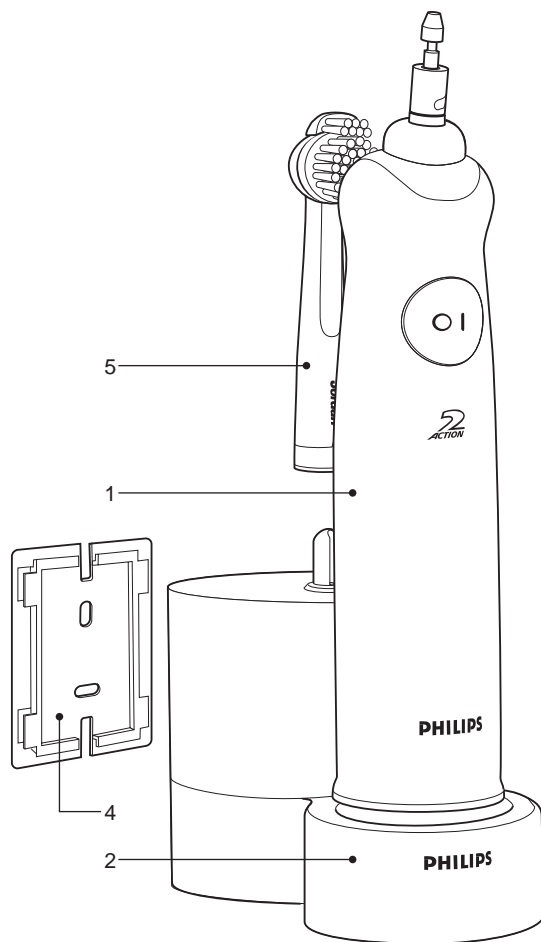

Pos	Description	Service code
1	hand unit tooth brush NiMh HP 610	4822 690 10196
1	hand unit tooth brush NiCd HP 610	4822 690 10195
2	charging unit 200-240 V, Euro plug	4822 219 10374
2	charging unit 220 V, Korean plug	4822 219 10375
2	charging unit 120 V, flat pin plug	4822 219 10376
2	charging unit 200-240 V, Australian plug	4822 219 10377
4	wall bracket	4822 402 10872
5	set tooth brushes HP 790	4822 479 20218