

Service
Service
Service




Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

SAP coding HD 4673/5

Voltage : 220-240V
Frequency : 50-60 Hz
Power consumption : 3100W
Coloursetting : marine blue
Contents : 100-1600 cc

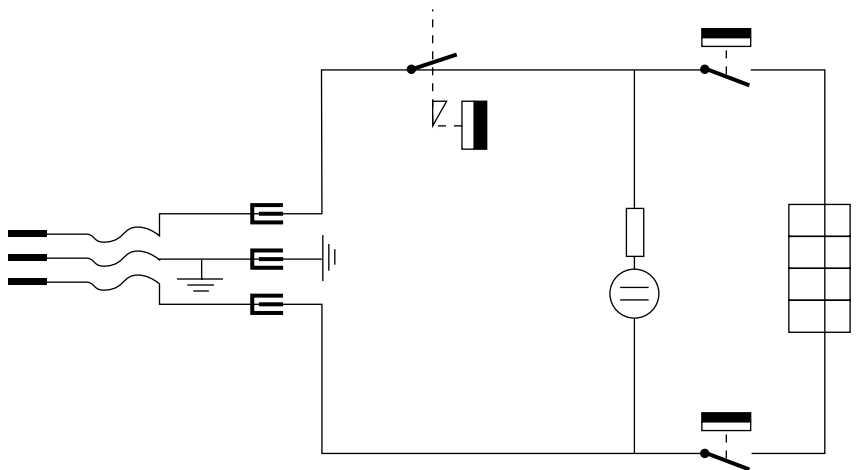


DESCALING

Regular descaling will prolong the life of the appliance.
When you descale the kettle, you can also descale the filter at the same time by simply leaving it in the appliance.

1. Fill the kettle with water up to three-quarters of the MAX capacity and bring the water to the boil.
 2. After the appliance has switched off, add white vinegar (8%) to the MAX level.
 3. Leave the solution in the kettle overnight.
 4. Empty the kettle and rinse the inside thoroughly.
 5. Fill the kettle with clean water and boil the water.
 6. Empty the kettle and rinse it with clean water again.
- Repeat this procedure if there is still some scale in the kettle.



HD 4673/5

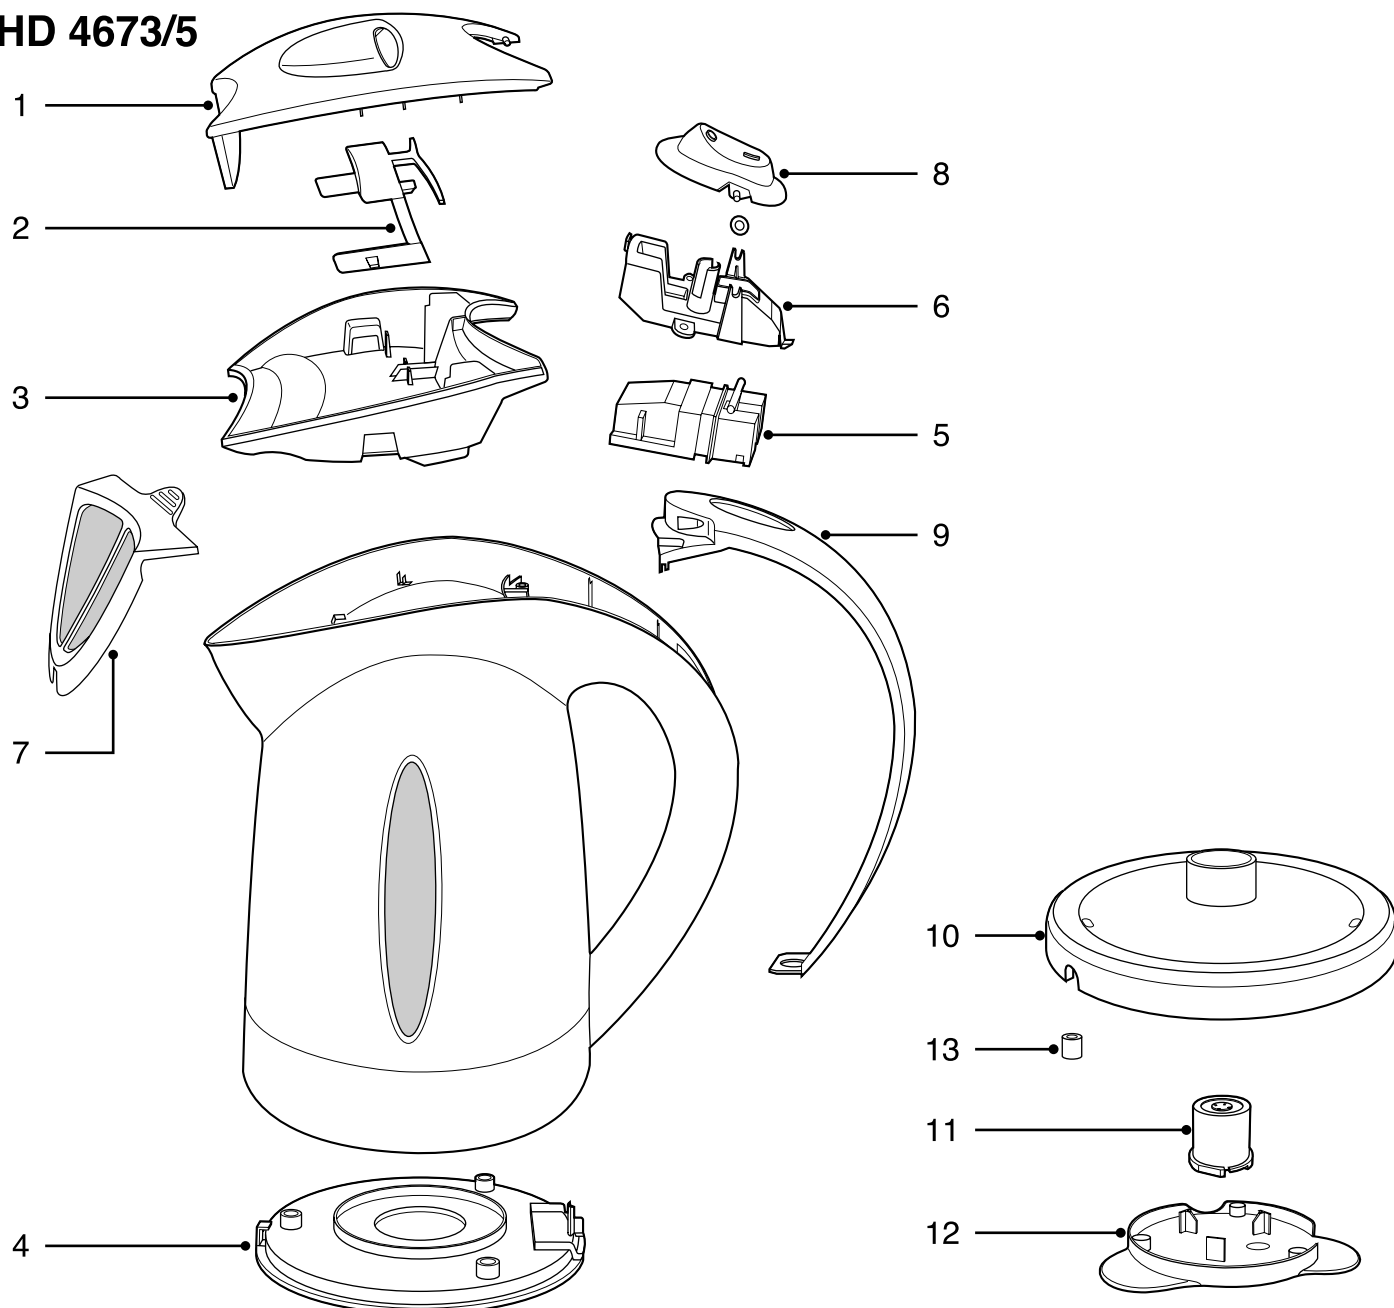

Parlist from the HD 4673/5			
Pos:	Description:		Service code:
1	Lid upper	marine blue	4213 247 48610
2*	Lid latch	pearl blue	4213 247 48050
3*	Lid lower	ivory	4213 247 48060
4*	Element cover	ivory	4213 247 48030
5	Control Z5		4822 214 12411
6	Steam guide		4213 247 48070
7	Filter	white	4822 441 40495
8*	Switch actuator	pearl blue	4213 247 48080
9	Handle cover	marine blue	4213 247 48650
10*	Base upper	zinc brown	4213 247 48100
11	Connector socket		4822 532 21517
12	Base lower	naturel	4213 247 48770
13	Foot		4822 441 80831
* these parts are not available in the right colour			