 


EXECUTIVE SLIM AUDIO SYSTEM



FISHER Digital Slim-1400

**PLEASE READ THIS MANUAL THOROUGHLY BEFORE
OPERATING THE UNIT.
RETAIN IT FOR FUTURE REFERENCE.**

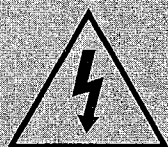

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

**WARNING - TO REDUCE THE RISK OF FIRE OR
ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO
RAIN OR MOISTURE.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE
BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

**USE OF CONTROLS OR ADJUSTMENTS OR
PERFORMANCE OF PROCEDURES OTHER THAN
THOSE SPECIFIED MAY RESULT IN HAZARDOUS
RADIATION EXPOSURE.**

THE APPARATUS SHALL NOT BE EXPOSED TO
DRIPPING OR SPLASHING.

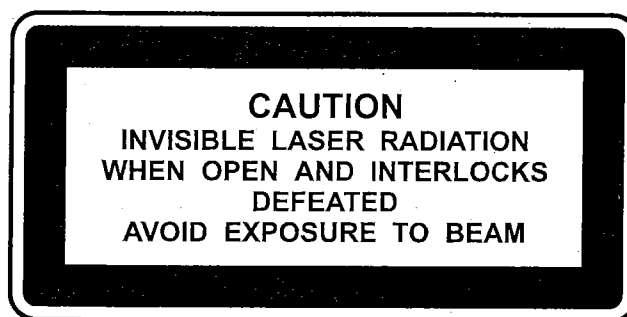

CARE AND MAINTENANCE

1. *Turn off the unit before changing batteries or plug in the AC jack to the unit.*
2. *Fresh batteries are recommended to be used.*
3. *Avoid leaving unit in direct sunlight or in hot, humid or dusty places.*
4. *Keep the unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.*

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CAUTION: *Danger of explosion if battery is incorrectly replaced.
Replace only with same or equivalent type.*

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) *This device may not cause harmful interference, and*
- (2) *This device must accept any interference received, including interference that may cause undesired operation.*

IMPORTANT SAFETY INSTRUCTIONS

 
1. *Read Instructions - All the safety and operating instructions should be read before the product is operated.*
2. *Retain Instructions - The safety and operating instructions should be retained for future reference.*
3. *Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.*
4. *Follow Instructions - All operating and use instructions should be followed.*
5. *Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.*
6. *Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.*
7. *Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.*
8. *Accessories - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.*
9. *A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.*
10. *Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.*

11. *Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.*
12. *Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.*

Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
13. *Power- Cord Protection - Power-supply cords should be routed so that are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.*
14. *Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.*
15. *Outdoor Antenna Grounding - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure.*

grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE, ANSI/NFPA 70

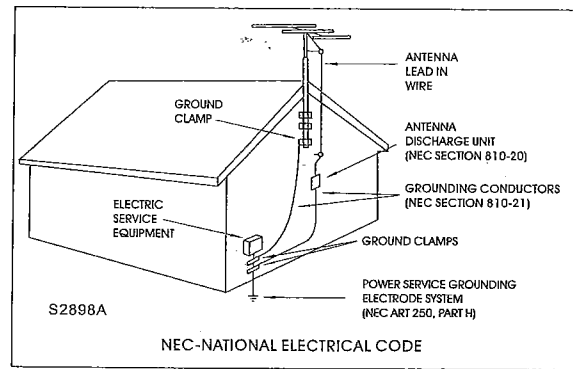

16. *Lightning* - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. *Power Lines* - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. *Overloading* - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. *Object and Liquid Entry* - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. *Servicing* - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. *Damage Requiring Service* - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,

 
- b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. *Replacement Parts* - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. *Safety Check* - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. *Wall or Ceiling Mounting* - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. *Heat* - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

FEATURE


1. Motorized CD DOOR
2. AM/FM PLL RADIO WITH TOTAL 20 PRESET STATIONS
3. DIGITAL VOLUME CONTROL
4. PROGRAMMABLE ALARM WAKE TO SELECTED CD TRACK / RADIO / BUZZER
5. MULTI-CLOCK WITH CALENDAR AND ALARM FUNCTION
6. TEMPERATURE FUNCTION
7. SLEEP FUNCTION
8. REMOTE CONTROL OPERATION
9. LCD WITH BACKLIGHT
10. AUTOMATIC POWER OFF AFTER CD IS STOP OVER HALF MINUTE

INSTALLATION


1. Installation of speaker
 - a) Connect speaker cable to speaker jack of main unit.
 - b) The wire with black stripe should connect to black terminal of the speaker jack.
 - c) The speaker stand can be set up with 2 directions.
2. Make sure the power cord is securely firmed into the AC outlet.
3. Remove the insulated plate in the backup battery compartment.
4. Wall mounting - remove the stands from the main unit and both speakers.

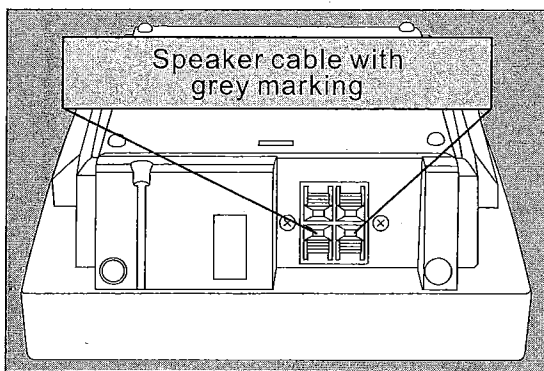


Insert main unit stand to the rear of main unit

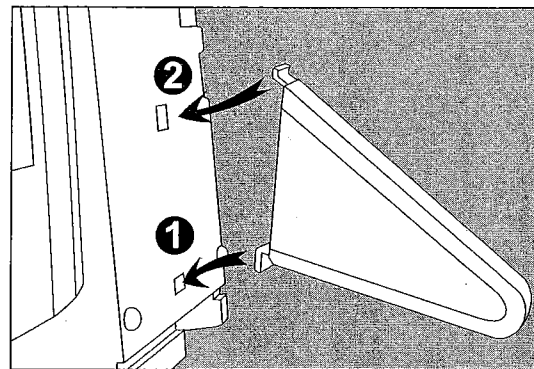

 
Insert speaker stand to the bottom of speaker box

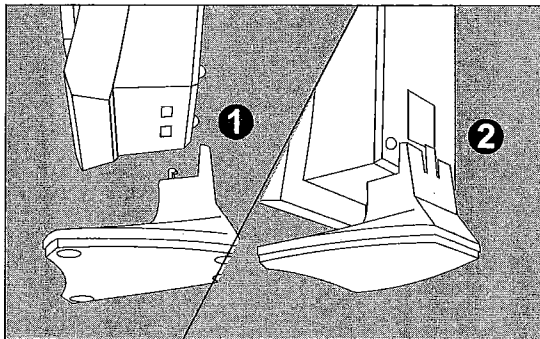


Two directions of the speaker

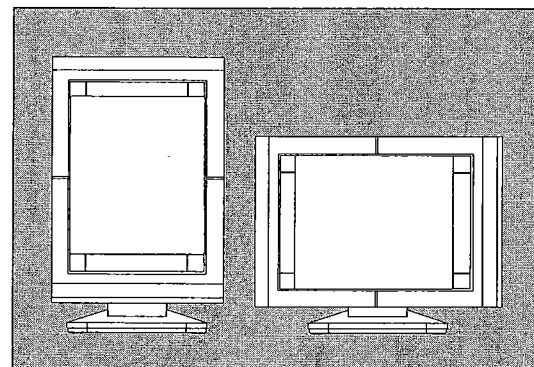 



 
Remove insulated plate before use (remote control)

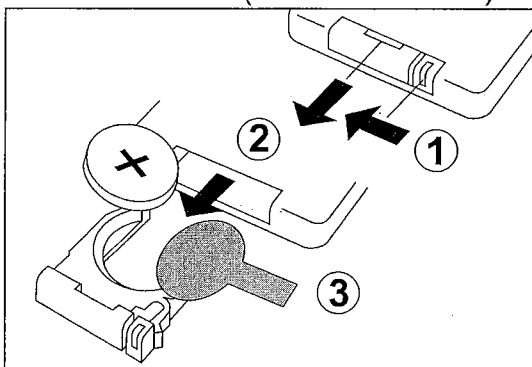

 Remove insulated plate before use (Main unit)

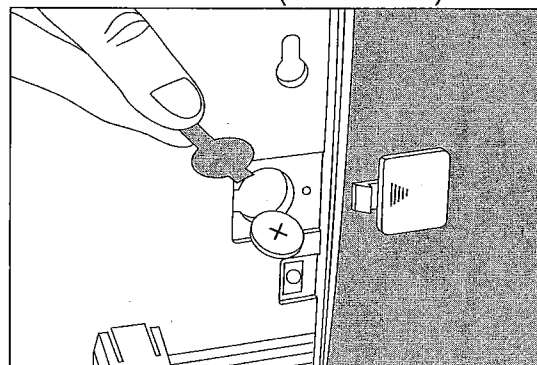

DESCRIPTION OF PARTS

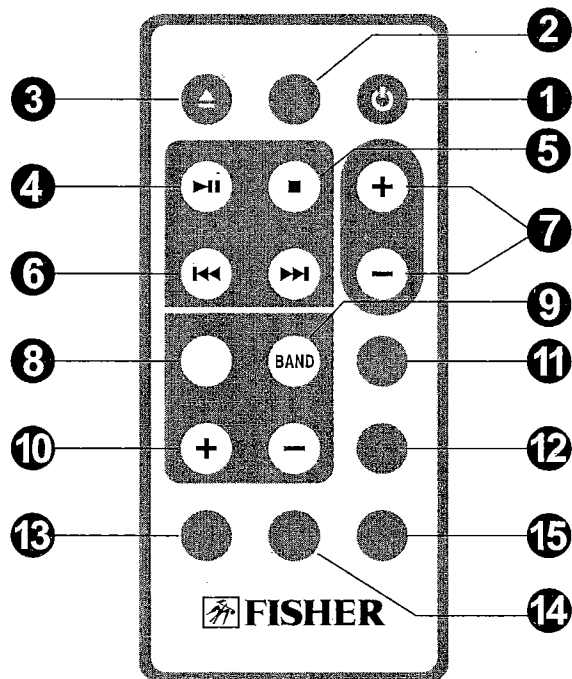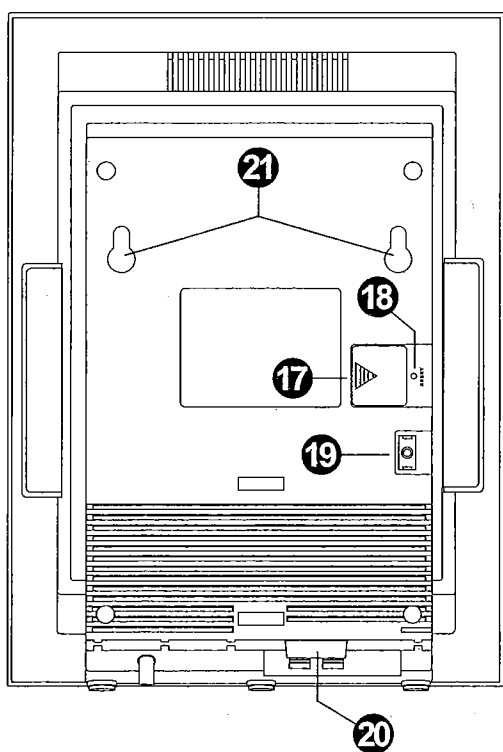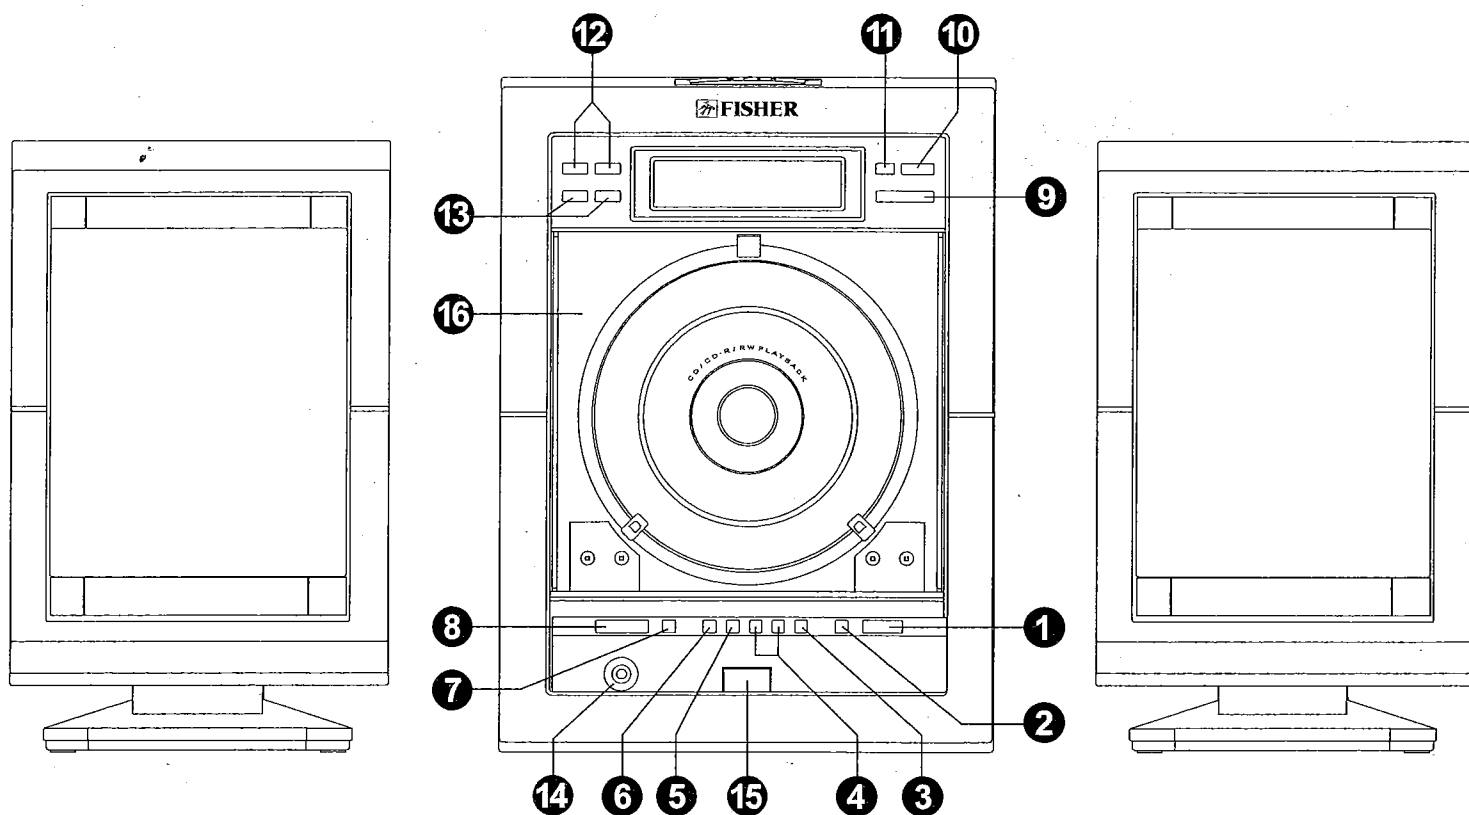   

1. **POWER** button - turn on / off the unit
2. **SLEEP** button - control period of power off
3. **RADIO / BAND** button - power on radio or select radio band
4. **CHANNEL** button - select radio preset station
5. **MEMORY / PROGRAM** button - save radio preset station / enter CD program mode / save setting
6. **MODE** button - enter setting mode
7. **ALM ON/OFF** - turn on/off the alarm
8. **SNOOZE / LIGHT** button - enter snooze mode / turn on display backlight / exit the setting mode
9. **CD PLAY PAUSE** button - to play / to pause / resume CD playback / turn on CD playback
10. **STOP** button - to stop CD playback / turn off CD playback
11. **PLAY MODE** button - CD play mode setting
12. **RADIO TUNNING, CD SKIP / SEARCH** button - tune into a radio station / CD searching
13. **VOLUME** button - adjust volume level up or down
14. **PHONES JACK** - connect a headphone for private listening
15. **REMOTE SENSOR**
16. **CD DOOR** - load & eject CD
17. **BACKUP BATTERY COMPARTMENT** - backup real time clock memory and setting
18. **RESET** button - reset the unit
19. **EXT. FM ANTENNA CONNECTION TERMINAL** - enhance FM reception strength
20. **SPEAKER JACK** - connect the speaker wire
21. **WALL MOUNTING HOLE** - mount the unit on wall

 
REMOTE CONTROL

1. **POWER** button - turn on / off the unit
2. **SLEEP** button - control period of power off
3. **OPEN** button - open / close the CD door
4. **CD PLAY PAUSE** button - to play / to pause / resume CD playback / turn on CD playback
5. **STOP** button - to stop CD playback / turn off the CD playback
6. (**⏮** **⏭**) button - CD searching
7. **+ VOL-** button - adjust volume level up or down
8. **RADIO** button - turn on the radio
9. **BAND** button - select radio band
10. **PRESET**+/- button - select the preset radio channel
11. **MUTE** button - mute volume of the unit
12. **DISPLAY** button - show temperature or date on the display
13. **ALM ON/OFF** button - turn on/off the alarm
14. **SNOOZE / LIGHT** button - enter snooze mode / turn on display backlight / exit the setting mode
15. **MODE** button - enter setting mode

LISTENING TO RADIO

EXTERNAL ANTENNA

Use a screwdriver to attach the antenna to the connector at the back of the unit. Reception quality relies on the length of the antenna from the base of the unit to the floor. The greater the distance, the stronger the reception quality.

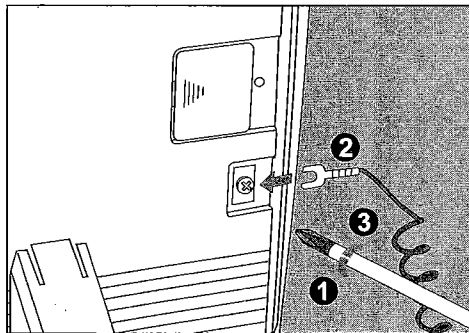

RADIO OPERATION

1. Press the **RADIO / BAND** button to activate the radio.
2. If necessary press the **RADIO / BAND** button again to select AM or FM band.
3. Press the **TUNING** **⏮** or **⏭** buttons to tune to desired station.

● **Automatic Tuning :**

Press and hold the **TUNING** ◀◀ or ▶▶ buttons until the display starts to scan, and then release the button.

The Tuner will stop on the first strong station it finds.

Repeat this procedure until the desired frequency appears in the display.

● **Manual Tuning :**

Repeatedly press the **TUNING** ◀◀ or ▶▶ buttons to manually move the display up or down until you reach the frequency of the desired station.

NOTES :

- A. Use manual tuning to select weaker stations that might be bypassed during automatic tuning.
- B. If the automatic tuning does not stop on the exact frequency of the station, for example it stops on 100.85 MHz instead of 100.8 MHz, use the manual tuning method to "fine tune" to the exact frequency of the desired station.

PRESET RADIO STATIONS

The unit allows you to store up to 10 AM and 10 FM stations in the tuner preset memories for easy recall at any time.

1. Press the **RADIO / BAND** button to activate the radio.
2. If necessary press the **RADIO / BAND** button again to select AM or FM band.
3. Tune to desired radio station using ◀◀ or ▶▶ buttons.
4. Press the memory **MEM / PGM** button once, preset channel number 01 will appear on display.
5. Use **CH+** or **CH-** buttons to select desired preset channel number.
6. Press **MEM / PGM** button again to confirm storage of setting.

9k / 10kHz SETTING


In case the unit is moved to different country with slightly different AM (MW) broadcast system, the unit allows you to select either 9kHz or 10kHz per tuning step.

1. Press **MODE** button 7 times.
2. Press ◀◀ or ▶▶ to select 9kHz or 10kHz per step of AM(MW) band.
3. Press **MEM / PGM** button to store setting.

LISTENING TO CD

LOADING A CD

1. Press the **POWER** button.
2. Touch the **OPEN** button, the CD door will open automatically.
3. Put a CD, printed side facing down, on the CD door as diagram shown.
4. Touch the **OPEN** button to close the CD door.

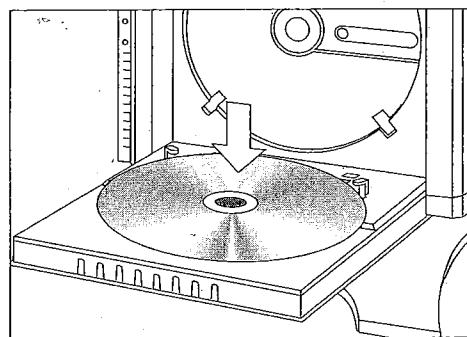

PLAYBACK CD

1. Press **PLAY / PAUSE** button to start playback.
2. Adjust the sound level using **VOLUME** button.

PAUSE CD

1. Press **PLAY / PAUSE** button pause / resume CD playback.
2. Press **STOP** button to stop CD playback.
3. Press **STOP** button again to turn off the unit.

SKIP / SEARCH FUNCTION

Press ◀◀ or ▶▶ to skip to desired CD track. Press and hold ◀◀ or ▶▶ for backward or forward search.

PLAY MODE

a) Repeat Play:

Press **PLAY MODE** button once. " (1) " will appear for repeat playback of one track. Press **PLAY MODE** button twice, " (ALL) " will appear for repeat playback of the whole disc.

b) Intro Play, playback the 1st 10 seconds of each track of the disc:

Press **PLAY MODE** button three times, then " **INTRO** " IS DISPLAYED. Press **PLAY/PAUSE** button, then starts INTRO play from track number 1.

c) Random Play:

Press **PLAY MODE** button four times, then " **RND** " is displayed. Press **PLAY/PAUSE** button, then the track number is selected at random and starts playback.

PROGRAM PLAYBACK

This feature allows you to program tracks that you would like to hear them (up to total 20 tracks for each disc).

1. When CD stop playback, press **MEM / PGM** button once. " **PGM** " and " 00 " (track number) indicators on display flash.
2. Press ◀◀ or ▶▶ button to select track number.

3. When desired track number is displayed, press **MEM / PGM** button to register. Track number " 00 " indicator flashes on display again.
4. Repeat steps (2) & (3) above until all desired (or up to 20) tracks had been entered.
5. Press **PLAY / PAUSE** (► II) button. " PGM " indicator stops flashing and CD starts program playback.

NOTE :

If you press the ◀◀ and ▶▶ buttons during programmed playback, the unit will skip forward to the next track in the program, not necessary the next track on the disc.

a) PGM repeat 1 track:

During PGM playback, press **PLAY MODE** button once.

Unit will repeatedly playback current PGM track, " PGM " & " (1) " indicators displayed.

b) Repeat playback ALL programmed track(s):

During PGM playback, press **PLAY MODE** button twice.

Unit will repeatedly playback all programmed tracks, " PGM " & " (ALL) " indicators displayed.

c) Playback INTRO of programmed track(s) :

During PGM playback, press **PLAY MODE** button 3 times, " INTRO " indicator flashes.

Press **PLAY / PAUSE** (► II) button playback the 1st 10 seconds of each programmed track, " PGM " & " INTRO " indicators displayed.

To cancel Playback / all Repeat modes at any time simply press the **STOP** (■) button.

C L O C K S E T T I N G

SETTING TIME

1. Press **MODE** button 3 times, the display will flash.
2. Press button ◀◀ or ▶▶ to set advance or reverse the hour.
3. Press button **VOL-** or **VOL+** to set advance or reverse the minute.
4. Press **MODE** button again to enter 12/24 hour format setting.
5. Use ◀◀ ▶▶ to select 12 or 24 hour format.
6. Press **MEM / PGM** button to save entries or just wait for around 15 seconds to exit setting mode.

SETTING YEAR & TEMPERATURE

1. Press **MODE** button 5 times, the year & temp display will flash.
2. Press button ◀◀ or ▶▶ to set advance or reverse the year.
3. Press button **VOL-** or **VOL+** to select temperature unit °C or °F.
4. Press **MEM / PGM** button to save entries or just wait for around 15 seconds to exit setting mode.

SETTING MONTH & DATE

1. Press **MODE** button 6 times, the month / date display will flash.
2. Press button ◀◀ or ▶▶ to set advance or reverse the month.
3. Press button **VOL-** or **VOL+** to set advance or reverse the date.
4. Press **MEM / PGM** button to save entries or just wait for around 15 seconds to exit setting mode.

A L A R M C L O C K S E T T I N G

SETTING ALARM

1. Press **MODE** button once, and the display will flash.
2. Press button ◀◀ or ▶▶ to advance or reverse the hour.
3. Press button **VOL-** or **VOL+** to set advance or reverse the minute.
4. Press **MODE** button again and the alarm sound icon will flash.
5. Press **VOL-** or **VOL+** to select the alarm sound, source(**BUZZER**, **RADIO** or **CD**).

When alarm to CD is selected, use ◀◀ or ▶▶ buttons to select desired CD alarm track.

NOTE: Make sure a CD is loaded in the unit.

6. Press **MEM / PGM** button to save entries or just wait for around 15 seconds to exit setting mode.
7. Press the **ALM ON/OFF** button to switch on the daily alarm, a " 🔔 " icon will appear on the display.

ALARM TO BUZZER

- An increasingly louder buzzer sound will alarm for one minute.
- After the first alarm minute, it goes into Auto Snooze mode. It stops for around 9 minutes and then comes on again. This operation will be repeated 3 times. After the fourth time the alarm shuts off until the next day.
- You may also activate the Snooze function manually after the alarm sounds by pressing the **SNOOZE** button or **SNZ** button on the remote control.

The buzzer stops for around 9 minutes and then comes on again. This operation can be repeated 3 times. After the fourth time the alarm shuts off until the next day.

- After the buzzer sounds you may also press the **ALM ON / OFF** button to stop it immediately.
It will reset itself for the following day.

ALARM TO RADIO

- At the desired wake up time the radio turns " ON ". It starts softly and gradually becomes louder.
- It will play for 15 minutes and then shuts off and resets itself for the following day.
- Within the first TWO minutes you may press the **SNOOZE** button or **SNZ** button on the remote control to activate the snooze function. The radio stops for around 9 minutes and then turns " ON " again. This manual snooze operation may be repeated a total of 3 times. Each time the radio turns " ON ", it will play for 15 minutes (without pressing the **SNOOZE** button).
- After the radio sounds you may also press the **ALM ON / OFF** button to stop it immediately.
It will reset itself for the following day.

ALARM TO CD

- At the desired wake up time the CD playback. It starts softly and gradually becomes louder.
- It will playback for 15 minutes (or up to end of the disc, depends on which one comes first) and then shuts off and resets itself for the following day.
- Within the 1st TWO minutes you may press the **SNOOZE** button or **SNZ** button on the remote control to activate the snooze function. The CD stops for around 9 minutes and then turns " ON " again. This manual snooze operation may be repeated a total of 3 times.

- During the CD playback you may also press the **ALM ON / OFF** button to stop it immediately.
It will reset itself for the following day.

SLEEP TIMER OPERATION

You can use the Sleep Timer to shut the system off automatically while you fall asleep to the radio or the CD player.

1. Press **POWER** button to turn on the unit.
2. Load the desired CD in the player or tune to the desired radio station.
3. Press **SLEEP** button 1, 2, 3 or 4 times to select 15, 30, 45 or 60 minutes of Sleep Timer operation.

The unit will play for the amount of time you selected and then shuts " off " automatically.

If a desired radio station had been tuned or the desired CD is loaded in the player and the unit is in power " OFF " mode.

You can just simply press the **SLEEP** button to activate the Sleep Timer of the unit.

4. To shut the unit " OFF " sooner press the **POWER** button at any time.

NOTE :

If you choose " Sleep to CD " function the unit will only continue until the end of the disc and then shuts " OFF " automatically.

For example, if your disc is only 30 minutes long and 45 minutes of sleep time selected, the unit will shut off approximately 30 seconds after the disc ends.

CARE AND MAINTENANCE


RESET BUTTON:

If the unit is subjected to a severe power surge or electric shock, it is possible that the internal microcontroller may " **LOCK UP** " and the unit will not respond to any commands from the front panel controls or remote control.

1. Plug the AC power cord into AC outlet.
2. Using a straightened paper clip, toothpick, or similar object press **RESET** button located inside the pinhole at the rear side of the unit.

Caution : DO NOT use a sharp end object to press the **RESET** button, it may damage the reset switch inside the unit.

Note : **RESET** operation will clear the system memory and all of your previous settings will be cleared.

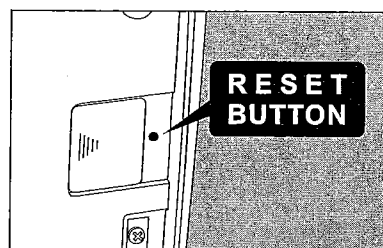

TROUBLESHOOTING GUIDE :

Should this unit exhibit a problem, check the following before seeking service.

Symptom	Possible Cause	Solution
General		
No operation	Subject to a severe power surge or electric shock.	Plug the AC power cord into AC outlet. Press RESET button to reset unit.
Radio		
Noise or sound distorted on AM(MW) or FM broadcasts.	Station is not tuned properly for AM or FM.	Retune the AM or FM broadcast station
	FM: Wire antenna is not extended.	Extend FM wire antenna.
	AM: The bar antenna is not positioned correctly.	Reposition the unit until best reception is obtained.
AM(MW) or FM, no sound.	AM or FM mode is not selected.	Press BAND key to select AM or FM.
	Volume at minimum level.	Increase Volume level.
Compact Disc Player		
CD Player will not play.	CD mode is not selected.	Press ▶ (PLAY/PAUSE) button to select CD.
	CD is not installed or installed incorrectly.	Place the CD on inner CD door, printed side facing down.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.

S P E C I F I C A T I O N S

POWER SUPPLY

AC 120V / 60Hz
Remote control Battery CR 2032 (included)
Main unit Memory Battery CR 2032 (included)

FREQUENCY RANGE

AM 520 - 1710 kHz
FM 87.5 - 107.9 MHz

The specification and external appearance of this set are subject to change without prior notice.



Bij dit produkt zijn
batterijen geleverd.
Wanneer deze leeg
zijn, moet u ze niet
weggoien, maar
inleveren als KCA³⁾



WARRANTY

FISHER MICRO AUDIO SYSTEM • MODEL SLIM-1400 LIMITED WARRANTY

OBLIGATIONS

In order to obtain factory warranty service, call the toll-free number below. The unit must be packed in the original carton or a well padded sturdy carton in order to avoid shipping damage. **Note:** Do not return this unit to the retail store for service.

To obtain factory warranty service, product operation or problem resolution, call

FACTORY SERVICE 1-800-421-6382
Weekdays 8:00 AM-5:00 PM Pacific Time

LABOR	PARTS
90 DAYS	90 DAYS

THIS WARRANTY IS VALID ONLY ON FISHER PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA.

THIS WARRANTY APPLIES ONLY TO THE ORIGINAL RETAIL USER, AND DOES NOT APPLY TO PRODUCTS USED FOR ANY INDUSTRIAL, PROFESSIONAL OR COMMERCIAL PURPOSE, THE ORIGINAL DATED BILL OF SALE OR SALES SLIP MUST BE SUBMITTED TO THE SFS LOCATION AT THE TIME WARRANTY SERVICE IS REQUESTED.

Subject to the OBLIGATIONS above and EXCLUSIONS below, SANYO FISHER COMPANY (SFC) warrants this FISHER product against defects in materials and workmanship for the periods of LABOR and PARTS specified below. SFC will repair or replace (at its option) the product and any of its parts which fail to conform to this warranty with new or reconditioned products or parts. The warranty period commences on the date the product was first purchased at retail.

EXCLUSIONS

This warranty does not cover (A) the adjustment of customer-operated controls as explained in the appropriate model's instruction manual, or (B) the repair of any product whose serial number has been altered, defaced or removed.

This warranty shall not apply to the cabinet or cosmetic parts, antenna, knobs, batteries or routine maintenance.

This warranty does not apply to uncrating, setup, installation, removal of the product for repair or reinstallation of the product after repair.

This warranty does not apply to repairs or replacements necessitated by any cause beyond the control of SFC including, but not limited to, any malfunction, defect or failure caused by or resulting from unauthorized service or parts, improper maintenance, operation contrary to furnished instructions, shipping or transit accidents, modification or repair by the user, abuse, misuse, neglect, accident, incorrect power line voltage, fire, flood or other Acts of God, or normal wear and tear.

The foregoing is in lieu of all other expressed warranties and SFC does not assume or authorize any party to assume for it any other obligation or liability.

THE DURATION OF ANY WARRANTIES WHICH MAY BE IMPLIED BY LAW (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS) IS LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL SFC BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE PERFORMANCE OF ITS OBLIGATIONS UNDER THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

For your protection in the event of theft or loss of this product, please fill in the information below for your own personal records.

Model Number _____ Serial Number _____
(Located on back or bottom side of unit)

Date of Purchase _____ Purchase Price _____

Where Purchased _____