

Service
Service
Service




Philips Domestic Appliances and Personal Care

Service Manual

SAP coding HD 4657/01

PRODUCT INFORMATION

Voltage	: 220 - 240 V
Frequency	: 50 - 60 Hz
Power consumption	: 2700 - 3100 W
Coloursetting	: White / vapour dusk
Contents	: 100 - 1700 cc

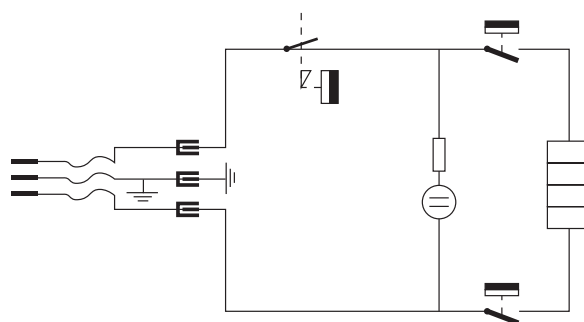

Descaling

Regular descaling will prolong the life of the appliance.

1. Fill the kettle with water up to three-quarters of the MAX capacity and bring the water to the boil.
2. After the appliance has switched off, add white vinegar (8%) to the MAX level.
3. Leave the solution in the kettle overnight.
4. Empty the kettle and rinse the inside thoroughly.
5. Fill the kettle with clean water and boil the water.
6. Empty the kettle and rinse it with clean water again.

Repeat this procedure if there is still some scale in the kettle.

Cleaning the filter

The triple-action filter can be cleaned as follows:

1. Remove the basket from the filter by sliding it.
2. Take the stainless steel mesh out of the basket and clean it by squeezing and rotating it under a running tap.

Repair instructions


To reach the components in the steamguide, the switch lever has to be pulled out with a little bit of force.

The best way to do that without damaging the switch lever is to use a pair of tongs with a soft rubber surface or to tape the switch lever.

This product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

HD 4657/01

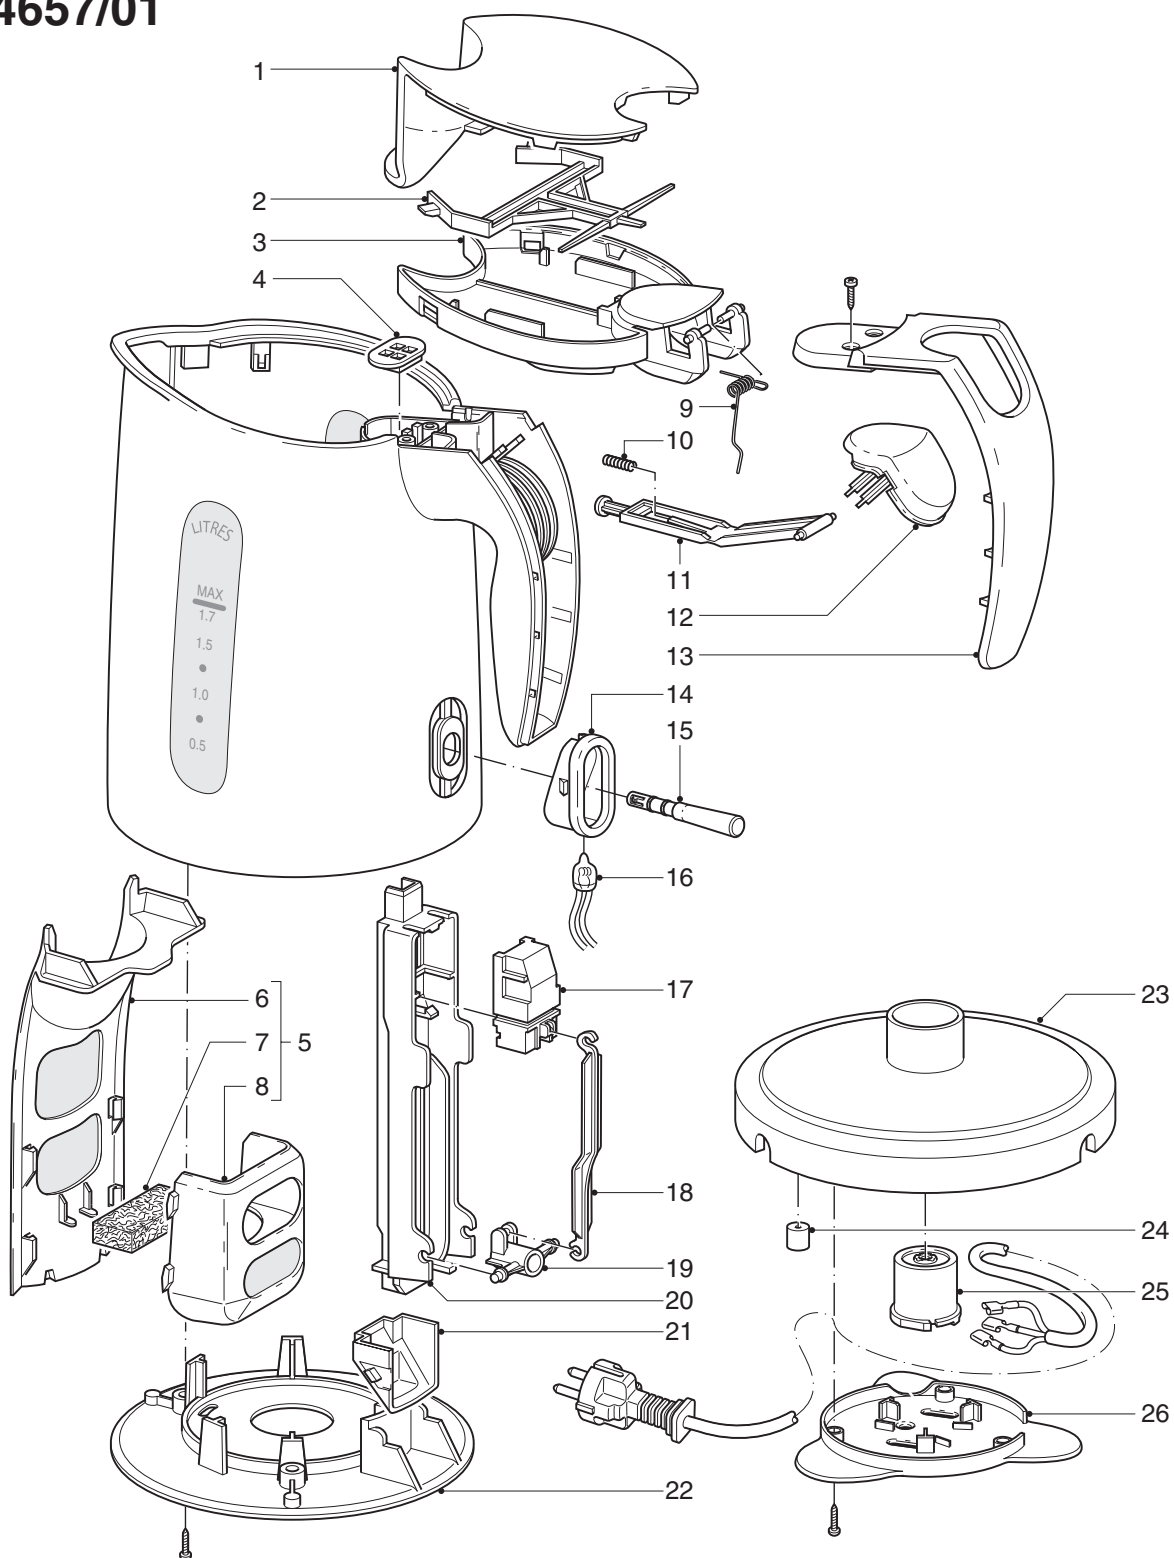

Pos	Description		Service code
1	Lid upper	vapour dusk	4213 247 49180
2	Lid latch	vapour dusk	4213 247 49200
3	Lid lower	white	4213 247 49190
4	Plug		4213 247 49560
5	Filter assy	HD 4976 1.7 L	4213 263 34350
6	Filter	white 1.7 L	4213 248 40580
7	Scale collector		4213 240 11280
8	Filter basket	white	4213 248 40590
9	Latch spring		4213 240 11270
10	Lid spring		4213 240 11260
11	Latch actuator	vapour dusk	4213 247 49210
12	Release button	vapour dusk	4213 247 49220
13	Handle cover	white	4213 247 49150

Pos	Description		Service code
14	Light guide		4213 247 49250
15	Switch lever		4213 263 30360
16	Lamp assy	220-240 V	4213 263 33640
17	Steam switch	Z5	4213 258 93880
18	Switch linkage	1.7 Litre	4213 247 49730
19	Switch actuator		4213 247 49240
20	Steamguide		4213 247 49230
21	Shield		4213 247 49670
22	Element cover	white	4213 247 49170
23	Base upper	vapour dusk	4213 247 49260
24	Foot		4213 247 05250
25	Connector socket	CS4	4213 258 93380
26	Base lower	naturel	4213 247 48770