

DAV-FX10

SERVICE MANUAL

Ver. 1.0 2005.04

*US Model
Canadian Model*

- DAV-FX10 is composed of following models.
As service manuals are issued for each component model, please refer to them.

COMPONENT MODEL NAME

	DAV-FX10
COMPACT DISCDECK RECEIVER	HCD-FX10
PACKAGE SPEAKER	SS-GS21
FRONT SPEAKER	SS-TS43
SURROUND SPEAKER	SS-TS43B
CENTER SPEAKER	SS-CT43
SUB WOOFER	SS-WS42

- Abbreviation
CND : Canadian model

PARTS LIST

Part No.	Description	Remarks
	ACCESSORIES	

1-479-227-12	COMMANDER, STANDARD (RM-ADP002) (INCLUDING BATTERY COVER)	
1-754-059-12	ANTENNA, LOOP (AM)	
1-754-147-41	ANTENNA (FM)	
1-769-108-11	CORD, CONNECTION (VIDEO)	
1-824-003-11	CORD (WITH CONNECTOR)(RED, 5m)	
1-824-003-31	CORD (WITH CONNECTOR)(WHITE, 5m)	
1-824-003-41	CORD (WITH CONNECTOR)(GRAY, 15m)	
1-824-003-51	CORD (WITH CONNECTOR)(BLUE, 15m)	
1-824-003-61	CORD (WITH CONNECTOR)(GREEN, 5m)	
1-830-063-21	CORD (WITH CONNECTOR)(PURPLE, 5m)	
2-590-760-11	MANUAL, INSTRUCTION (ENGLISH)	
2-590-760-21	MANUAL, INSTRUCTION (FRENCH)(CND)	
2-599-807-01	FOOT, WALL HOOK	

DVD HOME THEATRE SYSTEM

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]