



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- | | |
|---------------------------------|-----------------|
| - Voltage | : 220 - 240 V |
| - Frequency | : 50 - 60 Hz |
| - Power consumption | : 800 W |
| - Coloursetting | : White / green |
| - Max. timer setting : HD2520/A | : 170 sec |
| : HD252x/B | : 160 sec |
| - SAP coding | : HD2520 |
| | : HD2522 |

REPAIR INSTRUCTIONS


In case of a technical defect, toaster has to be replaced.
Only crumbtray and bunwarmer have been listed as spare parts.

ASSEMBLY & DISASSEMBLY ADVICE

- No specific issues

OPTIONAL (accessories)

- No specific issues

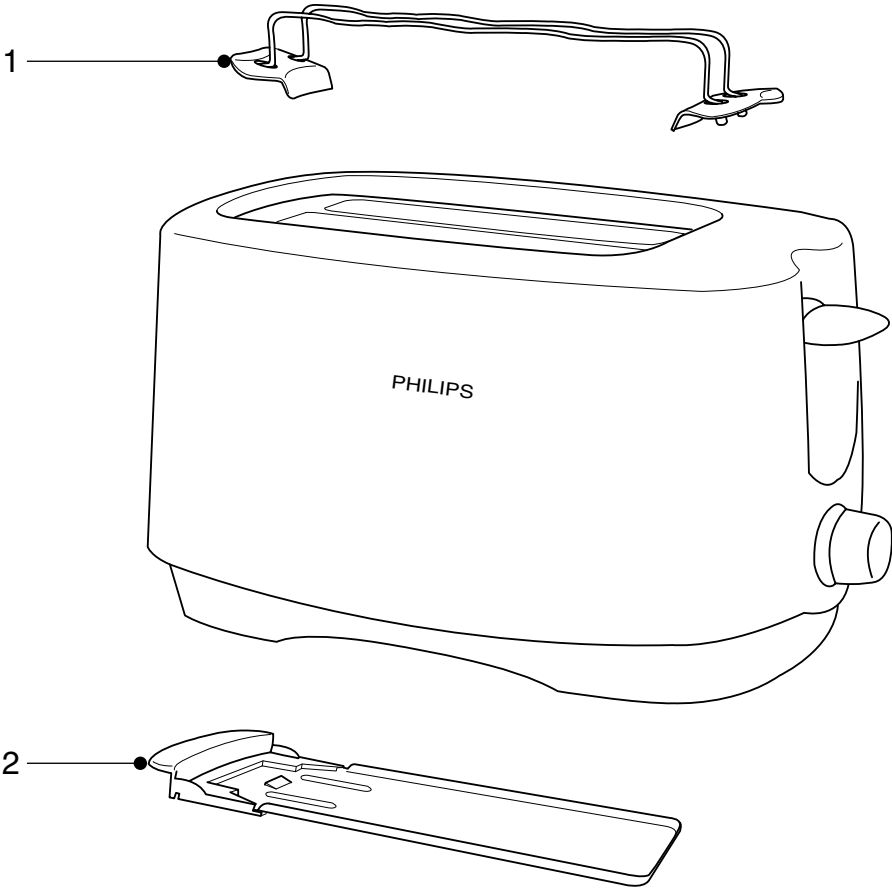

Pos	Service code	Description
1	9965 000 02958	Bunwarmer (HD2522)
2	9965 000 02957	Crumbtray