



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

MSH coding 8823 353 00000
8823 355 00000

Functions, features and operational aspects :

		HD 3353	HD 3355
Switch : 4 positions :	○	x	x
	⚙	x	x
	●	1000 W	1500 W
	●●	2000 W	3000 W
Thermostat		x	x
Frost guard	❄	x	x
On/off power light		x	x
Overheating protection		x	x

Voltage/frequency : 230 V / 50 Hz

Power consumption HD 3353 : 1000 - 2000 Watt

HD 3355 : 1500 - 3000 Watt

Safety : Insulation class ☐

Product meets the requirements regarding interference suppression on radio and television.

DISASSEMBLY ADVICE

remove: **screw A 2x**
 remove: **upper plate**
 remove: **operation knobs 2x**
 remove: **switch block**
 remove: **pilot light**
 remove: **screw B 2x**
 remove: **thermostat**


FAN

remove: **ring C**
 remove: **fan**

NOTE: AFTER THE PRODUCT HAS BEEN REPAIRED, IT SHOULD FUNCTION PROPERLY AND HAS TO MEET THE SAFETY REQUIREMENTS AND LEGAL REGULATIONS AS LAID DOWN AND OFFICIALLY ESTABLISHED AT THIS MOMENT.

Possible complaints

The heater doesn't function :

- 1) When set to the cool air setting 
 action: Set the thermostat knob to the highest position.
- 2) The overheating safety device has been activated
 action: To reset the overheating device, remove the mains plug from the wall socket and let the heater cool down for 30 minutes.

PARTS LIST HD 3353 / HD 3355

POS.	DESCRIPTION	SERVICE CODE
1	KNOB	4822 410 12173
2	KNOB THERMOSTAT	4822 410 12174
3	POWER LIGHT	4822 134 10056
4	SUPPORT	4822 404 10984
5	THERMOSTAT HD 3353	4822 282 10299
	THERMOSTAT HD 3355	4822 282 10341
6	SWITCH	4822 273 10319
7	FAN	4822 361 11147

NOTE:

When a cordset has to be replaced, always use a cordset with core wires with a diameter of 1.0 mm².

Parts, with numbers from 100 upwards, cannot be ordered separately.

