Service Service Service



HR 2388 HR 2389

Philips Domestic Appliances and Personal Care

ServiceManual

MSH coding 8832 388 00000 8832 389 00000

PRODUCT INFORMATION

Power - 9 V alkaline battery (not included)

Weighing range - 0 - 5000 gram (5 kg)

Weighing division - d = 1 gram

Dimensions (I x w x h) - diameter 22 x 4 cm (HR 2388)

- 24.5 x 22 x 4 cm (HR 2389) - 475 gram (HR 2388)

- 725 gram (HR 2389)

F-box (I x w x h) - 23.7 x 7.0 x 31.4 cm)

Application - 23.7 x 7.0 x 31.4 cm)
- 23.7 x 7.0 x 31.4 cm)

- Always place the appliance on a solid, smooth and horizontal surface when you use it.
- Only for type HR 2389: remove the protective foil before you use the scales for the first time.
- A microwave oven which is switched on, may cause interference, which may lead to unreliable weighing results.Place the scales at a safe distance of at least 1.5 metres from a microwave oven which is switched on or use the scales when the microwave is switched off.

Battery

Weight

The scales work on a **9-volt battery** (not included). We advise you to use a **Philips 6LR 61 Alkaline** battery on account of its long life and environmental friendliness.

Battery replacement

- If the BAT indication appears on the display briefly when you switch on the appliance, the battery is low but still has a reserve capacity. If BAT is displayed continuously, the battery must be replaced.
- It is not advisable to use a rechargeable battery in this appliance.

The scales indicate weight with a division of 1 gram (d = 1 g).

- Press button ① to switch the scales on.
- After 1 2 seconds the appliance is ready for use.


Please note: If the weighing plate has been overloaded (more than 5 kilograms), **STOP** will become visible on the display.

Full memory backup

This appliance has "full memory backup": if the appliance has not been used for more than 3 minutes, it will switch off automatically to save the battery. If you have just weighed on the weighing plate, the previously shown weight will be displayed again when you press button \bigcirc .

Storage

Make sure that there is nothing on the weighing plate when the appliance is not in use.

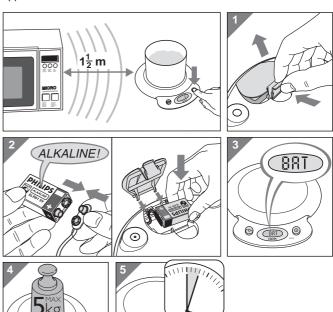

Published by Philips Domestic Appliances and Personal Care

Printed in the Netherlands

@ <u>(\$10</u>P) @


(CSTOP

© Copyright reserved

0

Subject to modification



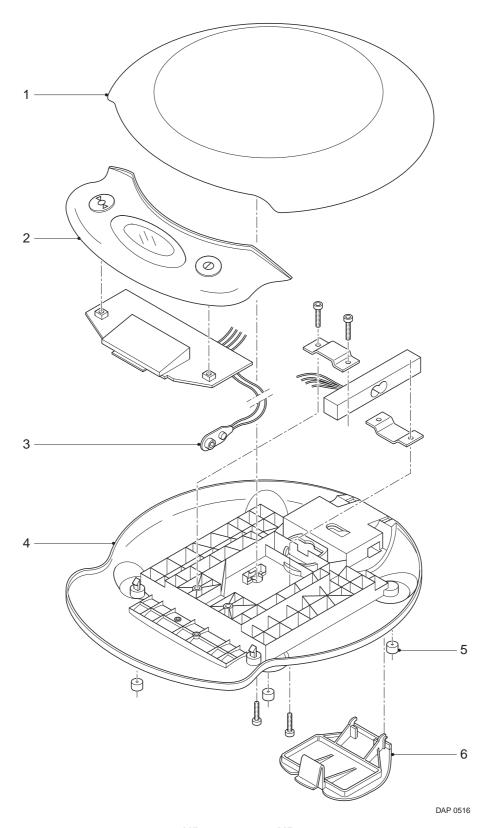

			HR 2388	HR 2389
1	4822 466 11695	Weight plate	x	-
	4822 466 11696	Weight plate	-	x
2	4822 441 12067	Housing assy	X	-
	4822 441 12069	Housing assy	-	X
3	4822 290 80346	Battery connector	x	x
4	4822 441 12066	Bottom	X	-
	4822 441 12068	Bottom	-	X
5	4822 462 10992	Stud	x	x
6	4822 442 01122	Cover	X	-
	4822 442 01123	Cover	-	X