Battery Shaver ”Marco Polo”

HQ 302/A

Service
Service
Service

Domestic Appliances and Personal Care

Service Manual

SAP Coding HQ 302

HINTS FOR REPAIRS

DISASSEMBLY

- Remove the shaving unit, to prevent damages during repairs.
- Remove the batterieholder.
- Unlock the snaplocks from the tailpart.
- Lift the motor unit out of the housing.
- Loosen the motor clamp springs on the bearing. block of the motor with a small screwdriver.
- Unlock the peg-clamping ’Z’ (2X) between frame (item 8) and hair chamber (item 5).
- To remove the trimmer, first disassemble the trimmer slide by pushing down the locking pegs ’V’ (2X) and move slide slightly outwards.
- Maken room between trimmer and cover with a small screwdriver, to release the peg fastening ’Y’.

ASSEMBLY

- The assembly must be carried out in the reverse order of what is discribed under Disassembly.
- When fitting the shaver it must be checked if wiring is correctly positioned.

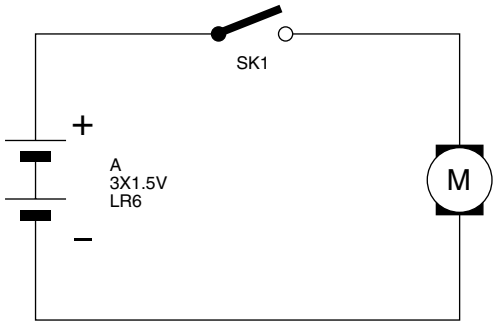

TECHNICAL DATA

Operating voltage	:	4.5V ⎓
Power supply	:	3X AA/LR6 battery
Shaving heads	:	2X HQ3
Comfort control	:	fixed setting
Trimmer	:	pop-up system

PRODUCTS MEETS THE REQUIREMENTS REGARDING INTERFERENCE SUPPRESION ON RADIO AND TELEVISION.

- AFTER THE PRODUCT HAS BEEN REPAIRED IT SHOULD FUNCTION PROPERLY AND HAS TO MEET THE SAFETY REQUIREMENTS AS LAID DOWN OFFICIALLY ESTABLISHED AT THIS MOMENT.

Published by Philips Domestic Appliances and Personal Care Printed in The Netherlands ©Copyright reserved Subject to modification

4322 277 00107
02/09

PHILIPS

HQ 302/A

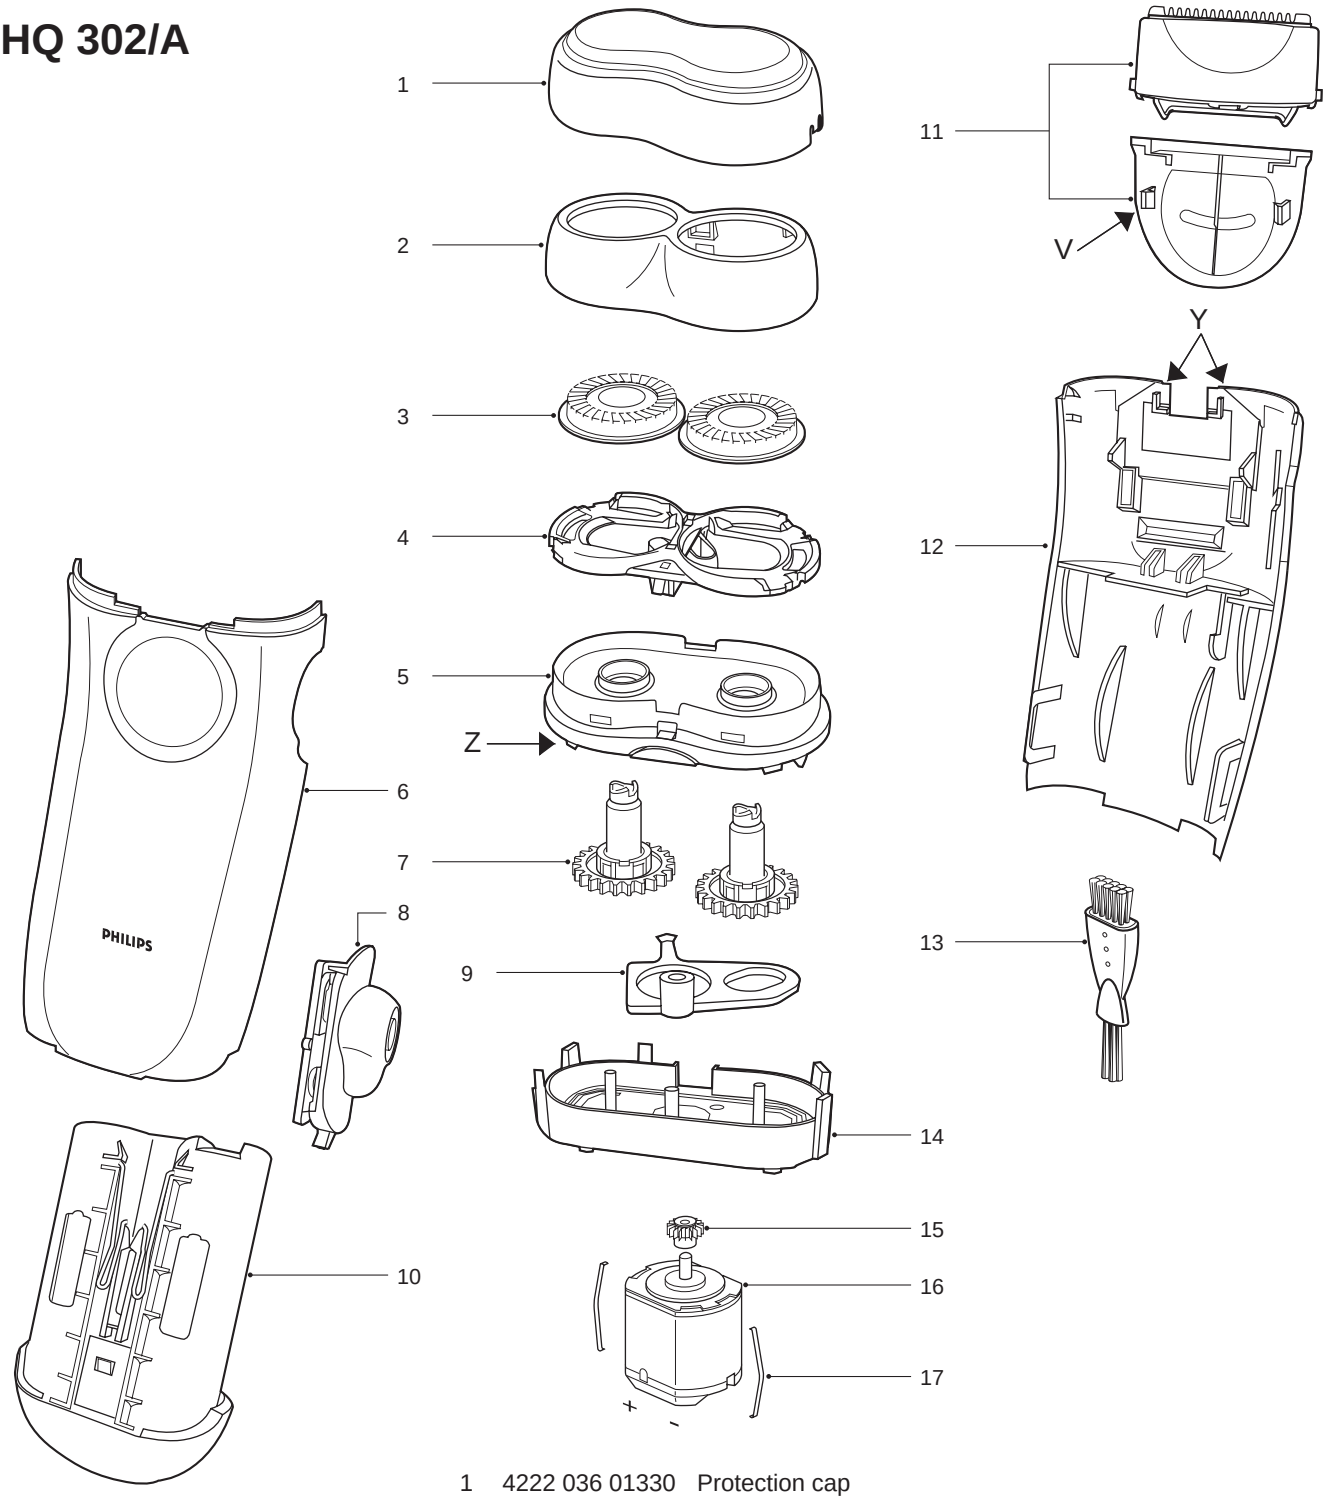

1	4222 036 01330	Protection cap
2	4222 036 01340	Head housing
3	4822 690 30471	HQ3 shaving head
4	4222 036 02780	Head holder
5	4222 036 01360	Hairchamber
6	4222 036 01930	Housing
7	4222 036 01790	Gearwheel
8	4222 036 01810	On/off knob
9	4222 036 01380	Lever
10	4222 036 03040	Battery holder
11	4222 036 01390	Trimmer
12	4222 036 01830	Cover
13	4222 036 02770	Cleaning brush
14	4822 464 30194	Frame
15	4822 522 33039	Pinion
16	4222 036 01800	Motor 4.5V
17	4822 492 63165	Motor clamp
	4222 036 02820	Pouch