
2N406

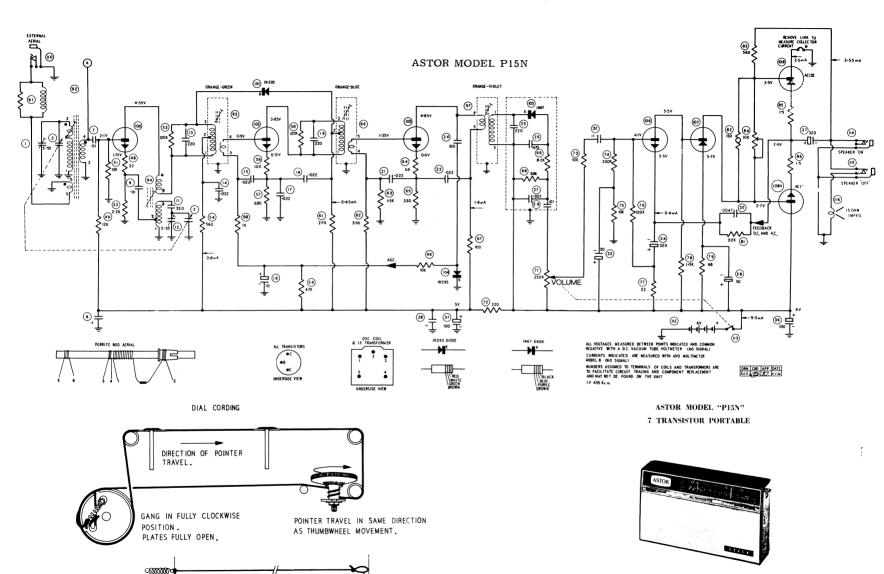

Prepare cord and spring then install as shown.

