

Service
Service
Service




Domestic Appliances and Personal Care

Service Manual


PRODUCT INFORMATION

SAP coding HD 4660


- Voltage : 220-240V
- Frequency : 50-60 Hz
- Power consumption : 2000-2400W flat element
- Coloursetting : Stainless steel/lilac
- Contents : 1700 cc
- Sounding : Boil ready signal
- Lamp : Neon power indicator

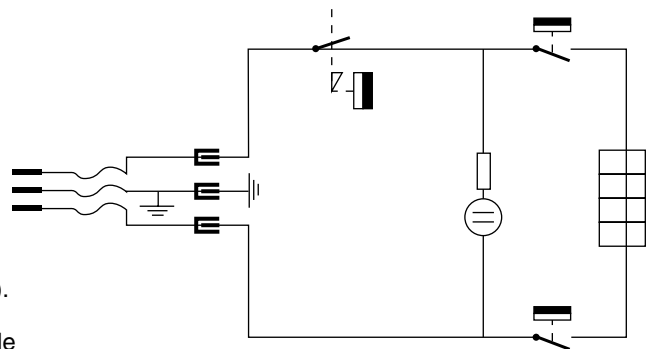

DISASSEMBLY

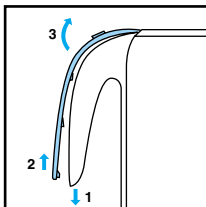


- Remove screw underside handle (1).
- Push up handle cover (2).
- For take out handle cover turn handle cover upwards.
- Take out:
 - Steam chimney
 - Switch button assy
 - Bell + bell holder
 - Screw + spring + spring mount

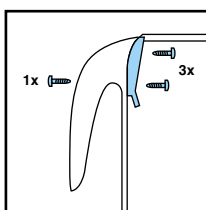

FOR REPLACE STEAMSWITCH



- Remove screw (3x) inside jug.
- Remove screw from steamswitch.

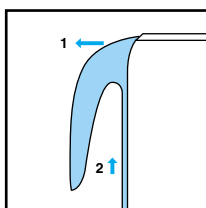

- Pull handle out of the lid flange (1).
- Push up the handle (2).



HD 4660/A

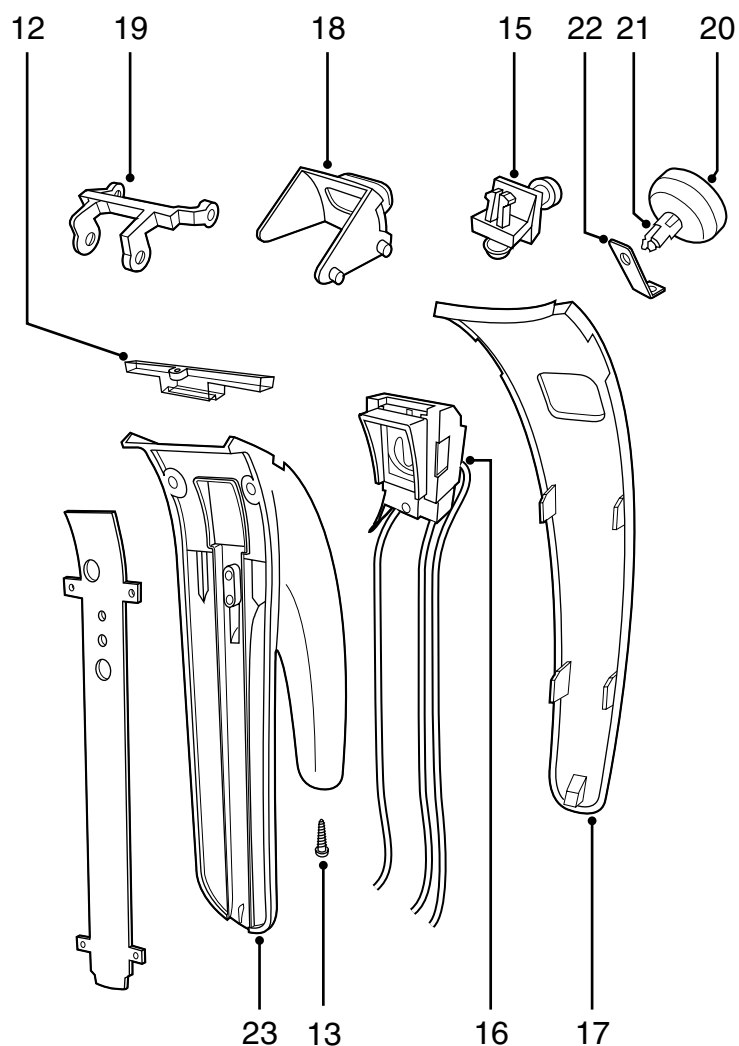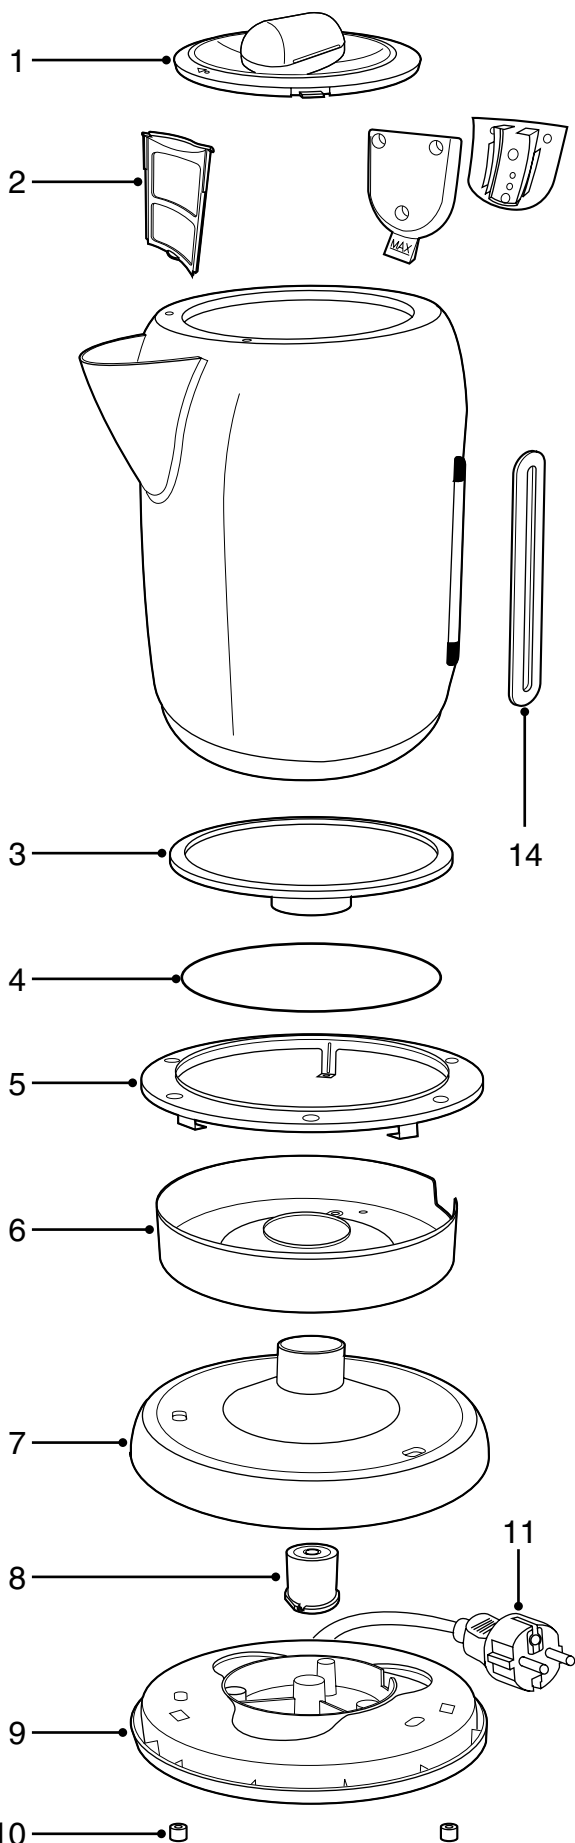

1	9965 000 03764	Lid assy	blue
2	9965 000 03768	Filter	
3	9965 000 03769	Heater seal	
4	9965 000 03770	Heating element X4 control	
5	9965 000 03771	Clamping plate	
6	9965 000 04325	Jug base	
7	9965 000 03772	Upper base	
8	9965 000 03773	Plug	
9	9965 000 03774	Lower base	
10	9965 000 03775	Rubber foot	
11	9965 000 03776	Cord set	EU
-	9965 000 04080	Cord set	UK
12	9965 000 03777	Steam chimney	
13	9965 000 03789	Screw (1,6 x 10)	
14	9965 000 03791	Water indicator kit	
15	9965 000 03779	Spring mount assy	
16	9965 000 03781	Steam switch assy	
17	9965 000 03782	Handle cover	
18	9965 000 03783	Switch button assy	
19	9965 000 03784	Switch link	
20	9965 000 03785	Bell	
21	9965 000 03786	Bell holder	
22	9965 000 03787	Bell support link	
23	9965 000 03788	Handle	
***	4222 001 91730	DFU	GBR/FRA/ESP/DEU ITA/PRT/TUR/NLD