HD7620/81

Service Service Service



Philips Domestic Appliances and Personal Care

ServiceManual

SAP coding HD7620/81

PRODUCT INFORMATION

Voltage : 100 V, 120 V, 220 - 240 V

Frequency : 50 - 60 Hz Power consumption : 1400 W

Coloursetting : Anthracite / frost grey

Contents : 1200 cc

On/Off switch Thermostat No Thermal fuse

Colour code identification:

To determine which service manual is suitable for the appliance that has to repaired please check the following. Look at the type plate identification from the appliance on the second row.

The first sledge number is the colour code for that appliance. (/99)

(for example below the colour code is /01) Example of a type plate:

TYPE HD7624

/01 /A

•••

At the service manual heading, the type and colour code are also mentioned for example **HD7624/01**/01 is the colour code.

This product meets the requirements regarding interference suppression on radio and TV.

Descaling:

Regular de-scaling will prolong the life of your appliance and will guarantee optimal brewing results.

Follow below steps to de-scale the appliance.

- 1. Fill the water tank with white vinegar.
- 2. Let the appliance complete two runs.
- 3. Let the appliance complete two more flushing cycles with clean water to rinse away all vinegar.

If the above procedure does not restore the function, then switch off the coffee maker when the acid passed through during appr. 3 min.

Keep the appliance in this condition overnight and continue the steps see above procedure.

After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

Published by Philips Domestic Appliances and Personal Care

Printed in the Netherlands

© Copyright reserved

Subject to modification







Repair instruction for replacing switch:

If the switch has to be replaced please follow the next steps:

- · Remove bottom base plate.
- Pull the complete pump unit (including hose pieces) downwards until the hose pieces are loosened from the two water tank pipes. (hose pieces and wires must stay connected to the pump).
- Remove the complete top cover including the water tank. (see picture 1)
- Now it is possible to get to the switch.
- To remove the switch from the housing, follow the steps see pictures below.

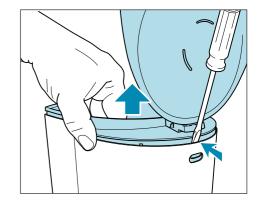



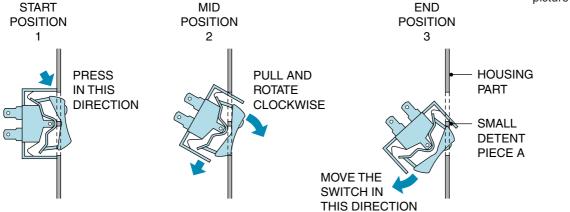


- The new switch can be placed on the same way, to do so follow the above steps backwards!
- Insert the complete top cover assy including plastic tank gently back into the housing.
- Take the pump unit and attach the hose pieces to the water tank pipes of the previously inserted tank. (be sure that the hose pieces are well attached to the water tank pipes, otherwise leakage problems can occur)
- · Assemble the base plate again.

Transportation lock:

To prevent damaging the dosing/weighting system in case the appliance has to be shipped/transported, It is possible to order a special transportation lock. For the position of the transportation lock see picture 2.


The code number transportation lock: 4222 247 59510

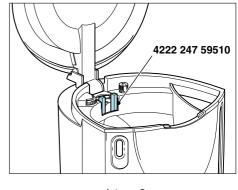



picture 2


Commercial trade number jug + lid: HD7965/81 (frost grey)

HD7620/81

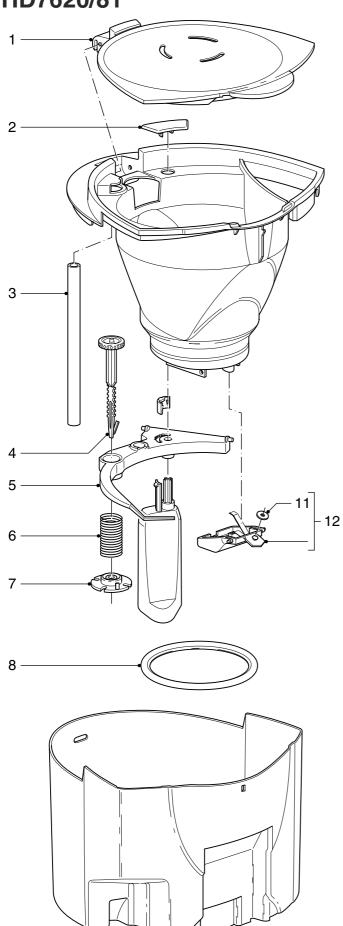


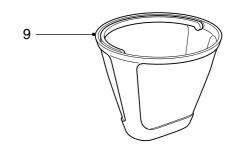

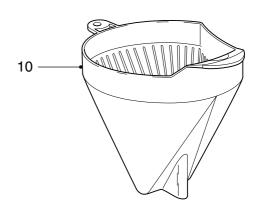

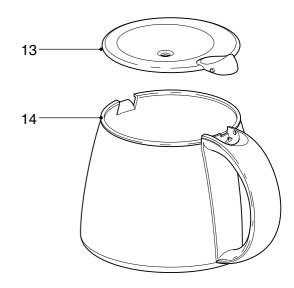

Pos	Description		Service code
1	Tank lid assy	frost grey	4222 259 03750
2	Strength select cover	anthracite	4222 247 35670
3	Spoutpipe		4222 247 35580
4	Tare-adjuster		4222 247 35620
5	Frame ADS printed		4222 259 02330
6	ADS spring		4222 240 06350
7	Spring support		4222 247 35660
8	Sealing ring tank		4222 247 06880
9	Permanent filter		4222 247 36680
10	Filterholder		4222 247 35700
11	Dripstop ring		4222 247 06630
12	Dripstop assy		4222 259 05070
13	Lid	frost grey	4222 247 36660
14	Jug	frost grey	8827 965 81010
	1 2 3 4 5 6 7 8 9 10 11 12 13	Tank lid assy Strength select cover Spoutpipe Tare-adjuster Frame ADS printed ADS spring Spring support Sealing ring tank Permanent filter Filterholder Dripstop ring Dripstop assy Lid	1 Tank lid assy frost grey 2 Strength select cover 3 Spoutpipe 4 Tare-adjuster 5 Frame ADS printed 6 ADS spring 7 Spring support 8 Sealing ring tank 9 Permanent filter 10 Filterholder 11 Dripstop ring 12 Dripstop assy 13 Lid frost grey

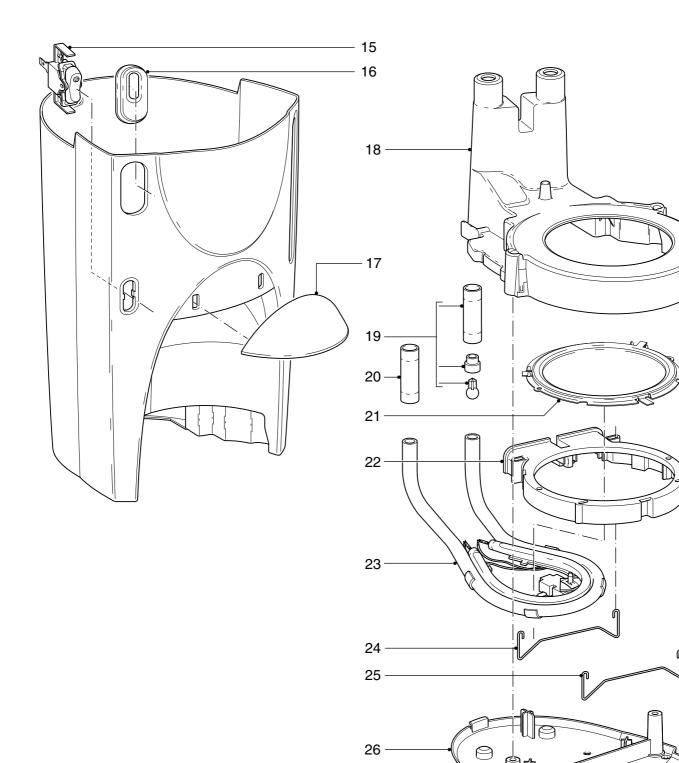

27 -

Pos	Description		Service code
15	Switch 230 V	frost grey	4222 246 16010
	Switch 100-120 V	frost grey	4222 246 16970
16	ADS window		4222 259 03890
17	Cap	frost grey	4222 247 36020
18	Foot	anthracite	4222 247 36700
19	Valve + hose piece assy		4222 247 20470
20	Hose piece		4222 247 06440
21	Hotplate		4222 240 06260
22	Hotplate ring		4222 247 50300
23	Pump assy 230 V		4222 259 13760
	Pump assy 100 V		4222 259 13740
	Pump assy 120 V		4222 259 13730
24	Wire spring thin		4222 245 71650
25	Wirespring		4222 245 71470
26	Baseplate	frost grey	4222 259 05660
27	Foot, rubber		4213 247 05250

