Service Manua

Supplement

CD Stereo System

SA-AK27

Colour

(S) ... Silver Type

Please file and use this Supplement Manual together with the Service Manual for the following Model No. (Order No.):

SA-AK 27 E/EB/EG-S MD9903035C2

This Supplement is provided to indicate the changes in Transformer P.C.B. in the Service Manual. Please use it to update your Service Manual for future reference.

Area

Suffix for Model No.	Area	Colour
(E)	Europe	
(EB)	Great Britain	(S)
(EG)	Germany and Italy	

System	Music Center	Speaker
SC-AK 27 (E)	SA-AK 27 (E)	SB-AK 27 (E)
SC-AK 27 (EB)	SA-AK 27 (EB)	SB-AK 27 (E)
SC-AK 27 (EG)	SA-AK 27 (EG)	SB-AK 27 (E)

⚠ WARNING


This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.




© 1999 Matsushita Electronics (S) Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

■ Changes in Printed Circuit Board


M TRANSFORMER P.C.B. (REPX0173C) ... E,EG ... Supplied by MAVD.

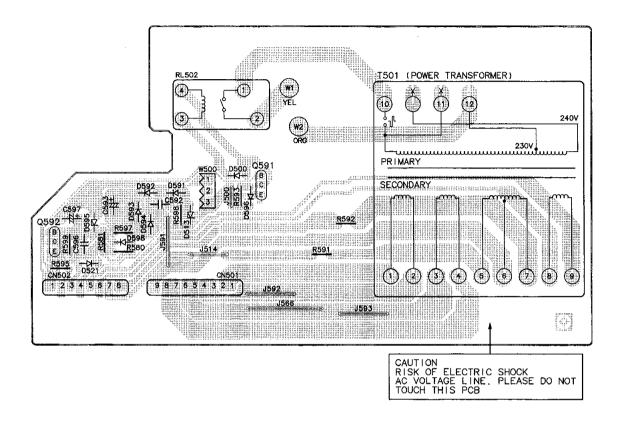

M TRANSFORMER P.C.B. (REPX0173U) ... EB ... Supplied by MAVD.

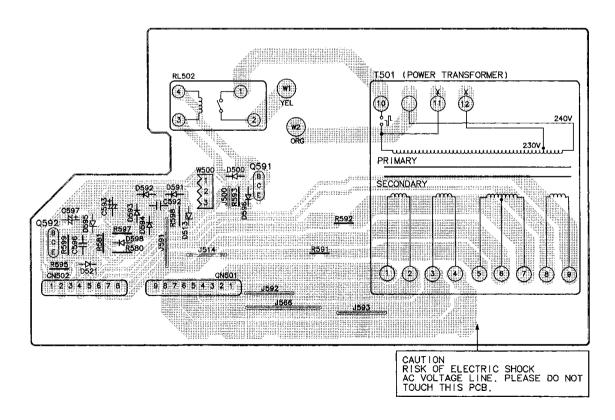

Changes in Schematic Diagram

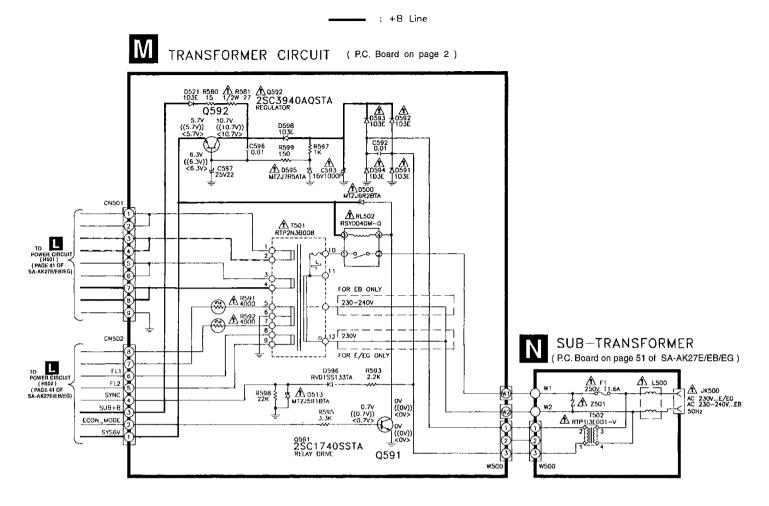

■ Changes in Self-Diagnostic Display Function

(on page 19 of SA-AK 27 E/EB/EG).

- CD Mechanism Test (H15, CD F15, F16, F17, CD F26, F27, CD F28, CD F29, F75)
 - 1. Press the "CD" button.
 - 2. Press the "OPEN/CLOSE" (CD-1) and set a CD.
 - 3. Press the "OPEN/CLOSE" (CD-1) to close the tray.
 - 4. Press the "OPEN/CLOSE" (CD-5) and wait until the tray is opened.
 - 5. Press the "OPEN/CLOSE" (CD-1) and remove the CD.
 - 6. Press the "OPEN/CLOSE" (CD-1).
 - 7. Press the (■) button. If abnormality is detected, the self diagnostic mark will be displayed. If there are several abnormalities, pressing the (■) will change (scroll) the marks. (Ex., CD F15 -> F75 ->)

 If no abnormality is detected, only "T" will be displayed.

