LeCroy 9354A/M/L, 9354T/M

Digital Storage Oscilloscope

Service Manual





LeCroy 9354A/M/L, 9354T/M

Digital Storage Oscilloscope

Service Manual

Version 1.0

February 1995

First printing

LeCroy Corporate Headquarters

700 Chestnut Ridge Road Chestnut Ridge, NY 10977-6499

Tel: (914) 425-2000 Fax: (914) 425-8967

LeCroy European Headquarters

2, rue du pré-de-la-Fontaine 1217 Meyrin 1 / Geneva, Switzerland

Tel: 41 (022) 719.21.11 Fax: 41 (022) 782.39.15

Table of Contents

Section 1	General Information	Page
1.1	Initial Inspection	1-1
1.2	Warranty	1-1
1.3	Product Assistance	1-1
1.4	Address of Service Centers	1-1
1.5	Maintenance Agreements	1-5
1.6	Documentation Discrepancies	1-5
1.7	Service Procedure	1-5
1.8	Return Procedure	1-5
1.9	Safety Precautions	1-6
1.10	Antistatic Precautions	1-6
Section 2	Specifications	2-1
2.1	9354A/M/L Specifications	2-2
2.2	9354T/M Specifications	2-6
2.3	Hard Disk, Floppy, RAM Card, Internal Printer options	2-10
2.4	Active Fet Probes	2-13
2.5	Active Differential Probes	2-15
2.6	WP01 Waveform Processing Package	2-17
2.7	WP02 Fast Fourier Processing Package	2-20
2.8	CKTRIG option	2-23
2.9	LeCalsoft Calibration Software	2-25
Section 3	Block Diagram and Sub-Assemblies	3-1
3.1	9354A, 9354AM, 9354AL Sub-Assemblies	3-1
3.2	9354T/M Sub-Assemblies	3-1
3.3	9354A/T Hardware Options	3-1
3.4	9354A Block Diagram	3-2
3.5	9354AM Block Diagram	3-3
3.6	9354AL Block Diagram	3-4
3.7	9354T Block Diagram	3-5
3.8	9354TM Block Diagram	3-6
Section 4	Theory of Operation	
4.1	Processor Board for 9354A/M/L & 9354T/M	4-1
4.1.1	Processor Block Diagram	4-1
4.1.2	Parallel Peripherals	4-2
4.1.3	Serial Peripherals	4-3
4.1.4	External Interfaces	4-3
4.1.5	Optional Interfaces	4-3
4.2	F9354-31 Main Board	4-4
4.2.1	Introduction	4-4
	Introduction	
4.2.2	Microprocessor Control	4-4

Section 4	Theory of Operation	Page
4.2.3.1	Channel Description	4-4
4.2.2	Microprocessor Control Block Diagram	4-5
4.2.3.2	Digital Controls	4-6
4.2.3.3	Analog Controls	4-7
4.2.4	Trigger	4-8
4.2.4.1	Trigger Block Diagram	4-8
4.2.4.2	Digital Controls	4-9
4.2.4.3	Analog Controls	4-9
4.2.4.4	TV Trigger	4-9
4.2.5	Analog to Digital Converter	4-10
4.2.5.1	Introduction	4-10
4.2.5.2	ADC Block Diagram	4-11
4.2.5.3	Memories Block Diagram	4-12
4.2.6	Time Base	4-13
4.2.6.1	Introduction	4-13
4.2.6.2	Time Base Block Diagram	4-14
4.2.6.3	Digital Control	4-15
4.2.6.4	Trigger Selection	4-15
4.2.6.5	Smart Trigger	4-15
4.3	F9300-4 GPIB and RS232 Interface	4-16
4.3.1	RS232 Interface	4-16
4.3.2	GPIB Interface	4-16
4.4	F9354-5 Front Panel	4-16
4.5	F9300-6 Centronics Interface	4-16
4.5.1	Centronics Interface Option	4-16
4.5.2	Floppy Disk Drive Interface Option	4-16
4.5.3	Printer Interface Option	4-17
4.6	F9300-7 Printer Controller	4-17
4.7	F9300-8 Hard Disk Option	4-17
4.8	93XX-Display	4-17
4.8.1	General Description	4-17
4.8.2	Basic Characteristics	4-17
4.8.3	Horizontal Deflection	4-18
4.8.4	Vertical Synchronization	4-19
4.8.5	Horizontal Resolution	4-19
4.8.6	Vertical Resolution	4-19
4.9	PS9351 Power Supply	4-20
4.9.1	Power Supply Specifications	4-20
4.9.2	Power Supply Block Diagram	4-21
Section 5	Performance Verification	
5.1	Introduction	5-1
5.2	Test Equipment Needed	5-1
5.3	Turn On	5-1
5.4	Input Impedance	5-2
5.4.1	Procedure	5-2
5.4.1.a	DC $1M\Omega$	5-2

Section 5	Performance Verification	Page
5.4.1.b	DC 50Ω	5-3
5.4.2	External Trigger Input Impedance	5-4
5.4.2.a	DC 1ΜΩ	5-4
5.4.2.b	DC 50Ω	5-5
5.4.3	Internal Protective Resistor Verification	5-6
5.5	Leakage Current	5-7
5.5.1	Procedure	5-7
5.6	Average Noise Level	5-7
5.6.1	Peak to Peak	5-7
5.6.1.a	DC 1MΩ	5-7
5.6.1.b	AC $1M\Omega$	5-10
5.6.1.c	DC 50Ω	5-11
5.6.2	Rms Noise	5-12
5.6.2.a	DC 1MΩ	5-12
5.6.2.b	ΑС 1ΜΩ	5-14
5.6.2.c	DC 50Ω	5-14
5.6.3	Inputs Grounded	5-15
5.7	DC Linearity	5-19
5.7.1	Description	5-19
5.7.1.a	DC 50Ω	5-19
5.7.1.a.1	Positive DC Linearity	5-20
5.7.1.a.2	Negative DC Linearity	5-22
5.7.1.b	DC 1ΜΩ	5-24
5.8	Offset	5-27
5.8.1	Description	5-27
5.8.1.a	Negative Offset Control	5-27
5. 8 .1.b	Positive Offset Control	5-30
5.9	Bandwidth	5-33
5.9.1	Description	5-33
5.9.1.a	DC 50Ω	5-33
5.9.1.a.1	Trigger Bandwidth	5-38
5.9.1.b	DC 1ΜΩ	5-39
5.10	Trigger Level	5-42
5.10.1	Description	5-42
5.10.2	Channel (Internal)	5-42
5.10.3	External Trigger	5-50
5.10.4	External/10 Trigger	5-58
5.11	Smart Trigger	5-66
5.11.1	Trigger on Pulse Width < 10 nsec	5-66
5.11.2	Trigger on Pulse Width > 10 nsec	5-66
5.11.3	Trigger on Pulse Width < 100 nsec	5-68
5.11.4	Trigger on Pulse Width > 100 nsec	5-69
5.12	Time Base Accuracy	5-70
5.12.1	Description	5-70
5.12.2	500 MHz Clock Accuracy	5-70
5.13	Overshoot and Rise Time	5-74
5.14	Probe Calibrator Verification	5-76
5 15	Overload	5-79

Section 6	Internal Calibration and Diagnostics	
6.1	Introduction	6-1
6.2	Diagnostic Summary	6-2
6.2.1	Gain and Offset Calibration Description	6-3
6.2.2	Trigger Level Calibration	6-3
6.3	Diagnostic Results	6-3
6.3.1	Gain Curves	6-3
6.3.2	Offset Curves	6-4
6.3.3	Trigger Level	6-5
6.3.4	Integral Linearity	6-7
6.4	Board Test Results	6-9
6.5	Probe Bus Verification	6-10
6.6	PP092 Verification	6-13
Section 7	Maintenance	
7.1	Introduction	7-1
7.2	Disassembly and Assembly Procedure	7-1
7.2.1	Removal of the Upper Cover	7-1
7.2.2	Removal of the PS9351 Power Supply	7-1
7.2.3	Disassembly and Assembly Diagram	7-2
7.2.3.1	Figure 7.1: 9354A/T Assembly	7-3
7.2.3.2	Figure 7.2: 9354A/T Lower Cover Assembly	7-4
7.2.3.3	Figure 7.3: 9354A/T Front Frame Assembly	7-5
7.2.3.4	Figure 7.4: 9354A/T Rear Panel Assembly	7-6
7.2.4	Removal of the F9300-4 GPIB and RS232 Interface	7-7
7.2.5	Removal of the Fan	7-7
7.2.6	Removal of the Line Input Module	7-7
7.2.7	Removal of the 93XX-Video	7-7
7.2.8	Removal of the 93XX-Yoke	7-7
7.2.9	Removal of the Front Frame Assembly	7-8
7.2.10	Removal of the 93XX-Deflection	7-8
7.2.11	Removal of the 93XX-CRT	7-9
7.2.12	Removal of the F9354-5 Front Panel	7-9
7.2.13	Removal of the Front Panel Keyboard	7-9
7.2.14	Removal of the Processor	7-10
7.2.15	Removal of the F9354-31 Main Board	7-10
7.2.16	Removal of the Handle	7-11
7.2.17	Removal of the Foot Support	7-11
7.2.18	Removal of the 93XX-FD01 Floppy Disk	7-11
7.2.19	Removal of the 93XX-GP01 Graphic Printer	7-11
7.2.19	Removal of the F9300-7 Printer Controller	7-11
7.2.20	Removal of the F9300-6 Centronics Interface	7-11
7.2.21	Figure 7.5: 9354A/T Floppy Option Assembly	7-12
7.2.22	Figure 7.6: 9354A/T Graphic Printer Option Assembly	7-13
7.3	Software Upgrade Procedure	7-14
7.3.1	Upgrading Firmware	7-14
7.3.2	Changing Software Option	7-15
7.3.3	Software Option Selection GAL	7-16

Section 7	Maintenance	Page
7.3.4	Processor Board Exchange Procedure	7-16
7.4	Equipment and Spare Parts Recommended for Service	7-17
7.4.1	Equipment	7-17
7.4.2	Spare Parts	7-17
7.5	Troubleshooting and Flow Charts	7-18
7.5.1	Introduction	7-18
7.5.2	Line Voltage Autoranging	7-18
7.5.3	Initial Troubleshooting Chart	7-19
7.5.4	No Power Supply	7-20
7.5.4.1	Line Fuses Replacement	7-20
7.5.5	No Display	7-21
7.5.6	Abnormal Image on Screen	7-22
7.5.7	Front Panel Controls do not Operate	7-23
7.5.8	No Remote Control GPIB or RS232	7-24
7.5.9	Performance Verification Fails	7-25
7.5.10	Internal Calibration Fails	7-26
7.5.11	Floppy Disk Drive Option Fails	7-27
7.5.12	Graphic Printer Option Fails	7-28
7.5.13	Centronics Option Fails	7-29
7.5.14	Hard Disk Option Fails	7-30
7.6	Calibration Procedures	7-31
7.6.1	PS9351 Power Supply Calibration	7-31
7.6.1.1	Figure 7.7: Power Supply	7-32
7.6.2	93XX-Display Adjustment Procedure	7-33
7.6.2.1	Introduction	7-33
7.6.2.2	Coarse Adjustment	7-34
7.6.2.3	Fine Adjustment	7-35
7.6.3	Front End Test and Calibration Procedure	7-37
7.6.3.1	Introduction	7-37
7.6.3.2	Power Supplies	7-37
7.6.3.2.1	Front End Power Supply Verification	7-37
7.6.3.2.2	ADC Power Supply Verification	7-37
7.6.3.3	16 bit DAC Verification	7-38
	Figure 7.8: 9354A/T Front End Adjustment	7-42
7.6.3.4	Input Buffer DC Gain Adjustment	7-43
7.6.3.4.1	Channel 1 DC Gain Adjustment	7-43
7.6.3.4.2	Channel 2 DC Gain Adjustment	7-44
7.6.3.4.3	Channel 3 DC Gain Adjustment	7-45
7.6.3.4.4	Channel 4 DC Gain Adjustment	7-46
7.6.3.5	Overshoot and Risetime Adjustment	7-47
7.6.3.5.1	Channel 1 Overshoot and Risetime Adjustment	7-47
7.6.3.5.2	Channel 2 Overshoot and Risetime Adjustment	7-49
7.6.3.5.3	Channel 3 Overshoot and Risetime Adjustment	7-51
7.6.3.5.4	Channel 4 Overshoot and Risetime Adjustment	7-53
7.6.3.6	Flatness Adjustment	7-55
7.6.3.6.1	Channel 1 HF Adjustment	7-55
7.6.3.6.2	Channel 2 HF Adjustment	7-57
7.6.3.6.3	Channel 3 HF Adjustment	7-59

Section 7	Maintenance	Page
7.6.3.6.4	Channel 4 HF Adjustment	7-61
7.6.3.7	Sample & Hold Flatness Adjustment	7-63
7.6.3.7.1	Channel 1 Sample & Hold Flatness Adjustment	7-63
7.6.3.7.2	Channel 2 Sample & Hold Flatness Adjustment	7-64
7.6.3.7.3	Channel 3 Sample & Hold Flatness Adjustment	7-65
7.6.3.7.4	Channel 4 Sample & Hold Flatness Adjustment	7-66
7.6.3.8	Trigger Hysteresis Control	7-67
7.6.3.8.1	Channel 1 Trigger Hysteresis Adjustment	7-67
7.6.3.8.2	Channel 2 Trigger Hysteresis Adjustment	7-68
7.6.3.8.3	Channel 3 Trigger Hysteresis Adjustment	7-69
7.6.3.8.4	Channel 4 Trigger Hysteresis Adjustment	7-70
7.6.3.8.5	External Trigger Hysteresis Verification	7-71
7.6.3.9	DC 50Ω Overload Adjustment	7-72
7.6.3.9.1	Channel 1 DC 50Ω Overload Adjustment	7-72
7.6.3.9.2	Channel 2 DC 50Ω Overload Adjustment	7-73
7.6.3.9.3	Channel 3 DC 50Ω Overload Adjustment	7-74
7.6.3.9.4	Channel 4 DC 50Ω Overload Adjustment	7-74
Section 8	Schematics Diagrams - Parts List	8-1
8.1.1	9354A Sub Assemblies	8-2
8.1.2	9354AM Sub Assemblies	8-2
8.1.3	9354AL Sub Assemblies	8-2
8.1.4	9354T Sub Assemblies	8-3
8.1.5	9354TM Sub Assemblies	8-3
8.2	F9302-1-X Processor Board Schematic	8-4
8.2.1	F9302-1-X Processor Board Layout	8-12
8.2.2	F9302-1-X Processor Board Parts List	8-18
8.3	F9350/M-21 Acquisition Memory Schematic	8-24
8.3.1	F9350/M-21 Acquisition Memory Layout	8-29
8.3.2	F9350-21 Acquisition Memory Parts List	8-35
8.3.3	F9350M-21 Acquisition Memory Parts list	8-37
8.3.4	F9350L-2 Acquisition Memory Schematic	8-38
8.3.5	F9350L-2 Acquisition Memory Layout	8-43
8.3.6	F9350L-2 Acquisition Memory Parts List	8-49
8.4	F9354-31 Main Board Schematic	8-50
8.4.1	F9354-31 Microprocessor Control Schematic	8-51
8.4.2	F9354-31 Front End Control Schematic	8-56
8.4.2.1	F9354-31 Front End Power Supply Schematic	8-58
8.4.2.2	F9354-31 Front End Channel 1 Schematic	8-59
8.4.2.3	F9354-31 Front End Channel 2 Schematic	8-62
8.4.2.4	F9354-31 Front End Channel 3 Schematic	8-65
8.4.2.5	F9354-31 Front End Channel 4 Schematic	8-68
8.4.2.6	F9354-31 Front End Trigger Schematic	8-71
8.4.2.7	F9354-31 Front End Probe Calibrator Schematic	8-75
8.4.3	F9354-31 ADC Schematic	8-76
8.4.3.1	F9354-31 ADC Power Supply Schematic	8-77
8.4.3.2	F9354-31 ADC Control Channel 1 & 2 Schematic	8-78

Section 8	Schematics Diagrams - Parts List	Page
8.4.3.3	F9354-31 ADC Channel 1 Schematic	8-79
8.4.3.4	F9354-31 ADC Channel 2 Schematic	8-80
8.4.3.5	F9354-31 ADC Connector Channel 1 & 2 Schematic	8-81
8.4.3.6	F9354-31 ADC Buffer Channel 1 Schematic	8-84
8.4.3.7	F9354-31 ADC Buffer Channel 2 Schematic	8-85
8.4.3.8	F9354-31 ADC Control Channel 3 & 4 Schematic	8-86
8.4.3.9	F9354-31 ADC Channel 3 Schematic	8-87
8.4.3.10	F9354-31 ADC Channel 4 Schematic	8-88
8.4.3.11	F9354-31 ADC Connector Channel 3 & 4 Schematic	8-89
8.4.3.12	F9354-31 ADC Buffer Channel 3 Schematic	8-92
8.4.3.13	F9354-31 ADC Buffer Channel 4 Schematic	8-93
8.4.4	F9354-31 TimeBase Schematic	8-94
8.4.5	F9354-31 Microprocessor Control Layout	8-101
8.4.5.1	F9354-31 Front End Layout	8-105
8.4.5.2	F9354-31 Trigger Layout	8-109
8.4.5.3	F9354-31 ADC Layout	8-113
8.4.5.4	F9354-31 TimeBase Layout	8-117
8.4.6	F9354-31 Parts List	8-121
8.5	F9300-4 GPIB/RS232 Interface Schematic	8-157
8.5.1	F9300-4 GPIB/RS232 Interface Layout	8-158
8.5.2	F9300-4 GPIB/RS232 Interface Parts List	8-161
8.6	F9354-5 Front Panel Schematic	8-163
8.6.1	F9354-5 Front Panel Layout	8-164
8.6.2	F9354-5 Front Panel Parts List	8-168
8.7	F9300-6 Centronics Interface Schematic	8-169
8.7.1	F9300-6 Centronics Interface Layout	8-171
8.7.2	F9300-6 Centronics Interface Parts List	8-174
8.8	F9300-7 Printer Controller Schematic	8-176
8.8.1	F9300-7 Printer Controller Layout	8-178
8.8.2	F9300-7 Printer Controller Parts List	8-181
8.9	F9300-8 PCMCIA III Hard Disk Controller Schematic	8-184
8.9.1	F9300-8 PCMCIA III Hard Disk Controller Layout	8-185
8.9.2	F9300-8 PCMCIA III Hard Disk Controller Parts List	8-188
8.10	Deflection and Video Schematic	8-190
8.10.1	93XX-Deflection Schematic	8-190
8.10.2	93XX-Video Schematic	8-192
8.10.3	93XX-Deflection Parts List	8-193
8.10.4	93XX-Video Parts List	8-194
8.11	PS9351 Power Supply Schematic	8-195
8.12	M935X Mechanical for 9354A/T	8-197
8.13	Accessories for 9354A/T	8-198
8.14	93XX-FDGP Option Parts List	8-199
8.15	93XX-FD01 Option	8-200
8.16	93XX-GP01 Option	8-200

Section 9	Mechanical Parts	Page
9.1	Figure 9.1 : 9354A/T Exploded View	9-2
9.1.1	9354A/T Assembly Part Description	9-3
9.2	Figure 9.2 : 9354A/T Lower Cover Exploded View	9-4
9.2.1	9354A/T Lower Cover Assembly Description	9-5
9.3	Figure 9.3: Front Frame Assembly Exploded View	9-6
9.3.1	Front Panel Assembly Description	9-7
9.4	Figure 9.4: Rear Panel Assembly Exploded View	9-8
9.4.1	Rear Panel Assembly Description	9-9
9.5	Figure 9.5 : Power Supply Exploded View	9-10
9.5.1	Power Supply Description	9-11
9.6	Figure 9.6: FD01 Floppy Option Assembly	9-12
9.6.1	FD01 Floppy Option Assembly Description	9-13
9.7	Figure 9.7: GP01 Printer Option Assembly	9-14
9.7.1	GP01 Printer Option Assembly Description	9-15
9.8	Figure 9.8: 9354A/T Front View	9-16
9.9	Figure 9.9: 9354A/T Rear View	9-17
9.10	Figure 9.10 : 9354A/T Dimensions	9-18
Section 10	Connecting the 9354A/T to a Plotter or a Printer	
10.1	Introduction	10-1
10.2	Plotters	10-3
10.2.1	HP 7470A Plotter	10-3
10.2.2	HP 7550A Plotter	10-3
10.2.3	Hitachi 672 Graph Plotter (or NSA 672)	10-4
10.3	Printers	10-4
10.3.1	Centronics Printers	10-4
10.3.2	RS 232 Printers	10-5
10.3.2.1	Epson FX80	10-5
10.3.2.2	Citizen 120D	10-5
10.3.2.3	HP LaserJet	10-5
10.3.2.4	HP QuietJet	10-5
10.3.2.5	HP ThinkJet	10-6
10.3.2.6	HP DeskJet	10-6
10.3.2.7	Brother Printers	10-6
10.3.3	GPIB Printers	10-7
10.3.3.1	HP QuietJet	10-7
10.3.3.2	HP ThinkJet	10-7
10.3.3.3	HP PaintJet	10-7
10.4	Information on GPIB	10-8
10.4.1	Introduction	10-8
10.4.2	Functions in the GPIB	10-8

SECTION 1 GENERAL INFORMATION

1.1 Initial Inspection

It is recommended that the shipment be thoroughly inspected immediately upon delivery to the purchaser. All material in the container should be checked against the enclosed Packing List. LeCroy cannot accept responsibility for shortages in comparison with the Packing List unless notified promptly. If the shipment is damaged in any way, please contact the Customer Service Department or local field office immediately.

1.2 Warranty

LeCroy warrants its oscilloscope products to operate within specifications under normal use for a period of three years from date of shipment. Spares, replacement parts and repairs are warranted for 90 days. The instrument's firmware is thoroughly tested and thought to be functional, but is supplied "as is" with no warranty of any kind covering detailed performance. Products not manufactured by LeCroy are covered solely by the warranty of the original equipment manufacturer.

In exercising this warranty, LeCroy will repair or, at its option, replace any product returned to the Customer Service Department or an authorized service facility within the warranty period, provided that the warrantor's examination discloses that the product is defective due to workmanship or materials and that the defect has not been caused by misuse, neglect, accident or abnormal conditions or operation.

LeCroy will return all in-warranty products with transportation prepaid. This warranty is in lieu of all other warranties, expressed or implied, including but not limited to any implied warranty of merchantability, fitness, or adequacy for any particular purpose or use. LeCroy shall not be liable for any special, incidental, or consequential damages, whether in contract or otherwise.

1.3 Product Assistance

Comporate Headquarters

Answers to questions concerning installation, calibration, and use of LeCroy equipment are available from the Customer Service Department, 700 Chestnut Ridge Road, Chestnut Ridge, New York 10977-6499, U.S.A., tel: (914) 578-6060, or 6061, and 2 rue du Préde-la-Fontaine, 1217 Meyrin 1, Geneva, Switzerland, tel: (41) 22.719.21.11, or your local field engineering office.

1.4 Addresses

Corporate Headquarters	<u>European Headquarters</u>
LECROY CORPORATION 700 CHESTNUT RIDGE ROAD CHESTNUT RIDGE, NY 10977-6499 USA	LECROY SA 2, CHEMIN PRE-DE-LAFONTAINE CH-1217 MEYRIN 1 GENEVA SWITZERLAND
TEL: (914) 425-2000 578-6060 or 6061 FAX: (914) 425-8967	TEL: 41 (22) 719-21-11 FAX: 41 (22) 782-39-15

Europe

LECROY GMBH
MANNHEIMERSTRASSE 177
POSTFACH 103767
D-6900 HEIDELBERG GERMANY

TEL: 49.6221.831001 FAX: 49.6221.834655

LECROY LTD
28 BLACKLANDS WAY
ABINGDON, OXON OX14 1DY
GREAT BRITAIN

TEL: 44.23.553.31.14 FAX: 44.23.552.87.96

LECORY SRL VIA CONCESIO 325 I-00188 ROMA ITALY

TEL: 39.6.300.97.00 FAX: 39.6.300.96.00

ESSA EUIPOS Y SISTEMAS SA APOLONIO MORALES 13-B E-28036 MADRID

TEL: 34.1.359.0088 FAX: 34.1.359.0298

DEWETRON ELEKTRONISCHE MESSGERAETE Ges.M.B.H. FOELLINGERSTRASSE 9E 8044 GRAZ AUSTRIA

TEL: 43.316.391.804 FAX: 43.316.391.052

ORBIS OY VANHA KAARELANTIE 9 01610 VANTAA FINLAND

TEL: 358.0.566.4066 FAX: 358.0.531.604 LECROY BV WAALRESEWEG 17 NL-5554 HA VALKENSWAARD THE NETHERLANDS

TEL: 31.4902.8.9285 FAX: 31.4902.42628

LECROY SARL

1, AVENUE DE L'ATLANTIQUE
LES ULIS 91976 COURTABOEUF
FRANCE

TEL: 33.1.69.18.83.20 FAX: 33.1.69.07.40.42

LECROY SA BAHNOFSTRASSE 18 5600 LENZBURG SWITZERLAND

TEL: 4164.519.181 FAX: 4164.519.192

M.T. BRANDAO, LDA RUA DO QUANZA, 150 4000 PORTO PORTUGAL

TEL: 351.2.830.2709 FAX: 351.2.830.2710

LUTRONIC APS NAVERLAND 2 2600 GLOSTRUP DENMARK

TEL: 45.4342.9764 FAX: 45.4342.9765

HELLENIC SCIENTIFIC REP., LTD 11 VRASSIDA STREET 115 28 ATHENS GREECE

TEL: 30.1.721.1140 or 721.3154

FAX: 30.1.724.1374

AVANTEC TVETENVEIEN 6 0661 OSLO NORWAY ABB NERA A/S KOKSTADVEGEN 23 KOKSTAD BERGEN NORWAY

TEL: 472.63.05.20 FAX: 472.65.84.14

TEL: 351.2.815.680 FAX: 351.2.815.630

MEASUREMENT SYSTEMS SCANDINAVIA AB P.O. BOX 393 FORETAGSALLEN 12, HUS 5 BV 184 24 AKERSBERGA SWEDEN

TEL: 46.8.540.68100 FAX: 46.8.540.66536

Eastern]	<u>Europe</u>
-----------	---------------

Mideast

ELSINCO GMBH ROTENMUHLGASSE 11 1120 VIENNA AUSTRIA

AMMO 9, HARUGEI MALKHUT RAMAT HACHAYAL. P.O BOX 13132, 61131 TEL AVIV ISRAEL

TEL: 43.222.812.1751 FAX: 43.222.812.2329 TEL: 972.3.6478740 FAX: 972.3.6478771

<u>Asia</u>

LECROY JAPAN CORPORATION ESAKA SANSHO BLDG - 3RD FLOOR 16-3, 3-CHOME TARUMICHO, SUITA CITY OSAKA 564 JAPAN LECROY JAPAN CORPORATION ZAIKEN BLDG 6TH FLOOR 19-3, 2-CHOME SASAZUKA, SHIBUYA-KU TOKYO 151 JAPAN

TEL: 816.330.0961 FAX: 816.330.8096 TEL: 813.3376-9400 FAX: 813.3376.9587

SCIENTIFIC DEVICES AUSTRALIA 2 JACKS ROAD SOUTH OAKLEIGH, VICTORIA AUSTRAL!A TATA-HONEYWELL 55-A/8 & 9 HADAPSPAR INDUSTRIAL ESTATE PUNE 411 013 INDIA

TEL: 61.3579.3622 FAX: 61.3579.0971 TEL: 91.212.670445 FAX: 91.212.672205

E.C. GOUGH, LTD 245 ST.ASAPH STREET P.O. BOX 22073 CHRISTCHURCH NEW ZEALAND ELECTRO TECH CORPORATION 1ST FLOOR, 16 KAZI CHAMBERS BAHADURSHAH ZAFAR ROAD KARACHI-74800 PAKISTAN

TEL: 64.3.3798.740 FAX: 64.3.3796.776

TEL: 92.21.493-8087 FAX: 92.21.493-7749 SINGAPORE ELECTRONICS AND ENGINEERING, LTD 24 ANG MO KIO STREET, 65 SINGAPORE 2056

TEL: 65.480.7783 FAX: 65.481.4272

LECOLN TECHNOLOGY CO.,LTD. 4F-1, NO. 214, SEC.1 HO PING E ROAD TAIPEI TAIWAN R.O.C.

TEL: 886.2.365.0612 FAX: 886.2.367.1792

SCHMIDT ELECTRONICS LTD 18 F, GREAT EAGLE CENTRE 23 HARBOUR ROAD WANCHAI HONG KONG

TEL: 852.2507.0222 FAX: 852.2827.5656

P.T. DWI TUNGGAL JAYA SAKTI WISMA RAJAWALI, 14TH FLOOR JL JENDRAL SUDIRMAN 34 JAKARTA 10220INDONESIA

TEL: 62.21.570.4563 FAX: 62.21.583.218

North America

ALLAN CRAWFORD LTD 5835 COOPERS AV, MISSISSAUGA ONTARIO L4Z 1Y2, CANADA

TEL: 416 890.2010 FAX: 416 890.1959

South America

SEARCH SA VIAMONTE 1716 - PISO 7 1055 CAPITAL FEDERAL ARGENTINA

TEL: 54.1.46.6156 FAX: 54.1.394.8374 ABEX ENGINEERING PTE. LTD. 37 KALLANG PUDDING ROAD 08-08 TONG LEE BUILDING BLOCK B SINGAPORE 1334

TEL: 8412818 FAX: 8415988

MEASURETRONIX 2102/31 RAMKAMHANG ROAD BANGKOK 10240 THAILAND

TEL: 66.2.375.2733-4 FAX: 66.2.374.9965

WOOJOO HI-TECH CORP. DONGHYUN BLDG. 102-4 MOONJUNG-DONG, SONGPA-KU SEOUL 138-200 KOREA

TEL: 82.2.449.5472 FAX: 82.2.449.5475

ATP-HI-TEK ALAMEDA AMAZONAS 422 ALPHAVILLE 06454-030 BARUEI, SP BRAZIL

TEL: 55.11.421.5477 FAX: 55.11.421.5032

Central America

NUCLEOELECTRONICA, SA CALZ. LAS AGUILAS 101 DELEGATCION ALVARO OBREGON 01710 MEXICO, 20, d.f. MEXICO

TEL: 52.5593.604 FAX: 52.5593.6021

South Africa

WESTPLEX LTD TUSCANY HOUSE 376 OAK AVENUE RANDBURG 2194 REPUBLIC OF SOUTH AFRICA

TEL: 27.11.787.0473 FAX: 27.11.787.0237

1.5 Maintenance Agreements

LeCroy offers a selection of customer support services. Maintenance agreements provide extended warranty and allow the customer to budget maintenance costs after the initial three years warranty has expired. Other services such as installation, training, enhancements and on-site repair are available through specific Supplemental Support Agreements.

1.6 Documentation Discrepancies

LeCroy is committed to providing state-of-the-art instrumentation and is continually refining and improving the performance of its products. While physical modifications can be implemented quite rapidly, the corrected documentation frequently requires more time to produce. Consequently, this manual may not agree in every detail with the accompanying product. There may be small discrepancies in the values of components for the purposes of pulse shape, timing, offset, etc., and, occasionally, minor logic changes. Where any such inconsistencies exist, please be assured that the unit is correct and incorporates the most up-to-date circuitry. In a similar way the firmware may undergo revision when the instrument is serviced. Should this be the case, manual updates will be made available as necessary.

1.7 Service Procedure

Products requiring maintenance should be returned to the Customer Service Department or authorized service facility. LeCroy will repair or replace any product under warranty at no charge. The purchaser is only responsible for one way transportation charges. For all LeCroy products in need of repair after the warranty period, the customer must provide a Purchase Order Number before repairs can be initiated. The customer will be billed for parts and labor for the repair, as well as for shipping.

1.8 Return Procedure

To determine your nearest authorized service facility, contact the Customer Service Department or your field office. All products returned for repair should be identified by the model and serial numbers and include a description of the defect or failure, name and phone number of the user, and, in the case of products returned to the factory, a Return Authorization Number (RAN). The RAN may be obtained by contacting the customer service department in New York, tel: (914)578-6060, or 6061; in Geneva, tel: (41)22/719.21.11, or your nearest sales office.

Return shipment should be made prepaid. LeCroy will not accept C.O.D. or Collect Return Shipments. Air-freight is generally recommended. Wherever possible, the original shipping carton should be used. If a substitute carton is used, it should be rigid and be packed such that the product is surrounded with a minimum of four inches of excelsior or similar shock-absorbing material. In addressing the shipment, it is important that the Return Authorization Number be displayed on the outside of the container to ensure its prompt routing to the proper department within LeCroy.

1.9 Safety Precautions

The following servicing instructions are for use by qualified personnel only. Do not perform any servicing other than contained in service instructions. Refer to procedures prior to performing any service.

Exercise extreme safety when testing high energy power circuits. Always turn the power OFF, disconnect the power cord, discharge the cathode ray tube and all capacitors before disassembling the instrument.

The WARNING symbol used in this manual indicates dangers that could result in personal injury.

The C A U T I O N symbol used in this manual identify conditions or practices that could damage the instrument.

1.10 Antistatic Precautions

CAUTION

Any static charge that builds on your person or clothing may be sufficient to destroy CMOS components, integrated circuits.

In order to avoid possible damage, the usual precautions against static electricity are required.

- Handle the boards in antistatic boxes or containers with foam specially designed to prevent static build-up.
- Ground yourself with a suitable wrist strap.
- Disassembly the instrument at a properly grounded work station equipped with antistatic mat.
- When handling the boards, do not touch the pins.
- Stock the boards in antistatic bags.

SECTION 2 SPECIFICATIONS

9354A/M/L & 9354T/M Digital Oscilloscope



9350A Family Digital Oscilloscopes 500 MHz Bandwidth, 2 GS/s

Main Features

- Two and Four Channel versions
- Up to 8M Point record length
- 2.5 ns Peak Detect
- Glitch, Pattern, Qualified, Interval, Dropout and TV Triggers
- 8-bit vertical resolution,11 with ERES option
- Fully programmable via GPIB and RS-232-C
- Automatic PASS/FAIL testing
- Advanced Signal Processing
- DOS Compatible Floppy Disk and Memory Card options
- Internal Printer Option

High speed and long memory make this family the ideal general-purpose Digital Storage Oscilloscopes. Two and Four Channel simultaneous sampling at 500 MS/s meets demanding high-speed design applications. Even faster sampling may be achieved by combining channels, up to a maximum of 2 GS/s.

Acquisition memories may also be combined, providing up to 8 M Points of continuous or segmented waveform recording. Repetitive signals are digitized at up to 10 GS/s. These combined capabilities make the 9350A family the state-of-theart in current DSO technology.



A unique peak detect scheme captures 2.5 ns glitches - even at slow time bases - without destroying the underlying data. This provides circuit designers with the benefits of peak detection without any loss of precision.

Live waveforms may be viewed simultaneously with up to 3 expansions, showing all of the signal detail. Expansions are shown as highlights on the main trace.

SMART Trigger modes like Glitch, Pattern, Dropout and TV allow you to capture precisely the events of interest. Preand Post-Trigger delay, and Time and Events Holdoff are also standard.

The 9350A family features the proven user-interface of LeCroy's portable scopes. A bright, high-resolution 9" CRT allows optimum waveform viewing under any conditions. Menus and text are arranged around the graticules - they never overwrite the waveforms. Dedicated control knobs keep the scope's performance at your fingertips.

A comprehensive range of signal processing functions including FFT and Math on live or stored waveforms, allows extensive waveform manipulation. DOS compatible floppy disk and memory card options store waveforms and test setups, and simplify data transfer to any PC.

Features and Benefits

PRECISION ACQUISITION

The 9350A family combines all the technologies required for accurate waveform digitizing. Low-noise high-sensitivity amplifiers drive 500 MS/s 8-bit ADC's which are clocked simultaneously by a high-precision timebase. 500 MHz system bandwidth allows accurate risetime measurements below 1 nanosecond. Vertical resolution can be enhanced to 11 bits using ERES.

MEMORY FOR ALL APPLICATIONS

The 9350A family offers three different memory lengths:

50k points per channel (std. versions), 250k points per channel ("M" versions), 2M points per channel ("L" versions). Memory length may be extended by combining the acquisition memories of multiple channels (see table below).

Long memories provide higher horizontal resolution. LeCroy's unique memory management system, combined with an advanced peak detection system, maximizes the benefits of longer memory. Showing the entire waveform onscreen allows immediate location of glitches or other disturbances, and guarantees the highest possible sample rate on all timebases.

THE MOST ADVANCED PEAK DETECT

9350A family members offer 2.5 ns peak detect, available whenever the digitizer system runs at below 200MS/s This captures fast glitches or signal details that might have been missed due to undersampling.

One unwanted effect of other peak detection systems is a severe loss of horizontal (time) precision. This occurs because detected peaks are known to have occurred *during* a particular interval, but not at any specific time. This means that signals acquired with other manufacturers peak detection techniques cannot be successfully used for further processing or analysis.

LeCroy solves this problem by maintaining both peak detected and normally sampled waveforms for each signal. Thus the user gets all the benefits of peak detection without any loss of time precision.

EXTENSIVE TRIGGER SYSTEM

To capture rare or complex conditions, SMART trigger functions are available. These include Glitch with 2.5 ns resolution to trigger down to 1 ns and a unique Dropout mode, which triggers when the signal disappears for a selectable period of time. Other trigger modes include Pattern, Interval, Stateor Edge-Qualified and TV. TV trigger allows individual lines or fields in PAL, SECAM, NTSC and nonstandard video to be selected. Pre- and Post-trigger delay are fully variable.

ProBus™ PROBE INTERFACE

The ProBus system provides a complete measurement solution from probe tip to oscilloscope display. ProBus is an intelligent interconnection between LeCroy oscilloscopes and a growing range of innovative probes, including high-bandwidth low-loading FET probes.

AUTOMATIC MEASUREMENTS

The following Parametric measurements are available, together with their Average, Highest, Lowest values and Standard Deviation:

amplitude	falltime	peak to peak
area	f80-20%	period
base	f@level (abs)	risetime
cycles	f@level (%)	r 20-80%
delay	frequency	r@level(abs)
∆delay	maximum	r@level (%)
∆t at level (abs)	mean	RMS
Δt at level (%)	median	std dev
Δt at level (t=0,abs)	minimum	top
Δt at level (t=0,%)	overshoot +	width
duty Cycle	overshoot -	

Pass/Fail testing allows up to 5 parameters to be tested against selectable thresholds. Waveform Limit Testing is performed using Masks which may be defined inside the instrument. Any failure will cause preprogrammed actions such as Hardcopy, Save, GPIB SRQ or Pulse Out.

DOS COMPATIBLE MASS STORAGE

All LeCroy 9300-series scopes offer an optional 3.5" 1.44 MB floppy disk drive which stores traces, setups, screen graphics and Pass/Fail templates. Data are stored as DOS files, which may be read directly by a PC. A high-speed DOS compatible PCMCIA memory card option is also available.

BUILT-IN PRINTER

As well as driving most printers and plotters via GPIB, RS-232-C and (optional) Centronics interface, the 9300 series offers an optional internal printer. This thermal printer produces full resolution screendumps, 126 x 90 mm, in under 10 seconds.

FLEXIBLE INTERFACING

GPIB and RS-232-C interfaces may be used for full remote control of the instrument. All front-panel and internal processing functions can be controlled via either interface. For applications where throughput is essential, the GPIB interface transfers hundreds of waveforms per second. A Front-Panel BNC connector may be setup to provide Pass/Fail test output pulses.

MULTIPLE DISPLAY MODES

The high-resolution raster display shows from one to four independent waveform grids. Waveforms are represented as dots joined by vectors which may be turned on or off. Four Zoom/Math traces may be used for zooming waveforms or for signal processing. The area to be zoomed is selected by moving an intensified portion of the main waveform. Persistence display mode allows easy viewing of signal changes over time, and XY mode plots any two sources against one another. Cursors are usable in all display modes.

EXTENSIVE WAVEFORM MATH

Standard built-in waveform processing includes mathematics (Add, Subtract, Multiply and Divide, Negation and Identity) and Summation Averaging (up to 1000 sweeps). Option WP01 provides Summed and Continuous Averaging, Waveform Math Functions, Extrema and Enhanced Resolution Modes. More information is available in the 9300 WP01 datasheet.

OPTIONAL FFT PACKAGE

Option WP02 provides comprehensive Spectral Analysis capabilities, permitting the system designer to identify characteristics which may not be apparent in the time domain. WP02 provides a wide selection of displayed projections and windowing functions, as well as averaging in the frequency domain. For more information, see the 9300 WP02 datasheet.

9350A Family Specifications

ACQUISITION SYSTEM

Bandwidth (-3 dB):

@ 50 Ω: DC to 500 MHz

100 mV/div: 400 MHz

50 mV/div and below: 350 MHz

@ 1 M Ω DC: DC to 250 MHz typ. at probe tip. No. of Channels: 4 (9354A) or 2 (9350A) No. of Digitizers: 4 (9354A) or 2 (9350A) Maximum Sample Rate and Acquisition

Memories: See table below.

Sensitivity: 2 mV/div to 5 V/div, fully variable. **Scale factors:** A vast choice of probe

attenuation factors are selectable.

Offset Range: 2.0 - 9.9 mV/div: ±120 mV 10.0 - 199 mV/div: ±1.2 V

0.2 - 5.0 V/div: ±24 V

DC Accuracy: ≤±2% full scale (8 divisions) at

0 V offset.

Vertical Resolution: 8 bits. Bandwidth Limiter: 30 MHz Input Coupling: AC, DC, GND.

Input Impedance: 1 M Ω //15 pF or 50 Ω ±1%.

Max Input:

1 MΩ: 250 V (DC+peak AC ≤10 kHz) 50 Ω: \pm 5 V DC (500 mW) or 5 V RMS

TIME BASE SYSTEM

Timebases: Main and up to 4 Zoom Traces. **Time/Div Range:** 1 ns/div to 1,000 s/div.

Clock Accuracy: ≤10 ppm Interpolator resolution: 10 ps

Roll Mode: ranges 500 ms to 1,000 s/div. For > 50k points:10 s to 1,000 s/div.

External Clock: ≤100 MHz on EXT input with ECL, TTL or zero crossing levels. Optional up to 500 MHz rear panel clock input.

External Reference: Optional 10 MHz rear-

panel input.

TRIGGERING SYSTEM

Trigger Modes: Normal, Auto, Single, Stop. **Trigger Sources:** CH1, CH2, Line, Ext, Ext/10 (9354A: CH3, CH4). Slope, Level and Coupling for each can be set independently.

Slope: Positive, Negative.

Coupling: AC, DC, HF (up to 500 MHz),

LFREJ, HFREJ.

Pre-trigger recording: 0 to 100% of full scale

(adjustable in 1% div increments). **Post-trigger delay:** 0 to 10,000 divisions

(adjustable in 0.1 div increments). **Holdoff by time:** 10 ns to 20 s.

Holdoff by events: 0 to 99,999,999 events. Internal Trigger Sensitivity Range: ±5 div.

EXT Trigger Max Input:

1 M Ω //15 pF: 250 V (DC+peak AC ≤10 kHz) 50 Ω ±1%: ±5 V DC (500 mW) or 5 V RMS **EXT Trigger Range:** ±0.5 V (±5 V with Ext/10)

Trigger Timing: Trigger Date and Time are listed in the Memory Status Menu.

Trigger Comparator: Optional ECL rear panel output.

SMART TRIGGER TYPES

Pattern: Trigger on the logic AND of 5 inputs - CH1, CH2, CH3, CH4, and EXT Trigger, (9350A: 3 inputs - CH1, CH2, EXT) where each source can be defined as High, Low or Don't Care. The Trigger can be defined as the beginning or end of the specified pattern.

Signal or Pattern Width: Trigger on width between two limits selectable from 2.5ns to 20s.

Signal or Pattern Interval: Trigger on interval between two limits selectable from 10ns to 20s

Dropout: Trigger if the input signal drops out for longer than a time-out from 25ns to 20s.

State/Edge Qualified: Trigger on any source only if a given state (or transition) has occurred on another source. The delay between these events can be defined as a number of events on the trigger channel or as a time interval.

TV: Allows selection of both line (up to 1500) and field number (up to 8) for PAL, SECAM, NTSC or non-standard video.

ACQUISITION MODES

Random Interleaved Sampling (RIS):

for repetitive signals from 1 ns/div to $2 \mu s/div$ (M,L: from 1 ns/div to $5 \mu s/div$).

Single shot: for transient and repetitive signals

from 10 ns/div (all channels active).

Peak detect: captures and displays 2.5 ns glitches or other high-speed events.

Sequence: Stores multiple events in segment-

ed acquisition memories.

 Number of segments available:

 9350A-54A
 2-200

 9350AM-9354AM
 2-500

 9350AL-9354AL
 2-2,000

Min. Dead Time between segments: 60 µs

DISPLAY

Waveform style: Vectors connect the individual sample points, which are highlighted as dots. Vectors may be switched off.

CRT: 12.5x17.5 cm (9" diagonal) raster.

Resolution: 810 x 696 points.

Modes: Normal, X-Y, Variable or Infinite

Persistence.

Real-time Clock: Date, hours, minutes,

seconds.

Graticules: Internally generated; separate intensity control for grids and waveforms.

Grids: 1, 2 or 4 grids.

Formats: YT, XY, and both together.

Channels Used	Maximum	Memory per Channel				
	Sample Rate	9350A 9354A	9350AM 9354AM	9350AL 9354AL	Notes	
All Peak Detect OFF	500 MS/s	50k	250k	2M	All channels active	
Ail Peak Detect ON	100 MS/s data 400 MS/s peak	25k data + 25k peaks	100k data + 100k peaks	1M data + 1M peaks	All channels active 2.5 ns peak detect	
Paired Peak Detect OFF	1 GS/s	100k	500k	4M	9350A: CH1 9354A: CH2 + CH3	
Paired + PP 092 Peak Detect OFF	2 GS/s	200k	1M	8M	9354A models only	

Vertical Zoom: Up to 5x Vertical Expansion (50x with averaging, up to 40 µV sensitivity). Maximum Horizontal Zoom Factors:

9350A-9354A 1000x 9350AM-9354AM 5.000x 9350AL-9354AL 40.000x

Waveforms can be expanded to give 4-5 points/division. This implies zoom factors up to 200,000x for the 9354AL when channels are combined.

INTERNAL MEMORY

Waveform Memory: Up to four 16-bit Memories (M1, M2, M3, M4). Processing Memory: Up to four 16-bit Waveform Processing Memories (A, B, C, D). Setup Memory: Four non-volatile memories. Optional Cards or Disks may also be used for high-capacity waveform and setup storage.

CURSOR MEASUREMENTS

Relative Time: Two cursors provide time measurements with resolution of ±0.05% fullscale for unexpanded traces; up to 10% of the sampling interval for expanded traces. The corresponding frequency value is displayed. Relative Voltage: Two horizontal bars measure voltage differences up to ±0.2% of full-scale in single-grid mode.

Absolute Time: A cross-hair marker measures time relative to the trigger and voltage with respect to ground.

Absolute Voltage: A reference bar measures voltage with respect to ground.

WAVEFORM PROCESSING

Up to four processing functions may be performed simultaneously. Functions available are: Add, Subtract, Multiply, Divide, Negate, Identity and Summation Averaging

Average: Summed averaging of up to 1,000 waveforms in the basic instrument. Up to 106 averages are possible with Option WP01. Envelope*: Max, Min, or Max and Min values

of from 1 to 106 waveforms. ERES*: Low-Pass digital filter provides up to

11 bits vertical resolution. Sampled data is always available, even when a trace is turned off. Any of the above modes

can be invoked without destroying the data. FFT*: Spectral Analysis with four windowing functions and FFT averaging.

*Envelope and ERES modes are provided in Math Package WP01. FFT is in WP02.

AUTOSETUP

Pressing Autosetup sets timebase, trigger and sensitivity to display a wide range of repetitive signals. (Amplitude 2mV to 40V; frequency above 50Hz; Duty cycle greater than 0.1%).

Copyright October 1994. LeCroy is a registered trademark of LeCroy Corporation, All rights reserved, Information in this publication supersedes all earlier versions. Specifications subject to change without notice.

Autosetup Time: Approximately 2 seconds. Vertical Find: Automatically sets sensitivity and offset.

PROBES

Model: One PP002 (10:1, 10 M Ω // 15 pF)

probe supplied per channel.

The 9350A family is fully compatible with LeCroy's range of FET Probes, which may be purchased separately.

Probe calibration: Max 1 V into 1 M Ω , 500 mV into 50 Ω, frequency and amplitude programmable, pulse or square wave selectable, rise and fall time 1 ns typical. Alternatively, the Calibrator output can provide a trigger output or a PASS/FAIL test output.

INTERFACING

Remote Control: Of all front-panel controls, as well as all internal functions is possible by GPIB and RS-232-C.

RS-232-C Port: Asynchronous up to 19200 baud for computer/terminal control or printer/ plotter connection.

GPIB Port: (IEEE-488.1) Configurable as talker/listener for computer control and fast data transfer. Command Language complies with requirements of IEEE-488.2.

Centronics Port: Optional hardcopy parallel interface.

Hardcopy: Screen dumps are activated by a front-panel button or via remote control. TIFF and BMP formats are available for importing to Desktop Publishing programs. The following printers and plotters can be used to make hardcopies: HP DeskJet (color or BW), HP ThinkJet, QuietJet, LaserJet, PaintJet and EPSON printers. HP 7400 and 7500 series, or HPGL compatible plotters. An optional internal high resolution graphics printer is also available.

GENERAL

Auto-calibration ensures specified DC and timing accuracy.

Temperature: 5° to 40° C (41° to 104° F) rated 0° to 50° C (32° to 122° F) operating.

Humidity: <80%.

Shock & Vibration: Meets MIL-STD-810C modified to LeCroy design specifications and MIL-T-28800C

Power: 90-250 V AC, 45-66 Hz, 230 W. Battery Backup: Front-panel settings

maintained for two years.

Dimensions:(HWD)8.5"x14.5"x16.25",

210mm x 370mm x 410mm. Weight: 13 kg (28.6 lbs) net, 18.5 kg (40.7 lbs) shipping. Warranty: Two years.

Ordering Information

Oscilloscope and Options

9354A/AM/AL 4-Ch Digital Oscilloscope 9350A/AM/AL 2-Ch Digital Oscilloscope 9XXX-WP01 Waveform Math 9XXX-WP02 FFT Processing 9XXX-MC01/04 Memory Card Reader

w/512KB Memory Card Internal 3.5" Floppy Drive

93XX-FD 93XX-GP Internal Graphics Printer 935XA-CKTRIG 10MHz External Clock

Reference Input

500MHz External Clock input Trigger Comparator Output

Oscilloscope Accessories Supplied with Instrument:

935X-OM Operator's Manual 93XX-RCM Remote Control Manual

93XX-FC Front Cover

PP002 350MHz, 10MΩ Passive

Probe (1 per channel)

PP092 ProBus Channel Multiplexer

(9354A only)

Ordered separately:

	1. O. y .
93XX-W5	5 years extended warranty
93XX-CC	Calibration Certificate
935XA-SM	Service Manual
9XXX-MC02	128K Memory Card
9XXX-MC04	512K Memory Card
DC/GPIB	2 Meter GPIB Cable
SG9001	High Voltage Protector
OC9001	Oscilloscope Cart
AP020	1 GHz 10:1 FET Probe
AP021	800 MHz 5:1 FET Probe
AP030	15 MHz Differential Probe
PP062	1 GHz, 10:1, 500 Ω Passive
	Probe
PP090	ProBus 75 to 50 Ω adapter
93XX-RM01	Rackmount
93XX-TC1	Transit Case
93XX-TC2	Carrying Bag

USA Direct Sales: 1 (800) 5LE-CROY

LeCroy Worldwide Sales Offices

ASIA/PACIFIC LeCroy Pty Ltd 61.38.90.7358 BENELUX LeCroy BV 04902.8.9285 FRANCE LeCroy SARL (1).69.18.83.20 **GERMANY** LeCroy GmbH 06221 83.10.01 ITALY LeCroy SRL 06.336.797.00 JAPAN Osaka LeCroy Japan 0816.330.0961 JAPAN Tokyo LeCroy Japan 0813.3376.9400 SWITZERLÁND Geneva 022.719.21.11 SWITZERLAND Lenzburg 064.51.91.81 United Kingdom LeCroy Ltd (01235) 533114




The Digital Scope Specialists



9354T/9354TM Digital Oscilloscopes 500 MHz Bandwidth, 2 GS/s

Main Features

- Four Channels
- Up to 2 M Point record length
- Advanced Peak Detect
- Glitch, Pattern, Qualified, Interval, Dropout and TV Triggers
- 8-bit vertical resolution,11 with ERES option
- Fully programmable via GPIB and RS-232-C
- Automatic PASS/FAIL testing
- Advanced Signal Processing
- DOS Compatible Floppy Disk
- Internal Printer, PCMCIA Hard Disk and memory card available.

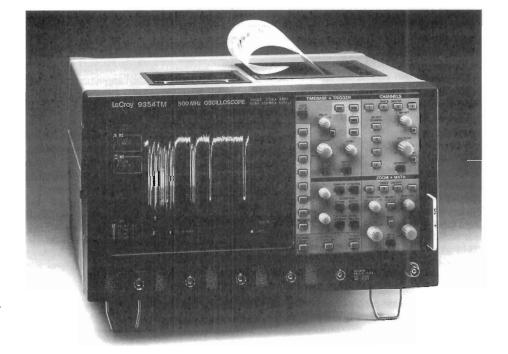

The 9354T and 9354TM are Total Performance products that provide high sampling speed, long memory, excellent analysis capability and superior I/O features. Four channel simultaneous sampling at 500 MS/s meets demanding high-speed design applications. Even faster sampling may be achieved by combining channels, up to a maximum of 2 GS/s. Acquisition memories may also be combined, providing up to 2 M Points of continuous or segmented waveform recording. Repetitive signals are digitized at up to 10 GS/s.

A unique peak detect scheme captures 2.5 ns glitches, even at slow time bases, without destroying the underlying data.

This provides circuit designers with the benefits of peak detection without any loss of precision.

Live waveforms may be viewed simultaneously with up to 3 expansions on a total of 4 different display timebases, showing all of the signal detail. Expansions are shown as highlights on the main trace.

SMART Trigger modes like Glitch, Pattern, Dropout and TV allow the precise capture of events of interest. Pre- and Post-Trigger delay, and Time and Events Holdoff are also standard. The 9354T and 9354TM feature the proven user-interface of LeCroy's portable scopes. A bright, high-resolution 9" CRT allows optimum waveform viewing under any conditions. Menus and text are arranged around the graticules - they never overwrite the waveforms.

A comprehensive range of signal processing functions including FFT and Math on live or stored waveforms, allows extensive waveform manipulation. GPIB, RS-232-C and Centronics ports are standard as is a floppy disk drive. The 9354TM also includes an internal high resolution printer.

Features and Benefits

PRECISION ACQUISITION

The 9354T and 9354TM combine all the technologies required for accurate waveform digitizing. Low-noise high-sensitivity amplifiers drive 500 MS/s 8-bit ADC's which are clocked simultaneously by a high-precision timebase. 500 MHz system bandwidth allows accurate risetime measurements below 1 nanosecond. Vertical resolution can be enhanced to 11 bits using ERES.

MEMORY FOR ALL APPLICATIONS

The 9354T offers 100k points per channel, while the 9354TM has 500k points per channel. Memory length may be extended by combining the acquisition memories of multiple channels (see table below).

Long memories provide higher horizontal resolution. LeCroy's unique memory management system, combined with an advanced peak detection system, maximizes the benefits of longer memory. Showing the entire waveform onscreen allows immediate location of glitches or other disturbances, and guarantees the highest possible sample rate on all timebases.

THE MOST ADVANCED PEAK DETECT

The 9354T and 9354TM offer 2.5 ns peak detect, available whenever the digitizer system runs at below 200MS/s This captures fast glitches or signal details that might have been missed due to undersampling.

One unwanted effect of other peak detection systems is a severe loss of horizontal (time) precision. This occurs because detected peaks are known to have occurred *during* a particular interval, but not at any specific time. This means that signals acquired with other manufacturers peak detection techniques cannot be successfully used for further processing or analysis.

LeCroy solves this problem by maintaining both peak detected and normally sampled waveforms for each signal. Thus the user gets all the benefits of peak detection without any loss of time precision.

EXTENSIVE TRIGGER SYSTEM

To capture rare or complex conditions, SMART trigger functions are available. These include Glitch with 2.5 ns resolution to trigger down to 1 ns and a unique Dropout mode, which triggers when the signal disappears for a selectable period of time. Other trigger modes include Pattern, Interval, Stateor Edge-Qualified and TV.

TV trigger allows individual lines or fields in PAL, SECAM, NTSC and non-standard video to be selected. Pre- and Post-trigger delay are fully variable.

ProBus™ PROBE INTERFACE

The ProBus system provides a complete measurement solution from probe tip to oscilloscope display. ProBus is an intelligent interconnection between LeCroy oscilloscopes and a growing range of innovative probes, including high-bandwidth low-loading FET probes.

AUTOMATIC MEASUREMENTS

The following Parametric measurements are available, together with their Average, Highest, Lowest values and Standard Deviation:

amplitude	falltime	peak to peak
area	f80-20%	period
base	f@level (abs)	risetime
cycles	f@level (%)	r 20-80%
delay	frequency	r@level(abs)
∆delay	maximum	r@ievel (%)
∆t at level (abs)	mean	RMS
∆t at level (%)	median	std dev
Δt at level (t=0,abs)	minimum	top
Δt at level (t=0,%)	overshoot +	width
duty Cycle	overshoot -	

Pass/Fail testing allows up to 5 parameters to be tested against selectable thresholds. Waveform Limit Testing is performed using Masks which may be defined inside the instrument. Any failure will cause preprogrammed actions such as Hardcopy, Save, GPIB SRQ or Pulse Out.

DOS COMPATIBLE MASS STORAGE

The 9354T and 9354TM scopes offer a 3.5" 1.44 MB floppy disk drive which stores traces, setups, screen graphics and Pass/Fail templates. Data are stored as DOS files, which may be read directly by a PC. High-speed DOS compatible PCMCIA memory card and hard disk options are also available.

BUILT-IN PRINTER

As well as driving most printers and plotters via GPIB, RS-232-C and Centronics interface, the 9354TM offers an internal high resolution graphics printer. This thermal printer produces full resolution screendumps, 126 x 90 mm, in under 10 seconds. The printer is optional for model 9354T.

FLEXIBLE INTERFACING

GPIB and RS-232-C interfaces may be used for full remote control of the instrument. All front-panel and internal processing functions can be controlled via either interface. For applications where throughput is essential, the GPIB interface transfers hundreds of waveforms per second. A Front-Panel BNC connector may be setup to provide Pass/Fail test output pulses.

MULTIPLE DISPLAY MODES

The high-resolution raster display shows from one to four independent waveform grids. Waveforms are represented as dots joined by vectors which may be turned on or off. Four Zoom/Math traces may be used for zooming waveforms or for signal processing. The area to be zoomed is selected by moving an intensified portion of the main waveform. Persistence display mode allows easy viewing of signal changes over time, and XY mode plots any two sources against one another. Cursors are usable in all display modes.

EXTENSIVE WAVEFORM MATH

Standard built-in waveform processing includes mathematics (Add, Subtract, Multiply and Divide, Negation and Identity) and Summation Averaging (up to 1000 sweeps). It also provides Summed and Continuous Averaging, Waveform Math Functions, Extrema and Enhanced Resolution Modes. More information is available in the 9300 WP01 datasheet.

FFT PACKAGE

The WP02 package provides comprehensive Spectral Analysis capabilities, permitting the system designer to identify characteristics which may not be apparent in the time domain. WP02 provides a wide selection of displayed projections and windowing functions, as well as averaging in the frequency domain. For more information, see the 9300 WP02 datasheet.

9354T and 9354TM Specifications

ACQUISITION SYSTEM

Bandwidth (-3 dB):

@ 50 Ω:

DC to 500 MHz

100 mV/div: 400 MHz

50 mV/div and below: 350 MHz

@ 1 M Ω DC: DC to 250 MHz typ. at probe tip.

No. of Channels: 4 No. of Digitizers: 4

Maximum Sample Rate and Acquisition

Memories: See table below.

Sensitivity: 2 mV/div to 5 V/div, fully variable. Scale factors: A vast choice of probe attenuation factors are selectable.

Offset Range: 2.0 - 9.9 mV/div: ±120 mV

10.0 - 199 mV/div: ±1.2 V 0.2 - 5.0 V/div: ±24 V

DC Accuracy: $\leq \pm 2\%$ full scale (8 divisions) at

0 V offset.

Vertical Resolution: 8 bits. Bandwidth Limiter: 30 MHz Input Coupling: AC, DC, GND.

Input Impedance: 1 M Ω //15 pF or 50 Ω ±1%.

Max Input:

1 M Ω : 250 V (DC+ peak AC \leq 10 kHz) 50 Ω : \pm 5 V DC (500 mW) or 5 V RMS

TIME BASE SYSTEM

Timebases: Main and up to 4 Zoom Traces. **Time/Div Range**: 1 ns/div to 1,000 s/div.

Clock Accuracy: ≤10 ppm interpolator resolution: 10 ps

Roll Mode: ranges 500 ms to 1,000 s/div. For > 50k points:10 s to 1,000 s/div.

External Clock: ≤100 MHz on EXT input with ECL, TTL or zero crossing levels. Optional up

to 500 MHz rear panel clock input. **External Reference:** Optional 10 MHz rear-

panel input.

TRIGGERING SYSTEM

Trigger Modes: Normal, Auto, Single, Stop. **Trigger Sources:** CH1, CH2, CH3, CH4, Line, Ext, Ext/10. Slope, Level and Coupling for each

can be set independently.

Slope: Positive, Negative.

Coupling: AC, DC, HF (up to 500 MHz),

LFREJ, HFREJ.

Pre-trigger recording: 0 to 100% of full scale

(adjustable in 1% div increments).

Post-trigger delay: 0 to 10,000 divisions (adjustable in 0.1 div increments).

Holdoff by time: 10 ns to 20 s.

Holdoff by events: 0 to 99,999,999 events. Internal Trigger Sensitivity Range: ±5 div.

EXT Trigger Max Input:

1 M Ω //15 pF: 250 V (DC+ peak AC \leq 10 kHz) 50 Ω ±1%: ±5 V DC (500 mW) or 5 V RMS

EXT Trigger Range: ±0.5 V (±5 V with Ext/10) **Trigger Timing:** Trigger Date and Time are listed in the Memory Status Menu.

Trigger Comparator: Optional ECL rear panel output.

SMART TRIGGER TYPES

Pattern: Trigger on the logic AND of 5 inputs -CH1, CH2, CH3, CH4, and EXT Trigger, where each source can be defined as High, Low or Don't Care. The Trigger can be defined as the beginning or end of the specified pattern. Signa! or Pattern Width: Trigger on width between two limits selectable from 2.5ns to 20s. Signal or Pattern Interval: Trigger on interval between two limits selectable from 10ns to 20s Dropout: Trigger if the input signal drops out for longer than a time-out from 25ns to 20s. State/Edge Qualified: Trigger on any source only if a given state (or transition) has occurred on another source. The delay between these events can be defined as a number of events on the trigger channel or as a time interval. TV: Allows selection of both line (up to 1500) and field number (up to 8) for PAL, SECAM, NTSC or nonstandard video.

ACQUISITION MODES

Random Interleaved Sampling (RIS):

for repetitive signals from 1 ns/div to 5 $\mu s/\text{div}$.

Single shot: for transient and repetitive signals

from 10 ns/div (all channels active). **Peak detect:** captures and displays 2.5 ns

glitches or other high-speed events. **Sequence:** Stores multiple events in seg-

mented acquisition memories.

Number of segments available:

9354T 2-500 9354TM 2-2000

Min. Dead Time between segments: $60 \mu s$

DISPLAY

Waveform style: Vectors connect the individual sample points, which are highlighted as dots. Vectors may be switched off.

CRT: 12.5x17.5 cm (9" diagonal) raster. **Resolution:** 810 x 696 points.

Modes: Normal, X-Y, Variable or Infinite

Persistence.

Reai-time Clock: Date, hours, minutes,

seconds.

Graticules: Internally generated; separate intensity control for grids and waveforms.

Grids: 1, 2 or 4 grids.

Formats: YT, XY, and both together.

Vertical Zoom: Up to 5x Vertical Expansion (50x with averaging, up to 40 μV sensitivity).

Maximum Horizontal Zoom Factors:
9354T 4000x
9354TM 20000x

Waveforms can be expanded to give 2 points/ division. This implies zoom factors up to 100,000x for the 9354TM when channels are combined.

INTERNAL MEMORY

Waveform Memory: Up to four 16-bit

Memories (M1, M2, M3, M4).

Processing Memory: Up to four 16-bit Waveform Processing Memories (A, B, C, D). Setup Memory: Four nonvolatile memories. Optional Cards or Disks may also be used for high-capacity waveform and setup storage.

Channels Used	Maximum Sample Rate	Memory p 9354T	er Channel 9354TM	Notes
All Peak Detect OFF	500 MS/s	100k	500k	All channels active
All Peak Detect ON	100 MS/s data 400 MS/s peak	50k data + 50k peaks	250k data + 250k peaks	All channels active 2.5 ns peak detect
Paired Peak Detect OFF	1 GS/s	250k	1M	CH2 + CH3
Paired + PP 092 Peak Detect OFF	2 GS/s	500k	2M	

CURSOR MEASUREMENTS

Relative Time: Two cursors provide time measurements with resolution of ±0.05% fullscale for unexpanded traces; up to 10% of the sampling interval for expanded traces. The corresponding frequency value is displayed. Relative Voltage: Two horizontal bars measure voltage differences up to ±0.2% of full-scale in single-grid mode.

Absolute Time: A cross-hair marker measures time relative to the trigger and voltage with respect to ground.

Absolute Voltage: A reference bar measures voltage with respect to ground.

WAVEFORM PROCESSING

Up to four processing functions may be performed simultaneously. Functions available are: Add, Subtract, Multiply, Divide, Negate, Identity and Summation Averaging.

Average: Summed averaging of up to 1,000 waveforms in the basic instrument. Up to 106 averages are possible with Option WP01.

Envelope*: Max, Min, or Max and Min values of from 1 to 106 waveforms.

ERES*: Low-Pass digital filter provides up to 11 bits vertical resolution.

Sampled data is always available, even when a trace is turned off. Any of the above modes can be invoked without destroying the data.

FFT*: Spectral Analysis with four windowing functions and FFT averaging.

*Envelope and ERES modes are provided in Math Package WP01. FFT is in WP02.

AUTOSETUP

Pressing Autosetup sets timebase, trigger and sensitivity to display a wide range of repetitive signals. (Amplitude 2mV to 40V; frequency above 50Hz; Duty cycle greater than 0.1%). Autosetup Time: Approximately 2 seconds. Vertical Find: Automatically sets sensitivity and offset.

PROBES

Model: One PP002 (10:1, 10 M Ω // 15 pF) probe supplied per channel.

The 9354T and 9354TM are fully compatible with LeCroy's range of FET Probes, which may be purchased separately.

Probe calibration: Max 1 V into 1 M Ω , 500 mV into 50Ω , frequency and amplitude programmable, pulse or square wave selectable, rise and fall time 1 ns typical. Alternatively, the Calibrator output can provide a trigger output or a PASS/FAIL test output.

!NTERFACING

Remote Control: Of all front-panel controls, as well as all internal functions is possible by GPIB and RS-232-C.

RS-232-C Port: Asynchronous up to 19200 baud for computer/terminal control or printer/ plotter connection.

GPIB Port: (IEEE-488.1) Configurable as talker/listener for computer control and fast data transfer. Command Language complies with requirements of IEEE-488.2.

Centronics Port: Optional hardcopy parallel interface (included with 9354TM).

Hardcopy: Screen dumps are activated by a front-panel button or via remote control. TIFF and BMP formats are available for importing to Desktop Publishing programs. The following printers and plotters can be used to make hardcopies: HP DeskJet (color or BW), HP ThinkJet, QuietJet, LaserJet, PaintJet and EPSON printers. HP 7400 and 7500 series, or HPGL compatible plotters. An optional internal high resolution graphics printer is also available (included with 9354TM).

GENERAL

Auto-calibration ensures specified DC and timing accuracy.

Temperature: 5° to 40° C (41° to 104° F) rated 0° to 50° C (32° to 122° F) operating.

Humidity: <80%.

Shock & Vibration: Meets MIL-STD-810C modified to LeCroy design specifications and MIL-T-28800C

Power: 90-250 V AC, 45-66 Hz, 230 W. Battery Backup: Front-panel settings

maintained for two years.

Dimensions: (HWD) 8.5"x14.5"x16.25",

210mm x 370mm x 410mm.

Weight: 13 kg (28.6 lbs) net, 18.5 kg (40.7 lbs) shipping.

Warranty: Two years.

USA Direct Sales: 1 (800) 5LE-CROY

LeCroy Worldwide Sales Offices

Co. Miller II. Land St. Dade Street St.		
ASIA/PACIFIC	LeCroy Pty Ltd	61.38.90.7358
BENELUX	LeCroy BV	04902.8.9285
FRANCE	LeCroy SARL	(1).69.18.83.20
GERMANY	LeCroy GmbH	06221 83.10.01
ITALY	LeCroy SRL	06.336.797.00
JAPAN Osaka	LeCroy Japan	0816.330.0961
JAPAN Tokyo	LeCroy Japan	0813.3376.9400
SWITZERLAND	Geneva	022.719.21.11
SWITZERLAND	Lenzburg	064.51.91.81
United Kingdom	LeCroy Ltd	(01235) 533114

Ordering Information

Oscilloscope and Options

9354T/TM 4-Ch Digital Oscilloscope 9XXX-MC01/04 Memory Card Reader

w/512KB Memory Card

93XX-HD01 Hard Disk Adapter 93XX-HD02 PCMCIA Hard Disk 93XX-DA01-110 PCMCIA type III external

desktop adaptor for PC (110v)

93XX-DA01-220 PCMCIA type III external

desktop adaptor for PC (220v) 93XX-HDD HD01/HD02 combination

93XX-DDM Disk Drive Measurements 93XX-PRML Supplementary Disk Drive

Measurements

935XA-CKTRIG 10MHz External Clock

Reference Input

500MHz External Clock input Trigger Comparator Output

93XX-W5 5 Year Warranty

93XX-C5 5 Year Calibration Contract

93XX-T5 5 Year Warranty and Calibration

Oscilloscope Accessories

Supplied with Instrument:

935X-OM Operator's Manual 93XX-RCM Remote Control Manual

93XX-FC Front Cover

PP002 350MHz, 10M Ω Passive Probe (1 per channel)

> ProBus Channel Multiplexer Waveform Math

9XXX-WP01 FFT Processing 9XXX-WP02 93XX-FD01 Floppy Drive

93XX-GP01 Internal Graphics Printer

(Included with 9354TM only)

Ordered separately:

PP092

93XX-CC Calibration Certificate 935XT-SM Service Manual 9XXX-MC02 128K Memory Card 512K Memory Card 9XXX-MC04 DC/GPIB 2 Meter GPIB Cable High Voltage Protector SG9001 OC9002 Oscilloscope Cart AP020 1 GHz 10:1 FET Probe 800 MHz 5:1 FET Probe AP021 AP030 15 MHz Differential Probe

PP062 1 GHz, 10:1, 500 Ω Passive

PP090 ProBus 75 to 50 Ω adapter 93XX-RM01 Rackmount 93XX-TC1

Transit Case 93XX-TC2 Carrying Bag

Various option bundling schemes available. Contact your nearest LeCroy subsidiary or representative for more information.

Copyright January 1995. LeCroy is a registered trademark of LeCroy Corporation. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.







The Digital Scope Specialists

9300 Series PCMCIA Hard Disk Adapter, Internal Printer, 3.5" Floppy Disk Drive and Ram Card

Main Features

- PCMCIA Type III compatible Hard DIsk Adapter, DOS Compatible
- High-resolution Printer, ideal for fast, on-the-spot documentation
- 3.5" Floppy disk drive, DOS format
 affordable and convenient
- Ultra-fast RAM card, DOS format, ideal for PASS/FAIL testing
- Convenient Hardcopy storage to card/disk



3.5" Floppy

The floppy drive is a convenient storage medium, not only for saving and retrieving waveforms or instrument settings, but also for storing hardcopies that can be printed from a PC when desired. The floppy supports both 720k and 1.44M DOS formats so that it can be read back on any PC with a 3.5" drive, avoiding the need to interface the oscilloscope to your PC. As with the RAM-card option, the floppy system capabilities include automatic storage of data under pre-programmed conditions.

PCMCIA Storage

PCMCIA Interfaces for RAM card and Hard Disk allow the use of fast, removable and compact storage media for saving and retrieving waveforms and instrument settings. They comply fully with the PC industry's PCMCIA and JEIDA standards. With the special Autostore feature, waveforms can be automatically stored after every acquisition and "played back" when desired. When used in combination with the PASS/FAIL feature, failure data can be saved automatically for later analysis.

Printer

The internal printer is an invaluable tool for instant, on-the-spot documentation. It generates a clear, crisp hardcopy of the screen in just a few seconds. The large size of the printout, combined with its high resolution, provide you with an excellent document that matches the screen's superior quality to its finest details. And because it frees you from the trouble of carrying and interfacing a bulky printer, it is the ideal solution for field measurements.

Mass Storage Features and Benefits

LeCroy's mass storage capabilities provide a range of benefits:

- Easy data transfers to PCs
- Waveform logging
- Waveform archiving for future use
- Faster troubleshooting
- Faster, more reproducible testing
- Shared oscilloscope resources

EASY DATA TRANSFER TO PC

Because the 9300 series oscilloscope uses DOS-formatted floppy disks, hard disks and memory cards, transferring waveform data to a PC is simple. The removable storage allows transfers without cables, programming, or any knowledge of GPIB, RS-232, or other interfaces.

In addition, LeCroy provides free of charge, a binary-to-ASCII format conversion program for the PC, accommodating those PC-based analysis packages (such as spreadsheets) that require ASCII format.

WAVEFORM LOGGING

By using Glitch or Dropout triggering in combination with the powerful AUTO-STORE mode, LeCroy oscilloscopes can monitor and log intermittent problems automatically. To store a waveform, the oscilloscope opens and names a DOS-compatible file and then stores the waveform data in the file. This logging feature requires no operator intervention and maintains data and the operational setup through power line failures. Logged waveforms can be selectively played back by trigger time/date or by sequence number, or can be scrolled through sequentially.

WAVEFORM ARCHIVING FOR FUTURE USE

- Recallable proof of performance
- Additional data analysis as needed
- Accurate trend or drift monitoring
- Calibration procedure verification When storing waveforms, LeCroy DSOs also archive a header of setup information and the acquisition time/date. After recalling an archived waveform, the several hundred byte header ensures correct time and voltage scaling. When recalled into the oscilloscope, the waveform can be zoom expanded,

compared, or analyzed just like a live waveform. The time/date offers proof of measurement authenticity and trend sequence.

All LeCroy DSOs store raw waveform data using one byte per sample point. Signal averaged, Enhanced Resolution (ERES) filtered, and other processed data use two bytes per point, to take advantage of the added resolution.

HARDCOPY ARCHIVING

Hardcopies of the screen can also be stored for future use. For instance, a screen saved in TIFF format can be imported into a Word Processor to illustrate a report. Additionally, field-measurement screens can be saved in LaserJet format on the memory card or floppy disk, and then printed from a PC back in the lab.

FASTER FIELD MEASUREMENTS

Recallable reference waveforms and oscilloscope setups for each test point on a Device Under Test (DUT) can make fault troubleshooting faster and more accurate. A dedicated memory card or floppy disk will hold all of the correct test point waveforms and associated DSO setups for a particular DUT.

The technician can recall stored setups quickly and consistently, thereby avoiding incorrect measurement conditions. He can then compare actual waveforms to recalled reference waveforms taken from a known working system. He will therefore spend less time probing a large number of test points and verifying that the correct waveforms exist.

If a problem is found, the aberrant waveform may be saved. It can later be shown to laboratory-based engineers, for example, for problem-solving guidance or for improvement of DUT design.

Memory cards - rugged and pocketsized - are ideal for this application.

FASTER, MORE REPRODUCIBLE TESTING

LeCroy oscilloscopes will compare measured waveforms against upper and lower waveshape tolerances or against parameter limits, such as risetime, overshoot, or peak voltage, and make PASS/FAIL decisions. This PASS/FAIL

testing decreases test times in GPIBbased ATE systems by reducing data transfers. It increases reproducibility and accuracy in manual tests by eliminating human errors.

Once defined, these tests may be saved by storing instrument setups which include the specified tolerances and/or reference waveforms. Different test personnel can easily share a common test library via a PC network.

Waveshape test limits can be generated by capturing a "golden" waveform and by then selecting amplitude and timing limits (in fractions of screen graticule divisions). Or a user can create standard waveform limit templates on a computer (e.g. ANSI/CCITT telecommunication templates).

With the LeCroy 9300 series DSOs, specific parameter tolerance test procedures are created by selecting limits for any five out of twenty pulse parameters with Boolean AND / OR conditions between them. During testing, FAIL responses can include an audible beep, GPIB SRQ, hardcopy output, or store to memory card.

SHARED OSCILLOSCOPE RESOURCES

By plugging-in your *personal* floppy disk, RAM card or PCMCIA Hard Disk you can restore your setup in seconds. Individual users can keep preferred setups on separate disks or cards or within separate directories.



A selection of files can be copied between the available mass storage devices.

Hardcopy Features and Benefits

The internal printer adds a whole range of benefits to the LeCroy 9300 series:

- Ultra-fast printouts
- High resolution printing
- Easy transportation
- Trouble-free interfacing
- Auto Print on Trigger

ULTRA-FAST PRINTOUTS

Measurement documentation is made easier and faster since the internal printer produces a hardcopy in less than 10 seconds. In addition the document is date- and time-stamped: a real bonus for archiving test results.

HIGH RESOLUTION PRINTING

With a resolution of 190 dots-per-inch, the internal printer matches the screen's superior quality. And for even higher resolution, the printout can be stretched to a full 70 meter length so you can see those traces down to their finest details.

EASY TRANSPORTATION

A printer that is totally integrated in the instrument makes life much easier for field-measurement applications. Imagine carrying a scope, a printer (and perhaps a floppy drive) in one hand!

TROUBLE-FREE INTERFACING

The internal printer frees your mind from the struggle with cable schematics, baud rates, gender-changers and dip switches, for more productive tasks. Select the internal printer in the scope's utilities menu, hit the SCREEN DUMP button, and you're in business!

AUTO PRINT ON TRIGGER

The 9300 series

oscilloscope supports a

whole range of popular

printers and plotters.

either sent directly to

Card or Hard disk for

future use.

the peripheral device or

to the floppy disk, Ram

Hardcopies can be

The Auto Print feature is used to print a screen image on each acquisition.



OTHER HARDCOPY SOLUTIONS

High quality project reports, presentation materials, technical manuals, and troubleshooting instructions often require integration of text and graphics on the same page.

Advanced PC desktop publishing and word processors such as Word-for-Windows, WordPerfect, or AMI Pro can directly import graphic files, size them, and position them anywhere on the page. Written text can then wrap around or be positioned within the graphics.

LeCroy 9300 oscilloscopes will save screens in TIFF (Tagged Image Format File), or BMP. After transferring the file to a PC, the DTP software can import and manipulate the document like any other graphic object.

The LeCroy 9300 series also offers a wide range of interfacing capabilities with external hardcopy devices:

- Plotters. HPGL, HP 7400 and 7500 compatible
- Printers. HP LaserJet, ThinkJet, Paintjet (including color), DeskJet (including color) and Epson
- Interfacing. RS-232, GPIB, or even Centronics (optional)

Specifications

MASS STORAGE

	Floppy Disk	Ram Card	Hard Disk
Compatibility	3.5" Floppy Drive	PCMCIA I, II JEIDA 3.0, 4.0	PCMCIA III
Supported Formats	DOS Format	Read/Write: SRAM Read: OTP, ROM, Flash DOS Format	DOS Format
Size	720k byte, 1.44M byte	Up to 8M byte	Up to 512M byte * Note 1
Max Transfer Rate	18k byte/sec	500k byte/sec	150k byte/sec
Typical waveform Transfer Speed (Store/Recall) 1000 point 10000 point 100000 point 1M point	1.1s / 0.4s 1.8s / 1.0s 7.5s / 6.5s 57s / 55s	40ms / 30ms 70ms / 60ms 300ms / 300ms 2s / 2s	140ms / 120ms 240ms / 220ms 1.0s / 0.9s 7.0s / 6.5s

Waveform File size: A channel-trace will use 1 byte per sample plus approximately 360 bytes of waveform descriptor. A processed trace will use 2 bytes per sample.

Template Size: Approximately 21k bytes.

Panel Setup Size: Approximately 3k bytes.

*Note 1: When available

PRINTER

Type: Raster printer, thermal. Resolution: 190 DPI. Printout Size: 126 mm x 90 mm

Paper: Thermal printer paper, 30 meter roll, 110 mm width, type Seiko or similar.

Printing speed: 6 seconds approx. for one

screen.






AP003, AP020 and AP021 Active FET Probes

Main Features

- Bandwidths to 1 GHz
- LeCroy ProBus[™] interface for the AP020 and the AP021
- 1 MΩ input Impedance
- Low capacitance at probe tip
- Rugged mechanical construction
- Automatic sensing and control on scopes equipped with ProBus™

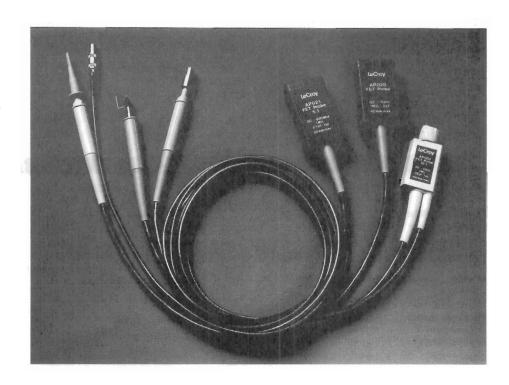

FET Probes provide the oscilloscope user with a higher level of measurement capability. Compared with passive probes, they offer low circuit loading, low capacitance and high bandwidth. This combination makes them the ideal tools for working on sensitive or high-speed electronics.

This performance is achieved by the integration of a high-impedance Field Effect Transistor (FET) amplifier into the probe tip. The circuit under test sees only the amplifier's input impedance - it is effectively buffered from the scope's input impedance and the probe cable.

LeCroy's AP series of FET probes are mechanically rugged in design, while their miniature construction allows them to be used in hand-held PCB probing applications. Their detachable tips are designed for simple replacement, and they are supplied with a full set of accessories.

Models AP020 and AP021 offer 1 GHz and 800 MHz Bandwidth respectively. AP020 features X10 signal attenuation and is especially recommended for LeCroy's 9320 and 9324 1 GHz oscilloscopes. The AP021 offers X5 attenuation when used with the new 9360.

As an active device, the FET probe requires a stabilized power supply. LeCroy provides an elegant solution to this with the ProBus[™] probe interface.

ProBus[™] provides probe power and signal connection in one integrated package. It also allows the scope to control other probe functions, such as input coupling and DC offset. The ProBus[™] interface is now available on a growing range of LeCroy oscilloscopes and probes. AP003 has an external power connector for use with scopes which are not ProBus[™] compatible. All other models use the ProBus[™] interface.

Features and Benefits

Connecting a probe to a circuit can significantly distort its signals by adding undesired loading - mostly capacitive and resistive. FET probes offer high resistance and low capacitance therefore they present minimal loading to the circuit under test, and protect from making erroneous measurements.


HIGH RESISTANCE

Low resistance probes have significant DC effects when used in high impedance circuits. They can greatly affect the behaviour of the device under test by changing the swing and the DC offset of the probed signal. A 1 $M\Omega$ impedance FET probe will not affect gain or offset in virtually all the cases.

LOW CAPACITANCE

Although not important in DC measurements, capacitive loading is very

disruptive at high signal frequencies. The capacitive loading effects can be drastic. When probed with a 10 $M\Omega$, 15

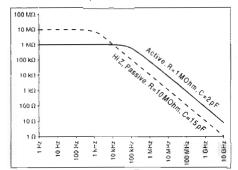

Probe Impedance versus Frequency

pF passive probe, a 100 MHz signal "sees" a 100 Ω load as illustrated on the picture below.

With only 2 pF of capacitance at the probe tip, LeCroy's FET probes reduce

circuit loading at high frequencies by a factor of 10. Minimizing tip capacitance can also push the probe's resonant frequency beyond the system bandwidth. Sensitivity to ground lead inductance is also minimized.

PROBUS

The ProBus™ system is a complete measurement solution from probe tip to oscilloscope display. It supplies power to active probes, while automatically sensing probe attenuation. ProBus™ enables direct control of the probe offset and input coupling from the scope's front panel, extending the instrument's accuracy up to the probe tip. In addition, ProBus™ automatically optimizes scope and probe offset adjustments, calibrates the gain at the probe tip and compensates for non-linearities, providing most accurate measurements.

Specifications

和新型的特殊的企业,但是是不是一个企业的企业的,但是对对的企业的企业的企业的企业的企业的企业的企业的企业的企业的企业。							
MODEL	AP003	AP020	AP021	MODEL	AP003	AP020	AP021
Bandwidth (MHz)	DC-1000	DC-1000	DC-800	Dynamic Range	±7 V	±5 V	±2.5 V
Risetime (psec)	< 350	< 350	< 437	DC Offset Range	N/A	±20 V	±10 V
Attenuation	10:1 ±2%	10:1±2%	5:1±2%	Input Coupling	DC	DC/AC	DC/AC
Input R (MΩ)	1 ±5%	1±2%	1±2%	Total length (m)	1.5	1.5	1.5
Input C (pF)	1.9 ±0.3	1.8 ±0.2	2.7 ±0.2	Power requirement	±12 V	±12 V	±12 V
Max Input Voltage	±100 V	±40 V	±20 V	Interface	N/A	ProBus™	ProBus™

Recommended Matching

11000ittillerit	ica mat	necommended matering			
LeCroy Model	AP-003	AP-020	AP-021		
9304-10-14	XX				
9360-61			X		
9320-24		×			
94XX	X				
7200	XX				
7200A	X				
ScopeStation	X				

X: External Power Supply not required XX: External Power Supply required

Copyright © May, 1993. LeCroy is a registered trademark of LeCroy Corporation. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.

Ordering Information

AP003	1 GHz active FET probe
AP020	1 GHz active FET probe
AP021	800 MHz active FET probe
	with ProBus™interface. All
	probes are shipped with the
	following accessories:
	1x Retractable hook
	1x Ground Lead
	1x BNC Adaptor
	1x IC Tip
	3x Ground Bayonets
	1x Mini pincher with Lead
	Adaptor
AP501	Power Supply for the AP003

USA Direct Sales: 1 (800) 5LE-CROY

LeCroy Worldwide Sales Offices

Lectoy work	awide Sales Off	lices
ASIA/PACIFIC	LeCroy Pty Ltd	61.38.90.7358
BENELUX	LeCroy BV	04902.8.9285
CANADA	LeCroy Cnd	514.928.4707
FRANCE	LeCroy SARL	(1).69.18.83.20
GERMANY	LeCroy GmbH	06221 83.10.01
ITALY Milano	LeCroy SRL	02.204.70.82
ITALY Rome	LeCroy SRL	06.336.797.00
JAPAN Osaka	LeCroy Japan	0816.330.0961
JAPAN Tokyo	LeCroy Japan	0813.3376.9400
SWITZERLAND	Geneva	022.719.21.11
SWITZERLAND	Lenzburg	064.51.91.81
United Kingdom	LeCroy Ltd	0235-533114

Other sales and service representatives throughout the world.





AP030, SI 9000 and SI 9000A Active Differential Probes

Main Features

- Bandwidths to 15 MHz
- Multiple:

Attenuations
Differential Voltage Ranges
Common Mode Voltages

- High Input Impedance
- Rugged and Lightweight
 Mechanical Construction



The Models AP030, SI 9000 and SI 9000A are fully differential active probes designed for applications where electric signals must be measured relative to a floating voltage, other than ground potential.

These probes are designed specifically for situations where:

 the reference voltage may be several hundreds volts above or below ground;

- measurements require the rejection of common-mode signals, (e.g. to evaluate small amplitude pulses riding on big common-mode signals);
- ground loops and currents produce so much interference that small signals cannot be detected.

With these differential probes the oscilloscope user avoids both the dangerous practice of floating the

scope, and the technique of using two scope channels in "Invert and Add" mode, which is limited both in common mode rejection and in dynamic range.

Models AP030, SI 9000 and SI 9000A are lightweight and easy to use. They have the rugged mechanical construction required for laboratory, manufacturing and field service environments, and are battery powered for greater safety and convenience.

Features and Benefits

FULLY DIFFERENTIAL INPUTS

The probes are fully differential active devices. The differential technique allows measurements to be made between two points in a circuit without reference to ground. The two input signals are processed inside the probe (as illustrated in figure) and the resulting singleended signal may be measured by any grounded oscilloscope.


HIGH COMMON MODE VOLTAGE

The three probes offer a range of Common Mode Voltages from 40 V to 1000 V.

RUGGED CONSTRUCTION

The probes are designed to be compact and lightweight with power provided by four AA size 1.5 V batteries. Á rubber casing enhances the probes' resistance to shocks.

Use of differential probes is safe within the specified voltages. Their use avoids less reliable alternatives, or possible dangerous practices.

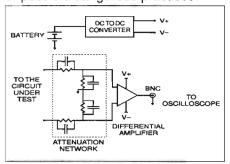

Specifications

Weight

MODEL	AP030	SI 9000	SI 9000A		
Bandwidth (MHz)	15 MHz	15 MHz	15 MHz		
Risetime	24 ns	24 ns	24 ns		
Attenuation	1:10/1:100 2%	1:20/1:200	1:50/1:500		
Atten. Accuracy Input Resistance	2% 2 MΩ	2% 2 MΩ	2% 2 ΜΩ		
Input Capacitance		F each side to ground	Z 1V122		
Input Configuration	12 p	Differential			
Input Voitage		Diricicinta			
Differential Max	±400 VDC	±700 VDC	±1000 VDC		
	or 280 Vrms	or 500 Vms	or 700 Vrms		
	for 1:100	for 1:200	for 1:500		
	±40 VDC	±70 VDC	100 VDC		
	or 28 Vrms	or 50 Vms	or 70 Vrms		
	for 1:10	for 1:20	for 1:50		
Common Mode Max	±420 VDC	±700 VDC	±1000 VDC		
	or 300 Vrms	or 500 Vrms	or 700 Vrms		
Absolute Max	±10	000 VDC or 700 Vrms			
CMRR					
50Hz	-90db	-80db	-80db		
1KHz	-80db -80db	-70db	-70db		
1MHz	-53 db	-45db	-45db		
Output Voltage	00 00	40 0 0	-10 u b		
Amplitude Max	±4 V	±3.5 V	±2 V		
Offset	$<\pm$ 5 mV	<±10 mV	<±10 mV		
	ty	pical -10º C to +40º C			
Noise	1.5 to 2mV typical				
Source Impedance	1Ω at 1 KHz, 8Ω at 1 MHz typical				
Ambient Temperature					
Operating -10° C to +40° C					
Storage		-30° C to +70° C			
Power requirement	Four internal 1.5 V AA size batteries or external AC to 6 Vdc adaptor				
	Typical consumpti				
Dimensions		4" (62mm) x 0.79" (20mm)			
Maiabo	0.05 67 (005 ~~) ~.	حجم فرحم حمايت فقحما بمسالت بالمر	ina		

9.35 oz (265 gr) excluding batteries and casing

Ordering Information

AP030	15 MHz differential probe
	1:10/1:100
SI 9000	15 MHz differential probe
	1:20 / 1:200
SI 9000A	15 MHz
	1:50 / 1:500

All models are delivered with rubber casing. Batteries not included

USA Direct Sales: 1 (800) 5LE-CROY

LeCrov Worldwide Sales Offices

Leondy Worldwide Gales Offices		
ASIA/PACIFIC	LeCroy Pty Ltd	61.38.90.7358
BENELUX	LeCroy BV	04902.8.9285
FRANCE	LeCroy SARL	(1).69.18.83.20
GERMANY	LeCroy GmbH	06221.83.10.01
ITALY	LeCroy SRL	06.336.797.00
JAPAN Osaka	LeCroy Japan	0816.330.0961
JAPAN Tokyo	LeCroy Japan	0813.3376.9400
SWITZERLAND	Geneva	022.719.21.11
SWITZERLAND	Lenzburg	064.51.91.81
United Kingdom	LeCroy Ltd	(01235) 533114

Other sales and service representatives throughout the world.

Copyright December, 1994. LeCroy is a registered trademark of LeCroy Corporation. All rights reserved. Information in this publication supersedes all earlier versions.


Specifications subject to change without notice.



WP01 Waveform Processing Firmware for the 9300 Family of Digital Oscilloscopes

Main Features

- High-precision averaging up to 1 million sweeps
- Extended digital filtering capabilities
- Rescale function, with (ax + b) correction factor
- Envelope mode
- Integration
- Differentiation
- Log(e) and Log(10)
- Exp(e) and Exp(10)
- Absolute, Reciprocal
- Square, Square root
- Square, Square root
- Powerful function chaining feature

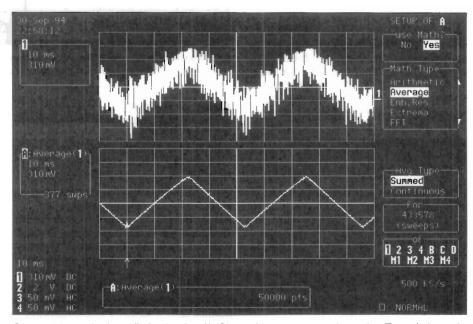

Summed Averaging is applied to the signal in Channel 1, to remove random noise. Trace A shows the result after 377 sweeps: the noise has practically disappeared.

The LeCroy WP01 Waveform Processing package features a powerful toolset that extends the processing power inside the 9300 oscilloscope, well beyond the capabilities of a traditional instrument.

In fact, all the processing is built-in to eliminate the need for external computers and controllers. High-speed microprocessors are used to ensure real-time updates of computed waveforms on the screen.

The package is fully programmable over GPIB or RS-232-C interfaces, and hard copies can be made directly on to a wide range of printers (including the optional internal printer), plotters or graphic formats.

Features and Benefits

EXTENSIVE SIGNAL AVERAGING

WP01 offers two powerful, high-speed averaging modes that can be used to reduce noise and improve the signal-to-noise ratio. Vertical resolution can be extended by several bits to improve dynamic range and increase the overall input sensitivity to as much as 50 $\mu\text{V/div}.$

Summed averaging, where up to 1,000,000 sweeps are repeatedly summed, with equal weight, in a 32-bit accumulation buffer for improved accuracy. The accumulated result is then divided by the number of sweeps.


Continuous/exponential averaging where a weighted addition of successive waveforms can be performed with weighting factors from 1:1 to 1:1023. The averaging goes on indefinitely with the contribution of "older" sweeps gradually decreasing. The method is particularly appropriate to reduce noise on signals drifting very slowly in time or amplitude.

ENHANCED RESOLUTION BY DIGITAL FILTERING

Allows low-pass F.I.R. filtering of the digitized signals, with 6 different cutoff frequencies per sampling rate setting. As a result, the vertical resolution of the captured signals — single-shot or repetitive — increases from 8 bits to 11 bits in 0.5-bit steps. This feature is ideal to strip off unwanted high-frequency noise on transient events.

RESCALING

Allows an input signal to be rescaled using a (ax + b) correction factor to compensate for gain and offset. This is very useful when dealing with various types of transducers, to read the correct temperature or pressure value directly from the scope's cursor.

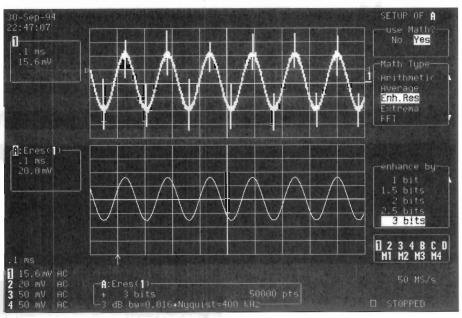

High-frequency glitches in Channel 1 have been dramatically reduced in Trace A by using the low-pass filtering properties of the Enhanced Resolution Function.

ENVELOPE MODE

Shows the signal envelope by retaining only the highest and lowest amplitudes for every sampling interval, over a user-definable number of sweeps. Ideal to visualize the time or amplitude jitter in a signal.

POWERFUL MATH TOOLSET

In addition to the basic arithmetic functions found in the standard models (+,-,×,÷), WP01 adds an impressive set of functions such as integration, differentiation, logarithms and exponential – in both bases 10 and e – square, square root, reciprocal, absolute, and a sin(x)/x interpolation function.


All these functions are updated automatically each time a new waveform is acquired, showing a "live" representation of a computed trace. This would be impossible to achieve on a separate computer.

FUNCTION CHAINING

When more than one math function is needed in the equation, WP01 supports function chaining, and allows the user to multiply, for instance, the "Voltage" and the "Current" channel and to integrate the result to get an instantaneous energy curve.

REMOTE CONTROL

All of the waveform processing can be controlled via GPIB or RS-232-C remote control. And the function traces do not even need to be called up on screen to be updated, an important feature that speeds up the computation.

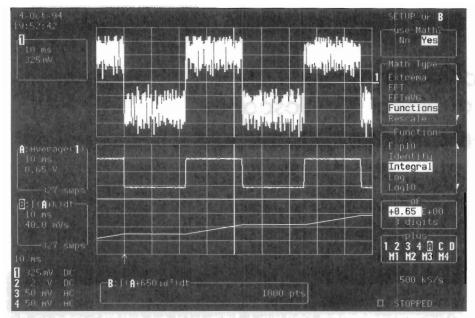

To illustrate WP01's function chaining ability, the noisy signal in Channel 1 has been averaged in Trace A to remove undesired noise, and the result integrated in trace B.

WP01 Specifications

GENERAL

Max. number data points: only limited by the available amount of system memory (indicated in the "memory used" status menu).

Min. number data points: Data points can be reduced down to 50 in the processing function to improve update rate.

Vertical Zoom: supported, 50x maximum.

Horizontal Zoom: supported, maximum zooming to a point where 50 samples of the source trace occupy the full screen. **Maximum Sensitivity:** 50 μ V/div after vertical expansion.

SUMMATION AVERAGING

Number of Sweeps: 1 to 1,000,000. Speed: up to 200,000 points/s.

CONTINUOUS AVERAGING Possible Weighting Factors: 1:1, 1:3, 1:7, 1:15, 1:31, 1:63, 1:127, 1:255, 1:511 and 1:1023.

ENHANCED RESOLUTION

Choice of six low-pass filters to improve vertical resolution improvement from 8 to 11 bits in 0.5-bit steps.

Resulting bandwidth:

0.5 bit	0.5 × Nyquist BW
1 bit	0.241 × Nyquist BW
1.5 bit	0.058 × Nyquist BW
2 bit	0.029 × Nyquist BW
2.5 bit	0.016 × Nyquist BW
Nyquist BW =	= $1/2 \times \text{sample frequency}$.

RESCALE

ax + b rescaling with a and b ranging from ± 0.00001 E-15 to ± 9.99999 E+15

ARITHMETIC

Addition, subtraction, multiplication and ratio on any two waveforms.

FUNCTIONS

Identity, negation, integration (including additive constant), differentiation, square, square root, logarithm and exponential (base e and 10), sin x/x, reciprocal and absolute value of any waveform.

EXTREMA

Shows the signal envelope by retaining only the highest and lowest amplitudes for every sampling interval. Logs all extreme values of a waveform over a programmable number of sweeps.

Maxima and minima can be displayed together, or separately by choosing *roof* or *floor* traces.

Number of Sweeps: 1 to 1,000,000.

FUNCTION CHAINING

Up to four functions can be automatically chained using traces A, B, C and D. Using memories M1 to M4 for intermediate results, any number of operations can be chained manually or via remote control.

REMOTE CONTROL

All controls and waveform processing functions are fully programmable using simple commands over the oscilloscope's GPIB or RS-232-C interfaces.






WP02 Spectrum Analysis Firmware for the 9300 Family of Digital Oscilloscopes

Main Features

- Frequency range from DC up to the instrument's full bandwith
- Simultaneous FFTs on up to 4 channels
- Frequency resolution down to 100 μHz
- Frequency domain averaging
- Wide selection of scaling formats
- 5 window functions
- Up to 5 1000-point FFTs per second
- Full support of cursors and automatic waveform parameters
- Full PASS/FAIL testing support

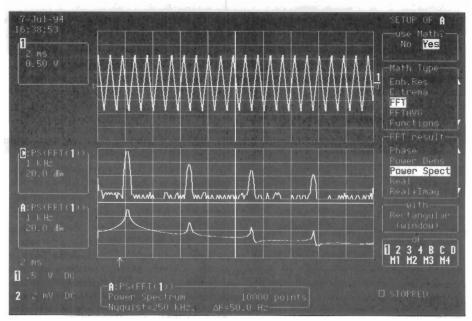

Adding the WP02 Spectrum Analysis Package to the 9300 family of digital oscilloscopes provides a fast and economical solution to frequency domain applications.

The WP02 Spectrum Analysis package provides the 9300 oscilloscope with a powerful frequency-domain toolset that extends its processing capabilities, well beyond the realm of a standard instrument. In fact, all the processing is built-in to eliminate the need for external computers and controllers.

High-speed microprocessors are used to ensure real-time update of computed waveforms on the screen. Fast Fourier Transforms (FFTs) rapidly convert time domain waveforms into frequency domain records to reveal valuable spectral information such as phase, magnitude and power.

The package is fully programmable over GPIB and RS-232-C interfaces, and hardcopies can be made directly on to a wide range of printers (including the optional internal printer), plotters or graphic formats.

Features and Benefits

WHY FFT IN A SCOPE?

The FFT package on a LeCroy 9300 has at least four clear advantages over common swept spectrum analyzers:

- It can show the spectrum of a transient signal.
- Both time and frequency information can be monitored simultaneously.
- Phase information is available.
- The price is attractive.

It has two definite advantages over FFT analyzers:

- It can show higher-frequency components
- Both time and frequency information can be monitored simultaneously.
- The price is attractive.

BROAD SPECTRUM COVERAGE

The frequency spectrum ranges from DC to the full bandwidth of the oscilloscope for repetitive signals, and to one half of the maximum sampling frequency for transients.

MULTI-CHANNEL ANALYSIS

All input channels can be analyzed simultaneously to look for common frequency-domain characteristics in independent signals.

VERSATILE SCALING FORMATS Frequency-domain data may be presented as magnitude, phase,

real, imaginary, complex, log-power and log-PSD (Power Spectral Density).

STANDARD WINDOW FUNCTIONS


Use rectangular for transient signals; von Hann (Hanning) and Hamming for continuous waveform data; Flattop for accurate amplitude measurements; Blackman-Harris for maximum frequency resolution.

FREQUENCY DOMAIN AVERAGING

Up to 50,000 FFT sweeps may be averaged to reduce base-line noise, enable analysis of phase-incoherent signals or signals which cannot be triggered on.

FREQUENCY CURSORS AND WAVE-FORM PARAMETERS

Cursors can be set on the FFT trace to show up to 0.004% frequency resolution (up to 0.002% for 10,000 point memory) and measure power or voltage differences to 0.2% of full scale. Automatic waveform param-

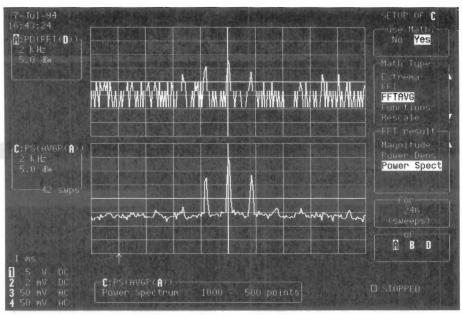

An FFT (top trace) with spectral components buried in noise. By applying the power averaging function (lower trace), all the baseline noise is removed, and the spectral components of an AM signal are clearly visible..

eters can also be applied to FFT traces.

PASS/FAIL TESTING ON FFT TRACES

PASS/FAIL testing is fully supported on FFT traces. The instrument can be setup to test incoming spectra against tolerance masks. In case the signal "fails", the instrument can be programmed to perform a choice of actions (screen dump, waveform storage, pulse out, etc.)

RESCALING

Allows an input signal to be rescaled using a (ax + b) correction factor to compensate for gain and offset. This is very useful when dealing with various types of transducers, to read the correct temperature or pressure value directly from the scope's cursor.

FUNCTION CHAINING

When more than one math function is needed in the equation, WP02 supports function chaining, and allows the user to multiply, for instance, the "Voltage" and the "Cur-

rent" channel and to integrate the result to get an instantaneous energy curve.

REMOTE CONTROL

All of the waveform processing can be controlled via GPIB or RS-232-C remote control. And the function traces do not even need to be called up on screen to be updated, an important feature that speeds up the computation.

FOURIER PROCESSING

Fourier processing is a mathematical technique which enables a time-domain waveform to be described in terms of frequency-domain magnitude and phase, or real and imaginary spectra. It is used, for example, in spectral analysis where a waveform is sampled and digitized, then transformed by a Discrete Fourier Transform (DFT). Fast Fourier Transforms (FFT) are a set of algorithms used to reduce the computation time (by better than a factor of 100 for a 1000 point FFT) needed to evaluate a DFT.

WP02 Specifications

GENERAL

Max. number data points: only limited by the available amount of system memory (indicated in the "memory used" status menu).

Min. number data points: Data points can be reduced down to 50 in the processing function to improve update rate.

Vertical Zoom: supported, $50 \times$ maximum.

Horizontal Zoom: supported, maximum zooming to a point where 50 samples of the source trace occupy the full screen. **Maximum Sensitivity:** 50 μ V/div after vertical expansion.

Frequency Range:

Repetitive signals: DC to instrument bandwidth.

Transient signals: DC to 1/2 maximum single-shot sampling frequency Frequency Scale Factors: 0.05 Hz/div to 0.2 GHz/div in a 1-2-5 sequence. Frequency Accuracy: 0.01%.

AMPLITUDE AND PHASE

Amplitude Accuracy: Better than 2%. Amplitude accuracy may be modified by the window function (see the window functions table).

Signal Overflow: A warning is provided at the top of the display when the input signal exceeds the ADC range.

Number of Traces: Time domain and

Number of Traces: Time domain and frequency domain data can be displayed simultaneously (up to 4 waveforms).

Phase Range: -180° to +180°.

Phase Accuracy: ±5° (for amplitudes > 1.4 div).

Phase Scale Factor: 50° /division.

SPECTRUM SCALING FORMATS

Horizontal Scale: Linear, in Hz

Vertical Scales:

Power Spectrum in dBm (1 mW into 50Ω).

Power Spectral Density (PSD) in dBm.

Magnitude, Real, Imaginary: Linear, in V/div

Phase Display: Linear, in degrees.

WINDOW FUNCTIONS

Rectangular, von Hann (Hanning), Hamming, Flattop and Blackman-Harris (see table below).

FFT EXECUTION TIMES*

100 points in less than 0.03 s. 1000 points in less than 0.3 s. 10000 points in less than 3 s.

* Only valid for 9350, 9360, and 9304/10 with MWP option. Other models, add 50%

FREQUENCY DOMAIN POWER AVERAGING

Summation averaging of power, PSD or magnitude for up to 50,000 sweeps.

FUNCTION CHAINING

Up to four functions can be automatically chained using traces A, B, C and D. Using memories M1 to M4 for intermediate results, any number of operations can be chained manually or via remote control.

REMOTE CONTROL

All controls and waveform processing functions are fully programmable using simple commands over the oscilloscope's GPIB or RS-232-C interfaces.

FILTER PASS BAND AND RESOLUTION								
Window type	Filter bandwidth at -6 dB [freq. bins]	Highest side lobe [dB]	Scallop loss [dB]	Noise bandwidth [freq. bins]				
Rectangular	1.21	-13	3.92	1.0				
von Hann	2.00	-32	1.42	1.5				
Hamming	1.81	-43	1.78	1.36				
Flattop	1.78	-44	0.01	2.96				
Blackman-Harris	1.81	-67	1.13	1.71				

Filter Bandwidth at -6 dB characterizes the frequency resolution of the filter. Highest Side Lobe indicates the reduction in leakage of signal components into neighboring

frequency bins.

Scallop Loss is the loss associated with the picket fence effect.






CKTRIG hardware option for the 9350A family

Main Features

- High speed 500 MHz external clock input.
- 10 MHz external clock reference input.
- Edge trigger comparator output.
- BNC, rear-panel mounted connectors.

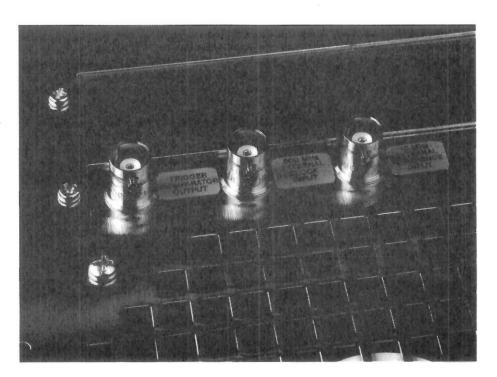

External clock

This feature allows the 9350A family oscilloscopes to be externally clocked up to 500 MS/s, enabling full phase control over the acquired signal. In addition, the sample rate can be fine-tuned to the exact speed required by the application.

External reference

The external reference allows the scope to be phase-synchronized to an external 10 MHz reference, either to match the stability of the external source or to phase lock the acquired signal.

Trigger comparator

The trigger comparator signal outputs a pulse for each valid edgetrigger condition on the trigger signal. An invaluable feature for event-counting applications.

Specifications

EXTERNAL CLOCK INPUT

Input signal requirements:

Amplitude: 800 mV p-p

Frequency range: DC to 500 MHz

Offset: 0 V

Input impedance: 50Ω .

The negative pulse width must imperatively be less than 5ns.

EXTERNAL CLOCK REFERENCE INPUT

Input signal requirements:

Amplitude: 800 mV p-p

Frequency range: 10 MHz ±5%

Offset: 0 V

Input impedance 50Ω .

TRIGGER COMPARATOR OUTPUT

The comparator operates in a 'timeover-threshold' mode and generates a pulse edge of the same polarity as the polarity of the selected triggering edge each time a valid EDGE TRIGGER condition is met on the trigger signal. The duration of the pulse will be equal to the time the trigger signal is above/ below the trigger level.

Note: This does not operate in SMART TRIGGER mode.

Output signal characteristics: ECL, 50Ω , series-terminated.

Ordering Information

935XA-ČKTRIG

CKTRIG option for the 9350A oscilloscope family.

935XA-RKCKTRIG

Retrofit kit for the the 9350A oscilloscope family.

USA Direct Sales: 1 (800) 5LE-CROY

LeCroy Worldwide Sales Offices

ASIA/PACIFIC LeCroy Pty Ltd
BENELUX LeCroy BV
FRANCE LeCroy SARL
GERMANY LeCroy GmbH
ITALY LeCroy SRL
JAPAN Osaka LeCroy Japan
JAPAN Tokyo LeCroy Japan
SWITZERLAND Geneva
SWITZERLAND Lenzburg
United Kingdom LeCroy Ltd

61.38.90.7358 04902.8.9285 (1).69.18.83.20 06221.83.10.01 06.336.797.00 0816.330.0961 0813.3376.9400 022.719.21.11 064.51.91.81 (01235) 533114

Other sales and service representatives throughout the world.

Copyright October, 1994. LeCroy is a registered trademark of LeCroy Corporation. All rights reserved. Information in this publication supersedes all earlier versions.


Specifications subject to change without notice.







LeCalsoft-Calibration Software for LeCroy Digital Oscilloscopes

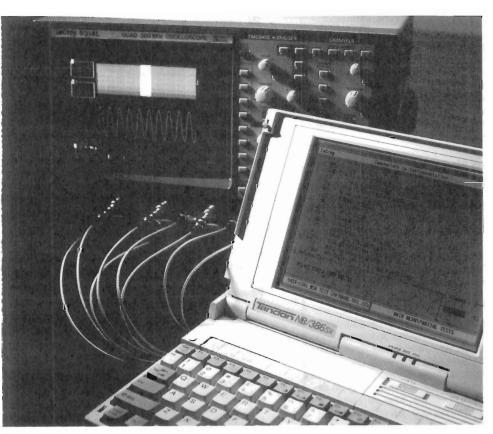

The LeCalsoft package enables a fast and thorough verification of all key specifications.

Main Features

- Traceability to reference standards
- Computer check of key specifications
- Computer-aided readjustment
- Fully automated configurations available
- Supports all 93XX and 94XX models
- IBM[®] PC-AT compatible

General

The LeCroy LeCalsoft (94XXCS05) test and calibration package provides a convenient, unambiguous check of LeCroy oscilloscopes. Designed for users who require traceability to reference standards (NIST, etc.), this package is ideally suited for use in calibration laboratories where the oscilloscopes are checked at fixed intervals.

Results of the calibration check are fully documented on hard copy, or they can be archived on hard disk or diskette.

LeCalsoft works on any PC compatible with the IBM[®]-AT standard. It controls the oscilloscope and the calibration sources through a National Instruments[®] GPIB interface.

Features

Calibration Check

All the essential specifications of the Digital Oscilloscope, such as bandwidth, linearity, noise, trigger, timebase and effective—bit count are tested. Deviations from nominal values are calculated and displayed on the screen, printed, or archived on hard disk or diskette.

Comprehensive Documentation of the Test Results

At the end of each calibration check, two types of documentation are available: a long form printout which gives details of the results of all the tests executed, and states whether or not the results are within the specifications, and a short form printout which gives a summary of the test results.

Calibration Traceable to National Standards (NIST, etc.)

By using signal sources traceable to a standard, the calibration will be traceable to the same standard, provided the relevant documentation is maintained.

Manual and Automated Calibration Check

Both manual operation with computer assistance, and automated operation are possible. Automated operation requires programmable multiplexer and signal sources. See the list of supported devices below.

Assisted Adjustment of the Oscilloscope

A computer—aided adjustment procedure is also provided. By following instructions on the screen, the trained technician is guided through the adjustments required to correct the settings of the oscilloscope so that it is within the specifications.

Calibration Certificate

On request, LeCroy will perform calibration traceable to National Standard Organizations. Calibration certificates are provided as part of this service.

Functional Description

Calibration Practice

LeCroy oscilloscopes are auto—calibrating digital oscilloscopes and therefore do not require regular calibration like analog oscilloscopes. However, for users who require traceability to reference standards (such as those provided by the National Institutes of Standards and Technology), and for calibration laboratories which must inspect incoming instruments and perform recalibration at prescribed intervals, the LeCalsoft computer—aided test and calibration packages provide an easy solution.

Under guidance of the LeCalsoft program, some adjustments to the oscilloscope can be made by an electronics technician. However major deviations from specifications usually require repair by a trained service engineer. LeCroy regularly schedules training classes. If no in–house trained person is available, the nearest LeCroy service center can carry out repairs and calibration, and provide traceability to reference standards.

Using the LeCroy LeCalsoft Packages

For calibration checking, digital oscilloscopes have a great advantage over analog oscilloscopes because waveforms can be transferred to a host computer. This simplifies the calibration procedure enormously, makes it potentially faster and allows an extensive range of tests with unambiguous interpretation of the results.

LeCalsoft performs an extensive series of tests which verify the specifications of the oscilloscope. It includes many tests relevant to analog scopes such as Noise and Linearity tests. Although these tests are difficult and time consuming on an analog oscilloscope, they can be computer controlled and are quickly and easily performed on a digital oscilloscope. Tests which are specific to digital oscilloscopes, such as Sinefit tests are also included.

The various test options in LeCalsoft are presented to the operator in the form of a simple menu system. The user has the choice of performing an automated calibration check of the oscilloscope, or individually testing any of the specifications. Some of the tests require the use of high–quality external signal generators. The user receives instructions on

the screen when it is necessary to change the cable connections, but apart from this minor intervention, the tests are fully computer controlled when supported GPIB–programmable instruments are used.

Supported Instrumentation

LeCalsoft software works on any AT–compatible equipped with a math coprocessor and a National Instruments GPIB interface. Automated calibration checking is possible using a set of instruments from the following list. (For an automated calibration check, either the LeCroy or Keithley programmable multiplexer is required to feed the calibration signals to the oscilloscope input.)

RF sinewave generators: Marconi 2019A, 2022C, 2030, 2031 Fluke 6060B, 6061A Hewlett–Packard 8642A, 8642B Rohde & Schwarz SMX

AF sinewave generators:
Marconi 2019A, 2022C, 2030, 2031
Hewlett–Packard 8642A, 8642B
Rohde & Schwarz SMX
Tektronix FG5010
LeCroy AFG 9100

DC Precision Power Supply: Tektronix PS5004 Datron 4708 Autocal Multifunction Standard

Fast Pulse Generator: Tektronix CG5001/CG551AP

Power Meters: Hewlett–Packard HP436A, HP437B

Multiplexers:
Keithley 199 SYSTEM DMM/
SCANNER with LeCroy interface board.
LeCroy 4951, 4973–1, 4973–2
Multiplexers.

Frequency standard: WWV or HBG1500

Recommended Accessories

A full kit of calibration connectors and interfaces is available from LeCroy. It includes all the necessary cables, adapters, splitters and filters, as well as the Programmable Multiplexer. Also available is a repair package including special tools, board extenders, etc., for computer—aided adjustment.

Use of Other Instruments

It is possible to perform the calibration check with some other unsupported signal sources. However, the user is then required to set up these instruments manually and to perform one measurement at a time. The LeCalsoft package

guides the user step by step, and controls the oscilloscope data acquisition and the computation of the results.

LeCalsoft compares the signal measured by the oscilloscope with the signal it would expect to receive from the generator. Warning messages are displayed whenever tolerances are exceeded. Some of the adjustments may be carried out by the user when the test sequence is finished. In this case, the software will guide the user through the correct adjustment procedure. At the end of the calibration check, a printout can be generated to list the results.

Specifications

Computer Required: Any PC compatible with the IBM-AT standard, and equipped with a mathematical coprocessor and a National Instrument Inc. GPIB interface.

Operating System: DOS 3.0 upward

Medium: 3¹/₂" 1.44 Mb 5¹/₄" 1.2 Mb diskette

Major Tests Supported by LeCalsoft

Internal

To ensure proper calibration of the oscilloscope, internal auto-calibration tests are automatically executed during normal operation. This standard sequence of internal auto calibration tests is initiated by the software and the results are transferred to the PC for analysis.

The tests are:

- Calibration of the resolution of the time-to-digital converter with respect to the system clock
- Determination of the gain constants of the input amplifiers
- Offset compensation versus gain variation
- Global internal non-linearity
- General functionality check

Bandwidth

To calculate the bandwidth, the amplitudes of sine waves of increasing frequencies are measured. The sine wave generator is first set to 500 kHz with an amplitude 75% of full screen, i.e. ±3 vertical divisions. The frequency is then swept up to the point where an amplitude drop of 3 dB is observed. This indicates the bandwidth.

This test is executed on all channels for 1 M Ω and 50 Ω input impedance and for all vertical sensitivities. It requires a sine wave generator with good flatness.

Generators supported under program

control are listed on page 2.

Linearity

15 different known voltages, varying from 5% to 95% of full screen, are applied by the external voltage reference source. For each voltage value, a full waveform is acquired, and the mean value is compared to the known input voltage. The linearity is determined through a linear regression fit to the 15 measurements. The slope, the offset and the chi-square of the fit are computed.

With the linearity test, many other related tests are performed: response time of the overload protection of the 50 Ω input, linearity of the variable gain calibration, range and linearity of the offset setting, and quality of the input coupling.

This procedure is executed on all channels for both 1 M Ω and 50 Ω input impedance. The test requires a DC source with a precision and time stability of 0.1%, a voltage range of 0 V to 20 V adjustable in steps of 5 mV, and an output current capability of 300 mA.

Power supplies supported under program control are listed on page 2.

Noise

The noise tests are executed on all channels for both $1M\Omega$ and 50Ω input impedance, with AC and DC coupling, five different time-base settings, and open inputs. Full waveforms are acquired with different offset values. The peak-to-peak as well as the RMS values of each measurement are computed, and the maximum values are recorded. The program also indicates the occurrence of any "flyers", i.e. short noise peaks generated by the ADC's.

The noise tests also include:

 checking the linearity of the variable offsets of all channels between 2.5% and 97.5% of full screen.

 checking the stability of the ground line when switching the inputs between GROUND and DC coupling modes.

Rise time/Overshoot

Executed on all channels for both $1M\Omega$ and 50 Ω input impedance, these tests measure the rise time of the oscilloscope response to the input voltage step, as well as the amount of pre-shoot and overshoot. They require a voltage step generator with calibrated fast risetime amplitude.

The Voltage Step Generator supported under program control is the Tektronix CG5001.

Sinefit

The performance of the analog-to-digital converter is evaluated in terms of the number of effective bits (a measure of the signal-to-noise ratio). It is measured on all channels, at a sensitivity of 50 mV/ div., by applying a pure sine wave at varying frequencies and timebase settings

This test is a measurement of dynamic linearity. It shows the effect of such errors as noise, non-linearities and aperture jitter.

Timebase

The timebase test compares the internal clock with a very precise and stable external timebase reference (clock generator) such as the WWV standard or HBG 1500.

Trigger

The trigger capabilities are tested for all possible configurations. These include:

- Internal and external trigger sources
- DC, AC, HF-reject, and LF-reject couplings
- Trigger level settings in all slope modes.

ORDERING INFORMATION LeCalsoft and Options

94XXCS05 Complete LeCalsoft for 93XX and 94XX (software and

hardware), incl. cables, switch card, adapters, etc.

LeCalsoft software for 93XX and 94XX 94XXCS01

9400CS01 Calsoft software for 9400A

LeCalsoft Accessories

93XXKCS02 Calibration kit for 93XX and 94XX 9400KCS02 Calibration kit for 9400A

Individual system components available on request

U.S. REGIONAL SALES OFFICES 1 800-5-LeCroy (1-800-553-2769):

automatically connects you to your local sales office.

LeCroy has sales engineers in most major metropolitan areas, coordinated through a system of five Regional Sales and Service Offices:

NORTHEAST: 700 Chestnut Ridge Rd, Chestnut Ridge, NY 10977

SOUTHEAST: 410 Ware Blvd Ste 716, Tampa, FL 33619

FARWEST: 5912 Stoneridge Mall Rd Ste 150, Pleasanton,

CA 94588

CENTRAL:

Midwest: 4811 S 76th St Ste 415.

Greenfield, WI 53220

Southwest: 14800 Central Ave SE

Albuquerque, NM 87123

WORLDWIDE

Argentina: Search SA, (01) 394-5882 Australia: Scientific Devices Pty Ltd, (03) 579-3622

Austria: Dewetron GmbH, (0316) 391804 Benelux: LeCroy BV (0031) 4902-89285 Brazil: ATP-Hi-Tek, (011) 421-5477

Canada: LeCroy Canada Inc, (514) 928-4707

Denmark: Lutronic, (42) 459 764 Eastern Europe: Elsinco GmbH, Vienna, 222 812 1751

Finland: Labtronic OY, (80) 847 144 France: LeCroy Sarl (1) 69 073 897 Germany: LeCroy GmbH, (06221) 831001 Greece: Hellenic S/R Ltd., (01) 721 1140 Hong Kong: Euro Tech (Far East) Ltd, (052) 814-0311

India: Electronic Ent, (022) 4137096 Israel: Ammo, (03) 453157

Italy: LeCroy Srl, Roma (06) 300.97.00 or 331 31 46; Milano (02) 2940 5634

Japan: LeCroy Japan,

Tokyo (0081) 33 376 9400; Osáka (0081) 6 330 0961 WOOJOO Hi-Tech Corp,

(02)449-5472Mexico: Nucleoelectronica SA,

(05) 5593 6043

New Zealand: E.C. Gough Ltd, (03) 798-740 Norway: Avantec AS (02) 630520

Pakistan: Electronuclear Corp, (021) 418087 Portugal: M.T. Brandao, Lta, (02) 815680 Singapore: Sing. Electr. and Eng. Ltd (65) 481-8888

S. Africa: Westplex Test & Meas. (011) 787 0473 Sweden: MSS AB, (0764) 68100

Switzerland: LeCroy SA (064) 51 91 81 Taiwan: Topward El.Inst., Ltd, (02) 601 8801 Thailand: Measuretronix Ltd, (02) 374 2516 United Kingdom: LeCroy Ltd, (0235) 533 14



LeCROY CORPORATE HEADQUARTERS

700 Chestnut Ridge Road Chestnut Ridge, NY 10977-6499

Phone: (914) 425-2000 TWX: (710) 577-2832 Fax: (914) 425-8967

LeCROY EUROPEAN HEADQUARTERS

2, rue du Pré-de-la-Fontaine P.O.Box 341 1217 Meyrin 1 - Geneva, Switzerland Telephone: (022) 719-21-11 Fax: (022) 782-39-15

SECTION 3 Block Diagram and Sub-Assemblies

3.1 9354A, 9354AM & 9354AL Sub-Assemblies


F9302-1-4	Processor, 4 Mbyte RAM for 9354A
F9302-1-8	Processor, 8 Mbyte RAM for 9354AM
F9302-1-16	Processor, 16 Mbyte RAM for 9354AL
F9350-21	Acquisition Memory, 2 X 50 K for 9354A
F9350M-21	Acquisition Memory, 2 X 250 K for 9354AM
F9350L-2	Acquisition Memory, 2 X 2 MB for 9354AL
F9354-31	Main card, Quad 500 MHz, 500 MS/s, Front end, ADC, Time base
F9300-4	GPIB + RS232 interface
F9354-5	Quad channel front panel
PS9351	Power supply +/- 5V, +/- 15V.
93XX-Display	Video, deflection, CRT, yoke
M935X	
1V1933A	Mechanical for 9354A/M/L series

3.2 9354T & 9354TM Sub-Assemblies


F9302-1-4	Processor, 4 Mbyte RAM for 9354T
F9302-1-8	Processor, 8 Mbyte RAM for 9354TM
F9350T-21	Acquisition Memory, 2 X 100 K for 9354T
F9350TM-21	Acquisition Memory, 2 X 500 K for 9354TM
F9354-31 F9300-4 F9354-5 PS9351 93XX-Display M935X	Main card, Quad 500 MHz, 500 MS/s, Front end, ADC, Time base GPIB + RS232 interface Quad channel front panel Power supply +/- 5V, +/- 15V. Video, deflection, CRT, yoke Mechanical for 9354T series

3.3 9354A, 9354AM, 9354AL, 9354T & 9354TM Hardware Options


9354A-FDGP	Graphic Printer & Floppy Disk F9300-6: Centronics, Floppy, Printer interface F9300-7: Printer controller
9354A-GP01	Graphic Printer F9300-6: Centronics, Floppy, Printer interface F9300-7: Printer controller
9354A-FD01	Floppy Disk F9300-6: Centronics, Floppy, Printer interface
9354A-HDD	Hard Disk Drive, 130 MB F9300-8 : PCMCIA III, Hard Disk Controller

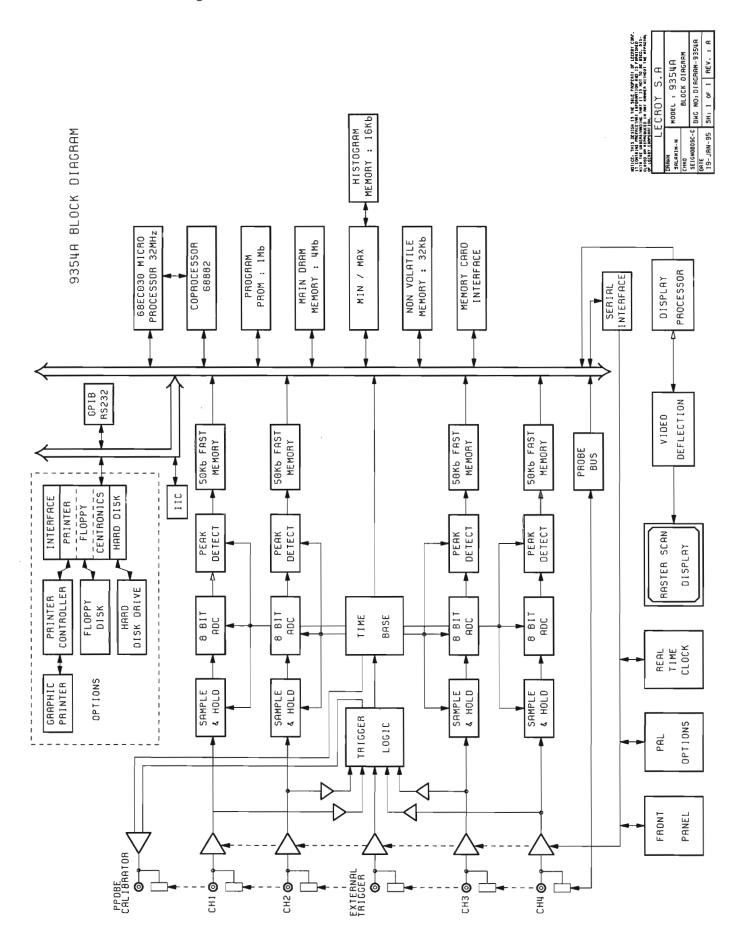


Page 3-2

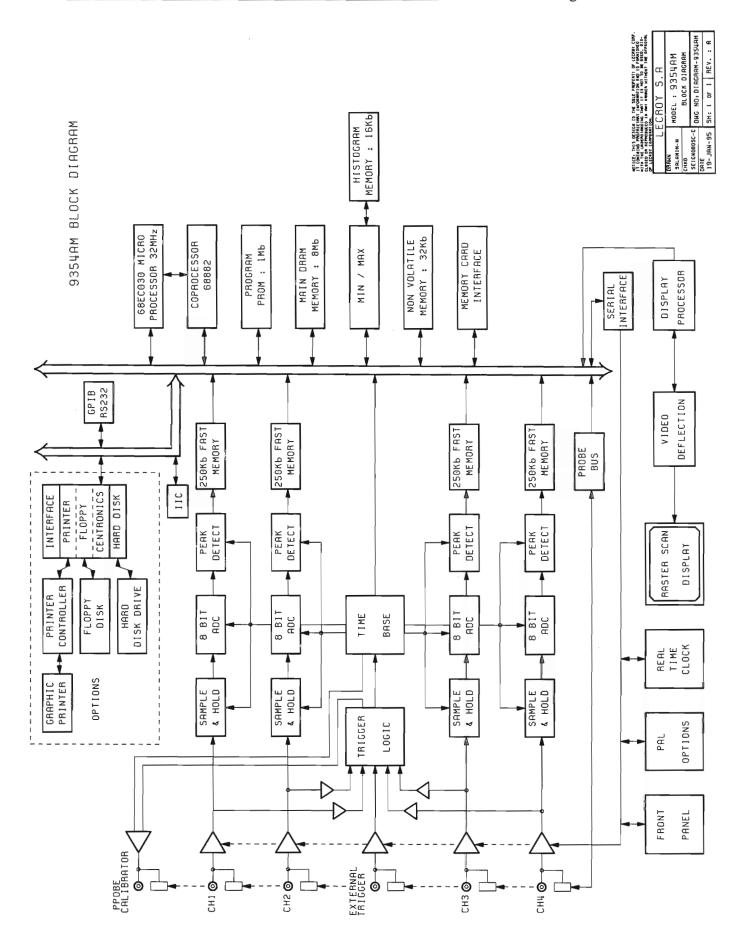


Page 3-3

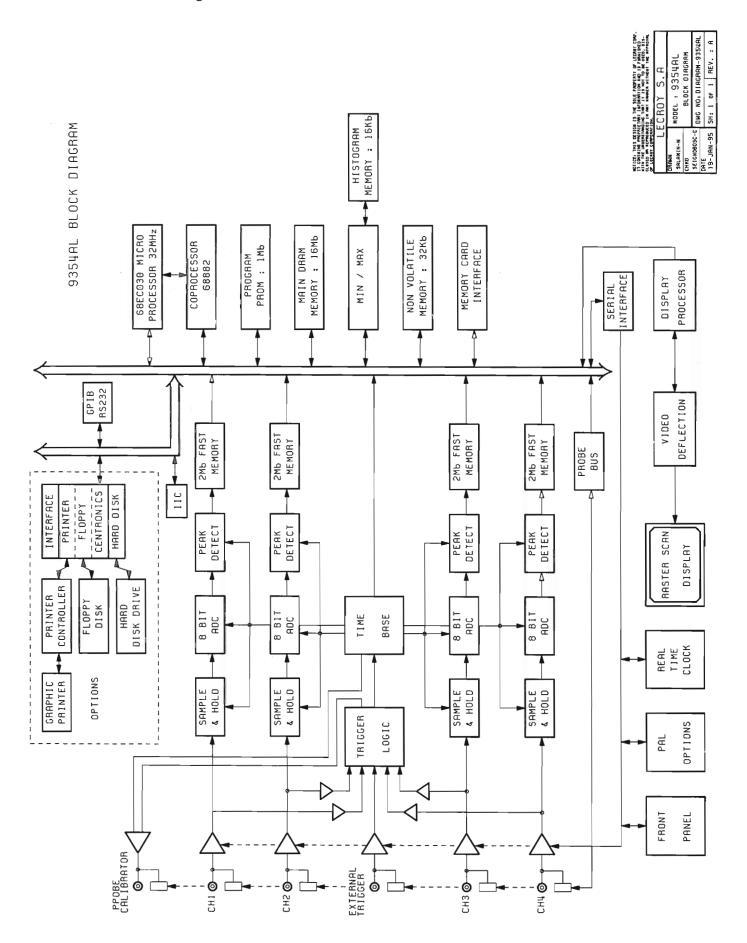

Page 3-4

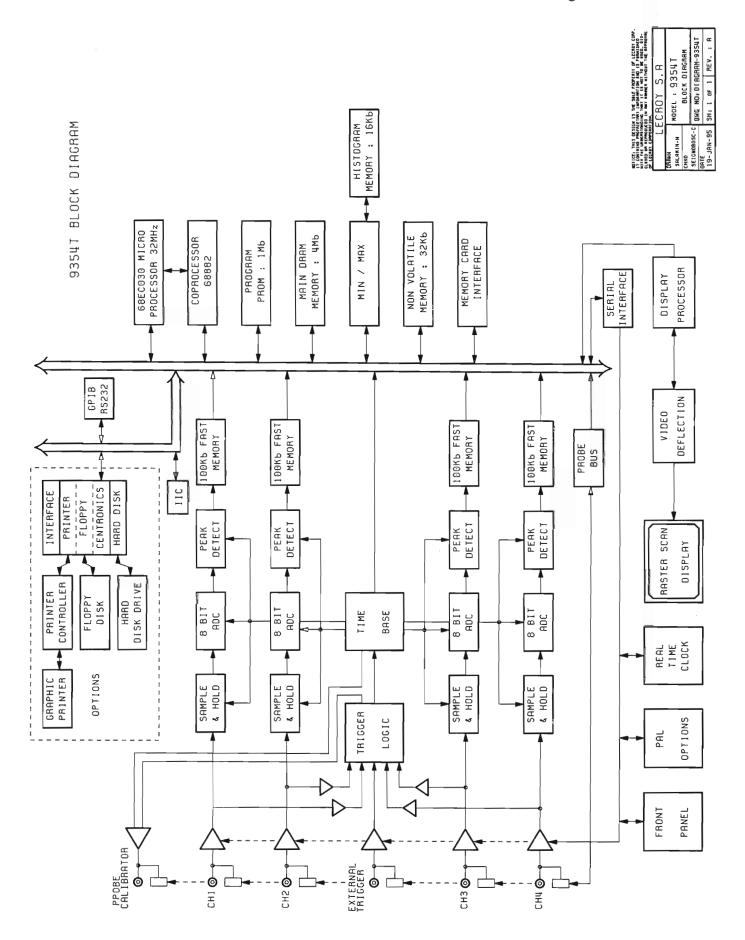

Page 3-5

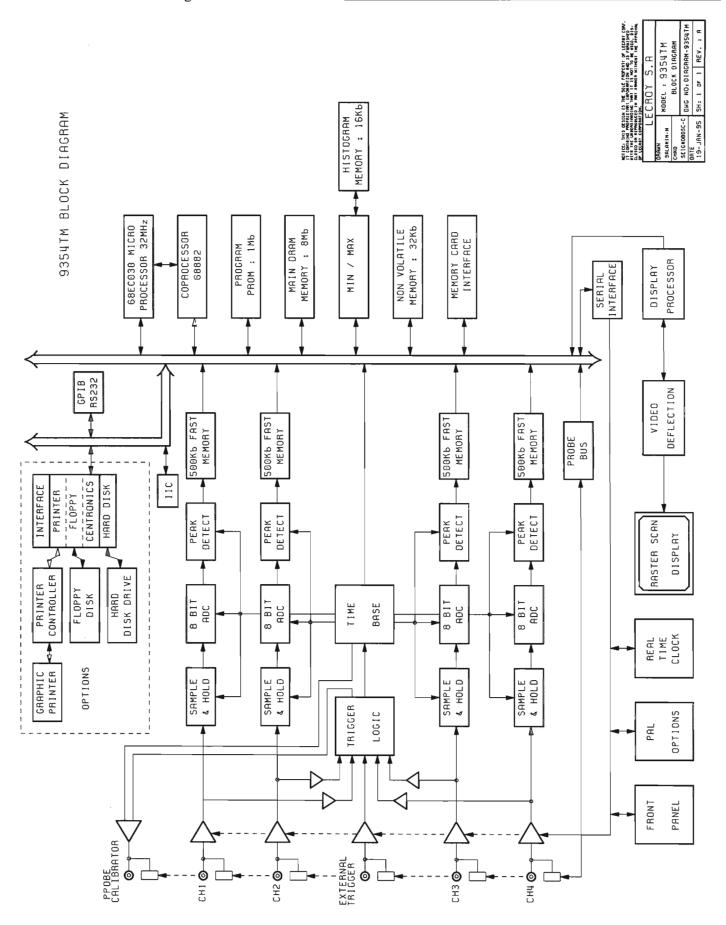


Page 3-6

SECTION 4 THEORY of OPERATION

4.1 Processor Board: F9302-1-4 for 9354A & 9354T, F9302-1-8 for 9354AM & 9354TM, or F9302-1-16 for 9354AL

This processor board is based on to the 68EC030 and 68882 coprocessor, with an internal clock frequency of 32 MHz, and 4 Mbytes or 8 Mbytes or 16 Mbytes memory. The internal Data Bus is 32 bits wide (DRAM, DSP), the peripheral Data Bus set 8 or 16 bits, and the Address Bus has 32 bits (A0-A30 and A31 for the Min/Max.).

4.1.1 Processor Block Diagram

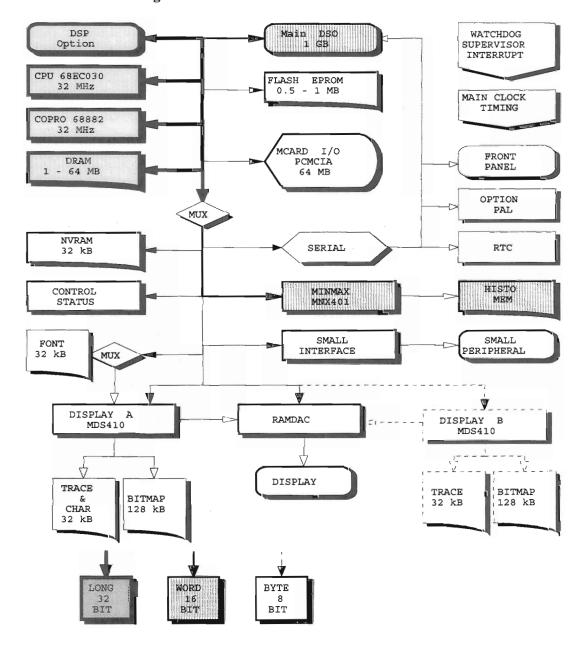

4.1.2 Parallel Peripherals

DRAM memory: Data bus 32 bits

The DRAM memory of 4 Mbytes or 8 Mbytes or 16 Mbytes (up to 64 Mbytes) is used as the program memory and working memory.

The compacted program of 1MByte stored within the Flash EPROM, IC of 8 Mbit is de-compacted, loaded and executed in the DRAM.

DSP interface: Data bus 32 bits.

An optional Digital Signal Processor is connected to the processor board via a 32 bits address bus.

F9354-31 main board interface: Data bus 16 bits.

The main board is connected to the processor via a 32 bits address bus. See section 4.3.

Min/Max calculation: Data bus 16 bits.

A gate array MNX401 makes a histogram in its associated 16 Kbytes memory and remembers the minimum and maximum data values it sees.

Flash memory: Data bus 8 bits.

Segmented Flash EPROM of 1 Mbyte (IC of 8 Mbits) contains 16 Kbytes program, executable at power on, and other compacted programs executable in the DRAM.

Memory card: Data bus 8 bits.

An interface is implemented to support an external memory card, PCMCIA / JEIDA 4, type 68 pins, whose size can range from 16 Kbytes to 64 Mbytes, with the extension to support flash memory and I/O cards.

Graphic processor: Data bus 8 bits.

The graphic processor of the raster scan display is a gate array designated MDS410.

Clock frequency : 48 MHz.

Trace and characters memory : 32 Kbytes (SRAM).

Bitmap memory : 128 Kbytes (BMRAM).

Character font : 32 Kbytes (SRAM).

Non volatile memory: Data bus 8 bits.

A static RAM of 32 Kbytes (IC of 256 Kbits) contains the parameters used at power on to initialize the scope and the stored panels parameters. This memory is battery backed up

DAC command of the display intensity: Data bus 8 bits.

The control of the display intensity is done by a RAMDAC, up to 8 traces.

Status and command registers: Data bus 8 bits.

Status (read) and command (write) registers of 12 bits address, control the memory card and front panel interface during the boot process or after a RESET.

4.1.3 **Serial Peripherals**

The processor controls the digital and analog section with a dual serial controller.

DAC's registers (read/write) Front panel registers (68HC05C4) RTC registers (68HC68T1) Probe detection Software options (GAL) Front end control Trigger control (MTR408)

Real time clock

Integrated circuit 68HC68T1 (Motorola or RCA).

Resolution

: 1 sec to 99 years.

Clock frequency

: 32.768 KHz.

Non volatile memory: 32 Kbytes.

Data & Address bus : 8 bits.

Interrupt level

: 5.

4.1.4 **External Interfaces**

Serial RS232 interface and Parallel GPIB interface. See F9300-4 description, section 4.4.

4.1.5 **Optional Interfaces**

Graphic Printer

: F9300-6 interface and F9300-7 printer controller.

Internal graphic printer

Floppy Disk Drive

: F9300-6 interface

1.44 Mbytes floppy

Centronics Printer

: F9300-6 interface

Hard Disk Drive

: F9300-8 PCMCIA III controller,

130 Mbytes hard disk

Section 4	Theory of Operation	
	2 1	

4.2 F9354-31 Main Board

4.2.1 Introduction

The board is divided into five sections:

- Microprocessor control.
- Front-end
- Trigger
- Analog to Digita! Converter
- Time base

4.2.2 Microprocessor Control

See block diagram, page 4.6

4.2.3 Front End


The front end system provides the signal conditioning for the ADC system. The main functions are:

- n four channels operation, calibration with Software control
- * input protection and coupling : AC, DC, 1 M Ω , 50 Ω
- amplitude normalisation for the ADC system: 320 mV full scale
- fine gain control
- offset control
- bandwidth limit filter: BWL 30 MHz
- triggering with standard coupling and TV trigger on four channels and External

4.2.3.1 Channel Description

The four channels are identical, thus only one channel will be described for brevity.

- Input coupling and protection: Relay RL1 (_CAL) connects the front-end input to the calibration source and disconnects the BNC which is then terminated on a 1 M Ω high impedance. Switch SW1 (VCAL/10) selects between a divide by 4 or a divide by 40 for the DC calibration signal. Relay RL2 (_HZ) sets the 1 M Ω /50 Ω coupling. A diode circuit senses the temperature of the 50 Ω termination resistor and sets the _OVL status bit low if overheating is detected. The BNC input is then disconnected by the hardware, the DC calibration signal being connected to the front-end input (automatic activation of RL1). Relay RL3 (_IN/20) selects between a divide-by-20 or a direct path for the signal. Relay RL4 (DC) sets the AC/DC coupling, which is preceded by a divide by 10 amplifier.
- High impedance buffer: A0 is a high impedance buffer with a gain of 10. The same buffer is used for the offset control. Switch SW2 (of/10) selects a direct or a divide by 10 amplifier.

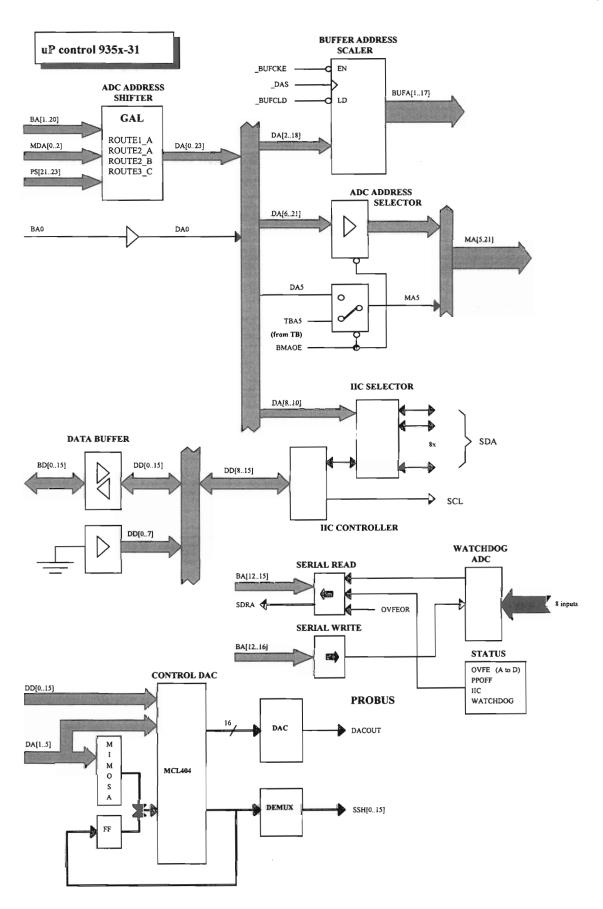

Page 4-5

- The MFE409 is a monolithic circuit with the following mean features :
- Differential input with 6 fixed sensitivities (2 mV/div. to 100 mV/div. in a 1-2-5 sequence).
- Continuously variable gain amplifier with gain ratio of almost 3.5.
- A2 is a second variable gain amplifier used to reach the gain needed for the 2 mV/div. setting.
- A3 delivers two complementary outputs, one for the ADC system and one for the trigger circuit (MTR408). A3 can be trimmed for gain and linearity. Typically, A1 will be set with 20 mV/div. and a gain of 3.0, A2 with a gain of 2.0 and A3 will be trimmed to have 320 mV FS into the ADC system input with the lowest non-linearity.
- The bandwidth control, connected through switch SW3 (BWL), is implemented with a one pole RC filter with a -3 dB cut-off frequency of almost 30 MHz.
- Another bandwidth control, connected through switch SW4 (BWLD), is here to correct the shape of the signal when the divide-by-20 attenuation is selected (gain > 100 mV) in 1 M Ω high impedance coupling.
- The output to the ADC system is separated in two 75 Ω lines, going through the relay RL5 (RSH) which selects the source for one of each ADC system couple (B for AB or C for CD), this is to implement the 1 GS/s mode.

4.2.3.2 Digital controls

0141 0z00 - 0141 0zff	write channel A control register
0141 1 z 00 - 0141 1 z ff	write channel B control register
0141 2 z 00 - 0141 2 z ff	write channel C control register
0141 3z00 - 0141 3zff	write channel D control register

15							8
_VCAL	_IN/20	2mV	5mV	10mV	20mV	50mV	100mV
7							0
		BWL	RSH	BWLD	OF/10	DC	_HZ

range mV	BWLD	OF/10	_IN/20	2mV	5mV	10mV	20mV	50mV	100mV	gain to ADC
2	0	1	1	1	0	0	0	0	0	+20
5	0	1	1	0	1	0	0	0	0	+8
10	0	1	1	0	0	1	0	0	0	+4
20	0	0	1	0	0	0	1	0	0	-2
50	0	0	1	0	0	0	0	1	0	-0.8
100	0	0	1	0	0	0	0	0	1	-0.4
200	_HZ	1	0	0	0	1	0	0	0	+0.2
500	_HZ	0	0	0	0	0	1	0	0	-0.08
1000	_HZ	0	0	0	0	0	0	1	0	-0.04
2000	_HZ	0	0	0	0	0	0	0	1	-0.02

LSB-1

```
VCAL
             0 = DC calibration (external BNC is disconnected),
                        1 = input coupling.
IN/20
             0 = attenuation is ON, 1 = attenuation is OFF.
BWL
             0 = \text{bandwidth limit is OFF}, 1 = \text{bandwidth limit is ON}.
RSH
             0 = channel only on one ADC, 1 = channel on two ADC.
BWLD
             0 = \text{high impedance bandwidth compensation is OFF}, 1 = \text{ON}.
OF/10
             0 = offset control attenuation is OFF, 1 = ON.
DC
             0 = AC coupling, 1 = DC coupling.
HZ
             0 = 1 \text{ M}\Omega high impedance coupling, 1 = 50 \Omega coupling.
```

0140 4z00 - 0140 4zff read channels overload (and option package availability)

_INTWD	_INTIIC	_OVL_T	_PPOFF	_OVL_D	_OVL_C	_OVL_B	_OVL_A	OPT
_INTWD watchdog ADC interrupt,								
		^	•	,				

_INTIIC I²C protocol interrupt,
_PPOFF probe power overload interrupt,
_OVL_n overload indicator (Ch A, B, C, D, EXT).
OPT 935XA-CKTRIG option package (9th bit of serial read).

A low state indicate that overload or interrupt is detected. Bit OPT is high when the options are available.

0140 5z00 - 0140 5zffread overload sum

```
OVLSUM bit 7, Sum of the eight above bits.

0 = OK, 1 = problem occurred ( read channels overload )
```


4.2.3.3 Analog controls

- One precision DAC with associate circular memory (μP system) drives and refreshes a multiple sample-and-hold system. The DC calibration control is common to all four channels. Each channel has two analog controls.
- VCAL and VOFFSET are voltage controls. The DAC dynamic range (± 10V) is scaled to the proper range by means of resistor dividers and thus the conversion can be said to be linear. The gain controlled amplifiers inside the MFE409 needs current mode controls. A voltage to current converter follows the sample-and-hold IVGAIN signal and provides the appropriate range. The addresses are:

```
0300 0014 write DC calibration level control (VCAL)
0300 0000 write channel A gain control
0300 0002 write channel B gain control
0300 0006 write channel B offset control
0300 0008 write channel C gain control
0300 0000 write channel C offset control
0300 0000 write channel D gain control
0300 0000 write channel D gain control
0300 0000 write channel D offset control
```

4.2.4 Trigger

4.2.4.1 Block Diagram

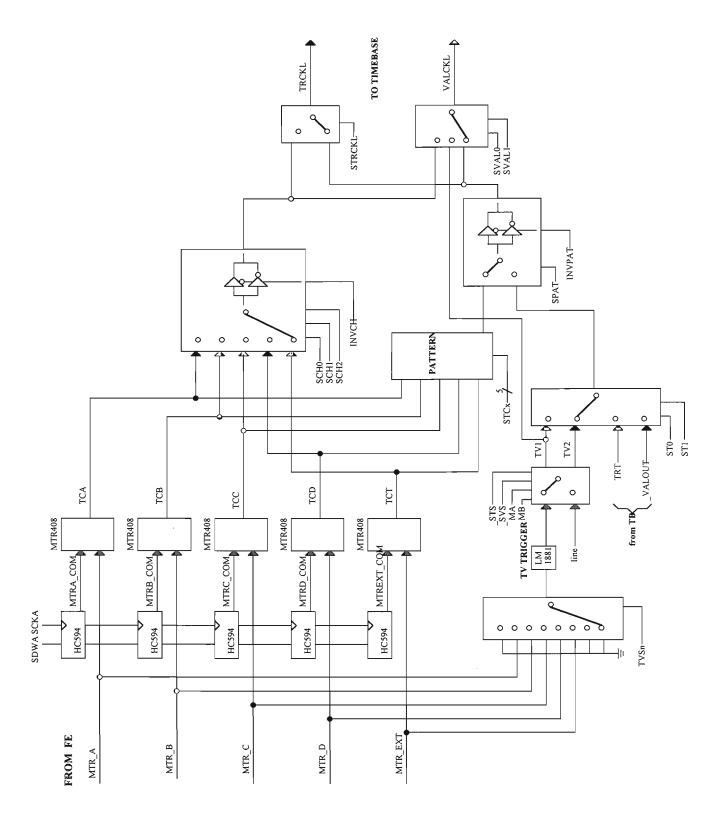

The different trigger couplings are:

• DC

• AC : cut off frequency is almost 10 Hz.

• LF REJ : set a single pole high pass filter with a cut off frequency at 50 kHz.

• HF REJ : set a single pole low pass filter with a cut off frequency at 50 kHz.

■ TBWL : single pole low pass filter at 30 MHz.

The amplitude at the input of the MTR408 is 320 mV FS (identical to the ADC system),

4.2.4.2 Digital Controls

The 40 bit shift register, is allocated as follows:

0141 4z00 - 0141 4zffwrite trigger control register

39						32
	TBWL_A	HFR_A	AC_A	DC_A	 SNEG_A	SPOS_A
31						24
TEXT50	TBWL_B	HFR_B	AC_B	DC_B	 SNEG_B	SPOS_B
23						16
	TBWL_C	HFR_C	AC_C	DC_C	 SNEG_C	SPOS_C
15						8
	TBWL_D	HFR_D	AC_D	DC_D	 SNEG_D	SPOS_D
7						0
_EXT/10	TBWL_EXT	HFR_EXT	AC_EXT	DC_EXT	 SNEG_EXT	SPOS_EXT

TEXT50 $0 = 1 \text{ M}\Omega$ external input coupling, $1 = 50 \Omega$ external input coupling. _EXT/10 0 = attenuation is ON, 1 = OFF.

4.2.4.3 Analog Controls

A sample and hold fed by the precision DAC provides the threshold level.

The addresses are:

0300 0010 write EXT threshold control
0300 0018 write channel A threshold control
0300 001a write channel B threshold control
0300 001c write channel C threshold control
0300 001e write channel D threshold control

4.2.4.4 TV Trigger

Each channel has a pick-off after the MFE409 or after the high impedance buffer for external trigger. The TV trigger source is selected via bit TVS and drives a times 10 amplifier with complementary outputs. These outputs are selected (_TVINV) depending on the state of the selected MFE409 gain.

The TV trigger uses a commercial chip (LM1881) and provides two outputs, TV1 & TV2. This circuit is able to trigger on different TV line number standards.

■ Digital Controls

The 16 bit shift register, written using the serial protocol, is allocated as follows:

0141 5z00 - 0141 5zffwrite trigger TV and MST412 oscillator control register

15							<u> </u>
_TVINV	TVS2	TVS1	TVS0	HDTV	875	MB	MA
7							0
STI	_STW	_svs	_STS			-	

TVINV 0 = inverting TV trigger (to compensate for inversion in MFE409).

SVS 0 = enable TV1 source.

STS 0 = enable TV2 source.

STI 0 = enable interval width mode for MST412 oscillator control.

STW 0 = enable pulse width mode for MST412 oscillator control.

TVS2	TVS1	TVS0	TV trigger	HDTV	875	line setting
ļ			source			
0	0	1	channel A	0	0	525-625 TVLO
0	1	0	channel B	0	1	875 (MED)
0	1	1	channel C	1	0	1225 (HIGH)
1	0	0	channel D	1	1	2500 (HDTV)
1	0	1	external trigger			


4.2.5 Analog to Digital Converter

4.2.5.1 Introduction

The analog to digital converter system does the signal conversion to 8 bits.


- Sample and Hold: the HSH416 Hybrid with Analog bandwidth of 1GHz, performs the track and hold before the ADC. It is clocked at three different frequencies: 500 MHz, 400 MHz, and 200 MHz. The offset is calibrated by use of a current mirror controlled by a 8 bit DAC.
- Flash ADC: the TDA8718 is a folding ADC working at a maximum clock speed of 500 Ms/s. The gain is calibrated by adjusting the internal resistor ladder using a 8 bit DAC. The ADC input level is 240 mV peak to peak on 75 Ω, from the nominal 320 mV front-end output.
- Demultiplexer: the MDX416 monolithic is used to demultiplex the ADC output, and catch the glitch (min/max).
- Buffer Memory: 128K bytes
- ADC Memory: 50K points for 9354A, 100 K for 9354T, 250K for 9354AM, 500 K for 9354TM, 2M points for 9354AL. Memory length may be extended by combining the acquisition memories of multiple channels.

4.2.5.2 ADC Block Diagram

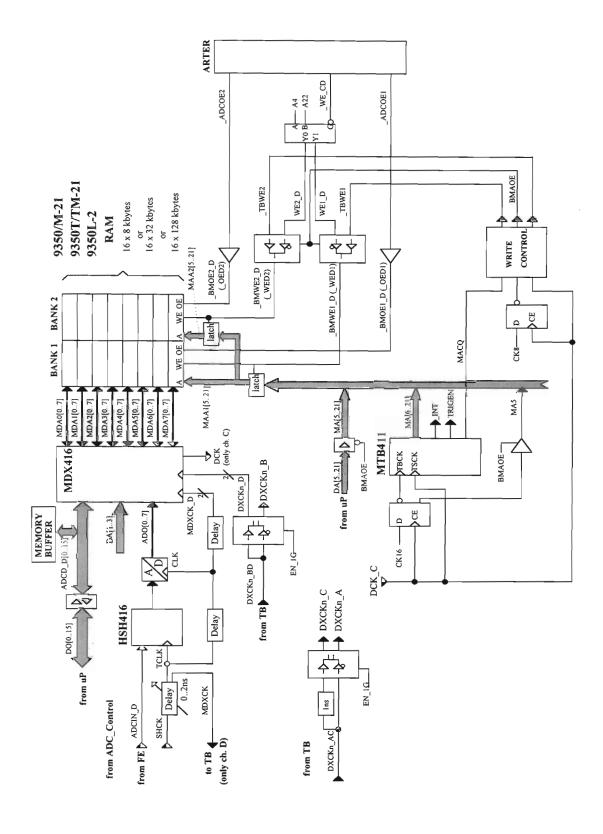

Page 4-11

4.2.5.3 Memories Block Diagram

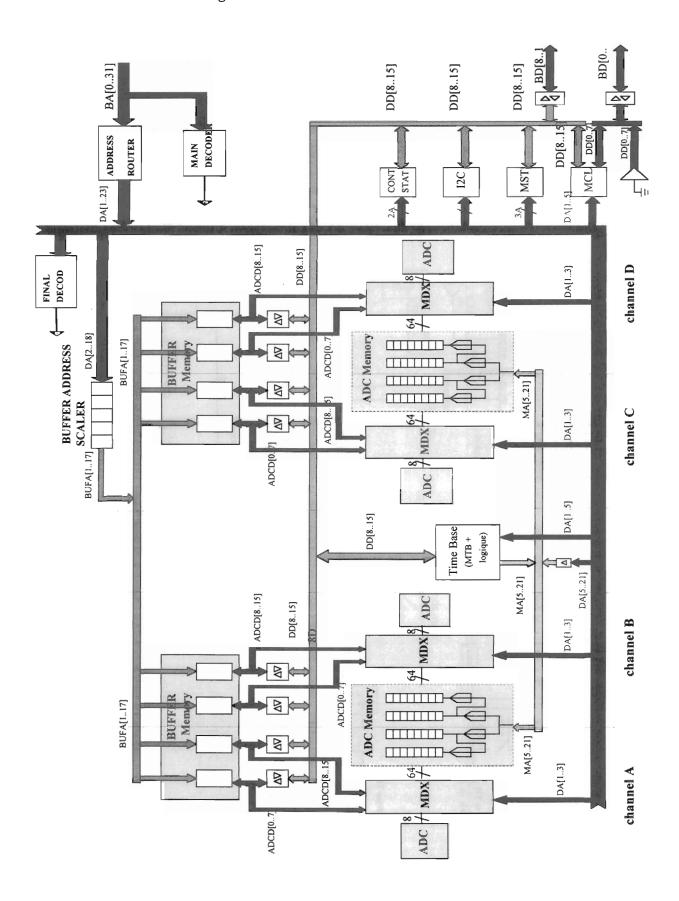

Page 4-12

4.2.6 Time Base

4.2.6.1 Introduction

The main clock (SHCK) comes from a PLL oscillator with a 10 MHz reference, there is a control bit (SEXTREF) to select an optional external reference with ECL level.

The PLL output frequency is controlled by three bits (SF500, SF400 and _SF200). The main clock is directly used by the sample-and-hold, the analog-to-digital converter and the time-to-digital converter for real time measurement. It is also used for synchronization inside the MDX416 demultiplexer.

The main clock is then feedback to the time base, from the ADC system (MDXCK), to drive a pre-divider controlled by four bits (DIVn). The output of the pre-divider then drives the MTB411 frequency divider (FD). At fastest speed, when the MTB411 frequency divider is not used, the clock to FD (FDCK) can be disabled (DISFD).

The main clock can also be driven from the external trigger BNC, this path is selected by a control bit (SEXTCK). The external clock threshold can be modified by two bits from the time base mode control (EXTCTH1 and EXTCTH2). This external clock frequency range is 0 to 100 MHz.

The PLL oscillator has in fact only two values, 500 and 400 MHz, the 200 MHz is a secondary path coming from a divider by two.


- 500 MHz is used for fast timebase settings, 1 GS/s, 2 GS/s and RIS mode.
- 400 MHz is used as soon as possible when starting to skip samples (skip > 1) in order to be able to do a peak detection (min-max) with the MDX416.
- 200 MHz is used for Roll mode.

There is also another reference clock for the interpolated TDC (ICK) which comes from a divider by eight. Its frequency is then 62.5 or 50 MHz, to be able to directly use the MTB411 counter (general time base control, start/stop, counters, memory address).

The output of the fast frequency divider is combined with the output of the MTB411's FD to drive a synchronous clock generator. The main functions are:

- reference to the MDX416 (DXCKn) and to the memory address generator (CK8 and CK16),
- synchronize the trigger (CKM for TRIGD),
- calibrate the MST412 use for smart trigger (TRT).

4.2.6.2 Time Base Block Diagram

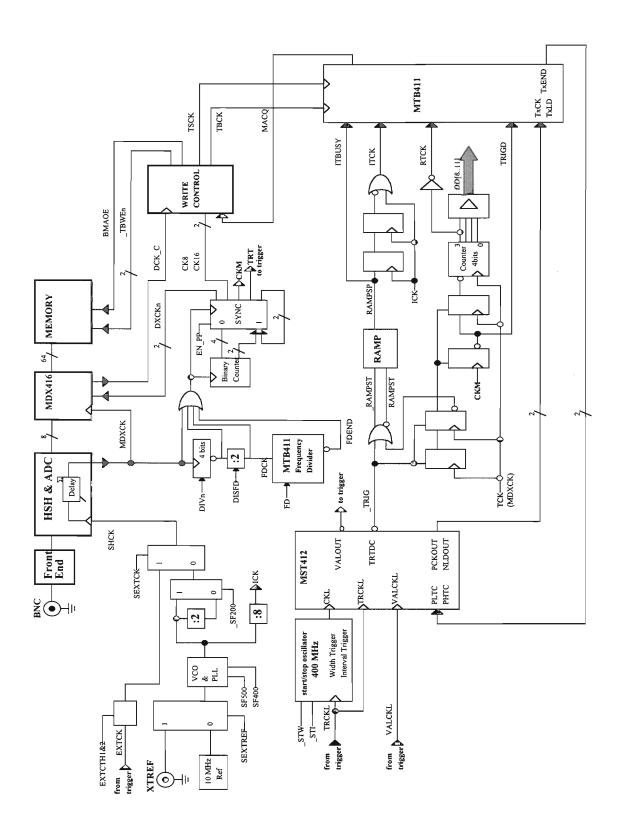

4.2.6.3 Digital Control

0141 8z00 - 0141 8zffwrite Time Base divider register

15							8
					SECK500	EN_1G	SEXTREF
7							0
DISFD	SF200	SF500	SF400	DIV3	DIV2	DIVI	DIV0

where:

SECK500 select optional external clock (100 MHz to 500 MHz).

EN_1G enable 1 GS/s/s acquisition (1 ns delay on MDX416 clock).

SEXTREF select optional external PLL clock reference (10 MHz ± 5 %).

DISFD disable FD clock to MTB411.

SF200 select oscillator frequency 200 MHz.

SF500 select oscillator frequency 500 MHz.

• SF400 select oscillator frequency 400 MHz.

DIVn frequency pre-divider (4 bits).

4.2.6.4 Trigger Selection

Each differential outputs of the five MTR408 from the Front-End (TCx) are selected (bit SCHn) and then inverted (bit INVCH) to drive the TRCKL signal and the VALCKL signal (bit SVAL1).

A logical function of the TCx signals can be selected (bit STCx) for the pattern generator. A few single ended signals can also be selected one at a time (bit STn). These signals are TV1 and TV2 for television trigger, TRT for test and calibration of MST412, _VALOUT for drop-out trigger.

Then there is a selection between the pattern and the single ended sources (bit SPAT). The signal obtained is inverted (bit INVPAT) and used to drive TRCKL (bit STRCKL). There is also a choice between this signal and TV1 to drive VALCKL (bit SVAL0). The pattern trigger logic function is any "AND" combination of TCx input signals, inverted or not. All the control are done through a 16 bit serial register.

4.2.6.5 Smart Trigger

The VALCKL source drives the MST412. The TRCKL source goes through a buffer to drive the MST412 and control the smart trigger 400 MHz start/stop oscillator.

The MST412 oscillator is usually free running, but when using glitch trigger mode the oscillator is enable only during the pulse duration (bit _STW), and when using interval width trigger mode the oscillator is restarted at each edge (bit _STI).

There is also a time base mode control register with roll mode interrupt enable (RMIE), external clock control (SEXTCK, EXTCTH1 and EXTCTH2), buzzer (BUZZ) and calibration front panel output signal selection (PCSn).

4.3 F9300-4 GPIB and RS 232 Interface

This board is connected to the processor through a flat cable. Data bus is 8 bits, address bus: 12 bits. Address 0180 000 to 0180 00FF.

4.3.1 RS 232 Serial Interface

Based on the 2661A IC from Signetics or Philips.

- Clock frequency 4.9152 MHz.
- 4 internal registers of 8 bits.
- Interrupt level 2.
- Connector type DB9 with 9 male pins.

4.3.2 GPIB Interface

Based on the circuit 7210 IC from NEC.

- Clock frequency 5 MHz.
- 8 internal registers of 8 bits.
- Tri-state external GPIB drivers. Low level output.
- Interrupt level 3.

The GPIB address is set by software and stored in non-volatile memory.

4.4 F9354-5 Front Panel

The front panel is connected to the processor board with a flat cable. Power supply and control signals are supplied from the processor. The front panel is divided in two sections:

- One board with Motorola 68HC05C4 processor, coders, and serial data interface.
- One matrix Keyboard with push buttons.

4.5 F9300-6 Centronics, Floppy, Printer interface option

4.5.1 Centronics interface option

This Centronics interface makes direct connection possible to external parallel printer.

- Address 0130 0180 to 0130 01A0
- Interrupt level 2

4.5.2 Floppy Disk drive interface option

Based on the circuit MCS3201 from Motorola.

- Address 0130 01C0 to 0130 01C7
- Interrupt level 4

Address	Read	Write
0130 01C0	Input register	
0130 01C2		Digital output register
0130 01C4	Main status register	
0130 01C5	Data register	Data register
0130 01C7	Data input register	Disk control register

4.5.3 Printer Interface option

Internal graphic printer: Seiko LPT5446

- Address 0130 0140 to 0130 0160
- Interrupt level 2

4.6 F9300-7 Printer Controller option

Based on the LPT5000 series control chip set from Seiko instrument Inc

- PT501P01 CPU
- PT500GA1 Gate array
- Technical reference 39019-2234-01
- Address 0130 0100

4.7 F9300-8 Hard Disk option, PCMCIA III Controller

- Address 0130 0800 to 0130 0bff
- Interrupt level 5

4.8 93XX-Display

4.8.1 General Description

The raster scan display module is divided into five sections:

- Graphic processor
- Deflection
- Video
- Yoke
- Cathode ray tube

4.8.2 Basic Characteristics

- Nine inches diagonal monochrome, yellowish, orange.
- CRT anti-glare treated
- Non interlaced resolution of (X)810 x (Y)696 pixels at 60 Hz or 50 Hz frequency.

- Landscape vertical raster
- Electromagnetic deflection.
- Intensity control rise and fall time > 12 ns.
- Analog intensity input
- TTL synchronization input.
- Horizontal nominal size: 165 mm for X-on = 15.39 Ms.
- Horizontal size adjustment: > +/- 5 mm.
- Horizontal offset adjustment: +/- 5 mm.
- Vertical nominal size: 120 mm for Y-on = $14.5 \mu s$.
- Vertical size adjustment: > +/- 5 mm.
- Vertical offset adjustment: +/- 5 mm.
- X and Y differential non linearity: 10%.

The line deflection is vertical, from bottom to top. The field deflection is horizontal, from left to right and is resynchronized to the power line frequency.


4.8.3 Horizontal Deflection

The horizontal deflection is synchronized to the 50 or 60 Hertz power line frequency. The on time display is the same for both frequencies, therefore the deflection is calculated for 60 Hz. The horizontal deflection is controlled by the HSYNC signal.

The trailing edge of HSYNC resets the horizontal spot position to a hardware predefined position at the left side of the screen: MAX_left. When ever HSYNC is high, the spot stays at this position.


The falling edge of HSYNC starts the horizontal deflection ramp. The ramp has the same rate for either 50 or 60 Hertz frequency.

When ever HSYNC is low, the horizontal deflection will rise left to right, until HSYNC becomes high, or the system has reached the maximum right position (MAX RIGHT).

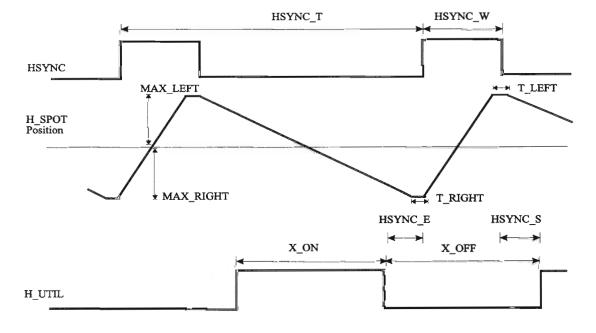

4.8.4 Vertical Synchronization

The timing of both VSYNC and HSYNC is synchronized to the pixel clock (PCLK).

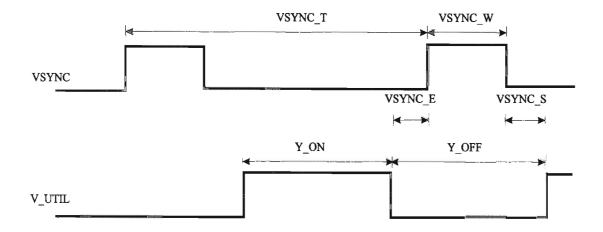

The pixel rate is 48 MHz.

4.8.5 Horizontal Resolution

	# of vertical line	Time in ms
HSYNC_T	· 842	15.998
HSYNC_W	22	0.418
HSYNC_E	4	0.076
HSYNC_S	6	0.114
X-ON	810	15.390
X-OFF	32	0.608

Values of the horizontal timing for the maximum field refresh frequency.

4.8.6 Vertical Resolution

	# of Pixels	Time in µs
VSYNC_T	912	19.000
VSYNC_W	136	2.833
VSYINC_E	0	0.000
VSYNC_S	80	1.666
Y-ON	696	14.500
Y-OFF	216	4.500

4.9 **PS9351 Power Supply**

4.9.1 **Power Supply Specifications**

: 90 to 130 V or 180 to 260 V. Input voltage

Auto ranging line voltage.

Input frequency

: 47 Hz to 63 Hz.

Input rush current

: Max. 40 A peak at start up.

Environmental

: Operating temperature range 0 °C to + 50 °C

Storage temperature range - 55 °C to + 80 °C Relative humidity from 5% to 95%.

Output voltages

: - 5.2 VDC, 13 amp Max. + 5.2 VDC, 14 amp Max.

- 15.1 VDC, 4.5 amp Max + 15.1 VDC, 4 amp Max.

Output adjustment

: +/- 5%.

Regulation

: +/- 1%.

Transient response

: recover to 1% of its final value within 500 μsec.

Ripple and noise

: Peak to peak value < 50 mV

Hold up time

: 16 msec at full load : Yes.

Output short circuit protection

: Yes.

Output over voltage protection Input protection

: 6 amp fuses.

Thermal protection

: Yes.


Safety

VDE 0806, IEC 380, 435, 950 & UL1012, 478, CSAC22.2#1402C

EMI

VDE 0871 class A, FCC 20780 class A.

4.9.2 Power Supply Block Diagram

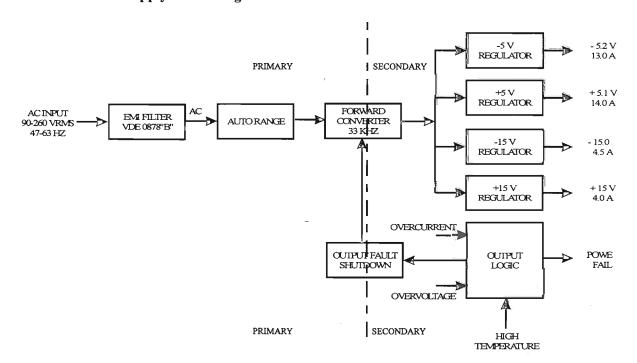

SECTION 5 Performance Verification

5.1 Introduction

This procedure can be used to verify the main operating specifications of the LeCroy 9354A/T digital storage oscilloscope, it is useful as an incoming inspection checkout. It is time consuming and requires extensive test equipment. If you are not familiar with operating the 9354A/T oscilloscope, read the operator's manual.

5.2 Test Equipment Required

Instrument	Specifications	Recommended	Where
			used
Signal Generator	Frequency: .5 MHz to 1 GHz	Marconi 2030	5.9.1.a
(sine wave)	Frequency Accuracy: 1 ppm	or equivalent	5.11
	Amplitude: 1 V peak to peak		5.12
Leveled Sine	Frequency: .5 MHz -250 MHz	Tektronix SG503	5.9.1.b
wave generator	Amplitude: 5 V peak to peak	or equivalent	
Fast pulse	Rise time < 500 psec	LeCroy 4969	5.13
Generator		or equivalent	
Sine Wave	Frequency: 5 KHz	LeCroy LW420	5.10
Generator	Amplitude: 6 V peak to peak	or equivalent	
DC precision	Amplitude: 10 V, DC	Tektronix	5.7, 5.8
Power Supply	Accuracy: < 0.1 %	PS5004	5.15
Digital	4 digits	Keithley 199	5.4
Multimeter		or equivalent	5.5
Cable	BNC, 50 Ω, length 20 cm, 1ns	LeCroy	5.10.3
İ	(7.87 inches)	4802432001	5.10.4
Cable	BNC, 50 Ω, length 100 cm,	LeCroy	5.XX
	5 ns (39.37 inches)	480020101	
Attenuator	50 Ω, 20 dB 1% accuracy	Suhner	5.7
Attenuator	1 MΩ, 20 dB 1% accuracy	Suhner	5.7
Attenuator	50 Ω, 3 dB 1% accuracy	Suhner	5.10
Terminator	50 Ω Feed through	Suhner	5.13
BNC T adapter	BNC, 50 Ω, T adapter	LeCroy	5.10.3
		402222002	5.10.4

Table 5-1: Test Equipment

5.3 Turn On

- Switch on the power using the power switch on the rear panel and verify :
- The display turns on after about 10 seconds and is stable
- The range of intensity and grid intensity is reasonable
- Wait for about 10 minutes for the scope to reach a stable operating temperature.

5.4 Input Impedance

Specifications

DC $1M\Omega \pm 1\%$ DC $50 \Omega \pm 1\%$


5.4.1 Procedure

The input impedance is tested in working conditions, with a high precision digital multimeter.

5.4.1.a DC $1M\Omega$

Set DSO Channel 1 : On
 Input Coupling : DC 1MΩ
 Input gain : 100 mV/div.
 Trigger on : Channel 1
 Trigger mode : Auto


Time base : 50 μsec/div.

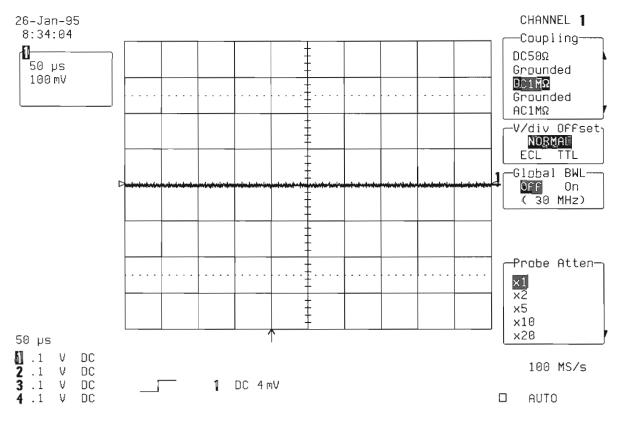

- Measure the impedance using a high precision DMM with sense : must be $1M\Omega \pm 1\%$.
- Repeat the above test for input volt/div. of 200 mV.

5.4.1.b DC 50Ω

Set DSO Channel 1 : On
 Input Coupling : DC 50Ω
 Input gain : 100 mV/div.
 Trigger on : Channel 1
 Trigger mode : Auto
 Time base : 50 μsec/div.

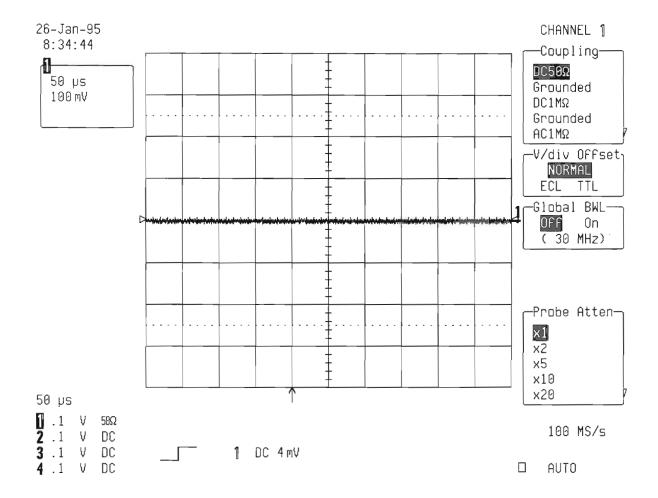

- \blacksquare Measure the impedance using a high precision DMM with sense : must be 50 $\Omega \pm 1\%$
- Repeat steps 5.4.1.a, and 5.4.1.b for Channel 2, Channel 3 and Channel 4.


5.4.2 External Trigger Input Impedance

5.4.2.a DC $1M\Omega$

The External Trigger input impedance is tested with any time base and gain.

Set Trigger on
Trigger mode
Coupling Ext
DC

• External : $DC 1M\Omega$

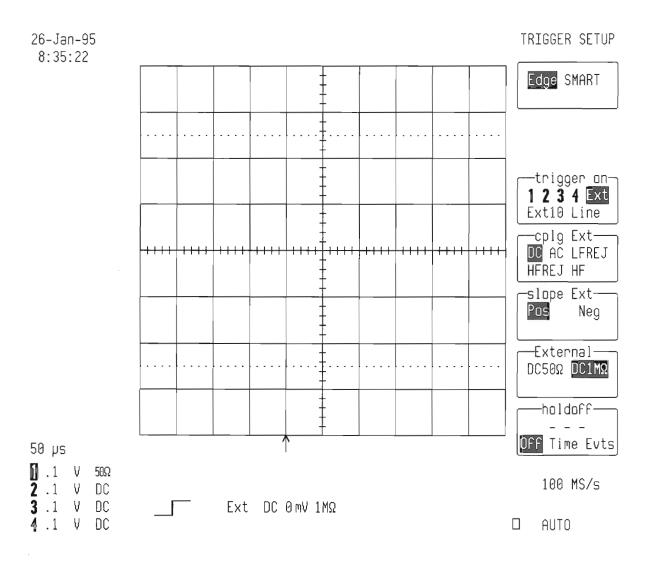


• Measure the impedance using a high precision DMM with sense : must be $1M\Omega \pm 1\%$.

5.4.2.b DC 50Ω

With any time base and gain.

Set Trigger on : EXT
 Trigger mode : Auto
 Coupling Ext : DC
 External : DC 50Ω

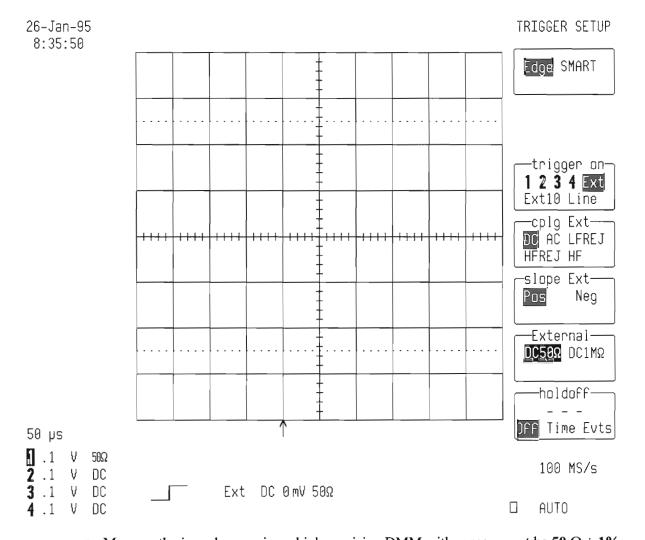


- Measure the impedance using a high precision DMM with sense : must be 50 $\Omega \pm 1\%$.
- □ Repeat steps 5.4.2.a, 5.4.2.b for Ext/10, and check as above.

5.4.3 Internal Protective Resistor Verification

With any time base and gain, set DSO as follows:

- Input Coupling : Grounded
- Check with a high precision DMM: input impedance must be 1 M Ω \pm 2%.
- In case of problem check SM $1M\Omega$ resistor R1003 or troubleshoot relay RL1000.
- Repeat the above test for Channel 2, Channel 3, Channel 4.
- In case of problem check SM 1MΩ resistors R2003, R3003, R4003 or troubleshoot relays RL2000, RL3000, RL4000.

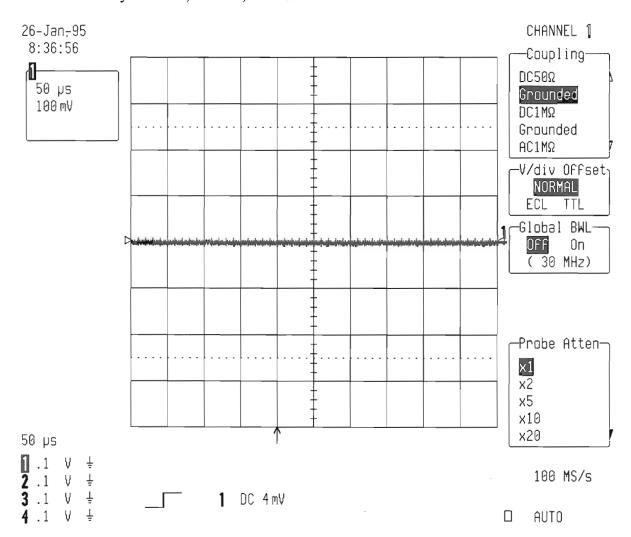

5.5 Leakage Current

Specifications

DC 1 M Ω , AC 1 M Ω , DC 50 Ω : \pm 1 mV

5.5.1 Procedure

Set DSO Ch1 : On
 Input Coupling : DC 50Ω
 Input gain : 100 mV/div.
 Trigger on : Channel 1
 Trigger mode : Auto
 Time base : 10µsec

- Connect a high precision DMM to Channel 1, and verify that the reading is not larger than ± 1 mV.
- Repeat the procedure for $1M\Omega$ DC and $1M\Omega$ AC.
- Repeat step 5.5.1 for Channel 2, Channel 3, Channel 4 and check as above.

5.6 Average Noise Level

Description

The 9354A/T inputs average noise level is tested at 5 mV/div., with 0 mV offset. This is to verify the proper operation of the main board, front-end and ADC's. The scope parameters functions are used to measure the RMS and Peak amplitude of the noise.

5.6.1 Peak to Peak Noise

Specifications

 $< \pm 3.6$ mV Peak to Peak at 5 mV/div.

5.6.1.a DC $1M\Omega$

Procedure

• With no signal connected to the inputs, set 9354A/T DSO settings as follows:

Turn on traces: Ch1, Ch2, Ch3, Ch4


Display setup : Standard, Dot Join on, Persistence off, Single grid

Input Coupling : DC 1MΩ
 V/div. offset : Normal
 Probe atten : X1
 Global BWL : Off

Input gain
Trigger setup
Edge
Trigger on
Coupling 1
BC
Slope 1
Holdoff
Trigger Mode
Auto

■ Timebase : 20 msec/div.


Channel use : 4
 Record up : 50 K

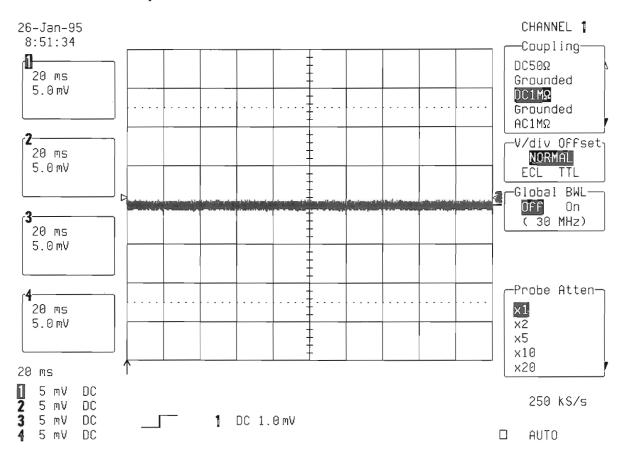

Press
 Measure
 Mode
 Statistics
 Cursors/Measure
 Parameters
 Custom
 On

Change parameters


On line 1
On line 2
Measure pkpk of Ch2
Measure pkpk of Ch2
On line 3
Measure pkpk of Ch3
Measure pkpk of Ch4

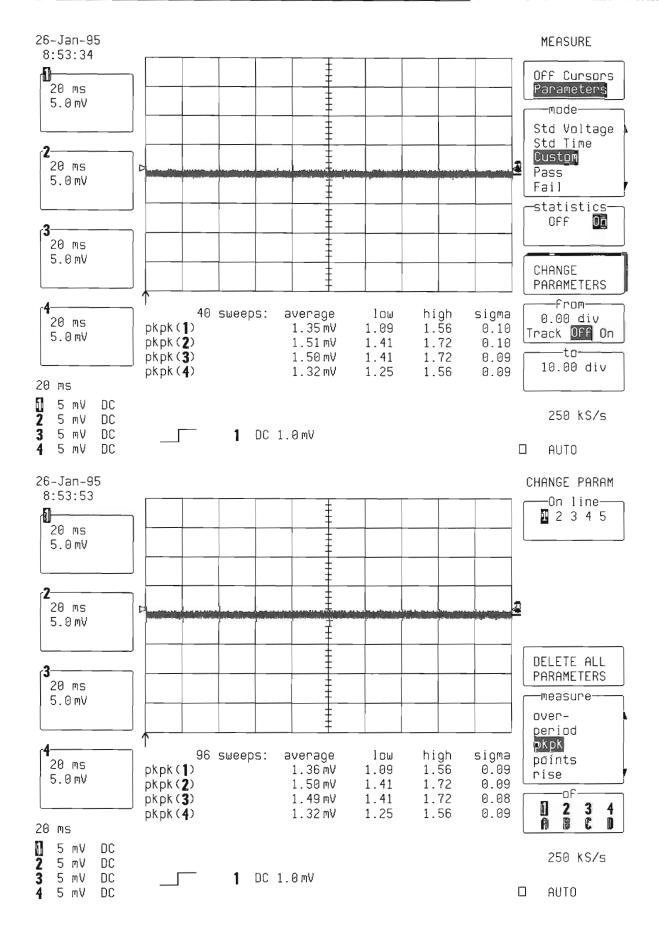

- Check after at least 100 sweeps that: high pkpk readout is less than ± 3.6 mV, corresponding to 9% of full scale.
- Repeat the test for Timebase: 2 msec/div, .2 msec/div, 20 μsec/div, and 10 μsec/div. and check as above.


5.6.1.b AC $1M\Omega$

- Select Coupling Ch1, Ch2, Ch3, Ch4 : AC 1MΩ
- Check after at least 100 sweeps that the high pkpk readout is less than \pm 3.6 mV, corresponding to 9% of full scale.
- Repeat the test for Timebase: 2 msec/div, .2 msec/div, 20 μsec/div, and 10 μsec/div.
 and check as above.

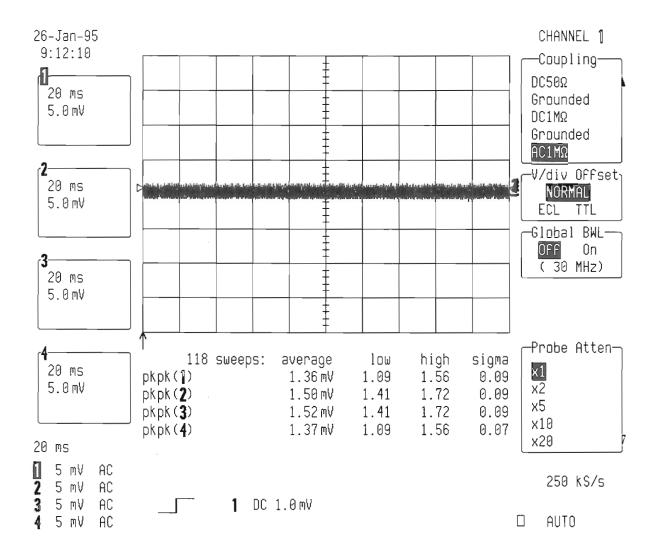

5.6.1.c DC 50Ω

- Select Coupling Ch1, Ch2, Ch3, Ch4 : DC 50Ω
- Check after at least 100 sweeps that the high pkpk readout is less than \pm 3.6 mV, corresponding to 9% of full scale.
- Repeat the tests for Timebase: 2 msec/div, .2 msec/div, 20 μsec/div, and 10 μsec/div. and check as above.

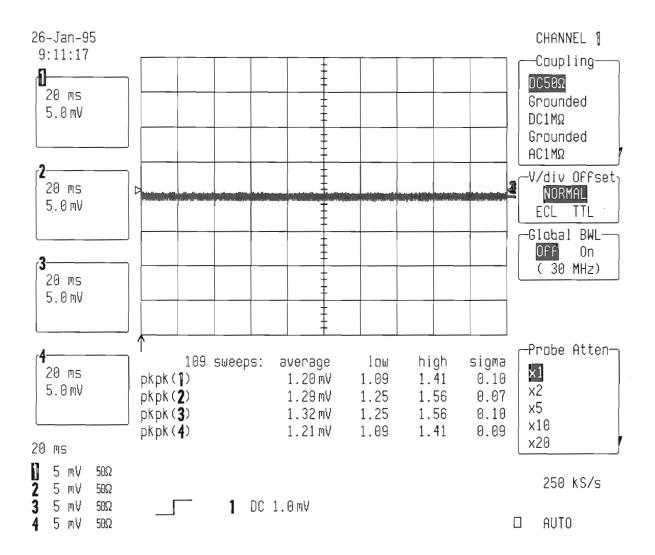

5.6.2 Rms Noise

Specifications

 $< \pm 360 \mu V$ at 5 mV/div.

5.6.2.a DC $1M\Omega$

Procedure

With no signal connected to the inputs, set 9354A/T DSO settings as follows:

Turn on traces : Ch1, Ch2, Ch3, Ch4

Display setup : Standard, Dot Join on, Persistence off, Single grid

Input Coupling : DC 1MΩ
 V/div. offset : Normal
 Probe atten : X1
 Global BWL : Off

Input gain : 5 mV/div.
 Trigger setup : Edge
 Trigger on : 1
 Coupling 1 : DC

Slope 1 : Pos
Holdoff : Off
Trigger Mode : Auto

■ Timebase : 20 msec/div.

■ Channel use : 4
□ Record up : 50 K


Press : Cursors/Measure

Measure : Parameters
 Mode : Custom
 Statistics : On

Change parameters

On line 1 : Measure sdev of Ch1
 On line 2 : Measure sdev of Ch2
 On line 3 : Measure sdev of Ch3
 On line 4 : Measure sdev of Ch4

- Check after at least 100 sweeps that : high sdev readout is less than \pm 360 μ V, corresponding to 0.9% of full scale.
- Repeat the test for Timebase: 2 msec/div, .2 msec/div, 20 μsec/div, and 10 μsec/div. and check as above.

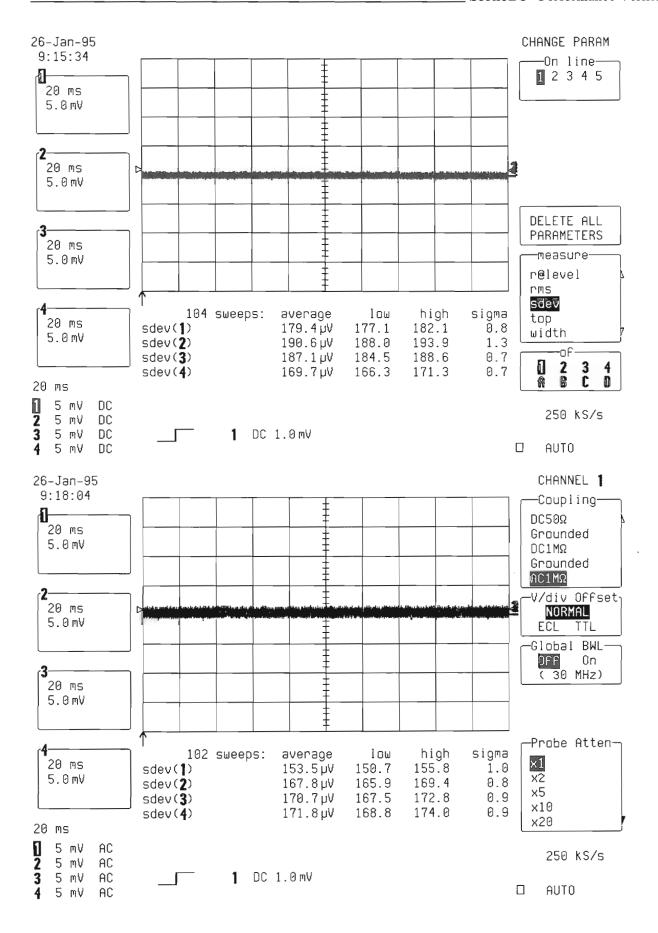


5.6.2.b AC $1M\Omega$

- Select Coupling Ch1, Ch2, Ch3, Ch4 : AC 1MΩ
- Check after at least 100 sweeps that the high pkpk readout is less than \pm 360 μ V, corresponding to 0.9% of full scale.
- Repeat the test for Timebase: 2 msec/div, .2 msec/div, 20 μsec/div, and 10 μsec/div. and check as above.

5.6.2.c DC 50Ω

- Select Coupling Ch1, Ch2, Ch3, Ch4 : DC 50Ω
- Check after at least 100 sweeps that the high pkpk readout is less than \pm 360 μ V, corresponding to 0.9% of full scale.
- Repeat the tests for Timebase: 2 msec/div, .2 msec/div, 20 μsec/div, and 10 μsec/div. and check as above.

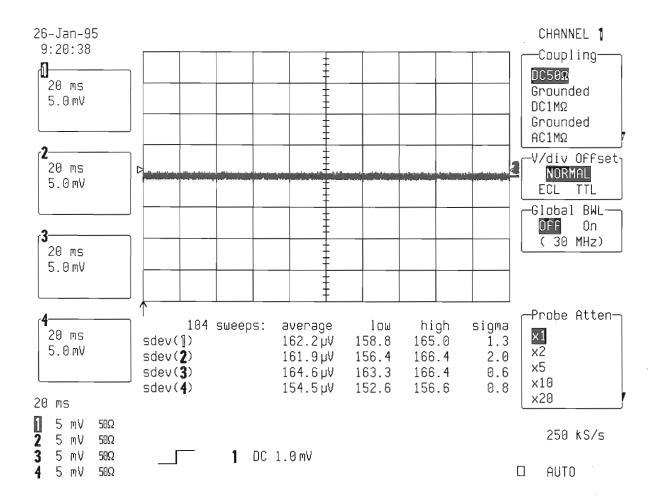

5.6.3 Inputs Grounded

With no cable plugged into scope, set the DSO as follows:

Turn on trace : Channel 1, Channel 2, Channel 3, Channel 4

Input Coupling : DC 50Ω
 Input gain : 10 mV/div.
 Offset : Zero

Trigger on : Channel 1, DC

■ Trigger mode : Auto

Timebase : 50 μsec/div.

■ Channel use : 4 ■ Record up : 50 K

Turn off trace : Channel 1, Channel 2, Channel 3, Channel 4

Turn on trace : A, B, C, D

Select Math Setup

For Math : Use at most 5000 points

Redefine A, B, C, D : Channel 1, Channel 2, Channel 3, Channel 4


Use Math?
 Math Type
 Average
 Avg Type
 Summed
 For
 1000 sweeps


Cursors/Measure : Parameters
 Mode : Custom
 Statistics : off


Change parameters

On line 1
On line 2
Measure mean of B
On line 3
Measure mean of C
Measure mean of C
Measure mean of D

- Check after at least 100 sweeps that the mean value of A, B, C, D is less than ±1.6 mV, corresponding to ±2% of full scale.
- Switch Channel 1, Channel 2, Channel 3 and Channel 4, between coupling DC 50Ω and Grounded.
- Check after at least 100 sweeps that the mean value of A, B, C, D is less than ±1.6 mV, corresponding to ±2% of full scale.
- Set coupling all Channel : **DC** 1M Ω
- Check after at least 100 sweeps that the mean value of A, B, C, D is less than ±1.6 mV, corresponding to ±2% of full scale.
- Switch all Channel between coupling **DC** 1M Ω and Grounded.
- Check after at least 100 sweeps that the mean value of A, B, C, D is less than ±1.6 mV, corresponding to ± 2% of full scale.

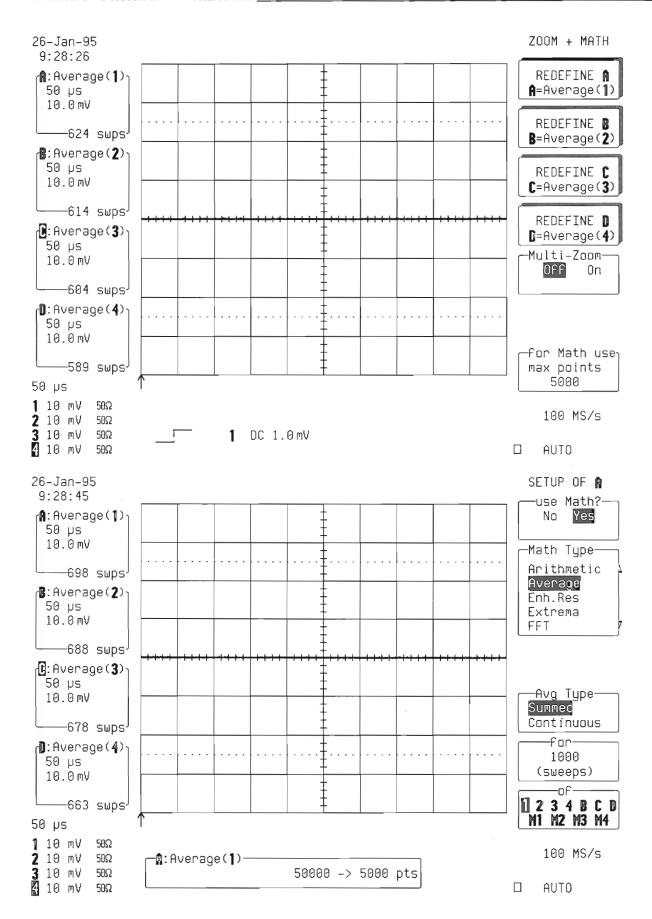

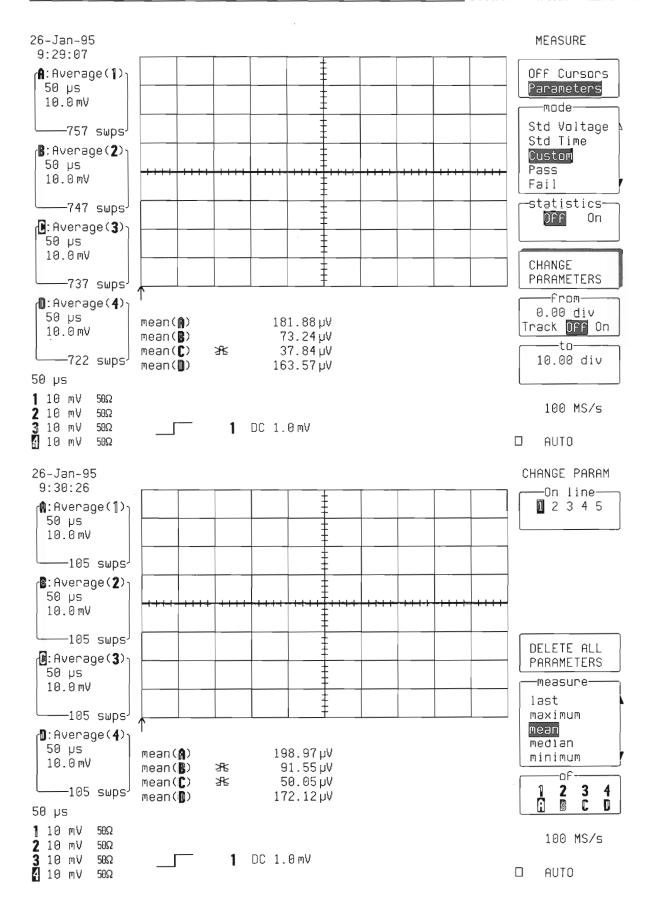

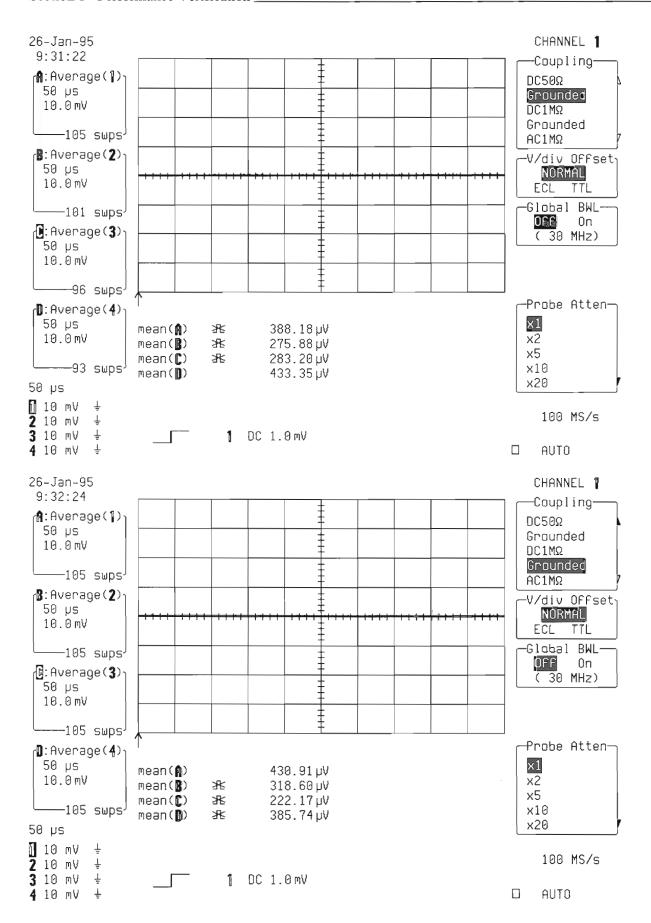

Page 5-18

5.7 DC Linearity

Specification

 $\leq \pm 2$ % of full scale at 0 mV offset

5.7.1 Description

This test measures the DC Accuracy within the gain range specified.

The parameters Std voltage are used to measure the amplitude of the DC input signal.

In the absence of the computer automated calibration system based on LeCroy Calibration Software (LeCalsoft) for the 9354A/T model oscilloscope, the manual performance test procedure can be followed to establish a traceable calibration, provided that the measurement instruments used are themselves traceable. For such calibration, follow the manual linearity test procedure using a calibrated and certified high precision (better than 0.1 %) voltage source, for example TEK PS5004 or equivalent, or use a certified DMM to measure the applied voltage.

5.7.1.a DC 50 Ω

Procedure

Turn on trace : Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid

Input Coupling : DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1
 Input offset : 0.0 mV

■ Input gain : from 2mV/div to 5 V/div. (see table 5-2 and 5-3)

Trigger setup : Edge
 Trigger on : 1
 Coupling 1 : DC
 Slope 1 : Pos
 Mode : Auto
 Holdoff : Off

■ Timebase : 2 msec/div.

Channel use : 4
 Record up : 50 K
 Turn on trace : A

Select Math Setup

■ For Math : Use at most 5000 points

Redefine A

Use Math?
Math Type
Average
Avg Type
For
1000 sweeps
Of
Channel 1


□ Turn off trace : Channel 1
□ Cursors/Measure : Parameters
□ Mode : Std Voltage

Statistics : offon displayed trace : A

5.7.1.a.1 Positive DC Linearity

 For the ranges 2 mV/div. to 1 V/div., from the high precision voltage source, apply to Channel 1:+3 major screen divisions.


- For the low sensitivities: 2 mV, 5 mV, 10 mV, 20 mV and 50 mV/div., use a 50 Ohm 20 dB attenuator.
- For the range 2V/div. and 5V/div., the maximum input voltage is +5V.

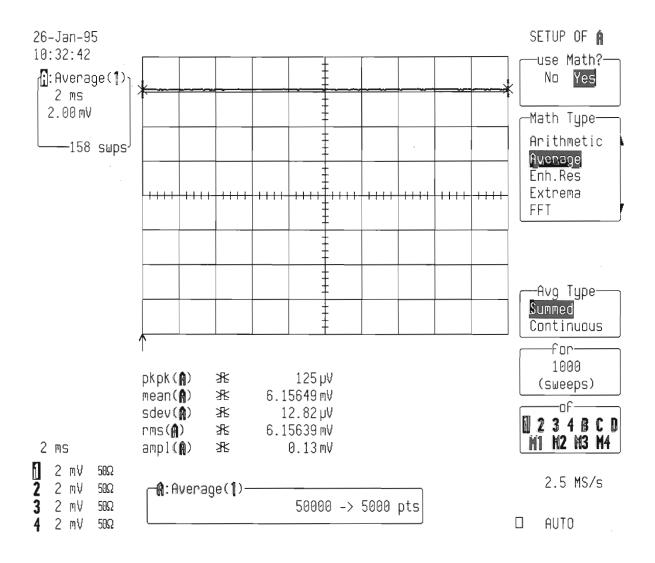


Range	Attemuator	Conditions of Test		١ ،	ge Mean ter Reading		
Volts/div	20 dB	PS	9354A/T	9354A/T	Min Value	Max Value	
Control		Output	Input	Full scale	-X % of FS	+X% of FS	X%
2 mV	Yes	+ 60 mV	+ 6 mV	16 mV	+ 5.2 mV	+ 6.8 mV	5%
5 mV	Yes	+ 150 mV	+ 15 mV	40 mV	+ 13.8 mV	+ 16.2 mV	3%
10 mV	Yes	+ 300 mV	+ 30 mV	80 mV	+ 28.4 mV	+ 31.6 mV	2%
20 mV	Yes	+ 600 mV	+ 60 mV	160 mV	+ 56.8 mV	+ 63.2 mV	2%
50 mV	Yes	+ 1.5 V	+150 mV	400 mV	+ 142 mV	+ 158 mV	2%
.1 V	No	+ 300 mV	+ 300 mV	800 mV	+ 284 mV	+ 316 mV	2%
.2 V	No	+ 600 mV	+ 600 mV	1.6 v	+ 568 mV	+ 632 mV	2%
.5 V	No	+ 1.5 V	+ 1.5 V	4 V	+ 1.42 V	+ 1.58 V	2%
1 V	No	+ 3 V	+ 3 V	8 V	+ 2.84 V	+ 3.16 V	2%
2 V	No	Max +5 V	Max +5 V	16 V	+ 4.68 V	+ 5.32 V	2%
5 V	No	Max +5 V	Max +5 V	40 V	+ 4.20 V	+ 5.80 V	2%

Table 5-2: Positive DC Linearity Readout Accuracy

- For each point, read off the Mean parameter voltage, and compare it to the digital readout of the voltage reference
- The **Mean** parameter reading should be within the limits shown in table 5-2.

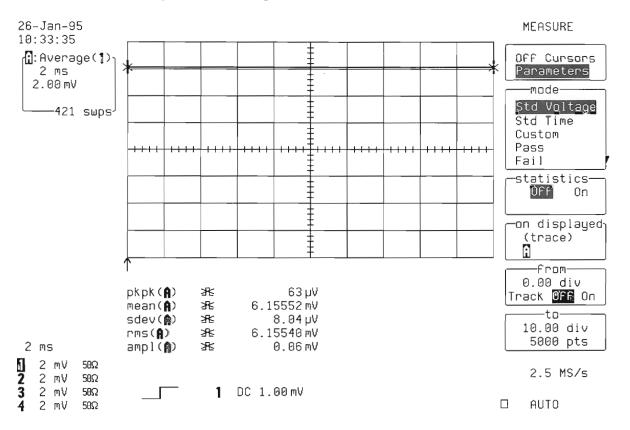

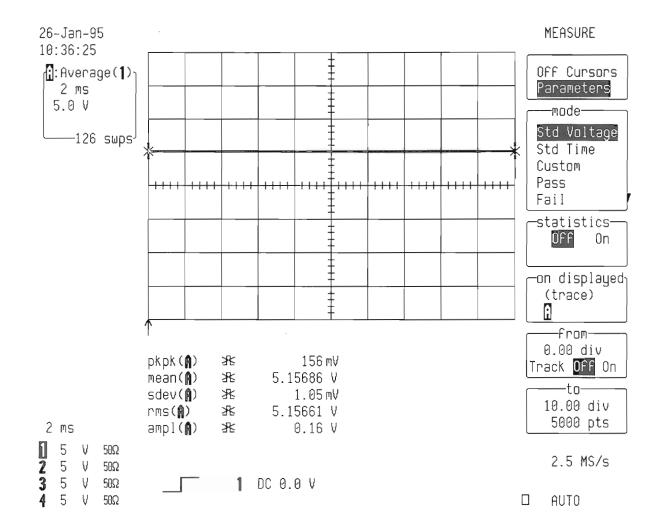



5.7.1.a.2 Negative DC Linearity

- For the ranges 2 mV/div. to 1 V/div., from the high precision voltage source, apply to Channel 1: 3 major screen divisions.
- For the low sensitivities: 2 mV, 5 mV, 10 mV, 20 mV and 50 mV/div., use a 50Ω
 20 dB attenuate.
- For the range 2V/div. and 5V/div., the minimum input voltage is 5 V.
- For each point, read off the **Mean** parameter voltage, and compare it to the digital readout of the voltage reference.
- The **mean** parameter reading should be within the limits shown in table 5-3.

Range	Attenuator	Conditions of Test		Averag Paramete	e Mean er Reading		
Volts/div	20 dB	PS	9354A/T	9354A/T	Min Value	Max Value	
Control		Output	Input	Full scale	-X % of FS	+X% of FS	X%
2 mV	Yes	- 60 mV	- 6 mV	16 mV	- 5.2 mV	- 6.8 mV	5%
5 mV	Yes	- 150 mV	- 15 mV	40 mV	- 13.8 mV	- 16.2 mV	3%
10 mV	Yes	- 300 mV	- 30 mV	80 mV	- 28.4 mV	- 31.6 mV	2%
20 mV	Yes	- 600 mV	- 60 mV	160 mV	- 56.8 mV	- 63.2 mV	2%
50 mV	Yes	- 1.5 V	-150 mV	400 mV	- 142 mV	- 158 mV	2%
.1 V	No	- 300 mV	- 300 mV	800 mV	- 284 mV	- 316 mV	2%
.2 V	No	- 600 mV	- 600 mV	1.6 v	- 568 mV	- 632 mV	2%
.5 V	No	- 1.5 V	- 1.5 V	4 V	- 1.42 V	- 1.58 V	2%
1 V	No	- 3 V	- 3 V	8 V	- 2.84 V	- 3.16 V	2%
2 V	No	Max -5 V	Max -5 V	16 V	- 4.68 V	- 5.32 V	2%
5 V	No	Max -5 V	Max -5 V	40 V	- 4.20 V	- 5.80 V	2%

Table 5-3: Negative DC Linearity Readout Accuracy

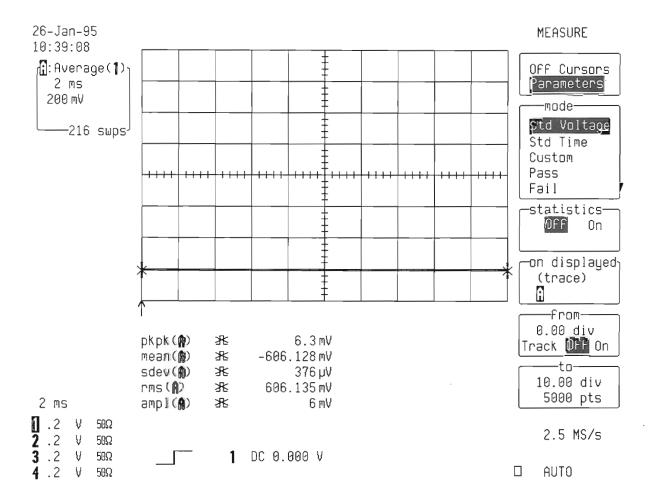

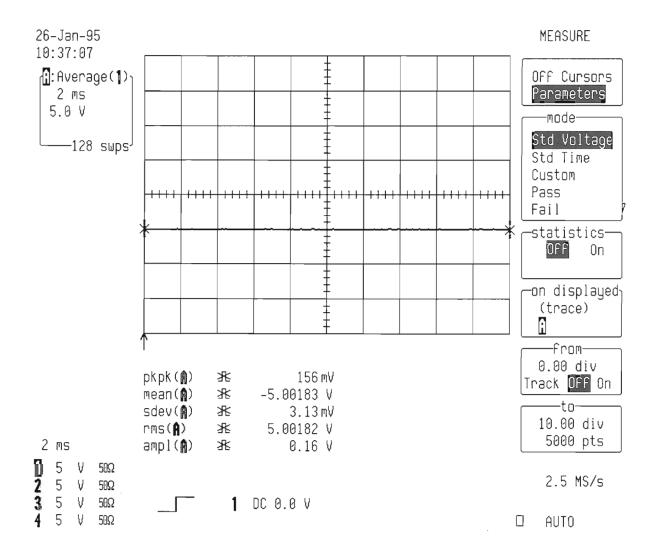

5.7.1.b **DC** 1M Ω

Set the DSO as follows:

• Input Coupling : $DC 1M\Omega$ • Input offset : 0.0 mV


■ Input gain : from 2mV/div. to 5 V/div.

- For the ranges 2 mV/div. to 5 V/div., from the high precision voltage source, apply to Channel 1 the following 2 voltages values, one after another: + 3 major screen divisions, 3 major screen divisions.
- For the low sensitivities: 2, 5, 10, 20 and 50 mV/div., use a 1M Ω 20 dB attenuator (1/10), see table 5-4.

Range	Attenuator	Conditions of Test			١ ,	ge Mean er Reading	
Volts/div	20 dB	PS	9354A/T	9354A/T	Min Value	Max Value	±
Control		Output	Input	Full scale	±X% of FS	±X% of FS	X%
2 mV	Yes	± 60 mV	±6 mV	16 mV	± 5.2 mV	± 6.8 mV	5%
5 mV	Yes	± 150 mV	± 15 mV	40 mV	± 13.8 mV	± 16.2 mV	3%
10 mV	Yes	± 300 mV	± 30 mV	80 mV	± 28.4 mV	± 31.6 mV	2%
20 mV	Yes	± 600 mV	± 60 mV	160 mV	± 56.8 mV	± 63.2 mV	2%
50 mV	Yes	± 1.5 V	±150 mV	400 mV	± 142 mV	± 158 mV	2%
.1 V	No	± 300 mV	± 300 mV	800 mV	± 284 mV	± 316 mV	2%
.2 V	No	$\pm 600 \text{ mV}$	± 600 mV	1.6 v	± 568 mV	± 632 mV	2%
.5 V	No	± 1.5 V	± 1.5 V	4 V	± 1.42 V	± 1.58 V	2%
1 V	No	± 3 V	± 3 V	8 V	± 2.84 V	± 3.16 V	2%
2 V	No	± 6 V	± 6 V	16 V	± 5.68 V	± 6.32 V	2%
5 V	No	± 15 V	± 15 V	40 V	± 14.2 V	± 15.8 V	2%

Table 5-4: $1M\Omega$ DC Linearity Readout Accuracy

- For each point, read off the **Mean** parameter voltage, and compare it to the digital readout of the voltage reference.
- The **mean** parameter reading should be within the limits shown in table 5-4.
- Repeat steps 5.7.1.a and 5.7.1.b for Channel 2, Channel 3, and Channel 4 substituting channel controls and input connector.

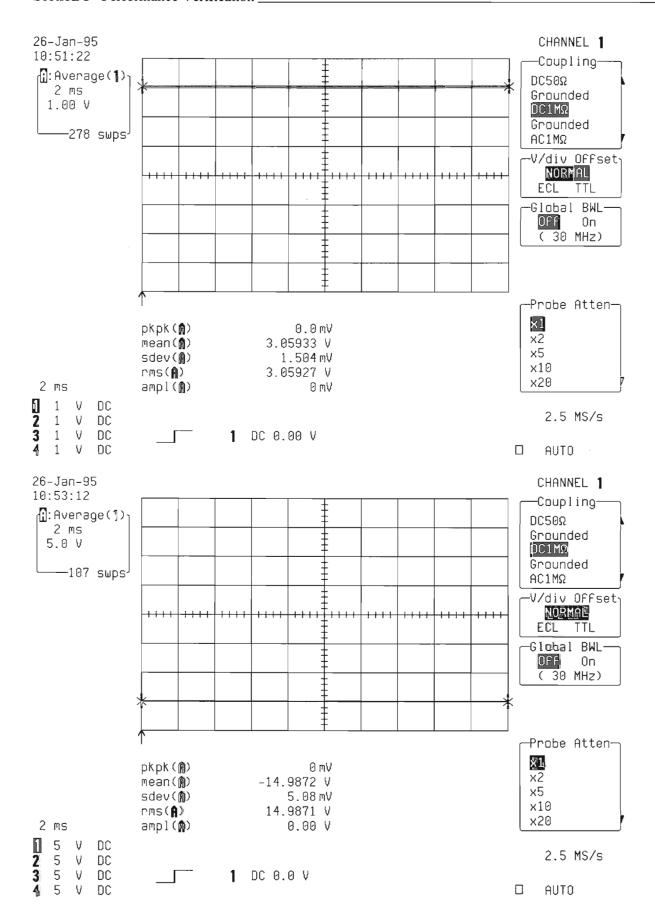

5.8 Offset

5.8.1 Description

The maximum allowed offsets depend on the sensitivity as shown in table 5-5 and 5-6, and is tested at DC 1 M Ω , over the full 2 mV to 5 V range.

Specifications

 \pm 120mV: for the ranges 2mV/div., 5 mV/div.

± 1.2 V : for 10 mV/div., 20 mV/div., 50 mV/div., 100 mV/div. ± 24 V : for 200 mV/div., 500 mV/div., 1 V/div., 2 V/div., 5 V/div.

5.8.1.a Negative Offset Control Procedure

Set the DSO as follows:

Turn on trace : Channel 1

Display setup : Standard, Persistence off, Dot join on, Single grid

Input Coupling
 V/div. offset
 Global BWL
 Probe atten
 Input gain
 Trigger setup
 DC 1MΩ
 Normal
 Normal
 S mV
 Edge

Trigger on : 1
 Coupling 1 : DC
 Slope 1 : Pos
 Mode : Auto
 Holdoff : Off

Timebase : 2 msec/div.

Channel use : 4
 Record up : 50 K
 Turn on trace : A

Select Math Setup

For Math
 Use at most 5000 points

Redefine A

Use Math?
Math Type
Average
Avg Type
For
1000 sweeps
Of
Channel 1

Turn off trace : Channel 1
 Cursors/Measure : Parameters
 Mode : Std Voltage


Statistics : offOn displayed trace : A

- From the high precision voltage source PS5004, apply to Channel 1 + 120 mV.
- Using the offset control, move Channel 1 trace through the entire range until the maximum offset value is reached: - 120 mV.
- Verify that the displayed trace A : Average (1) is in the screen, near to the center horizontal graticule line.
- Press clear sweeps.
- Check after at least 100 sweeps that the mean (A) parameter readout is:


+	120	$\mathbf{m}\mathbf{V}$	± 3	%.

Range	Conditions of Test		Offset	Mean Parameter Reading		
			Control			
Volts/div	PS	9354A/T	9354A/T	Minimum	Maximum	
Control	Output	Input	Offset	value, -X %	Value, +X %	
5 mV	+ 120 m V	+ 120 mV	- 120 mV	+ 116.4 mV	+ 123.6 mV	3%
50 mV	+ 1.2 V	+ 1.2 V	- 1.2 V	+ 1.164 V	+ 1.236 V	3%
5 V	+ 20 V	+ 20 V	- 24 V	+ 18.6 V	+ 21.4V	7%

Table 5-5: Negative offset control

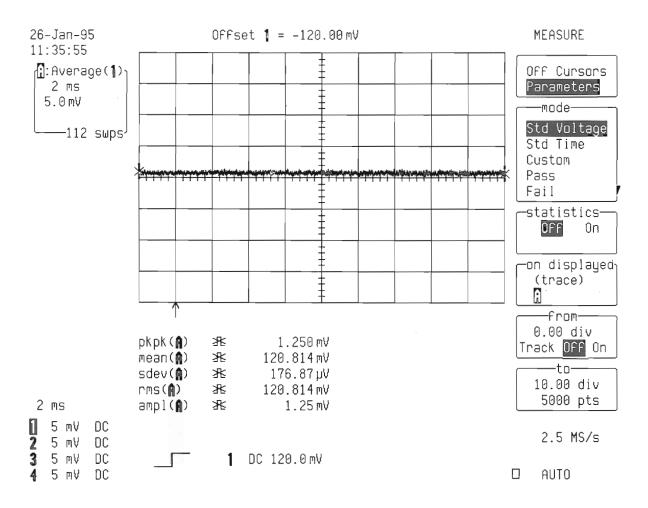

- Set input gain to 50 mV/div., from the high precision voltage source, apply to Channel 1 the following voltage value: + 1.2 V.
- Using the offset control, move the Ch1 trace through the entire range until the following offset value is reached: 1.2 V.
- Verify that the displayed trace A: Average (1) is in the screen (near to the center horizontal graticule line).
- Press clear sweeps
- Check after at least 100 sweeps that the mean (A) parameter readout is : $+ 1.2 \text{ V} \pm 3 \%$ (see table 5-5).

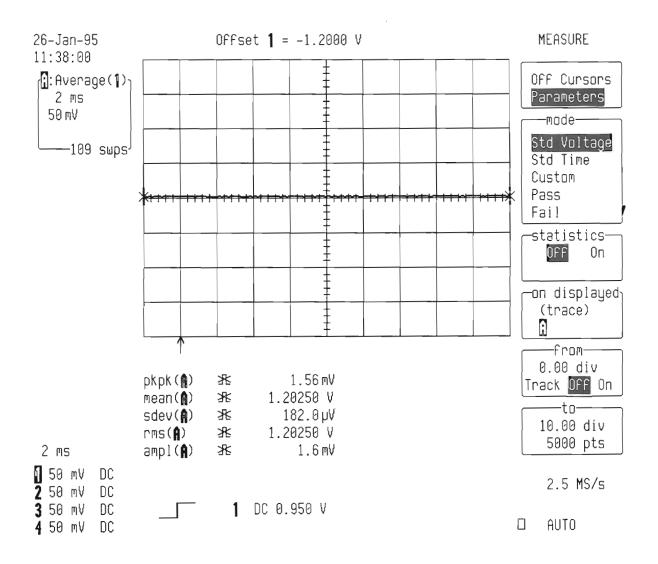

- Set input gain to 5 V/div., from the high precision voltage source, apply to Channel 1: + 20 V (maximum from PS5004).
- Using the offset control, move the Ch1 trace through the entire range until the maximum offset value is reached: - 24 V.
- Verify that the displayed trace A : Average (1) is in the screen
- Press clear sweeps
- Check after at least 100 sweeps that the mean (A) parameter readout is : $+20 \text{ V} \pm 7 \%$ (see table 5-5).
- Repeat step 5.8.1.a for Channel 2, Channel 3 and Channel 4 substituting channel control and input connector.


5.8.1.b Positive Offset Control Procedure

Set the DSO as in 5.8.1.a:


- Channel 1 input gain: 5 mV
- From the high precision voltage source PS5004, apply to Channel 1: 120 mV.
- Using the offset control, move Channel 1 trace through the entire range until the maximum offset value is reached: + 120 mV.
- Verify that the displayed trace A: Average (1) is in the screen, near to the center horizontal graticule line.
- Press clear sweeps.
- Check after at least 100 sweeps that the mean (A) parameter readout is:
 - $120 \text{ mV} \pm 3 \%$.

Range	Conditions of Test		Offset	Mean Parameter Reading		
			Control			
Volts/div	PS	9354A/T	9354A/T	Minimum	Maximum	
Control	Output	Input	Offset	value, -X %	Value, +X %	
5 mV	- 120 mV	- 120 mV	+ 120 mV	- 116.4 mV	- 123.6 mV	3%
50 mV	- 1.2 V	- 1.2 V	+ 1.2 V	- 1.164 V	- 1.236 V	3%
5 V	- 20 V	- 20 V	+ 24 V	- 18.6 V	- 21.4V	7%

Table 5-6: Positive offset control

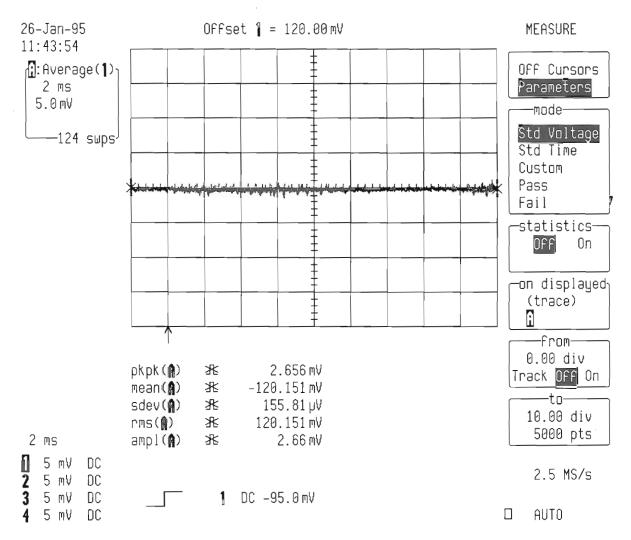

- Set input gain to 50 mV/div., from the high precision voltage source, apply to Channel 1 the following voltage value: + 1.2 V.
- Using the offset control, move the Ch1 trace through the entire range until the following offset value is reached: 1.2 V.
- Verify that the displayed trace A: Average (1) is in the screen (near to the center horizontal graticule line).
- Press clear sweeps
- Check after at least 100 sweeps that the mean (A) parameter readout is : $+ 1.2 \text{ V} \pm 3 \%$ (see table 5-6).

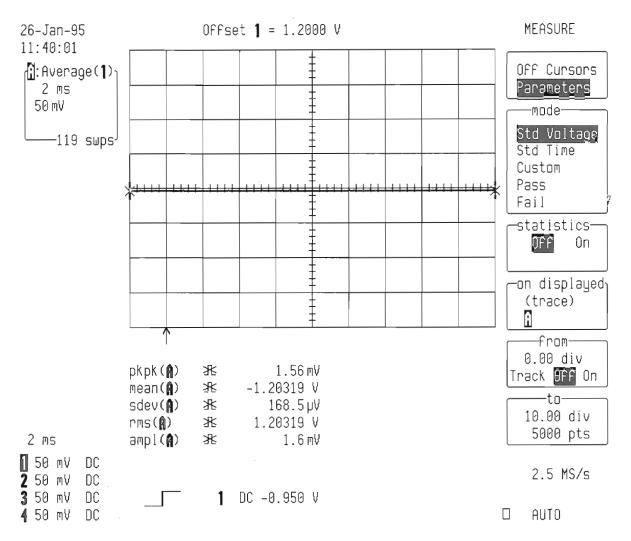

- Set input gain to 5 V/div., from the high precision voltage source, apply to Channel 1 - 20 V (maximum from PS5004).
- Using the offset control, move the Ch1 trace through the entire range until the maximum offset value is reached: + 24 V.
- Verify that the displayed trace A : Average (1) is in the screen.
- Press clear sweeps
- Check after at least 100 sweeps that the mean (A) parameter readout is: $-20 \text{ V} \pm 7 \%$ (see table 5-6).
- Repeat step 5.8.1.b for Channel 2, Channel 3 and Channel 4 substituting channel control and input connector.

5.9 Bandwidth

5.9.1 Description

The purpose of this test is to ensure that the entire system has a bandwidth of at least 500 MHz at 200 mV/div. An external source is used as the reference to provide a signal where amplitude and frequency are well controlled. A serious measurement of the bandwidth requires the use of a source whose amplitude does not change with frequency. The LeCroy calibration software corrects for the measured amplitude variation of the generator used. Generators can have errors of - 2 dB above 500 MHz. The non flatness of the generator should be taken into consideration.

Specifications

DC to at least 500 MHz (- 3 dB) at 200 mV/div. and above.

DC to at least 400 MHz at 100 mV/div.

DC to at least 350 MHz below 100 mV/div.

5.9.1.a DC 50 Ω

Procedure

Turn on trace : Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid

Input Coupling
 V/div. offset
 Global BWL
 Probe atten
 DC 50 Ω
 Normal
 Off
 X1

■ Input gain : 100 mV/div.

Offset : 0 mV
 Trigger setup : Edge
 Trigger on : Line
 Slope Line : Pos

Mode : Norm or Auto


Timebase : 10 μsec/div.

Channel use : 4
Record up : 50 K
Press Cursors/Measure: Parameters


Mode : Custom
 Statistics : off
 Change parameters : Measure
 On line 1 : sdev of 1

• On line 2 : **freq of 1**


Connect a leveled sine wave generator to Channel 1 (i.e. Marconi 2030), set the frequency to 500 KHz, adjust the generator output amplitude to get on DSO: sdev(1) = 140 mV.

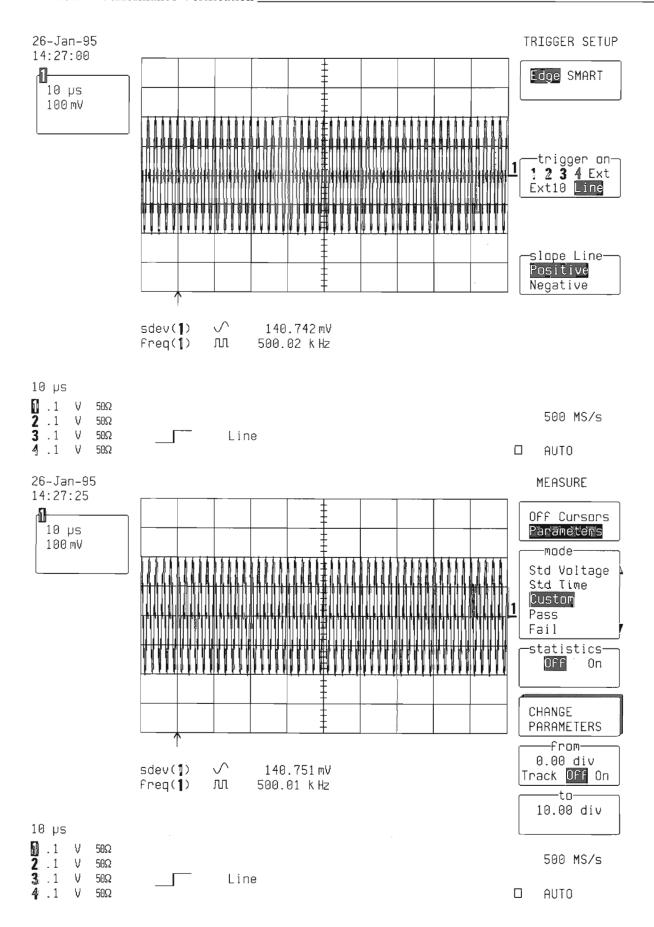


- Increase the generator frequency in multi 50 MHz steps until the sine wave amplitude is 70% of the initial amplitude at 500 KHz.
- At each 50 MHz step, check that sdev(1) > 98 mV
- When sdev(1) = 98 mV (3 dB point) the frequency of the generator must be at least 400 MHz.

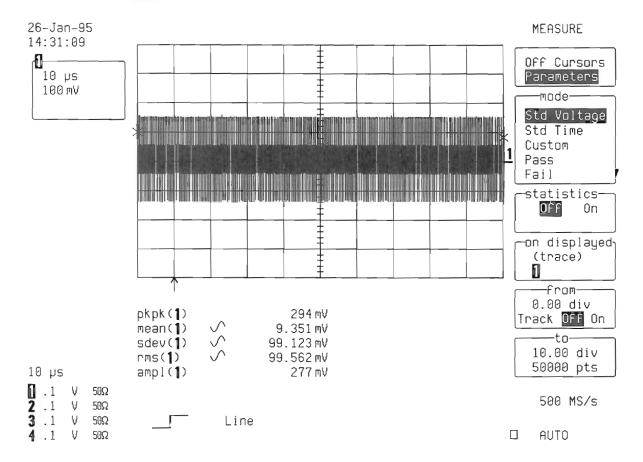

- Select Coupling and Global BWL: On (bandwidth limiter on)
- Check that the frequency at the 3 dB point (sdev(1) = 98 mV) is typically 30 MHz.
 (between 22 MHz and 43 MHz).

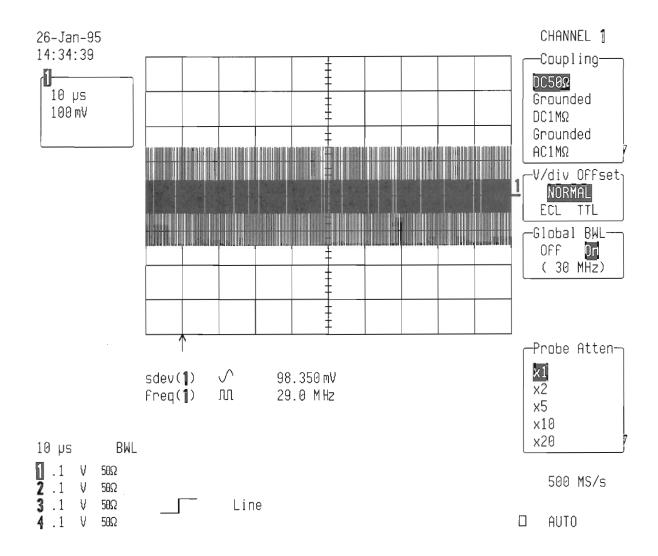

- Set DSO Input gain : 200 mV/div.
- Select Coupling and Global BWL : Off (bandwidth limiter off)
- Set sine wave generator frequency to 500 KHz, adjust the generator output amplitude to get on DSO: sdev(1) = 282 mV.
- Increase the generator frequency in multi 50 MHz steps until the sine wave amplitude is 70% of the initial amplitude at 500 KHz.
- At each 50 MHz step, check that sdev(1) > 198 mV
- When sdev(1) = 198 mV (3 dB point) the frequency of the generator must be at least 500 MHz.

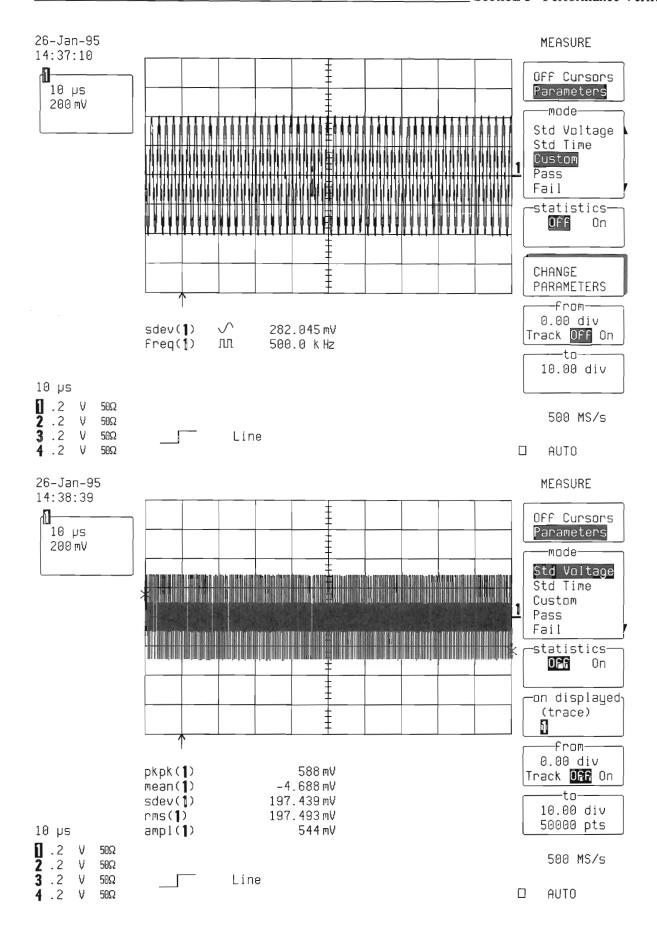


Page 5-37

5.9.1.a.1 Trigger Bandwidth

Set Trigger on : 1
 Coupling 1 : HF
 Mode : Norm
 Timebase : 1 nsec/div.

- Set sine wave generator frequency to 501 MHz
- Change Trigger level, until the scope triggers on Channel 1.

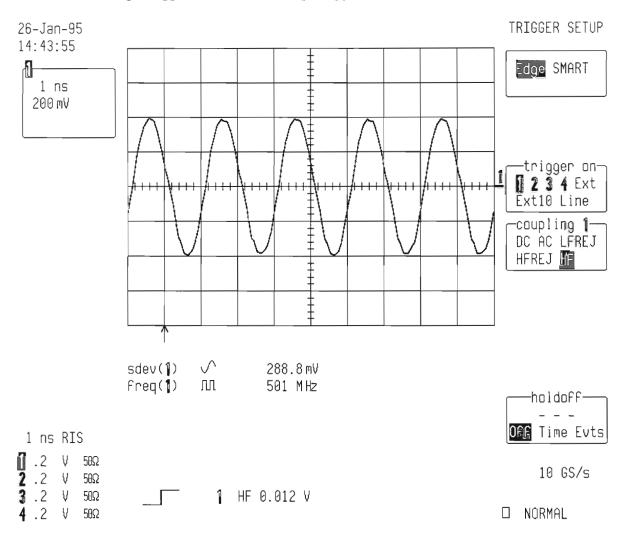

- Check: The scope must keep triggering in a stable way, a smooth 501 MHz sine wave must be visible on the screen.
- Repeat step 5.9.1.a and 5.9.1.a.1 for Channel 2, Channel 3 and Channel 4, substituting channel control and input connector.

5.9.1.b DC 1 M Ω

The purpose of this test is to ensure that the entire 9354A/T system has a bandwidth of at least 250 MHz at probe tip.

Set up a Tektronix SG503 leveled sine wave generator or equivalent.

Terminate the output of the SG503 via a 50Ω feed through and connect it to the channel 1 input through a 10X-probe using a probe tip BNC Jack adapter. Make sure the probe compensation is perfectly adjusted at low frequency.

■ Turn on trace : Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid

 Input Coupling : AC 1MΩ V/div. offset : Normal Global BWL : Off Probe atten : X10 Input gain : 1 V/div. Offset : 0 mV Trigger setup : Edge Trigger on : Line


Slope Line : Pos
Mode : Norm

Timebase : 10 μsec/div.


■ Channel use : 4 ■ Record up : 50 K

Press Cursors/Measure: Parameters
 Mode : Custom
 Statistics : off
 Change parameters : Measure
 On line 1 : sdev of 1
 On line 2 : freq of 1

- Set sine wave generator frequency to 500 KHz, adjust the generator output amplitude to get on DSO: sdev(1) = 1.8 V.
- Increase the generator frequency in multi MHz steps until the sine wave amplitude is 70% of the initial amplitude at 500 KHz.
- At each frequency step, check that sdev(1) > 1.25 V
- When sdev(1) = 1.25 V (3 dB point) the frequency of the generator must be at least
 250 MHz.

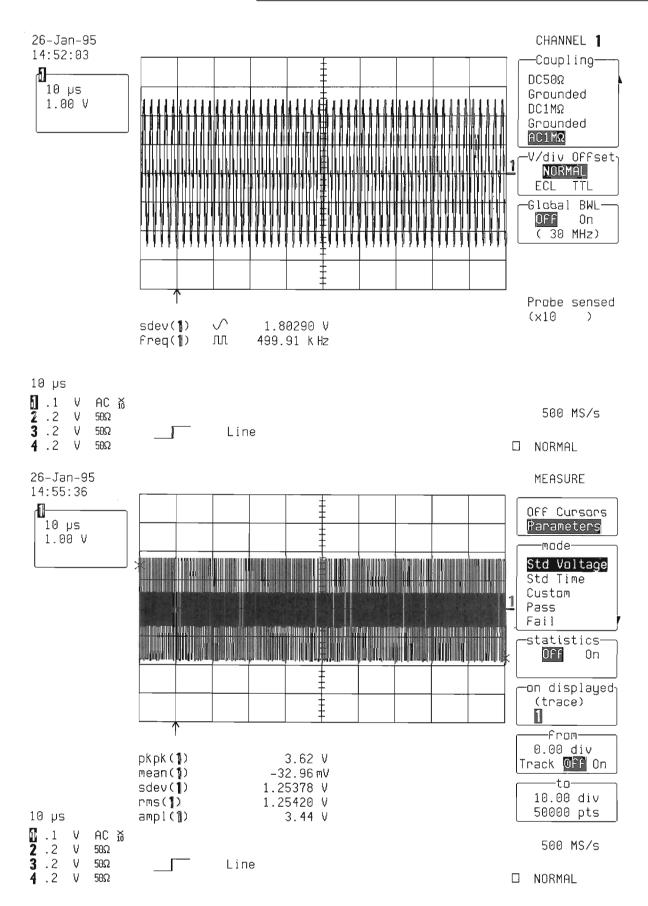

- Set the bandwidth limiter on:
- Select Coupling and Global BWL: On
- Check that the frequency at the 3 dB point is typically 30 MHz.
 (between 22 MHz and 43 MHz).

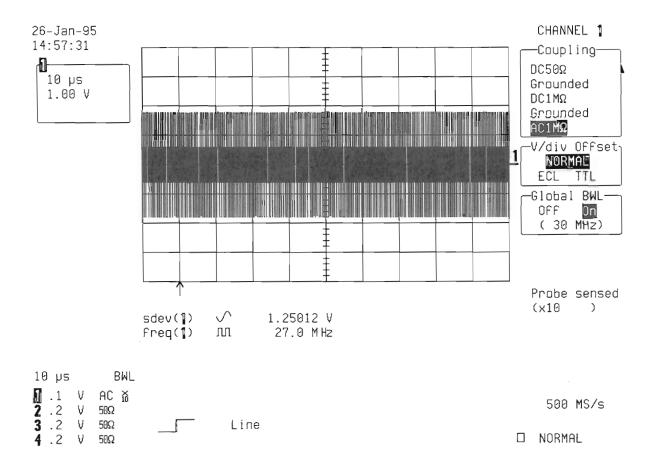

 Repeat step 5.9.1.b for Channel 2, Channel 3 and Channel 4 substituting channel control and input connector.

5.10 Trigger Level

5.10.1 Description

The trigger capabilities are tested for several cases of the standard edge trigger:

- Channel (internal), and External Trigger sources
- Three DC levels: -3, 0, -3 major screen divisions
- DC coupling
- Positive and negative slopes

5.10.2 Channel (internal)

The horizontal and vertical errors for a trigger at 0 v threshold are determined by comparing the crossing point of the same sine wave at two different amplitudes.

- Setup any sine wave generator capable of generating sine waves of 1 KHz, 4V pkpk.
- Connect the generator output to Channel 1


Turn on trace : Ch1
Input Coupling Ch 1 : DC 50 Ω
V/div. offset : Normal
Input gain : .5 V/div.
Input offset : 0 mV
Trigger setup : Edge
Trigger on : 1
Coupling 1 : DC
Slope 1 : Pos

Slope 1
Set Trigger level
Mode
Pre-Trigger Delay
Timebase
DC 0.0 mV
Single
50 %
1 msec/div.

• Channel Use : 4


Record up to : 50 K samples

- Adjust the sine wave generator's output amplitude to get 8 divisions peak to peak, corresponding to a 4 V amplitude.
- It is important that the offset of the input is set to zero mV, use show status and acquisition status to verify.
- Display setupDot join Off
- Set **Persistence Om**, and acquire few sweeps in Single Trigger mode.
- Connect a 3 dB attenuator, and acquire few more sweeps in Single mode.
- Select Cursors/Measure : Cursors, Time, Absolute
- Use the "cursor position "knob, to move the marker at the horizontal crossing point of the two sine waves.
- Check that the time difference obtained between the marker and the trigger is within $\pm 20 \mu$ sec. The time readout is below 0.50 V in the icon 1, at top left.

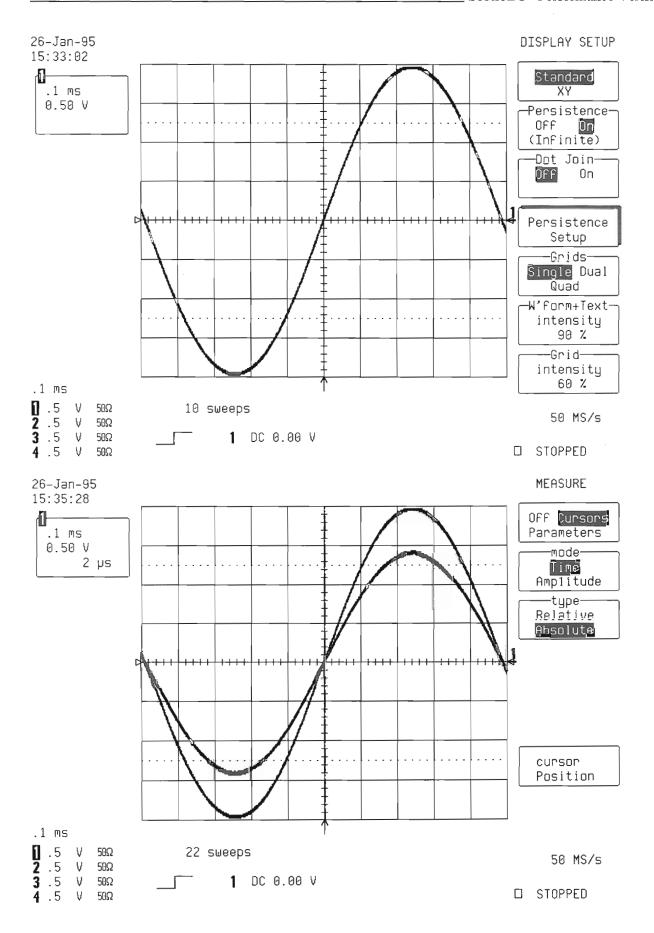


Page 5-43

- Select Cursors mode : Amplitude, Absolute
- Use the "cursor position "knob, to move the marker at the vertical crossing point of the two sine waves.
- Check that the voltage difference obtained between the marker and the trigger level is within \pm 200 mV. The level readout is below 0.50 V in the icon 1, at top left.

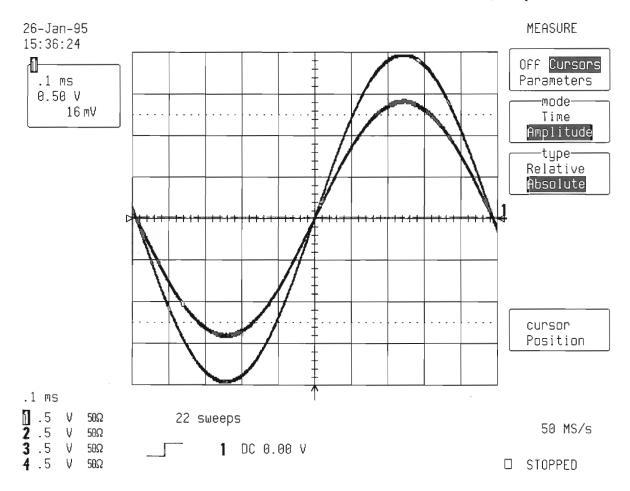

- Set Trigger Slope 1 : Neg
- Disconnect the 3 dB attenuator from the BNC input
- Acquire few sweeps in Single Trigger mode.
- Connect the 3 dB attenuator, and acquire few more sweeps in Single mode.
- Select Cursors/Measure : Cursors, Time, Absolute
- Use the "cursor position "knob, to move the marker at the horizontal crossing point of the two sine waves.
- Check that the time difference obtained between the marker and the trigger is within $\pm 20 \mu$ sec. The time readout is below 0.50 V in the icon 1, at top left.
- Select Cursors mode : Amplitude, Absolute
- Use the "cursor position "knob, to move the marker at the vertical crossing point of the two sine waves.
- Check that the **voltage** difference obtained between the marker and the trigger level is within ± 200 mV. The level readout is below 0.50 V in the icon 1, at top left.

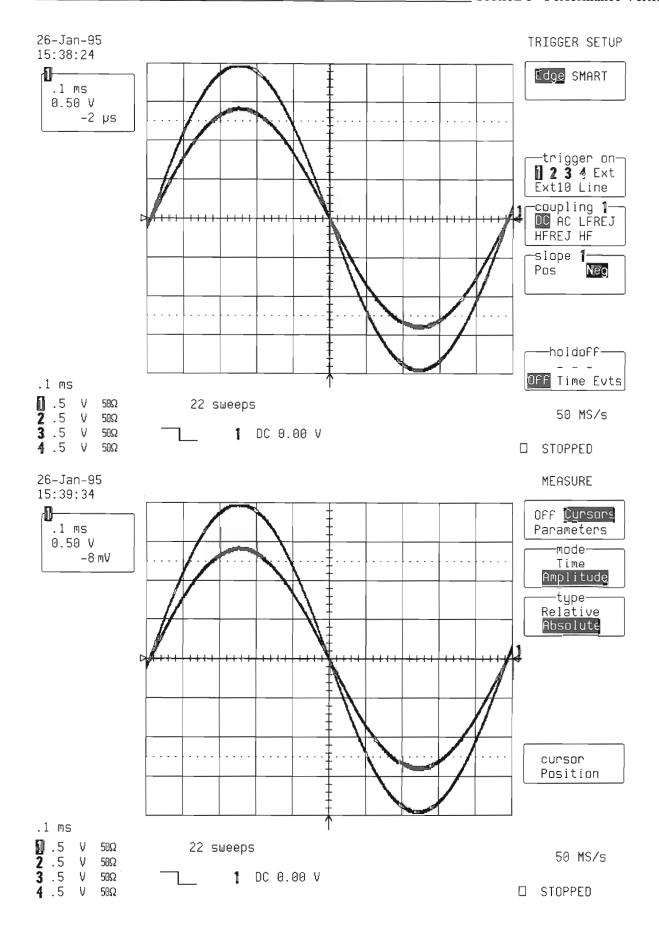


■ Set Trigger level : DC + 1.5 V


Disconnect the 3 dB attenuator from the BNC input

Set Trigger Slope 1 : Pos

- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the **horizontal center** of the screen at the **vertical** + 3 divisions.
- Select Cursors/Measure: Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the crossing point of the sine wave and the horizontal center of the screen (50% pre-trigger line).
- Check that the vertical crossing point level is $+ 1.5 \text{ V} \pm .2 \text{ V}$. See icon 1 at top left.

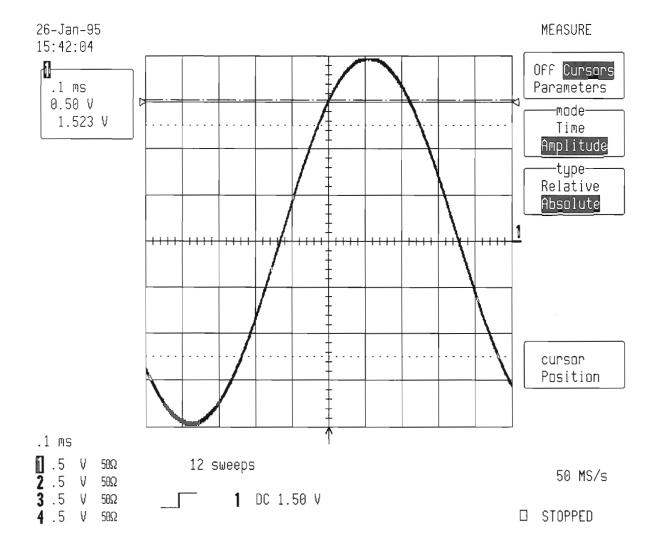

- Set Trigger Slope 1 : Neg
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal center of the screen at the vertical + 3 divisions.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position" knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screen** (50% pre-trigger line).
- Check that the vertical crossing point level is $+ 1.5 \text{ V} \pm .2 \text{ V}$. See icon at top left.

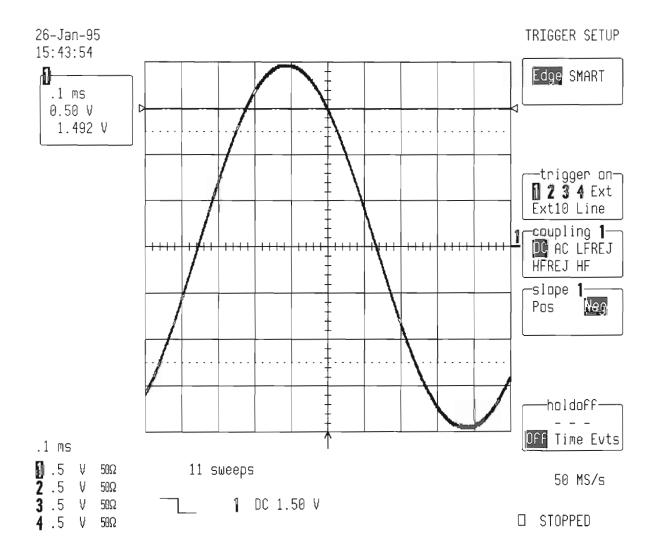

• Set Trigger level : DC - 1.5 V

Set Trigger Slope 1 : Pos


Acquire few sweeps in Single Trigger mode.

 The sine wave must pass through the horizontal center of the screen at the vertical - 3 divisions.


Select Cursors/Measure : Cursors, Amplitude, Absolute

• Use the "cursor position" knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screen** (50% pre-trigger line).

• Check that the vertical crossing point level is - 1.5 V \pm .2 V. See icon 1 at top left.

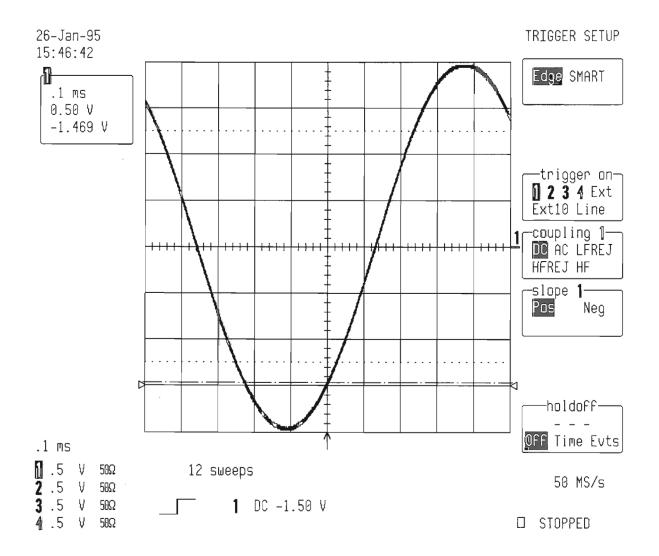

- Set Trigger Slope 1 : Neg
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal center of the screen at the vertical - 3 divisions.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screen** (50% pre-trigger line).
- Check that the vertical crossing point level is 1.5 V \pm .2 V. See icon 1 at top left.

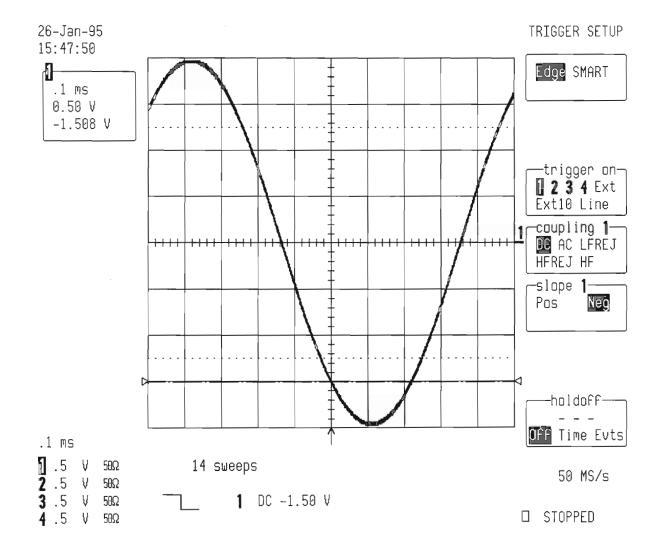

 Repeat step 5.10.2 for Channel 2, Channel 3 and Channel 4 substituting channel control and input connector.

5.10.3 External Trigger

Specifications

External trigger range : DC \pm .5 V

Procedure

Connect the output of the generator to External input and to Channel 2 via a coaxial T-connector. The cable length from External to Channel 2 must be short, at most 2 nsec.

Set frequency : 1 KHz
 Turn on trace : Ch2
 Input Coupling Ch 2 : DC 50 Ω
 V/div. offset : Normal
 Input gain : 100 mV/div.

Input offset : 0 mV
 Trigger setup : Edge
 Trigger on : Ext
 Coupling Ext : DC
 Slope Ext : Pos


External : DC 1MΩ
 Set Ext Trigger level : DC 0.0 mV
 Mode : Single
 Pre-Trigger Delay : 50 %

■ Timebase : .1 msec/div.

□ Channel use : 4


Record up to : 50 K samples

- Adjust the sine wave generator's output amplitude to get 8 divisions peak to peak, corresponding to a .8 V amplitude.
- It is important that the offset of the input is set to zero mV, use show status and acquisition status to verify.
- Display setup : Dot join Off
- Set Persistence On, and acquire few sweeps in Single Trigger mode.
- Connect a 3 dB attenuator, and acquire few more sweeps in Single mode.
- Select Cursors/Measure : Cursors, Time, Absolute
- Use the "cursor position "knob, to move the marker at the horizontal crossing point of the two sine waves.
- Check that the time difference obtained between the marker and the trigger is within ± 20 μsec. The time readout is below 100 mV in the icon 2, at top left.

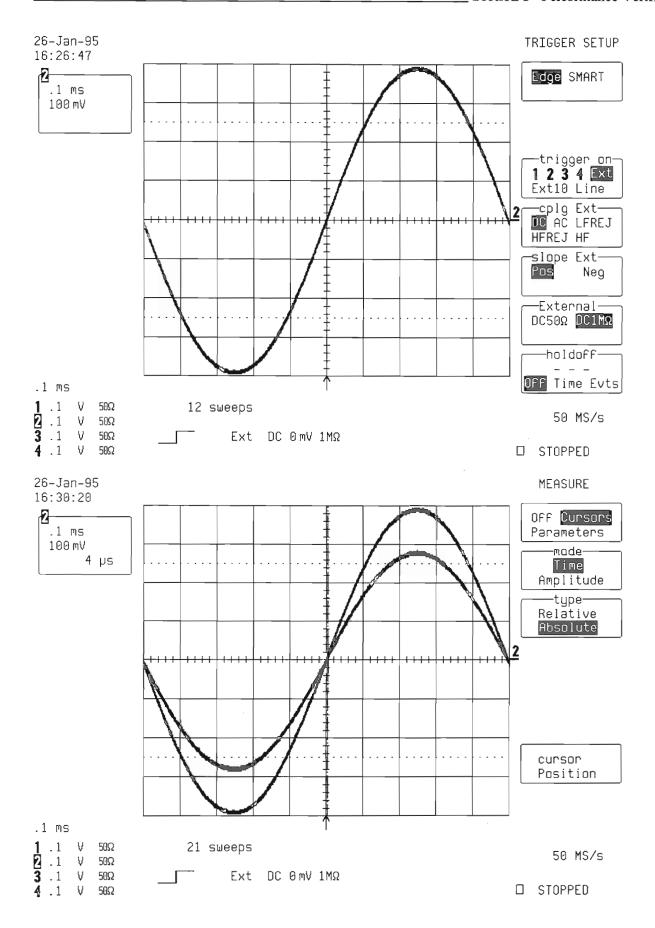


Page 5-51

- Select Cursors mode : Amplitude, Absolute
- Use the "cursor position "knob, to move the marker at the vertical crossing point of the two sine waves.
- Check that the vertical crossing point level is within \pm 40 mV. See icon 2 at top left.

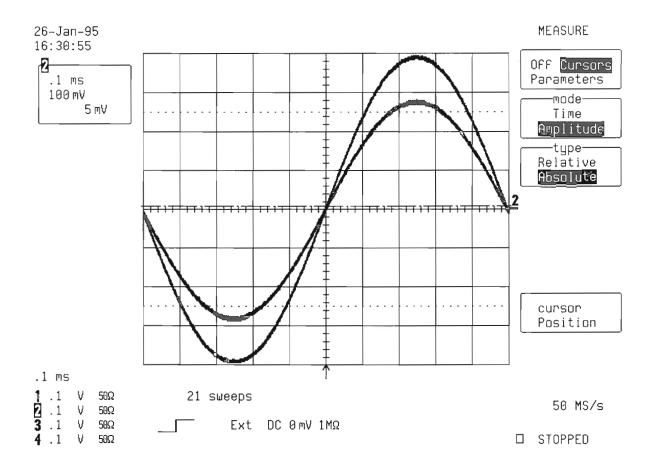


- Set Slope Ext : Neg
- Disconnect the 3 dB attenuator from the BNC input
- Acquire few sweeps in Single Trigger mode.
- Connect the 3 dB attenuator, and acquire few more sweeps in Single mode.
- Select Cursors/Measure : Cursors, Time, Absolute
- Use the "cursor position "knob, to move the marker at the horizontal crossing point of the two sine waves.
- Check that the time difference obtained between the marker and the trigger is within \pm 20 μ sec. The time readout is below 100 mV in the icon 2, at top left.

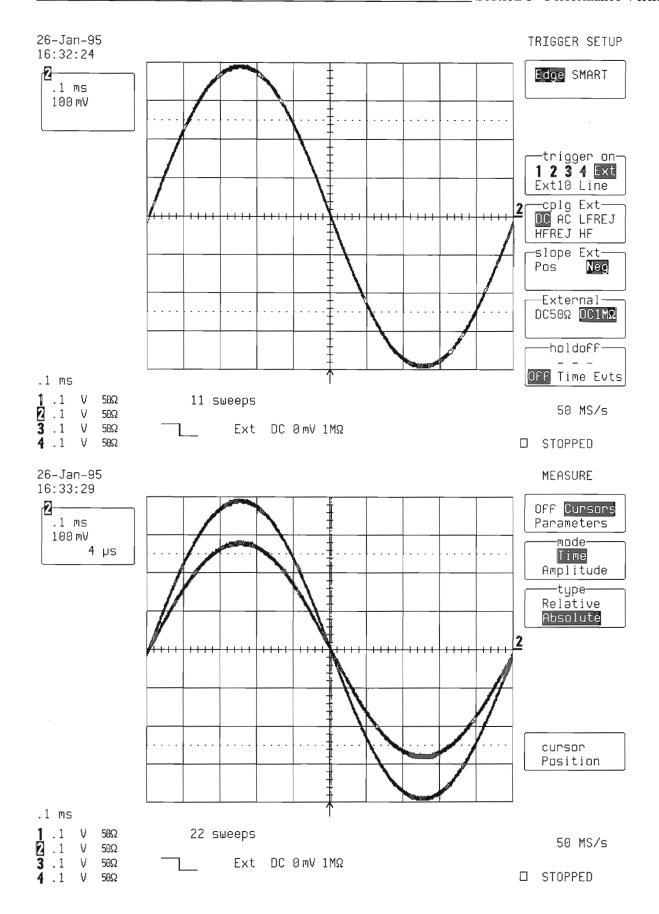


Page 5-53


- ⁿ Select Cursors mode : Amplitude, Absolute
- Use the "cursor position "knob, to move the marker at the vertical crossing point of the two sine waves.
- Check that the voltage difference obtained between the marker and the trigger level is within \pm 40 mV. The level readout is below 100 mV in the icon 2, at top left.

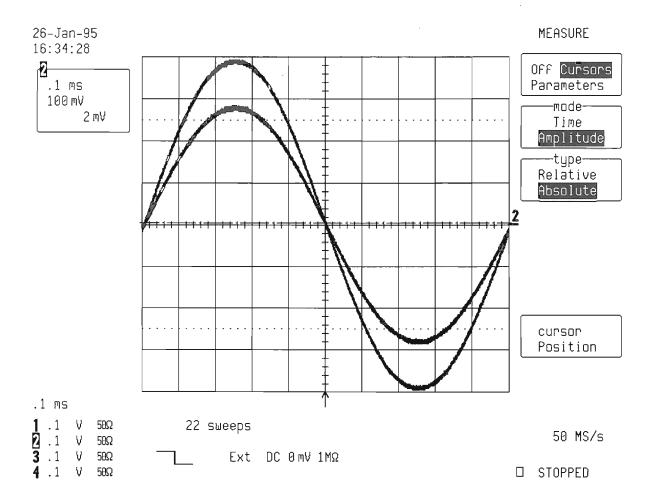


- Set Trigger level : DC + 300 mV
- Disconnect the 3 dB attenuator from the BNC input
- Set Trigger Slope Ext: Pos
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the **horizontal center** of the screen at the **vertical + 3 divisions**.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the crossing point of the sine wave and the horizontal center of the screen (50% pre-trigger line).
- Check that the vertical crossing point level is $+300 \text{ mV} \pm 40 \text{ mV}$. See icon 2 at top.

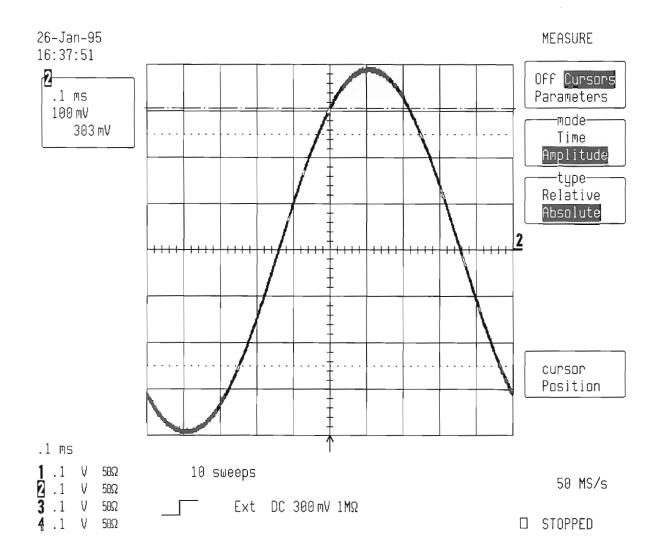

- Set Trigger Slope Ext: Neg
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal center of the screen at the vertical + 3 divisions.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the crossing point of the sine wave and the horizontal center of the screen (50% pre-trigger line).
- Check that the vertical crossing point level is $+300 \text{ mV} \pm 40 \text{ mV}$. See icon 2 at top.

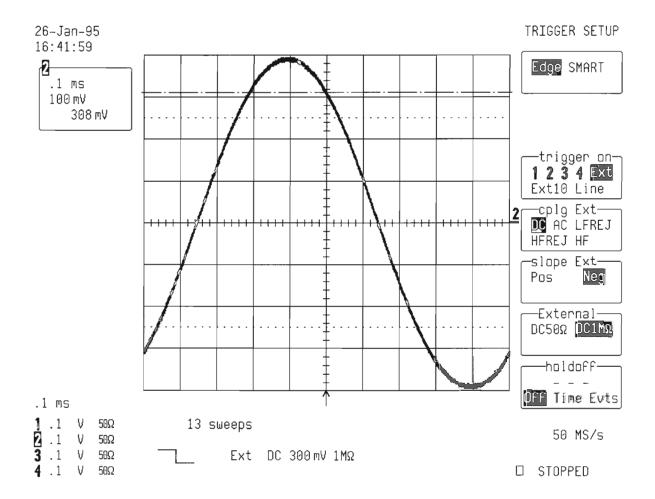

- Set Trigger level : DC 300 mV
- Set Trigger Slope Ext: Pos
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal center of the screen at the vertical 3 divisions.
- Select Cursors/Measure: Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the crossing point of the sine wave and the horizontal center of the screen (50% pre-trigger line).
- Check that the vertical crossing point level is 300 mV \pm 40 mV. See icon 2 at top.
- Set Trigger Slope Ext: Neg
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal cemter of the screen at the vertical 3 divisions.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position" knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screem** (50% pre-trigger line).
- Check that the vertical crossing point level is 300 mV \pm 40 mV. See icon 2 at top.

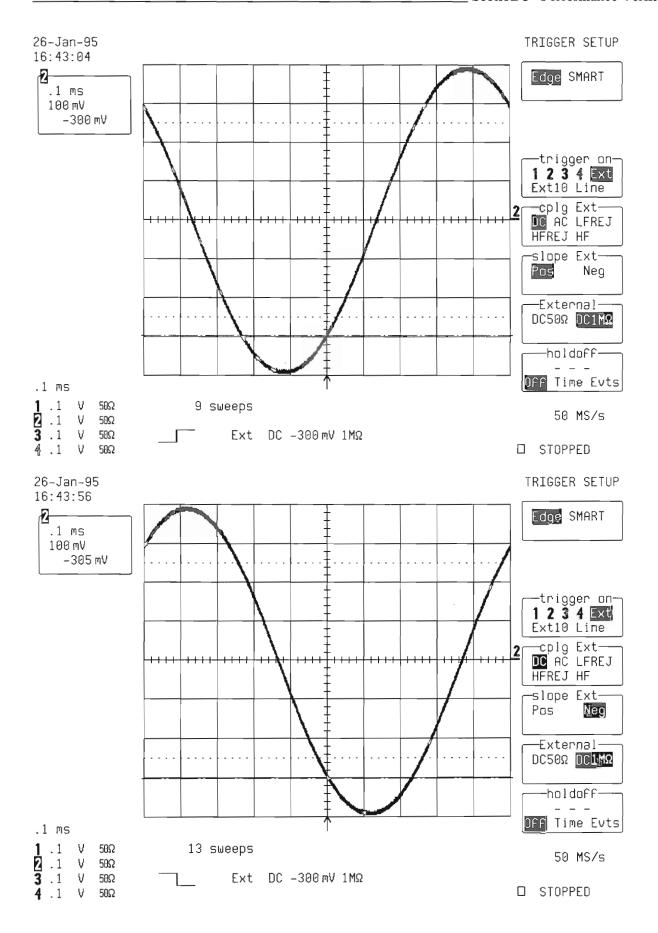

5.10.4 External /10 Trigger

Specifications

External trigger range : DC \pm 5 V

Procedure

 Connect the output of the generator to External input and to Channel 2 via a coaxial T-connector. The cable length from External to Channel 2 must be short, at most 2 nsec.

Set frequency : 1 KHz

 Turn on trace
 : Ch2

 Input Coupling Ch 2
 : DC 50 Ω

 V/div. offset
 : Normal

 Input gain
 : 1 V/div.

 Input offset
 : 0 mV

 Trigger setup
 : Edge

 Trigger on
 : Ext10

 Coupling Ext10
 : DC

 Slope Ext10
 : Pos

 External
 : DC 1MΩ


Set Ext Trigger level : DC 0.0 mV
 Mode : Single
 Pre-Trigger Delay : 50 %

■ Timebase : .1 msec/div.

Channel use : 4


Record up to : 50 K samples

- Adjust the sine wave generator's output amplitude to get 8 divisions peak to peak, corresponding to a 8 V amplitude.
- It is important that the offset of the input is set to zero mV, use show status and acquisition status to verify.
- Display setupDot join Off
- Set Persistence On, and acquire few sweeps in Single Trigger mode.
- Connect a 3 dB attenuator, and acquire few more sweeps in Single mode.
- Select Cursors/Measure : Cursors, Time, Absolute
- Use the "cursor position" knob, to move the marker at the horizontal crossing point of the two sine waves.
- Check that the time difference obtained between the marker and the trigger is within ± 20 μsec. The time readout is below 1 V in the icon 2, at top left.

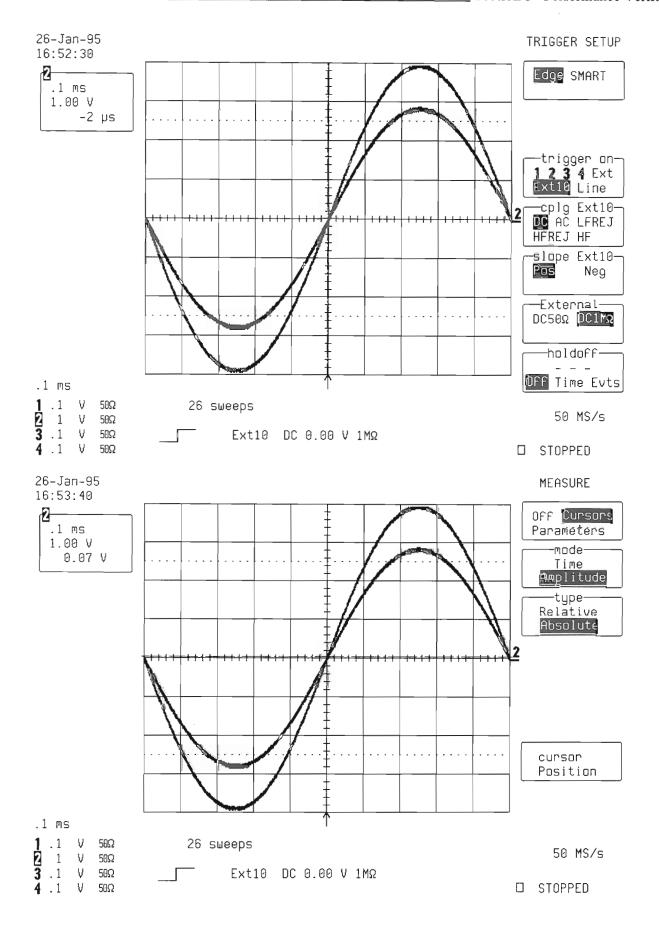

Page 5-59

- Select Cursors mode : Amplitude, Absolute
- Use the "cursor position "knob, to move the marker at the vertical crossing point of the two sine waves.
- Check that the voltage difference obtained between the marker and the trigger level is within ± 400 mV. The level readout is below 1 V in the icon 2, at top left.
- Set Trigger Slope Ext10 : Neg
- Disconnect the 3 dB attenuator from the BNC input
- Acquire few sweeps in Single Trigger mode.
- Connect the 3 dB attenuator, and acquire few more sweeps in Single mode.
- Select Cursors/Measure : Cursors, Time, Absolute
- Use the "cursor position "knob, to move the marker at the horizontal crossing point of the two sine waves.
- Check that the time difference obtained between the marker and the trigger is within $\pm 20 \mu$ sec. The time readout is below 1 V in the icon 2, at top left.
- Select Cursors mode : Amplitude, Absolute
- Use the "cursor position "knob, to move the marker at the vertical crossing point of the two sine waves.
- Check that the vertical crossing point level is within \pm 400 mV. See icon 2 at left.

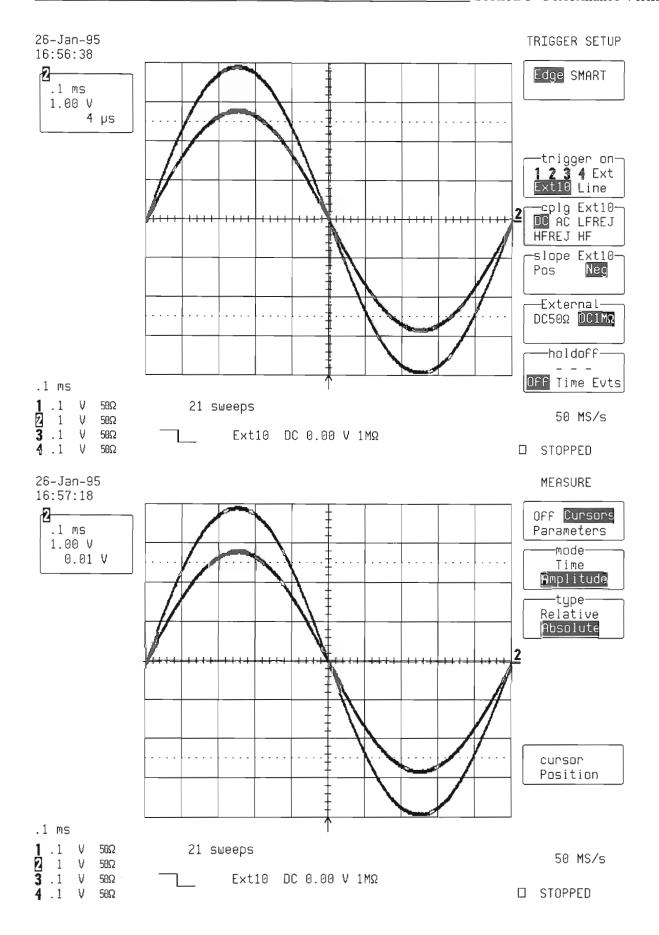

Page 5-61

• Set Trigger level : DC + 3V

• Set Trigger Slope Ext10 : Pos

■ Disconnect the 3 dB attenuator from the BNC input


Acquire few sweeps in Single Trigger mode.

• The sine wave must pass through the horizontal center of the screen at the vertical + 3 divisions.


• Select Cursors/Measure : Cursors, Amplitude, Absolute

• Use the "cursor position "knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screen** (50% pre-trigger line).

• Check that the vertical crossing point level is $+ 3 \text{ V} \pm 400 \text{ mV}$. See icon 2 at top.

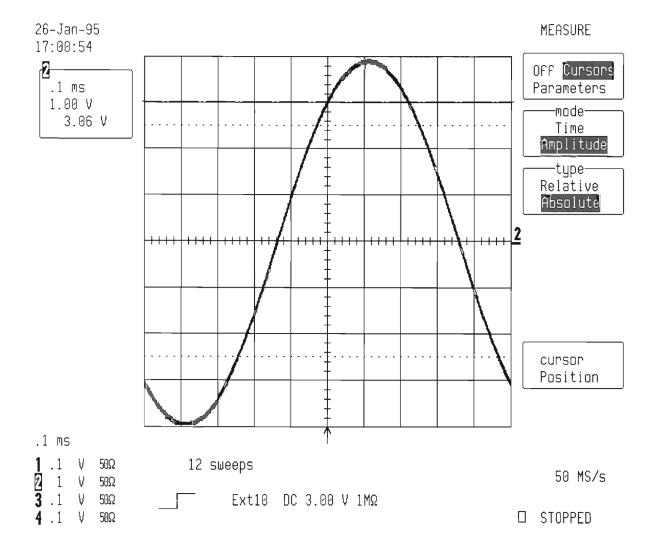

- Set Trigger Slope Ext10 : Neg
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal center of the screen at the vertical + 3 divisions.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screen** (50% pre-trigger line).
- Check that the vertical crossing point level is + 3 V \pm 400 mV. See icon 2 at top .

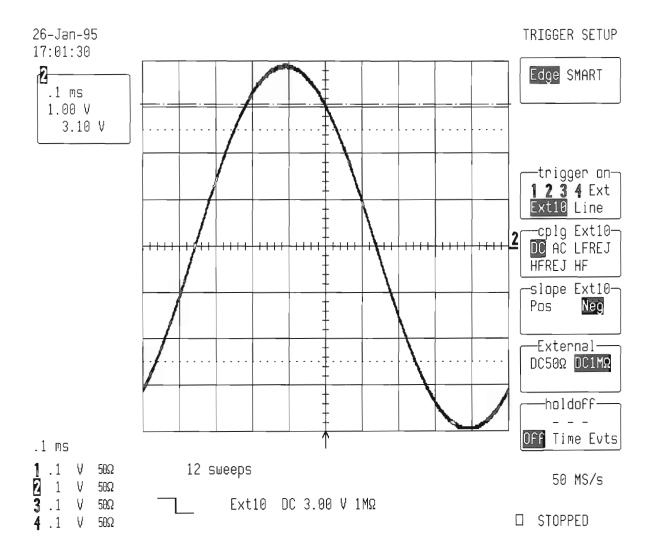

■ Set Trigger level : DC - 3 V


■ Trigger Slope Ext10 : Pos

Acquire few sweeps in Single Trigger mode.


 The sine wave must pass through the horizontal center of the screen at the vertical - 3 divisions.

Select Cursors/Measure: Cursors, Amplitude, Absolute

- Use the "cursor position "knob, to move the marker, at the **crossing point** of the **sine wave** and the **horizontal center of the screen** (50% pre-trigger line).
- Check that the vertical crossing point level is 3 V \pm 400 mV. See icon 2 at top.

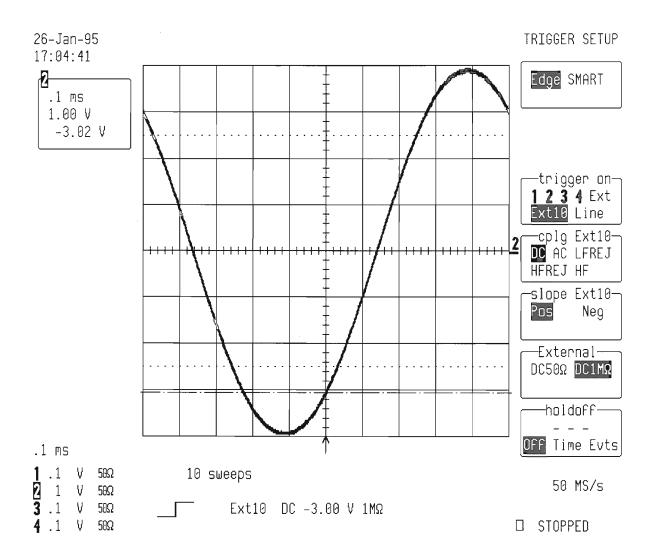

- Trigger Slope Ext10 : Neg
- Acquire few sweeps in Single Trigger mode.
- The sine wave must pass through the horizontal center of the screen at the vertical - 3 divisions.
- Select Cursors/Measure : Cursors, Amplitude, Absolute
- Use the "cursor position "knob, to move the marker, at the **crossing point** of the **sime wave** and the **horizontal center of the screen** (50% pre-trigger line).
- Check that the vertical crossing point level is -3 V \pm 400 mV. See icon 2 at top.

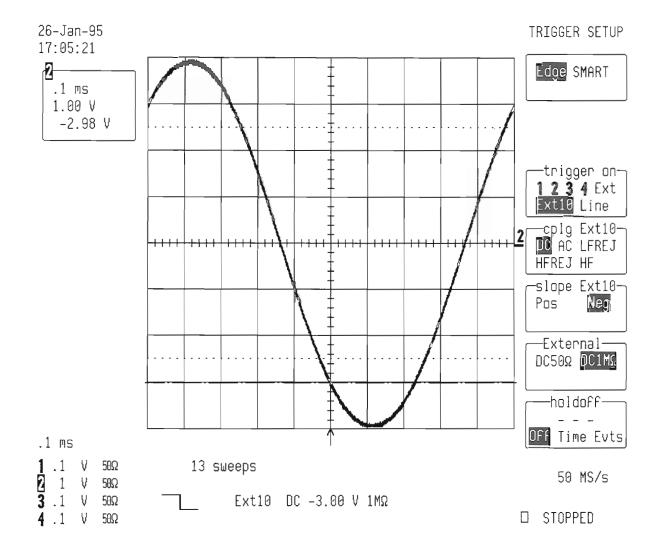

5.11 Smart Trigger

Specifications

Pulse width < or > 2.5 nsec to 20 sec.

5.11.1 Trigger on Pulse Width < 10 nsec

Procedure

Connect a leveled sine wave generator to Channel 1

Frequency: 100 MHz
Turn on trace: Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid


: $DC 50 \Omega$ Input Coupling V/div. offset : Normal Global BWL : Off Probe atten : X1 Input gain : .5 V/div. Trigger setup : Smart Setup Smart Trigger : Glitch Trigger on : 1 : **DC** Coupling 1

■ At end of : Neg
□ Width : <10 nsec
■ Mode : Norm
□ Timebase : 5 nsec/div.

- Adjust the generator output amplitude to get a five division amplitude sine wave.
- Check that the scope triggers
- Switch to Width : > 10 nsec
- Check that the scope doesn't trigger: slow trigger and no flashes in box next to normal.

5.11.2 Trigger on Pulse Width > 10 nsec

- Adjust the generator frequency to 40 MHz
- Check that the scope triggers
- □ Switch to Width : < 10 nsec
- Check that the scope doesn't trigger: slow trigger and no flashes in box next to normal.

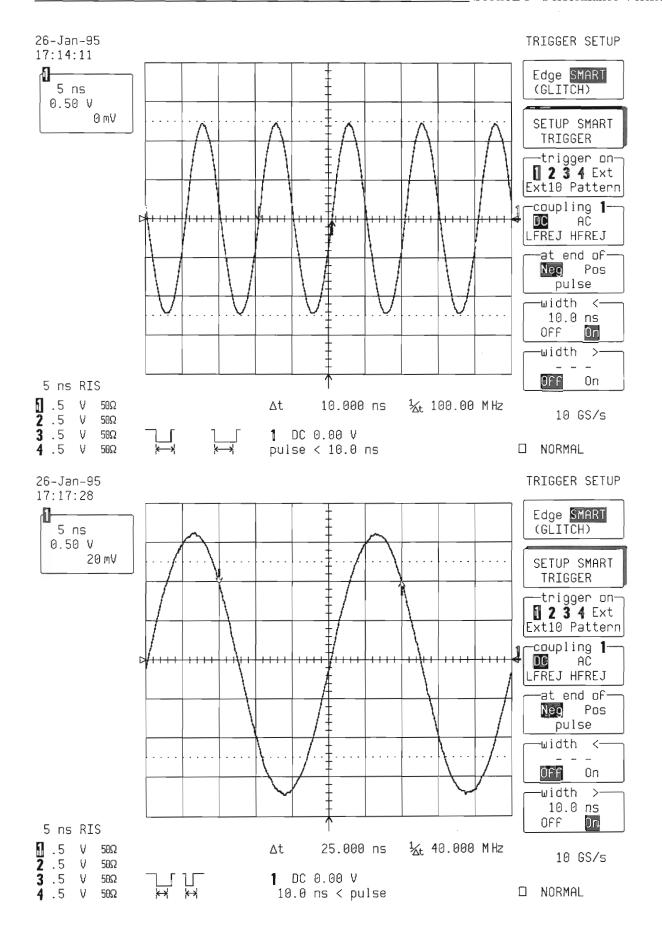

5.11.3 Trigger on Pulse Width < 100 nsec

Set the generator frequency to 10 MHz


Pulse width

: < 100 nsec

Timebase

: 20 nsec/div.

Check that the scope triggers.

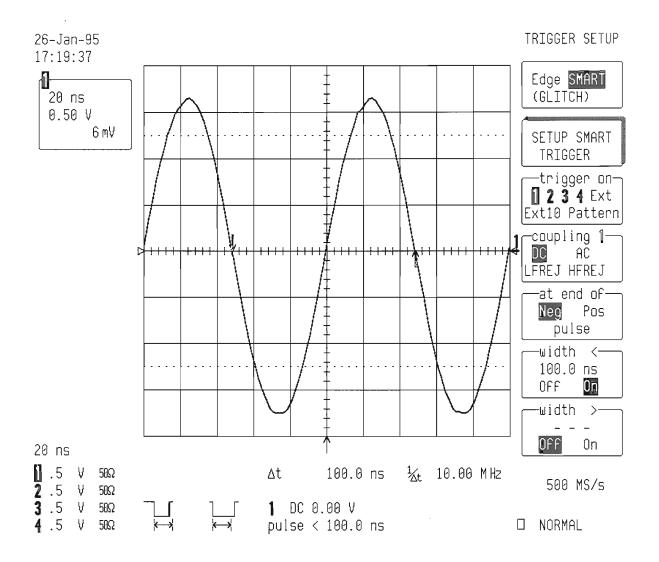

 $^{\Box}$ Switch to Width : > 100 nsec

• Check that the scope **doesn't trigger**: slow trigger and no flashes in box next to normal.


5.11.4 Trigger on Pulse Width > 100 nsec

Adjust the generator frequency to 4 MHz

Pulse width : > 100 nsec

Set Timebase : 50 nsec/div.

Check that the scope triggers.

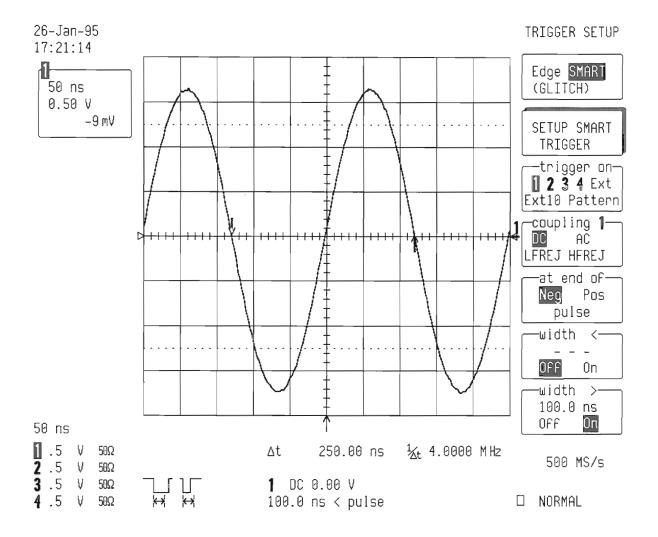

- Switch to Width : < 100 nsec</p>
- Check that the scope doesn't trigger: slow trigger and no flashes in box next to normal.
- Repeat all the above tests for Channel 2, Channel 3 and Channel 4 substituting channel control and input connector, and check as above.

5.12 Time Base Accuracy

5.12.1 Description

An external sine wave generator of 1 MHz with a frequency accuracy better than 1 ppm is used.

Specifications

500 MHz clock : accuracy : $\leq \pm$ 0.001 % or $\leq \pm$ 10 ppm

5.12.2 500 MHz Clock Manual Verification Procedure

Setup a leveled sine wave generator.

Frequency: 1 MHz

Connect the generator output to Channel 1

Turn on trace : Ch1

 $\begin{array}{lll} & \text{Display setup} & : & \textbf{Standard, Persistence off, Dot join on, Single grid} \\ & & \text{Input Coupling} & : & \textbf{DC 50 } \Omega \end{array}$

Input Coupling
 V/div. offset
 Probe atten
 Input gain
 Trigger setup
 DC 50 Ω
 Normal
 X1
 Edge


Trigger on : 1
 Coupling 1 : DC
 Slope 1 : Pos
 Level 1 : 0.5 V
 Mode : Norm
 Holdoff : Off
 Delay : 0 %

Timebase : .5 μsec/div.

Channel use : 4Record up to : 50 K

- Adjust the generator output amplitude and Ch1 offset to get a five divisions peak to peak amplitude sine wave.
- Store Channel 1 in Memory 1
- Set Post-trigger delay to 5.00 msec

This allows the accuracy of the time base clock to be checked **5000 periods** after the trigger point.

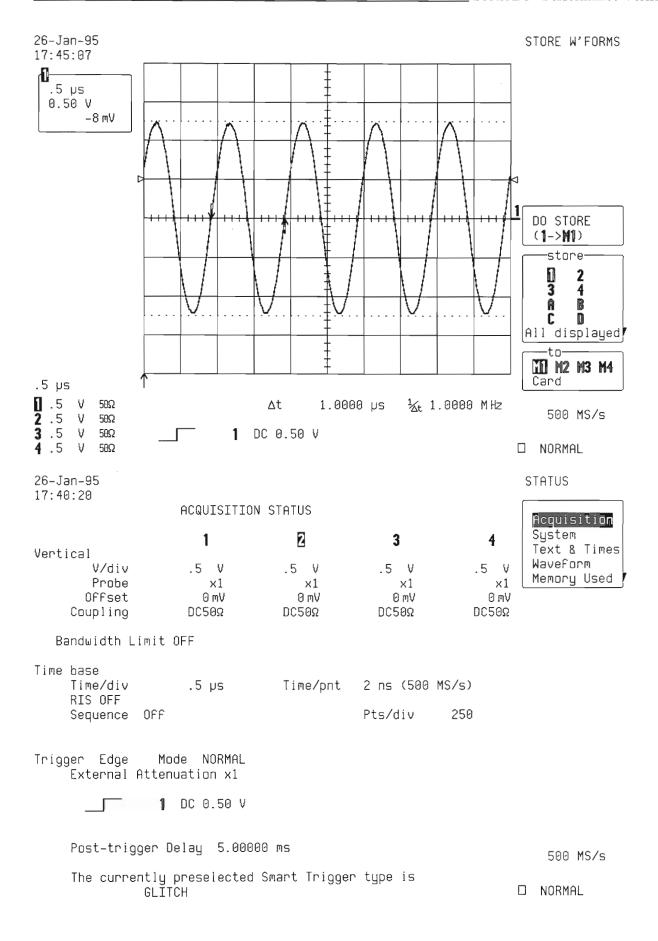

- Recall Memory 1 to A
- Turn on trace A
- Check that the displayed Channel 1 trace is aligned with the sine wave from memory 1.


Press
 Measure
 Mode
 Cursors/Measure
 Parameters
 Custom

Statistics : Off

Change parameters


On line 1 : Delay of 1
 On line 2 : Delay of A

Check that (delay(A) - delay(1) + 5 msec) $\leq \pm 0.00005$ msec corresponding to 10ppm.

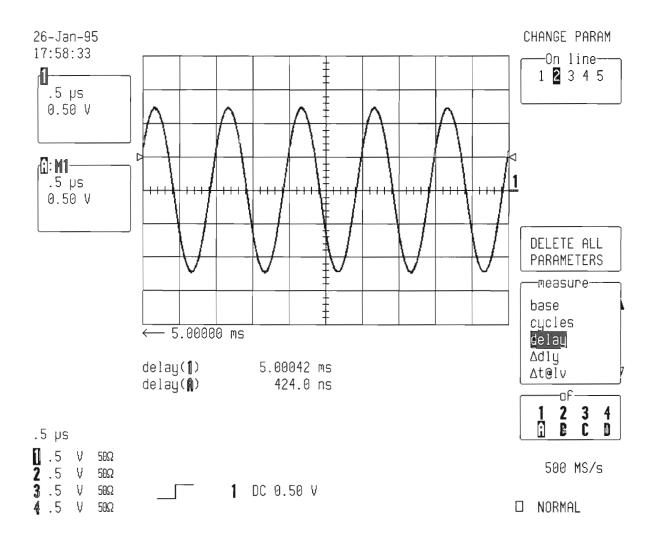

A difference of \pm 0.05 μ sec corresponds to \pm 10 ppm.

See screen dump below:

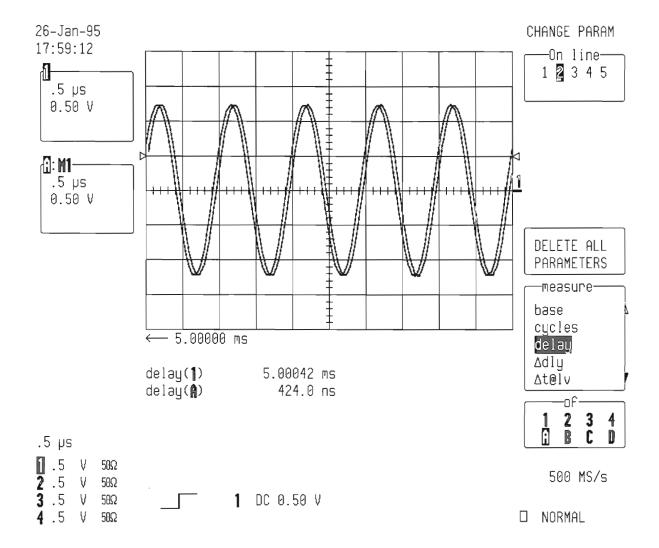

5.13 Overshoot and Rise time (10%-90%)

Specifications

DC 50 Ω , 100 mV/div., : overshoot < 12 %, rise time < 0.9 ns

DC 1 M Ω , 100 mV/div., : rise time < 1.5 ns

Procedure

Apply the fast pulse generator LeCroy 4969 (< 500 psec) or equivalent, to Channel 1

Set the DSO as follows:

Turn on trace : Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid

Coupling Channel 1 : DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1
 Input offset : -250 mV
 Input gain : 100 mV/div
 Trigger setup : Edge

Trigger on : 1

Trigger level : DC 250 mV

Coupling 1 : DC
 Slope 1 : Pos
 Mode : Normal
 Holdoff : Off
 Timebase : 2 nsec/div

Record up to : 50K samplesDelay : 30 % Pre-Trigger

Turn on trace : A

Select Math Setup

• For Math : Use at most 1000 points

Use Math? : Yes Math Type : Average Avg Type : Summed : Channel 1 Of Turn off trace : Channel 1 Cursors/Measure : Parameters Mode : Custom Statistics : **On**

Change Parameters :

on displayed trace : A


On line 1

• Measure : Over + of A


On line 2

Measure : Rise of A

After at least 100 sweeps, check that the average overshoot is < 12 % and rise time is < 0.9 ns (measured in scope and not corrected for the effect of the step generator).

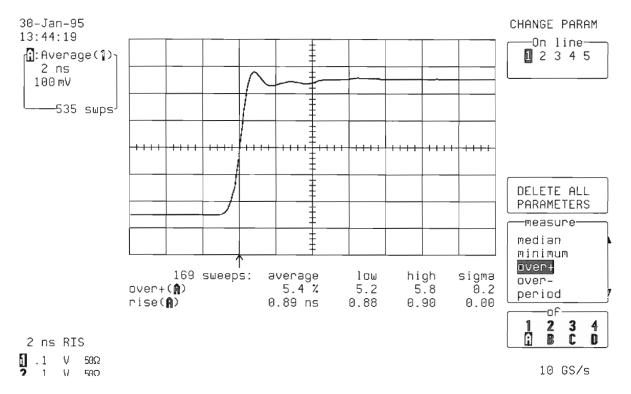

- Set Input Coupling : **DC 1M** Ω
- $^{\circ}$ Terminate the output of the 4969 pulser with a 50 Ω feed through and connect it to Ch1
- After at least 100 sweeps, check that the Average rise time is < 1.5 ns (measured in scope and not corrected for the effect of the step generator).

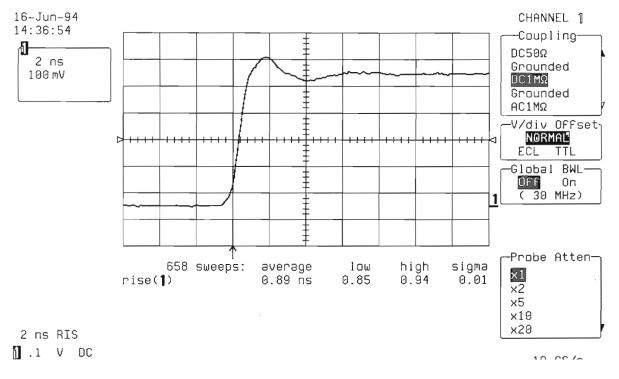

Repeat the above tests for Channel 2, Channel 3 and Channel 4 substituting channel control and input connector, and check as above.

5.14 **Probe Calibrator Verification**

Specifications

Amplitude : 50 mV to $500 \text{ mV} \pm 2 \%$ into 50Ω

: 50 mV to 1 V \pm 2 % into 1 M Ω

Frequency : 500 Hz to 2 MHz $\pm 1 \%$

Probe Calibrator Verification Procedure

Connect the Probe Calibrator output to Channel 1, using a 5 nsec BNC cable

Select : Utilities

Press : Cal BNC Setup Mode : Cal signal Set Frequency : 500 Hz

• Amplitude : $1 \text{ V (500 mV into 50 }\Omega)$

Turn on trace : Ch1

Turn on trace : Cn1
 Display setup : Standard, Persistence off, Dot join on, Single grid

Input Coupling : $DC 50 \Omega$ V/div. offset : Normal Probe atten : **X**1 Input offset : - 250 mV Input gain : 100 mV/div.

■ Trigger setup : Edge Trigger on : 1

 Trigger level : DC 250 mV

Coupling 1 : **DC** Slope 1 : Pos Mode : Normal Holdoff : Off

Timebase : .5 msec/div. Delay : 10 % Pre-Trigger

Cursors/Measure : Parameters Mode : Custom

Change parameters :

On line 1 : Measure ampl of 1 On line 2 : Measure freq of 1


• Check parameters readout : freq (1) = 500 Hz $\pm 1 \%$, and ampl (1) = 500 mV $\pm 6 \%$ (\pm 2 % plus \pm 4 % due to the non linearity of the scope)

Set Cal frequency : 2 MHz Timebase : .2 us • Check that freq (1) is 2 MHz $\pm 1 \%$

^{\square} Repeat test for amplitude of **0.05** V (25 mV into 50 Ω) • Set Cal amplitude : $50 \text{ mV} (25 \text{ mV into } 50 \Omega)$

 DSO Input gain : 5 mV/div.


• Check parameters readout ampl (1) = 25 mV \pm 6 %

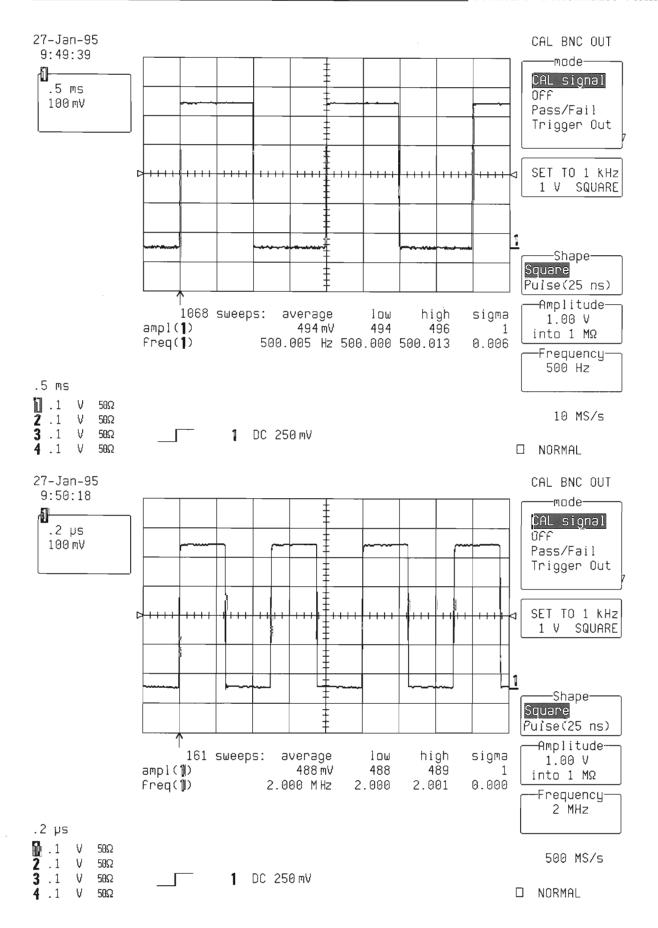

• Repeat the tests for the amplitude of 0.05 V and 1 V into 1 $M\Omega$

Cal amplitude : 50 mV
 Set Input Coupling : DC 1M Ω
 DSO Input gain : 10 mV/div.

• Check parameters readout ampl (1) = 50 mV \pm 6 %

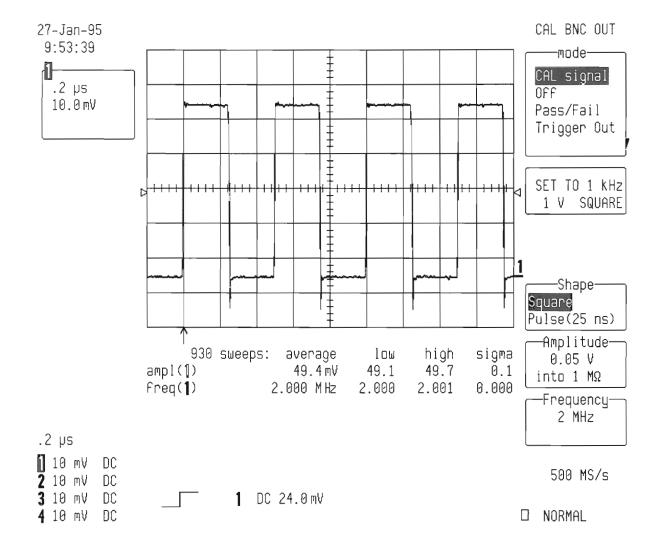

• Set Cal amplitude : 1 V

■ DSO Input gain : 200 mV/div.

• Check parameters readout ampl (1) = 1 $V \pm 6 \%$

5.15 Overload

Specifications

1 Watt into 50 Ω : Overload < 17 seconds

Procedure

Set the DSO as follows:

Display setup : Standard, Persistence off, Dot join on, Single grid

 Input Coupling : $DC 50 \Omega$ V/div. offset : Normal Global BWL : Off Probe atten : X1 Input offset : - 3.5 V Input gain : 1 V/div. Trigger setup : Edge Trigger on : 1


■ Trigger level : DC - 0.04 V

Delay : zero
 Coupling 1 : DC
 Slope 1 : Pos
 Mode : Norm
 Holdoff : Off
 Timebase : 2 sec/div.

Channel Use : 4

Record up to : 1000 samples


- From Tektronix power supply PS5004, apply 7.07 V (1 Watt) to Channel 1.
- Check that the overload trips, within 17 seconds.
- Set Timebase : 5 sec/div.
- From Tektronix power supply PS5004, apply 5 V (.5 Watt) to Channel 1
- Check that the overload doesn't trip for at least 30 seconds.
- Repeat the above tests for Channel 2, Channel 3 and Channel 4 substituting channel controls and input connector, and check as above.

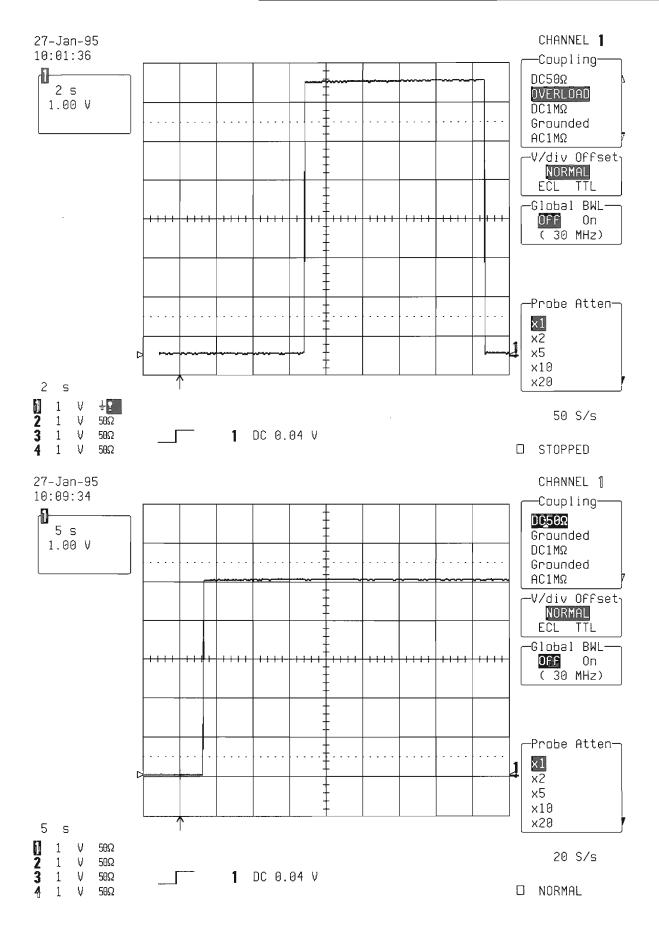

SECTION 6 INTERNAL CALIBRATION and DIAGNOSTICS


6.1 Introduction

- The 9354A/T internal calibration use routines to confirm basic functionality, no test equipment is required to do these test procedures. The **diagnostics menu** is entered by simultaneously depressing the **third** and **fourth** menu push buttons on the right hand side of the CRT and then by depressing the **fifth**.
- To quickly check the performance of the digital storage oscilloscope, select the **calibration diagnostics**.
- Press the **recalibrate completely** button to do a full recalibration of the front end. It is advisable to perform this type of check when the scope is in a stable condition.

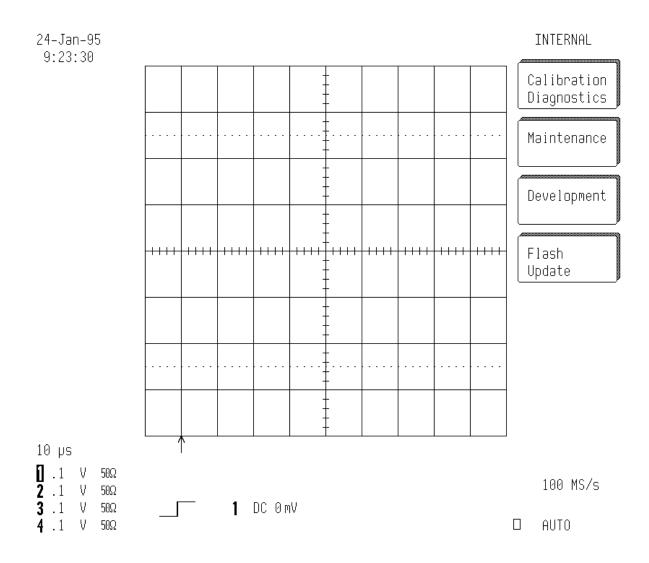

6.2 Diagnostic Summary

- Press diagnostic summary.
- This is a handy tool to perform a quick but comprehensive internal performance check, without touching the acquisition settings. The failures are indicated by channel identifiers.
- If no problem is detected, the fields are left **blank**.

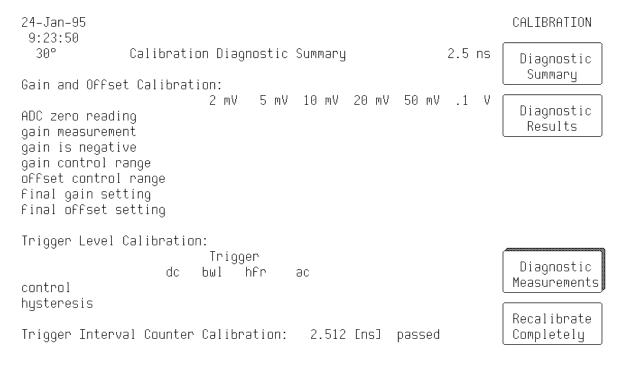

Failures are indicated by channel identifiers. Fields are left blank if no problem detected or a failure occurred previously.

• The **gain** and **offset** calibration results displayed for Channel 1, Channel 2, Channel 3 and Channel 4 are independent of the following conditions:

- Time base
- 50Ω or $1 M\Omega$ input impedance
- BWL on or off
- Variable gain
- Offset
- Trigger mode and coupling
- The internal calibration is checked at **DC 1 M\Omega**, and for the **six gain** settings : 2 mV, 5 mV, 10 mV, 20 mV, 50 mV, .1 V/div.

6.2.1 Gain and Offset Calibration Description

ADC zero reading : Failed to get 0 reading from ADC for some choice of Vgain,

and Cal signal, while varying the Offset

Gain measurement : Failed to measure Gain, the gain was not what was expected.

Gain is negative : Measured a negative Gain or broken channel.

Gain control range : The range of the variable Gain is checked.

¹ Offset control range : The range of the variable Offset is checked.

• Final gain setting : An error is detected if the variable Gain and fix Gain

adjustment do not converge to the desired Gain.

Final offset setting : An error is detected if the 3 Offset calibration points do not

lie on a straight line.

6.2.2 Trigger Level Calibration

■ The control of the trigger hysteresis is done in the trigger mode DC, BWL on, HFr, and AC. If an error has occurred 1, 2, 3, 4 or E is displayed corresponding to Channel 1, Channel 2, Channel 3, Channel 4 or External.

Control
 Failed if no transition of discriminator observed when


stepping the Threshold level.

Hysteresis : Failed to get correct Hysteresis.

6.3 Diagnostic Results

6.3.1 Gain Curves

- Press diagnostic results
- Select results for gain
- Press recalibrate completely
- Select show results for Channel 1
- Variable gain range, checked by software must be better than 0.95 to at least 2.75. With regards to the illustration, the lower portion of the curve must extend below 0.95 limit, and the upper portion above the 2.75 limit.
- If this is not true the Gain control range summary shows a violation for Channel 1.
- The maximum and minimum gain factors are displayed.

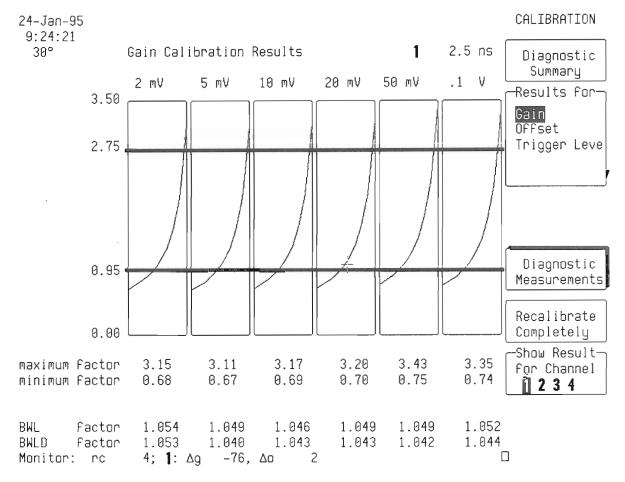


Repeat the test for Channel 2, Channel 3 and Channel 4

6.3.2 Offset Curves

Select results for Offset, and show result for Channel 1

- The curves should be above the positive limits + 0.12 V / + 1.2 V and below the negative limits 0.12 V / 1.2 V.
- For the sensitivities 2 mV, 5 mV/div. a 1/10 attenuator is used, the limits are \pm **0.12 V**.
- For the sensitivities 10 mV, 20 mV, 50 mV, 0.1 V/div. the limits are \pm 1.2 V.
- The maximum and minimum offset is ± 1.2 V. The calibration verifies that the DAC can reach this value.
- The intrinsic value represents the offset in mV that should be applied to get zero offset to the ADC.


NB: ΔBWL is the difference between BWL on and BWL off.

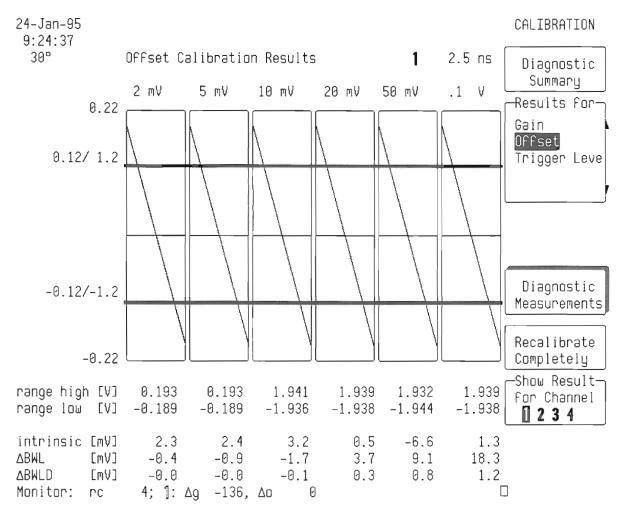

Repeat the test for Channel 2, Channel 3 and Channel 4.

6.3.3 Trigger Level Calibration

- Select results for trigger level
- For Channel 1, Channel 2, Channel 3 and Channel 4 the hysteresis value for trigger DC, BWL, HFR, AC is given in **divisions**. The trigger range is ± 5 div. for the steep curve. The boxed region is zoomed to give the two lines with a vertical scale of ± 1 div. The external trigger hysteresis is given in Volt. The offset of the positive curve relating trigger threshold to DAC setting is given.
- Press recalibrate completely
- Select show result for Channel 1
- The DC hysteresis in div. should be \pm 0.3 div. \pm 0.05 div.
- Repeat the test for Channel 2, Channel 3 and Channel 4.

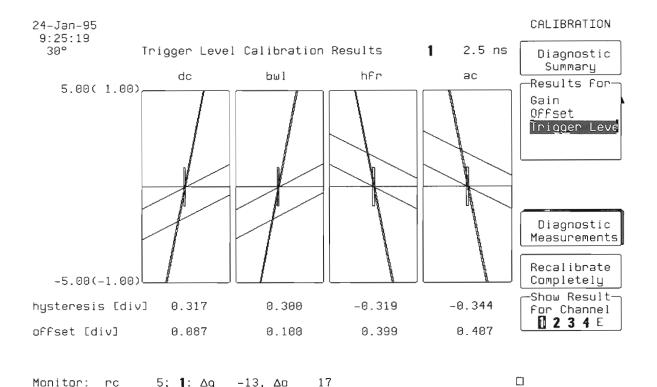


17

Select show result for External trigger

5; **1**: ∆g


• The hysteresis in Volt should be \pm 0.035 V \pm 0.01

-13, ∆o

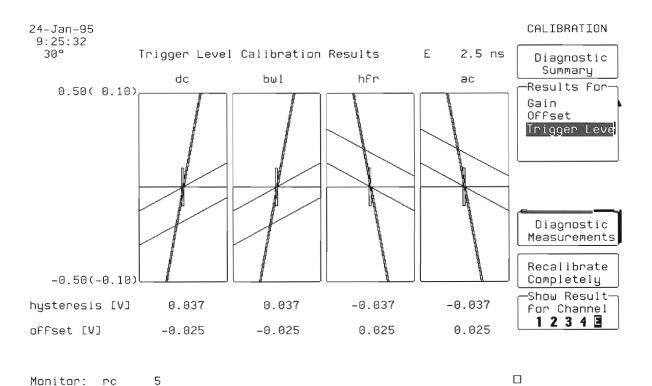

6.3.4 Integral Linearity

- Press diagnostic measurements
- Select Individual Channels

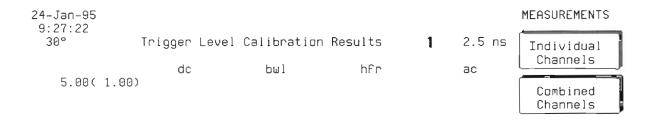


-5.00(-1.00)


hysteresis [div] 0.317 0.300 -0.319 -0.344

offset [div] 0.087 0.100 0.399 0.407

- Select integral linearity
- Measure for Channel 1

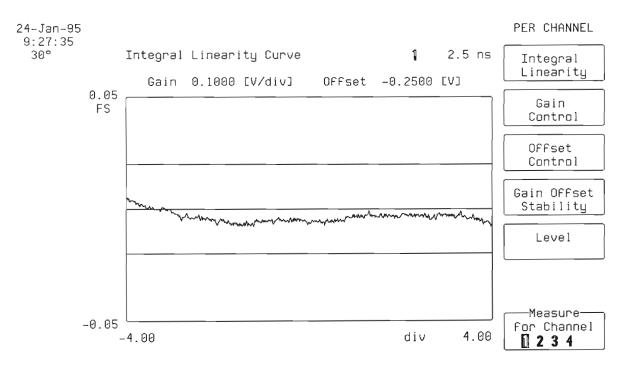


- The integral linearity curve should be within the ± 0.05 * FS bars, for offset = 0.0 V.
- Repeat the test for Channel 2, Channel 3 and Channel 4.
- Press level
- Measure for Channel 1
- The three plots show raw ADC data displayed around their mean value for 3 different CAL levels.
- The data should be narrow and random.
- The theoretical level is shown by the second horizontal line which should be near (<4 steps) to the measured value for Offset = 0.

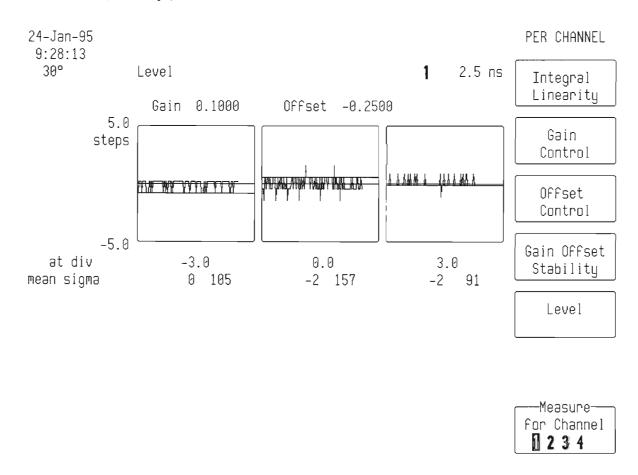

• Repeat the test for Channel 2, Channel 3 and Channel 4.

6.4 Board Test Results

- From the Internal menu press Maintenance
- Select Board Test Results

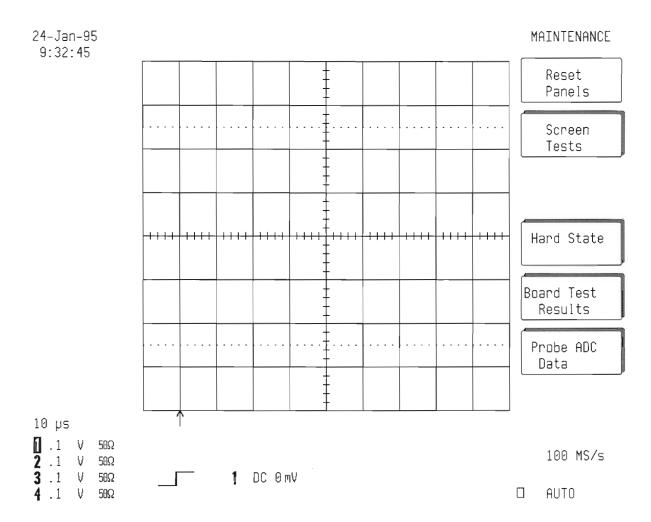

- This menu displays the board calibration measured at the factory, the calibration values are loaded in the I2C Prom.
- The header block indicates the following information:
- The test version: i.e. 168
- The revision of the printed circuit board : i.e. Rev B
- The engineering change order level: i.e. ECO 1002
- The work order number: i.e. WO 9452-0056
- The tested date : i.e. tested 1995-01-10 it should be : \geq 1993-xx-xx.

- If the date says 1990-04-01 it is a sign that the I2C prom on the main board can not be read correctly.
- The gain, offset, level, timing, delay values shown in this menu are used to perform the internal calibration of the scope.

24-Jan-95 9:33:07 Board Test

Header: block lengths 20 32 14 Test version 168 4 chans Rev: B, ECO 1002, WO 9452-0056, Tested: 1995-01-10 10:15

CAL levels: (E68F,-2000mV) (8015, 0mV) (199A, 2000mV)

EXT trigger: pas. (AA78, -410mV) (56F8, 418mV) neq. (A6C8, -410mV) (5340, 418mV)

EXT/10 attenuator: 10.004 Delay correction: 20.00 ns

ADC control: clock period gain DAC offset DAC

2.00 ns 9c 93 2.50 ns 78 7f 5.00 ns 8c 6b

Inter channel delay: 0 ps

ADC control: clock period gain DAC offset DAC

2.00 ns 9d 91 2.50 ns 85 86 5.00 ns 88 7b

Inter channel delay: 0 ps

ADC control: clock period gain DAC offset DAC

2.00 ns 96 8a 2.50 ns 7c 81 5.00 ns 80 5f

Inter channel delay: 0 ps

ADC control: clock period gain DAC offset DAC

2.00 ns 93 87 2.50 ns 7a 7a 5.00 ns 88 65

Inter channel delay: 0 ps

6.5 Probe Bus Verification

- From the Internal menu press Maintenance
- Select probe ADC data
- This menu displays the probe bus and probe ring status.
- With no probe connected to the input, check that the value in the first column is 251 ± 2 for Channel A, B, C, D, and Ext.

```
24-Jan-95
                                                                     Probe Data
9:35:01
              value
                       limits interrupts
Channel A
             252 253 [245,255]
Channel B
             252
                  252 [245, 255]
                                    0
Channel C
             252
                  252 [245,255]
                                    0
Channel D
             252 252 [245,255]
                                    0
Channel EXT
             252 252 [245,255]
                                    0
Channel CAL
             253 253 [ 0,255]
                                    P
                                    0
Channel MON
             125 125 [ 73, 79]
Channel T
                                    3
              93
                   96 [ 90,102]
                                         Temperature 30°C
```

- Connect a AP020 LeCroy active probe to Channel 1 and check that:
- The probe is identified on physical Channel A
- The Channel A value indicates in the first column has changed to 21 ± 2
- An interrupt has been detected on Channel A

```
24-Jan-95
                                                                      Probe Data
 9:36:19
                       limits interrupts
              value
Channel A
                   21 [
              21
                         6, 26]
                                     1
                                          AP020
    01 08 00 41 50 30 32 30 04 06
                                   93 25 01 59 11 06 41 20 00 00
    15 06 3d cc cc cd 21 0a 40 19
                                   ec da 38 99 f3 9d 22 0b c0 00
    00 00 40 00 00 00 01 24 07 01
                                    46 42 01 00 34 06 00 10 00 42
    36 04 02 04 41 06 32 04 48 F5
                                   FF
Channel B
             252 252 [245,255]
                                    0
Channel C
             252
                  252 [245, 255]
                                     0
Channel D
             252
                  252 [245, 255]
                                     0
Channel EXT
             252 252 [245,255]
                                    0
Channel CAL
             253
                  253 [ 0,255]
                                     0
                                     0
Channel MON
            125
                 125 [ 73, 79]
                                     3
Channel T
              93
                   96 [ 90,102]
                                          Temperature 30°C
```

- Repeat the test for Channel 2, Channel 3, Channel 4 and External Trigger.
- Check that the probe is identified on physical Channel B, C, D, or Ext.
- Connect a LeCroy passive probe with probe ring i.e. PP002 to Channel 1 and check that:
- The probe X10 is identified on physical Channel A
- The Channel A value indicates in the first column has changed to 195 ± 2
- An interrupt has been detected on A

```
Probe Data
24-Jan-95
9:37:48
             value
                     limits interrupts
            195 194 [173,204]
                                        x10
Channel A
            252 252 [245,255]
Channel B
                                   0
                                   9
Channel C
            252 252 [245,255]
Channel D
            252
                 252 [245,255]
                                   0
Channel EXT 252
                 252 [245,255]
                                   0
Channel CAL
            253
                 253 [ 0,255]
                                   0
                 125 [ 73, 79]
Channel MON
            125
                                   0
Channel T
             93
                  96 [ 90,102]
                                   3
                                        Temperature 30°C
```

- Repeat the test for Channel 2, Channel 3, Channel 4 and External Trigger.
- Check that the probe is identified on physical Channel B, C, D, or Ext.

24-Jan-95 9:38:54							Probe Data
	val	ue	limits	interrupts	5		
Channel A	252	252	[242,255]	12			
Channel B	252	252	[245,255]	0			
Channel C	252	252	[245, 255]	0			
Channel D	252	252	[245,255]	0			
Channel EXT	195	193	[173,204]	1	x10		
Channel CAL	253	253	[0,255]	0			
Channel MON	125	125	[73, 79]	0			
Channel T	93	96	[90,102]	3	Temperature	30°C	

- Connect a LeCroy passive probe with probe ring PP012 to Channel 1 and check that:
- The probe X100 is identified on physical Channel A
- The Channel A value indicates in the first column has changed to 165 ± 2
- An interrupt has been detected on A


24-Jan-95 9:38:15							Probe Data
	val	ue	limits	interrupts	5		
Channel A	165	165	[140,167]	10	×100		
Channel B	252	252	[245, 255]	0			
Channel C	252	252	[245,255]	l 0			
Channel D	252	252	[245,255]	0			
Channel EXT	252	252	[245,255]	1 0			
Channel CAL	253	253	[0,255]	0			
Channel MON	125	125	[73, 79]	1 0			
Channel T	93	96	[90,102]	3	Temperature	30°C	

- Repeat the test for Channel 2, Channel 3, Channel 4 and External Trigger.
- Check that the probe is identified on physical Channel B, C, D, or Ext.

6.6 PP092 Verification

Channels can be combined to achieve more memory and more sampling rate by interleaving the ADC's in time. It is possible to achieve 2 GS/s and up to 8M record length (9354AL) by means of a special adaptor call PP092.

- Connect the PP092 adaptor to Channel 2 and Channel 3 and check that :
- The PP092 is identified on Channel 2
- Channel 1, Channel 3 and Channel 4 are disabled
- Channel 2 is set to DC 50 Ω , X2
- Sampling rate is 2 GS/s
- Connect the Probe calibrator output to PP092 input using a 5 nsec BNC cable.
- Set Cal frequency to 2 MHz and Amplitude to 1 V into 1 MΩ
- Turn on trace 2 and check that:

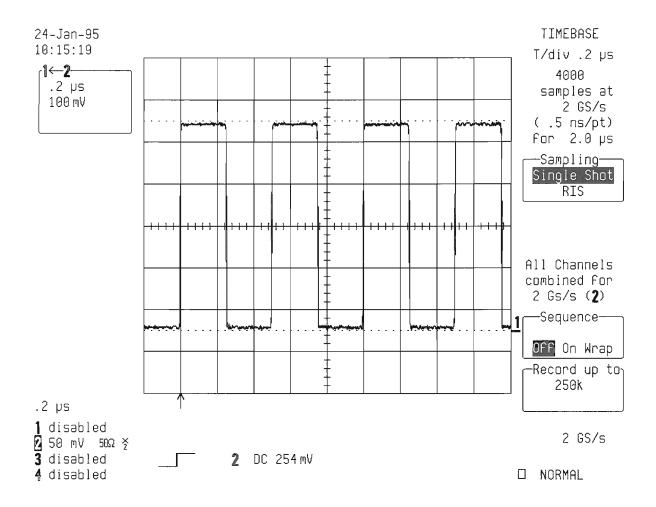

- A Square wave of 500 mV is displayed on Channel 2
- Turn on trace 1, 3, 4 and check that:
- A Square wave of 500 mV is displayed on Channel 1, Channel 3, and Channel 4.

SECTION 7 MAINTENANCE

7.1 Introduction

This section contains information necessary to disassemble, assemble, maintain, calibrate and troubleshoot the LeCroy 9354A, 9354AM, 9354AL, 9354T and 9354TM digital oscilloscope.

7.2 Disassembly and Assembly Procedure

The disassembly and assembly procedures detailed below refer to the assembly and disassembly diagram 7.2.3, and the view of figures 7.1, 7.2, 7.3, 7.4, 7.5 & 7.6. Please study the diagram and figures before attempting disassembly.

WARNING

Before removing any parts from the LeCroy 9354A/T, be sure to read carefully the instructions referring to those parts, noting any precautions needed to avoid problems caused by mechanical behaviour, high voltage supplies, etc.

CAUTION

The usual precautions against static electricity are required (see 1.10)

7.2.1 Removal of the Upper Cover (5.9)

The top cover (5.9) is secured by two M4x5 screws (5.11) on both sides of the front panel assembly (2), and by two M4x8 screws (5.10) on the rear panel (3). Remove the screws and carefully slide the cover off the unit to the rear. Removal of the top cover gives access to the boards and parts listed in section 7.2.3.

7.2.2 Removal of the PS9351 Power Supply (4)

WARNING

Ensure the line cord is disconnected. Remove the following:

- □ Top cover (7.2.1).
- One M4X8 screw (5.7) from left side of the bottom cover (1.1).
- Two M4X8 screws (5.1) from left side of the rear panel (3).


Disconnect the following:

- □ Base card power cable from main board connector J1/J2 (see figure 7.7).
- PS9351 line input cable (AC line, neutral, ground) from line input module (3.7).
- Auxiliary power cable from optional internal graphic printer connector J4 (see figure 7.7).

The power supply can now be removed vertically from the oscilloscope.

7.2.3 Disassembly and Assembly Diagram

Disassembly: If it becomes necessary to replace a board or a part, use the disassembly diagram to disassemble the unit. Any board can be removed if items higher in the diagram and connected by a line are already out.

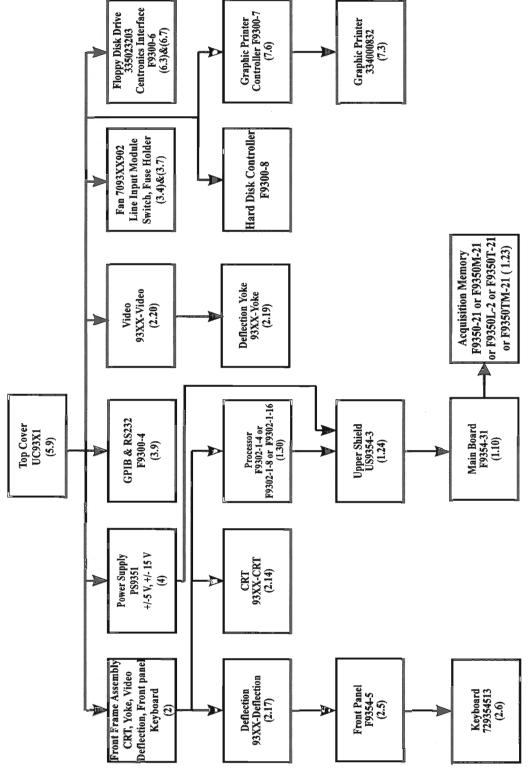

Assembly: Reassemble the unit in the reverse order.

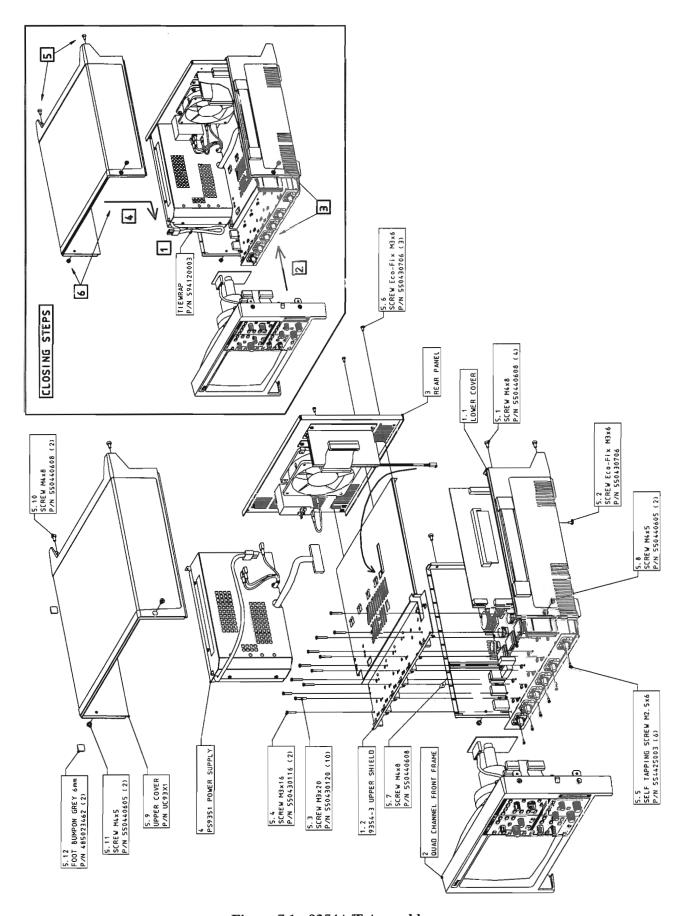


Figure 7.1: 9354A/T Assembly

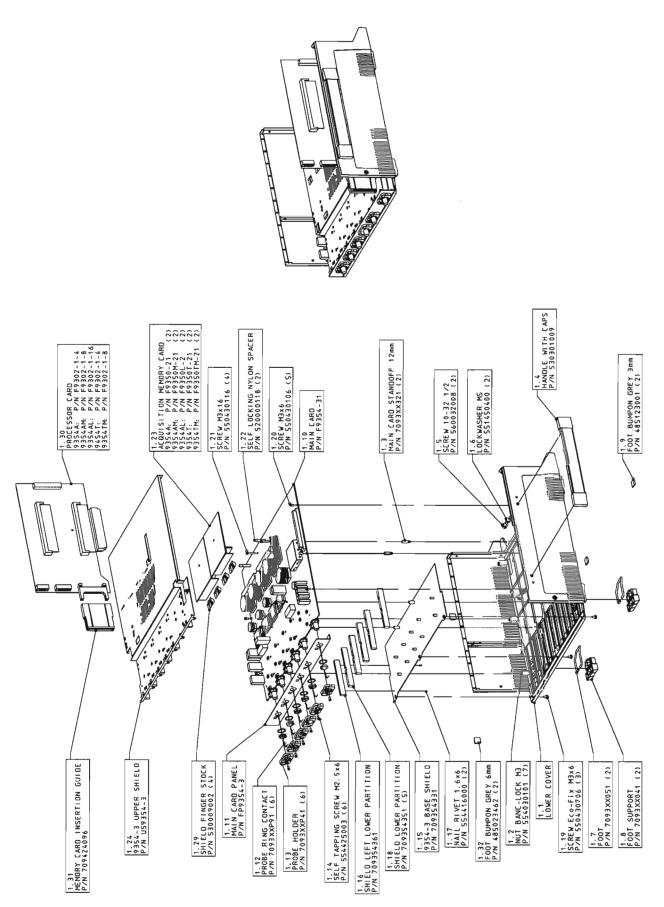


Figure 7.2: 9354A/T Lower Cover Assembly

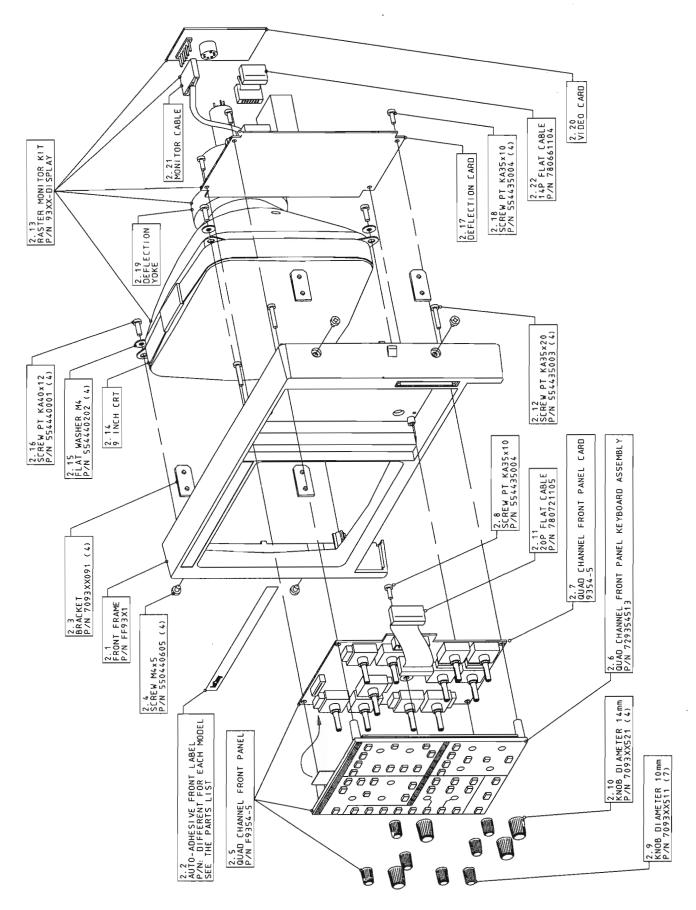


Figure 7.3: 9354A/T Front Frame Assembly

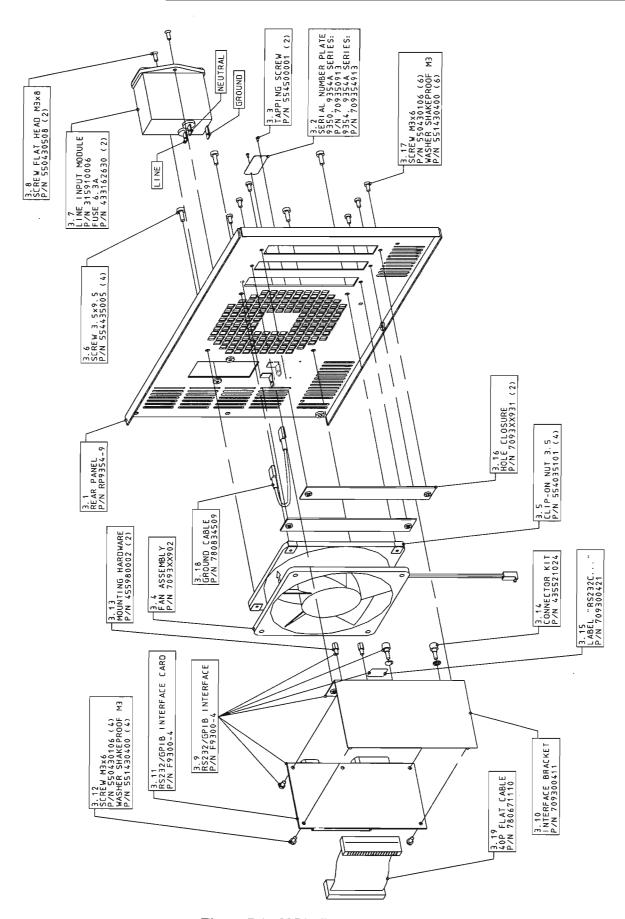


Figure 7.4: 9354A/T Rear Panel Assembly

7.2.4 Removal of the F9300-4 GPIB/RS232 Interface (3.9)

The GPIB/RS232 interface (3.9) is vertically mounted on the rear panel (3.1).

Remove the following:

- Top cover (7.2.1).
- Two M3x6 screws (3.17) and washers from the rear panel (3.1).
- Disconnect the flat cable (3.19) from the processor board (1.30) connector J5.

The GPIB/RS232 board can be removed forward from the rear panel.

7.2.5 Removal of the Fan (3.4)

Remove the following:

- Top cover (7.2.1)
- Four screws (3.6) and nuts (3.5) from the rear panel (3.1).
- Disconnect the fan power cable from the main card F9354-31 connector J3.

The fan (3.4) part number: 7093XX902 can be removed from the unit.

CAUTION

Note the air flow, the fan extracts air from the unit and expels it.

7.2.6 Removal of the Line Input module (3.7)

WARNING

Disconnect the power cord.

Remove the following:

- □ Top cover (7.2.1).
- Two screws (3.8) from the rear panel.
- Disconnect the power cable from the power supply connector.
- Disconnect the earth cable (3.18).

The fuse holder assembly (3.7) can be removed from the rear panel (3.1).

7.2.7 Removal of the 93XX-Video (2.20)

- \blacksquare Remove the top cover (7.2.1).
- Disconnect the ground cable from CRT (black wire)
- Disconnect the monitor cable (2.21) from the deflection board, connector W301 & W302

Ease the video board (2.20) carefully toward the back of the DSO, until it is free.

7.2.8 Removal of the 93XX-Yoke (2.19)

- Remove the top cover (7.2.1).
- Remove the 93XX-video board (7.2.7)
- Disconnect the cable from the deflection board connector W201.
- Loose the screw on the yoke ring holder.

The deflection yoke (2.19) can be removed from the cathode ray tube (2.14).

7.2.9 Removal of the front frame Assembly (2)

Remove the following:

- □ Top cover (7.2.1)
- Two screws (5.8) that secure the front frame assembly (2) to the lower cover (1.1).
- Disconnect the front panel flat cable (2.11) from the processor (1.30) connector J4.
- Disconnect the deflection flat cable (2.22) from the processor board (1.30) connector J6.

The front frame assembly (2) with the CRT (2.14), yoke (2.19), video (2.20), deflection (2.17), front panel (2.7) and keyboard (2.6) can with care be removed forward from the unit.

CAUTION

Hold the CRT very carefully, or place soft padding under it.

7.2.10 Removal of the 93XX-Deflection (2.17)

The deflection board (2.17) is situated to the back of the front panel (2.5).

Remove the following

- Top cover (7.2.1).
- Front frame assembly (7.2.9).
- Disconnect the monitor cable (2.21) which lead to the video board (2.20), connector W301 and W302.
- Disconnect the cable from the deflection yoke, connector W201.
- Disconnect the EHT plug from the receptacle at the right side of the CRT (2.14).

WARNING

Touch the free end of the EHT cable to the ground, this ensures that no significant charge remains. The CRT must be discharged similarly, using a tool or a long screw driver which is first placed to the ground and on the CRT receptacle.

Remove the four M35x10 screws (2.18) that secure the deflection board to the plastic front frame.

The board (2.17) can now be removed from the unit.

7.2.11 Removal of the 93XX-CRT (2.14)

It is necessary to remove the front frame assembly (7.2.9). The CRT is secured to the plastic front frame by four screws (2.16).

- □ Remove the 93XX-video (7.2.7).
- Remove the 93XX-yoke (7.2.8).
- Disconnect the EHT cable from the deflection board. Discharge the tube.
- Remove the four screws.

The CRT can now be removed from the front frame.

WARNING

Use care when handling the CRT. Avoid striking it on any object which may cause the tube to implode. Store the cathode ray tube face down on a soft surface. To avoid electrical shock the CRT should be discharged after the 9354A/T oscilloscope is powered OFF. After disconnecting the EHT plug, ground the CRT anode lead to the metallic display support, repeat the operation to fully dissipate the charge.

7.2.12 Removal of the F9354-5 Front Panel (2.5)

Remove the following:

- □ Upper cover (7.2.1).
- □ Front frame assembly (7.2.9).
- □ 93XX-deflection board (7.2.10).
- Four screws (2.12) that secure the front panel.

The front panel (2.5) with the keyboard (2.6) can be removed forward from the unit.

7.2.13 Removal of the Front Panel Keyboard (2.6)

Remove the following:

- Upper cover (7.2.1).
- Front frame assembly (7.2.9).
- 93XX-deflection board (7.2.10).
- F9354-5 front panel (7.2.12).
- The 11 rotary knobs (2.9 and 2.10). Take great care of the soft plastic
- One screw (2.8) that secures the keyboard to the front panel.
- Disconnect the flat ribbon cable from the front panel connector J2, and remove the keyboard P/N: 729354513.

CAUTION

When removing or installing the keyboard or the front panel, be careful of the fragile flat ribbon cable and connector.

~	_	3.6 1 .
Section	7	Maintenance
Section	,	Mannenance

7.2.14 Removal of the Processor (1.30)

The processor F9302-1-4 or F9302-1-8 or F9302-1-16 board is located along the right side of the instrument.

Remove the following:

- Top cover (7.2.1).
- Front frame assembly (7.2.9).
- Disconnect the flat cable (3.19) from the F9300-4 GPIB interface connector J5

The processor can be removed vertically from the main card (1.10) F9354-31 connector J1

CAUTION

Static electricity can damage components (RAM, Eproms, microprocessor...). Antistatic precautions are required.

7.2.15 Removal of the F9354-31 Main Card (1.10)

Remove the following:

- Top cover (7.2.1).
- Front frame assembly (7.2.9).
- Power supply (7.2.2).
- Processor (7.2.14).

The main board with the upper shield (1.2) is horizontally mounted to the lower case cover (1.1).

- Remove the ten M3x20 screws (5.3), two M3x6 (5.4) and six M2.5x6 (5.5) that secure the upper shield (1.2) to the main board and front panel.
- Remove the two M4x8 (5.1) and one M3x6 (5.2) that secure the rear panel assembly (3) to the lower cover (1.1)
- Disconnect the fan cable from connector J3.

The upper shield (1.2) attached to the rear panel (3) can be removed forward from the board.

Remove the five M3x6 screws (1.20), four M3x16 (1.21) and three M3x6 flat head screws (1.19) that secure the board to the lower cover (1.1).

The main board F9354-31 (1.10) with acquisition memory card F9350/M/T-21 (1.23), base shield (1.15) and card panel (1.11) can be removed from the scope.

CAUTION

Antistatic precautions are required.

7.2.16 Removal of the Handle (1.4)

The handle with two black end caps is secured to the right side of the lower cover (1.1) by two screws (1.5) and washers (1.6).

■ Remove the upper cover (7.2.1), and processor board (7.2.14).

The handle can be removed from the lower case.

7.2.17 Removal of the Foot Support (1.8)

The two foot supports are clipped on the lower cover (1.1).

 Remove the foot (1.7) or the support (1.8) by inserting a small flat screwdriver under the support

7.2.18 Removal of the 93XX-FD01 Floppy Disk Drive Option

- □ Remove the upper cover (7.2.1).
- Disconnect the flat ribbon cable from the F9300-6 interface (see figure 7.6).
- Remove the two M3x6 screws that secure the floppy drive support to the upper cover.
- Remove the support 70FD01021 and frame 70FD01031 from the cover.
- Remove the four M2.5x4 screws that secure the floppy to the support

The floppy disk (6.3) drive can be removed from the frame

7.2.19 Removal of the 93XX-GP01 Graphic Printer and F9300-7 Controller Option

- Remove the upper cover (7.2.1).
- Disconnect the power cable (780210030) from the PS9351 power supply (see figure 7.7).
- Disconnect the flat ribbon cable (780791604) from the F9300-7 controller (see figure 7.7).
- Disconnect the flat ribbon cable (780721022) between the F9300-6 interface and F9300-7 controller.
- Remove the four M3x6 screws that secure the F9300-7 controller to frame (70GP01031).
- Remove the F9300-7 controller
- Remove the two M3x6 screws that secure the printer to the frame

The graphic printer (7.3) can now be removed from the upper cover.

7.2.20 Removal of the F9300-6 Centronics Interface Option

- Remove the upper cover (7.2.1).
- □ Remove the two M3x6 screws from the rear panel
- Disconnect the flat cable from the F9300-4 GPIB/RS232 board (see figure 7.6 or 7.7).

The Centronics interface board can be removed forward from the rear panel.

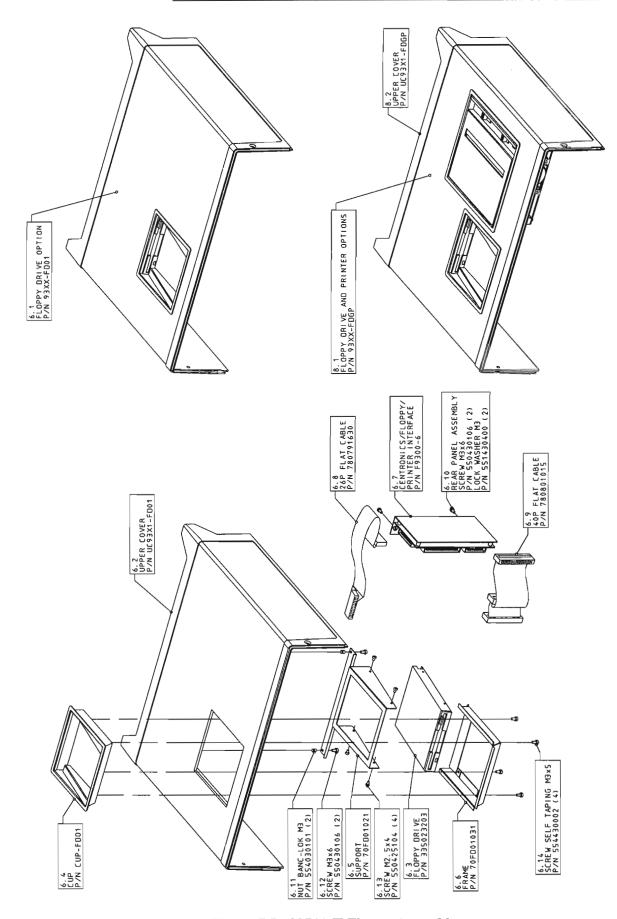


Figure 7.5: 9354A/T Floppy Assembly

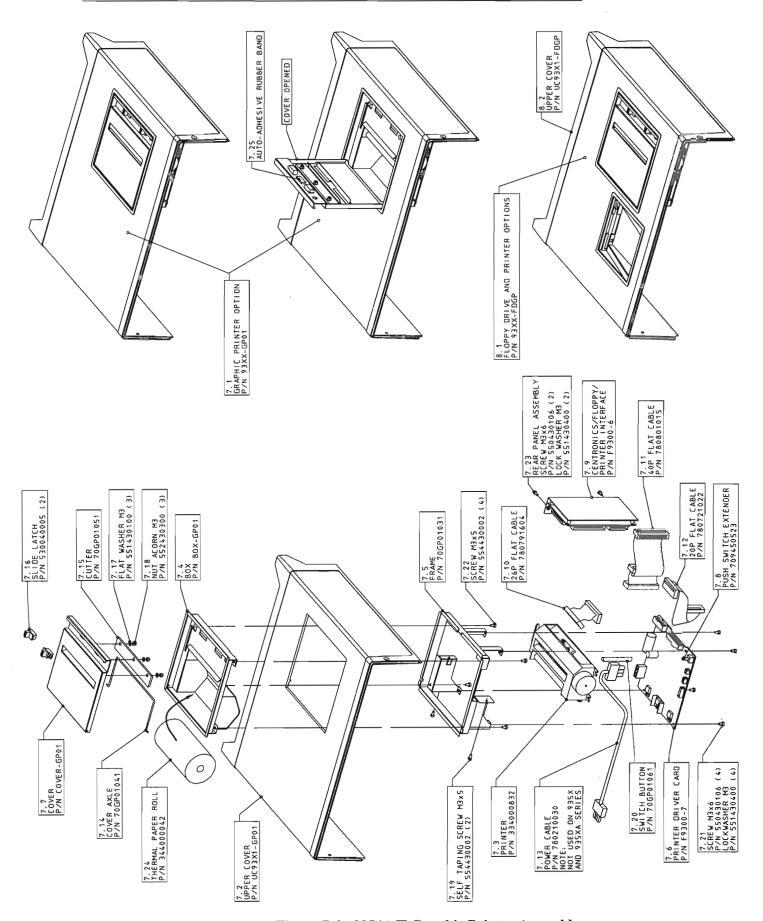


Figure 7.6: 9354A/T Graphic Printer Assembly

7.3 Software Upgrade Procedure

F9302-1-X processor board has one 8MB Flash Prom which contains the program memory and the character font used by the graphic processor of the raster scan display.


After any software change, a general instrument reset is mandatory. Simultaneously press the autosetup button, the top menu button and the return button.

7.3.1 Upgrading Firmware

LeCroy Corporation has a policy of continually improving and upgrading its products.

The instrument is equipped with Flash Prom on processor board, the Software is upgraded to the latest version using the Memory Card interface.

- Insert one Memory card with latest firmware revision, and power on the scope.
- The internal menu is entered by simultaneously depressing the third and fourth menu push buttons on the right hand side of the CRT and then by depressing the fifth.

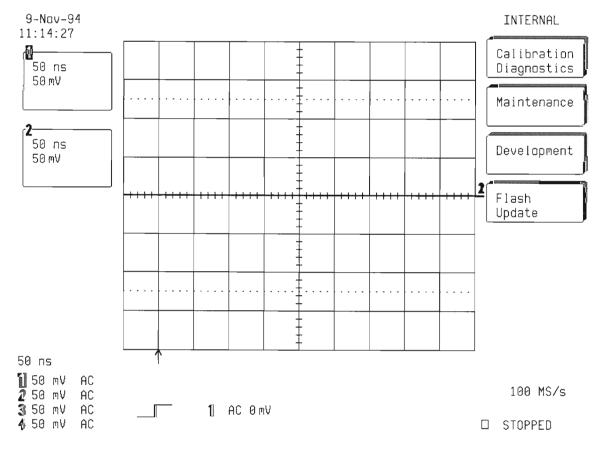

• Select " Flash Update " and push twice " Update Program ".

The Software is then downloaded to the Flash Prom on the processor board.

30-Nov-94 9:51:00 FLASH UPDATE

Update Program

Warning:

Reprogramming the flash memory is a procedure to be performed by qualified service personnel.

Update Loader

Any loss of power during the update process could cause the scope to require factory service.

Update Both

The update process requires a LeCroy supplied memory card which contains the necessary information to update your scope software.

30-Nov-94 9:51:52 Program transferred to Flash memory without error

FLASH UPDATE

Update Program

FLASH UPDATE SUCCESSFUL:

The flash memory reprogramming process is complete and was successful.

Please cycle the power to the scope to start the updated code.

Update Loader

Update Both

7.3.2 Changing Software Options

The software option selection GAL is located on the processor board at location A49. Insert or replace the GAL to select new options.

Make sure that the orientation notch is correctly aligned with the PCB.

7.3.3 Software Option Selection GAL

The following software options are available: (see section 2)

WP01 Advanced Math package WP02 Basic FFT package CARD Memory card

OPTIONS			GAL Description	
Memory Card	WP02	WP01	CLE XXX-R	
			XXX = Software option,	
			R = Release	
no	no	no	GAL Not Necessary	
no	no	yes	CLE 001-A	
no	yes	no	CLE 002-A	
no	yes	yes	CLE 003-A	
yes	no	no	CLE 200-A	
yes	no	yes	CLE 201-A	
yes	yes	no	CLE 202-A	
yes	yes	yes	CLE 203-A	

7.3.4 Processor Board Exchange Procedure

The replacement board is supplied without any options. Therefore the existing GAL (Loc A49) must be transferred from the faulty board to the new board. After upgrading firmware or changing the software option, check that the scope boots correctly. Then check in the system summary, by using the show status button on the front panel, the software version, software options and serial number.

The serial number of the 9354A/T oscilloscope is loaded in the real time clock memory which is battery backed up. If it becomes necessary to replace the processor board, the serial number must be loaded in the memory of the new board by using LeCroy program "LeCalsoft" under GPIB remote control.

To run "LeCalsoft " type SKP.exe, in the main menu type S, and follow the instructions, use five digits to enter the serial number (i.e. 02175).

16-Jan-95 STATUS 16:24:16 Acquisition System Serial Number 935402175 Text & Times Waveform Soft Version 9354A_ 06.0.0 Memory Used Wednesday, November 23, 1994 5:14 PM (build 43) Soft Options WP01 WP02 CKIO MC01 Hard Options MORE VERSION GPIB R232 CLBZ CPU3 I2C INFORMATION

7.4 Equipment and Spare Parts Recommended for Service

7.4.1 Equipment

The following equipment is needed to provide the technician access to the 9354A/T subassemblies during repair and calibration (see also Performance Verification section 5).

Instrument	Qty	Specifications	Recommended
Signal	1	Frequency: 500 KHz to 1	Marconi 2030
Generator		GHz	
(sine wave)		Accuracy: 0.001 %	
		Amplitude: 1 V peak to peak	
Signal	1	Frequency: 5 KHz	LeCroy LW420
Generator		Amplitude: 6 V peak to peak	
(sine wave)			
DC precision	1	Amplitude: 10 V, DC	Tektronix
Power Supply		Accuracy: < 0.1 %	PS5004
Digital	1	5 digits	Keithley 199
Multimeter			
Fast pulser	1	Rise time < 500 psec	LeCroy 4969
Digital scope	1	Bandwidth 350 MHz	LeCroy 9310A
Cable	1	BNC, 50 Ω, length 20 cm	Suhner
		(7.87 inches)	
Cable	1	BNC, 50 Ω, length 100 cm	Suhner
		(39.37 inches)	
BNC T	1	BNC, 50 Ω, T adapter	Suhner
adapter			

7.4.2 Spare Parts

In order to make the repair of 9354A/T DSO's series at board level, a minimum stock of boards is at least one each:

F9302-1-4 : Processor board for 9354A and 9354T
 F9302-1-8 : Processor board for 9354AM and 9354TM

■ F9302-1-16 : Processor board for 9354AL

F9350-21 : Acquisition memory for 9354A
 F9350M-21 : Acquisition memory for 9354AM
 F9350T-21 : Acquisition memory for 9354T
 F9350TM-21 : Acquisition memory for 9354TM
 F9350L-2 : Acquisition memory for 9354AL

• F9354-31 : Main board for 9354A, 9354AM, 9354AL, 9354T & 9454TM

■ F9300-4 : GPIB/RS232 interface

■ F9354-5 : Front panel with keyboard

■ 93XX-Display : Raster monitor kit

■ PS9351 : Power supply

If the unit is equipped with the 93XX-FD01 option:

■ F9300-6 : Floppy, Graphic printer, Centronics Interface

■ 335023203 : Floppy disk drive

If the unit is equipped with the 93XX-GP01 option:

■ F9300-6 : Graphic printer, Floppy, Centronics Interface

■ F9300-7 : Graphic printer controller

■ 334000832 : LPT5446 Seiko Graphic printer

If the unit is equipped with the 93XX-HD01 option:

■ F9300-8 : Hard disk Interface ■ HDD02 : Hard disk drive

The other parts (fan, fuse holder, scope handle, covers, rear panel...) are not on the above list because they are reliable parts and the probability of failure is very low.

7.5 Troubleshooting and Flow Charts

7.5.1 Introduction

The troubleshooting information contained in this section is intended for use by qualified personnel having a basic understanding of electronics (analog and digital). In order to simplify servicing and minimize downtime, the following list of possible symptoms, likely causes, and troubleshooting steps have been prepared.

The first step in troubleshooting is to check for obvious items like blown fuses. The power supply is the next item to check before proceeding to more detailed troubleshooting, since noise or low power supply voltages can cause a variety of digital and analog problems.

7.5.2 Line Voltage Autoranging


The 9354A/T oscilloscope operates from a 115 V (90 to 130 V) or 220 V (180 to 260 V) normal power source at 47 Hz to 63Hz.

No voltage selection is required since the instrument automatically adapts to the line voltage which is present. The instrument operates at line frequencies up to 440 Hz.

7.5.3 Initial Troubleshooting Chart


Most procedures in this section will allow troubleshooting down to the **BOARD LEVEL**.

Defective circuit boards will be repaired or exchanged by the regional LeCroy service office or the local representative (see section 1.4).

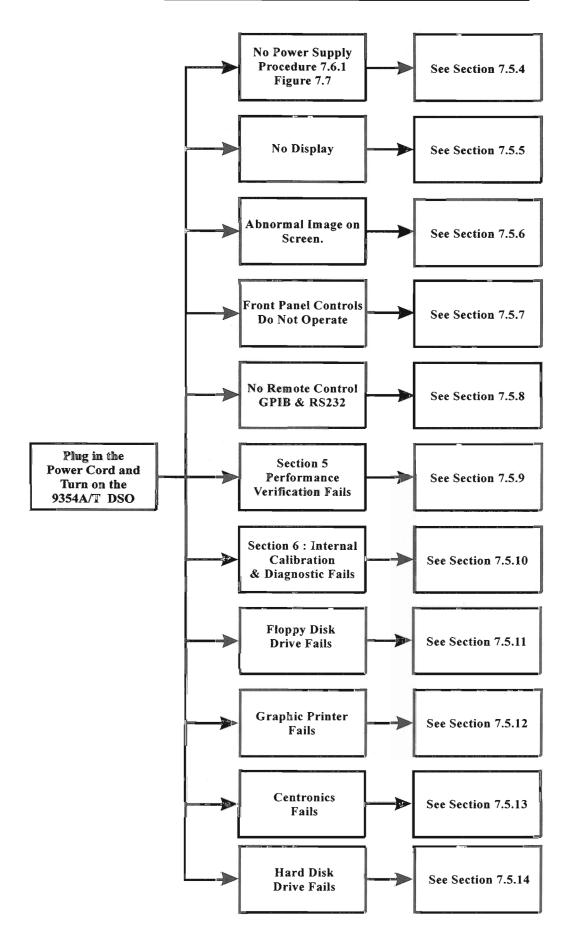

Page 7-19

7.5.4 No Power Supply

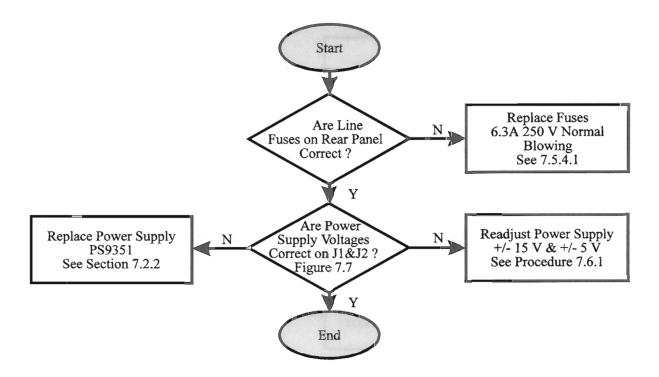

7.5.4.1 Line Fuses Replacement

The power supply of the oscilloscope is protected against short circuits and overload by means of two 6.3A / 250 V fuses located above the main plugs.

WARNING


Disconnect the instrument from the power line and from other equipment before replacing fuses.

To replace line fuses, proceed as follow:

- Turn off the power and disconnect the line cord from the instrument
- Open the fuse box by inserting a small flat screwdriver under the plastic cover and remove the fuse carrier from the holder
- Remove the 6.3 amp fuse and replace it with the proper type:


6.3 amp/250 V, normal blowing. LeCroy part number: 433 162 630

7.5.5 No Display

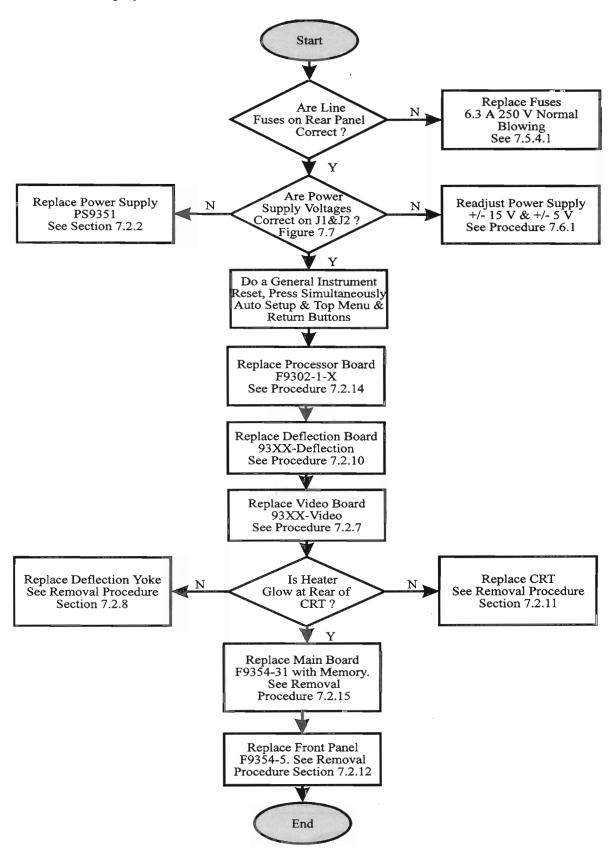


Page 7-21

7.5.6 Abnormal Image On Screen

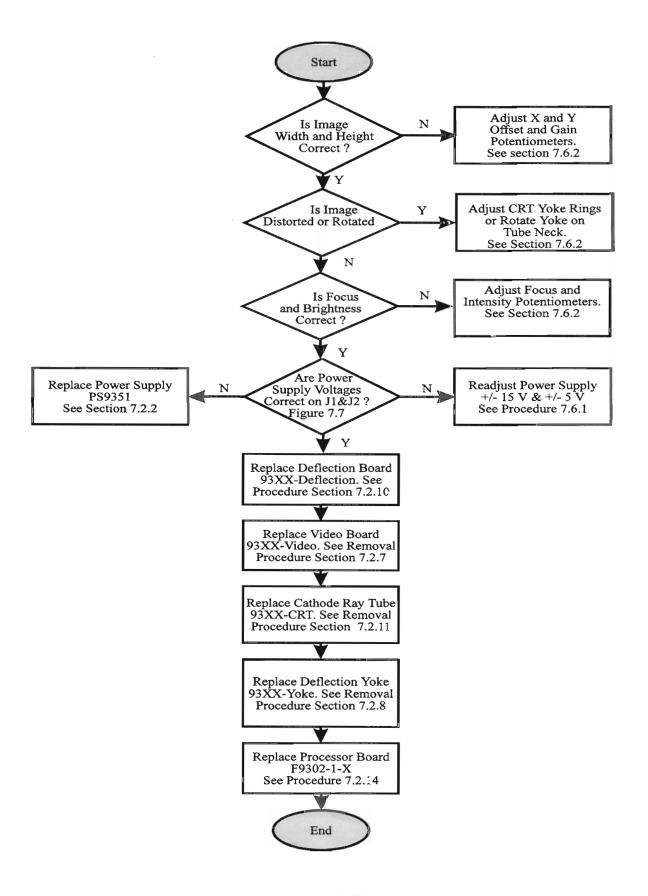


Page 7-22

7.5.7 Front Panel Controls Do Not Operate

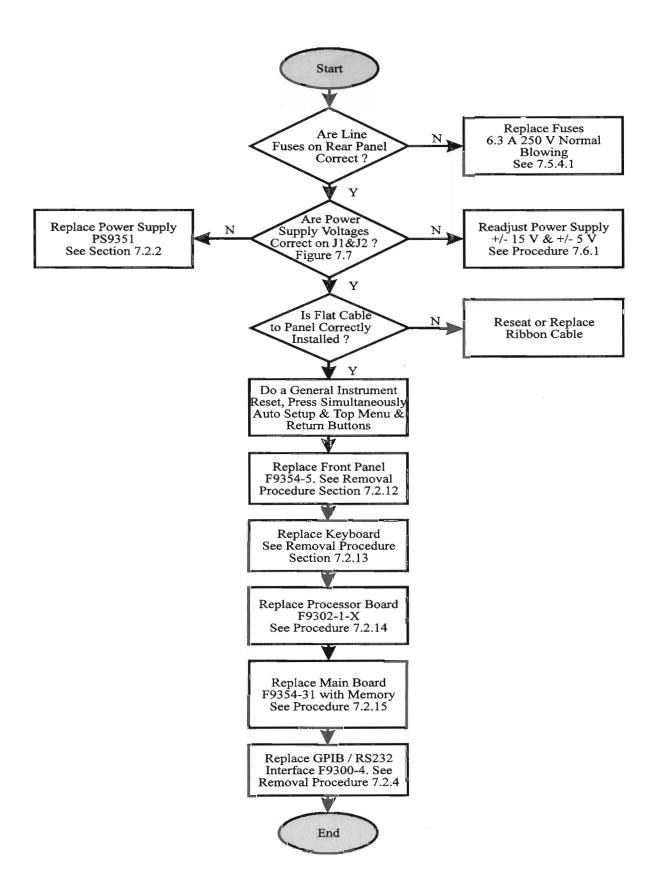


Page 7-23


7.5.8 No Remote Control GPIB and RS232

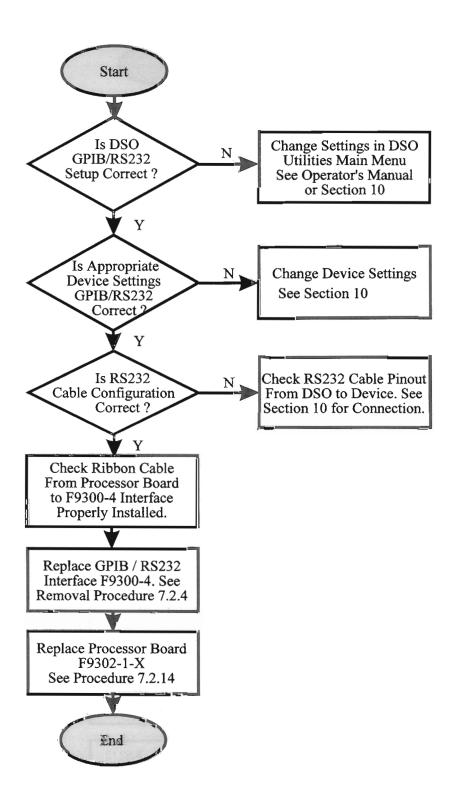

7.5.9 Performance Verification Fails

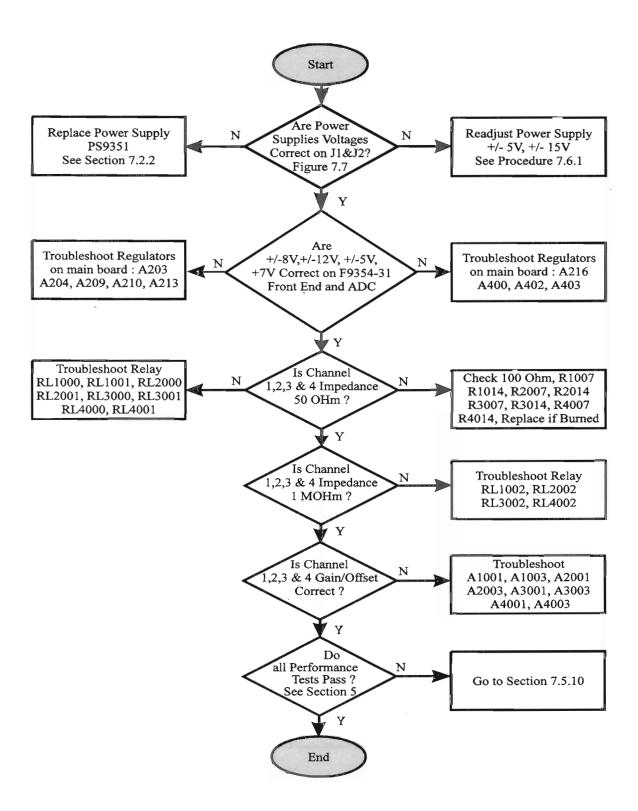


7.5.10 Internal Calibration Fails

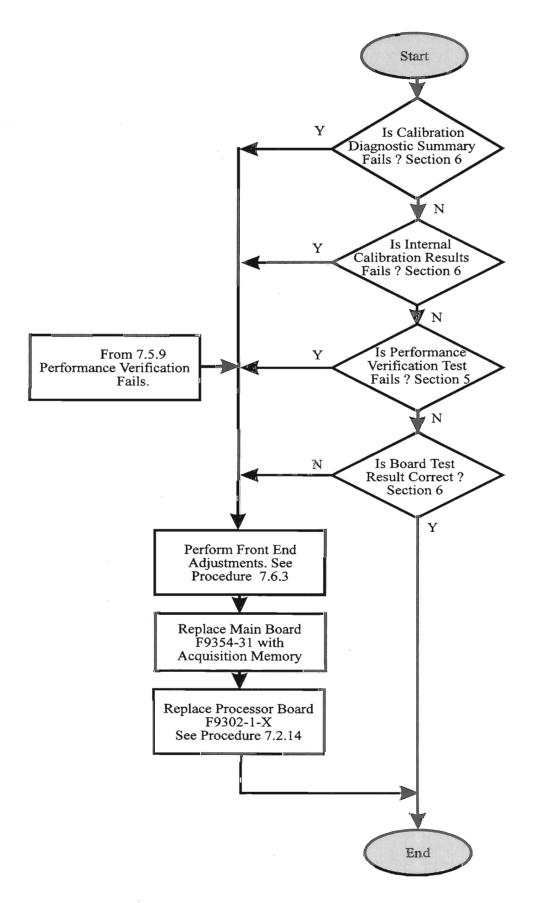


Page 7-26

7.5.11 Floppy Disk Drive Fails

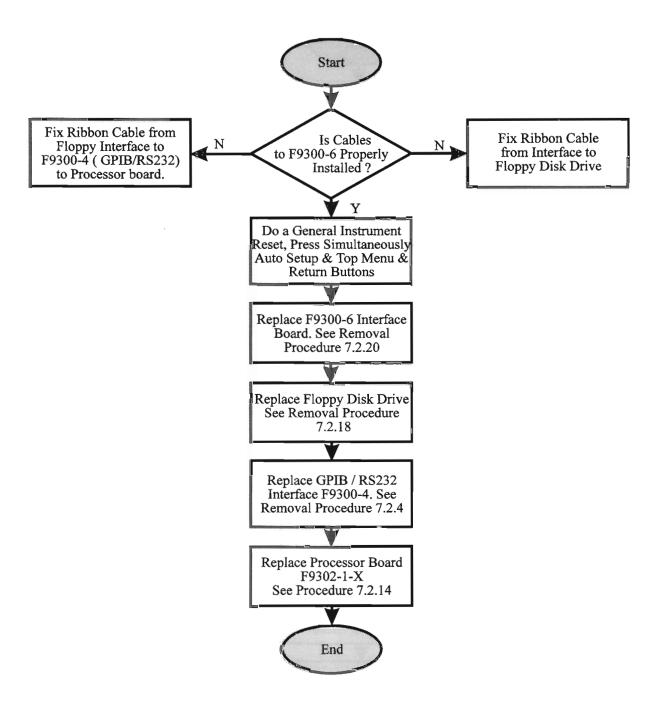


7.5.12 Graphic Printer Fails

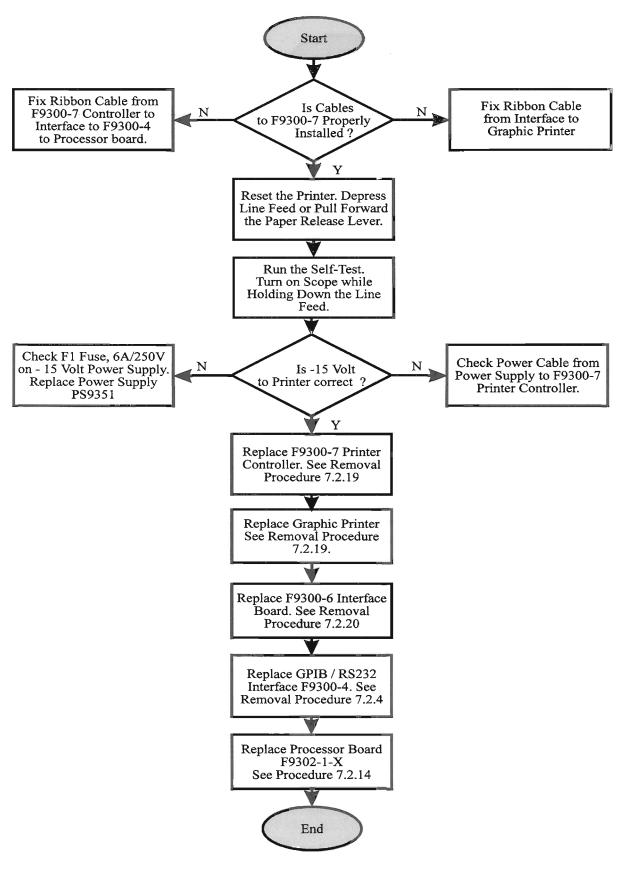


Page 7-28

7.5.13 Centronics Fails

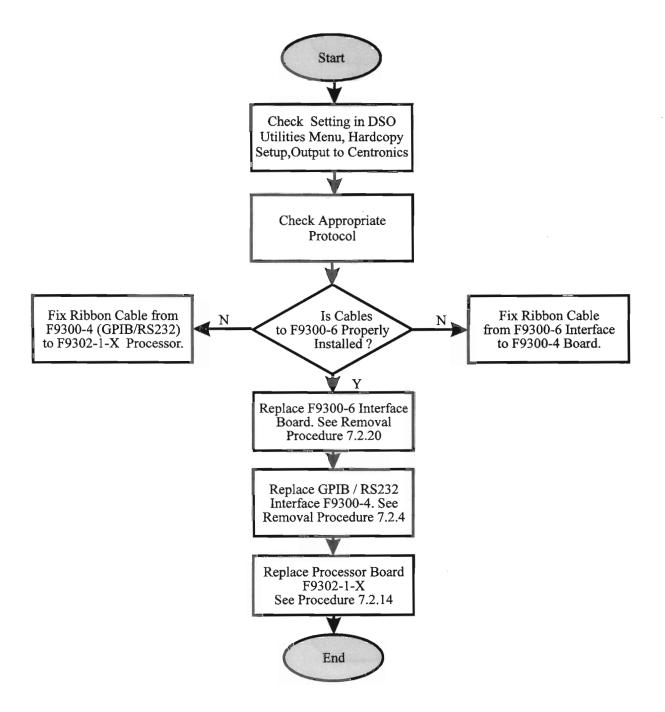

7.5.14 Hard Disk Fails

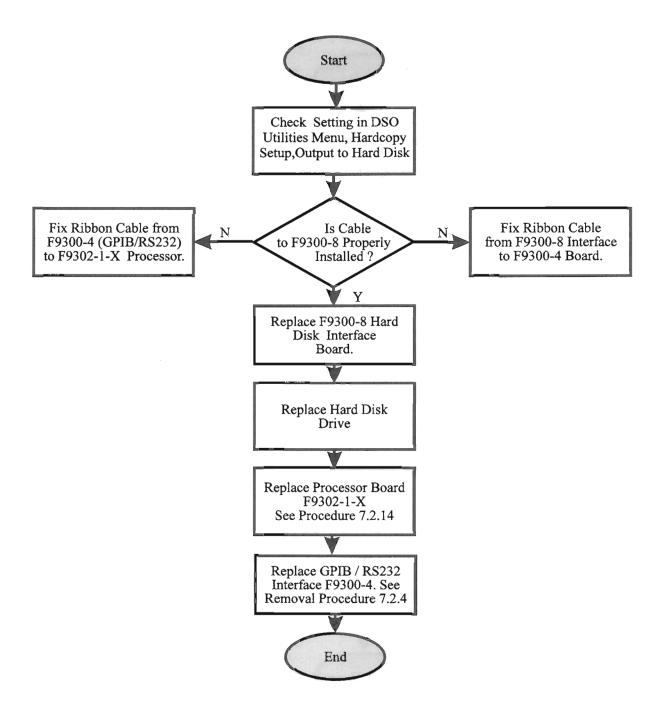

7.6 Calibration Procedures

The following section includes the adjustments required for the power supply, front end and display. It is recommended that they be verified at one year intervals.

7.6.1 PS9351 Power Supply Calibration

The four voltages are adjustable by \pm 5% of the nominal value.

The reference for the measurements are the pins on top of connector J1 connected to the main board F9354-31.

For the power supply calibration proceed as follow:

- Turn off the power
- Remove the top cover (7.2.1)
- Remove the front frame assembly (7.2.9) and put it to the right of the unit.
- By using two extension cables, reconnect the processor board to the front panel (J4) and to the deflection board (J6).
- Once the top cover is removed and the front panel is disassembled from the scope, extra cooling of the main board is required. It's mandatory to disconnect the existing Fan from connector J3, located on F9354-31 card, and to use a Fan with the air flow oriented to the front end section of the board.
- The front frame assembly is now reconnected to the processor through the extension cables.
- ^a Turn on the power, set the scope to Auto Trigger, and perform the adjustments to get on J1 (see figure 7.7).

```
Pin 4, 5, 6 : +5.12 V (Min = +5.05 V, Max = +5.15 V)
Pin 9, 10, 11 : -5.2 V (Min = -5.15 V, Max = -5.25 V)
Pin 12 : +15 V (Min = +14.9 V, Max = +15.1 V)
Pin 14 : -15 V (Min = -14.9 V, Max = -15.1 V)
Pin 3, 7, 8, 13 : Ground
```

The four potentiometers are accessible from the right side through holes in the PS9351 power supply chassis.

■ Turn the potentiometer clockwise to increase the tension or counterclockwise to decrease the voltage. When the adjustment is done, stop the acquisition by depressing the stop trigger push button, and verify that there is no large difference on the + 5.12 V, typically less than 80 mV.

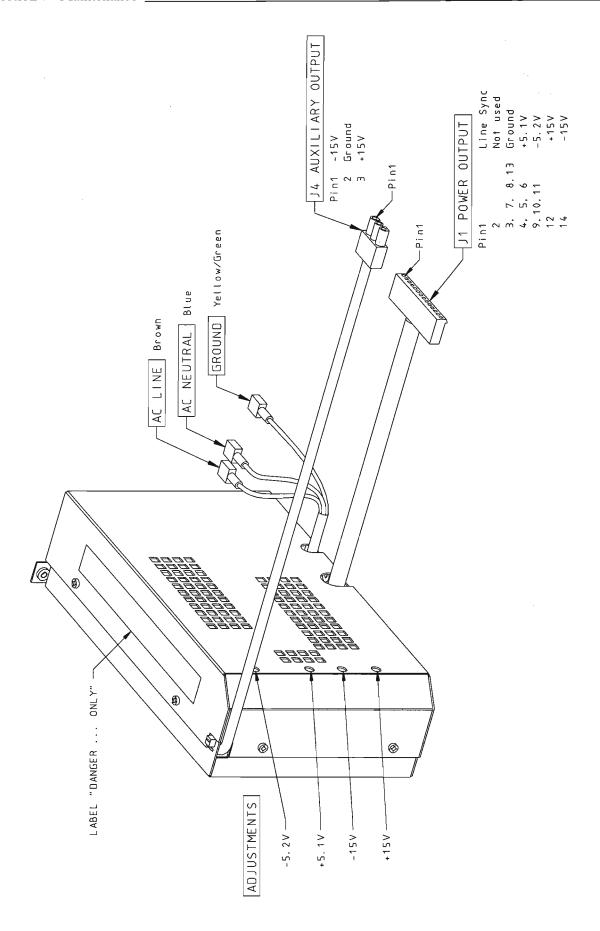


Figure 7.7 : PS9351 Power SupplyPage 7-32

7.6.2 93XX-Display Adjustment Procedure


7.6.2.1 Introduction

There is a total of 12 potentiometers or variable coils to adjust the deflection and video board.

Video: (2 adjustments)

Threshold: Level of the video board.

• Gain : Intensity of the screen.

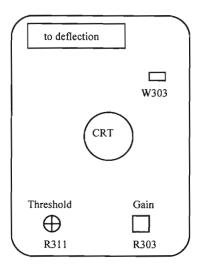

Video board component side

Deflection: (10 adjustments)

Wosc : Frequency of the vertical oscillator.

Slope : Speed of the horizontal ramp.

• Focus : Focus of the screen.

Cut off : Cathode ray tube cut off.

• Quiescent : Standby current of the horizontal deflection amplifier.


• H Linearity : Horizontal linearity.

■ H Size : Horizontal size (Max 165mm).

- H Offset : Horizontal position.

□ V Size : Vertical size (Max 120mm).


■ V Offset : Vertical position.

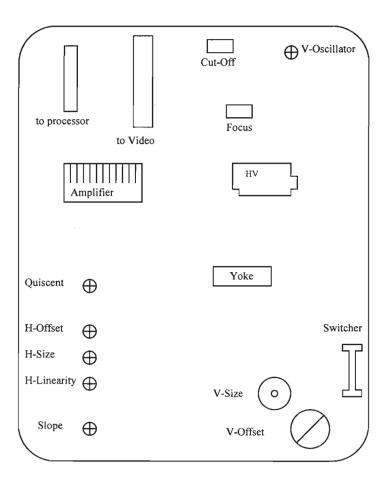

Deflection board component side

7.6.2.2 Coarse Adjustment

- Depress display button.
- Set W'form + text intensity to 0%.
- Set grid intensity to 0%
- Turn fully clockwise the intensity potentiometer on the video board.
- On the video board connect a digital multimeter on test point : W303
- Adjust threshold potentiometer to get 2 V \pm 0.1 V on W303.

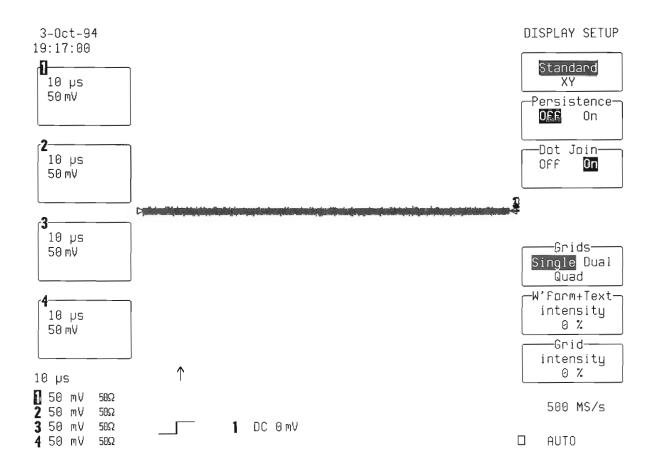

- Set W'form intensity to 100%.
- □ Set grid intensity to 60%.
- Adjust H-size, H-offset, V-size, V-offset to center the image in the screen.


 The vertical position should be adjusted to get the push buttons of the front panel in front of the software menus, use the utilities set up.

 The small magnets mounted on the deflection yoke influence the vertical position.
- Turn the quiescent potentiometer clockwise until the default of the horizontal lines just disappears from the vertical center of the screen.
- Increase the cut off until a vertical line appears on the right side of the screen.
- Adjust the slope potentiometer to get 5mm gap between the highlighted vertical line and the right border of the selection menus.
- Adjust H-linearity to get the best linearity.

7.6.2.3 Fine Adjustment

The final adjustment of the intensity, cut off, and focus must be made in a dark room.

- Set W'form intensity to 30%.
- Set grid intensity to 0%.
- Adjust the cut off potentiometer until the highlighted vertical line disappears from the right side of the screen.
- Set W'form intensity to 20%.
- Display four traces.
- On the video board adjust the gain potentiometer (intensity) in order to get the text just readable.
- Set W'form + text intensity to 70%.
- Set grid intensity to 30%

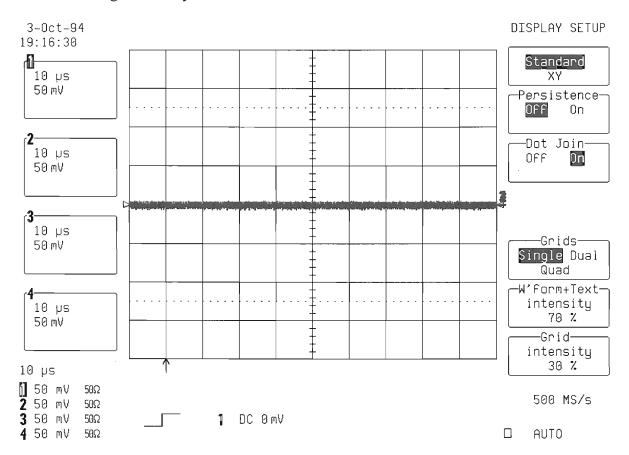

- Adjust the focus (usually fully clockwise) for most uniform focus over the entire screen.
- In a standard luminosity environment set W'form + text to 90%, and grid intensity to 60%.
- Verify the intensity, focus, and contrast adjustment, for best definition of the displayed text.

CAUTION

Never change the Vosc calibration.

7.6.3 Front End Test and Calibration Procedure

7.6.3.1 Introduction

The adjustments describe in the following calibration procedure require extension of the front panel assembly out of the scope, using two flat cables.

In order to access the front end potentiometers and variable caps located underneath the Cathode Ray tube and deflection board, dismount the front panel assembly from the scope and reconnect it to the processor board connectors J4 and J6, using the extension cable set.

Once the top cover is removed and the front panel is disassembled from the scope, extra cooling of the main board is required. It's mandatory to disconnect the existing Fan from connector J3, located on F9354-31 card, and to use a Fan with the air flow oriented to the front end section of the board.

7.6.3.2 Power Supplies

Remove the upper shield to access the test point TP203. Use a high precision DMM.

7.6.3.2.1 Front End Power Supply Verification

• Check on test point the following tensions:

■ Pin 1 and Pin 2: Ground

■ + 12 VFEP: pin 6 (+) = + 12 Volt ± 2%: if problem troubleshoot regulator A204

= + 12 VFE: pin 3 (+) = + 12 Volt $\pm 2\%$: if problem troubleshoot regulator A210

 \blacksquare + 8 VFE : pin 5 (+) = + 8 Volt ± 2% : if problem troubleshoot regulator A216

■ - 12 VFEP: pin 7 (-) = - 12 Volt ± 2%: if problem troubleshoot regulator A209

■ - 12 VFE : pin 4 (-) = - 12 Volt ± 2% : if problem troubleshoot regulator A203

■ - 8 VFE : pin 8 (-) = - 8 Volt ± 2% : if problem troubleshoot regulator A213

7.6.3.2.2 ADC Power Supply Verification

• Check on test point TP203 the following tensions:


• + 12 VADC: pin 9 (+) = + 12 Volt \pm 2%: if problem troubleshoot regulator A402

■ - 12 VADC : pin 10 (-) = - 12 Volt ± 2% : if problem troubleshoot regulator A400


■ + 7 VADC : A403 pin 3 = + 7 Volt ± 2% : if problem troubleshoot regulator A403

7.6.3.3 16 bit DAC Verification


- $^{\bot}$ Select Channel 1, Channel 2, Channel 3 and Channel 4 : Coupling DC 1 M Ω
- ² Enter in the internal calibration diagnostics by simultaneously depressing the third and fourth push buttons, and then by depressing the fifth.
- Select Development menu

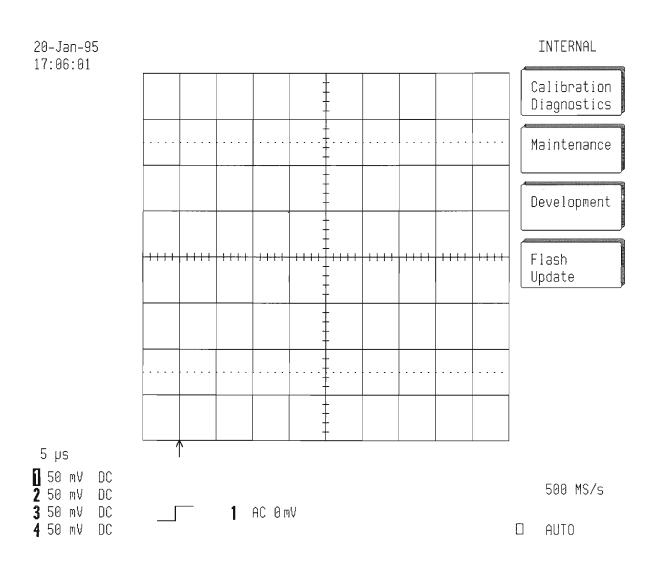

■ Select Front End Control menu

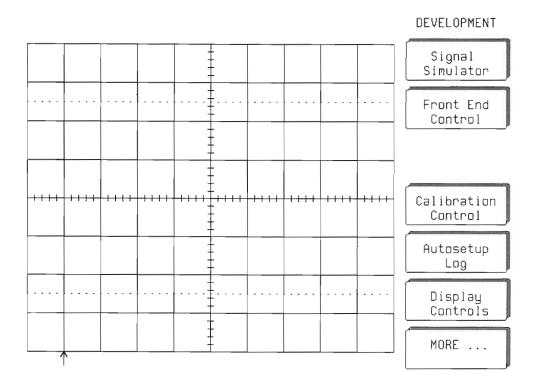


■ Set Cal Level: /1 and 0,00 V

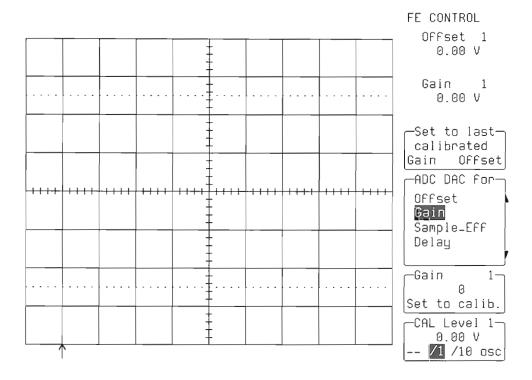


^a Check that we get on pin 5 (+) of TP201 : $0.00 \text{ mV} \pm 0.1 \text{ mV}$



■ Set Cal Level: /1 and + 4.00 V (use front panel potentiometer)

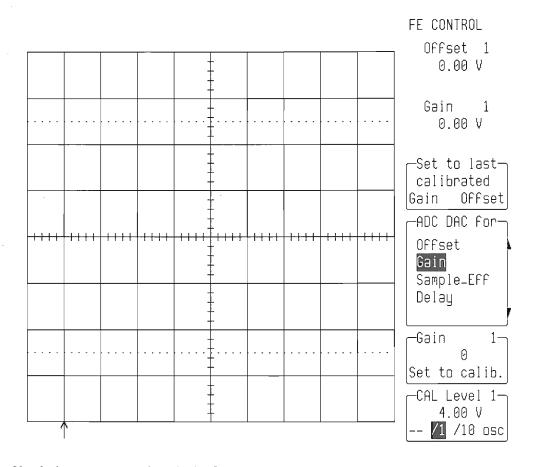


- Check that we get on pin 5 (+) of TP201 : 1.00 V \pm 1%
- Set Cal Level: /1 and 4.00 V (use front panel potentiometer)

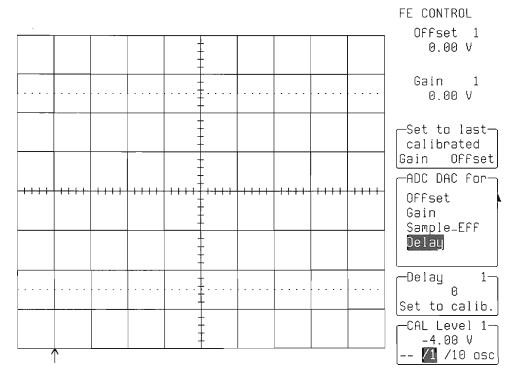


Page 7-40

- Check on pin 5 (+) of TP201 that we get 1.00 V \pm 1%
- Set Cal Level: /10 and + 10.00 V (use front panel potentiometer)

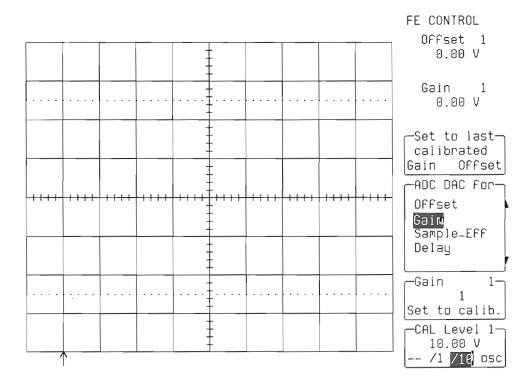


- Check on pin 5 (+) of TP201 that we get + 0.25 V \pm 1%
- Set Cal Level: /10 and 10.00 V (use front panel potentiometer)
- $^{\circ}$ Check on pin 5 (+) of TP201 that we get 0.25 V \pm 1%

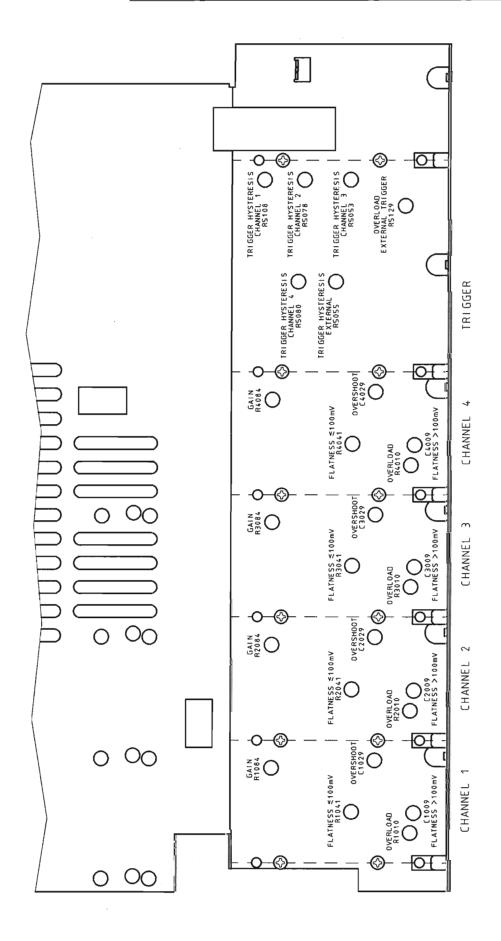

7.6.3.4 Input Buffer DC Gain Adjustment

7.6.3.4.1 Channel 1 DC Gain Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Gain, and Show Result for Channel 1
- Push Recalibrate Completely

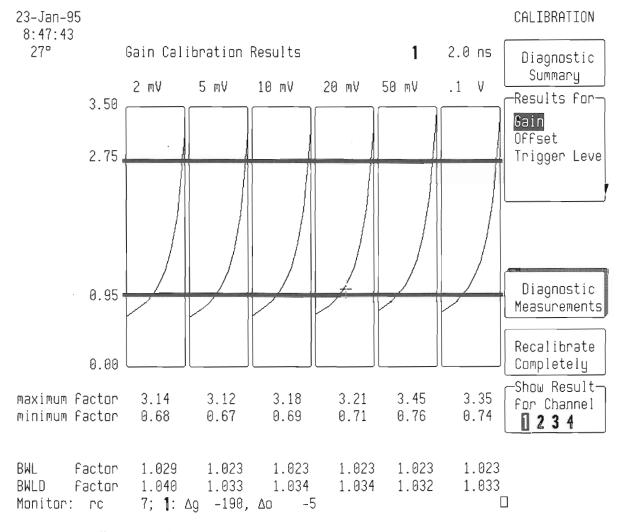

Adjust Potentiometer R1084 to get :


Maximum Factor at 5 mV/div > 2.90

Minimum Factor at 50 mV/div < 0.85

• During the adjustment, push recalibrate completely.

7.6.3.4.2 Channel 2 DC Gain Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Gain, and Show Result for Channel 2
- Push Recalibrate Completely

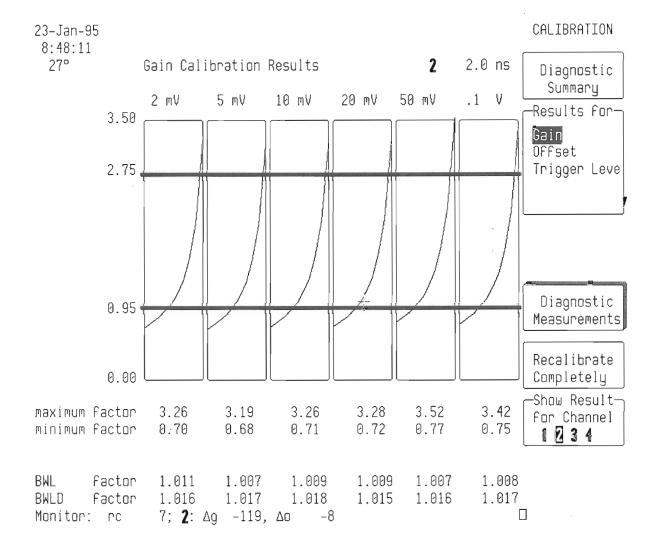

□ Adjust Potentiometer R2084 to get :


Maximum Factor at 5 mV/div > 2.90

Minimum Factor at 50 mV/div < 0.85

During the adjustment, push recalibrate completely.

7.6.3.4.3 Channel 3 DC Gain Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Gain, and Show Result for Channel 3
- Push Recalibrate Completely

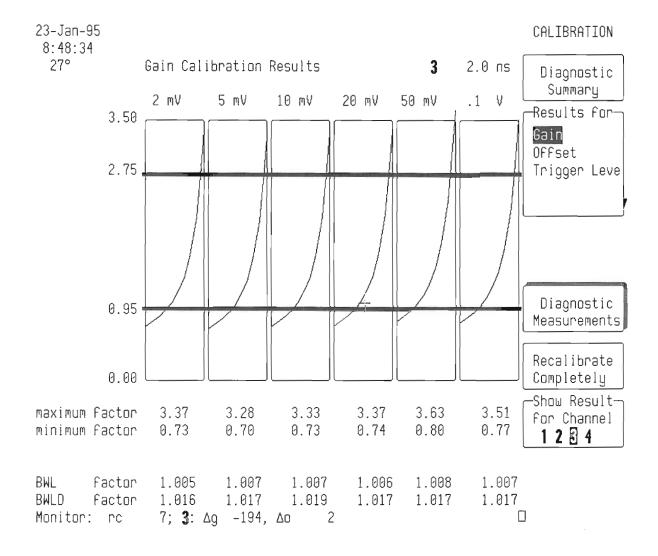

^a Adjust Potentiometer R3084 to get :


Maximum Factor at 5 mV/div > 2.90

Minimum Factor at 50 mV/div < 0.85

During the adjustment, push recalibrate completely .

7.6.3.4.4 Channel 4 DC Gain Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Gain, and Show Result for Channel 4
- Push Recalibrate Completely

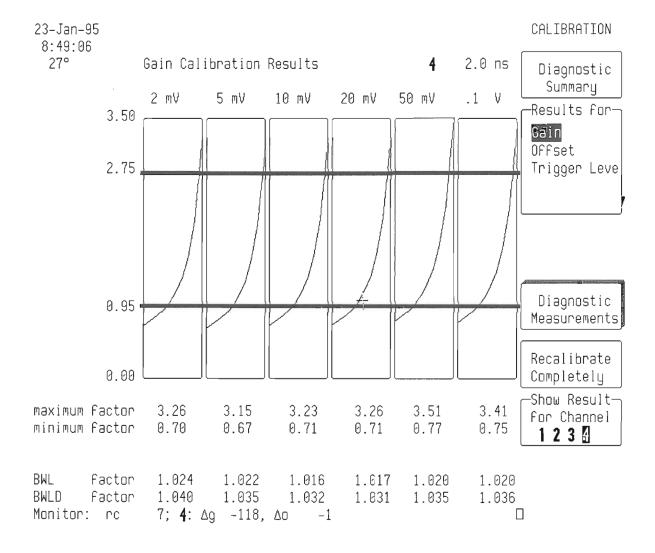

■ Adjust Potentiometer R4084 to get :

Maximum Factor at 5 mV/div > 2.90

Minimum Factor at 50 mV/div < 0.85

During the adjustment, push recalibrate completely

7.6.3.5 Overshoot and Rise time Adjustment

7.6.3.5.1 Channel 1 Overshoot and Rise time Adjustment

 Apply the fast Rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 1.

Turn on trace : Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid

 Coupling Channel 1 : DC 50 Ω V/div. offset : Normal Global BWL : Off Probe atten : X1 : - 250 mV Input offset

Input gain : 100 mV/div Trigger setup : Edge Trigger on

 Trigger level : DC 250 mV

: 1

: DC Coupling 1 ■ Slope 1 : Pos □ Mode : Normal Holdoff : Off

Timebase : 2 nsec/div Record up to : 50K samples Delay : 50 % Pre-Trigger

■ Turn on trace : A Select Math Setup

For Math : Use at most 1000 points

Redefine A

Use Math? : Yes Math Type : Average : Summed Avg Type Of : Channel 1 Turn off trace : Channel 1 Cursors/Measure : Parameters Mode : Custom Statistics : on

Change Parameters : on displayed trace: A On line 1


: Over + of A Measure

On line 2

Measure : Rise of A

■ Adjust C1029 to get : Over + (A) = +5.5%, $\pm 3\%$

• Check that Rise time is less than 0.9 nsec

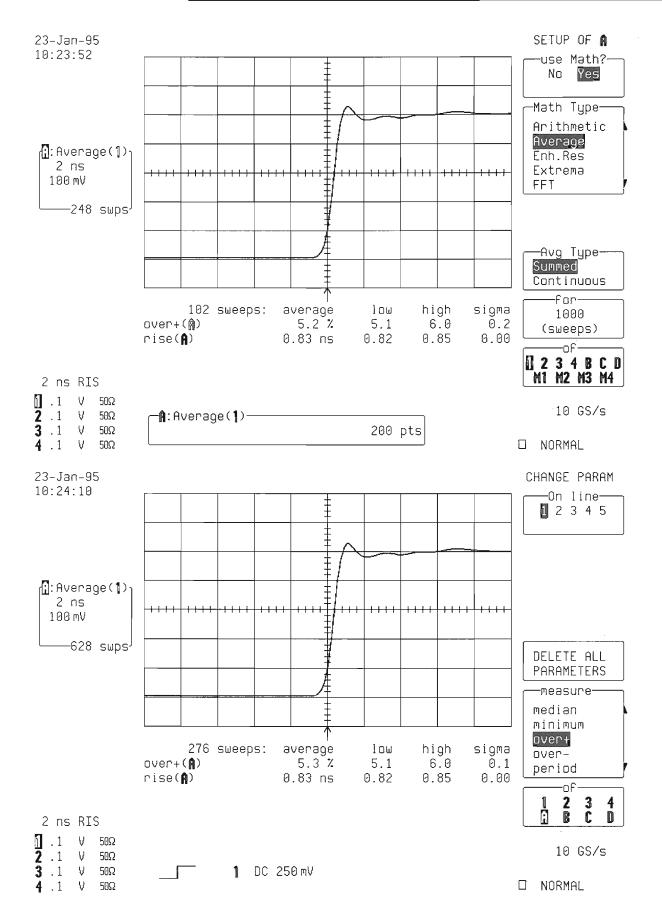

7.6.3.5.2 Channel 2 Overshoot and Rise time Adjustment

■ Apply the fast Rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 2.

Turn on trace : Ch2

Display setup : Standard, Persistence off, Dot join on, Single grid

Coupling Channel 2 : DC 50 Ω V/div. offset : Normal Global BWL : Off : X1 Probe atten

 Input offset : - 250 mV Input gain : 100 mV/div Trigger setup : Edge

 Trigger on : 2

 Trigger level : DC 250 mV

Coupling 2 : DC ■ Slope 2 : Pos Mode : Normal Holdoff : Off ■ Timebase : 2 nsec/div Record up to : 50K samples ■ Delay : 50 % Pre-Trigger

■ Turn on trace : B

Select Math Setup

For Math : Use at most 1000 points

■ Redefine B

• Use Math? : Yes Math Type : Average Avg Type : Summed • Of : Channel 2 ■ Turn off trace : Channel 2

Cursors/Measure : Parameters Mode : Custom Statistics : On ■ Change Parameters:

On displayed trace : B

On line 1


Measure : Over + of B

On line 2

: Rise of B Measure

• Adjust C2029 to get : Over + (B) = +5.5 %, $\pm 3 \%$

Check that Rise time is less than 0.9 nsec

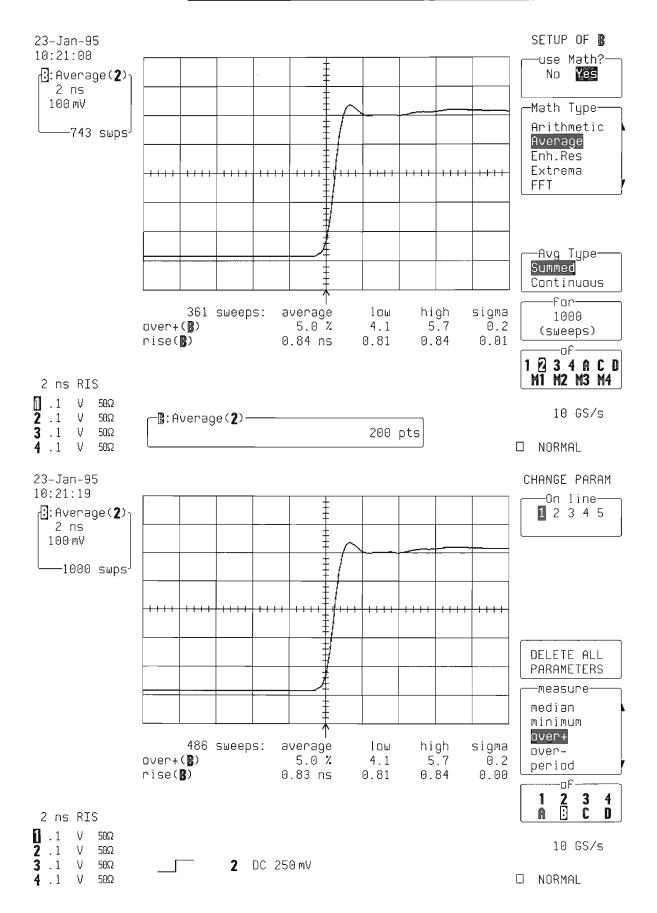

7.6.3.5.3 Channel 3 Overshoot and Rise time Adjustment

Apply the fast Rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 3.</p>

■ Turn on trace : Ch3

■ Display setup : Standard, Persistence off, Dot join on, Single grid

Coupling Channel 3 : DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1

■ Input offset : - 250 mV ■ Input gain : 100 mV/div

Trigger setup : EdgeTrigger on : 3

■ Trigger level : DC 250 mV

Coupling 3
Slope 3
Pos
Mode
Normal
Holdoff
Off
Timebase
Record up to
50K samples
Delay
50 % Pre-Trigger

■ Turn on trace : C

■ Select Math Setup

For Math: Use at most 1000 points

Redefine C

Use Math?
Math Type
Average
Avg Type
Summed
Channel 3
Turn off trace
Channel 3

Cursors/Measure : Parameters
 Mode : Custom
 Statistics : On
 Change Parameters :

On displayed trace: C

On line 1


■ Measure : Over + of C

On line 2

■ Measure : Rise of C

■ Adjust C3029 to get : Over + (C) = +5.5%, $\pm 3\%$

• Check that Rise time is less than 0.9 nsec

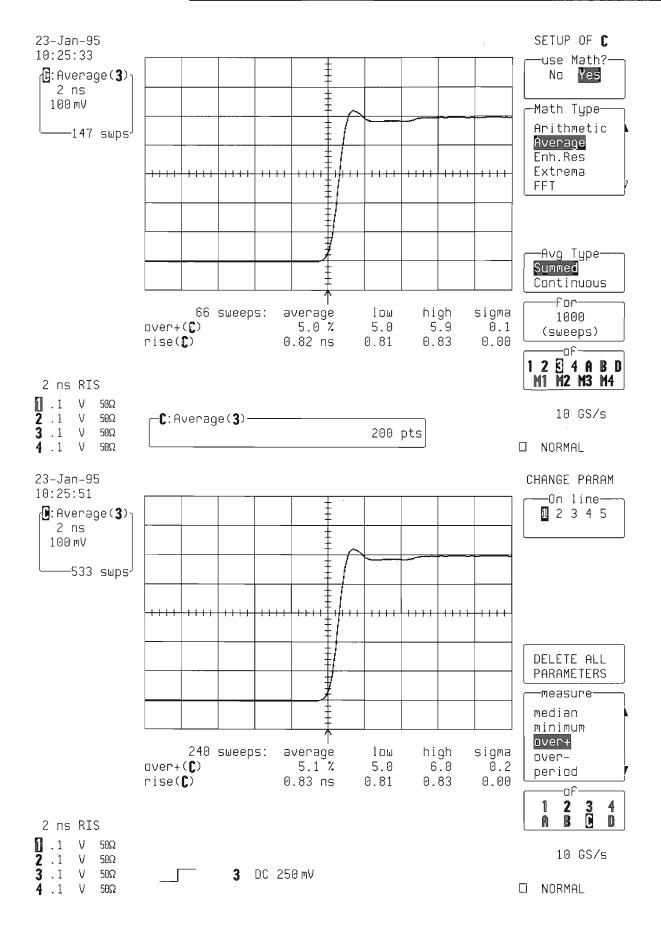

7.6.3.5.4 Channel 4 Overshoot and Rise time Adjustment

 Apply the fast Rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 4.

Turn on trace : Ch4

: Standard, Persistence off, Dot join on, Single grid Display setup

Coupling Channel 4 : DC 50 Ω V/div. offset : Normal ■ Global BWL : Off Probe atten : X1 Input offset : - 250 mV Input gain : 100 mV/div

Trigger setup : Edge Trigger on : 4

 Trigger level : DC 250 mV

: DC Coupling 4 : Pos ■ Slope 4 Mode : Normal Holdoff : Off Timebase : 2 nsec/div

Record up to : 50K samples □ Delay : 50 % Pre-Trigger

Turn on trace : D

Select Math Setup

For Math : Use at most 1000 points

Redefine D

■ Use Math? : Yes Math Type : Average Avg Type : Summed • Of : Channel 4 Turn off trace : Channel 4

 Cursors/Measure : Parameters Mode : Custom Statistics : On ■ Change Parameters:

On displayed trace: D On line 1


Measure : Over + of D

On line 2

Measure : Rise of D

■ Adjust C4029 to get : Over + (D) = +5.5%, $\pm 3\%$

Check that Rise time is less than 0.9 nsec

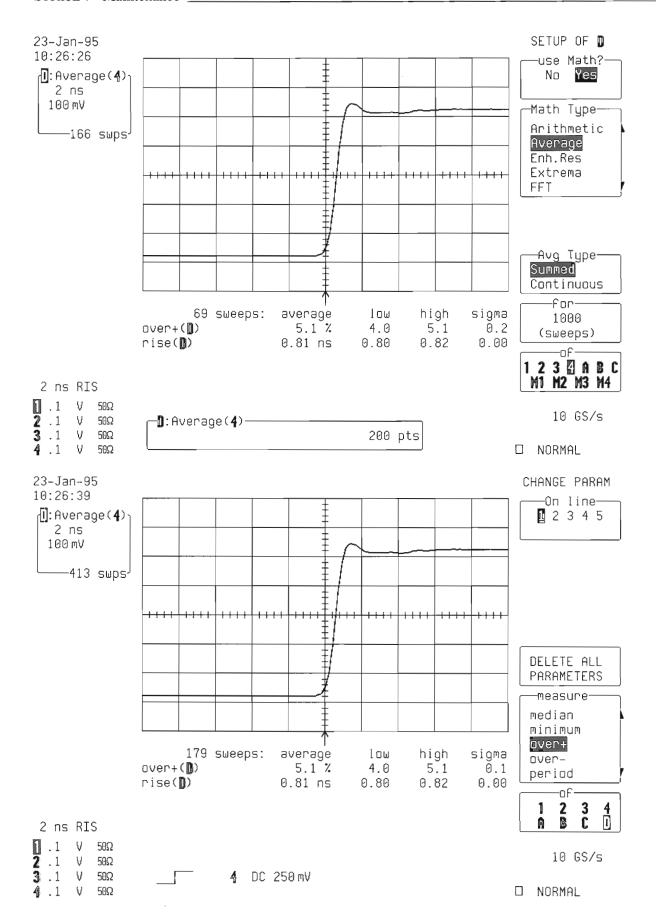

7.6.3.6 Flatness Adjustment

■ Input gain

■ Trigger on

7.6.3.6.1 Channel 1 HF Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 1. Set pulser to 62.5 msec low frequency.

□ Turn on trace : Ch1

Display setup : Standard, Persistence off, Dot join on, Single grid

: 100 mV/div

Coupling Channel 1 : DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1
 Input offset : - 250 mV

Trigger setup : Edge

■ Trigger level : DC 250 mV

: 1

Coupling 1 : DC
Slope 1 : Pos
Mode : Normal
Holdoff : Off

■ Timebase : 20 µsec/div

□ Record up to : 50K samples

□ Delay : 10 % Pre-Trigger

■ Turn on trace : A

Select Math Setup

■ For Math : Use at most 1000 points

Redefine A


Use Math?
Math Type
Average
Avg Type
Summed
Channel 1

■ With the vertical Zoom set A to 10 mV

■ Adjust pot R1041 to get a flat square wave.

Set Input gain : 200 mV/div
 Coupling Channel 1 : DC 1 MΩ

■ Adjust cap C1009 to get a flat square wave.

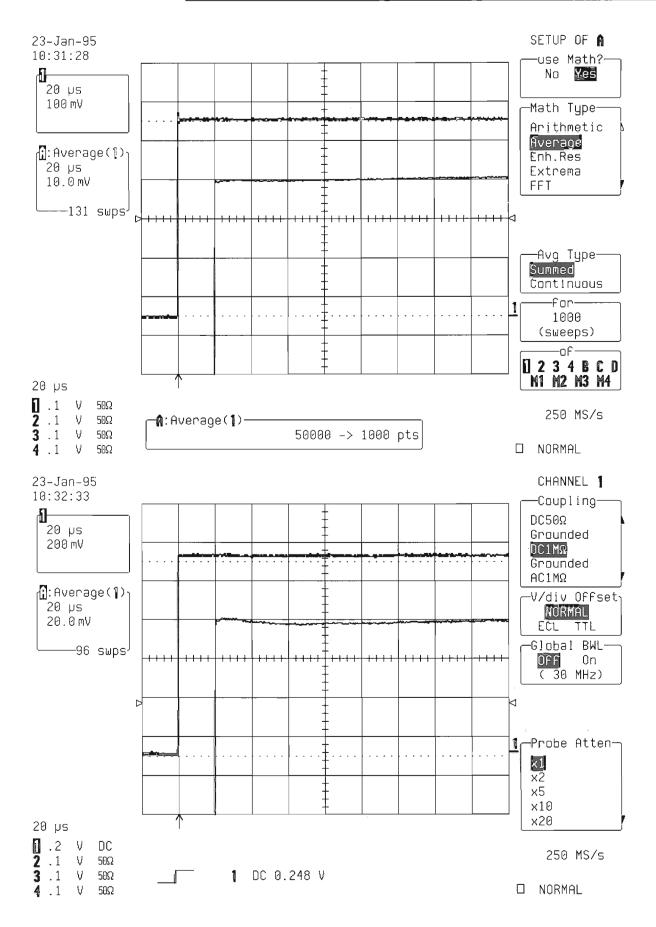

7.6.3.6.2 Channel 2 HF Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 2. Set pulser to 62.5 msec low frequency.</p>

■ Turn on trace : Ch2

Display setup : Standard, Persistence off, Dot join on, Single grid

Coupling Channel 2: DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1
 Input offset : - 250 mV
 Input gain : 100 mV/div

Trigger setup : EdgeTrigger on : 2

■ Trigger level : DC 250 mV

Coupling 2 : DC
Slope 2 : Pos
Mode : Normal
Holdoff : Off

Timebase : 20 µsec/div
 Record up to : 50K samples
 Delay : 10 % Pre-Trigger

■ Turn on trace : B

Select Math Setup

■ For Math : Use at most 1000 points

Redefine B


Use Math?
Math Type
Average
Avg Type
Summed
Channel 2

■ With the vertical Zoom set B to 10 mV

Adjust pot R2041 to get a flat square wave.

Set Input gain : 200 mV/div
 Coupling Channel 2 : DC 1 MΩ

Adjust cap C2009 to get a flat square wave.

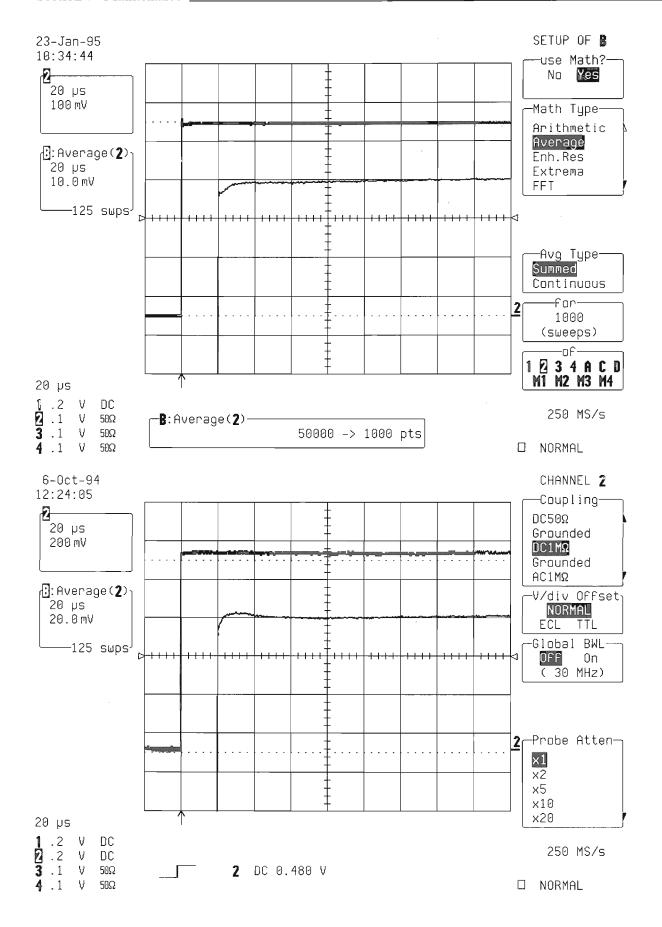

7.6.3.6.3 Channel 3 HF Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 3. Set pulser to 62.5 msec low frequency.</p>

■ Turn on trace : Ch3

Display setup : Standard, Persistence off, Dot join on, Single grid

Coupling Channel 3 : DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1
 Input offset : - 250 mV

■ Input gain : 100 mV/div

Trigger setup : EdgeTrigger on : 3

■ Trigger level : DC 250 mV

Coupling 3 : DC
Slope 3 : Pos
Mode : Normal
Holdoff : Off

Timebase : 20 µsec/div
Record up to : 50K samples
Delay : 10 % Pre-Trigger

■ Turn on trace : C

Select Math Setup

• For Math : Use at most 1000 points

□ Redefine C


Use Math?
Math Type
Average
Avg Type
Summed
Of
Channel 3

■ With the vertical Zoom set C to 10 mV

Adjust pot R3041 to get a flat square wave.

Set Input gain : 200 mV/div
 Coupling Channel 3 : DC 1 MΩ

■ Adjust cap C3009 to get a flat square wave.

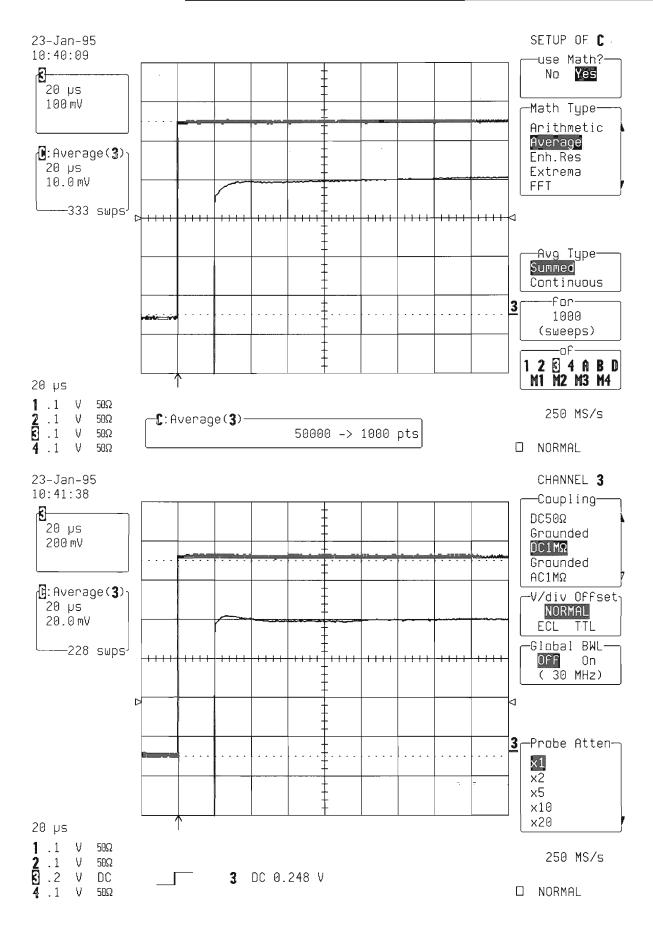

7.6.3.6.4 Channel 4 HF Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 4. Set pulser to 62.5 msec low frequency.

■ Turn on trace : Ch4

Display setup: Standard, Persistence off, Dot join on, Single grid

Coupling Channel 4 : DC 50 Ω
 V/div. offset : Normal
 Global BWL : Off
 Probe atten : X1
 Input offset : - 250 mV

Input offset : - 250 mV : 100 mV/div

Trigger setup : EdgeTrigger on : 4

■ Trigger level : DC 250 mV

Coupling 4 : DC
Slope 4 : Pos
Mode : Normal
Holdoff : Off

□ Timebase
 □ Record up to
 □ Delay
 □ Delay
 □ 10 % Pre-Trigger

■ Turn on trace : D

Select Math Setup

■ For Math : Use at most 1000 points

Redefine D


Use Math?
Math Type
Average
Avg Type
Summed
Of
Channel 4

With the vertical Zoom set D to 10 mV

Adjust pot R4041 to get a flat square wave.

Set Input gain : 200 mV/div
 Coupling Channel 4 : DC 1 MΩ

Adjust cap C4009 to get a flat square wave.

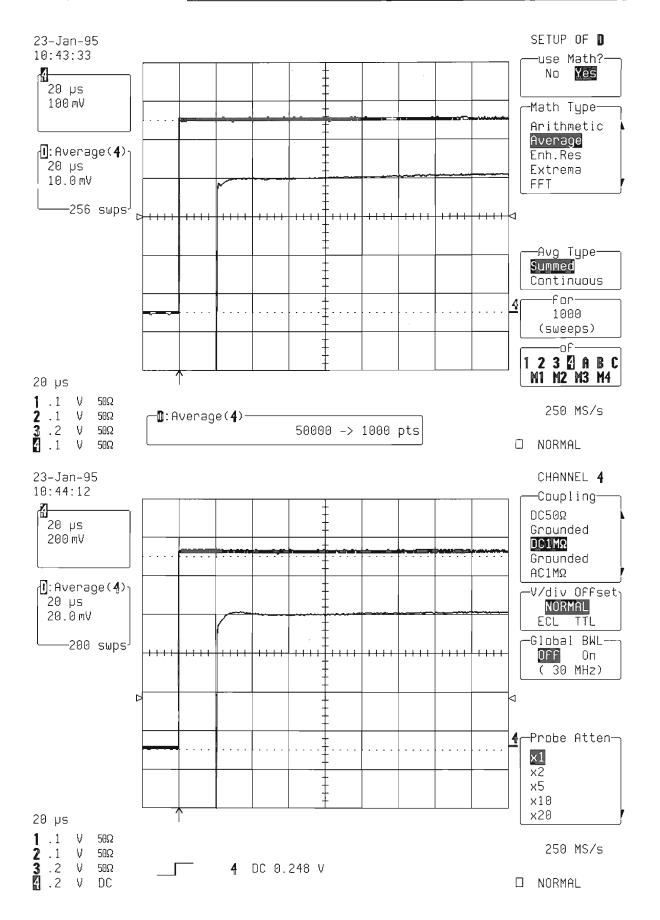

7.6.3.7 Sample & Hold Flatness Adjustment

7.6.3.7.1 Channel 1 Sample&Hold Flatness Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 1. Set pulser to 62.5 μsec high frequency.</p>

Turn on trace : Ch1
Coupling Channel 1 : DC 50 Ω
Input gain : 100 mV/div

■ Trigger on : 1

■ Trigger level : DC 250 mV

Coupling 1 : DCSlope 1 : Pos

■ Timebase : 50 nsec/div ■ Delay : 10 % Pre-Trigger

■ Turn on trace : A


Select Math Setup

■ For Math : Use at most 1000 points

Redefine A : Summed Average of Channel 1

With the vertical Zoom set A to 10 mV

 Adjust pot R1518, C1553, R1577 (at left of A1500 HSH416) to get the best flatness as possible.

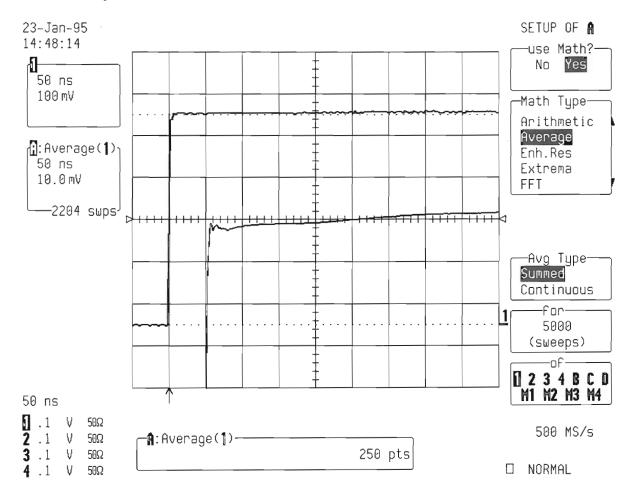

Page 7-63

7.6.3.7.2 Channel 2 Sample&Hold Flatness Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 2. Set pulser to 62.5 μsec high frequency.</p>

Turn on trace : Ch2
Coupling Channel 2 : DC 50 Ω
Input gain : 100 mV/div

■ Trigger on : 2

■ Trigger level : DC 250 mV

■ Coupling 2 : DC ■ Slope 2 : Pos

■ Timebase : 50 nsec/div

Delay : 10 % Pre-TriggerTurn on trace : B


Turn on traceSelect Math Setup

• For Math : Use at most 1000 points

Redefine B : Summed Average of Channel 2

With the vertical Zoom set B to 10 mV

Adjust pot R2518, C2553, R2577 (at left of A2500 HSH416) to get the best flatness as possible.

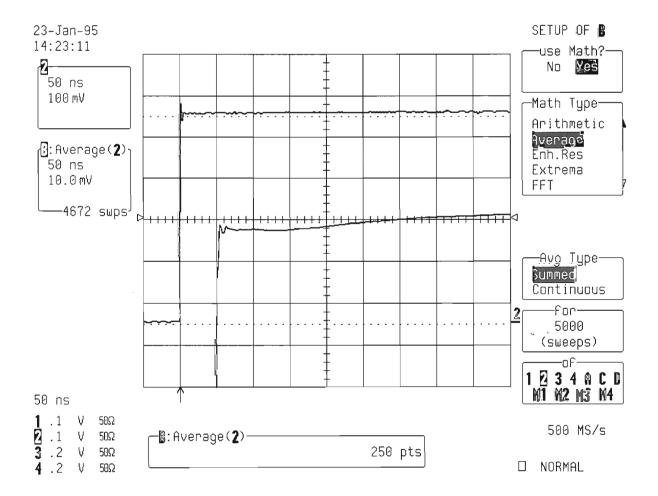

7.6.3.7.3 Channel 3 Sample&Hold Flatness Adjustment

Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 3. Set pulser to 62.5 μsec high frequency.

Turn on trace : Ch3
Coupling Channel 3 : DC 50 Ω
Input gain : 100 mV/div

■ Trigger on : 3

■ Trigger level : DC 250 mV

Coupling 3 : DCSlope 3 : Pos

Timebase : 50 nsec/divDelay : 10 % Pre-Trigger

■ Turn on trace : C


Select Math Setup

For Math: Use at most 1000 points

■ Redefine C : Summed Average of Channel 3

■ With the vertical Zoom set C to 10 mV

 Adjust pot R3518, C3553, R3577 (at left of A3500 HSH416) to get the best flatness as possible.

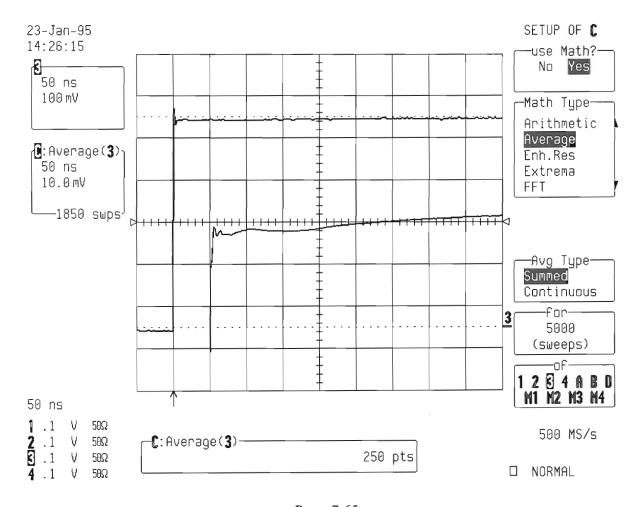

Page 7-65

7.6.3.7.4 Channel 4 Sample&Hold Flatness Adjustment

■ Apply the fast rise time pulse generator LeCroy 4969 or equivalent (< 600 psec) to Channel 4. Set pulser to 62.5 µsec high frequency.

■ Turn on trace : Ch4 ■ Coupling Channel 4 : DC 50 Ω ■ Input gain : 100 mV/div

■ Trigger on : 4

■ Trigger level : DC 250 mV

Coupling 4 : DCSlope 4 : Pos

Timebase : 50 nsec/divDelay : 10 % Pre-Trigger

■ Turn on trace : D


Select Math Setup

■ For Math : Use at most 1000 points

■ Redefine D : Summed Average of Channel 4

■ With the vertical Zoom set D to 10 mV


■ Adjust pot R4518, C4553, R4577 (at left of A4500 HSH416) to get the best flatness as possible.

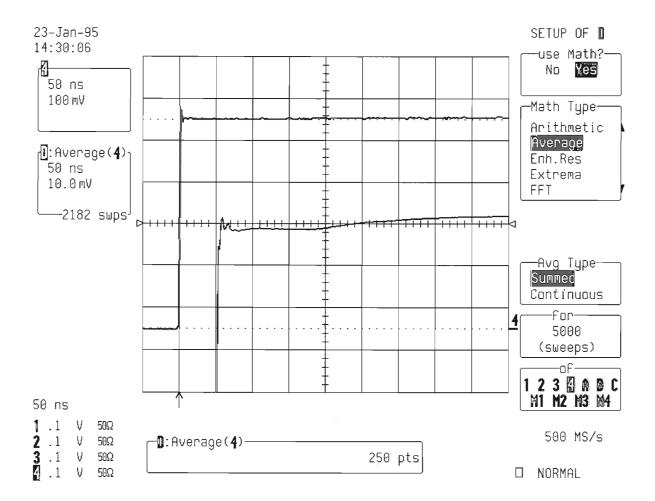

7.6.3.8 Trigger Hysteresis Control

7.6.3.8.1 Channel 1 Trigger Hysteresis Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Trigger level, and Show Result for Channel 1
- Push Recalibrate Completely

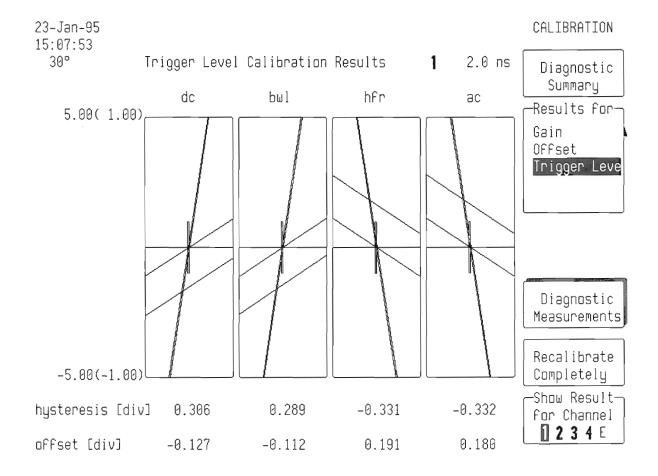

Monitor: rc

2; 1: Δg -139, Δο


□ Adjust potentiometer R5108 to get :

DC Hysteresis (div) = $0.3 \text{ div} \pm 0.05 \text{ div}$

-42

7.6.3.8.2 Channel 2 Trigger Hysteresis Adjustment

- ⁿ In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Trigger level, and Show Result for Channel 2
- Push Recalibrate Completely

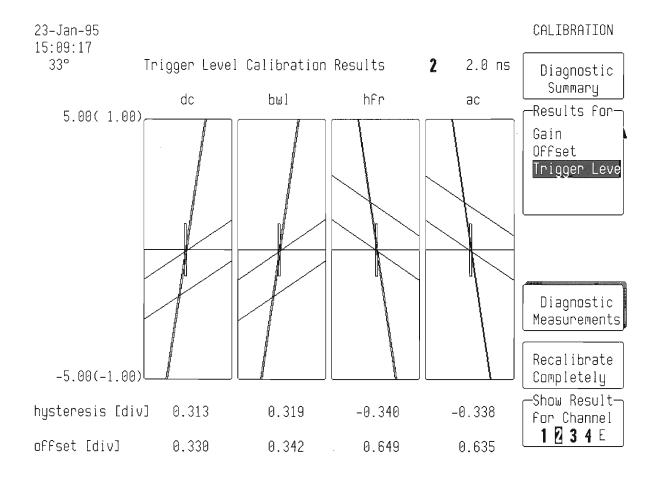


Monitor: rc 4; **2**: Δg -7, Δο -1

□ Adjust potentiometer R5078 to get :

DC Hysteresis (div) = $0.3 \text{ div} \pm 0.05 \text{ div}$

7.6.3.8.3 Channel 3 Trigger Hysteresis Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Trigger level, and Show Result for Channel 3
- Push Recalibrate Completely

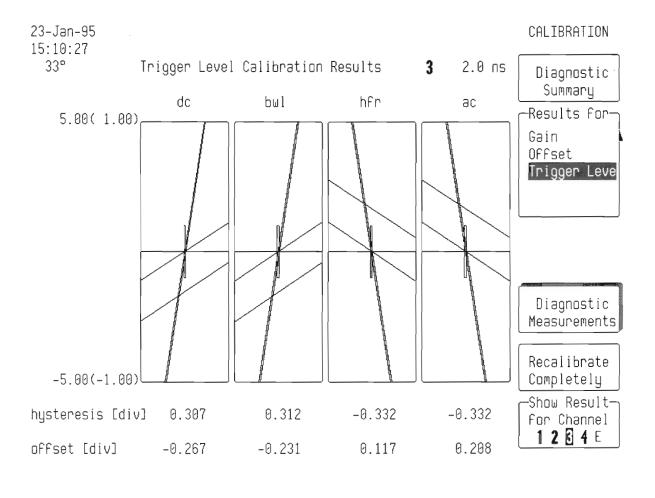

Adjust potentiometer R5053 to get :


Monitor: rc

5; **3**: Δg -81, Δο 2

DC Hysteresis (div) = $0.3 \text{ div} \pm 0.05 \text{ div}$

7.6.3.8.4 Channel 4 Trigger Hysteresis Adjustment

- In the Calibration Diagnostics select Diagnostics Results.
- Select Results for Trigger level, and Show Result for Channel 4
- Push Recalibrate Completely

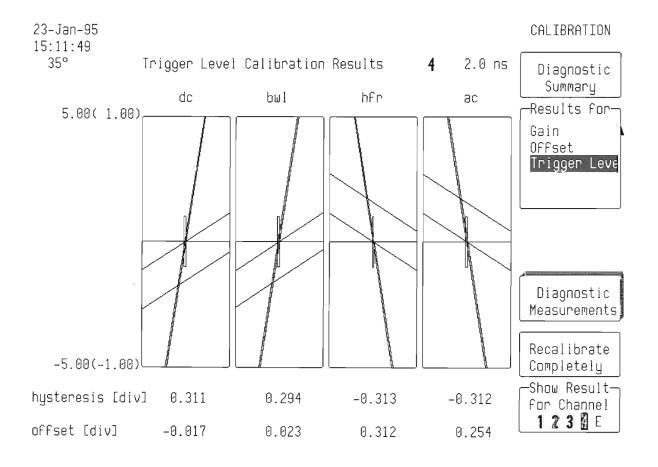


Monitor: rc 6; **4**: Δg -50, Δο 11

□ Adjust potentiometer R5080 to get :

DC Hysteresis (div) = $0.3 \text{ div} \pm 0.05 \text{ div}$

7.6.3.8.5 External Trigger Hysteresis

- ⁿ In the Calibration Diagnostics, select Diagnostics Results.
- Select Results for Trigger level, and Show Result for E.
- Push Recalibrate Completely

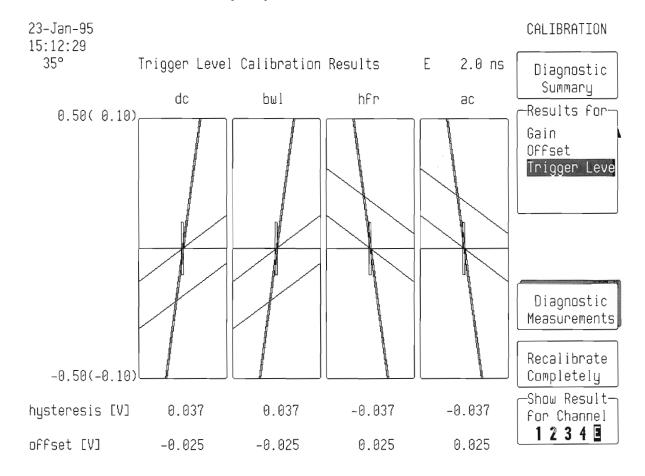

Monitor: rc 6

• Check that the DC External Trigger Hysteresis is $0.035 \text{ V} \pm 0.01$

CAUTION


■ Do not adjust potentiometer R5055. The External Trigger Hysteresis value cannot be modified without using a special tester.

7.6.3.9 DC 50 Ω Overload Adjustment

7.6.3.9.1 Channel 1 DC 50 Ω Overload Adjustment

Turn on trace : Channel 1 Input Coupling : DC 50 Ω Probe atten : X1 Input gain : 1 V/div. ■ Input offset : - 3.5 V Trigger setup : Edge Trigger on : 1 Trigger level : DC 0.1 V Delay : zero Coupling 1 : DC ■ Slope 1 : Pos ■ Mode : Auto : 2 sec/div. ⁿ Timebase Record up to : 1000 samples

- From the power supply (Tektronix PS5004) apply DC 7.07 V (1 Watt) to Channel 1.
- Adjust the potentiometer R1010, such that the overload trips within 10 to 15 seconds. (turn clockwise if it's too slow or counterclockwise if it's too fast)

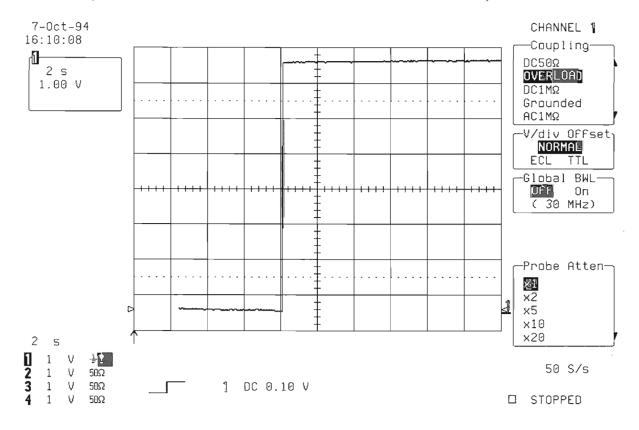


- Set Timebase : 5 sec/div.
- From the power supply (Tektronix PS5004) apply 5 V (.5 Watt) to Channel 1
- Check that the overload doesn't trip for at least 30 seconds.

7.6.3.9.2 Channel 2 DC 50 Ω Overload Adjustment

Turn on trace : Channel 2 Input Coupling : DC 50 Ω Probe atten : X1 Input gain : 1 V/div. Input offset : - 3.5 V Trigger setup : Edge ■ Trigger on : 2 Trigger level : DC 0.1 V Delay : zero Coupling 2 : DC ■ Slope 2 : Pos Mode : Auto Timebase : 2 sec/div. Record up to : 1000 samples

- From the power supply (Tektronix PS5004) apply DC 7.07 V (1 Watt) to Channel 2.
- Adjust the potentiometer R2010, such that the overload trips within 10 to 15 seconds. (turn clockwise if it's too slow or counterclockwise if it's too fast)

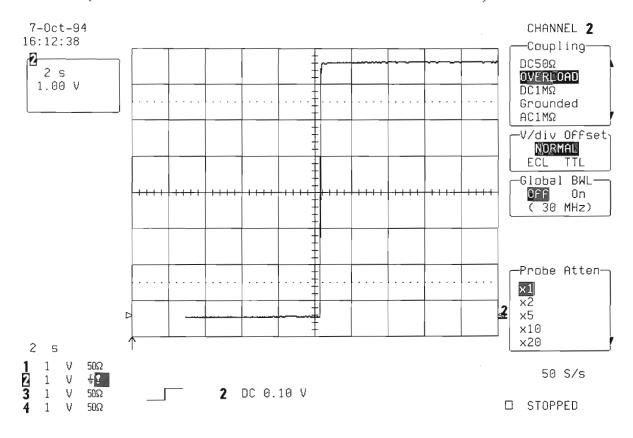

- Set Timebase
- : 5 sec/div.
- From the power supply (Tektronix PS5004) apply 5 V (.5 Watt) to Channel 2
- Check that the overload doesn't trip for at least 30 seconds.

7.6.3.9.3 Channel 3 DC 50 Ω Overload Adjustment

Turn on trace : Channel 3 ■ Input Coupling : DC 50 Ω Probe atten : X1 ■ Input gain : 1 V/div. Input offset : - 3.5 V Trigger setup : Edge Trigger on : 3 Trigger level : DC 0.1 V Delay : zero

Trigger level
Delay
Zero
Coupling 3
DC
Slope 3
Pos
Mode
Auto
Timebase
2 sec/div.
Record up to
1000 samples

- From the power supply (Tektronix PS5004) apply DC 7.07 V (1 Watt) to Channel 3.
- Adjust the potentiometer R3010, such that the overload trips within 10 to 15 seconds. (turn clockwise if it's too slow or counterclockwise if it's too fast)
- □ Set Timebase : 5 sec/div.
- From the power supply (Tektronix PS5004) apply 5 V (.5 Watt) to Channel 3
- Check that the overload doesn't trip for at least 30 seconds.

7.6.3.9.4 Channel 4 DC 50 Ω Overload Adjustment

 Turn on trace : Channel 4 ■ Input Coupling : DC 50 Ω Probe atten : X1 ■ Input gain : 1 V/div. Input offset : - 3.5 V Trigger setup : Edge Trigger on : 4 ■ Trigger level : DC 0.1 V

Delay : zero
Coupling 4 : DC
Slope 4 : Pos
Mode : Auto
Timebase : 2 sec/div.
Record up to : 1000 samples

- From the power supply (Tektronix PS5004) apply DC 7.07 V (1 Watt) to Channel 4.
- Adjust the potentiometer R4010, such that the overload trips within 10 to 15 seconds. (turn clockwise if it's too slow or counterclockwise if it's too fast)
- Set Timebase : 5 sec/div.
- From the power supply (Tektronix PS5004) apply 5 V (.5 Watt) to Channel 4
- Check that the overload doesn't trip for at least 30 seconds.

SECTION 8 SCHEMATICS, LAYOUTS, PARTS LIST

9354A, 9354AM, 9354AL, 9354T & 9354TM

Digital Storage Oscilloscope

PART: 9354A DESC: 500 MHz, QUAD CHANNEL 500 MS/s DSO, 50 KB

COMPONENT	PART DESCRIPTION C	TY PER ASSEMBLY
205750000	IC AND-OR GATE ARRAY 16V8	1
554500001	TAPPING SCREW W/U-THREAD	2
709354A16	FRONT LABEL 9354A	1
709354913	SERIAL NUMBER PLATE 9354A	1
F9302-1-4	PROCESSOR CARD WITH 4Mb DRA	M = 1
F9350-21	ACQUISITION MEMORY 2 X 50 K	2
F9354-31	MAIN CARD (FRONT END, ADC, T	DC) 1
F9300-4	GPIB + RS232 INTERFACE CARD	1
F9354-5	QUAD CHANNEL FRONT PANEL	1
M935X	MECHANICAL FOR 9354A	1
ACCESSORIES-9354	ACCESSORIES FOR 9354A	1

PART: 9354AM DESC: 500 MHz, QUAD CHANNEL 500 MS/s DSO, 250 KB

COMPONENT	PART DESCRIPTION C	TY PER ASSEMBLY
205750000	IC AND-OR GATE ARRAY 16V8	1
554500001	TAPPING SCREW W/U-THREAD	2
709354AM16	FRONT LABEL 9354AM	1
709354913	SERIAL NUMBER PLATE 9354AM	1
F9302-1-8	PROCESSOR CARD WITH 8Mb DRA	M 1
F9350M-21	ACQUISITION MEMORY 2 X 250 K	2
F9354-31	MAIN CARD (FRONT END, ADC, T	DC) 1
F9300-4	GPIB + RS232 INTERFACE CARD	1
F9354-5	QUAD CHANNEL FRONT PANEL	1
M935X	MECHANICAL FOR 9354AM	1
ACCESSORIES-9354	ACCESSORIES FOR 9354AM	1

PART: 9354AL DESC: 500 MHz, QUAD CHANNEL 500 MS/s DSO, 2 MB


COMPONENT	PART DESCRIPTION (QTY PER ASSEMBLY
205750000	IC AND-OR GATE ARRAY 16V8	1
554500001	TAPPING SCREW W/U-THREAD	2
709354AL16	FRONT LABEL 9354AL	1
709354913	SERIAL NUMBER PLATE 9354AL	1
F9302-1-16	PROCESSOR CARD WITH 16Mb DR	AM 1
F9350L-2	ACQUISITION MEMORY 2 X 2 MB	2
F9354-31	MAIN CARD (FRONT END, ADC, T	DC) 1
F9300-4	GPIB + RS232 INTERFACE CARD	1
F9354-5	QUAD CHANNEL FRONT PANEL	1
M935X	MECHANICAL FOR 9354AL	1
ACCESSORIES-9354	ACCESSORIES FOR 9354AL	1

PART: 9354T DESC: 500 MHz, QUAD CHANNEL 500 MS/s DSO, 100 KB


COMPONENT	PART DESCRIPTION (TY PER ASSEMBLY
205750000	IC AND-OR GATE ARRAY 16V8	1
554500001	TAPPING SCREW W/U-THREAD	2
709354T16	FRONT LABEL 9354T	1
709354913	SERIAL NUMBER PLATE 9354T	1
F9302-1-4	PROCESSOR CARD WITH 4Mb DRA	AM 1
F9350T-21	ACQUISITION MEMORY 2 X 100 KI	B 2
F9354-31	MAIN CARD (FRONT END, ADC, T	DC) 1
F9300-4	GPIB + RS232 INTERFACE CARD	1
F9354-5	QUAD CHANNEL FRONT PANEL	1
M935X	MECHANICAL FOR 9354T	1
ACCESSORIES-9354	ACCESSORIES FOR 9354T	1

PART: 9354TM DESC: 500 MHz, QUAD CHANNEL 500 MS/s DSO, 500 KB


COMPONENT	PART DESCRIPTION (TY PER ASSEMBLY
205750000	IC AND-OR GATE ARRAY 16V8	1
554500001	TAPPING SCREW W/U-THREAD	2
709354TM16	FRONT LABEL 9354TM	1
709354913	SERIAL NUMBER PLATE 9354TM	1
F9302-1-8	PROCESSOR CARD WITH 8Mb DRA	M 1
F9350TM-21	ACQUISITION MEMORY 2 X 500 K	B 2
F9354-31	MAIN CARD (FRONT END, ADC, T	DC) 1
F9300-4	GPIB + RS232 INTERFACE CARD	1
F9354-5	QUAD CHANNEL FRONT PANEL	1
M935X	MECHANICAL FOR 9354TM	1
ACCESSORIES-9354	ACCESSORIES FOR 9354TM	1

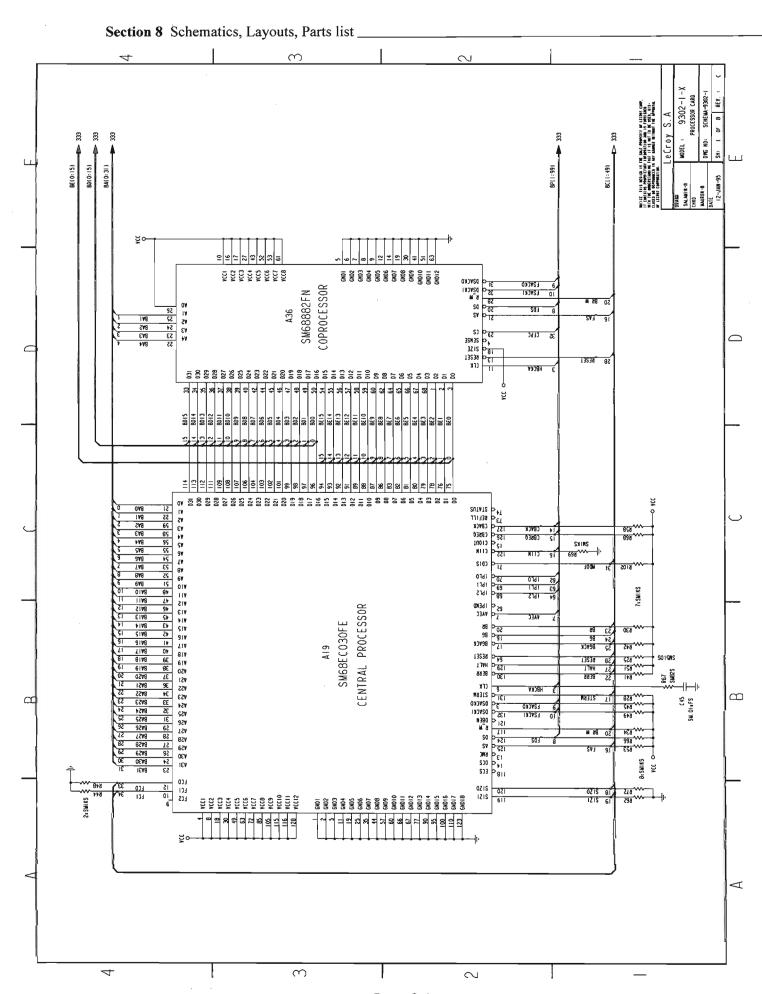


Page 8-4

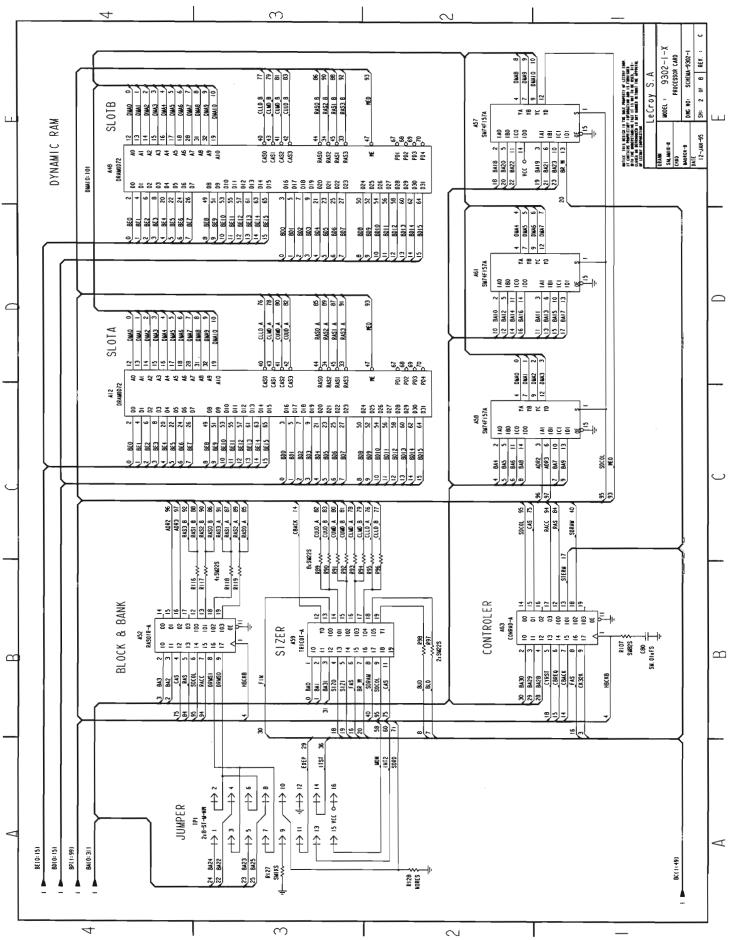


Page 8-5

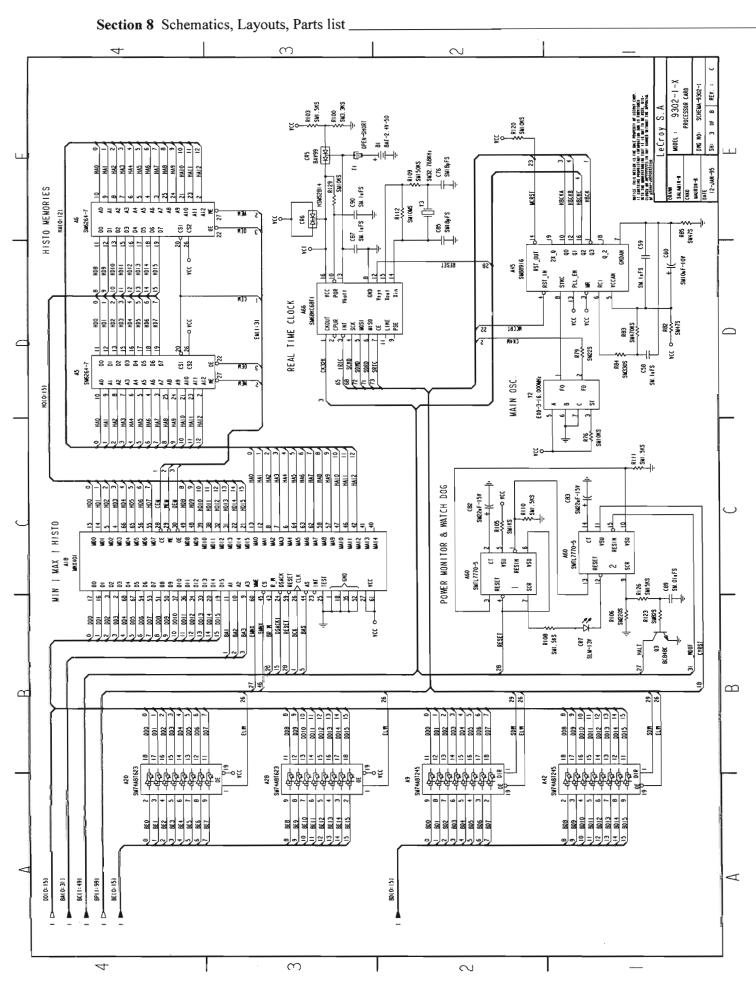

Page 8-6

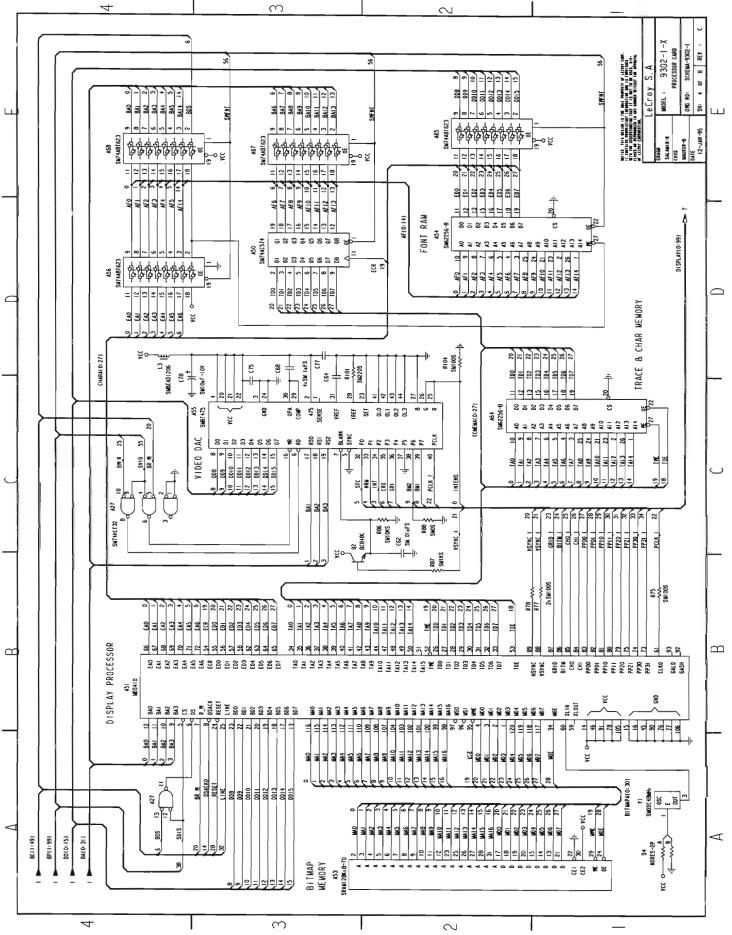


Page 8-8

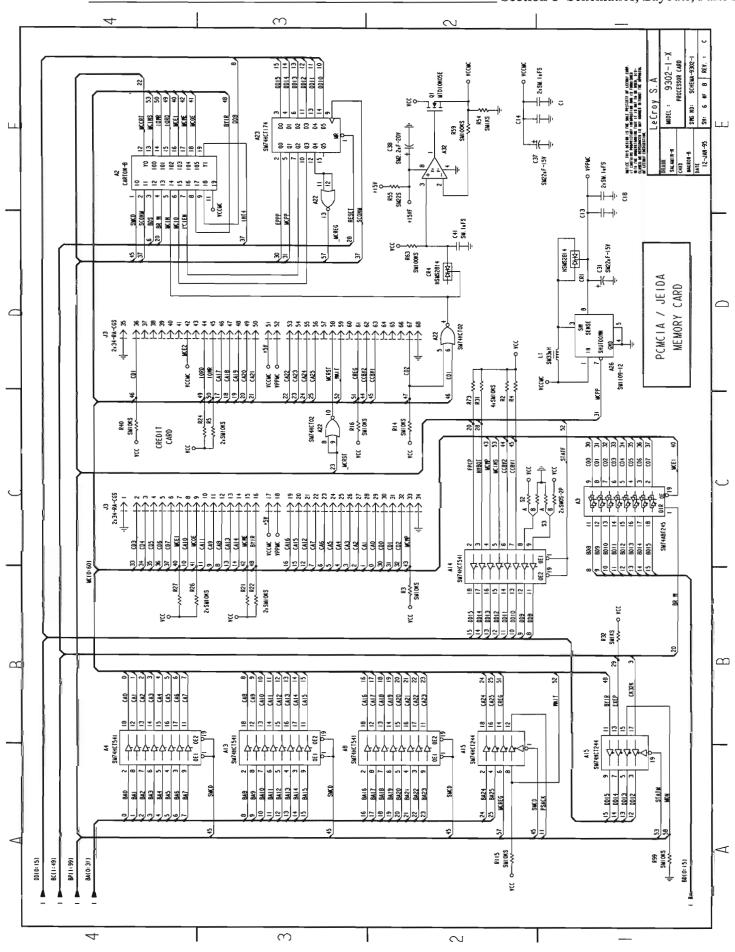



Page 8-9


Page 8-10


Page 8-11

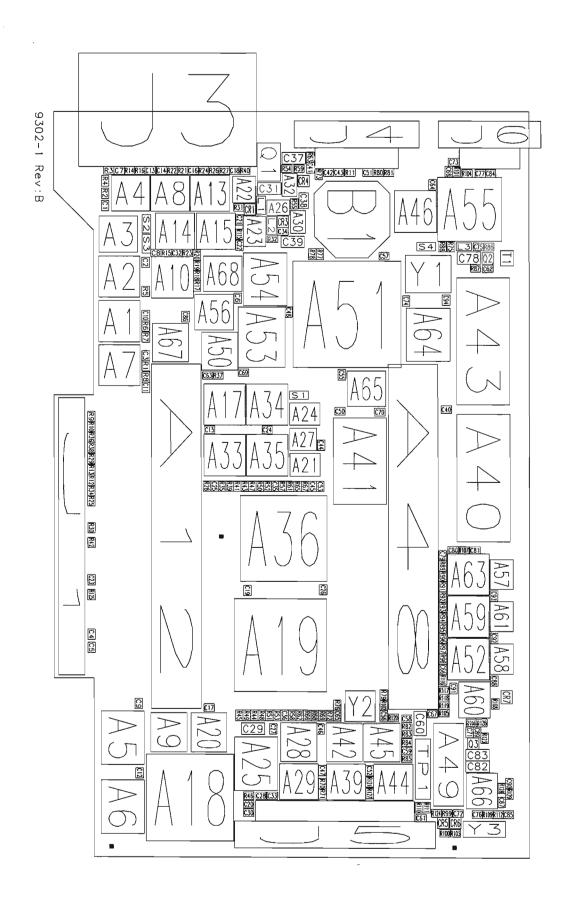


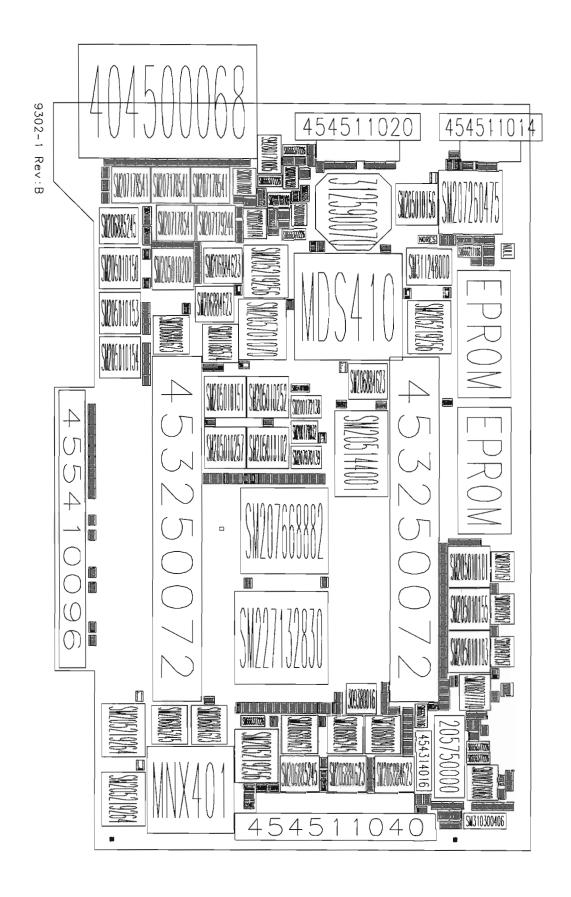

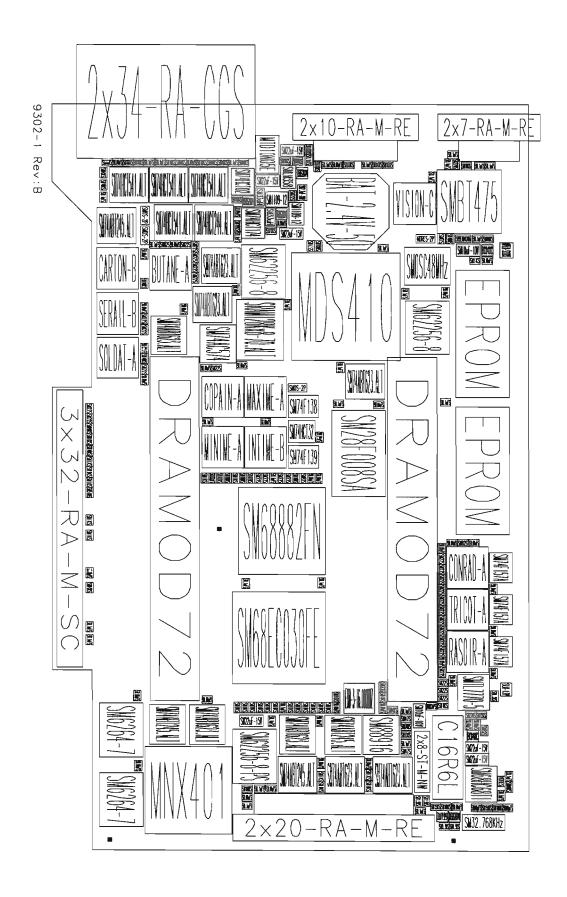

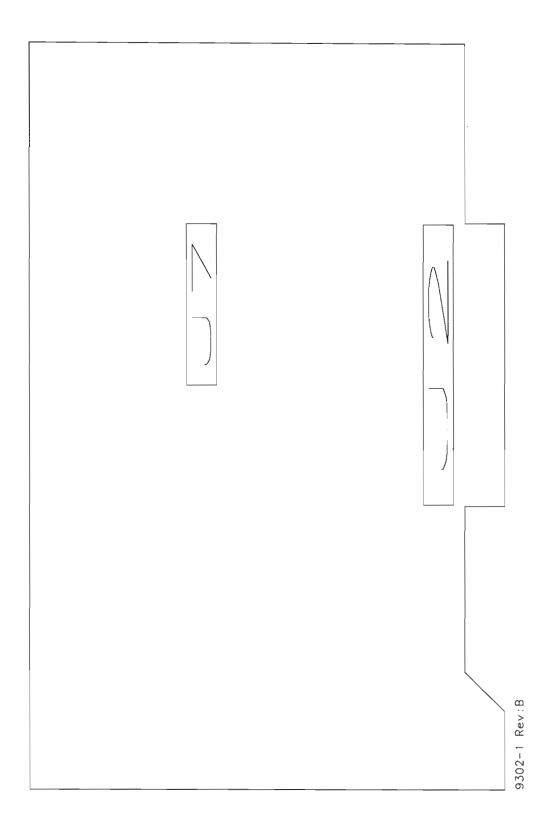

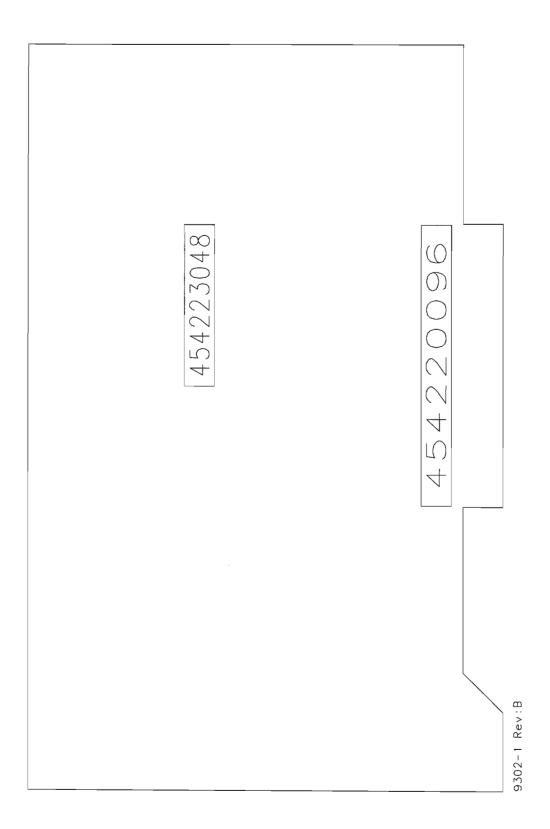

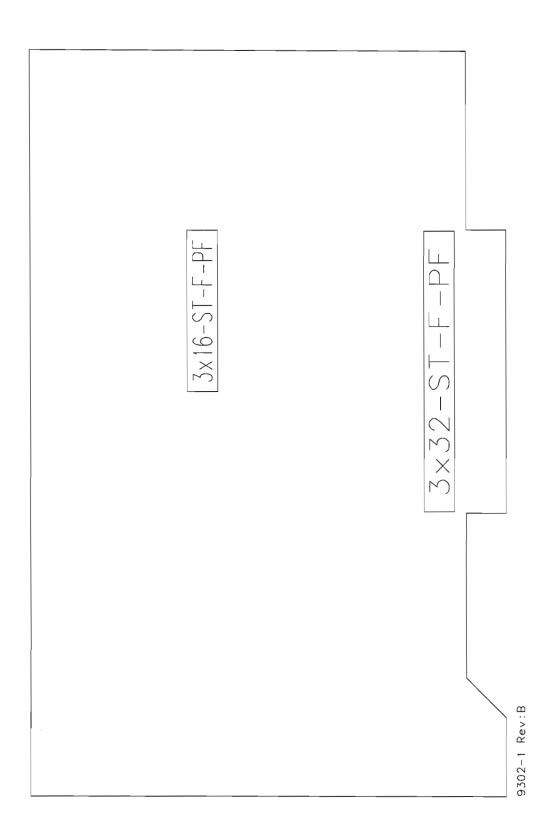

PART: F9302-1-X DESC: PROCESSOR with 4 Mb or 8Mb or 16Mb RAM

Location	Part Number	Description	Location	Part Number	Description
A1	SM205010153	SERAIL-B	A52	SM205010103	RASOIR-A
A2	SM205010150	CARTON-B	A53	SM205701070	SRAM 128Kx8
A3	SM206885245	SM74ABT245	A54	SM205219256	SM62256-8
A 4	SM207178541	SM74HCT541	A55	SM207260475	SMBT475
A5	SM205219264	SM6264-7	A56	SM206884623	SM74ABT623
A6	SM205219264	SM6264-7	A57	SM207972157	SM74F157A
A7	SM205010154	SOLDAT-A	A58	SM207972157	SM74F157A
A8	SM207178541	SM74HCT541	A59	SM205010155	TRICOT-A
A9	SM206885245	SM74ABT245	A60	SM208277770	SMTL7770-5
A10	SM205010200	BUTANE-A	A61	SM207972157	SM74F157A
A12	453250072	DRAMOD72	A63	SM205010101	CONRAD-A
A13	SM207178541	SM74HCT541	A64	SM205219256	SM62256-8
A14	SM207178541	SM74HCT541	A65	SM206884623	SM74ABT623
A15	SM207179244	SM74HCT244	A66	SM200276068	SM68HC68T1
A17	SM205010151	COPAIN-A	A67	SM206884623	SM74ABT623
A18	MNX401	MNX401	A68	SM206884623	SM74ABT623
A19	SM227132830	SM68EC030FE	B1	312590070	BAT-2.4V-50
A20	SM206884623	SM74ABT623	C1	SM661207104	SM.1uFS
A21	SM207970139	SM74F139	C2	SM661207103	SM.01uFS
A22	SM200178002	SM74HCT02	C3	SM661207102	SM.001uFS
A23	SM200344174	SM74HCT174	C4	SM661207104	SM.luFS
A24	SM200172138	SM74F138	C5	SM661207104	SM.1uFS
A25	SM205219256	SM62256-8-PS	C6	SM661207104 SM661207103	SM.01uFS
A26	SM208780109	SM1109-12	C7	SM661207103	SM.01uFS
A27	SM200178032	SM74HCT32	C8	SM661207104	SM.luFS
A28	SM206884623	SM74ABT623	C9	SM661207104 SM661207103	SM.01uFS
A29	SM206885245	SM74ABT245	C10	SM661207103	SM.01uFS
A30	SM208780109	SM1109-12	C11	SM661207103	SM.01uFS
A32	SM208470358	SMLM358	C12	SM661207103	SM.01uFS
A33	SM205010257	MINIME-A	C13	SM661207104	SM.1uFS
A34	SM205010252	MAXIME-A	C14	SM661207104	SM.1uFS
A35	SM205010102		C15	SM661207104	
A36	SM207668882	SM68882FN	C16	SM661207103	SM.01uFS
A39	SM206884623	SM74ABT623	C17	SM661207103	SM.01uFS
A40	EPROM	EPROM	C18	SM661207104	SM.1uFS
A41	SM205144001	SM28F008SA	C19	SM661207104	SM.1uFS
A42	SM206885245	SM74ABT245	C20	SM661207104 SM661207103	SM.01uFS
A43	EPROM	EPROM	C21	SM661207103	SM.01uFS
A44	SM206884623	SM74ABT623	C22	SM661207104	SM.1uFS
A45	SM208680916	SM88916	C23	SM661255101	SM100pFS
A46	SM205010156	VISION-C	C23	SM661207103	SM.01uFS
A48	453250072	DRAMOD72	C25	SM661255101	SM100pFS
A49	205750000	C16R6L	C25	SM661207104	SM.1uFS
A50	SM201186574	SM74AC574	C27	SM661207104 SM661207104	SM.1uFS
A51	MDS410	MDS410	C27	SM661207104 SM661207104	SM.1uFS SM.1uFS
1101	TAIDOTIO	TATOCATO	C20	514100120/104	SIVILIUES

PART: F9302-1-X DESC: PROCESSOR with 4 Mb or 8Mb or 16Mb RAM

Location	Part Number	Description	Location	Part Number	Description
C29	SM666377226	SM22uF-15V	C77	SM661207104	SM.1uFS
C30	SM661207104	SM.1uFS	C78	SM666217106	SM10uF-10V
C31	SM666377226	SM22uF-15V	C79	SM661207103	SM.01uFS
C32	SM661207103	SM.01uFS	C80	SM661207103	SM.01uFS
C33	SM661207103	SM.01uFS	C81	SM661207103	SM.01uFS
C34	SM661207103	SM.01uFS	C82	SM666377226	SM22uF-15V
C35	SM661207104	SM.1uFS	C83	SM666377226	SM22uF-15V
C36	SM661207104	SM.1uFS	C84	SM661207104	SM.1uFS
C37	SM666377226	SM22uF-15V	C85	SM661255180	SM18pFS
C38	SM666327225	SM2.2uF-20V	C86	SM661207103	SM.01uFS
C39	SM666377226	SM22uF-15V	C87	SM661207104	SM.1uFS
C40	SM661207104	SM.1uFS	C88	SM661207103	SM.01uFS
C41	SM661207104	SM.1uFS	C89	SM661207103	SM.01uFS
C42	SM661207104	SM.1uFS	C90	SM661207104	SM.1uFS
C43	SM661207103	SM.01uFS	C91	SM661207103	SM.01uFS
C44	SM661207103	SM.01uFS	C92	SM661207103	SM.01uFS
C45	SM661207103	SM.01uFS	C93	SM661207103	SM.01uFS
C46	SM661207103	SM.01uFS	C94	SM661207103	SM.01uFS
C47	SM661207103	SM.01uFS	J1	455410096	3x32-RA-M-SC
C48	SM661207104	SM.1uFS	J2	454220096	3x32-ST-F-PF
C50	SM661207104	SM.1uFS	J3	404500068	2x34-RA-CGS
C51	SM661207104	SM.1uFS	J4	454511020	2x10-RA-M-RE
C52	SM661207103	SM.01uFS	J5	454511040	2x20-RA-M-RE
C53	SM661207103	SM.01uFS	J6	454511014	2x7-RA-M-RE
C55	SM661207104	SM.1uFS	J7	454223048	3x16-ST-F-PF
C56	SM661207103	SM.01uFS	L1	SM300056332	SM33uH
C57	SM661207104	SM.luFS	L2	SM300056332	SM33uH
C58	SM661207104	SM.1uFS	L3	SM301502001	SMBEAD1206
C59	SM661207104	SM.1uFS	Q1	SM280171005	MTD10N05E
C60	SM666217106	SM10uF-10V	Q2	SM270330848	BC848C
C61	SM661207104	SM.1uFS	Q3	SM270330848	BC848C
C62	SM661207103		R1	SM652101103	SM10KS
C63	SM661207103	SM.01uFS	R2	SM652101103	SM10KS
C64	SM661207104	SM.luFS	R3	SM652101103	SM10KS
C65	SM661207103	SM.01uFS	R4	SM652101103	SM10KS
C66	SM661207103	SM.01uFS	R5	SM652101103	SM10KS
C68	SM661207104	SM.1uFS	R6	SM652101220	SM22S SM22S
C69	SM661207103	SM.01uFS	R7	SM652101220 SM652101220	SM22S
C70	SM661207103	SM.01uFS	R8	SM652101220	SM22S
C71	SM661207103	SM.01uFS	R9		SM22S
C72	SM661207103	SM.01uFS	R10 R11	SM652101220 SM652101103	SM10KS
C73	SM661207104	SM.luFS	R12	SM652101103 SM652101102	SM1KS
C74	SM661207104	SM.1uFS	R12	SM652101102	SM1KS SM1KS
C75	SM661207104	SM.1uFS		SM652101102 SM652101103	SM10KS
C76	SM661255180	SM18pFS	R14	3M037101103	SMIIMS

PART: F9302-1-X DESC: PROCESSOR with 4 Mb or 8Mb or 16Mb RAM

Location	Part Number	Description	Location	Part Number	Description
R15	SM652101820	SM82S	R63	SM652101104	SM100KS
R16	SM652101103	SM10KS	R65	SM652101104 SM652101103	SM100KS
R17	SM6521011220	SM22S	R66	SM652101103	SMIKS
R18	SM652101220	SM22S	R67	SM652101102 SM652101820	SM82S
R19	SM652101220	SM22S	R68	SM652101102	SM1KS
R20	SM652101220	SM22S	R69	SM652101102	SM1KS
R21	SM652101103	SM10KS	R70	SM652101102	SM1KS
R22	SM652101103	SM10KS	R71	SM652101102	SM1KS
R23	SM652101220	SM22S	R72	SM652101102	SM1KS
R24	SM652101103	SM10KS	R73	SM652101103	SM10KS
R25	SM652101511	SM510S	R75	SM652101101	SM100S
R26	SM652101103	SM10KS	R76	SM652101103	SM10KS
R27	SM652101103	SM10KS	R77	SM652101101	SM100S
R28	SM652101102	SM1KS	R78	SM652101101	SM100S
R29	SM652101103	SM10KS	R79	SM652101220	SM22S
R30	SM652101102	SM1KS	R80	SM652101103	SM10KS
R31	SM652101103	SM10KS	R81	SM652101103	SM10KS
R32	SM652101102	SM1KS	R82	SM652101470	SM47S
R34	SM652101102	SM1KS	R83	SM652101474	SM470KS
R35	SM652101103	SM10KS	R84	SM652101331	SM330S
R36	SM652101103	SM10KS	R85	SM652101470	SM47S
R37	SM652101220	SM22S	R86	SM652101103	SM10KS
R38	SM652101103	SM10KS	R87	SM652101102	SM1KS
R39	SM652101103	SM10KS	R88	SM654101000	SM0S
R40	SM652101103	SM10KS	R89	SM652101220	SM22S
R41	SM652101102	SM1KS	R90	SM652101220	SM22S
R42	SM652101102	SM1KS	R91	SM652101220	SM22S
R43	SM652101103	SM10KS	R92	SM652101220	SM22S
R44	SM652101102	SM1KS	R93	SM652101220	SM22S
R45	SM652101102	SM1KS	R94	SM652101220	SM22S
R46	SM652101103	SM10KS	R95	SM652101220	SM22S
R47	SM652101103	SM10KS	R96	SM652101220	SM22S
R48	SM652101102	SM1KS	R97	SM652101220	SM22S
R49	SM652101102	SM1KS	R98	SM652101220	SM22S
R50	SM652101220	SM22S	R99	SM652101103	SM10KS
R51	SM652101102	SM1KS	R100	SM652101332	SM3.3KS
R52	SM652101220	SM22S	R101	SM652101221	SM220S
R53	SM652101102	SM1KS	R102	SM652101102	SM1KS
R54	SM652101102	SM1KS	R103	SM652101152	SM1.5KS
R55	SM652101220	SM22S	R104	SM652101101	SM100S
R57	SM652101220	SM22S	R105	SM652101102	SM1KS
R58	SM652101102	SM1KS	R106	SM652101221	SM220S
R59	SM652101104	SM100KS	R107	SM652101820	SM82S
R61	SM652101220	SM22S	R108	SM652101152	SM1.5KS
R62	SM652101102	SM1KS	R109	SM652101154	SM150KS

PART: F9302-1-X	DESC: PROCESSOR	with 4 Mb or	8Mb or 16Mb RAM

Location	Part Number	Description	Location	Part Number	Description
Location	Part Number	Description SM1.5KS SM1.5KS SM10MS SM10KS SM22S SM22S SM22S SM22S SM22S SM22S SM10KS SM10KS SM10KS SM10KS	Location	Part Number	Description
R124 R125 R126	SM652101153 SM652101103 SM652101153	SM15KS SM10KS SM15KS	CR5 CR6 CR7 TP1	SM236030099 SM232032814 SM256232013 454314016	BAV99 SOT23 HSMS2814 SLM-13V 2x8-ST-M-NW

PART: F9302-1-4	DESC	PROCESSOR CARD with 4MB DRAM for 9354A & 9354T
1 /4 IV 1 . IV 7.311 4-7 1-44		

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
205800130 454370002 S9302-1	MODULE DRAM 1MX32 BIT SHUNT 2 POS PROCESSOR CARD WHOUT DR	1 2 AM 1

PART: F9302-1-8 DESC: PROCESSOR CARD with 8MB DRAM for 9354AM & 9354TM

COMPONENT PART DESCRIPTION QTY PE	R ASSEMBLY
205800230 MODULE DRAM 2MX32 BIT	1
454370002 SHUNT 2 POS S9302-1 PROCESSOR CARD WHOUT DRAM	2

PART: F9302-1-16 DESC: PROCESSOR CARD with 16MB DRAM for 9354AL


COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
205800230	MODULE DRAM 2MX32	2
454370002	SHUNT 2 POS	2
S9302-1	PROCESSOR CARD WHOUT DRA	AM 1

PART: S9302-1	DES	C: PROCESSO	R CARL	without DRAM
1 AX 1 . 37302-1	יטעע	C. I KOCEBBO		WILLDEL DIVINI

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
309380016	CRYSTAL OSC (PROGR) 16 MH	Z 1
312590070	BATTERY LITHIUM 3V 70MAH	
400331020	SOCKET IC ST DIP-20	1
404500068	CONN BD TO BD 68 POS	1
453250072	CONN PC EDGE/SOLD TAIL 72	2
454314016	HDR DIP SOLD TO MALE 16	1
454511014	HDR SOLD TAIL/MALE/14/RT	1
454511020	HDR SOLD TAIL/MALE 20	1
454511040	HDR SOLD TAIL/MALE/40/RT	1
455410096	CONN RT ANGLE MALE 96 S-C	
550130108	SCREW CYL HD M3X8	2
552130101	NUT HEX M3	2
719302103	PC BD PREASS'Y 9302-1	1
MDS410	IC RSDP GATE ARRAY MDS410	
MNX401	ICMIN MAX GATEARR. MNX40	
SM200172138	IC 3-8 DECODER 74F138	1
SM200178002	IC 2-INPUT NOR HCT02	1 1
SM200178032 SM200276068	IC 2-IN OR HCT32 IC RTC SERIAL 68HC68T1	1
SM200276068 SM200344174	IC HEX D-FLOP HCT174	1
SM201186574	IC OCTAL D-TYP FLOP 74AC57	_
SM205010101	PROGRAMMED GAL CONRAD	
SM205010101	PROGRAMMED GAL INTIME-B	
SM205010102 SM205010103	PROGRAMMED GAL RASOIR-A	
SM205010150	PROGRAMMED GAL CARTON-	
SM205010151	PROGRAMMED GAL COPAIN-A	
SM205010153	PROGRAMMED GAL SERAIL-O	
SM205010154	PROGRAMMED GAL SOLDAT-	A 1
SM205010155	PROGRAMMED GAL TRICOT-A	1
SM205010156	PROGRAMMED GAL VISION-C	1
SM205010200	PROGRAMMED GAL BUTANE-	A 1
SM205010252	PROGRAMMED GAL MAXIME	-A 1
SM205010257	PROGRAMMED GAL MINIME-	A 1
SM205144001	8-MBIT FLASH MEM 28F008SA	
SM205219256	IC 32K X 8 SRAM MS62256	3
SM205219264	IC 8K X 8 SRAM 70 NSEC 6264	2
SM205701070	IC 128KX8 STAT RAM 70 NS	1
SM206884623	IC OCTAL BUS TRANSCVR AB	
SM206885245	IC BUS TRANSCVR ABT245	4
SM207178541	IC BUFFER/LINE DR HCT541	4
SM207179244	IC BUF/LINE DRIV HCT244	1
SM207260475	IC RAMDAC 256W 50MHZ BT4	
SM207668882	IC CO PROCESSOR 68882	1
SM207970139	IC DECODER/DEMUX 74F139	1


PART: S9302-1	DESC: PROCESSOR CARD without DRAM
---------------	-----------------------------------

COMPONENT	PART DESCRIPTION	QTY PER	ASSEMBLY
SM207972157	IC DATA SEL/MUX 74F157A		3
SM208277770	IC DUAL PWR SUPPLY SUP 777	0-5	1
SM208470358	IC DUAL OP AMP 358D	0-5	1
SM208680916	IC LOW SKEW CLOCK DRIVER	88916	1
SM208780109	IC MICROPOWER DC-DC CONV		2
SM227132830	IC 32-BIT U PROC 68EC030		1
SM232032814	DIODE 2814		4
SM236030099	DIODE SO-PKG BAV99		1
SM256232013	DIODE LIGHT EMITTING RED		1
SM270330848	TRANSISTOR NPN BC848C		2
SM280171005	TRANS POWER MOSFET MTD1	0N05E	1
SM300056332	INDUCTOR WOUND 33 UH		2
SM301502001	BEAD (FERRITE CHIP)		1
SM310300406	CRYSTAL 32768HZ		1
SM311248000	CRYSTAL OSCILLATOR 48MHZ	Z	1
SM652101101	RES CHIP (E24) 1% 100 OHM		4
SM652101102	RES CHIP (E24) 1% 1 K		28
SM652101103	RES CHIP (E24) 1% 10 K		34
SM652101104	RES CHIP (E24) 1% 100 K		2
SM652101106	RES CHIP (E24) 1% 10 MEG		1
SM652101152	RES CHIP (E24) 1% 1.5 K		4
SM652101153	RES CHIP (E24) 1% 15 K		2
SM652101154	RES CHIP (E24) 1% 150 K		1
SM652101220	RES CHIP (E24) 1% 22 OHMS		31
SM652101221	RES CHIP (E24) 1% 220 OHM		2
SM652101331	RES CHIP (E24) 1% 330 OHM		1
SM652101332	RES CHIP (E24) 1% 3.3 K		1
SM652101470	RES CHIP (E24) 47 OHMS		2
SM652101474	RES CHIP (E24) 1% 470 K		1
SM652101511	RES CHIP (E24) 1% 510 OHM		1
SM652101820	RES CHIP (E24) 1% 82 OHMS		4
SM654101000	CHIP JUMPER ZERO OHMS		4
SM661207102	CAP CERA CHIP 10% .001UF		1
SM661207103	CAP CERA CHIP 20% .01UF (080)5)	41
SM661207104	CAP CERA CHIP 20% .1 UF		36
SM661255101	CAP CERA CHIP 5% 100 PF		2
SM661255180	CAP CERA CHIP 5% 18PF		2
SM666217106	CAP MOLD TANT CHIP 10 UF		2
SM666327225	CAP MOLD TANT CHIP 2.2 UF		1
SM666377226	CAP MOLD TANT CHIP 22 UF		6

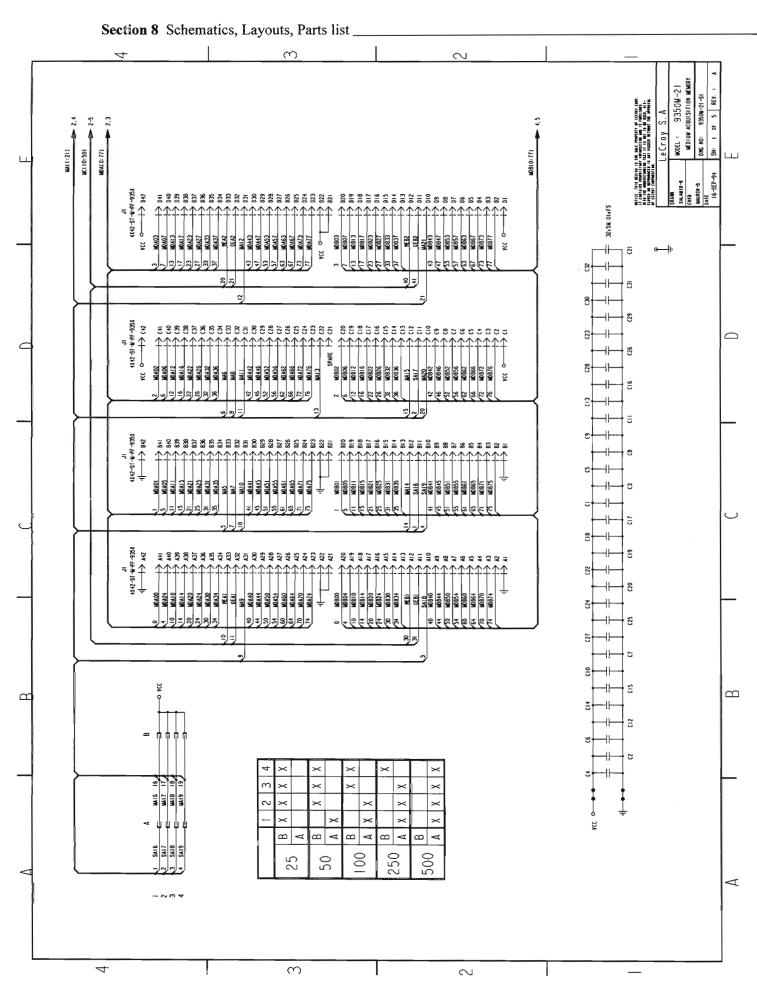


Page 8-24


Page 8-25

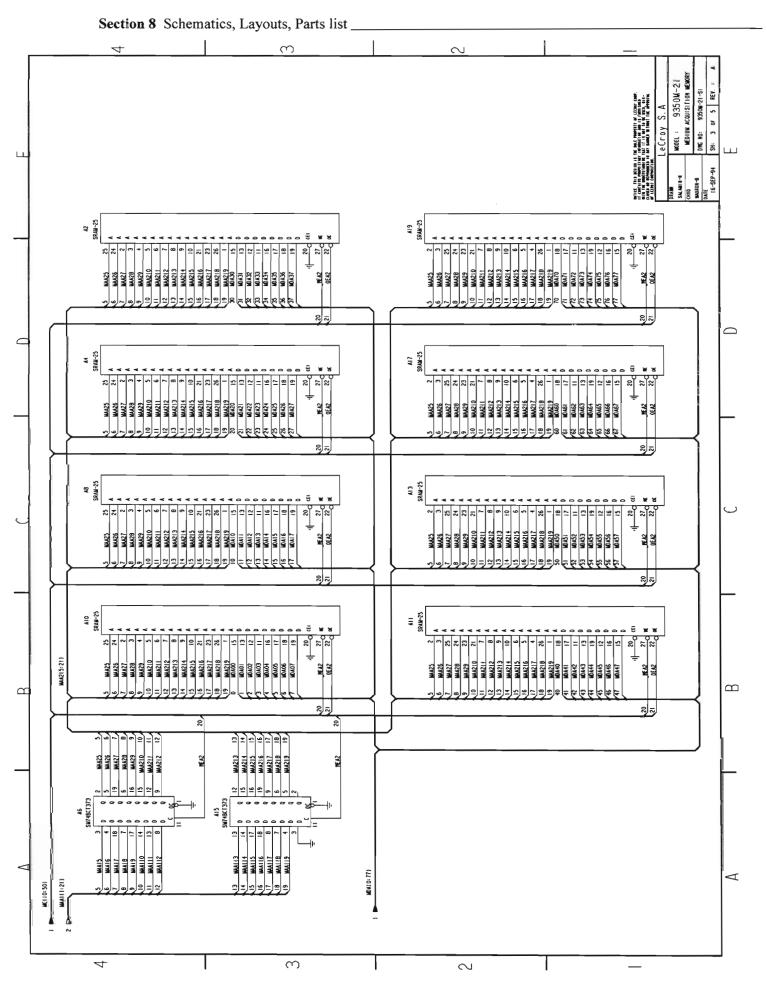



Page 8-27

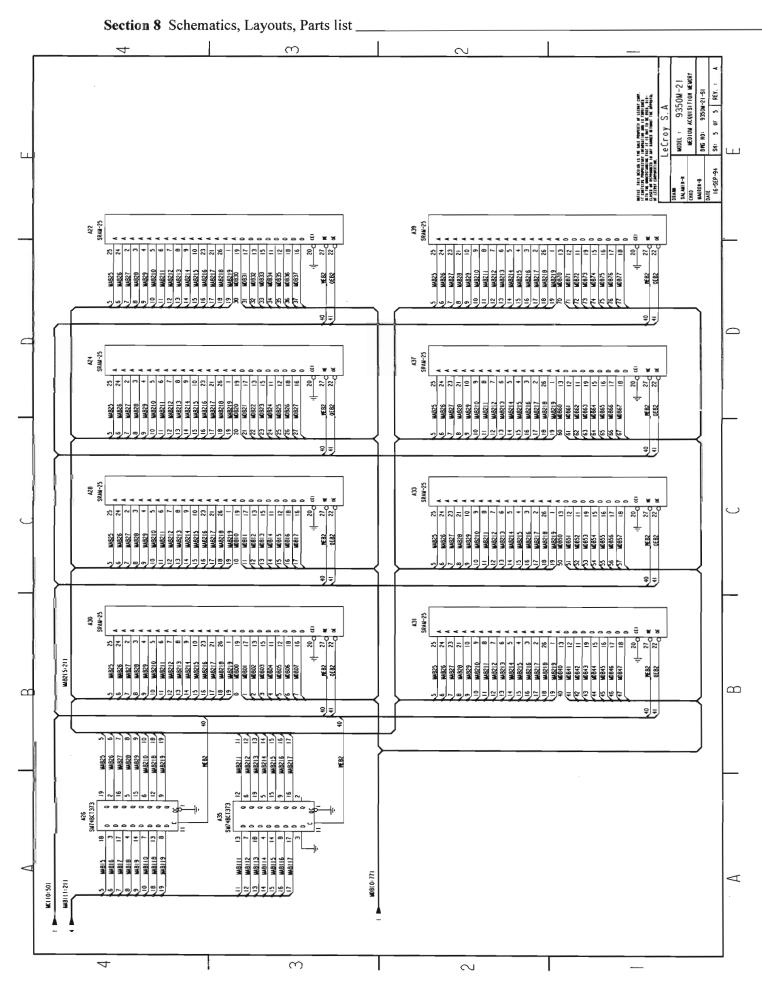



Page 8-28

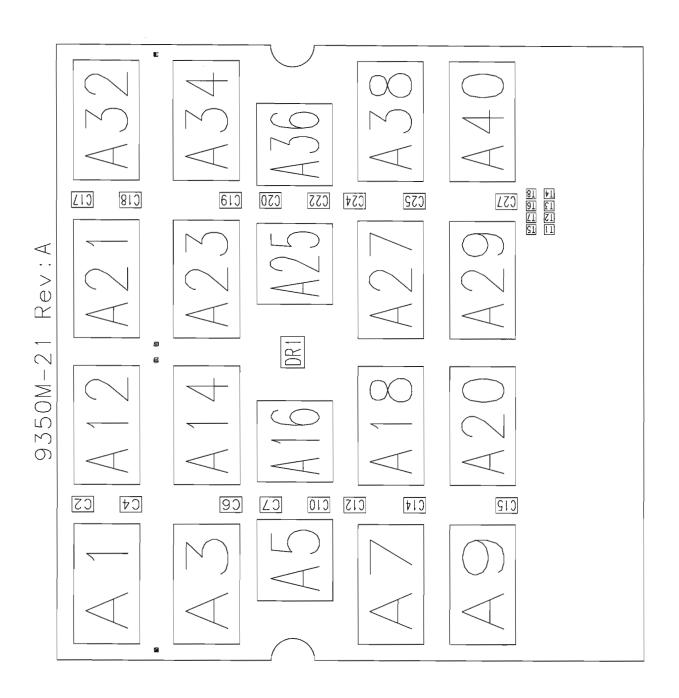


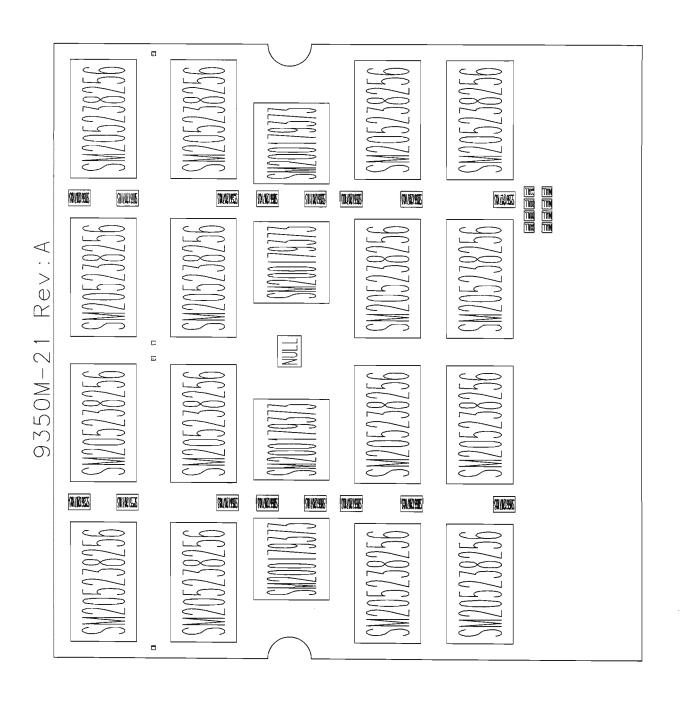

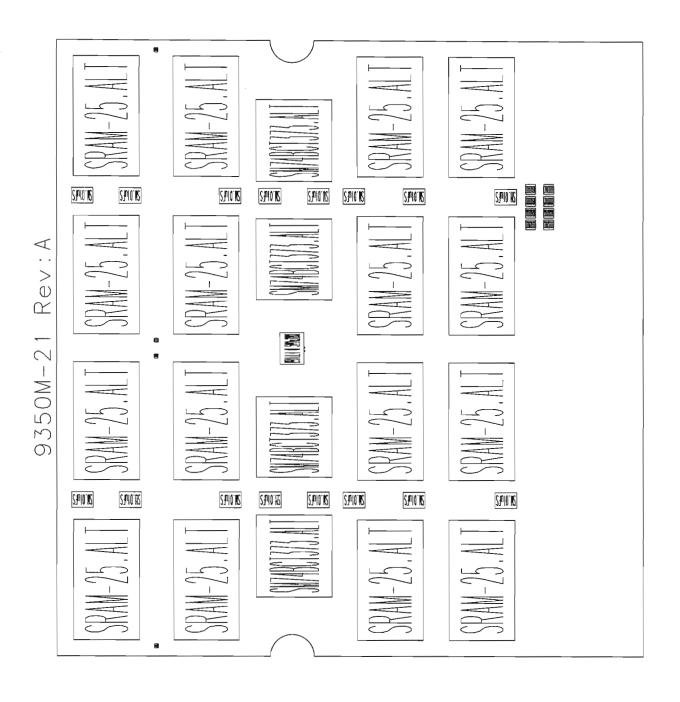

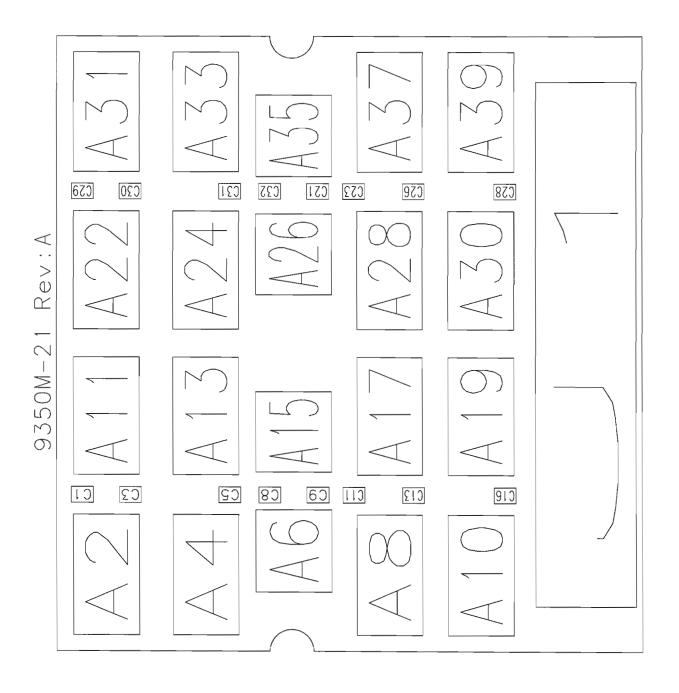

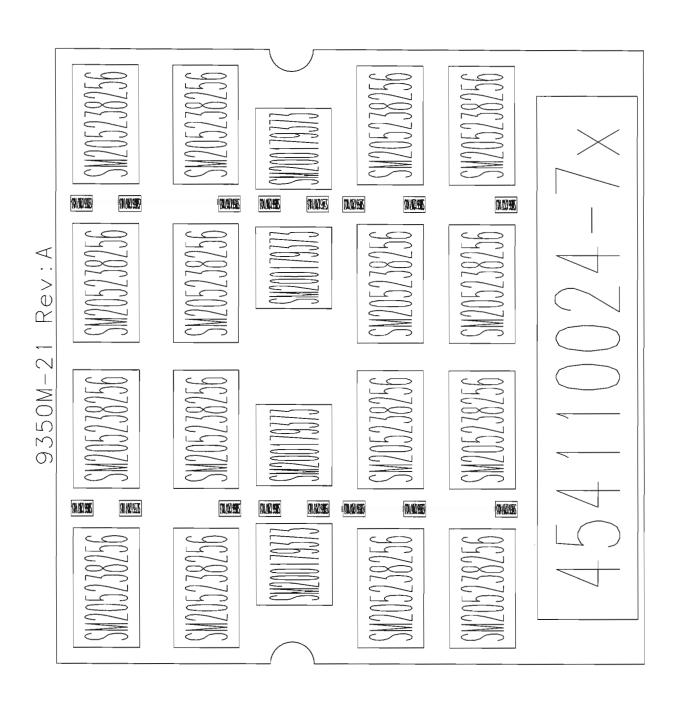

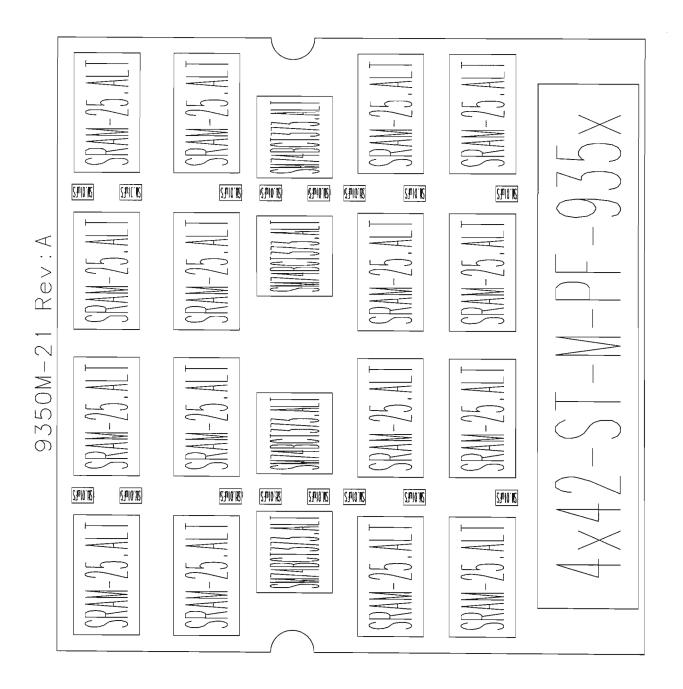

PART: F9350-21 DESC: ACQUISITION MEMORY CARD 2x50K for 9354A & 9354T

Location	on Part Number	Description	Locatio	on Part Number	Description
A1	SM205228863	SRAM8Kx8-25	A38	SM205228863	SRAM8Kx8-25
A 2	SM205228863	SRAM8Kx8-25	A39	SM205228863	SRAM8Kx8-25
A 3	SM205228863	SRAM8Kx8-25	A40	SM205228863	SRAM8Kx8-25
A 4	SM205228863	SRAM8Kx8-25	C1	SM661207103	SM.01uFS
A 5	SM200179373	SM74BCT373	C2	SM661207103	SM.01uFS
A6	SM200179373	SM74BCT373	C3	SM661207103	SM.01uFS
A 7	SM205228863	SRAM8Kx8-25	C4	SM661207103	SM.01uFS
A8	SM205228863	SRAM8Kx8-25	C5	SM661207103	SM.01uFS
A9	SM205228863	SRAM8Kx8-25	C6	SM661207103	SM.01uFS
A10	SM205228863	SRAM8Kx8-25	C7	SM661207103	SM.01uFS
A 11	SM205228863	SRAM8Kx8-25	C8	SM661207103	SM.01uFS
A12	SM205228863	SRAM8Kx8-25	C9	SM661207103	SM.01uFS
A13	SM205228863	SRAM8Kx8-25	C10	SM661207103	SM.01uFS
A 14	SM205228863	SRAM8Kx8-25	C11	SM661207103	SM,01uFS
A15	SM200179373	SM74BCT373	C12	SM661207103	SM.01uFS
A16	SM200179373	SM74BCT373	C13	SM661207103	SM.01uFS
A17	SM205228863	SRAM8Kx8-25	C14	SM661207103	SM.01uFS
Al8	SM205228863	SRAM8Kx8-25	C15	SM661207103	SM.01uFS
A19	SM205228863	SRAM8Kx8-25	C16	SM661207103	SM.01uFS
A20	SM205228863	SRAM8Kx8-25	C17	SM661207103	SM.01uFS
A21	SM205228863	SRAM8Kx8-25	C18	SM661207103	SM.01uFS
A22	SM205228863	SRAM8Kx8-25	C19	SM661207103	SM.01uFS
A23	SM205228863	SRAM8Kx8-25	C20	SM661207103	SM.01uFS
A24	SM205228863	SRAM8Kx8-25	C21	SM661207103	SM.01uFS
A25	SM200179373	SM74BCT373	C22	SM661207103	SM.01uFS
A26	SM200179373	SM74BCT373	C23	SM661207103	SM.01uFS
A27	SM205228863	SRAM8Kx8-25	C24	SM661207103	SM.01uFS
A28	SM205228863	SRAM8Kx8-25	C25	SM661207103	SM.01uFS
A29	SM205228863	SRAM8Kx8-25	C26	SM661207103	SM.01uFS
A30	SM205228863	SRAM8Kx8-25	C27	SM661207103	SM.01uFS
A 31	SM205228863	SRAM8Kx8-25	C28	SM661207103	SM.01uFS
A32	SM205228863	SRAM8Kx8-25	C29	SM661207103	SM.01uFS
A33	SM205228863	SRAM8Kx8-25	C30	SM661207103	SM.01uFS
A34	SM205228863	SRAM8Kx8-25	C31	SM661207103	SM.01uFS
A35	SM200179373	SM74BCT373	C32	SM661207103	SM.01uFS
A36	SM200179373	SM74BCT373	Jl	454110024	7x 4x42
A37	SM205228863	SRAM8Kx8-25			

PART: S9350-21 DESC: ACQUISITION MEMORY CARD 2x50K for 9354A & 9354T

COMPONENT	PART DESCRIPTION QT	Y PER ASSEMBLY
~		
145244100	CAR ALLI COMPACT AVIAL 100001	IF. 0
145344109	CAP ALU COMPACT AXIAL 10000U	JF 2
454110024	HDR 2MM PRESSFIT TO MALE 24	7
719350M21	PC BD PREASS'Y 9350M-21	1
SM200179373	IC OCTAL LATCH 74BCT373	8
SM205228863	IC 8K X 8 STATIC RAM 25NS	32
SM661207103	CAP CERA CHIP 20% .01UF (0805)	32

PART: S9350M-21 DESC: ACQUISITION MEMORY CARD 2x250K for 9354AM & 9354MT

COMPONENT	PART DESCRIPTION QT	Y PER ASSEMBLY
145344109	CAP ALU COMPACT AXIAL 10000U	F 2
454110024	HDR 2MM PRESSFIT TO MALE 24	7
719350M21	PC BD PREASS'Y 9350M-21	1
SM200179373	IC OCTAL LATCH 74BCT373	8
SM205238256	IC 32K X 8 SRAM 25NS	32
SM661207103	CAP CERA CHIP 20% .01UF (0805)	32

PART: F9350L-2 DESC: ACQUISITION MEMORY CARD 2 x 2 M for 9354AL


COMPONENT	PART DESCRIPTION	QTY PER	ASSEMBLY
145344109	CAP ALU COMPACT AXIAL 1000	0UF	2
454110024	HDR 2MM PRESSFIT TO MALE 24	4	7
719350L23	PC BD PREASS'Y 9350L-2		1
SM200179373	IC OCTAL LATCH 74BCT373		4
SM205232226	IC 128KX8 SRAM 25 6226AWJ25		32
SM207480843	IC 9-BIT BUS INT LA 74BCT29843	3	4
SM661207103	CAP CERA CHIP 20% .01UF (0805)	32

PART: F9350M-21 DESC: ACQUISITION MEMORY CARD 2x250K for 9354AM & 9354TM

Locati	on Part Number	Description	Locati	on Part Number	Description
A 1	SM205238256	SRAM-25	A38	SM205238256	SRAM-25
A2	SM205238256	SRAM-25	A39	SM205238256	SRAM-25
A3	SM205238256	SRAM-25	A40	SM205238256	SRAM-25
A 4	SM205238256	SRAM-25	C1	SM661207103	SM.01uFS
A 5	SM200179373	SM74BCT373	C2	SM661207103	SM.01uFS
A6	SM200179373	SM74BCT373	C3	SM661207103	SM.01uFS
A 7	SM205238256	SRAM-25	C4	SM661207103	SM.01uFS
A8	SM205238256	SRAM-25	C5	SM661207103	SM.01uFS
A9	SM205238256	SRAM-25	C6	SM661207103	SM.01uFS
A10	SM205238256	SRAM-25	C7	SM661207103	SM.01uFS
A 11	SM205238256	SRAM-25	C8	SM661207103	SM.01uFS
A12	SM205238256	SRAM-25	C9	SM661207103	SM.01uFS
A13	SM205238256	SRAM-25	C10	SM661207103	SM.01uFS
A 14	SM205238256	SRAM-25	C11	SM661207103	SM.01uFS
A15	SM200179373	SM74BCT373	C12	SM661207103	SM.01uFS
A16	SM200179373	SM74BCT373	C13	SM661207103	SM.01uFS
A17	SM205238256	SRAM-25	C14	SM661207103	SM.01uFS
A18	SM205238256	SRAM-25	C15	SM661207103	SM.01uFS
A19	SM205238256	SRAM-25	C16	SM661207103	SM.01uFS
A20	SM205238256	SRAM-25	C17	SM661207103	SM.01uFS
A21	SM205238256	SRAM-25	C18	SM661207103	SM.01uFS
A22	SM205238256	SRAM-25	C19	SM661207103	SM.01uFS
A23	SM205238256	SRAM-25	C20	SM661207103	SM.01uFS
A24	SM205238256	SRAM-25	C21	SM661207103	SM.01uFS
A25	SM200179373	SM74BCT373	C22	SM661207103	SM.01uFS
A26	SM200179373	SM74BCT373	C23	SM661207103	SM.01uFS
A27	SM205238256	SRAM-25	C24	SM661207103	SM.01uFS
A28	SM205238256	SRAM-25	C25	SM661207103	SM.01uFS
A29	SM205238256	SRAM-25	C26	SM661207103	SM.01uFS
A30	SM205238256	SRAM-25	C27	SM661207103	SM.01uFS
A31	SM205238256	SRAM-25	C28	SM661207103	SM.01uFS
A32	SM205238256	SRAM-25	C29	SM661207103	SM.01uFS
A33	SM205238256	SRAM-25	C30	SM661207103	SM.01uFS
A34	SM205238256	SRAM-25	C31	SM661207103	SM.01uFS
A35	SM200179373	SM74BCT373	C32	SM661207103	SM.01uFS
A36	SM200179373	SM74BCT373	J1	454110024	7x 4x42-ST-M
A37	SM205238256	SRAM-25			


Page 8-38

Page 8-39

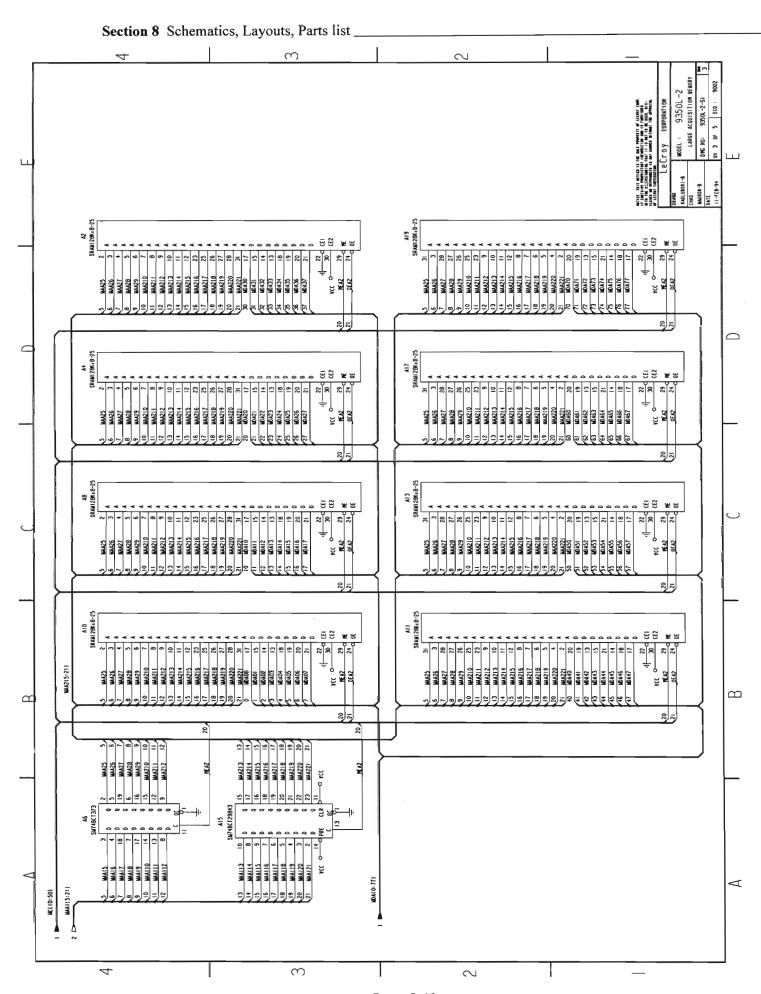



Page 8-40


Page 8-41

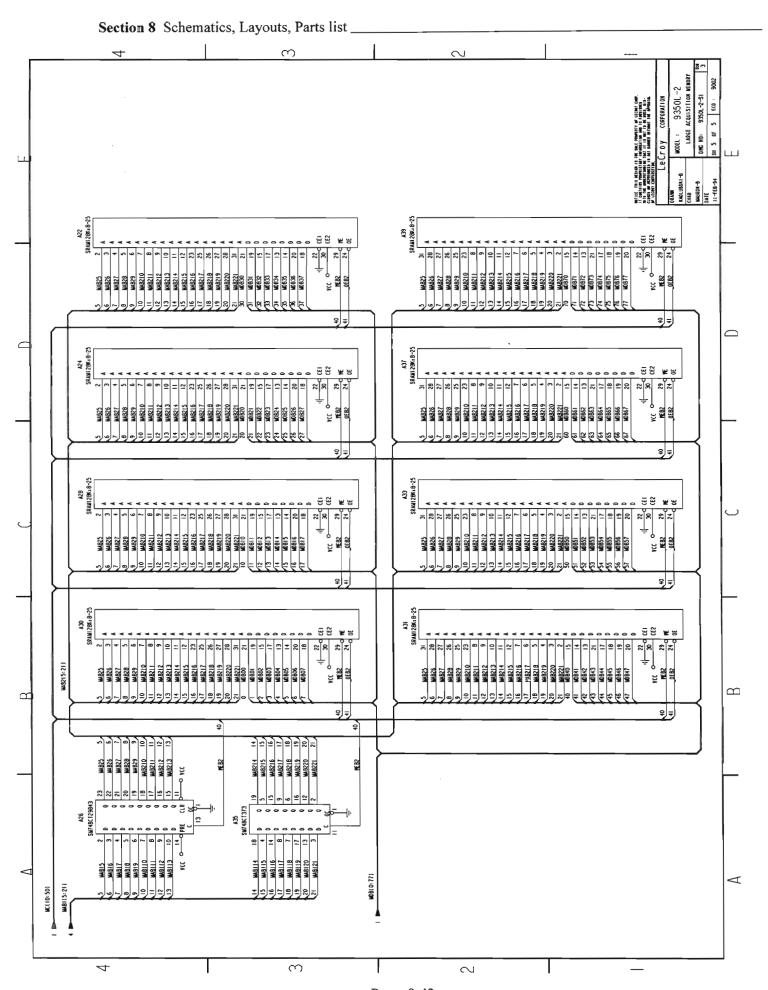



Page 8-42

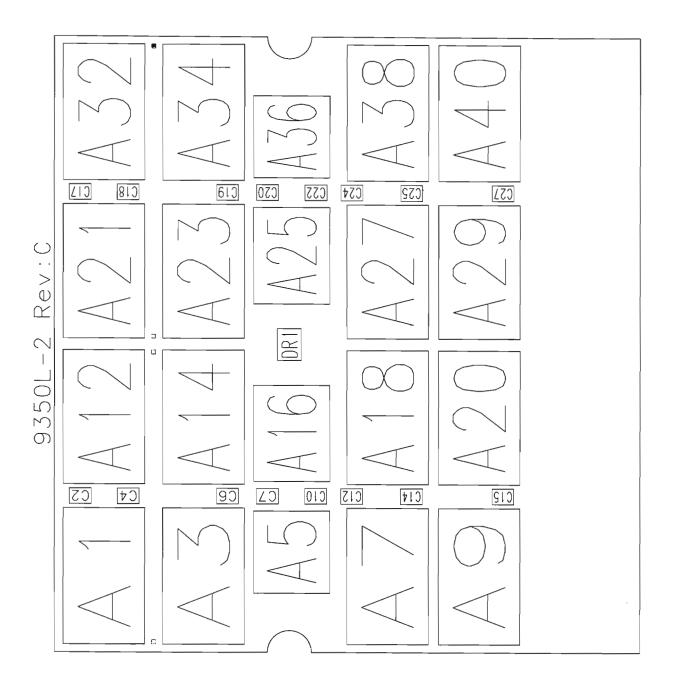


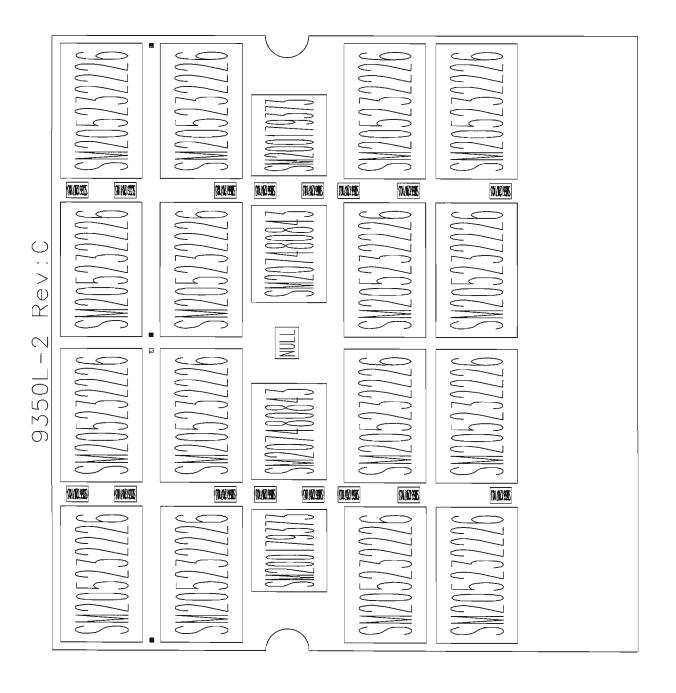

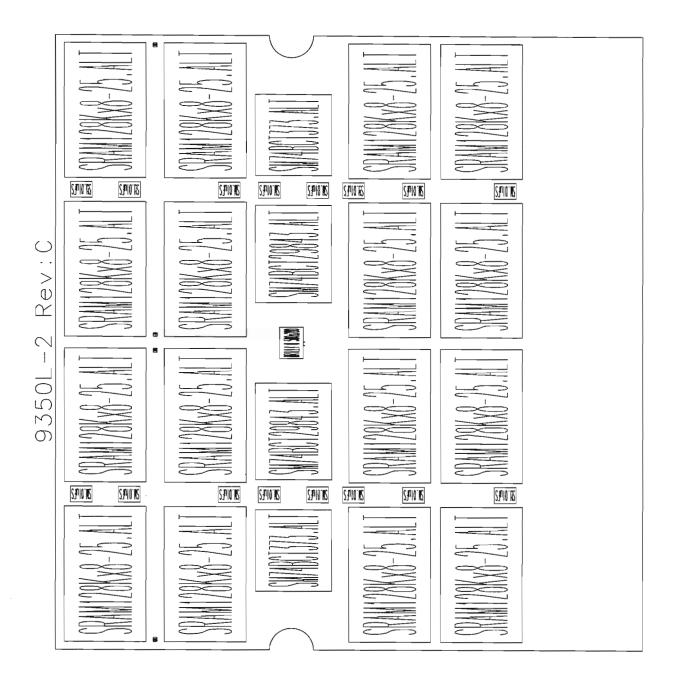

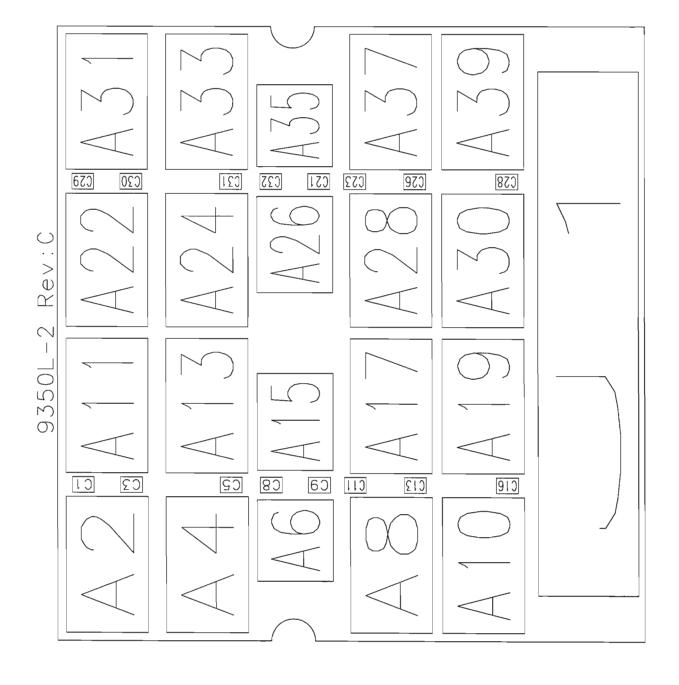


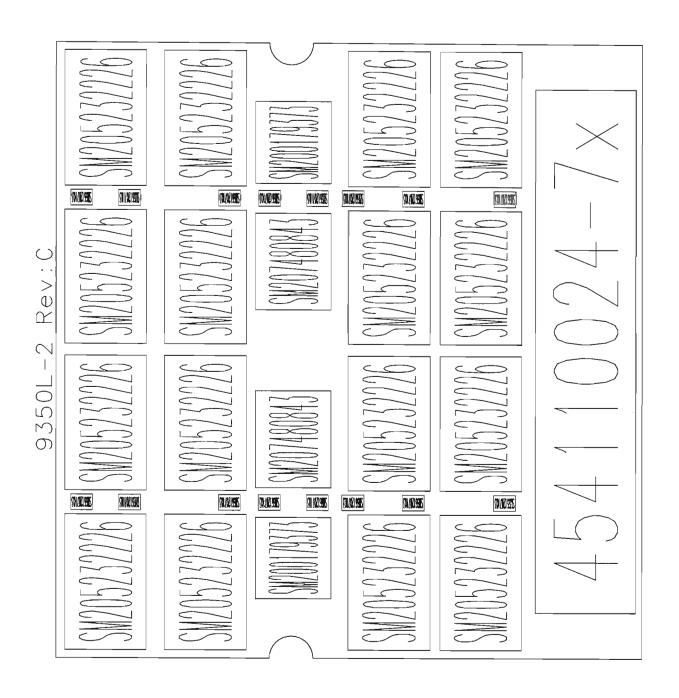

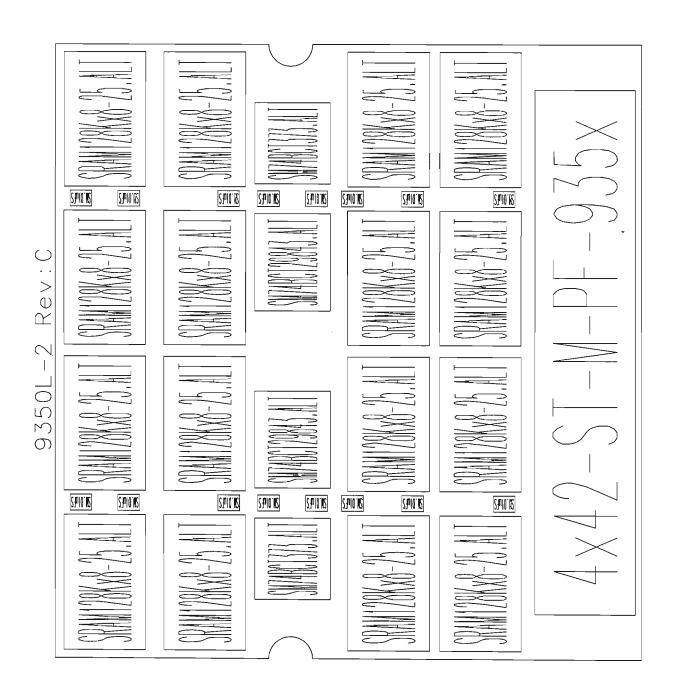

PART: F9350L-2 DESC: ACQUISITION MEMORY CARD 2x2 M for 9354AL

Location	Part Number	Description	Location	Part Number	Description
A 1	SM205232226	SRAM128Kx8-25	A38	SM205232226	SRAM128Kx8-25
A2		SRAM128Kx8-25	A39		SRAM128Kx8-25
A 3	SM205232226	SRAM128Kx8-25	A40	SM205232226	SRAM128Kx8-25
A 4	SM205232226	SRAM128Kx8-25	C1	SM661207103	SM.01uFS
A 5	SM200179373	SM74BCT373	C2	SM661207103	SM.01uFS
A6	SM200179373	SM74BCT373	C3	SM661207103	SM.01uFS
A 7	SM205232226	SRAM128Kx8-25	C4	SM661207103	SM.01uFS
A8	SM205232226	SRAM128Kx8-25	C5	SM661207103	SM.01uFS
A9	SM205232226	SRAM128Kx8-25	C6	SM661207103	SM.01uFS
A10	SM205232226	SRAM128Kx8-25	C7	SM661207103	SM.01uFS
A11	SM205232226	SRAM128Kx8-25	C8	SM661207103	SM.01uFS
A12	SM205232226	SRAM128Kx8-25	C9	SM661207103	SM.01uFS
A13	SM205232226	SRAM128Kx8-25	C10	SM661207103	SM.01uFS
A14	SM205232226	SRAM128Kx8-25	C11	SM661207103	SM.01uFS
A15	SM207480843	SM74BCT29843	C12	SM661207103	SM.01uFS
A16	SM207480843	SM74BCT29843	C13	SM661207103	SM.01uFS
A 17	SM205232226	SRAM128Kx8-25	C14	SM661207103	SM.01uFS
A18	SM205232226	SRAM128Kx8-25	C15	SM661207103	SM.01uFS
A19	SM205232226	SRAM128Kx8-25	C16	SM661207103	SM.01uFS
A20	SM205232226	SRAM128Kx8-25	C17	SM661207103	SM.01uFS
A21	SM205232226	SRAM128Kx8-25	C18	SM661207103	SM.01uFS
A22	SM205232226	SRAM128Kx8-25	C19	SM661207103	SM.01uFS
A23	SM205232226	SRAM128Kx8-25	C20	SM661207103	SM.01uFS
A24	SM205232226	SRAM128Kx8-25	C21	SM661207103	SM.01uFS
A25	SM207480843	SM74BCT29843	C22	SM661207103	SM.01uFS
A26	SM207480843	SM74BCT29843	C23	SM661207103	SM.01uFS
A27	SM205232226	SRAM128Kx8-25	C24	SM661207103	SM.01uFS
A28	SM205232226	SRAM128Kx8-25	C25	SM661207103	SM.01uFS
A29	SM205232226	SRAM128Kx8-25	C26	SM661207103	SM.01uFS
A30	SM205232226	SRAM128Kx8-25	C27	SM661207103	SM.01uFS
A31	SM205232226	SRAM128Kx8-25	C28	SM661207103	SM.01uFS
A32	SM205232226	SRAM128Kx8-25	C29	SM661207103	SM.01uFS
A33	SM205232226	SRAM128Kx8-25	C30	SM661207103	SM.01uFS
A34	SM205232226	SRAM128Kx8-25	C31	SM661207103	SM.01uFS
A35	SM200179373	SM74BCT373	C32	SM661207103	SM.01uFS
A36	SM200179373	SM74BCT373	J1	454110024	7x 4x42-ST-M-
A37	SM205232226	SRAM128Kx8-25			

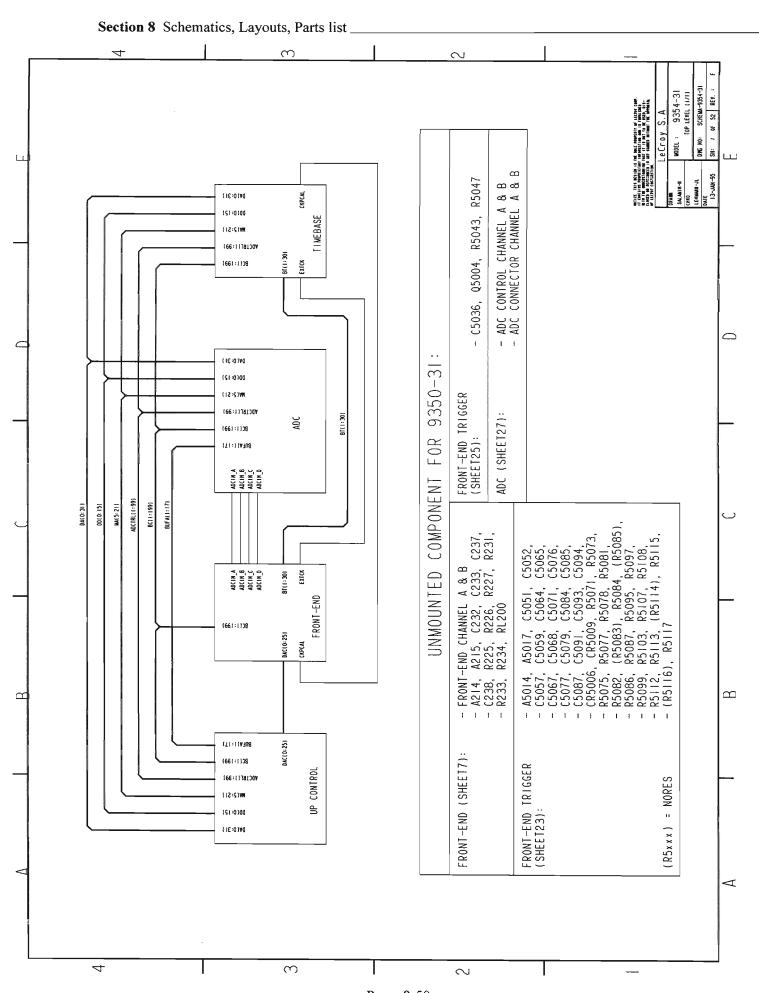

£

 α

4

Page 8-51


 \sim

 \triangleleft

ž

YEE

-154

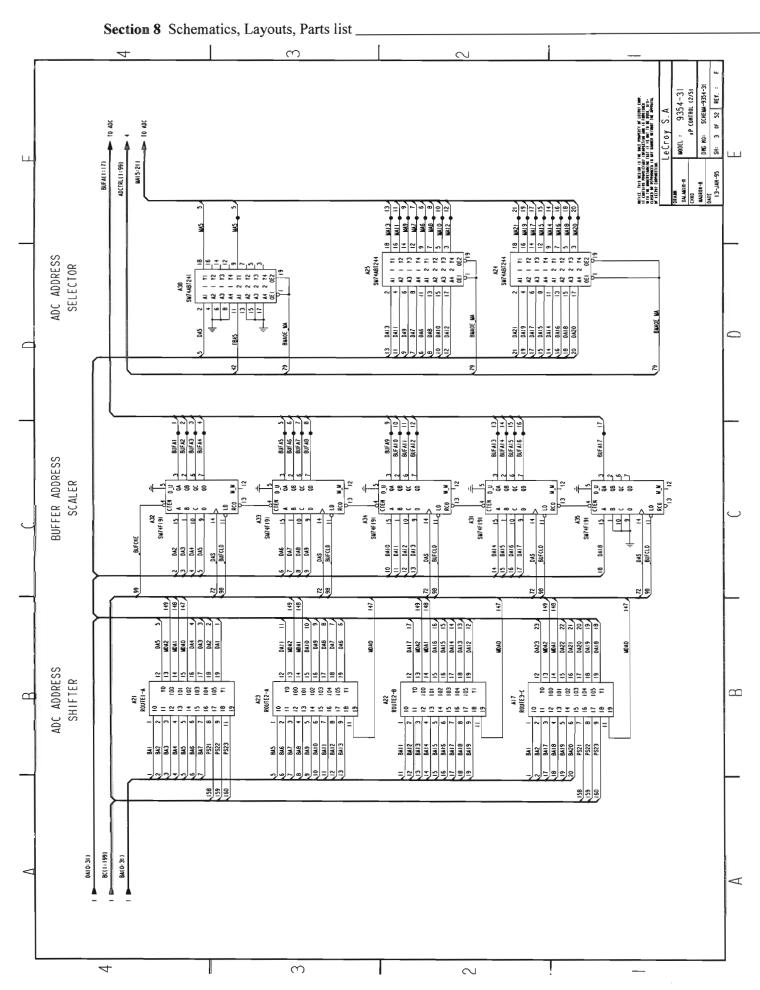

Page 8-53


 ∞

 \triangleleft

➡ ○ 【本本】 |
□ CRI BAY99


BA10:31)

4

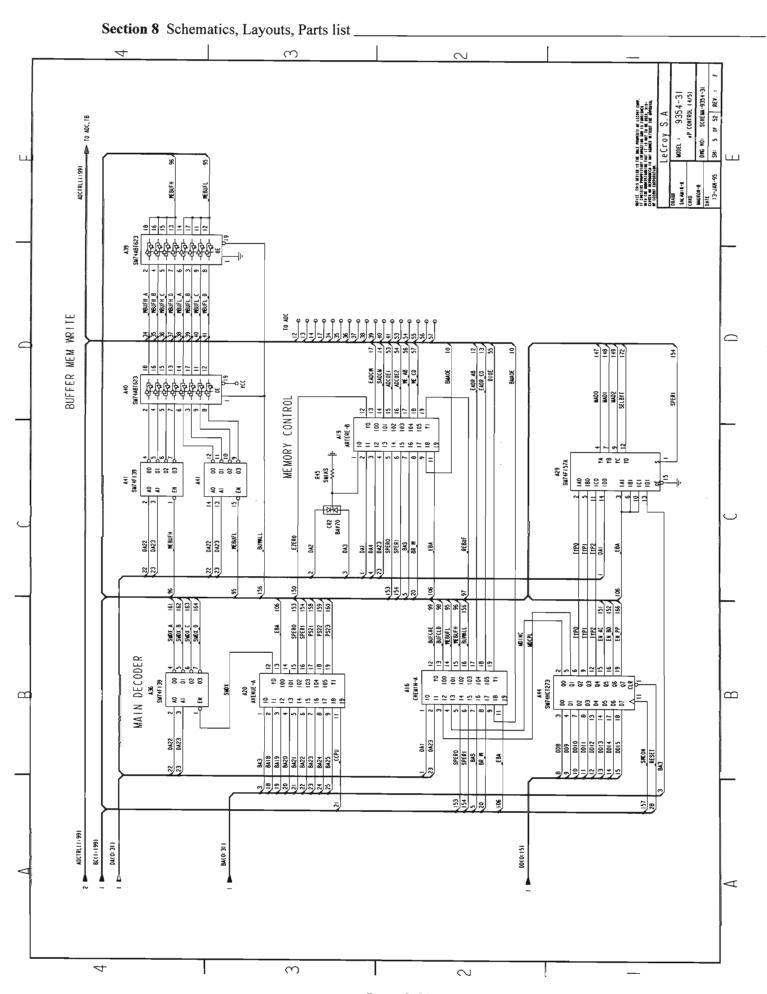

Page 8-54

Page 8-55

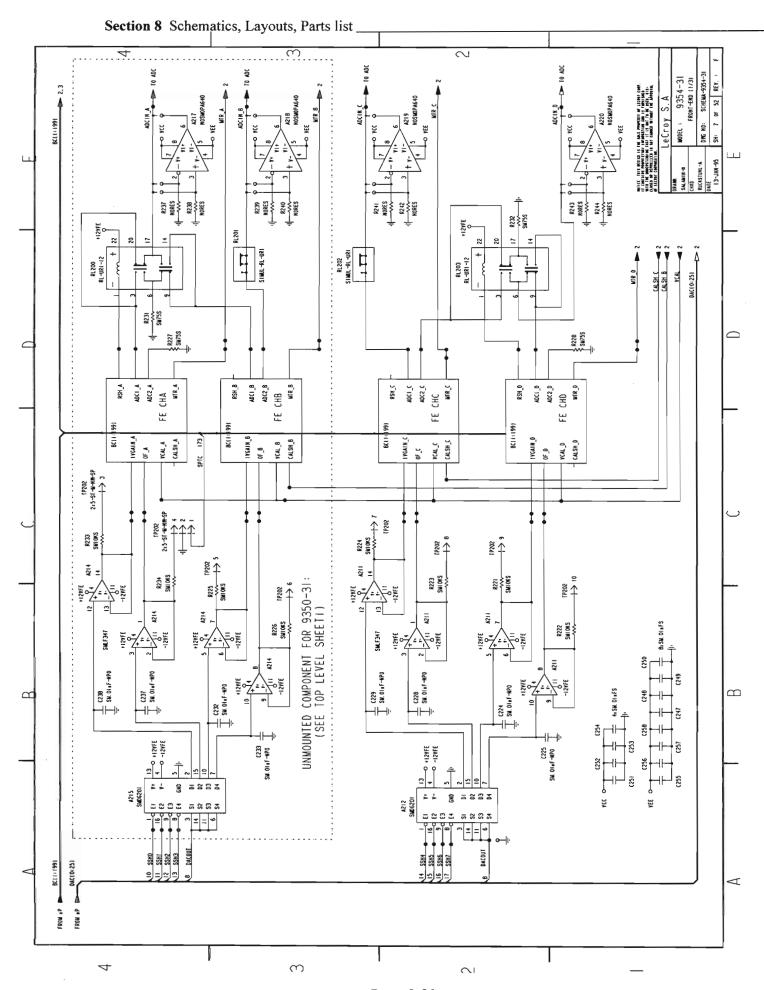


Page 8-56


Page 8-57

Page 8-59


 \mathcal{C}

4

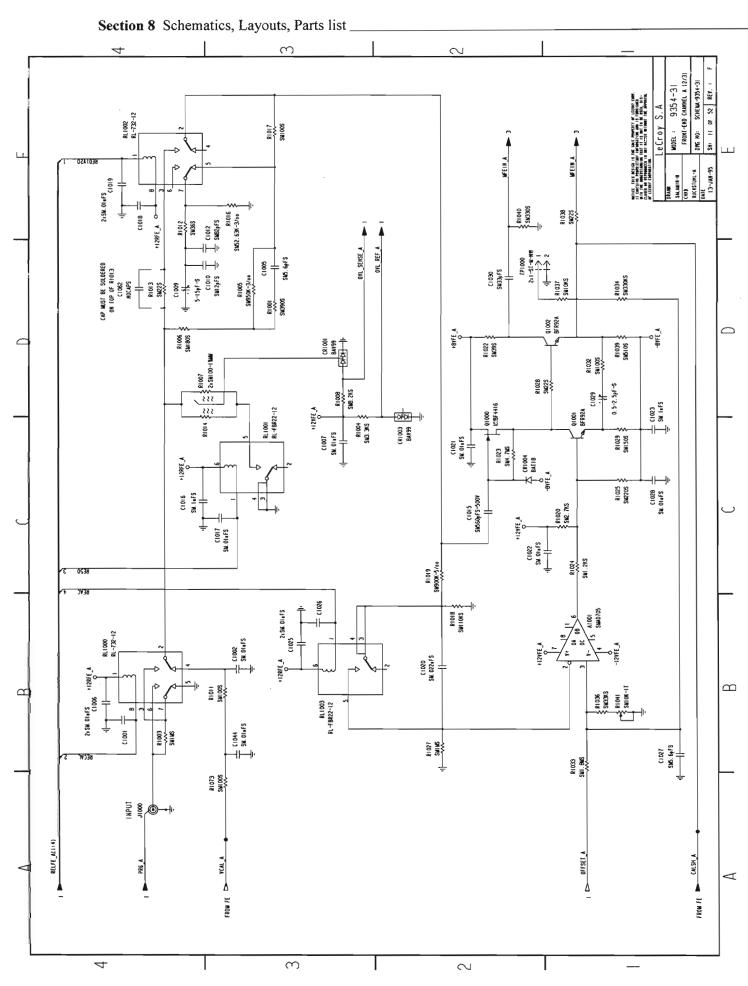

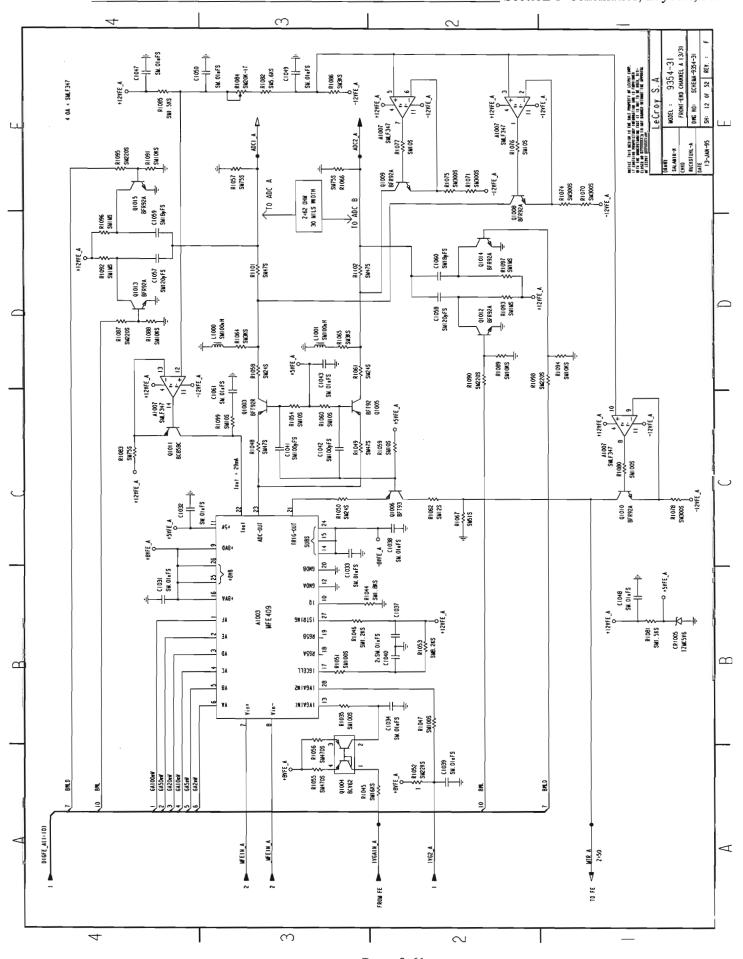

Page 8-61

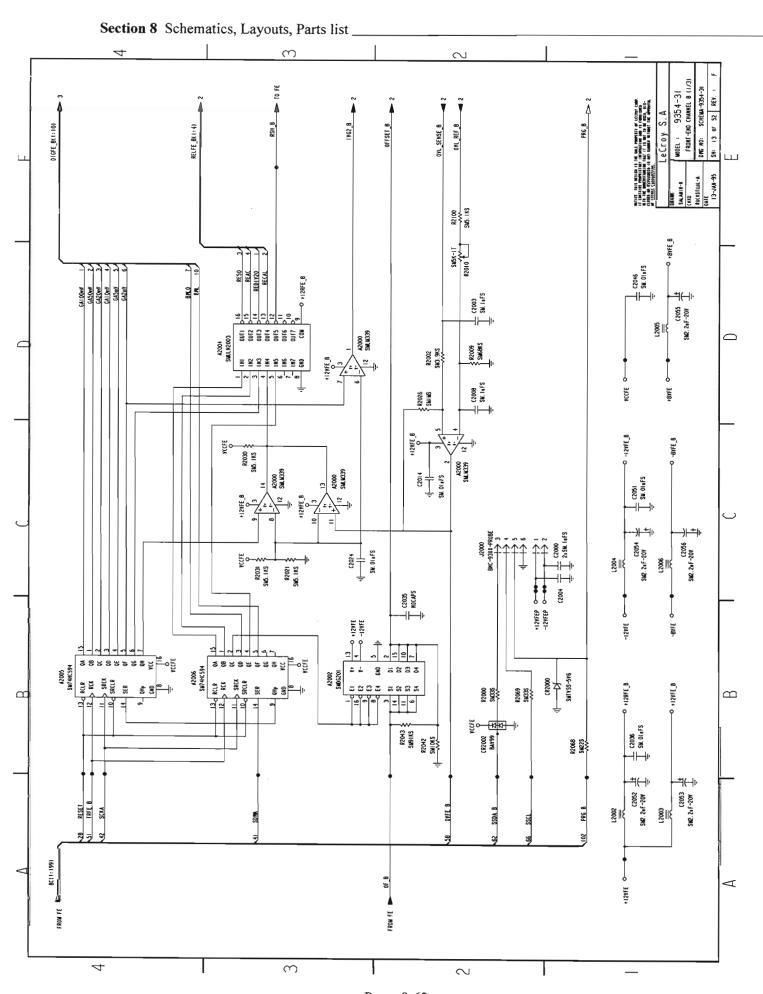

Page 8-62


Page 8-63

M


RELFE_BIT: 4)


4

Page 8-64

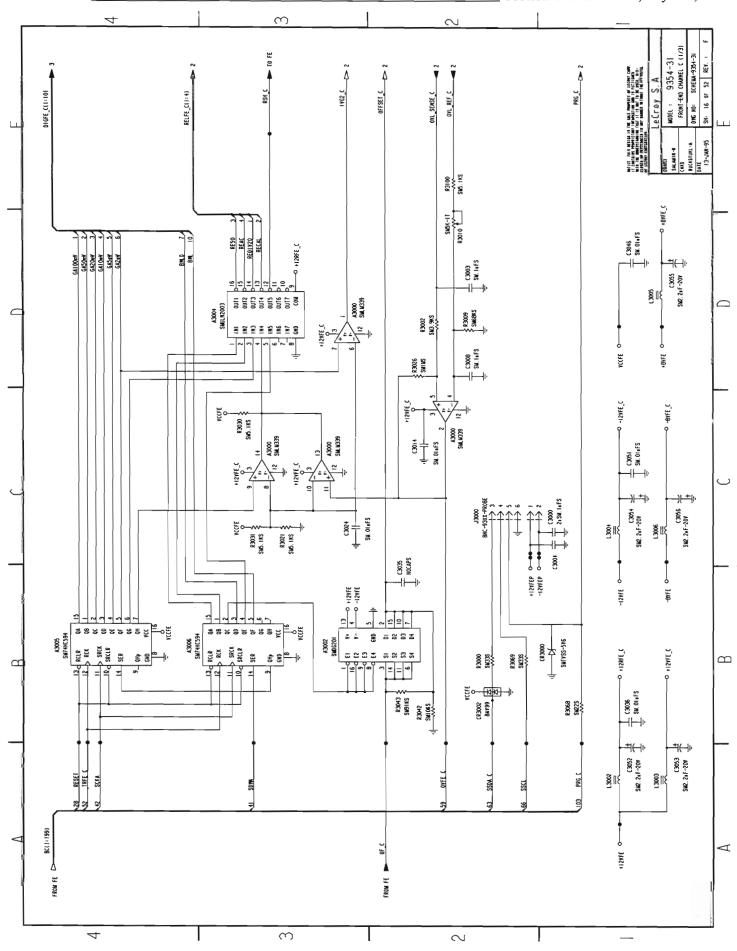


Page 8-65

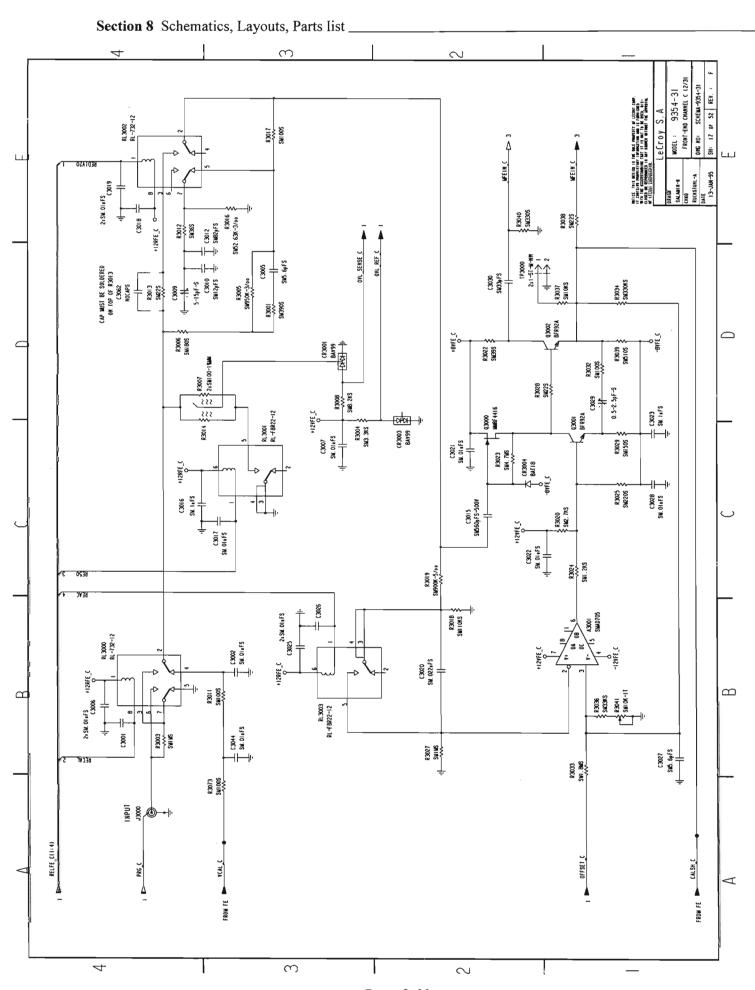

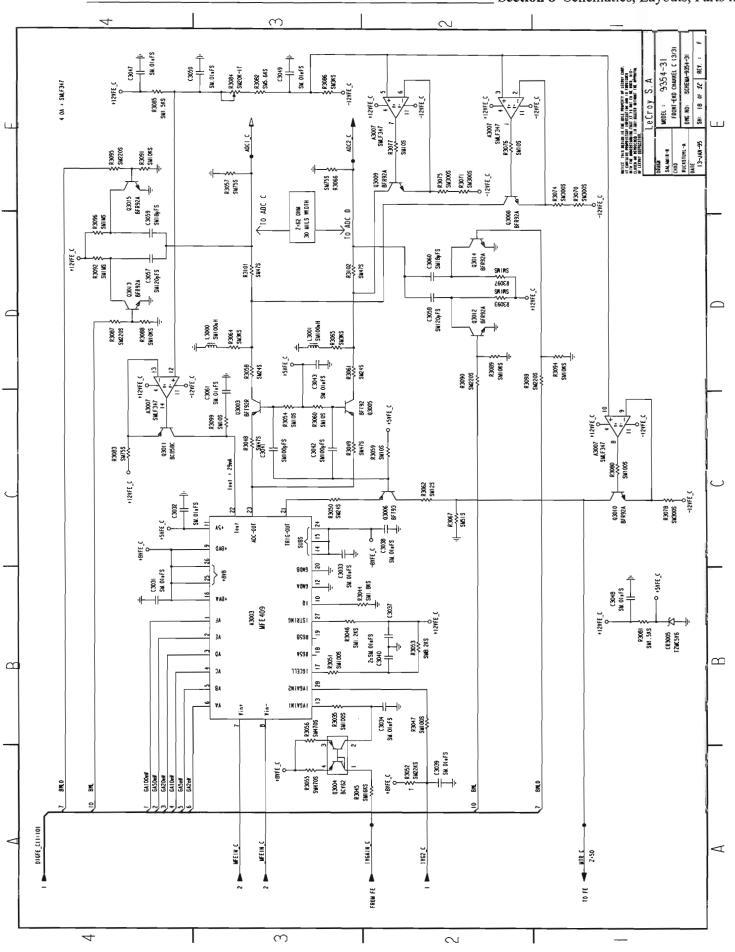

Page 8-67

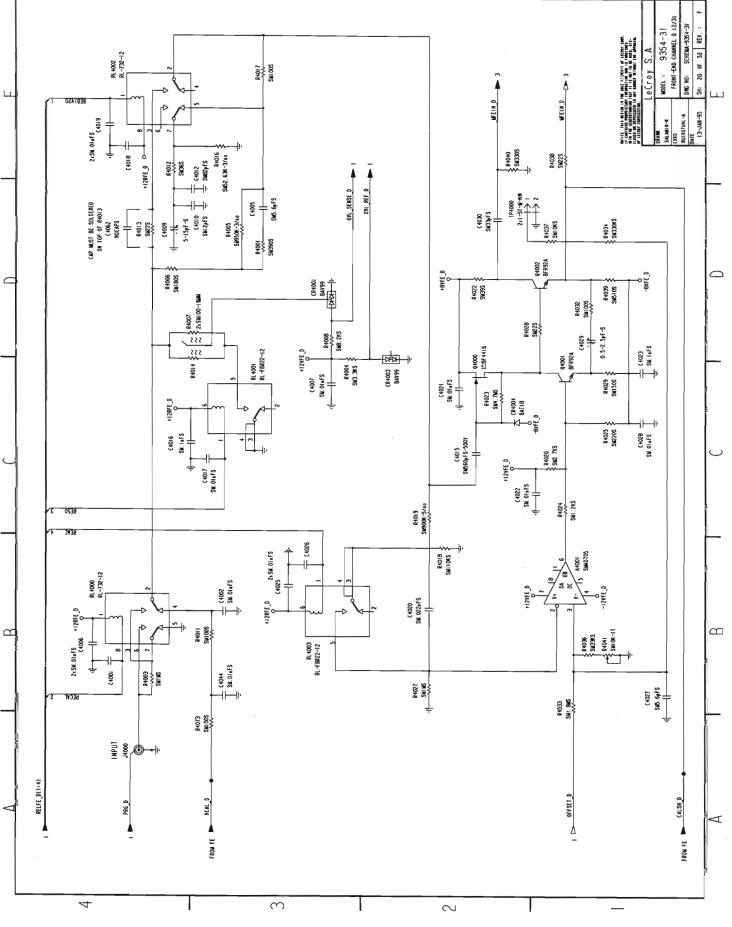


Page 8-69


Page 8-70

Page 8-71

Page 8-72

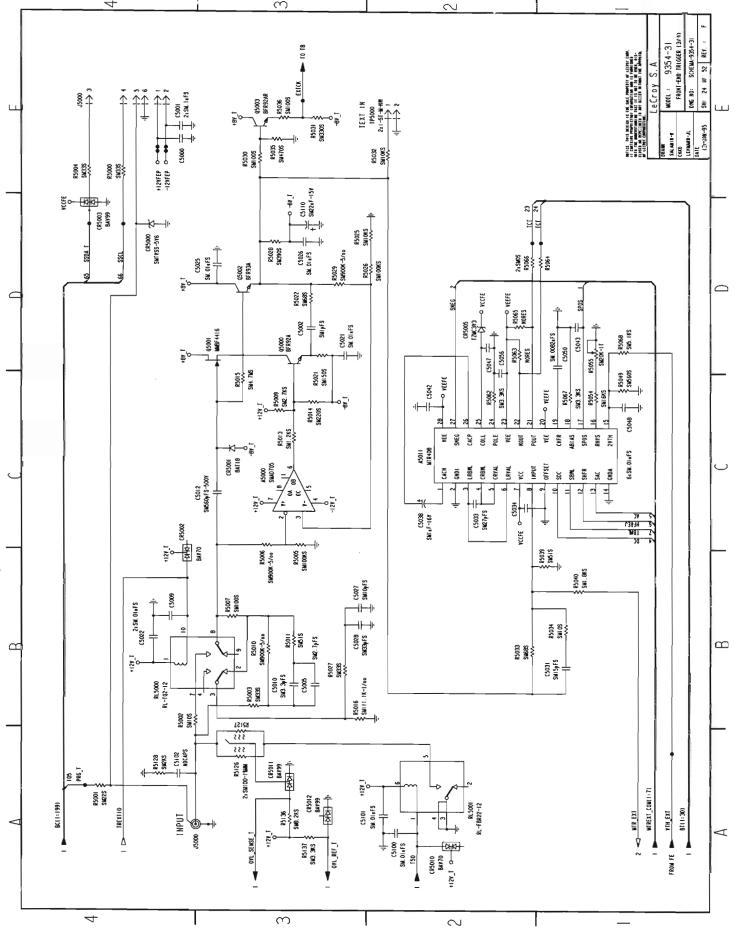


Page 8-73

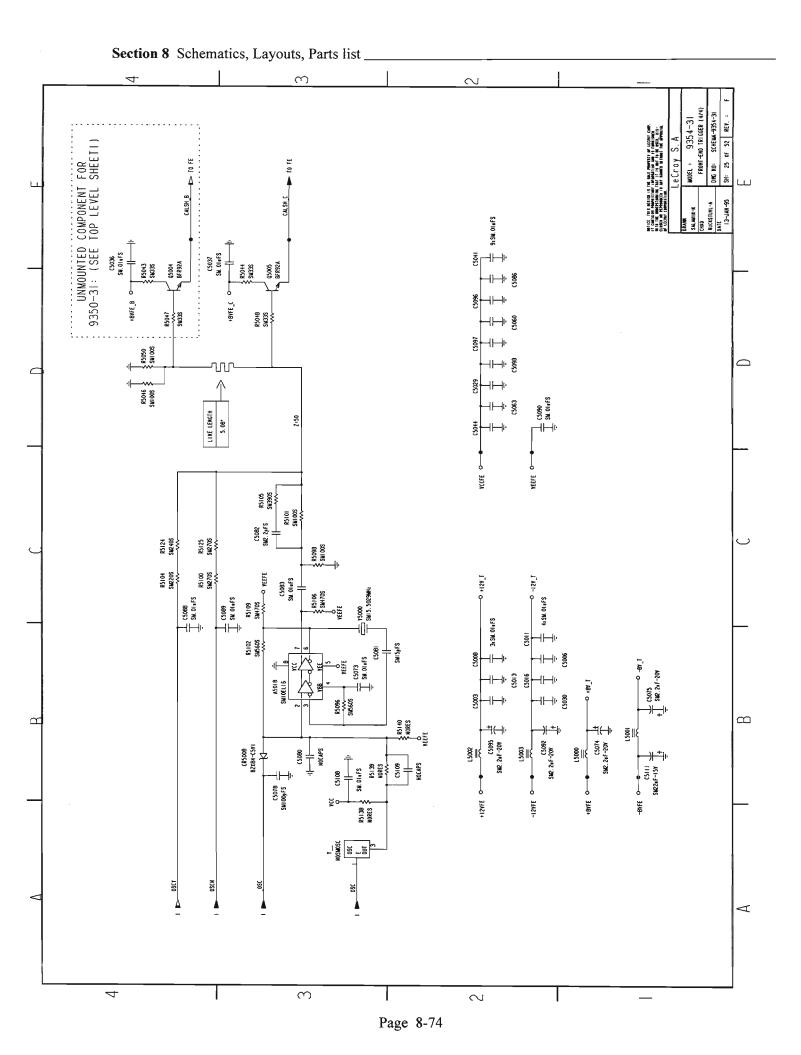



Page 8-75

Page 8-76

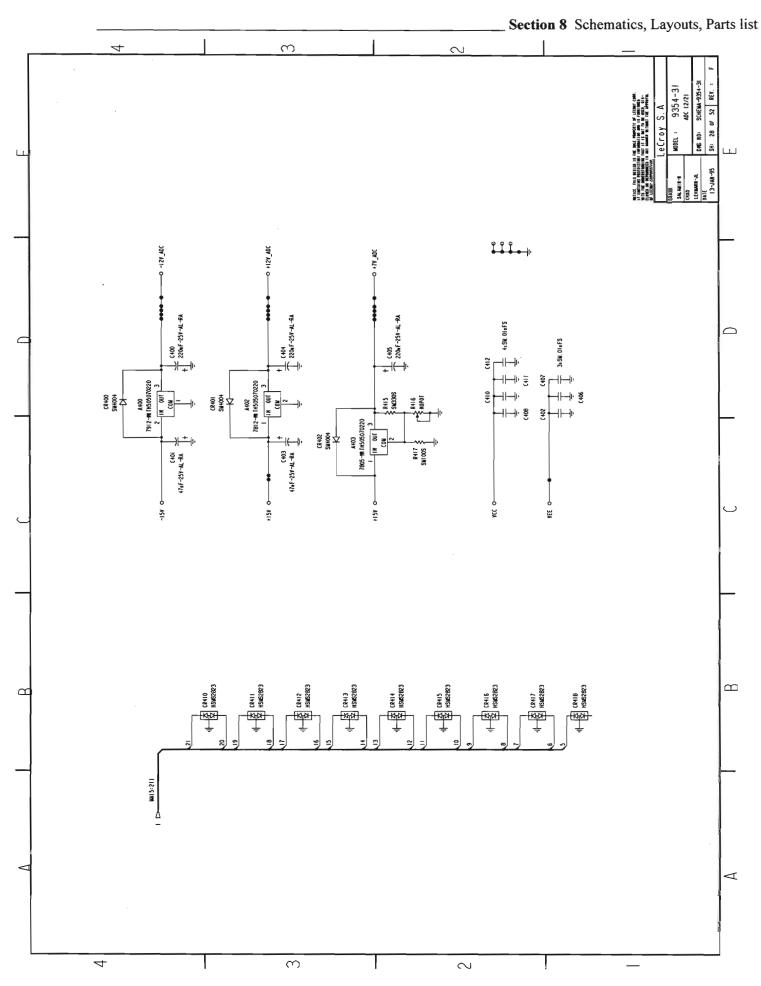

Page 8-77

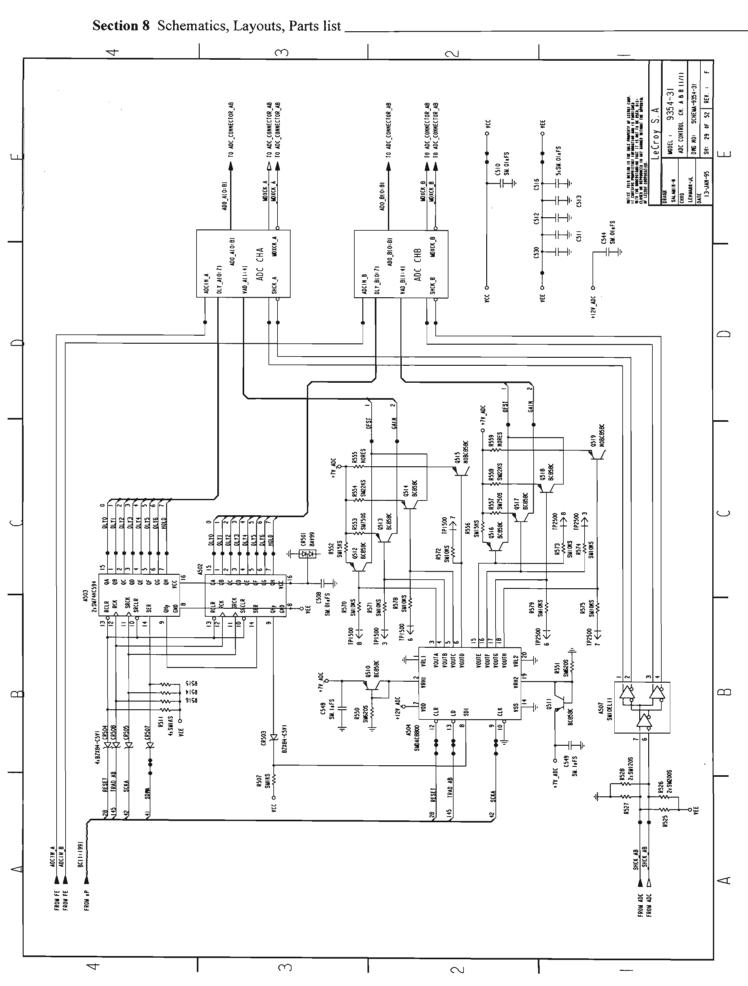

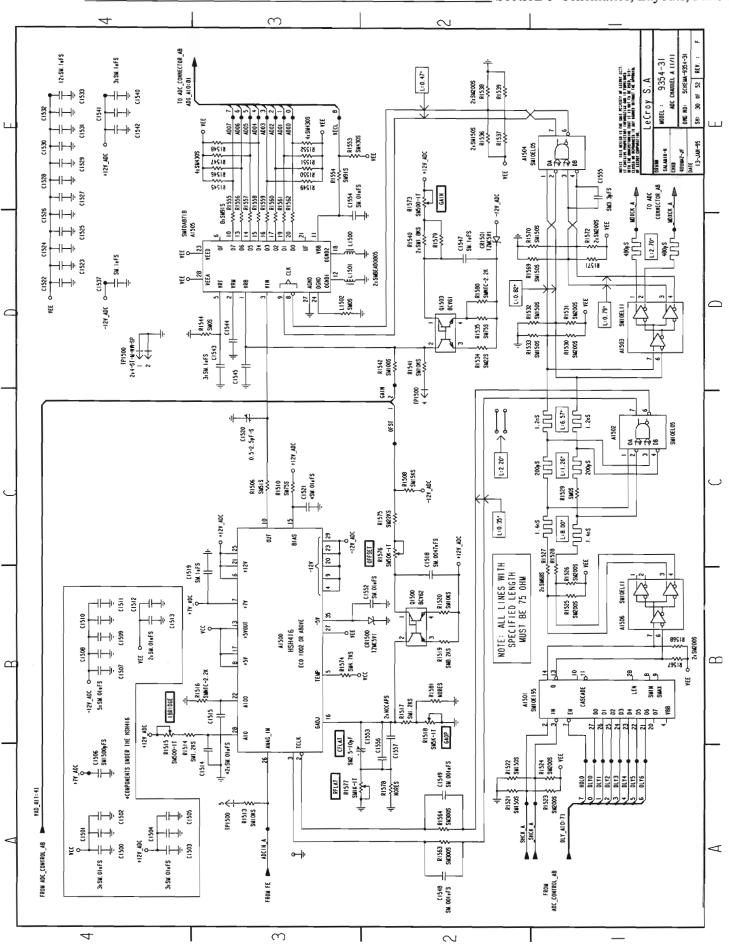


Page 8-79

Page 8-80

Page 8-81

 \triangleleft

 α

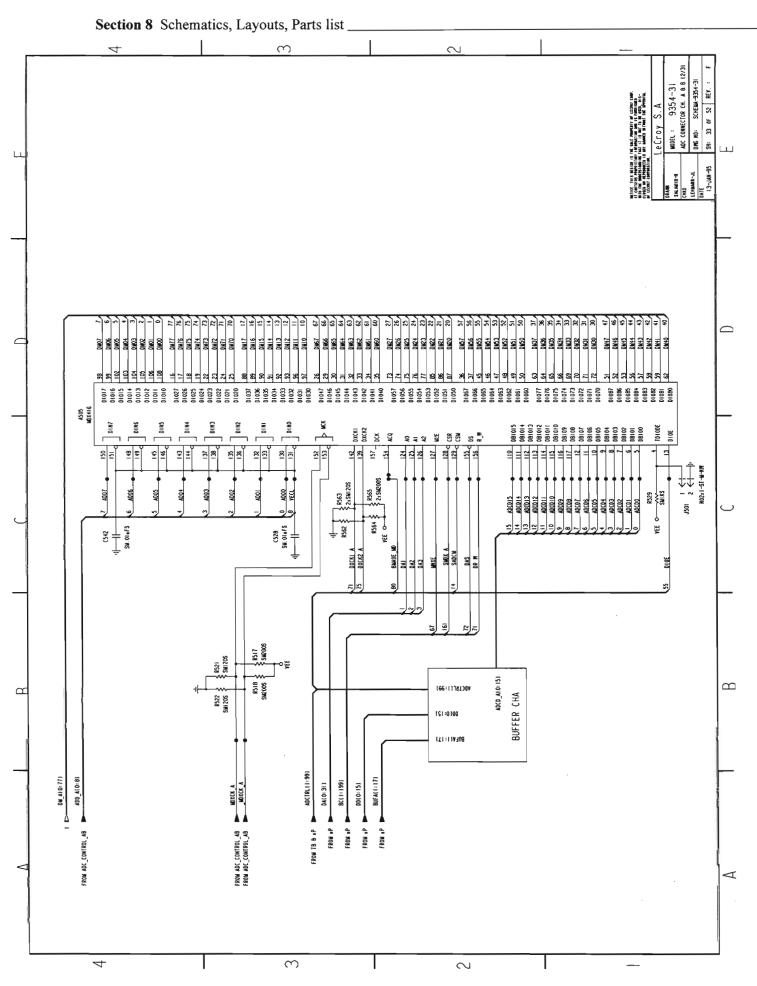


Page 8-82

Page 8-83

Page 8-84


Page 8-85

Page 8-86

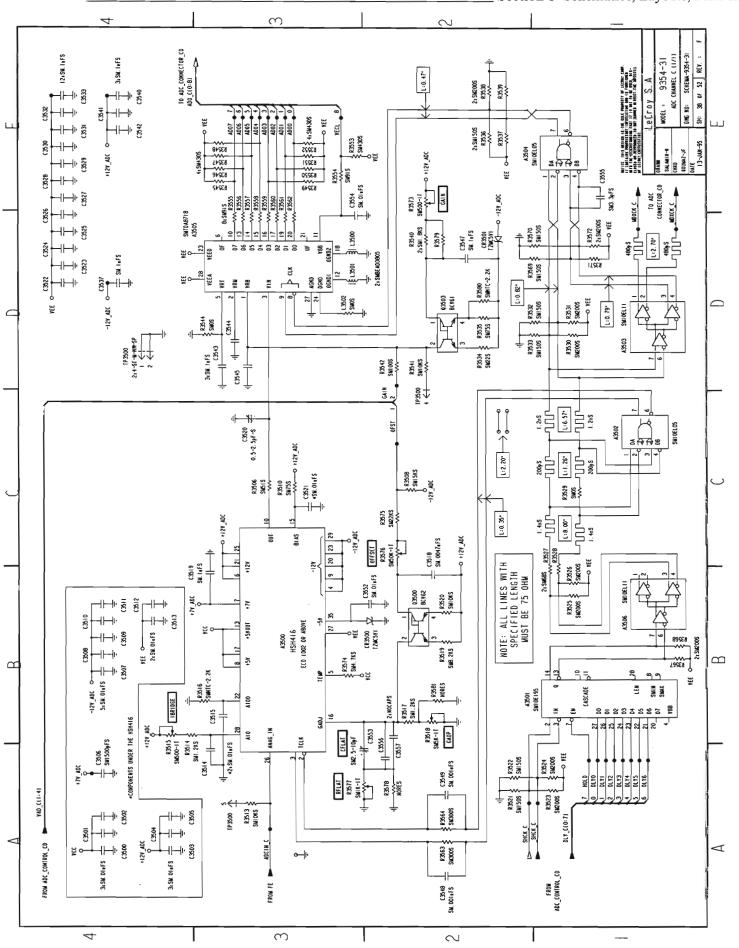


Page 8-87

Page 8-88

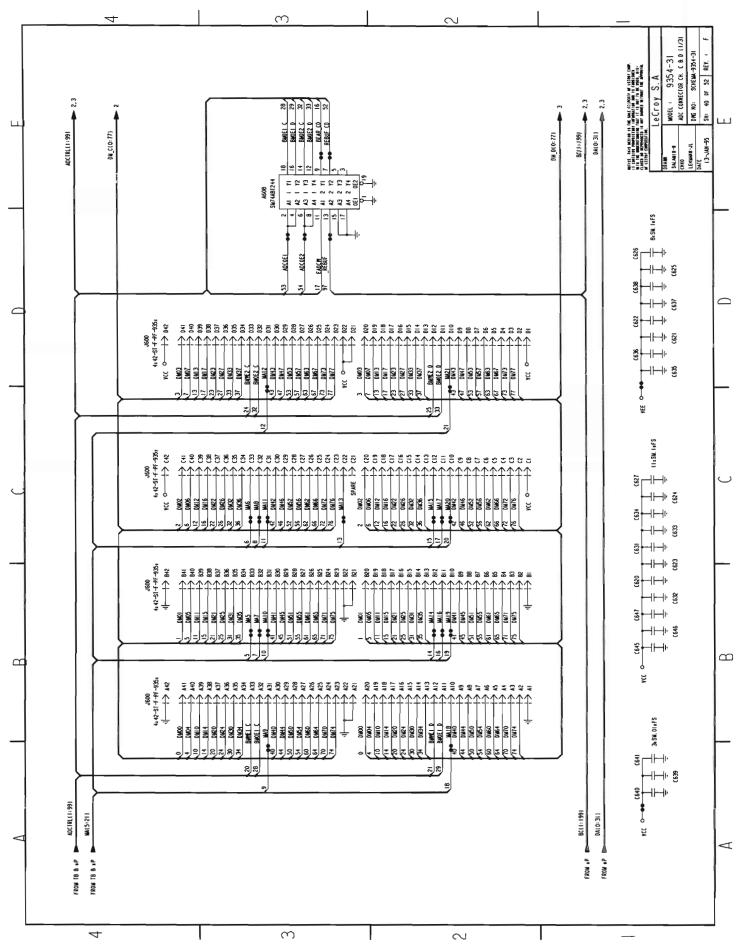


Page 8-89

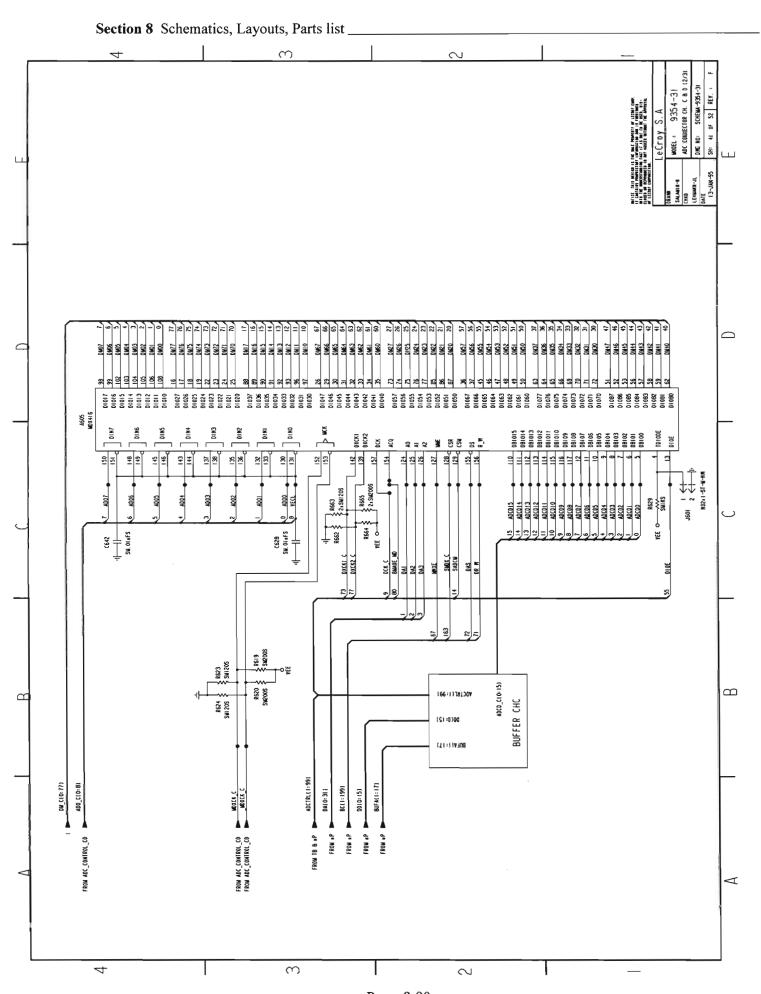


Page 8-91

Page 8-93

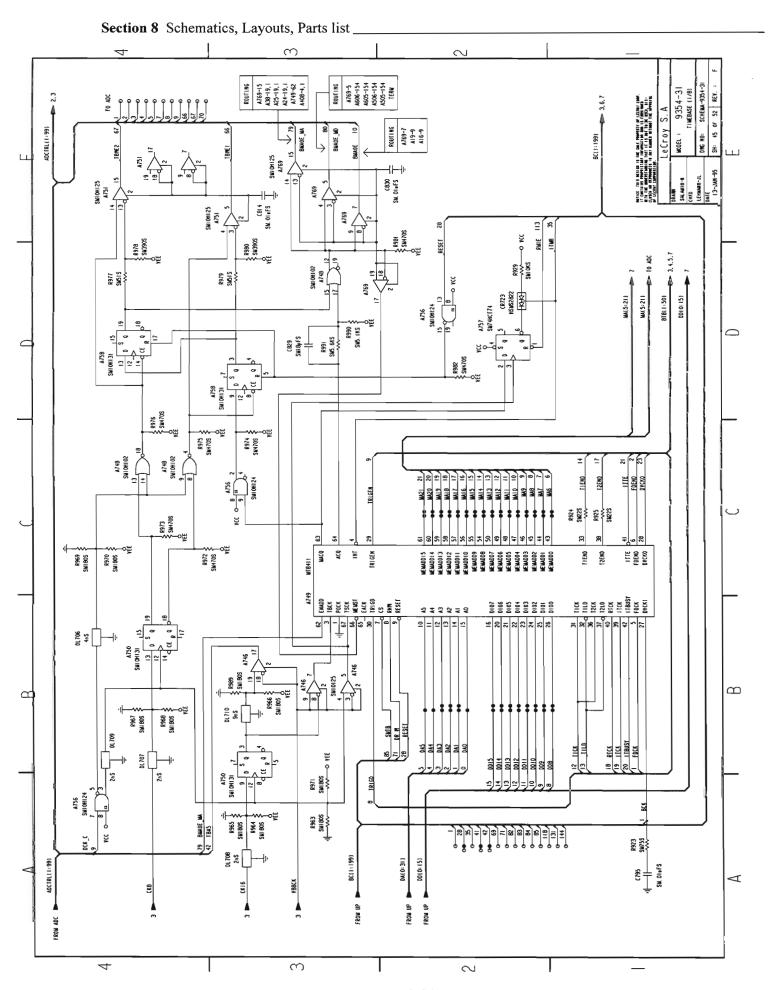


Page 8-94

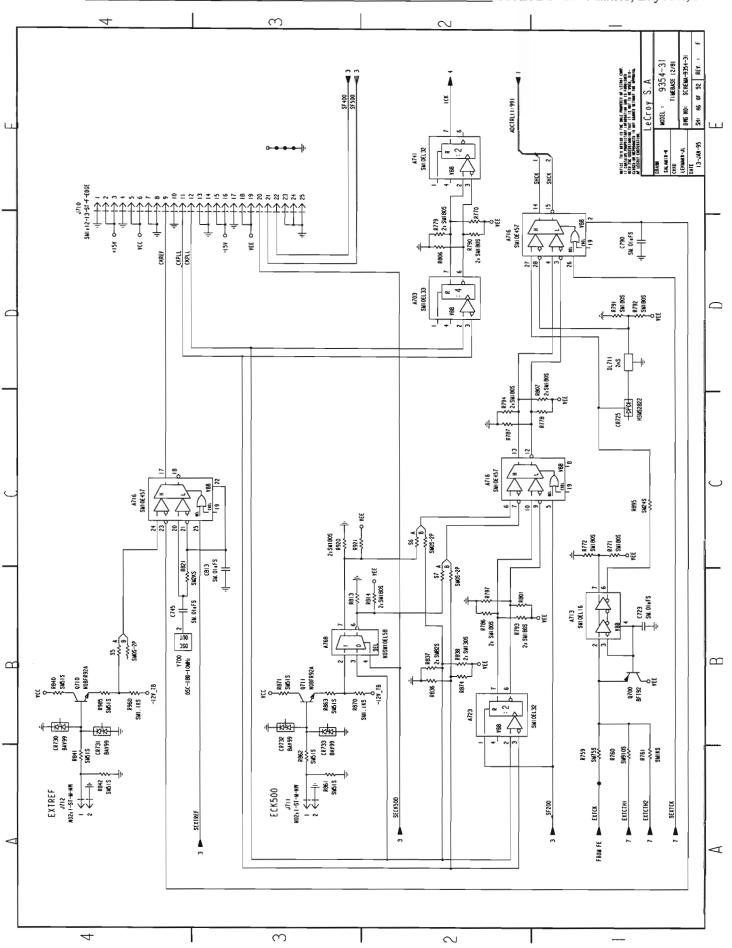


Page 8-95

Page 8-96


Page 8-97

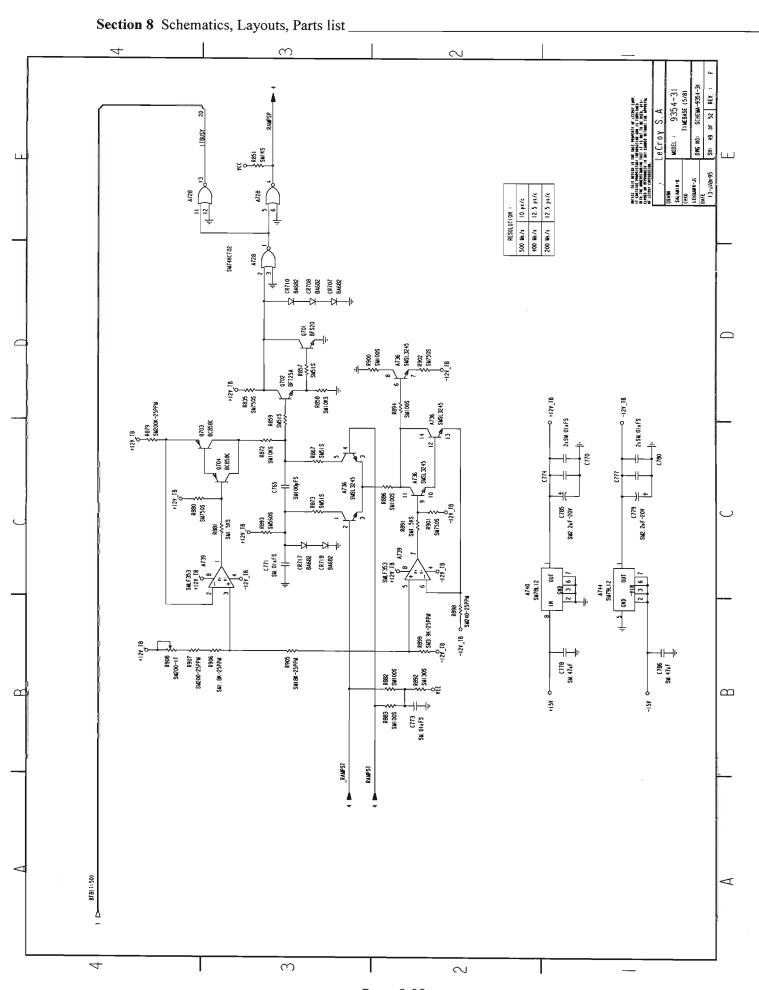


Page 8-98

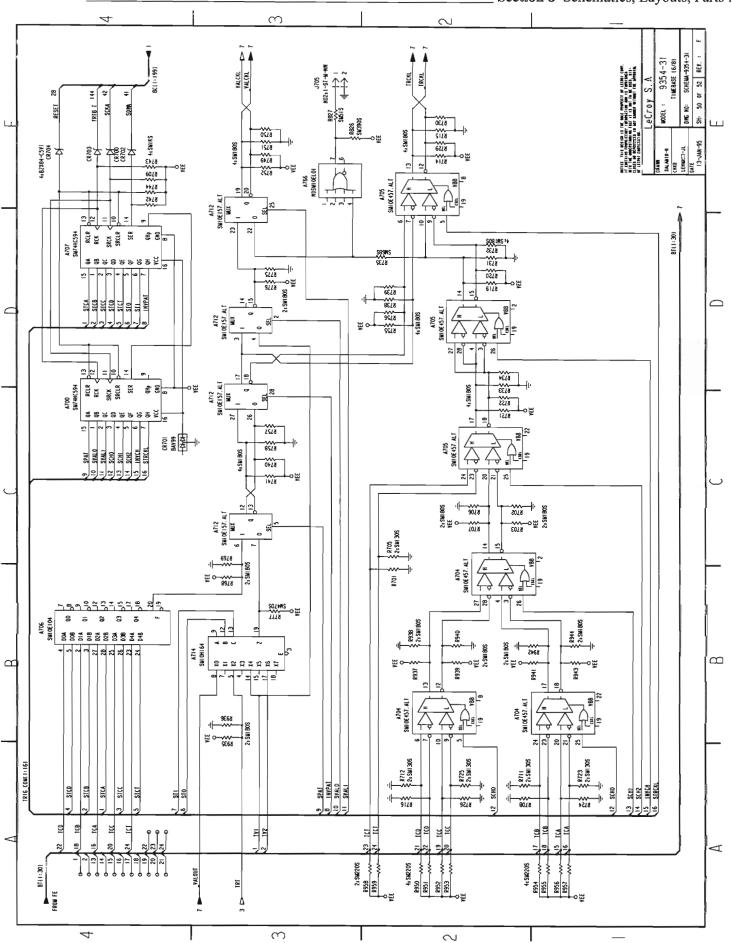



Page 8-99

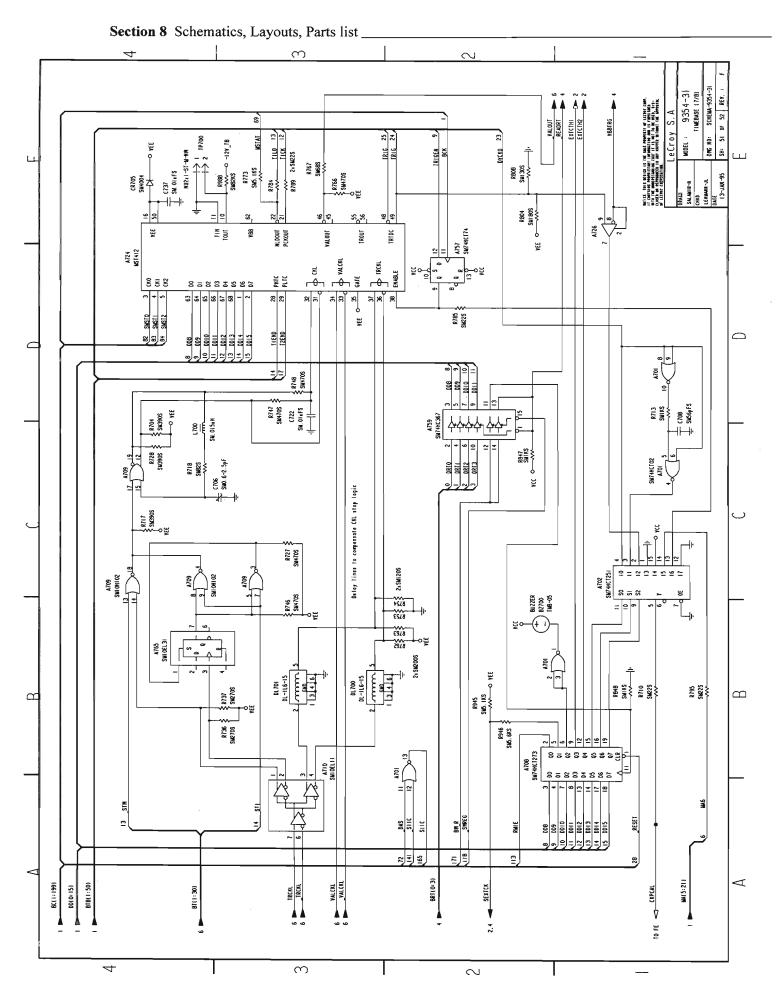



Page 8-100

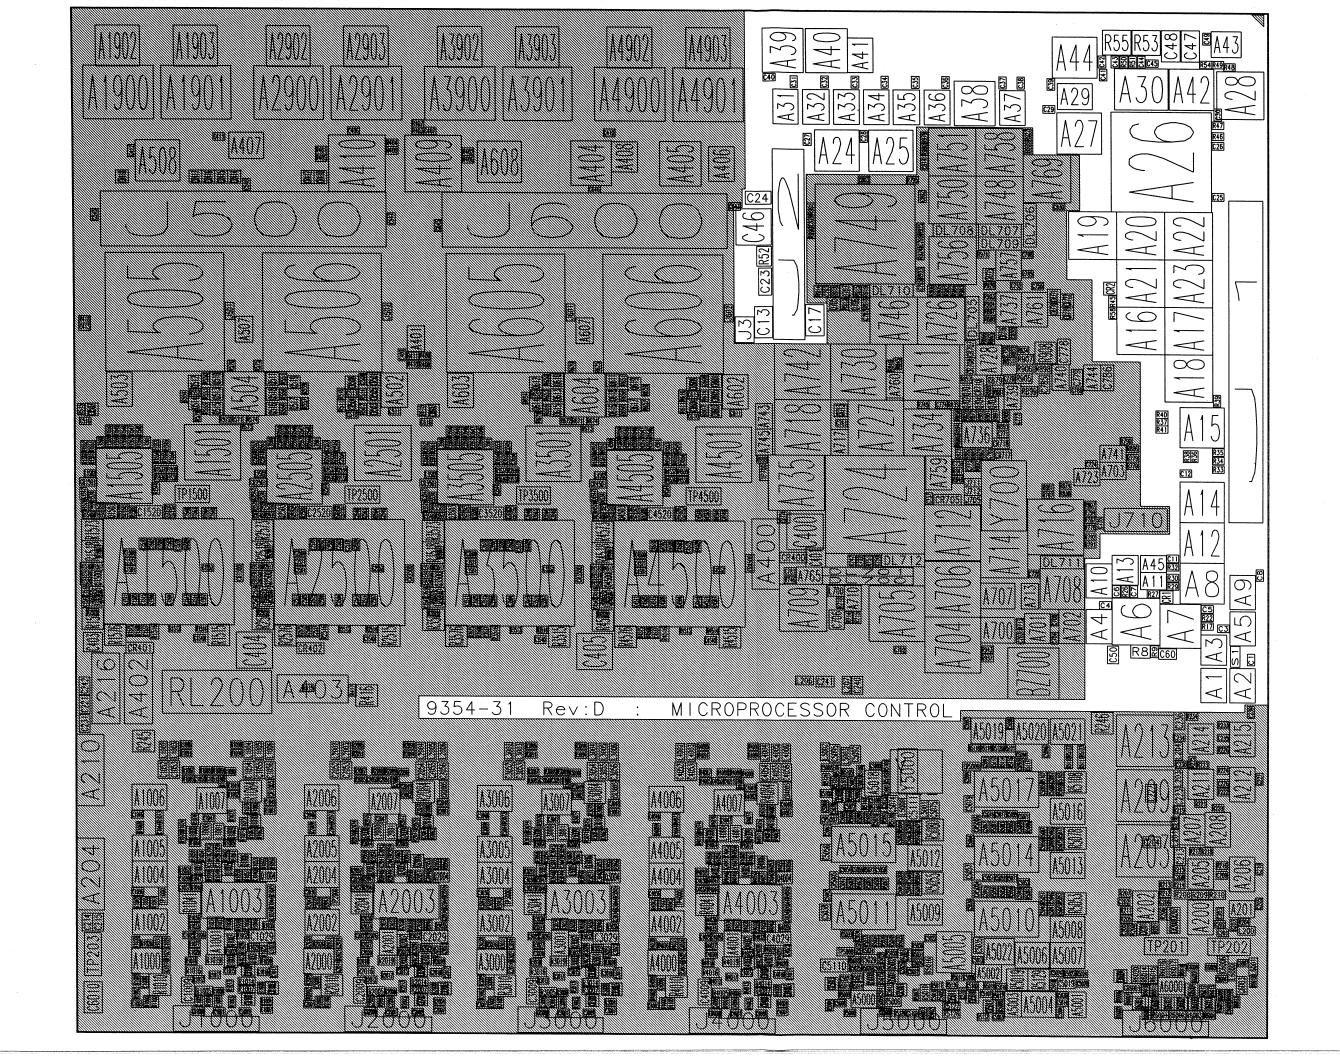


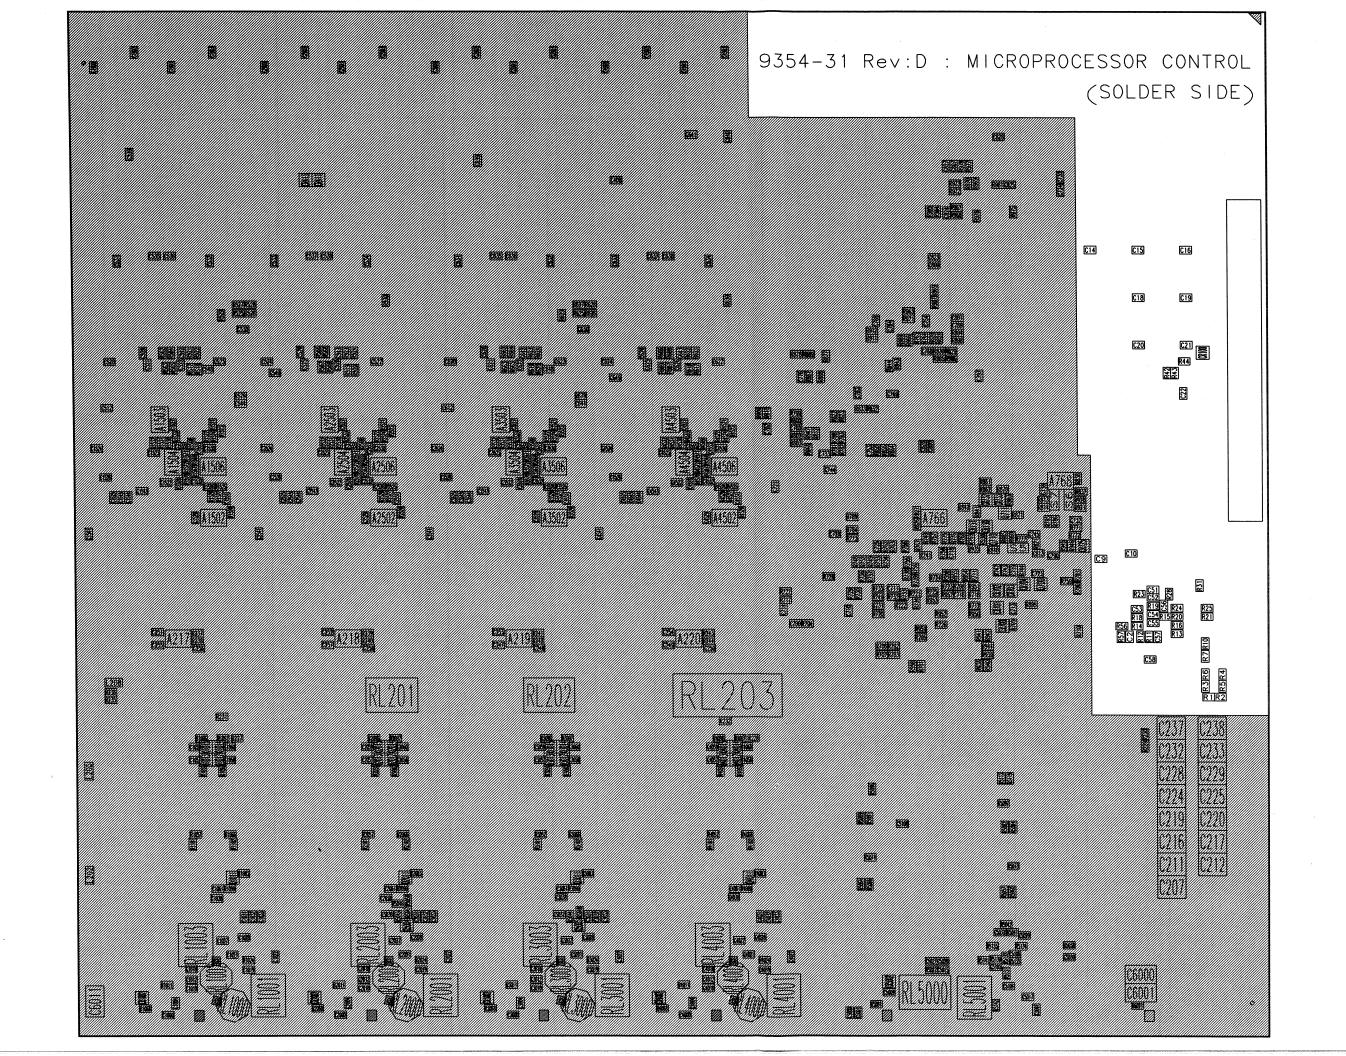


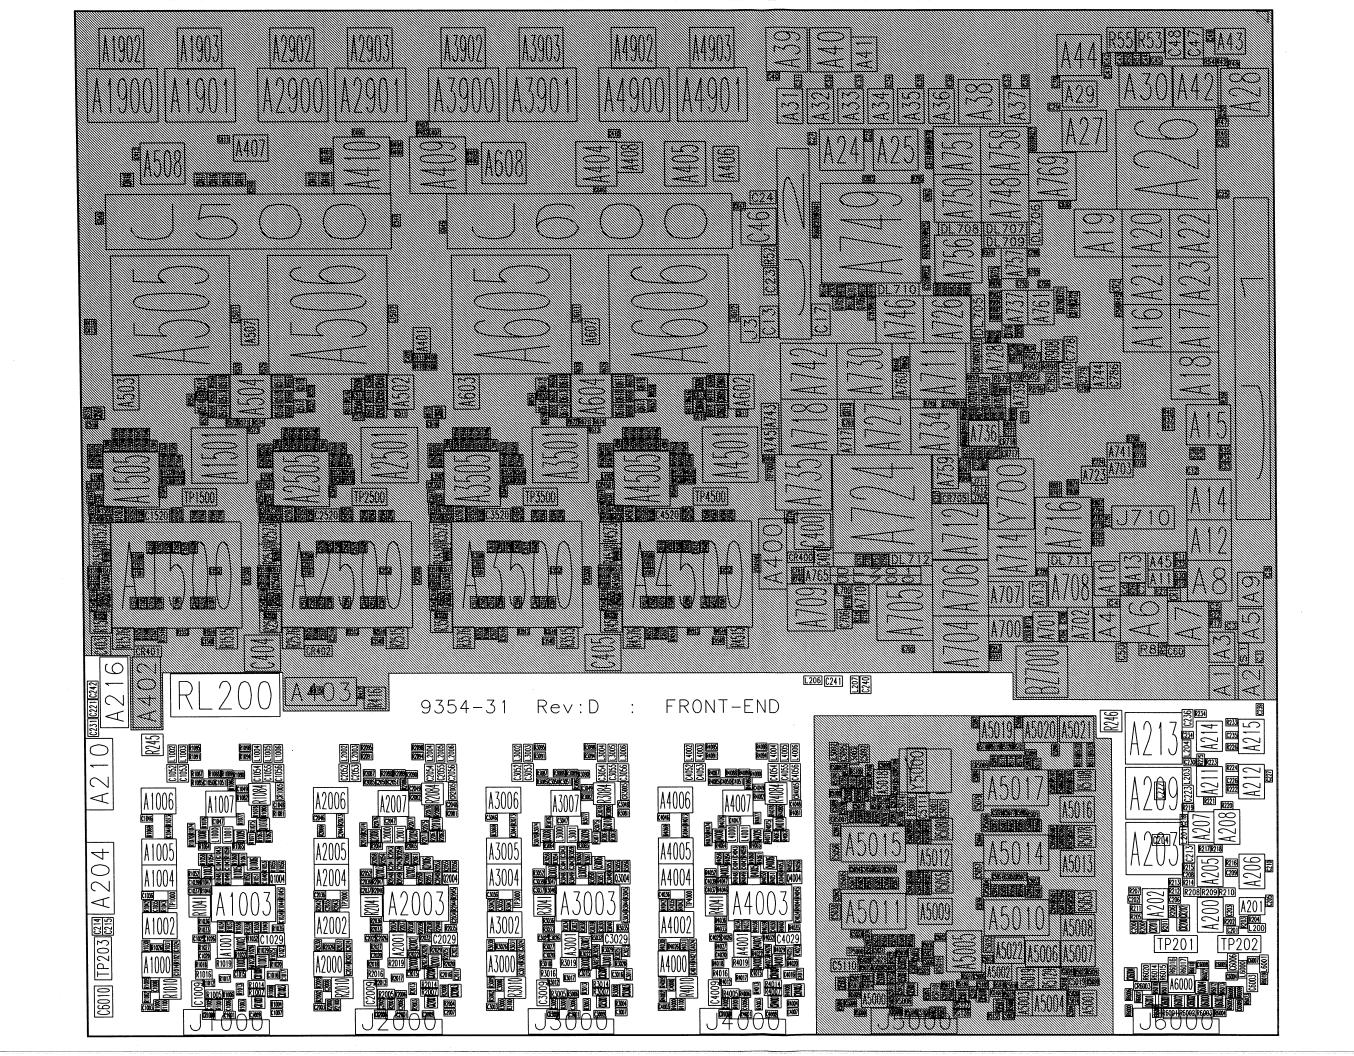


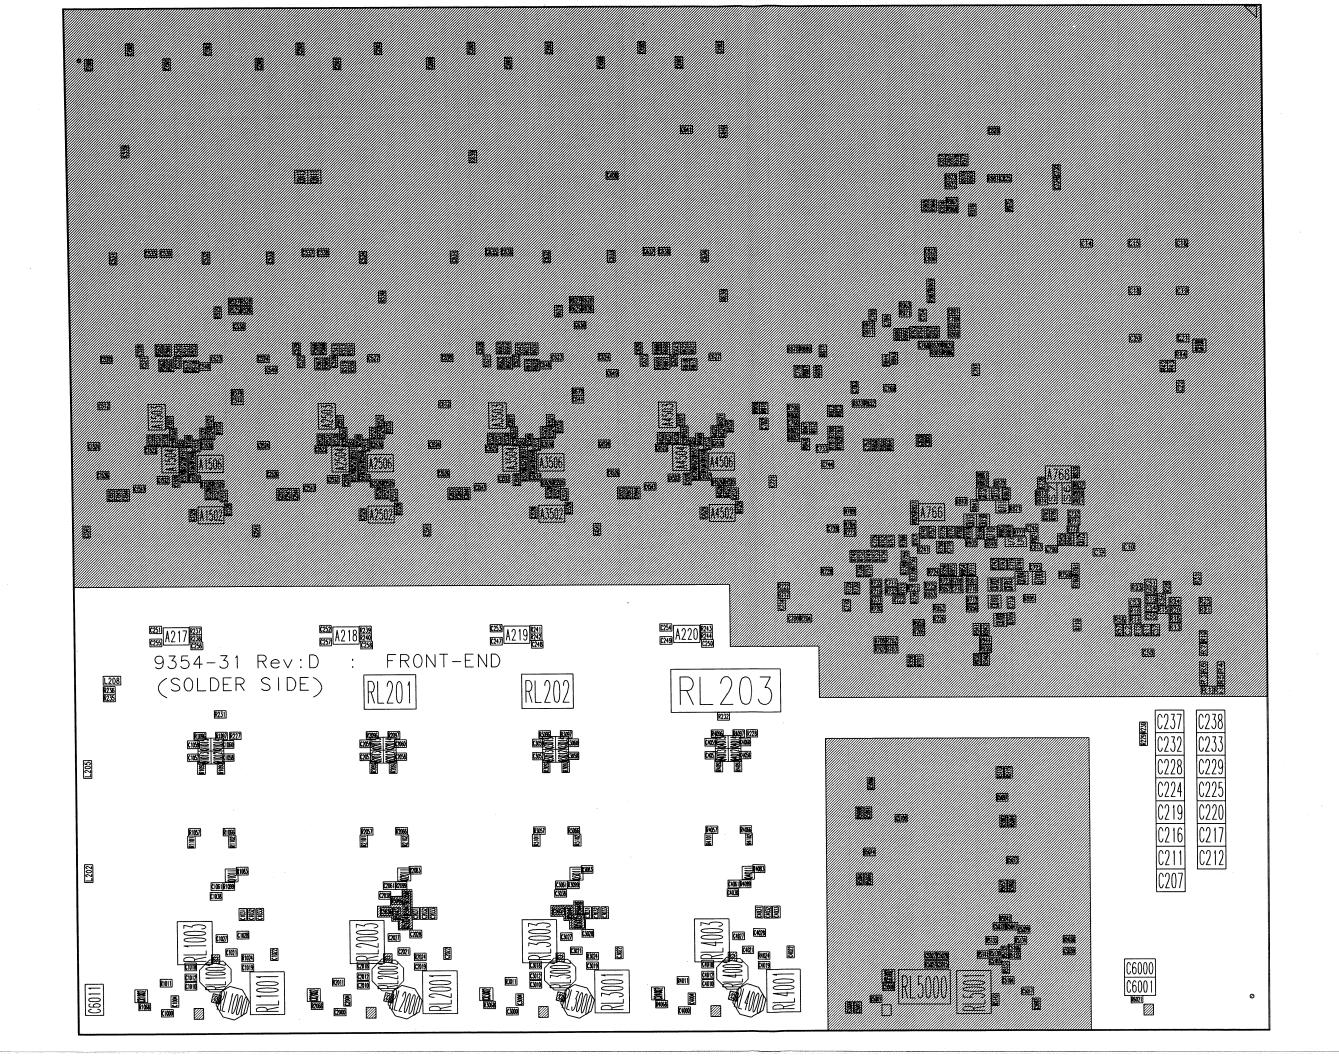


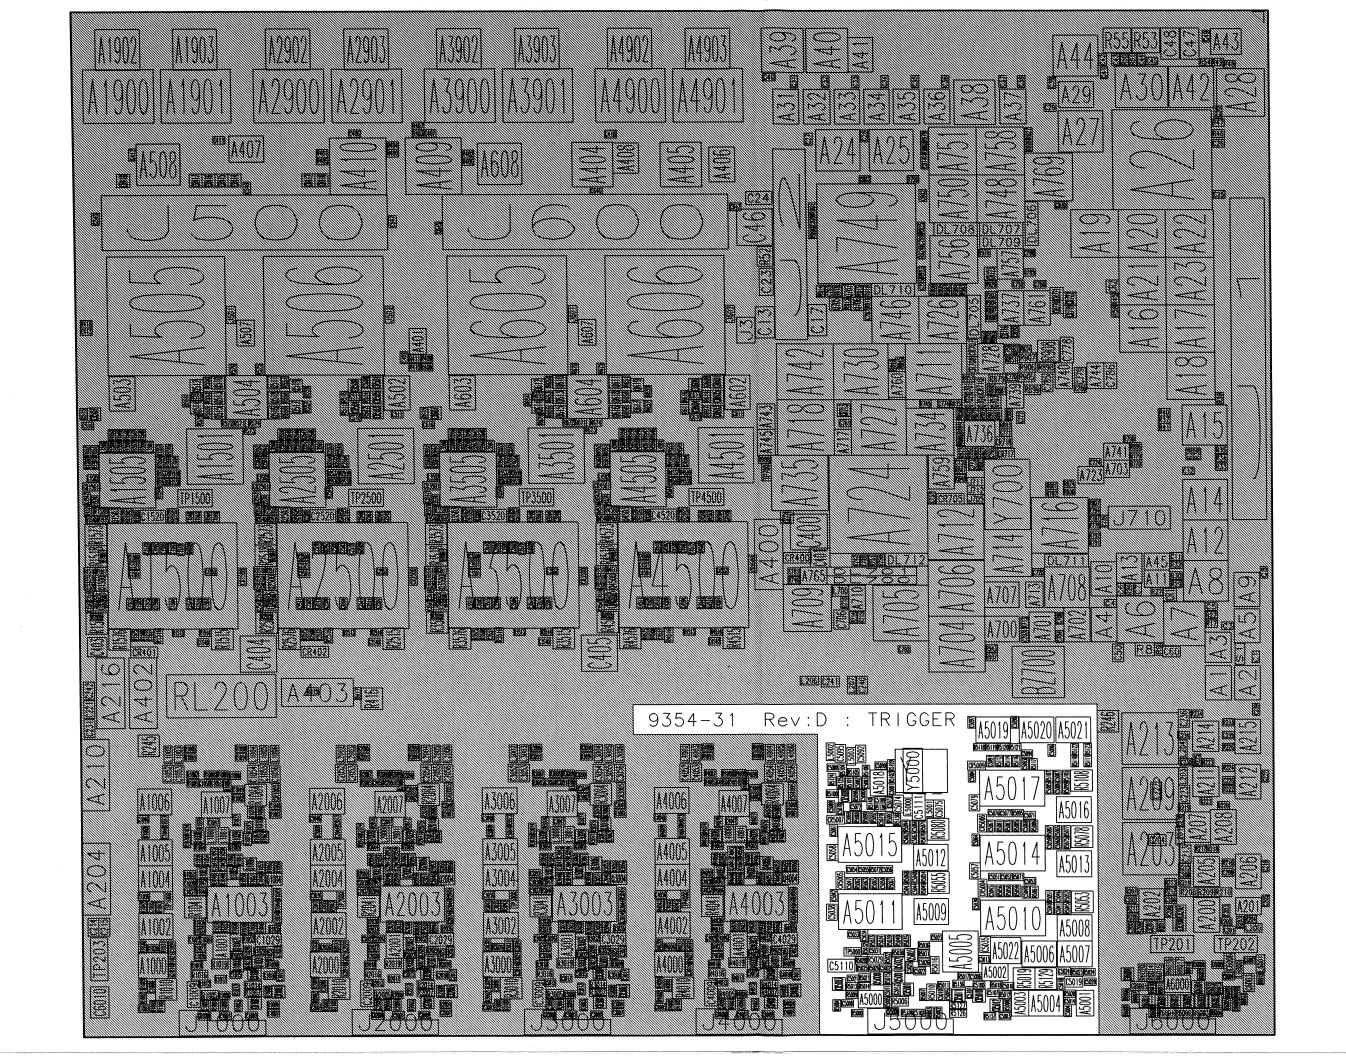


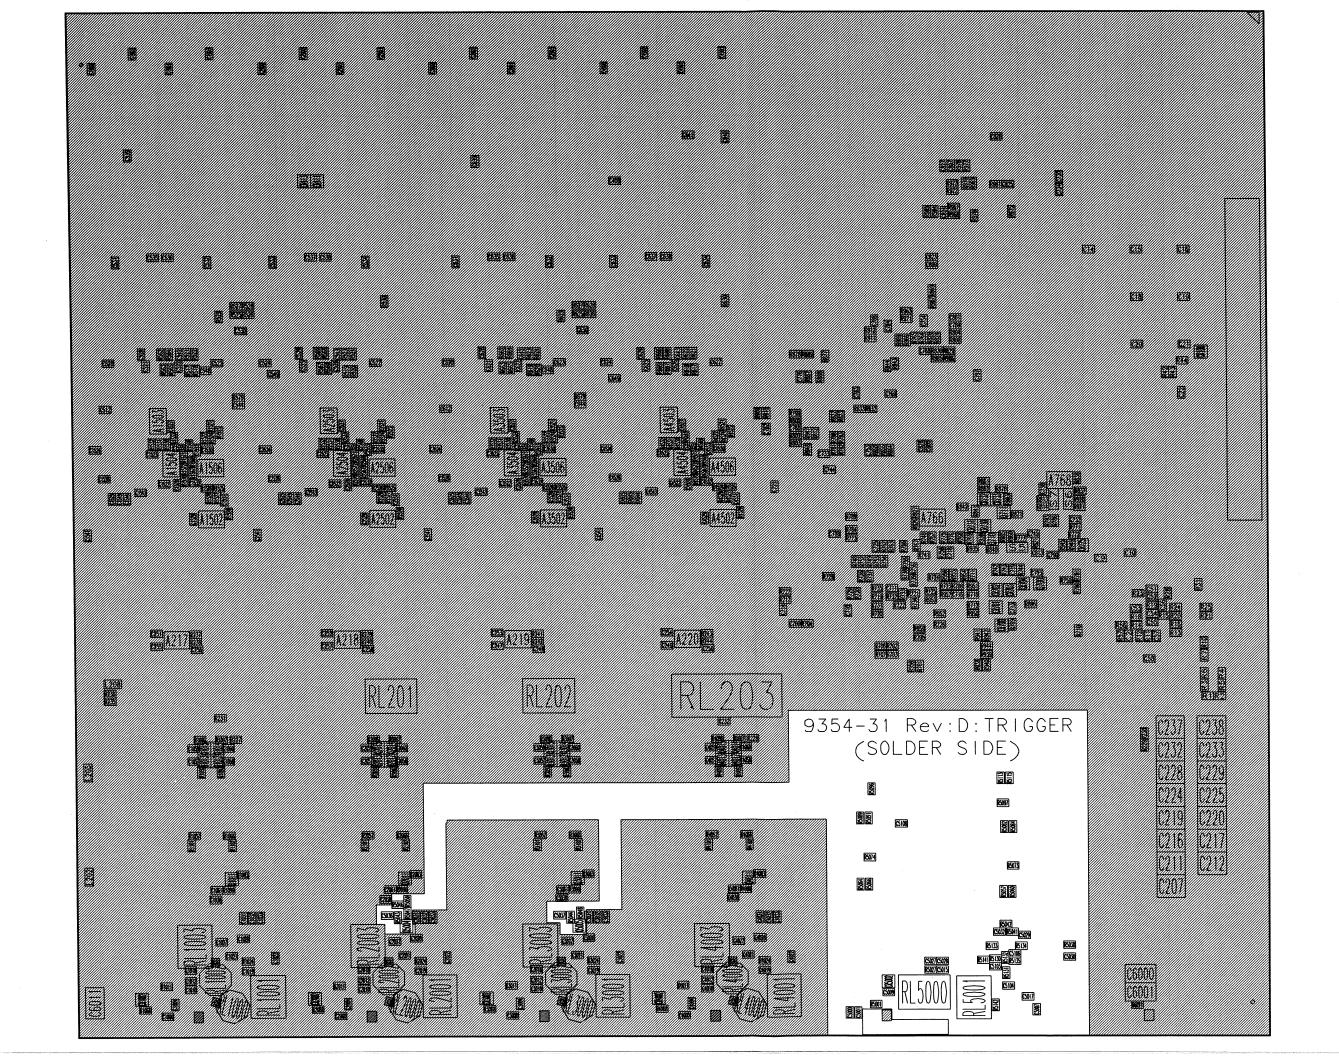

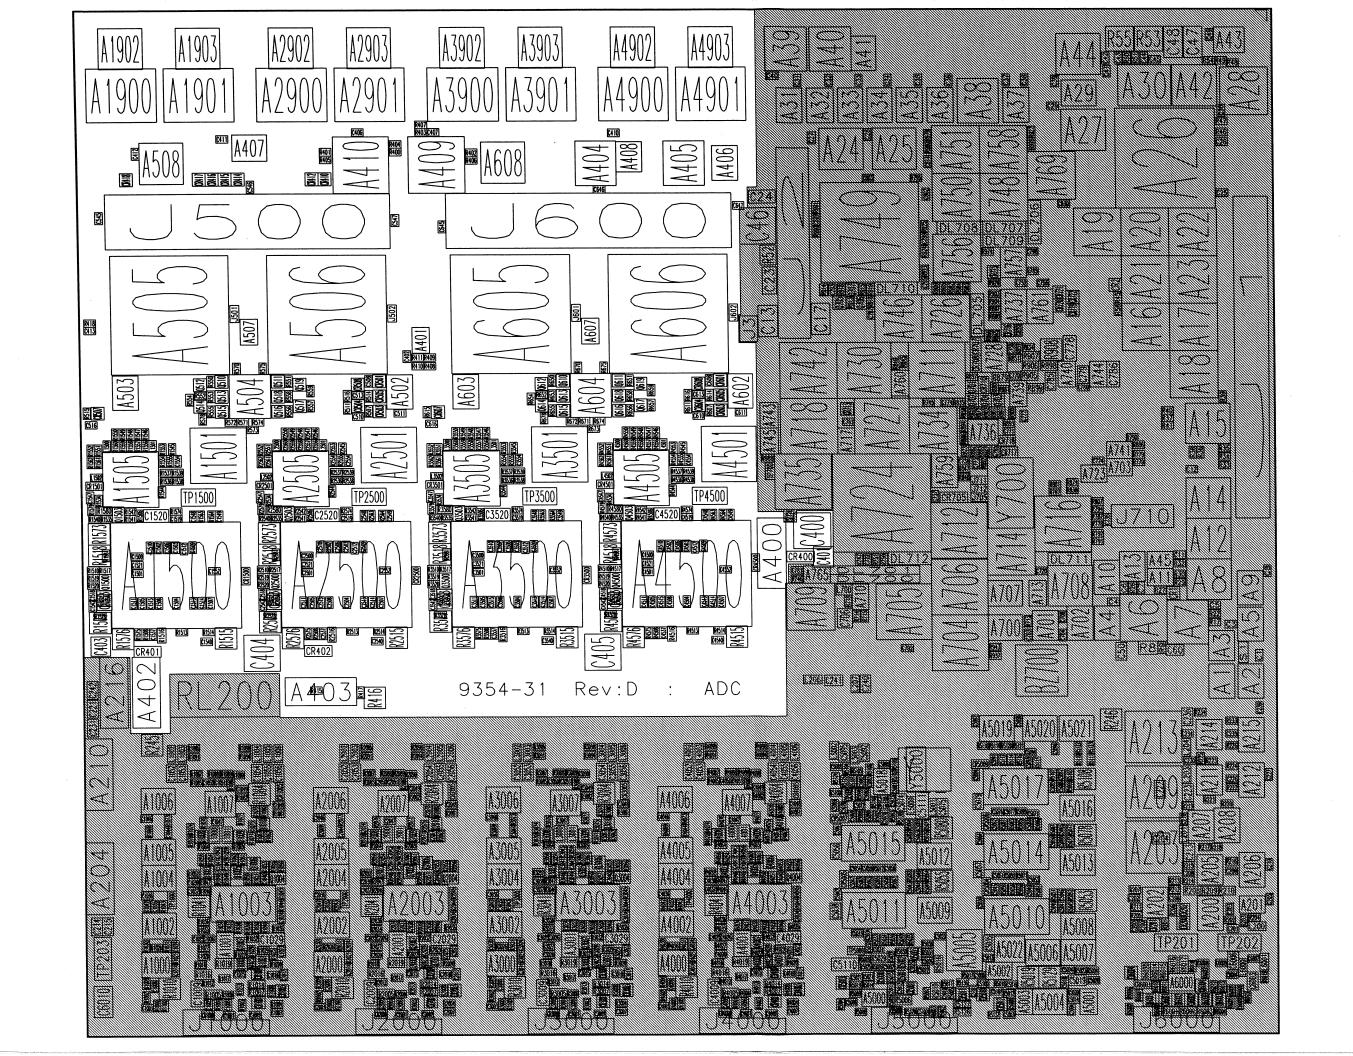

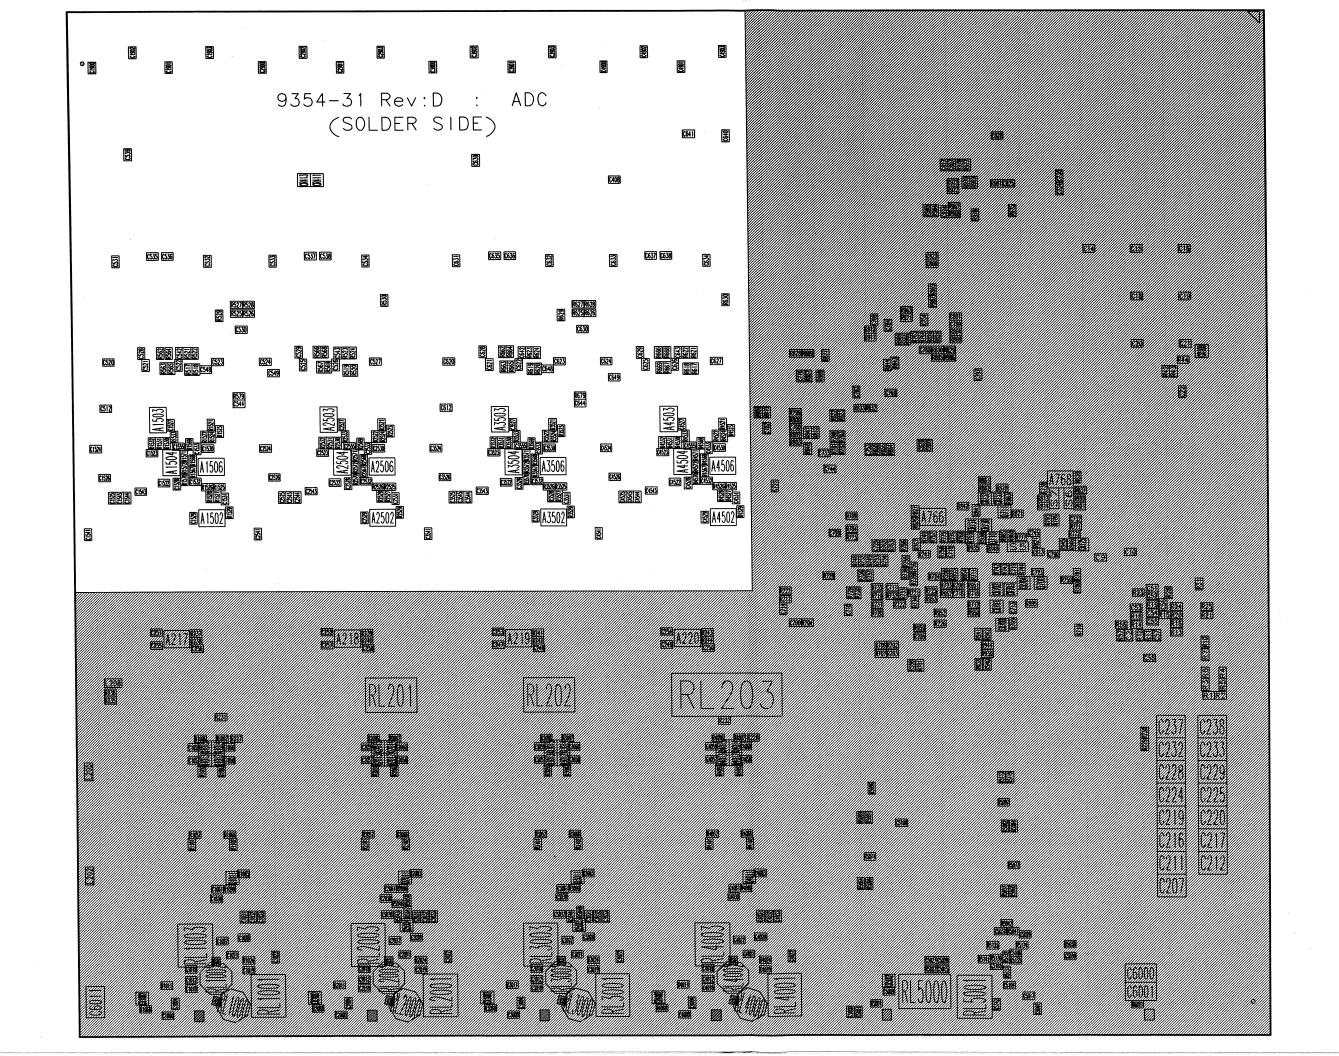

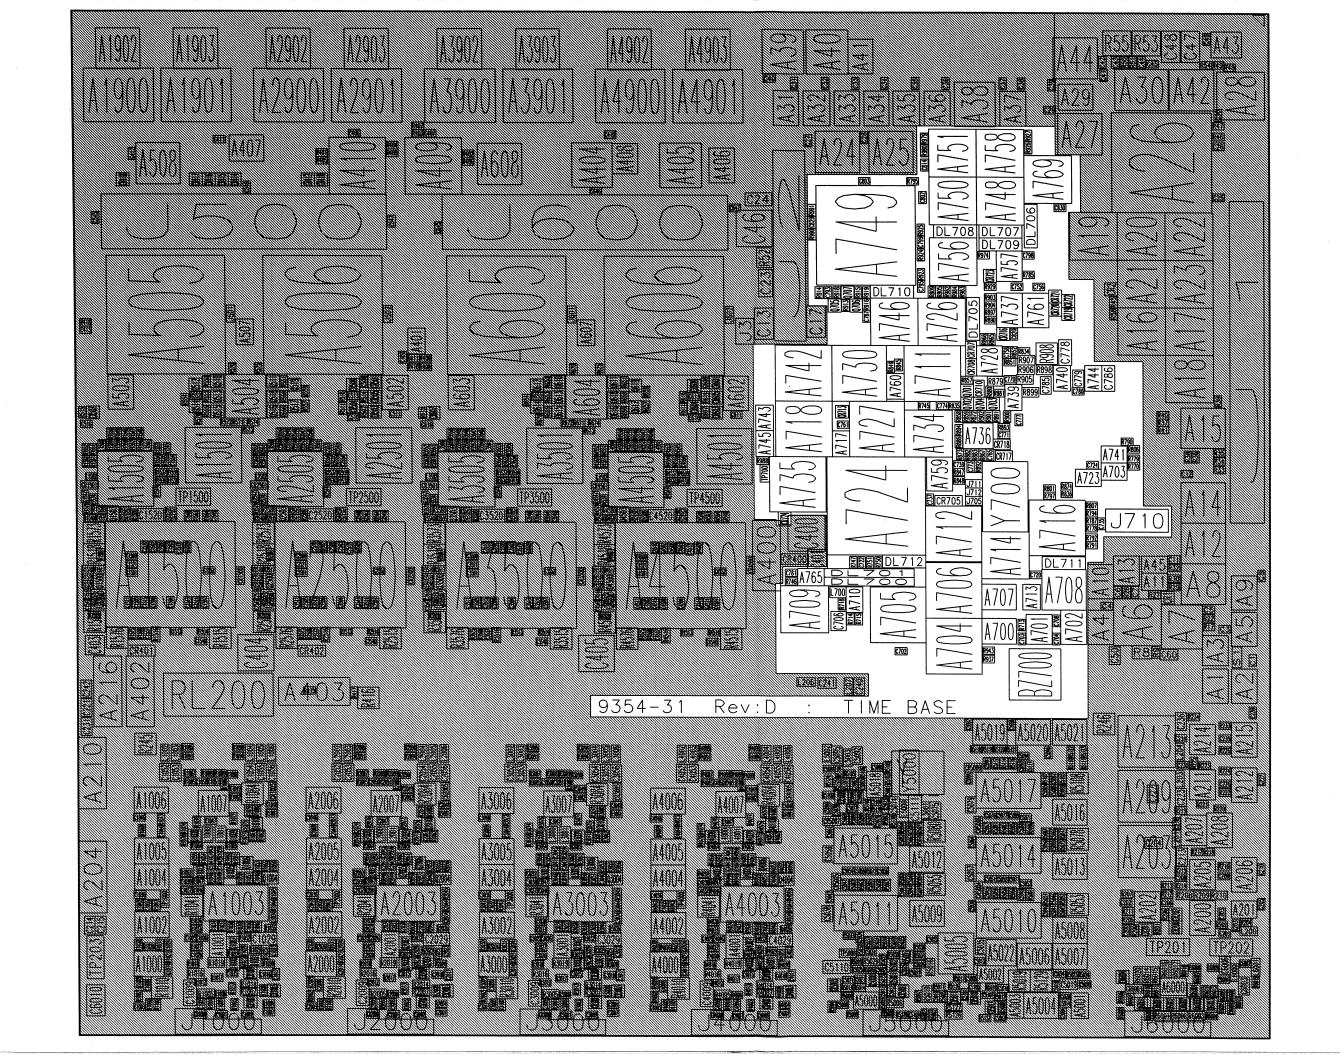

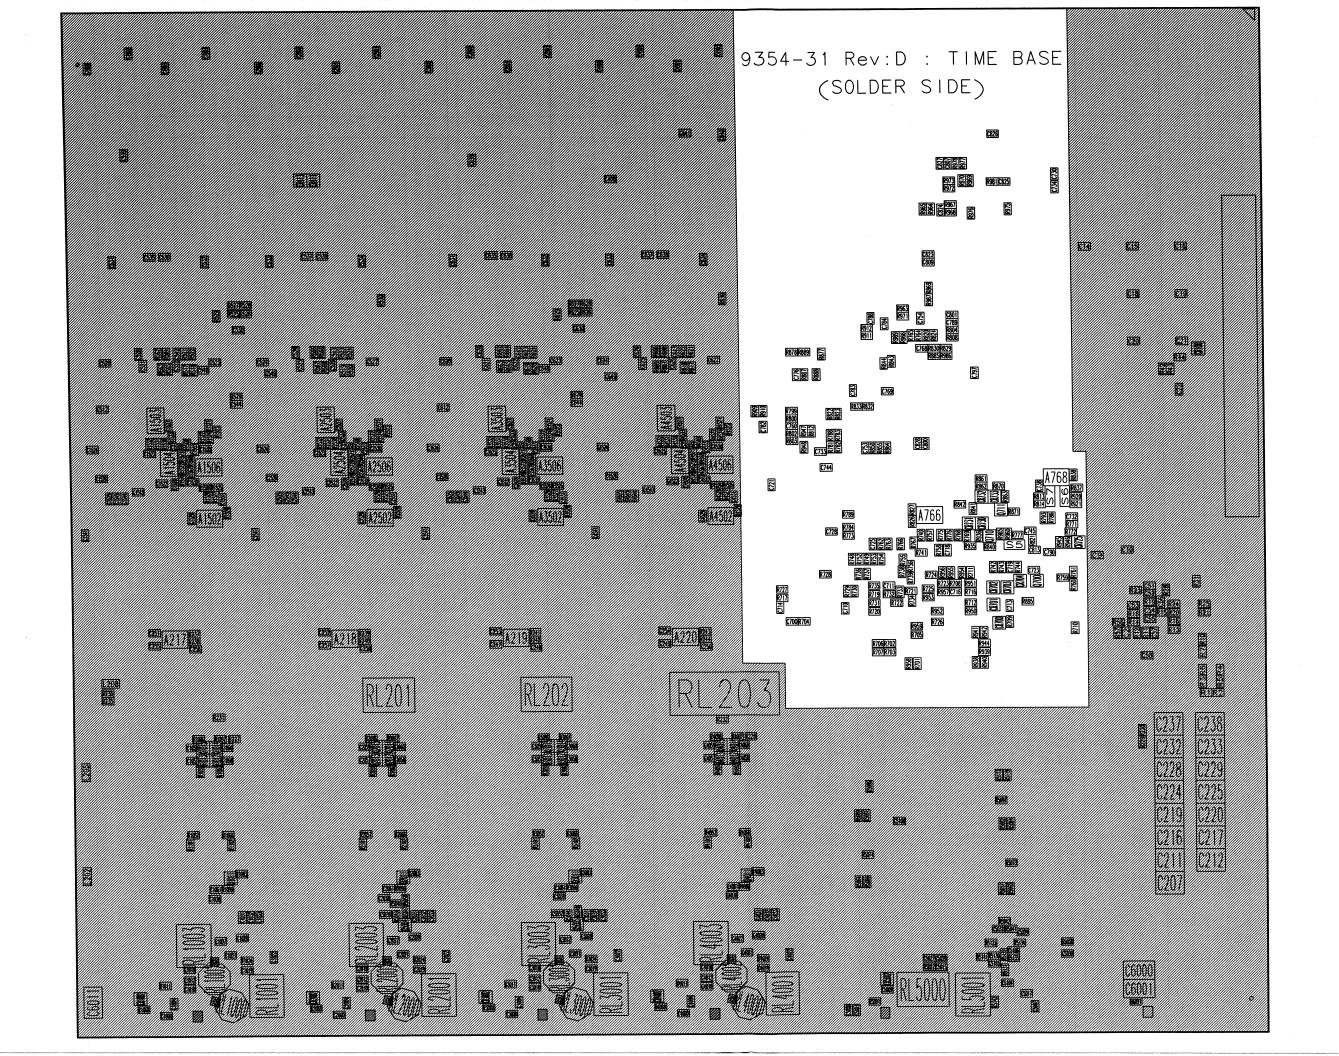

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T

Location	Part Number	Description	Location	Part Number	Description
A 1		SM74HCT165	A200	SM207770442	SMDG442-PS
A2		SM74HCT138	A200	SM208470705	
A3	SM200178030		A201	SM208870339	
A4		SM74HCT138	A202	208124003	7912
A5		SM74HCT138	A204	208123002	7812
A6	SM206260858		A205	SM208470347	
A7	SM207970351		A206		SMDG201-PS
A8	SM206070584		A207	SM208470347	
A9	SM207978251		A208	SM207770201	
A10	SM200178138	SM74HCT138	A209	208124003	7912
A 11		SMPCF8582A	A210	208123002	7812
A12	SM206885245	SM74ABT245	A211	SM208470347	SMLF347
A13	SM200178000	SM74HCT00	A212	SM207770201	SMDG201-PS
A14	SM206885245	SM74ABT245	A213	208124002	7905
A15	SM207171244	SM74ABT244	A214	SM208470347	SMLF347
A16	SM205045357	CHEMIN-A	A215	SM207770201	SMDG201-PS
A 17	SM205045358	ROUTE3-C	A216	208122002	7805
A18	SM205045355	RUELLE-A	A400	208124003	7912
A19	SM205045356	ARTERE-A	A401	SM201174011	SM10EL11
A20	SM205045354	AVENUE-A	A402	208123002	7812
A21	SM205045350		A403	208122002	7805
A22	SM205045352		A404		SM74ABT241
A23	SM205045351		A405		SM74ABT241
A24		SM74ABT244	A406	SM207970139	
A25		SM74ABT244	A407	SM207970139	
A26	MCL404	MCL404	A408	SM200172008	
A27		SM74ABT244	A409	SM207961158	
A28	SM205045300		A410	SM207961158	
A29	SM207972157		A502	SM205618594	
A30	SM207280703		A503		SM74HC594-PS
A31	SM200169191		A504		SMDAC8800
A32	SM200169191		A505	MDX416	
A33	SM200169191		A506	MDX416 SM201174011	MDX416 SM10EL11
A34 A35	SM200169191 SM200169191		A507 A508		SM74ABT244
A36	SM207970139		A602		SM74AB1244 SM74HC594-PS
A36 A37		SM74F139 SM74HCT4040	A603		SM74HC594-PS
A37		SM74ABT241	A604		SMDAC8800
A39		SM74ABT623	A605	MDX416	MDX416
A40		SM74ABT623	A606	MDX416	MDX416
A 41	SM207970139		A607	SM201174011	
A42		SM74HCT374	A608		SM74ABT244
A43	SM200178074 SM200178074		A700		SM74HC594-PS
A44		SM74HCT273	A701	SM200178002	
A45	SM208570805		A702		SM74HCT251
			· - · - -		

Location	Part Number	Description	Location	Part Number	Description
A703	SM201274033	SM10EL33	A1000	SM208870339	
A704	SM206970457		A1001	SM208470705	
A705	SM206970457		A1002	SM207770201	
A706	SM201164104	SM10E104	A1003	MFE409	MFE409
A707	SM205618594	SM74HC594-PS	A1004	SM289772003	SMULN2003
A708	SM200178273	SM74HCT273	A1005	SM205618594	SM74HC594-PS
A709	SM200167102	SM10H102	A1006	SM205618594	SM74HC594-PS
A710	SM201174011		A1007	SM208470347	
A711	SM201164131		A1500	HSH416	HSH416
A712	SM207960157		A1501	SM201166195	
A713	SM201570016		A1502	SM201174005	
A714	SM200167164		A1503	SM201174011	
A716	SM206970457		A1504	SM201174005	
A717	SM201174001		A1505	SM207260718	
A718	SM201164131		A1506	SM201174011	
A723	SM201274032		A1900		SRAM128Kx8-70
A724	MST412	MST412	A1901		SRAM128Kx8-70
A726	SM207360125		A1902		SM74ABT623
A727	SM200169016		A1903	SM206884623	SM74ABT623
A728 A730	SM200178002		A2000	SM208870339	
A734	SM201164167 SM207360125		A2001 A2002	SM208470705 SM207770201	
A735	SM200169016		A2002 A2003	MFE409	MFE409
A736	SM208030245		A2003	SM289772003	
A737		SM74HC594-PS	A2005		SM74HC594-PS
A739	SM208470353		A2006		SM74HC594-PS
A740	SM208570078		A2007	SM208470347	
A741	SM201274032		A2500	HSH416	HSH416
A742	SM200169016		A2501	SM201166195	
A743	SM201274032		A2502	SM201174005	
A744	SM208880079	SM79L12	A2503	SM201174011	
A745	SM201174001	SM10EL01	A2504	SM201174005	SM10EL05
A746	SM207360125	SM10125	A2505	SM207260718	SMTDA8718
A748	SM200167102	SM10H102	A2506	SM201174011	SM10EL11
A749	MTB411	MTB411	A2900	SM205701070	SRAM128Kx8-70
A750	SM200167131	SM10H131	A2901	SM205701070	SRAM128Kx8-70
A751	SM207367125		A2902	SM206884623	SM74ABT623
A756	SM207367124		A2903		SM74ABT623
A757	SM200178074		A3000	SM208870339	
A758	SM200167131		A3001	SM208470705	
A759	SM207170367		A3002	SM207770201	
A760	SM201174031		A3003	MFE409	MFE409
A761		SM74HC594-PS	A3004	SM289772003	
A765	SM201174031		A3005		SM74HC594-PS
A769	SM207367125	SM10H125	A3006	SM205618594	SM74HC594-PS

Location	Part Number	Description	Location	Part Number	Description
A3007	SM208470347	SMLF347	A5014	MTR408	MTR408
A3500	HSH416	HSH416	A5015	MTR408	MTR408
A3501	SM201166195	SM10E195	A5016	SM205618594	SM74HC594-PS
A3502	SM201174005	SM10EL05	A5017	MTR408	MTR408
A3503	SM201174011	SM10EL11	A5018	SM201570016	SM10EL16-PS
A3504	SM201174005	SM10EL05	A5019	SM205618594	SM74HC594-PS
A3505	SM207260718	SMTDA8718	A5020	SM205618594	SM74HC594-PS
A3506	SM201174011	SM10EL11	A5021	SM207978153	SM74HCT153-PS
A3900	SM205701070	SRAM128Kx8-70	A5022	SM208870339	SMLM339
A3901	SM205701070	SRAM128Kx8-70	A6000	SM208470353	SMLF353
A3902	SM206884623	SM74ABT623	C1	SM661207103	SM.01uFS
A3903	SM206884623	SM74ABT623	C2	SM661207104	SM.1uFS
A4000	SM208870339	SMLM339	C3	SM661207103	
A4001	SM208470705	SMAD705	C4	SM661207103	
A4002	SM207770201	SMDG201-PS	C5	SM661207103	
A4003	MFE409	MFE409	C6	SM661255181	•
A4004	SM289772003		C7	SM661207104	
A4005		SM74HC594-PS	C8	SM661207103	
A4006		SM74HC594-PS	C9	SM661207103	
A4007	SM208470347		C10	SM661207103	
A4500	HSH416	HSH416	C11	SM661207103	
A4501	SM201166195		C12	SM661207103	
A4502	SM201174005		C13		SM10uF-25V
A4503	SM201174011		C14	SM661207103	
A4504	SM201174005		C15	SM661207103	
A4505	SM207260718		C16	SM661207103	
A4506	SM201174011		C17		SM10uF-25V
A4900		SRAM128Kx8-70	C18	SM661207103	
A4901		SRAM128Kx8-70	C19	SM661207103	
A4902		SM74ABT623	C20	SM661207103	
A4903		SM74ABT623	C21	SM661207103	
A5000	SM208470705		C22	SM661207103	
A5001	SM208971881		C23		SM22uF-15V
A5002	SM208470037		C24		SM22uF-15V
A5003	SM208470351		C25	SM661207103 SM661207103	
A5004		SMDG403-PS	C26	SM661207103 SM661207103	
A5005		SMDG508-PS	C27		
A5006		SM74HC594-PS	C28	SM661207103	
A5007		SMDG442-PS	C29	SM661207103 SM661207103	
A5008		SM74HC594-PS	C30	SM661207103 SM661207103	
A5009		SM74HC594-PS	C31	SM661207103	
A5010	MTR408 MTR408	MTR408 MTR408	C32 C33	SM661207103 SM661207103	
A5011 A5012		SM74HC594-PS	C33	SM661207103 SM661207103	
		SM74HC594-PS SM74HC594-PS	C34	SM661207103	
A5013	3141203016394	SIVI /4IICJ94-F3	033	314100120/103	Sivi.viui S

Location	Part Number	Description	Location	Part Number	Description
C36	SM661207103	SM 01nFS	C221		SM2.2uF-20V
C37	SM661207103		C222		SM2.2uF-20V
C38	SM661207103		C223		SM2.2uF-20V
C39	SM661207103		C224		SM.01uF-NPO
C40	SM661207103		C225	SM661726103	
C41	SM661207104		C226	SM661207103	
C42	SM661207103		C227	SM661207103	
C43	SM661207103		C228		SM.01uF-NPO
C44	SM661207103		C229		SM.01uF-NPO
C45	SM661207104		C230	SM661207103	SM.01uFS
C46	146544471	470uF-25V	C231	SM666327225	SM2.2uF-20V
C47	SM666247106	SM10uF-25V	C232	SM661726103	SM.01uF-NPO
C48	SM666247106	SM10uF-25V	C233	SM661726103	SM.01uF-NPO
C49	SM661207103	SM.01uFS	C234	SM661207103	SM.01uFS
C50	SM666327225	SM2.2uF-20V	C235	SM661207103	SM.01uFS
C51	SM661207104	SM.1uFS	C236	SM666327225	SM2.2uF-20V
C52	SM661207104	SM.1uFS	C237	SM661726103	SM.01uF-NPO
C53	SM661207104	SM.1uFS	C238	SM661726103	SM.01uF-NPO
C54	SM661207104	SM.1uFS	C239	SM661207103	SM.01uFS
C55	SM661207104	SM.1uFS	C240	SM666327225	SM2.2uF-20V
C56	SM661207104	SM.1uFS	C241	SM666327225	SM2.2uF-20V
C57	SM661207104	SM.1uFS	C242	SM666327225	SM2.2uF-20V
C58	SM661207104	SM.1uFS	C247	SM661207103	SM.01uFS
C60	SM666327225	SM2.2uF-20V	C248	SM661207103	SM.01uFS
C200	SM661207103	SM.01uFS	C249	SM661207103	SM.01uFS
C201	SM661207103	SM.01uFS	C250	SM661207103	SM.01uFS
C202	SM661207104		C251	SM661207103	
C203	SM661207103		C252	SM661207103	
C204		SM2.2uF-20V	C253	SM661207103	
C205	SM661207103		C254	SM661207103	
C206	SM661207103		C255	SM661207103	
C207		SM.01uF-NPO	C256	SM661207103	
C208	SM661207103		C257	SM661207103	
C209	SM661207103		C258	SM661207103	
C210	SM661207103		C400	146574227	220uF-25V
C211		SM.01uF-NPO	C401	146554476	47uF-25V
C212		SM.01uF-NPO	C402	SM661207103	
C213		SM2.2uF-20V	C403	146554476	47uF-25V
C214		SM2.2uF-20V	C404	146574227	220uF-25V
C215		SM2.2uF-20V	C405	146574227	220uF-25V
C216		SM.01uF-NPO	C406	SM661207103	
C217		SM.01uF-NPO	C407	SM661207103	
C218	SM661207103		C408	SM661207103	
C219		SM.01uF-NPO	C410	SM661207103	
C220	SM661726103	SM.01uF-NPO	C411	SM661207103	SM.01uFS

C412 SM661207103 SM.01uFS C623 SM661207104 SM.1uFS C413 SM661207103 SM.01uFS C624 SM661207104 SM.1uFS C508 SM661207103 SM.01uFS C625 SM661207104 SM.1uFS C510 SM661207103 SM.01uFS C626 SM661207104 SM.1uFS C511 SM661207103 SM.01uFS C627 SM661207103 SM.01uFS C512 SM661207103 SM.01uFS C628 SM661207103 SM.01uFS C513 SM661207103 SM.01uFS C629 SM661207103 SM.01uFS C516 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1u	Location	Part Number	Description	Location	Part Number	•
C413 SM661207103 SM.01uFS C624 SM661207104 SM.1uFS C508 SM661207103 SM.01uFS C625 SM661207104 SM.1uFS C510 SM661207103 SM.01uFS C626 SM661207103 SM.1uFS C511 SM661207103 SM.01uFS C627 SM661207103 SM.01uFS C513 SM661207103 SM.01uFS C628 SM661207103 SM.01uFS C516 SM661207104 SM.01uFS C630 SM661207104 SM.01uFS C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uF	C412	SM661207103	SM.01uFS	C623	SM661207104	SM.1uFS
C510 SM661207103 SM.01uFS C626 SM661207104 SM.1uFS C511 SM661207103 SM.01uFS C627 SM661207103 SM.01uFS C512 SM661207103 SM.01uFS C628 SM661207103 SM.01uFS C513 SM661207103 SM.01uFS C629 SM661207103 SM.01uFS C516 SM661207104 SM.1uFS C630 SM661207104 SM.1uFS C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C526 SM661207103 SM.01uFS C638 SM661207104 SM.1uFS	C413	SM661207103	SM.01uFS	C624		
C511 SM661207103 SM.01uFS C627 SM661207104 SM.1uFS C512 SM661207103 SM.01uFS C628 SM661207103 SM.01uFS C513 SM661207103 SM.01uFS C629 SM661207103 SM.01uFS C516 SM661207104 SM.1uFS C630 SM661207104 SM.1uFS C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207103 SM.0uFS C638 SM661207104 SM.1uFS C525 SM661207103 SM.0uFS C639 SM661207103 SM.0uFS <td>C508</td> <td>SM661207103</td> <td>SM.01uFS</td> <td>C625</td> <td>SM661207104</td> <td>SM.1uFS</td>	C508	SM661207103	SM.01uFS	C625	SM661207104	SM.1uFS
C512 SM661207103 SM.01uFS C628 SM661207103 SM.01uFS C513 SM661207103 SM.01uFS C629 SM661207103 SM.01uFS C516 SM661207104 SM.1uFS C630 SM661207104 SM.1uFS C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C528 SM661207103 SM.01uFS C638 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS	C510	SM661207103	SM.01uFS	C626	SM661207104	SM.1uFS
C513 SM661207103 SM.01uFS C629 SM661207103 SM.01uFS C516 SM661207103 SM.01uFS C630 SM661207103 SM.01uFS C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207103 SM.1uFS C637 SM661207104 SM.1uFS C526 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C527 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C641 SM661207103 SM.01u	C511	SM661207103	SM.01uFS	C627	SM661207104	SM.1uFS
C516 SM661207103 SM.01uFS C630 SM661207103 SM.01uFS C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207103 SM.01uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C638 SM661207103 SM.01uFS C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C531 SM661207103 SM.01uFS C641 SM661207103 SM.01	C512	SM661207103	SM.01uFS	C628	SM661207103	SM.01uFS
C520 SM661207104 SM.1uFS C631 SM661207104 SM.1uFS C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C639 SM661207104 SM.1uFS C528 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS<		SM661207103	SM.01uFS	C629	SM661207103	SM.01uFS
C521 SM661207104 SM.1uFS C632 SM661207104 SM.1uFS C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207103 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C638 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C530 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C642 SM661207103 SM.01uF		SM661207103	SM.01uFS	C630	SM661207103	SM.01uFS
C522 SM661207104 SM.1uFS C633 SM661207104 SM.1uFS C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C638 SM661207103 SM.01uFS C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C641 SM661207103 SM.01uFS C530 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C643 SM661207103 SM.1uF	C520	SM661207104	SM.1uFS	C631	SM661207104	SM.1uFS
C523 SM661207104 SM.1uFS C634 SM661207104 SM.1uFS C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C638 SM661207103 SM.1uFS C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207104 SM.1uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uF	C521	SM661207104	SM.1uFS	C632	SM661207104	SM.1uFS
C524 SM661207104 SM.1uFS C635 SM661207104 SM.1uFS C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C638 SM661207103 SM.01uFS C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207104 SM.1uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C645 SM661207104 SM.1u	C522	SM661207104	SM.1uFS	C633	SM661207104	SM.1uFS
C525 SM661207104 SM.1uFS C636 SM661207104 SM.1uFS C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207103 SM.01uFS C638 SM661207103 SM.01uFS C528 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207103 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207103 SM.1uFS C535 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1u	C523	SM661207104	SM.1uFS	C634	SM661207104	SM.1uFS
C526 SM661207104 SM.1uFS C637 SM661207104 SM.1uFS C527 SM661207104 SM.1uFS C638 SM661207103 SM.1uFS C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207104 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uF	C524	SM661207104	SM.1uFS	C635	SM661207104	SM.1uFS
C527 SM661207104 SM.1uFS C638 SM661207103 SM.01uFS C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207104 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207104 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207103 SM.01uFS C700 SM661207103 SM.0	C525	SM661207104	SM.1uFS	C636	SM661207104	SM.1uFS
C528 SM661207103 SM.01uFS C639 SM661207103 SM.01uFS C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207103 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01	C526	SM661207104		C637	SM661207104	SM.1uFS
C529 SM661207103 SM.01uFS C640 SM661207103 SM.01uFS C530 SM661207103 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01	C527	SM661207104	SM.1uFS	C638	SM661207104	SM.1uFS
C530 SM661207103 SM.01uFS C641 SM661207103 SM.01uFS C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207104 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C704 SM661207103 SM.01		SM661207103	SM.01uFS	C639	SM661207103	SM.01uFS
C531 SM661207104 SM.1uFS C642 SM661207103 SM.01uFS C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207104 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207103 SM.01uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C544 SM661207104 SM.1uFS C706 SM158240200 SM.01		SM661207103	SM.01uFS	C640	SM661207103	SM.01uFS
C532 SM661207104 SM.1uFS C643 SM661207103 SM.01uFS C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207103 SM.01uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C544 SM661207104 SM.1uFS C706 SM158240200 SM.0-2.5pF C545 SM661207104 SM.1uFS C710 SM661207103 SM.	C530	SM661207103	SM.01uFS	C641	SM661207103	SM.01uFS
C533 SM661207104 SM.1uFS C644 SM661207103 SM.01uFS C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C710 SM661207103 SM	C531	SM661207104	SM.1uFS	C642	SM661207103	SM.01uFS
C534 SM661207104 SM.1uFS C645 SM661207104 SM.1uFS C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661207103 SM.01uFS C547 SM661207104 SM.1uFS C710 SM661207103 SM		SM661207104	SM.1uFS	C643	SM661207103	SM.01uFS
C535 SM661207104 SM.1uFS C646 SM661207104 SM.1uFS C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661207103 SM.01uFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 S		SM661207104	SM.1uFS	C644		
C536 SM661207104 SM.1uFS C647 SM661207104 SM.1uFS C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661207103 SM.01uFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207103 SM.01uFS C713 SM661207103 <td< td=""><td>C534</td><td>SM661207104</td><td>SM.1uFS</td><td>C645</td><td>SM661207104</td><td>SM.1uFS</td></td<>	C534	SM661207104	SM.1uFS	C645	SM661207104	SM.1uFS
C537 SM661207104 SM.1uFS C648 SM661207104 SM.1uFS C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C714 SM661207103 <td< td=""><td>C535</td><td>SM661207104</td><td>SM.1uFS</td><td>C646</td><td>SM661207104</td><td>SM.1uFS</td></td<>	C535	SM661207104	SM.1uFS	C646	SM661207104	SM.1uFS
C538 SM661207104 SM.1uFS C649 SM661207104 SM.1uFS C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 <		SM661207104	SM.1uFS	C647	SM661207104	SM.1uFS
C539 SM661207103 SM.01uFS C700 SM661207103 SM.01uFS C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103		SM661207104	SM.1uFS	C648	SM661207104	SM.1uFS
C542 SM661207103 SM.01uFS C702 SM661207103 SM.01uFS C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103				C649	SM661207104	SM.1uFS
C543 SM661207103 SM.01uFS C703 SM661207103 SM.01uFS C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103						
C544 SM661207103 SM.01uFS C704 SM661207103 SM.01uFS C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C545 SM661207104 SM.1uFS C706 SM158240200 SM0.6-2.5pF C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C546 SM661207104 SM.1uFS C708 SM661255560 SM56pFS C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C547 SM661207104 SM.1uFS C710 SM661207103 SM.01uFS C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						_
C548 SM661207104 SM.1uFS C711 SM661207103 SM.01uFS C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C549 SM661207104 SM.1uFS C713 SM661207103 SM.01uFS C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C608 SM661207103 SM.01uFS C714 SM661207103 SM.01uFS C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C610 SM661207103 SM.01uFS C716 SM661207103 SM.01uFS C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C611 SM661207103 SM.01uFS C718 SM661207103 SM.01uFS C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C612 SM661207103 SM.01uFS C719 SM661207103 SM.01uFS C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C613 SM661207103 SM.01uFS C720 SM661207103 SM.01uFS						
C616 SM661207103 SM.01uFS C721 SM661207103 SM.01uFS						
C620 SM661207104 SM.1uFS C722 SM661207103 SM.01uFS						
C621 SM661207104 SM.1uFS C723 SM661207103 SM.01uFS						
C622 SM661207104 SM.1uFS C724 SM661207103 SM.01uFS	C622	SM661207104	SM.luFS	C724	SM661207103	SM.01uFS

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T $\,$

Location	Part Number	Description	Location	Part Number	Description
C725	SM661207103	SM.01uFS	C799	SM661207103	SM 01nFS
C728	SM661207103	SM.01uFS	C800	SM661207103	
C730	SM661207103	SM.01uFS	C801	SM661207103	SM.01uFS
C732	SM661207103	SM.01uFS	C802	SM661207103	
C733	SM661255560	SM56pFS	C803	SM661207103	SM.01uFS
C734	SM661207103	SM.01uFS	C807	SM661207103	SM.01uFS
C735	SM661207103	SM.01uFS	C809	SM661207103	SM.01uFS
C737	SM661207103	SM.01uFS	C813	SM661207103	SM.01uFS
C738	SM661207103	SM.01uFS	C814	SM661207103	SM.01uFS
C739	SM661207103	SM.01uFS	C820	SM661207103	SM.01uFS
C744	SM661207103	SM.01uFS	C823	SM661207103	SM.01uFS
C745	SM661207103	SM.01uFS	C824	SM661207103	SM.01uFS
C752	SM661207103	SM.01uFS	C825	SM661207103	SM.01uFS
C753	SM661207103	SM.01uFS	C826	SM661207103	SM.01uFS
C754	SM661207103	SM.01uFS	C827	SM661207103	SM.01uFS
C756	SM661207103	SM.01uFS	C828	SM661207103	SM.01uFS
C758	SM661255056	SM5.6pFS	C829	SM661255180	SM18pFS
C760	SM661207103	SM.01uFS	C830	SM661207103	SM.01uFS
C761	SM661207103	SM.01uFS	C1000	SM661207104	SM.1uFS
C765	SM661255101	SM100pFS	C1001	SM661207103	SM.01uFS
C768	SM661207103	SM.01uFS	C1002	SM661207103	SM.01uFS
C769	SM661207103	SM.01uFS	C1003	SM661207104	SM.1uFS
C770	SM661207103	SM.01uFS	C1004	SM661207104	SM.1uFS
C771	SM661207103	SM.01uFS	C1005	SM661255056	SM5.6pFS
C773	SM661207103	SM.01uFS	C1006	SM661207103	SM.01uFS
C774	SM661207103	SM.01uFS	C1007	SM661207103	SM.01uFS
C776	SM661207103	SM.01uFS	C1008	SM661207104	SM.1uFS
C777	SM661207103	SM.01uFS	C1009	158849012	5-15pF-S
C778	SM661446474	SM.47uF	C1010	SM661256120	SM12pFS
C779	SM666327225	SM2.2uF-20V	C1012	SM661255820	SM82pFS
C780	SM661207103		C1014	SM661207103	
C781	SM661207103		C1015		SM560pFS-500V
C782	SM661207103		C1016	SM661207104	
C783	SM661207103		C1017	SM661207103	
C784	SM661207103		C1018	SM661207103	
C785	SM666327225		C1019	SM661207103	
C786	SM661446474		C1020	SM661207223	
C787	SM661207103		C1021	SM661207103	
C788	SM661207103		C1022	SM661207103	
C789	SM661207103		C1023	SM661207104	
C790	SM661207103		C1024	SM661207103	
C793	SM661207103		C1025	SM661207103	
C795	SM661207103		C1026	SM661207103	SM.01uFS
C797	SM661207103		C1027	SM661255056	•
C798	SM661207103	SM.01uFS	C1028	SM661207103	SM.01uFS

Location	Part Number	Description	Location	Part Number	Description
C1029	158849009	0.5-2.5pF-S	C1514	SM661207103	SM.01nFS
C1030	SM661255330	•	C1515	SM661207103	
C1031	SM661207103	1	C1518	SM661205472	
C1032	SM661207103		C1519	SM661207104	
C1033	SM661207103		C1520	158849010	1-5pF-S
C1034	SM661207103		C1521	SM661207103	•
C1036	SM661207103		C1522	SM661207104	
C1037	SM661207103	SM.01uFS	C1523	SM661207104	SM.1uFS
C1038	SM661207103	SM.01uFS	C1524	SM661207104	SM.1uFS
C1039	SM661207103	SM.01uFS	C1525	SM661207104	SM.1uFS
C1040	SM661207103	SM.01uFS	C1526	SM661207104	SM.1uFS
C1041	SM661255101	*	C1527	SM661207104	SM.1uFS
C1042	SM661255101	SM100pFS	C1528	SM661207104	SM.1uFS
C1043	SM661207103	SM.01uFS	C1529	SM661207104	SM.1uFS
C1044	SM661207103		C1530	SM661207104	SM.1uFS
C1046	SM661207103		C1531	SM661207104	SM.1uFS
C1047	SM661207103		C1532	SM661207104	SM.1uFS
C1048	SM661207103		C1533	SM661207104	SM.1uFS
C1049	SM661207103		C1537	SM661207104	SM.1uFS
C1050	SM661207103		C1540	SM661207104	SM.1uFS
C1051	SM661207103		C1541	SM661207104	
C1052	SM666327225		C1542	SM661207104	
C1053	SM666327225		C1543	SM661207104	
C1054	SM666327225		C1544	SM661207104	
C1055	SM666327225		C1545	SM661207104	
C1056	SM666327225		C1547	SM661207104	
C1057	SM661255121	SM120pFS	C1548	SM661207102	
C1058	SM661255121	-	C1549	SM661207102	
C1059	SM661255180	•	C1552	SM661207103	
C1060	SM661255180	•	C1553	SM158240202	
C1061	SM661207103		C1554	SM661207103	
C1500	SM661207103		C1555	SM661255033	-
C1501	SM661207103		C1900	SM661207103	
C1502	SM661207103		C1901	SM661207103	
C1503	SM661207103		C1902	SM661207103	
C1504	SM661207103		C1903	SM661207103	
C1505	SM661207103		C2000	SM661207104	
C1506	SM661255152	•	C2001	SM661207103	
C1507	SM661207103		C2002	SM661207103	
C1508	SM661207103		C2003	SM661207104	
C1509	SM661207103		C2004	SM661207104	
C1510	SM661207103		C2005	SM661255056	
C1511	SM661207103		C2006	SM661207103	
C1512	SM661207103		C2007	SM661207103	
C1513	SM661207103	SM.01uFS	C2008	SM661207104	SM.IuFS

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/ $\mathbb T$

Location	Part Number	Description	Location	Part Number	Description
C2009	158849012	5-15pF-S	C2058	SM661255121	SM120pFS
C2007	SM661256120	SM12pFS	C2059	SM661255180	•
C2012	SM661255820	SM82pFS	C2060	SM661255180	
C2014	SM661207103	•	C2061	SM661207103	-
C2015	SM661495561		C2500	SM661207103	
C2016	SM661207104		C2501	SM661207103	
C2017	SM661207103		C2502	SM661207103	
C2018	SM661207103		C2503	SM661207103	
C2019	SM661207103		C2504	SM661207103	
C2020	SM661207223	SM.022uFS	C2505	SM661207103	
C2021	SM661207103	SM.01uFS	C2506	SM661255152	
C2022	SM661207103	SM.01uFS	C2507	SM661207103	•
C2023	SM661207104	SM.1uFS	C2508	SM661207103	SM.01uFS
C2024	SM661207103	SM.01uFS	C2509	SM661207103	SM.01uFS
C2025	SM661207103	SM.01uFS	C2510	SM661207103	SM.01uFS
C2026	SM661207103	SM.01uFS	C2511	SM661207103	SM.01uFS
C2027	SM661255056	SM5.6pFS	C2512	SM661207103	SM.01uFS
C2028	SM661207103	SM.01uFS	C2513	SM661207103	SM.01uFS
C2029	158849009	0.5-2.5pF-S	C2514	SM661207103	SM.01uFS
C2030	SM661255330	SM33pFS	C2515	SM661207103	SM.01uFS
C2031	SM661207103	SM.01uFS	C2518	SM661205472	SM.0047uFS
C2032	SM661207103	SM.01uFS	C2519	SM661207104	SM.1uFS
C2033	SM661207103	SM.01uFS	C2520	158849010	1-5pF-S
C2034	SM661207103	SM.01uFS	C2521	SM661207103	SM.01uFS
C2036	SM661207103	SM.01uFS	C2522	SM661207104	SM.1uFS
C2037	SM661207103	SM.01uFS	C2523	SM661207104	SM.1uFS
C2038	SM661207103		C2524	SM661207104	SM.1uFS
C2039	SM661207103		C2525	SM661207104	SM.1uFS
C2040	SM661207103		C2526	SM661207104	SM.1uFS
C2041	SM661255101	*	C2527	SM661207104	SM.1uFS
C2042	SM661255101	-	C2528	SM661207104	SM.1uFS
C2043	SM661207103		C2529	SM661207104	
C2044	SM661207103		C2530	SM661207104	
C2046	SM661207103		C2531	SM661207104	
C2047	SM661207103		C2532	SM661207104	
C2048	SM661207103		C2533	SM661207104	
C2049	SM661207103		C2537	SM661207104	
C2050	SM661207103		C2540	SM661207104	
C2051	SM661207103		C2541	SM661207104	
C2052	SM666327225		C2542	SM661207104	
C2053	SM666327225		C2543	SM661207104	
C2054	SM666327225		C2544	SM661207104	
C2055	SM666327225		C2545	SM661207104	
C2056	SM666327225		C2547	SM661207104	
C2057	SM661255121	SM120pFS	C2548	SM661207102	SM.001uFS

Location	Part Number	Description	Location	Part Number	Description
C2549	SM661207102	SM.001uFS	C3039	SM661207103	SM.01uFS
C2552	SM661207103		C3040	SM661207103	
C2553	SM158240202	SM2.5-10pF	C3041	SM661255101	SM100pFS
C2554	SM661207103	SM.01uFS	C3042	SM661255101	SM100pFS
C2555	SM661255033	SM3.3pFS	C3043	SM661207103	SM.01uFS
C2900	SM661207103	SM.01uFS	C3044	SM661207103	SM.01uFS
C2901	SM661207103	SM.01uFS	C3046	SM661207103	SM.01uFS
C2902	SM661207103		C3047	SM661207103	SM.01uFS
C2903	SM661207103		C3048	SM661207103	
C3000	SM661207104		C3049	SM661207103	
C3001	SM661207103		C3050	SM661207103	
C3002	SM661207103		C3051	SM661207103	
C3003	SM661207104		C3052	SM666327225	
C3004	SM661207104		C3053	SM666327225	
C3005	SM661255056	*	C3054	SM666327225	
C3006	SM661207103		C3055	SM666327225	
C3007	SM661207103		C3056	SM666327225	
C3008	SM661207104		C3057	SM661255121	•
C3009	158849012	5-15pF-S	C3058	SM661255121	
C3010	SM661256120	-	C3059	SM661255180	
C3012	SM661255820	-	C3060	SM661255180	•
C3014	SM661207103		C3061	SM661207103	
C3015	SM661495561	SM560pFS-500V	C3500	SM661207103	
C3016	SM661207104		C3501	SM661207103	
C3017	SM661207103		C3502	SM661207103	
C3018	SM661207103		C3503	SM661207103	
C3019	SM661207103	SM.01uFS	C3504	SM661207103	
C3020	SM661207223	SM.022uFS	C3505	SM661207103	
C3021	SM661207103		C3506	SM661255152	-
C3022	SM661207103		C3507	SM661207103	
C3023	SM661207104		C3508	SM661207103	
C3024	SM661207103		C3509	SM661207103	
C3025	SM661207103		C3510	SM661207103	
C3026	SM661207103		C3511	SM661207103	
C3027	SM661255056	•	C3512	SM661207103	
C3028	SM661207103		C3513	SM661207103	
C3029	158849009	0.5-2.5pF-S	C3514	SM661207103	
C3030	SM661255330		C3515	SM661207103	
C3031	SM661207103		C3518	SM661205472	
C3032	SM661207103		C3519	SM661207104	
C3033	SM661207103		C3520	158849010	1-5pF-S
C3034	SM661207103		C3521	SM661207103	
C3036	SM661207103		C3522	SM661207104	
C3037	SM661207103		C3523	SM661207104	
C3038	SM661207103	SM.01uFS	C3524	SM661207104	SM.luFS

Location	Part Number	Description	Location	Part Number	Description
C3525	SM661207104	SM.1uFS	C4020	SM661207223	SM.022uFS
C3526	SM661207104		C4021	SM661207103	
C3527	SM661207104		C4022	SM661207103	
C3528	SM661207104		C4023	SM661207104	
C3529	SM661207104		C4024	SM661207103	SM.01uFS
C3530	SM661207104		C4025	SM661207103	SM.01uFS
C3531	SM661207104	SM.1uFS	C4026	SM661207103	SM.01uFS
C3532	SM661207104	SM.1uFS	C4027	SM661255056	SM5.6pFS
C3533	SM661207104	SM.1uFS	C4028	SM661207103	SM.01uFS
C3537	SM661207104	SM.1uFS	C4029	158849009	0.5-2.5pF-S
C3540	SM661207104	SM.1uFS	C4030	SM661255330	SM33pFS
C3541	SM661207104	SM.1uFS	C4031	SM661207103	SM.01uFS
C3542	SM661207104	SM.1uFS	C4032	SM661207103	SM.01uFS
C3543	SM661207104	SM.1uFS	C4033	SM661207103	SM.01uFS
C3544	SM661207104	SM.1uFS	C4034	SM661207103	SM.01uFS
C3545	SM661207104	SM.1uFS	C4036	SM661207103	SM.01uFS
C3547	SM661207104	SM.1uFS	C4037	SM661207103	SM.01uFS
C3548	SM661207102	SM.001uFS	C4038	SM661207103	SM.01uFS
C3549	SM661207102	SM.001uFS	C4039	SM661207103	SM.01uFS
C3552	SM661207103	SM.01uFS	C4040	SM661207103	SM.01uFS
C3553	SM158240202	SM2.5-10pF	C4041	SM661255101	SM100pFS
C3554	SM661207103	SM.01uFS	C4042	SM661255101	SM100pFS
C3555	SM661255033	SM3.3pFS	C4043	SM661207103	SM.01uFS
C3900	SM661207103	SM.01uFS	C4044	SM661207103	SM.01uFS
C3901	SM661207103	SM.01uFS	C4046	SM661207103	SM.01uFS
C3902	SM661207103	SM.01uFS	C4047	SM661207103	SM.01uFS
C3903	SM661207103	SM.01uFS	C4048	SM661207103	SM.01uFS
C4000	SM661207104	SM.1uFS	C4049	SM661207103	SM.01uFS
C4001	SM661207103	SM.01uFS	C4050	SM661207103	SM.01uFS
C4002	SM661207103	SM.01uFS	C4051	SM661207103	SM.01uFS
C4003	SM661207104	SM.1uFS	C4052	SM666327225	SM2.2uF-20V
C4004	SM661207104	SM.1uFS	C4053	SM666327225	SM2.2uF-20V
C4005	SM661255056	-	C4054		SM2.2uF-20V
C4006	SM661207103		C4055	SM666327225	SM2.2uF-20V
C4007	SM661207103		C4056	SM666327225	
C4008	SM661207104		C4057	SM661255121	SM120pFS
C4009	158849012	5-15pF-S	C4058	SM661255121	SM120pFS
C4010	SM661256120	-	C4059	SM661255180	•
C4012	SM661255820	•	C4060	SM661255180	
C4014	SM661207103		C4061	SM661207103	
C4015	SM661495561	*	C4500	SM661207103	SM.01uFS
C4016	SM661207104		C4501	SM661207103	
C4017	SM661207103	SM.01uFS	C4502	SM661207103	
C4018	SM661207103		C4503	SM661207103	
C4019	SM661207103	SM.01uFS	C4504	SM661207103	SM.01uFS

Location	Part Number	Description	Location	Part Number	Description
C4505	SM661207103		C5000	SM661207104	SM.1uFS
C4506	SM661255152	SM1500pFS	C5001	SM661207104	SM.1uFS
C4507	SM661207103	SM.01uFS	C5002	SM661255010	SM1pFS
C4508	SM661207103	SM.01uFS	C5003	SM661207103	SM.01uFS
C4509	SM661207103	SM.01uFS	C5004	SM661207103	SM.01uFS
C4510	SM661207103	SM.01uFS	C5005	SM661255027	SM2.7pFS
C4511	SM661207103	SM.01uFS	C5006	SM661207103	SM.01uFS
C4512	SM661207103	SM.01uFS	C5007	SM661207103	SM.01uFS
C4513	SM661207103	SM.01uFS	C5008	SM661207103	SM.01uFS
C4514	SM661207103	SM.01uFS	C5009	SM661207103	SM.01uFS
C4515	SM661207103	SM.01uFS	C5010	SM661255033	SM3.3pFS
C4518	SM661205472	SM.0047uFS	C5011	SM661207103	SM.01uFS
C4519	SM661207104	SM.1uFS	C5012	SM661495561	SM560pFS-500V
C4520	158849010	1-5pF-S	C5013	SM661207103	
C4521	SM661207103		C5014	SM661207104	SM.1uFS
C4522	SM661207104	SM.1uFS	C5015	SM661207103	SM.01uFS
C4523	SM661207104	SM.1uFS	C5016	SM661207103	SM.01uFS
C4524	SM661207104	SM.1uFS	C5017	SM661207103	SM.01uFS
C4525	SM661207104	SM.1uFS	C5018	SM661255821	SM820pFS
C4526	SM661207104	SM.1uFS	C5019	SM666327225	SM2.2uF-20V
C4527	SM661207104	SM.1uFS	C5020	SM661207104	SM.1uFS
C4528	SM661207104	SM.1uFS	C5021	SM661207103	SM.01uFS
C4529	SM661207104	SM.1uFS	C5022	SM661207103	SM.01uFS
C4530	SM661207104	SM.1uFS	C5023	SM661207103	SM.01uFS
C4531	SM661207104	SM.1uFS	C5024	SM661207103	SM.01uFS
C4532	SM661207104	SM.1uFS	C5025	SM661207103	SM.01uFS
C4533	SM661207104	SM.1uFS	C5026	SM661207103	SM.01uFS
C4537	SM661207104	SM.1uFS	C5027	SM661255100	SM10pFS
C4540	SM661207104	SM.1uFS	C5028	SM661255330	
C4541	SM661207104		C5029	SM661207103	
C4542	SM661207104		C5030	SM661207103	
C4543	SM661207104		C5031	SM661255150	•
C4544	SM661207104		C5032	SM661255270	
C4545	SM661207104		C5033	SM661255270	_
C4547	SM661207104		C5034	SM661207103	
C4548	SM661207102		C5035	SM666427105	
C4549	SM661207102		C5036	SM661207103	
C4552	SM661207103	SM.01uFS	C5037	SM661207103	
C4553	SM158240202	A	C5038	SM666427105	
C4554	SM661207103	SM.01uFS	C5039	SM661207103	
C4555	SM661255033	SM3.3pFS	C5040	SM661207103	
C4900	SM661207103	SM.01uFS	C5041	SM661207103	
C4901	SM661207103		C5042	SM661207103	
C4902	SM661207103		C5043	SM661207103	
C4903	SM661207103	SM.01uFS	C5044	SM661207103	SM.01uFS

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T $\,$

Location	Part Number	Description	Location	Part Number	Description
C5045	SM661207103	SM.01uFS	C5091	SM661207103	SM 01nFS
C5046	SM661207103		C5092	SM666327225	
C5047	SM661207103		C5093	SM661205822	
C5048	SM661207103		C5094	SM661207103	
C5049	SM661205822		C5095		SM2.2uF-20V
C5050	SM661205822		C5096	SM661207103	
C5051	SM661255270	SM27pFS	C5097	SM661207103	SM.01uFS
C5052	SM661207103	_	C5098	SM661207103	SM.01uFS
C5053	SM661207103	SM.01uFS	C5100	SM661207103	SM.01uFS
C5054	SM661255270	SM27pFS	C5101	SM661207103	SM.01uFS
C5055	SM661207103	SM.01uFS	C5103	SM661207104	SM.1uFS
C5056	SM661207103		C5104	SM661207104	
C5057	SM666427105		C5106	SM661207103	
C5058	SM666427105		C5107	SM661255100	•
C5059	SM661207103		C5108	SM661207103	
C5060	SM661207103		C5110	SM666377226	
C5061	SM661207103		C5111	SM666377226	
C5062	SM661207103		C6000	SM666257336	
C5063	SM661207103	SM.01uFS	C6001	SM666257336	
C5064	SM661207103		C6003	SM666327225	
C5065	SM661207103		C6004	SM661207103	
C5066	SM661207103		C6005	SM661207103	
C5067	SM661207103		C6006	SM666327225	
C5068 C5069	SM661205822 SM661207103		C6007	SM661207103	
C5070	SM661205822		C6008 C6009	SM661255102	
C5070	SM661207103		C6009	SM661255056 SM666257336	•
C5071	SM661207103		C6010	SM666257336	
C5072	SM661207103	SM.01uFS	J1	454220096	3x32-ST-F-PF
C5074	SM666327225		J2	454115014	1x14-ST-M-FLPN
C5075	SM666327225		J3	454390002	1x2-ST-M-PL
C5076	SM661255270			454111024	4x42-ST-F-PF
C5077	SM661207103	•	J600	454111024	4x42-ST-F-PF
C5078	SM661255101		J710	SM454120025	SM1x12-13-ST-F
C5079	SM666427105	1	J1000	7093XXP01	21 BNC-93XX
C5081	SM661255150		J2000	7093XXP01	21 BNC-93XX
C5082	SM661255022	•	J3000	7093XXP01	21 BNC-93XX
C5083	SM661207103	-	J4000	7093XXP01	21 BNC-93XX
C5084	SM661207103	SM.01uFS	J5000	7093XXP01	21 BNC-93XX
C5085	SM661207103	SM.01uFS	J6000	7093XXP01	21 BNC-93XX
C5086	SM661207103	SM.01uFS	L200	SM301502001	SMBEAD1206
C5087	SM661207103	SM.01uFS	L201	SM301502001	SMBEAD1206
C5088	SM661207103	SM.01uFS	L202	SM301502001	SMBEAD1206
C5089	SM661207103	SM.01uFS	L203	SM301502001	SMBEAD1206
C5090	SM661207103	SM.01uFS	L204	SM301502001	SMBEAD1206

Location	Part Number	Description	Location	Part Number	Description
L205	SM301502001	SMBEAD1206	L5000		SMBEAD1206
L206		SMBEAD1206	L5001		SMBEAD1206
L207		SMBEAD1206	L5002	SM301502001	SMBEAD1206
L208	SM301502001	SMBEAD1206	L5003	SM301502001	SMBEAD1206
L700	SM300446150	SM.015uH	L6000	SM301502001	SMBEAD1206
L1000	SM300486104	SM100uH	L6001	SM301502001	SMBEAD1206
L1001	SM300486104	SM100uH	Q510	SM275330858	BC858C
L1002	SM301502001	SMBEAD1206	Q511	SM275330858	BC858C
L1003	SM301502001	SMBEAD1206	Q512	SM275330858	BC858C
L1004	SM301502001	SMBEAD1206	Q513	SM275330858	BC858C
L1005	SM301502001	SMBEAD1206	Q514	SM275330858	BC858C
L1006	SM301502001	SMBEAD1206	Q516	SM275330858	BC858C
L1500	SM669080181	SMBEAD0805	Q517	SM275330858	BC858C
L1501	SM669080181	SMBEAD0805	Q518	SM275330858	BC858C
L1502	SM654101000	SM0S	Q610	SM275330858	
L2000	SM300486104	SM100uH	Q611	SM275330858	BC858C
L2001	SM300486104	SM100uH	Q612	SM275330858	
L2002	SM301502001	SMBEAD1206	Q613	SM275330858	BC858C
L2003	SM301502001	SMBEAD1206	Q614	SM275330858	BC858C
L2004	SM301502001	SMBEAD1206	Q616	SM275330858	BC858C
L2005	SM301502001	SMBEAD1206	Q617	SM275330858	
L2006	SM301502001	SMBEAD1206	Q618	SM275330858	
L2500	SM669080181	SMBEAD0805	Q700	SM275030092	
L2501	SM669080181		Q701	SM270030020	
L2502	SM654101000		Q702	SM207130025	
L3000	SM300486104		Q703	SM275330858	
L3001	SM300486104		Q704	SM275330858	
L3002		SMBEAD1206	Q705	SM275030092	
L3003		SMBEAD1206	Q706	SM275030092	
L3004		SMBEAD1206	Q707	SM275030092	
L3005		SMBEAD1206	Q1000	SM280120416	
L3006		SMBEAD1206	Q1001	SM270130092	
L3500		SMBEAD0805	Q1002	SM270130092	
L3501		SMBEAD0805	Q1003	SM275040092	
L3502	SM654101000		Q1004	SM289240062	
L4000	SM300486104		Q1005	SM275030092	
L4001	SM300486104		Q1006	SM275030093	
L4002		SMBEAD1206	Q1008	SM270130092	
L4003		SMBEAD1206	Q1009	SM270130092	
L4004		SMBEAD1206	Q1010	SM270130092	
L4005		SMBEAD1206	Q1011	SM275330858	
L4006		SMBEAD1206	Q1012	SM270130092	
L4500		SMBEAD0805	Q1013	SM270130092	
L4501		SMBEAD0805	Q1014	SM270130092	
L4502	SM654101000	SM0S	Q1015	SM270130092	BFK92A

	Part Number	Description		Part Number	Description
Q1500		BCV62	Q4010	SM270130092	BFR92A
Q1503	SM289240061		Q4011	SM275330858	
Q2000	SM280120416		Q4012	SM270130092	
Q2001	SM270130092		Q4013	SM270130092	BFR92A
Q2002	SM270130092		Q4014	SM270130092	
Q2003	SM275040092		Q4015	SM270130092	
Q2004	SM289240062		Q4500	SM289240062	BCV62
Q2005	SM275030092	BFT92	Q4503	SM289240061	BCV61
Q2006	SM275030093		Q5000	SM270130092	
Q2008	SM270130092		Q5001	SM280120416	
Q2009	SM270130092		Q5002	SM270130093	
Q2010	SM270130092		Q5003	SM270140092	
Q2011	SM275330858		Q5004	SM270130092	
Q2012	SM270130092		Q5005	SM270130092	
Q2013	SM270130092		Q6000	SM270130093	
Q2014	SM270130092		Q6001	SM275030550	BF550
Q2015	SM270130092	BFR92A	Q6002	SM270130092	
Q2500	SM289240062	BCV62	Q6003	SM270130093	
Q2503	SM289240061		Q6004	SM275030550	
Q3000	SM280120416		R1	SM652101103	
Q3001	SM270130092	BFR92A	R2	SM652101103	
Q3002	SM270130092	BFR92A	R3	SM652101103	SM10KS
Q3003	SM275040092		R4	SM652101103	
Q3004	SM289240062	BCV62	R5	SM652101103	SM10KS
Q3005	SM275030092	BFT92	R6	SM652101103	
Q3006	SM275030093		R7	SM652101103	
Q3008	SM270130092		R8	169416473	NTC-DISC-47K
Q3009	SM270130092	BFR92A	R9	SM652101223	SM22KS
Q3010	SM270130092	BFR92A	R10	SM652101103	SM10KS
-	SM275330858	BC858C	R11	SM652101103	SM10KS
Q3012	SM270130092	BFR92A	R12	SM652101512	SM5.1KS
Q3013	SM270130092	BFR92A	R13	SM652101102	SM1KS
Q3014	SM270130092	BFR92A	R14	SM652101332	SM3.3KS
Q3015	SM270130092	BFR92A	R15	SM652101332	SM3.3KS
Q3500	SM289240062	BCV62	R16	SM652101102	SM1KS
Q3503	SM289240061	BCV61	R17	SM652101102	SM1KS
Q4000	SM280120416	MMBF4416	R18	SM652101332	SM3.3KS
Q4001	SM270130092	BFR92A	R19	SM652101332	SM3.3KS
Q4002	SM270130092	BFR92A	R20	SM652101102	SM1KS
Q4003	SM275040092	BFT92R	R21	SM652101102	
Q4004	SM289240062	BCV62	R22	SM652101102	SM1KS
Q4005	SM275030092		R23	SM652101332	
Q4006	SM275030093		R24	SM652101102	
Q4008	SM270130092		R25	SM652101102	
Q4009	SM270130092		R26	SM652101302	
4.307					

R27 SM652101332 SM3.3KS R218 SM652101103 SM10	KS
R28 SM652101102 SM1KS R219 SM652101103 SM10	KS
R29 SM652101103 SM10KS R220 SM652101103 SM10	
R31 SM654101000 SM0S R221 SM652101103 SM10	KS
R32 SM652101102 SM1KS R222 SM652101103 SM10	KS
R33 SM652101102 SM1KS R223 SM652101103 SM10	KS
R34 SM652101103 SM10KS R224 SM652101103 SM10	KS
R35 SM652101102 SM1KS R225 SM652101103 SM10	KS
R36 SM652101102 SM1KS R226 SM652101103 SM10	KS
R37 SM652101220 SM22S R227 SM652101750 SM75	S
R38 SM652101103 SM10KS R228 SM652101750 SM75	S
R39 SM652101220 SM22S R229 SM652101101 SM10	0S
R40 SM652101220 SM22S R230 SM652101301 SM30	0S
R41 SM652101220 SM22S R231 SM652101750 SM75	S
R42 SM652101680 SM68S R232 SM652101750 SM75	S
R43 SM652101680 SM68S R233 SM652101103 SM10	KS
R44 SM652101680 SM68S R234 SM652101103 SM10	KS
R45 SM652101102 SM1KS R235 SM652101301 SM30	0S
R46 SM652101103 SM10KS R236 SM652101101 SM10	0S
R47 SM652101103 SM10KS R245 SM185457101 SM10	0-1T
R48 SM652101103 SM10KS R246 SM185457101 SM10	0-1T
R49 SM652101103 SM10KS R400 SM652101201 SM20	0S
R52 SM652115062 SM6.2-1W R401 SM652101201 SM20	0S
R54 SM652101103 SM10KS R402 SM652101201 SM20	0S
R56 SM652101100 SM10S R403 SM652101201 SM20	0S
R57 SM652101122 SM1.2KS R404 SM652101121 SM12	0S
R58 SM652101220 SM22S R405 SM652101121 SM12	0S
R200 SM652101103 SM10KS R406 SM652101121 SM12	
R201 SM652101122 SM1.2KS R407 SM652101121 SM12	0S
R202 SM652101103 SM10KS R408 SM652101101 SM10	0S
R203 SM652101103 SM10KS R409 SM652101181 SM18	0S
R204 SM652101510 SM51S R410 SM652101101 SM10	
R205 SM652101102 SM1KS R411 SM652101181 SM18	
R206 SM652101332 SM3.3KS R415 SM652101331 SM33	
R207 SM652101824 SM820KS R417 SM652101101 SM10	
R208 SM168659007 SM3.0K-1/oo R418 SM652101750 SM75	
R209 SM168659004 SM900-1/oo R507 SM652101102 SM1K	
R210 SM168659297 SM100-1/oo R511 SM652101102 SM1K	
R211 SM652101153 SM15KS R514 SM652101102 SM1K	
R212 SM652101152 SM1.5KS R515 SM652101102 SM1K	
R213 SM652101332 SM3.3KS R516 SM652101102 SM1K	
R214 SM652101103 SM10KS R517 SM652101201 SM20	
R215 SM652101103 SM10KS R518 SM652101201 SM20	
R216 SM652101103 SM10KS R519 SM652101201 SM20	
R217 SM652101103 SM10KS R520 SM652101201 SM20	0S

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T $\,$

Location	Part Number	Description	Location	Part Number	Description
R521	SM652101121	SM120S	R623	SM652101121	SM120S
R522	SM652101121	SM120S	R624	SM652101121	
R523	SM652101121	SM120S	R625	SM652101201	
R524	SM652101121	SM120S	R626	SM652101201	SM200S
R525	SM652101201	SM200S	R627	SM652101121	
R526	SM652101201	SM200S	R628	SM652101121	
R527	SM652101121		R629	SM652101102	
R528	SM652101121	SM120S	R630	SM652101102	SM1KS
R529	SM652101102	SM1KS	R650	SM652101621	SM620S
R530	SM652101102	SM1KS	R651	SM652101621	SM620S
R550	SM652101621	SM620S	R652	SM652101153	SM15KS
R551	SM652101621	SM620S	R653	SM652101751	SM750S
R552	SM652101153	SM15KS	R654	SM652101223	SM22KS
R553	SM652101751	SM750S	R656	SM652101153	SM15KS
R554	SM652101223	SM22KS	R657	SM652101751	SM750S
R556	SM652101153	SM15KS	R658	SM652101223	SM22KS
R557	SM652101751	SM750S	R662	SM652101121	SM120S
R558	SM652101223	SM22KS	R663	SM652101121	SM120S
R562	SM652101121	SM120S	R664	SM652101201	SM200S
R563	SM652101121	SM120S	R665	SM652101201	SM200S
R564	SM652101201	SM200S	R666	SM652101121	SM120S
R565	SM652101201	SM200S	R667	SM652101121	SM120S
R566	SM652101121	SM120S	R668	SM652101201	SM200S
R567	SM652101121	SM120S	R669	SM652101201	SM200S
R568	SM652101201	SM200S	R670	SM652101103	SM10KS
R569	SM652101201	SM200S	R671	SM652101103	SM10KS
R570	SM652101103	SM10KS	R672	SM652101103	SM10KS
R571	SM652101103	SM10KS	R673	SM652101103	SM10KS
R572	SM652101103	SM10KS	R674	SM652101103	SM10KS
R573	SM652101103	SM10KS	R675	SM652101103	SM10KS
R574	SM652101103	SM10KS	R678	SM652101103	SM10KS
R575	SM652101103	SM10KS	R679	SM652101103	SM10KS
R578	SM652101103	SM10KS	R701	SM652101131	SM130S
R579	SM652101103	SM10KS	R702	SM652101181	SM180S
R607	SM652101102	SM1KS	R703	SM652101181	SM180S
R611	SM652101102	SM1KS	R704	SM652101391	SM390S
R614	SM652101102	SM1KS	R705	SM652101131	SM130S
R615	SM652101102	SM1KS	R706	SM652101181	SM180S
R616	SM652101102	SM1KS	R707	SM652101181	SM180S
R617	SM652101121	SM120S	R708	SM652101131	SM130S
R618	SM652101121	SM120S	R709	SM652101102	SM1KS
R619	SM652101201	SM200S	R710	SM652101220	SM22S
R620	SM652101201	SM200S	R711	SM652101131	
R621	SM652101201	SM200S	R712	SM652101131	
R622	SM652101201		R713	SM652101102	

R714 SM652101181 SM180S R750 SM652101750 SM75S R715 SM652101131 SM180S R760 SM652101101 SM910S R716 SM652101131 SM130S R761 SM652101120 SM200S R717 SM652101820 SM82S R763 SM652101201 SM200S R719 SM652101181 SM180S R764 SM652101391 SM390S R720 SM652101181 SM180S R766 SM652101391 SM390S R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM130S R766 SM652101471 SM470S R722 SM652101131 SM130S R767 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R724 SM652101131 SM130S R770 SM652101181 SM180S R725 SM652101131 SM130S R771 SM652101181 SM180S <	Location	Part Number	Description	Location	Part Number	Description
R715 SM652101181 SM180S R760 SM652101911 SM910S R716 SM652101131 SM130S R761 SM652101120 SM1KS R717 SM652101820 SM2SS R763 SM652101201 SM200S R718 SM652101181 SM180S R762 SM652101151 SM200S R719 SM652101181 SM180S R764 SM652101391 SM390S R720 SM652101181 SM180S R766 SM652101471 SM470S R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM130S R768 SM652101181 SM180S R722 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R771 SM652101181 SM180S R727 SM652101181 SM180S R771 SM652101181 SM180S <	R714	SM652101181	SM180S	R759	SM652101750	SM75S
R716 SM652101131 SM130S R761 SM652101102 SM1KS R717 SM6521011320 SM390S R762 SM652101201 SM200S R718 SM652101181 SM180S R763 SM652101510 SM200S R719 SM652101181 SM180S R764 SM65210131 SM180S R720 SM652101181 SM180S R766 SM652101471 SM390S R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM130S R766 SM652101181 SM180S R723 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101181 SM190S R771 SM652101181 SM180S R727 SM652101471 SM470S R772 SM652101181 SM180S						
R717 SM652101391 SM390S R762 SM652101201 SM200S R718 SM652101181 SM180S R763 SM652101201 SM200S R719 SM652101181 SM180S R764 SM652101191 SM390S R720 SM652101181 SM180S R765 SM652101471 SM470S R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R724 SM652101131 SM130S R770 SM652101181 SM180S R725 SM652101471 SM470S R771 SM652101181 SM180S R726 SM652101471 SM470S R771 SM652101181 SM180S R727 SM652101471 SM470S R771 SM652101181 SM180S R728 SM652101481 SM180S R775 SM652101181 SM180S						
R718 SM652101820 SM82S R763 SM652101201 SM200S R719 SM652101181 SM180S R764 SM652101391 SM51S R720 SM652101181 SM180S R765 SM652101391 SM390S R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM130S R768 SM652101181 SM180S R722 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101471 SM470S R772 SM652101181 SM180S R727 SM652101411 SM180S R771 SM652101181 SM180S R727 SM652101181 SM180S R771 SM652101181 SM180S R730 SM652101181 SM180S R775 SM652101181 SM180S <						
R719 SM652101181 SM180S R764 SM652101510 SM51S R720 SM652101181 SM180S R765 SM652101191 SM490S R721 SM652101181 SM180S R766 SM652101140 SM470S R722 SM652101131 SM180S R767 SM652101181 SM180S R723 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R771 SM652101181 SM180S R726 SM652101131 SM130S R771 SM652101181 SM180S R727 SM652101181 SM180S R773 SM652101181 SM180S R728 SM652101181 SM180S R773 SM652101181 SM180S R730 SM652101181 SM180S R775 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S						
R720 SM652101181 SM180S R765 SM652101191 SM390S R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101131 SM130S R771 SM652101181 SM180S R726 SM652101131 SM130S R771 SM652101181 SM180S R726 SM652101471 SM470S R772 SM652101181 SM180S R727 SM652101181 SM180S R773 SM652101181 SM180S R729 SM652101181 SM180S R775 SM652101181 SM180S R731 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R776 SM652101181 SM180S						
R721 SM652101181 SM180S R766 SM652101471 SM470S R722 SM652101131 SM180S R767 SM652101180 SM688 R723 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101131 SM130S R771 SM652101181 SM180S R727 SM652101181 SM180S R773 SM652101181 SM180S R728 SM652101181 SM180S R773 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R732 SM652101181 SM180S R777 SM652101181 SM180S						
R722 SM652101181 SM180S R767 SM652101181 SM180S R723 SM652101131 SM130S R768 SM652101181 SM180S R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101471 SM470S R771 SM652101181 SM180S R727 SM652101391 SM470S R772 SM652101181 SM180S R728 SM652101181 SM180S R773 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R733 SM652101181 SM180S R778 SM652101181 SM180S					SM652101471	
R724 SM652101131 SM130S R769 SM652101181 SM180S R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101471 SM470S R771 SM652101181 SM180S R727 SM652101471 SM470S R772 SM652101181 SM180S R728 SM652101391 SM390S R773 SM652101181 SM180S R729 SM652101181 SM180S R775 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R733 SM652101181 SM180S R777 SM652101181 SM180S R734 SM652101181 SM180S R778 SM652101181 SM180S R735 SM65210121 SM270S R783 SM652101181 SM180S	R722	SM652101181	SM180S		SM652101680	SM68S
R725 SM652101131 SM130S R770 SM652101181 SM180S R726 SM652101131 SM130S R771 SM652101181 SM180S R727 SM652101471 SM470S R772 SM652101181 SM180S R728 SM652101181 SM190S R773 SM6521011512 SM5.1KS R729 SM652101181 SM180S R775 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101181 SM180S R732 SM652101181 SM180S R778 SM652101181 SM180S R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101271 SM270S R783 SM652101181 SM180S R737 SM652101271 SM270S R784 SM652101181 SM180S	R723	SM652101131	SM130S	R768	SM652101181	SM180S
R726 SM652101131 SM130S R771 SM652101181 SM180S R727 SM652101471 SM470S R772 SM652101181 SM180S R728 SM652101181 SM180S R773 SM652101151 SM5.1KS R729 SM652101181 SM180S R775 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101471 SM470S R732 SM652101181 SM180S R778 SM65210141 SM180S R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101271 SM270S R783 SM652101181 SM180S R736 SM652101271 SM270S R784 SM652101101 SM180S R737 SM652101181 SM180S R788 SM652101122 SM22S	R724	SM652101131	SM130S	R769	SM652101181	SM180S
R727 SM652101471 SM470S R772 SM652101181 SM180S R728 SM652101391 SM390S R773 SM652101151 SM180S R729 SM652101181 SM180S R775 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101471 SM470S R732 SM652101181 SM180S R777 SM65210181 SM180S R733 SM652101181 SM180S R778 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101271 SM270S R783 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101102 SM120S R737 SM652101181 SM180S R784 SM652101122 SM22S R738 SM652101181 SM180S R785 SM652101122 SM22S <t< td=""><td>R725</td><td>SM652101131</td><td>SM130S</td><td>R770</td><td>SM652101181</td><td>SM180S</td></t<>	R725	SM652101131	SM130S	R770	SM652101181	SM180S
R728 SM652101391 SM390S R773 SM652101512 SM5.1KS R729 SM652101181 SM180S R775 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101471 SM470S R732 SM652101181 SM180S R778 SM652101181 SM180S R733 SM652101181 SM180S R778 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101680 SM68S R782 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101181 SM180S R737 SM652101271 SM270S R784 SM652101101 SM180S R737 SM652101181 SM180S R784 SM652101120 SM22S R738 SM652101181 SM180S R785 SM652101181 SM180S	R726	SM652101131	SM130S	R771	SM652101181	SM180S
R729 SM652101181 SM180S R776 SM652101181 SM180S R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101471 SM470S R732 SM652101181 SM180S R778 SM652101181 SM180S R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101680 SM68S R782 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101181 SM180S R737 SM652101271 SM270S R784 SM65210120 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R7878 SM652101181 SM180S <t< td=""><td>R727</td><td>SM652101471</td><td>SM470S</td><td>R772</td><td>SM652101181</td><td>SM180S</td></t<>	R727	SM652101471	SM470S	R772	SM652101181	SM180S
R730 SM652101181 SM180S R776 SM652101181 SM180S R731 SM652101181 SM180S R777 SM652101471 SM470S R732 SM652101181 SM180S R778 SM652101181 SM180S R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM65210181 SM180S R781 SM652101181 SM180S R735 SM652101271 SM270S R783 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101101 SM100S R737 SM652101171 SM270S R784 SM652101102 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R738 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101181 SM180S <t< td=""><td>R728</td><td>SM652101391</td><td>SM390S</td><td>R773</td><td>SM652101512</td><td>SM5.1KS</td></t<>	R728	SM652101391	SM390S	R773	SM652101512	SM5.1KS
R731 SM652101181 SM180S R777 SM652101471 SM470S R732 SM652101181 SM180S R778 SM652101181 SM180S R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101271 SM270S R783 SM652101101 SM180S R736 SM652101271 SM270S R784 SM652101101 SM180S R737 SM652101181 SM180S R784 SM652101102 SM122S R738 SM652101181 SM180S R785 SM652101120 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101181 SM180S R742 SM652101181 SM180S R788 SM652101181 SM180S	R729	SM652101181	SM180S	R775	SM652101181	SM180S
R732 SM652101181 SM180S R778 SM652101181 SM180S R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101271 SM270S R782 SM652101101 SM180S R736 SM652101271 SM270S R783 SM652101101 SM100S R737 SM652101181 SM180S R784 SM652101220 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101102 SM1KS R788 SM652101181 SM180S R742 SM652101102 SM1KS R789 SM652101181 SM180S R744 SM652101102 SM1KS R790 SM652101181 SM180S	R730	SM652101181	SM180S	R776	SM652101181	SM180S
R733 SM652101181 SM180S R779 SM652101181 SM180S R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101680 SM68S R782 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101101 SM100S R737 SM652101271 SM270S R784 SM652101220 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101181 SM180S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R	R731	SM652101181	SM180S	R777	SM652101471	SM470S
R734 SM652101181 SM180S R781 SM652101181 SM180S R735 SM652101680 SM68S R782 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101101 SM100S R737 SM652101271 SM270S R784 SM652101220 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R789 SM652101181 SM180S R744 SM652101102 SM1KS R790 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R7	R732	SM652101181	SM180S	R778	SM652101181	SM180S
R735 SM652101680 SM68S R782 SM652101181 SM180S R736 SM652101271 SM270S R783 SM652101101 SM100S R737 SM652101271 SM270S R784 SM652101220 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R7	R733	SM652101181	SM180S	R779	SM652101181	SM180S
R736 SM652101271 SM270S R783 SM652101101 SM100S R737 SM652101271 SM270S R784 SM652101220 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R	R734	SM652101181	SM180S	R781	SM652101181	SM180S
R737 SM652101271 SM270S R784 SM652101220 SM22S R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM180S R741 SM652101102 SM1KS R789 SM652101101 SM100S R742 SM65210102 SM1KS R790 SM652101181 SM180S R743 SM65210102 SM1KS R790 SM652101181 SM180S R744 SM652101120 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R74	R735	SM652101680	SM68S	R782	SM652101181	SM180S
R738 SM652101181 SM180S R785 SM652101220 SM22S R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101181 SM180S R749 SM652101181 SM180S R797 SM652101181 SM180S	R736	SM652101271	SM270S	R783	SM652101101	SM100S
R739 SM652101181 SM180S R786 SM652101181 SM180S R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101181 SM180S R795 SM652101181 SM180S R748 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R800 SM652101181 SM180S <td< td=""><td>R737</td><td>SM652101271</td><td>SM270S</td><td>R784</td><td>SM652101220</td><td>SM22S</td></td<>	R737	SM652101271	SM270S	R784	SM652101220	SM22S
R740 SM652101181 SM180S R787 SM652101181 SM180S R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101181 SM180S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R800 SM652101181 SM180S R751 SM652101181 SM180S R801 SM652101181 SM180S	R738	SM652101181	SM180S	R785	SM652101220	SM22S
R741 SM652101181 SM180S R788 SM652101101 SM100S R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101181 SM120S R802 SM652101181 SM180S	R739	SM652101181	SM180S	R786	SM652101181	SM180S
R742 SM652101102 SM1KS R789 SM652101220 SM22S R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM120S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S	R740	SM652101181	SM180S	R787	SM652101181	SM180S
R743 SM652101102 SM1KS R790 SM652101181 SM180S R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101181 SM120S R803 SM652101181 SM180S <t< td=""><td>R741</td><td>SM652101181</td><td>SM180S</td><td></td><td></td><td></td></t<>	R741	SM652101181	SM180S			
R744 SM652101102 SM1KS R791 SM652101181 SM180S R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101181 SM180S R755 SM652101181 SM180S R804 SM652101181 SM180S <	R742			R789		
R745 SM652101471 SM470S R792 SM652101181 SM180S R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101181 SM180S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S						
R746 SM652101471 SM470S R793 SM652101181 SM180S R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R747 SM652101471 SM470S R794 SM652101181 SM180S R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R748 SM652101471 SM470S R795 SM652101220 SM22S R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R749 SM652101181 SM180S R797 SM652101181 SM180S R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R750 SM652101181 SM180S R799 SM652101181 SM180S R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R751 SM652101181 SM180S R800 SM652101181 SM180S R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R752 SM652101181 SM180S R801 SM652101181 SM180S R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R753 SM652101121 SM120S R802 SM652101181 SM180S R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R754 SM652101121 SM120S R803 SM652101131 SM130S R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R755 SM652101181 SM180S R804 SM652101181 SM180S R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S						
R756 SM652101181 SM180S R805 SM652101181 SM180S R757 SM652101181 SM180S R806 SM652101181 SM180S	R754					
R757 SM652101181 SM180S R806 SM652101181 SM180S						
R758 SM652101181 SM180S R807 SM652101181 SM180S						
	R758	SM652101181	SM180S	R807	SM652101181	SM180S

R808 SM652101131 SM130S R870 SM652101112 SM1.IKS R809 SM652101181 SM180S R871 SM652101510 SM51S R812 SM652101471 SM470S R872 SM652101183 SM10S R813 SM652101181 SM180S R873 SM652101181 SM180S R814 SM652101181 SM180S R874 SM652101181 SM180S R820 SM652101181 SM180S R877 SM652101471 SM470S R821 SM652101181 SM180S R878 SM652101471 SM470S R821 SM652101181 SM180S R879 SM651104240 SM200K-25PPM R822 SM652101181 SM180S R881 SM652101151 SM150S R824 SM652101181 SM180S R881 SM652101101 SM100S R824 SM652101181 SM180S R881 SM652101181 SM180S R827 SM652101181 SM180S R885 SM652101181 SM180S	Location	Part Number	Description	Location	Part Number	Description
R809 SM652101181 SM180S R871 SM652101103 SM1SS R812 SM652101471 SM470S R872 SM652101103 SM10KS R814 SM652101181 SM180S R873 SM652101171 SM180S R820 SM652101181 SM180S R877 SM652101471 SM470S R821 SM652101202 SM2KS R878 SM652101471 SM470S R821 SM652101131 SM130S R880 SM652101471 SM470S R822 SM652101181 SM130S R880 SM652101751 SM750S R824 SM652101181 SM180S R881 SM652101152 SM1.5KS R826 SM652101181 SM180S R881 SM652101101 SM100S R827 SM652101181 SM180S R883 SM652101101 SM100S R829 SM652101181 SM180S R885 SM652101101 SM100S R830 SM652101181 SM180S R887 SM652101110 SM100S	R808	SM652101131	SM130S	R870	SM652101112	SM1.1KS
R813 SM652101181 SM180S R874 SM652101181 SM180S R814 SM652101181 SM180S R874 SM652101181 SM180S R820 SM652101202 SM2KS R878 SM652101471 SM470S R821 SM652101820 SM2S R879 SM651104204 SM206K-25PPM R823 SM652101131 SM130S R880 SM652101751 SM750S R824 SM652101181 SM180S R881 SM652101101 SM100S R824 SM652101181 SM180S R881 SM652101101 SM100S R827 SM652101181 SM180S R882 SM652101101 SM100S R827 SM652101181 SM180S R885 SM652101110 SM100S R829 SM652101181 SM180S R886 SM652101101 SM100S R830 SM652101181 SM180S R887 SM652101471 SM470S R833 SM652101181 SM180S R888 SM652101471 SM470S		SM652101181	SM180S	R871	SM652101510	SM51S
R814 \$M652101181 \$M180S R874 \$M652101181 \$M470S R820 \$M652101202 \$M180S R877 \$M652101471 \$M470S R821 \$M652101202 \$M2KS R878 \$M652101471 \$M470S R822 \$M652101320 \$M82S R879 \$M651104204 \$M200K-25PPM R823 \$M652101131 \$M130S R880 \$M652101751 \$M750S R824 \$M652101391 \$M190S R882 \$M652101101 \$M100S R826 \$M652101131 \$M180S R883 \$M652101101 \$M100S R827 \$M652101181 \$M180S R883 \$M652101101 \$M100S R827 \$M652101181 \$M180S R886 \$M652101111 \$M100S R830 \$M652101181 \$M180S R885 \$M65210111 \$M100S R831 \$M652101181 \$M180S R887 \$M65210147 \$M470S R832 \$M652101181 \$M180S R888 \$M65210147 \$M470S	R812	SM652101471	SM470S	R872	SM652101103	SM10KS
R820 SM652101181 SM180S R877 SM652101471 SM470S R821 SM652101202 SM2KS R878 SM652101471 SM470S R822 SM652101131 SM130S R880 SM652101751 SM750S R824 SM652101181 SM130S R880 SM652101152 SM1.5KS R826 SM652101510 SM51S R881 SM652101101 SM100S R827 SM652101181 SM180S R881 SM652101101 SM100S R829 SM652101181 SM180S R885 SM652101101 SM100S R830 SM652101181 SM180S R886 SM652101110 SM100S R831 SM652101181 SM180S R886 SM652101101 SM100S R829 SM652101181 SM180S R886 SM652101111 SM100S R833 SM652101181 SM180S R886 SM652101471 SM470S R833 SM652101181 SM180S R889 SM652101471 SM470S	R813	SM652101181	SM180S	R873	SM652101510	SM51S
R820 SM652101181 SM180S R877 SM652101471 SM470S R821 SM652101202 SM2KS R878 SM652101471 SM470S R822 SM652101311 SM130S R880 SM652101751 SM750S R823 SM652101311 SM130S R880 SM652101751 SM750S R824 SM652101319 SM390S R881 SM652101101 SM10S R826 SM652101510 SM51S R883 SM652101101 SM100S R827 SM652101181 SM180S R885 SM652101101 SM100S R829 SM652101181 SM180S R886 SM652101101 SM100S R830 SM652101181 SM180S R886 SM652101471 SM470S R833 SM652101181 SM180S R886 SM652101471 SM470S R834 SM652101181 SM180S R888 SM652101471 SM470S R833 SM652101181 SM180S R889 SM652101471 SM470S <t< td=""><td>R814</td><td>SM652101181</td><td>SM180S</td><td>R874</td><td>SM652101181</td><td>SM180S</td></t<>	R814	SM652101181	SM180S	R874	SM652101181	SM180S
R822 SM652101820 SM82S R879 SM651104204 SM200K-25PPM R823 SM652101131 SM130S R880 SM652101751 SM750S R824 SM652101391 SM390S R882 SM652101101 SM100S R827 SM652101181 SM180S R883 SM652101101 SM100S R829 SM652101181 SM180S R885 SM652101101 SM100S R830 SM652101181 SM180S R886 SM652101101 SM100S R831 SM652101181 SM180S R886 SM652101471 SM470S R833 SM65210181 SM180S R888 SM652101471 SM470S R834 SM652101821 SM80S R888 SM652101471 SM470S R835 SM652101181 SM180S R889 SM65210112 SM1KS R836 SM652101181 SM180S R899 SM65210113 SM1SS R837 SM652101181 SM180S R891 SM65210115 SM1KS <t< td=""><td></td><td>SM652101181</td><td>SM180S</td><td>R877</td><td>SM652101471</td><td>SM470S</td></t<>		SM652101181	SM180S	R877	SM652101471	SM470S
R823 SM652101131 SM130S R880 SM652101751 SM750S R824 SM652101181 SM180S R881 SM652101152 SM1.5KS R826 SM652101510 SM51S R883 SM65210110 SM100S R827 SM652101181 SM180S R885 SM65210110 SM100S R830 SM652101181 SM180S R886 SM652101101 SM100S R832 SM652101181 SM180S R886 SM652101471 SM470S R833 SM652101181 SM180S R887 SM652101471 SM470S R833 SM65210181 SM180S R888 SM652101471 SM470S R834 SM652101821 SM820S R889 SM652101471 SM470S R834 SM65210181 SM180S R889 SM652101147 SM470S R835 SM652101181 SM180S R899 SM652101120 SM1.5KS R836 SM652101181 SM180S R892 SM652101151 SM130S <t< td=""><td>R821</td><td>SM652101202</td><td>SM2KS</td><td>R878</td><td>SM652101471</td><td>SM470S</td></t<>	R821	SM652101202	SM2KS	R878	SM652101471	SM470S
R824 SM652101181 SM180S R881 SM652101152 SM1.5KS R826 SM652101391 SM390S R882 SM652101101 SM100S R827 SM652101181 SM180S R883 SM6521011181 SM180S R830 SM652101181 SM180S R886 SM65210110 SM100S R831 SM652101181 SM180S R886 SM65210110 SM100S R833 SM652101181 SM180S R886 SM652101471 SM470S R833 SM652101821 SM820S R889 SM652101471 SM470S R834 SM652101821 SM820S R889 SM652101471 SM470S R835 SM65210181 SM180S R890 SM652101102 SM1KS R836 SM65210181 SM180S R891 SM652101132 SM15S R837 SM652101181 SM180S R891 SM652101131 SM130S R840 SM652101510 SM51S R893 SM652101131 SM100S	R822	SM652101820	SM82S	R879	SM651104204	SM200K-25PPM
R826 SM652101391 SM390S R882 SM652101101 SM100S R827 SM652101110 SM51S R883 SM652101118 SM100S R829 SM652101181 SM180S R885 SM6521011181 SM180S R830 SM652101181 SM180S R886 SM652101471 SM470S R831 SM65210181 SM180S R887 SM652101471 SM470S R834 SM652101821 SM820S R889 SM652101471 SM470S R834 SM652101751 SM750S R890 SM652101471 SM470S R835 SM65210181 SM180S R891 SM652101115 SM15KS R836 SM652101181 SM180S R891 SM65210115 SM15KS R837 SM652101181 SM180S R891 SM65210113 SM130S R838 SM652101181 SM180S R892 SM65210113 SM130S R840 SM652101101 SM51S R894 SM65210175 SM750S R8	R823	SM652101131	SM130S	R880	SM652101751	SM750S
R827 SM652101510 SM51S R883 SM652101101 SM100S R829 SM652101181 SM180S R885 SM652101181 SM180S R830 SM652101181 SM180S R886 SM6521011471 SM100S R832 SM652101181 SM180S R887 SM652101471 SM470S R833 SM652101821 SM820S R888 SM652101471 SM470S R834 SM652101821 SM820S R889 SM652101471 SM470S R835 SM65210181 SM180S R890 SM652101102 SM1KS R836 SM65210181 SM180S R891 SM652101152 SM15KS R837 SM652101181 SM180S R892 SM652101132 SM13S R843 SM652101181 SM180S R893 SM652101131 SM130S R844 SM652101181 SM180S R895 SM652101101 SM100S R844 SM652101181 SM180S R898 SM651104241 SM240-25PPM	R824	SM652101181	SM180S	R881	SM652101152	SM1.5KS
R829 SM652101181 SM180S R886 SM652101181 SM180S R830 SM652101181 SM180S R886 SM6521011471 SM100S R832 SM652101181 SM180S R887 SM652101471 SM470S R833 SM652101821 SM820S R888 SM652101471 SM470S R834 SM652101751 SM750S R890 SM652101102 SM1KS R836 SM652101181 SM180S R891 SM652101152 SM1KS R837 SM652101181 SM180S R891 SM652101132 SM15KS R837 SM652101181 SM180S R892 SM652101131 SM130S R838 SM652101181 SM180S R893 SM652101151 SM10S R840 SM652101510 SM51S R893 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101102 SM1KS R842 SM652101518 SM180S R898 SM651104241 SM240-25PPM	R826	SM652101391	SM390S	R882	SM652101101	SM100S
R830 SM652101181 SM180S R886 SM652101101 SM100S R832 SM652101181 SM180S R887 SM652101471 SM470S R833 SM652101181 SM180S R888 SM652101471 SM470S R834 SM652101751 SM750S R890 SM65210117 SM470S R835 SM652101181 SM180S R891 SM652101152 SM1.5KS R836 SM652101181 SM180S R891 SM652101152 SM1.5KS R837 SM652101181 SM180S R892 SM652101131 SM130S R840 SM652101510 SM51S R894 SM652101131 SM100S R841 SM652101510 SM51S R894 SM652101102 SM1KS R842 SM652101510 SM51S R895 SM652101102 SM1KS R843 SM65210181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM6521010102 SM1KS	R827	SM652101510	SM51S	R883	SM652101101	SM100S
R832 SM652101181 SM180S R888 SM652101471 SM470S R833 SM652101821 SM820S R889 SM652101471 SM470S R834 SM652101751 SM750S R890 SM652101102 SM1KS R835 SM652101181 SM180S R890 SM652101152 SM1KS R836 SM652101181 SM180S R891 SM652101131 SM130S R837 SM652101181 SM180S R892 SM652101131 SM130S R840 SM652101510 SM51S R893 SM652101101 SM100S R841 SM652101510 SM51S R895 SM65210120 SM1KS R842 SM652101181 SM180S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104241 SM240-25PPM R845 SM652101181 SM180S R899 SM652101101 SM100S	R829	SM652101181	SM180S	R885	SM652101181	SM180S
R833 SM652101181 SM180S R888 SM652101471 SM470S R834 SM652101821 SM820S R889 SM652101471 SM470S R835 SM652101751 SM750S R890 SM652101102 SM1KS R836 SM652101181 SM180S R891 SM652101152 SM1.5KS R837 SM652101181 SM180S R892 SM652101151 SM130S R838 SM652101181 SM180S R893 SM652101751 SM750S R840 SM652101101 SM180S R893 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101102 SM1KS R842 SM652101181 SM180S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM	R830	SM652101181	SM180S	R886	SM652101101	SM100S
R834 SM652101821 SM820S R889 SM652101471 SM470S R835 SM652101751 SM750S R890 SM652101102 SM1KS R836 SM652101181 SM180S R891 SM652101152 SM1.5KS R837 SM652101181 SM180S R892 SM652101131 SM130S R840 SM652101510 SM51S R893 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101100 SM100S R842 SM652101510 SM51S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104241 SM240-25PPM R844 SM652101181 SM180S R898 SM651104392 SM3-9K-25PPM R844 SM652101181 SM180S R899 SM652101101 SM100S R847 SM652101181 SM180S R890 SM652101101 SM100S	R832	SM652101181	SM180S	R887	SM652101471	SM470S
R835 SM652101751 SM750S R890 SM652101102 SM1KS R836 SM652101181 SM180S R891 SM652101152 SM1.5KS R837 SM652101181 SM180S R892 SM652101131 SM130S R838 SM652101181 SM180S R893 SM652101751 SM750S R840 SM652101510 SM51S R894 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101240 SM24S R842 SM652101510 SM51S R895 SM652101102 SM1KS R843 SM652101510 SM51S R897 SM652101102 SM1KS R844 SM652101181 SM180S R898 SM651104241 SM240-25PPM R845 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R847 SM652101102 SM1KS R900 SM652101101 SM100S R848 SM652101181 SM180S R902 SM652101751 SM750S	R833	SM652101181	SM180S	R888	SM652101471	SM470S
R836 SM652101181 SM180S R891 SM652101152 SM1.5KS R837 SM652101181 SM180S R892 SM652101131 SM130S R838 SM652101181 SM180S R893 SM652101751 SM750S R840 SM652101510 SM51S R894 SM652101101 SM100S R841 SM652101510 SM51S R895 SM65210140 SM24S R842 SM652101510 SM51S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104241 SM240-25PPM R845 SM652101181 SM180S R899 SM65110103 SM750S R847 SM652101102 SM1KS R900 SM652101751 SM750S R848 SM652101181 SM180S R903 SM652101751 SM1KS	R834	SM652101821	SM820S	R889	SM652101471	SM470S
R837 SM652101181 SM180S R892 SM652101131 SM130S R838 SM652101181 SM180S R893 SM652101751 SM750S R840 SM652101510 SM51S R894 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101240 SM24S R842 SM652101181 SM180S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104429 SM240-25PPM R844 SM652101181 SM180S R899 SM65110429 SM3.9K-25PPM R845 SM652101102 SM1KS R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101101 SM100S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101471 SM470S R904 SM652101102 SM1KS	R835	SM652101751	SM750S	R890	SM652101102	SM1KS
R838 SM652101181 SM180S R893 SM652101751 SM750S R840 SM652101510 SM51S R894 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101240 SM24S R842 SM652101510 SM51S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R901 SM652101751 SM750S R849 SM652101102 SM1KS R902 SM652101102 SM1KS R849 SM652101102 SM1KS R903 SM652101102 SM1KS R851 SM652101181 SM180S R903 SM652101102 SM1KS	R836	SM652101181	SM180S	R891	SM652101152	SM1.5KS
R840 SM652101510 SM51S R894 SM652101101 SM100S R841 SM652101510 SM51S R895 SM652101240 SM24S R842 SM652101510 SM51S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R890 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R848 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101181 SM180S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM	R837	SM652101181	SM180S	R892	SM652101131	SM130S
R841 SM652101510 SM51S R895 SM652101240 SM24S R842 SM652101510 SM51S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101102 SM1KS R902 SM652101102 SM1KS R850 SM652101181 SM180S R903 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM <t< td=""><td>R838</td><td>SM652101181</td><td>SM180S</td><td>R893</td><td>SM652101751</td><td>SM750S</td></t<>	R838	SM652101181	SM180S	R893	SM652101751	SM750S
R842 SM652101510 SM51S R897 SM652101102 SM1KS R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101102 SM1KS R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101112 SM1KS R902 SM652101102 SM1KS R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104183 SM18K-25PPM R855 SM652101510 SM51S R907 SM651104182 SM1.8K-25PPM	R840	SM652101510	SM51S	R894	SM652101101	SM100S
R843 SM652101181 SM180S R898 SM651104241 SM240-25PPM R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101510 SM51S R910 SM652101181 SM180S <	R84 1	SM652101510	SM51S	R895	SM652101240	SM24S
R844 SM652101181 SM180S R899 SM651104392 SM3.9K-25PPM R845 SM652101181 SM180S R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104183 SM18K-25PPM R855 SM652101471 SM470S R907 SM651104182 SM1.8K-25PPM R855 SM652101510 SM51S R908 SM185457201 SM200-25PPM R857 SM652101510 SM51S R909 SM652101181 SM180S R861 SM652101510 SM51S R910 SM652101181 SM180S <td>R842</td> <td>SM652101510</td> <td>SM51S</td> <td>R897</td> <td>SM652101102</td> <td>SM1KS</td>	R842	SM652101510	SM51S	R897	SM652101102	SM1KS
R845 SM652101181 SM180S R900 SM652101101 SM100S R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM65210102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101510 SM51S R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S	R843	SM652101181	SM180S	R898	SM651104241	SM240-25PPM
R847 SM652101102 SM1KS R901 SM652101751 SM750S R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R857 SM652101471 SM470S R907 SM651104182 SM1.8K-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-25PPM R858 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S <td>R844</td> <td>SM652101181</td> <td>SM180S</td> <td>R899</td> <td>SM651104392</td> <td>SM3.9K-25PPM</td>	R844	SM652101181	SM180S	R899	SM651104392	SM3.9K-25PPM
R848 SM652101102 SM1KS R902 SM652101751 SM750S R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101510 SM51S R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101510 SM51S	R845	SM652101181	SM180S	R900	SM652101101	SM100S
R849 SM652101181 SM180S R903 SM652101102 SM1KS R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-25PPM R858 SM652101510 SM51S R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101510 SM51S R864 SM652101512 SM5.1KS R915 SM652101221 SM270S <				R901	SM652101751	SM750S
R850 SM652101471 SM470S R904 SM652101102 SM1KS R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101103 SM10KS R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101512 SM5.1KS R914 SM652101271 SM270S R865 SM652101562 SM5.6KS R916 SM652101221 SM220S <	R848	SM652101102	SM1KS			
R851 SM652101102 SM1KS R905 SM651104183 SM18K-25PPM R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101103 SM10KS R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101221 SM270S R866 SM652101562 SM5.6KS R916 SM652101301 SM300S <td>R849</td> <td>SM652101181</td> <td>SM180S</td> <td>R903</td> <td></td> <td></td>	R849	SM652101181	SM180S	R903		
R852 SM652101102 SM1KS R906 SM651104182 SM1.8K-25PPM R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101103 SM10KS R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101181 SM180S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101221 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S		SM652101471	SM470S	R904	SM652101102	SM1KS
R855 SM652101471 SM470S R907 SM651104201 SM200-25PPM R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101103 SM10KS R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S	R851	SM652101102	SM1KS	R905	SM651104183	SM18K-25PPM
R857 SM652101510 SM51S R908 SM185457201 SM200-1T R858 SM652101103 SM10KS R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S				R906		
R858 SM652101103 SM10KS R909 SM652101181 SM180S R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S	R855	SM652101471	SM470S	R907	SM651104201	SM200-25PPM
R859 SM652101510 SM51S R910 SM652101181 SM180S R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S	R857	SM652101510	SM51S	R908	SM185457201	SM200-1T
R861 SM652101510 SM51S R911 SM652101181 SM180S R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S				R909	SM652101181	
R862 SM652101510 SM51S R912 SM652101181 SM180S R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S		SM652101510	SM51S	R910		
R863 SM652101510 SM51S R913 SM652101750 SM75S R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S	R861	SM652101510	SM51S	R911	SM652101181	SM180S
R864 SM652101471 SM470S R914 SM652101510 SM51S R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S		SM652101510	SM51S	R912		
R865 SM652101512 SM5.1KS R915 SM652101271 SM270S R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S	R863	SM652101510		R913		
R866 SM652101562 SM5.6KS R916 SM652101221 SM220S R867 SM652101510 SM51S R918 SM652101301 SM300S	R864	SM652101471	SM470S	R914	SM652101510	SM51S
R867 SM652101510 SM51S R918 SM652101301 SM300S	R865	SM652101512	SM5.1KS	R915	SM652101271	SM270S
	R866	SM652101562	SM5.6KS	R916	SM652101221	SM220S
R869 SM652101181 SM180S R919 SM652101391 SM390S	R867	SM652101510	SM51S	R918	SM652101301	SM300S
	R869	SM652101181	SM180S	R919	SM652101391	SM390S

Location	Part Number	Description	Location	Part Number	Description
R920	SM652101181	SM180S	R975	SM652101471	SM470S
R921	SM652101181		R976	SM652101471	
R923	SM652101750		R977	SM652101510	
R924	SM652101220	SM22S	R978	SM652101391	
R925	SM652101220	SM22S	R979	SM652101510	
R926	SM652101512	SM5.1KS	R980	SM652101391	SM390S
R927	SM652101562	SM5.6KS	R981	SM652101471	SM470S
R929	SM652101103	SM10KS	R982	SM652101471	SM470S
R935	SM652101181	SM180S	R983	SM652101510	SM51S
R936	SM652101181	SM180S	R984	SM652101391	SM390S
R937	SM652101181	SM180S	R985	SM652101510	SM51S
R938	SM652101181	SM180S	R986	SM652101181	SM180S
R939	SM652101181	SM180S	R987	SM652101181	SM180S
R940	SM652101181	SM180S	R988	SM652101823	SM82KS
R941	SM652101181	SM180S	R989	SM652101181	SM180S
R942	SM652101181	SM180S	R990	SM652101512	SM5.1KS
R943	SM652101181	SM180S	R991	SM652101562	SM5.6KS
R944	SM652101181	SM180S	R1000	SM652101330	SM33S
R945	SM652101512	SM5.1KS	R1001	SM652101391	SM390S
R946	SM652101562	SM5.6KS	R1002	SM652101392	SM3.9KS
R947	SM652101181	SM180S	R1003	SM652101105	SM1MS
R948	SM652101181	SM180S	R1004	SM652101332	SM3.3KS
R950	SM652101221	SM220S	R1005	SM652113954	SM950K-3/oo
R951	SM652101221	SM220S	R1006	SM652101181	SM180S
R952	SM652101221	SM220S	R1007	SM168651297	SM100-1%MM
R953	SM652101221	SM220S	R1008	SM652101822	SM8.2KS
R954	SM652101221	SM220S	R1009	SM652101683	SM68KS
R955	SM652101221	SM220S	R1010	SM185457502	SM5K-1T
R956	SM652101221	SM220S	R1011	SM652101101	SM100S
R957	SM652101221	SM220S	R1012	SM652101360	SM36S
R958	SM652101221		R1013	SM652101220	
R959	SM652101221		R1014	SM168651297	SM100-1%MM
R960	SM652101112		R1016	SM652113523	SM52.63K-3/oo
R963	SM652101181		R1017	SM652101101	
R964	SM652101181		R1018	SM652101114	SM110KS
R965	SM652101181		R1019	SM652110904	SM900K-5/00
R966	SM652101181		R1020	SM652101272	
R967	SM652101181	SM180S	R1021	SM652101512	SM5.1KS
R968	SM652101181		R1022	SM652101390	SM39S
R969	SM652101181		R1023	SM652101475	SM4.7MS
R970	SM652101181	SM180S	R1024	SM652101122	SM1.2KS
R97 1	SM652101181		R1025	SM652101221	
R972	SM652101471		R1026	SM652101105	
R973	SM652101471		R1027	SM652101105	
R974	SM652101471	SM470S	R1028	SM652101220	SM22S

Location	Part Number	Description	Location	Part Number	Description
R1029	SM652101151	SM150S	R1076	SM652101100	SM10S
R1030	SM652101512	SM5.1KS	R1077	SM652101100	SM10S
R1031	SM652101512	SM5.1KS	R1078	SM652101301	SM300S
R1032	SM652101101	SM100S	R1080	SM652101101	SM100S
R1033	SM652101185	SM1.8MS	R1081	SM652101152	SM1.5KS
R1034	SM652101334	SM330KS	R1082	SM652101562	SM5.6KS
R1035	SM652101101	SM100S	R1083	SM652101750	SM75S
R1036	SM652101333	SM33KS	R1084	SM185457203	SM20K-1T
R1037	SM652101103	SM10KS	R1085	SM652101152	SM1.5KS
R1038	SM652101220	SM22S	R1086	SM652101302	SM3KS
R1039	SM652101511	SM510S	R1087	SM652101221	SM220S
R1040	SM652101331	SM330S	R1088	SM652101103	SM10KS
R1041	SM185457103	SM10K-1T	R1089	SM652101103	SM10KS
R1042	SM652101103	SM10KS	R1090	SM652101221	
R1043	SM652101913	SM91KS	R1091	SM652101103	SM10KS
R1044	SM652101182		R1092	SM652101105	SM1MS
R1045	SM652101163		R1093	SM652101105	SM1MS
R1046	SM652101122	SM1.2KS	R1094	SM652101103	SM10KS
R1047	SM652101101	SM100S	R1095	SM652101221	
R1048	SM652101470	SM47S	R1096	SM652101105	SM1MS
R1049	SM652101470	SM47S	R1097	SM652101105	SM1MS
R1050	SM652101240	SM24S	R1098	SM652101221	SM220S
R1051	SM652101101	SM100S	R1099	SM652101100	SM10S
R1052	SM652101223	SM22KS	R1100	SM652101512	SM5.1KS
R1053	SM652101822		R1101	SM652101470	SM47S
R1054	SM652101100		R1102	SM652101470	SM47S
R1055	SM652101471		R1506	SM652101510	
R1056	SM652101471		R1508	SM652101153	
R1057	SM652101750		R1510	SM652101750	SM75S
R1058	SM652101240		R1513	SM652101103	
R1059	SM652101100		R1514	SM652101122	
R1060	SM652101100		R1515	SM185457501	
R1061	SM652101240		R1516		SMNTC-2.2K
R1062	SM652101120		R1517	SM652101122	
R1064	SM652101302		R1518	SM185457502	
R1065	SM652101302		R1519	SM652101822	SM8.2KS
R1066	SM652101750		R1520	SM652101103	SM10KS
R1067	SM652101510		R1521	SM652101151	SM150S
R1068	SM652101220	SM22S	R1522	SM652101151	SM150S
R1069	SM652101330		R1523	SM652101201	SM200S
R1070	SM652101301		R1524	SM652101201	SM200S
R1071	SM652101301		R1525	SM652101201	
R1073	SM652101101		R1526	SM652101201	
R1074	SM652101301	SM300S	R1527	SM652101680	SM68S
R1075	SM652101301	SM300S	R1528	SM652101680	SM68S

Location	Part Number	Description	Location	Part Number	Description
R1529	SM654101000	SM0S	R1577	SM185457102	SMIK-IT
R1530	SM652101201		R1579	SM652101182	
R1531	SM652101201		R1580		SMNTC-2.2K
R1532	SM652101151		R2000	SM652101330	
R1533	SM652101151	SM150S	R2001	SM652101391	
R1534	SM652101220	SM22S	R2002	SM652101392	
R1535	SM652101750	SM75S	R2003	SM652101105	
R1536	SM652101151	SM150S	R2004	SM652101332	SM3.3KS
R1537	SM652101151	SM150S	R2005	SM652113954	SM950K-3/oo
R1538	SM652101201	SM200S	R2006	SM652101181	SM180S
R1539	SM652101201	SM200S	R2007	SM168651297	SM100-1%MM
R1540	SM652101182	SM1.8KS	R2008	SM652101822	SM8.2KS
R1541	SM652101103	SM10KS	R2009	SM652101683	SM68KS
R1542	SM652101101	SM100S	R2010	SM185457502	SM5K-1T
R1544	SM654101000	SM0S	R2011	SM652101101	SM100S
R1545	SM652101431	SM430S	R2012	SM652101360	SM36S
R1546	SM652101431	SM430S	R2013	SM652101220	SM22S
R1547	SM652101431	SM430S	R2014	SM168651297	SM100-1%MM
R1548	SM652101431	SM430S	R2016	SM652113523	SM52.63K-3/oo
R1549	SM652101431	SM430S	R2017	SM652101101	SM100S
R1550	SM652101431	SM430S	R2018	SM652101114	SM110KS
R1551	SM652101431	SM430S	R2019	SM652110904	SM900K-5/00
R1552	SM652101431	SM430S	R2020	SM652101272	SM2.7KS
R1553	SM652101431	SM430S	R2021	SM652101512	SM5.1KS
R1554	SM652101910	SM91S	R2022	SM652101390	SM39S
R1555	SM652101910	SM91S	R2023	SM652101475	SM4.7MS
R1556	SM652101910		R2024	SM652101122	SM1.2KS
R1557	SM652101910	SM91S	R2025	SM652101221	SM220S
R1558	SM652101910		R2026	SM652101105	
R1559	SM652101910		R2027	SM652101105	
R1560	SM652101910		R2028	SM652101220	
R1561	SM652101910		R2029	SM652101151	
R1562	SM652101910		R2030	SM652101512	
R1563	SM652101301		R2031	SM652101512	
R1564	SM652101301		R2032	SM652101101	
R1567	SM652101201		R2033	SM652101185	
R1568	SM652101201		R2034	SM652101334	
R1569	SM652101151		R2035	SM652101101	
R1570	SM652101151		R2036	SM652101333	
R1571	SM652101201		R2037	SM652101103	
R1572	SM652101201		R2038	SM652101220	
R1573	SM185457501		R2039	SM652101511	
R1574	SM652101472		R2040	SM652101331	
R1575	SM652101223		R2041	SM185457103	
R1576	SM185457503	SM50K-1T	R2042	SM652101103	SM10KS

Location	Part Number	Description	Location	Part Number	Description
R2043	SM652101913	SM91KS	R2091	SM652101103	SM10KS
R2044	SM652101182		R2092	SM652101105	
R2045	SM652101163		R2093	SM652101105	SM1MS
R2046	SM652101122	SM1.2KS	R2094	SM652101103	SM10KS
R2047	SM652101101		R2095	SM652101221	SM220S
R2048	SM652101470		R2096	SM652101105	SM1MS
R2049	SM652101470	SM47S	R2097	SM652101105	SM1MS
R2050	SM652101240	SM24S	R2098	SM652101221	SM220S
R2051	SM652101101	SM100S	R2099	SM652101100	SM10S
R2052	SM652101223	SM22KS	R2100	SM652101512	SM5.1KS
R2053	SM652101822	SM8.2KS	R2101	SM652101470	SM47S
R2054	SM652101100	SM10S	R2102	SM652101470	SM47S
R2055	SM652101471	SM470S	R2506	SM652101510	SM51S
R2056	SM652101471	SM470S	R2508	SM652101153	SM15KS
R2057	SM652101750	SM75S	R2510	SM652101750	SM75S
R2058	SM652101240	SM24S	R2513	SM652101103	SM10KS
R2059	SM652101100	SM10S	R2514	SM652101122	SM1.2KS
R2060	SM652101100	SM10S	R2515	SM185457501	SM500-1T
R2061	SM652101240	SM24S	R2516	SM653206222	SMNTC-2.2K
R2062	SM652101120	SM12S	R2517	SM652101122	SM1.2KS
R2064	SM652101302	SM3KS	R2518	SM185457502	SM5K-1T
R2065	SM652101302	SM3KS	R2519	SM652101822	SM8.2KS
R2066	SM652101750	SM75S	R2520	SM652101103	SM10KS
R2067	SM652101510	SM51S	R2521	SM652101151	SM150S
R2068	SM652101220	SM22S	R2522	SM652101151	SM150S
R2069	SM652101330	SM33S	R2523	SM652101201	SM200S
R2070	SM652101301	SM300S	R2524	SM652101201	SM200S
R2071	SM652101301	SM300S	R2525	SM652101201	SM200S
R2073	SM652101101	SM100S	R2526	SM652101201	SM200S
R2074	SM652101301	SM300S	R2527	SM652101680	SM68S
R2075	SM652101301	SM300S	R2528	SM652101680	SM68S
R2076	SM652101100	SM10S	R2529	SM654101000	SM0S
R2077	SM652101100	SM10S	R2530	SM652101201	SM200S
R2078	SM652101301	SM300S	R2531	SM652101201	SM200S
R2080	SM652101101	SM100S	R2532	SM652101151	SM150S
R2081	SM652101152	SM1.5KS	R2533	SM652101151	SM150S
R2082	SM652101562	SM5.6KS	R2534	SM652101220	SM22S
R2083	SM652101750	SM75S	R2535	SM652101750	SM75S
R2084	SM185457203	SM20K-1T	R2536	SM652101151	SM150S
R2085	SM652101152	SM1.5KS	R2537	SM652101151	SM150S
R2086	SM652101302	SM3KS	R2538	SM652101201	SM200S
R2087	SM652101221	SM220S	R2539	SM652101201	SM200S
R2088	SM652101103	SM10KS	R2540	SM652101182	SM1.8KS
R2089	SM652101103	SM10KS	R2541	SM652101103	SM10KS
R2090	SM652101221	SM220S	R2542	SM652101101	SM100S

Location	Part Number	Description	Location	Part Number	Description
R2544	SM654101000	SM0S	R3011	SM652101101	SM100S
R2545	SM652101431		R3012	SM652101360	
R2546	SM652101431		R3013	SM652101220	
R2547	SM652101431		R3014		SM100-1%MM
R2548	SM652101431		R3016		SM52.63K-3/oo
R2549	SM652101431	SM430S	R3017	SM652101101	SM100S
R2550	SM652101431	SM430S	R3018	SM652101114	SM110KS
R2551	SM652101431	SM430S	R3019	SM652110904	SM900K-5/00
R2552	SM652101431	SM430S	R3020	SM652101272	SM2.7KS
R2553	SM652101431	SM430S	R3021	SM652101512	SM5.1KS
R2554	SM652101910	SM91S	R3022	SM652101390	SM39S
R2555	SM652101910	SM91S	R3023	SM652101475	SM4.7MS
R2556	SM652101910	SM91S	R3024	SM652101122	SM1.2KS
R2557	SM652101910	SM91S	R3025	SM652101221	SM220S
R2558	SM652101910	SM91S	R3026	SM652101105	SM1MS
R2559	SM652101910	SM91S	R3027	SM652101105	SM1MS
R2560	SM652101910	SM91S	R3028	SM652101220	SM22S
R2561	SM652101910	SM91S	R3029	SM652101151	SM150S
R2562	SM652101910	SM91S	R3030	SM652101512	SM5.1KS
R2563	SM652101301	SM300S	R3031	SM652101512	SM5.1KS
R2564	SM652101301	SM300S	R3032	SM652101101	SM100S
R2567	SM652101201	SM200S	R3033	SM652101185	SM1.8MS
R2568	SM652101201	SM200S	R3034	SM652101334	SM330KS
R2569	SM652101151	SM150S	R3035	SM652101101	SM100S
R2570	SM652101151	SM150S	R3036	SM652101333	SM33KS
R2571	SM652101201	SM200S	R3037	SM652101103	SM10KS
R2572	SM652101201	SM200S	R3038	SM652101220	SM22S
R2573	SM185457501	SM500-1T	R3039	SM652101511	SM510S
R2574	SM652101472	SM4.7KS	R3040	SM652101331	SM330S
R2575	SM652101223	SM22KS	R3041	SM185457103	SM10K-1T
R2576	SM185457503	SM50K-1T	R3042	SM652101103	SM10KS
R2577	SM185457102	SM1K-1T	R3043	SM652101913	SM91KS
R2579	SM652101182	SM1.8KS	R3044	SM652101182	SM1.8KS
R2580	SM653206222	SMNTC-2.2K	R3045	SM652101163	SM16KS
R3000	SM652101330		R3046	SM652101122	SM1.2KS
R3001	SM652101391	SM390S	R3047	SM652101101	SM100S
R3002	SM652101392		R3048	SM652101470	SM47S
R3003	SM652101105	SM1MS	R3049	SM652101470	SM47S
R3004	SM652101332	SM3.3KS	R3050	SM652101240	
R3005	SM652113954	SM950K-3/00	R3051	SM652101101	SM100S
R3006	SM652101181	SM180S	R3052	SM652101223	SM22KS
R3007			R3053	SM652101822	
R3008	SM652101822	SM8.2KS	R3054	SM652101100	SM10S
R3009	SM652101683	SM68KS	R3055	SM652101471	
R3010	SM185457502	SM5K-1T	R3056	SM652101471	SM470S

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T

Location	Part Number	Description	Location	Part Number	Description
R3057	SM652101750	SM75S	R3510	SM652101750	SM75S
R3058	SM652101240		R3513	SM652101103	
R3059	SM652101100		R3514	SM652101122	
R3060	SM652101100		R3515	SM185457501	SM500-1T
R3061	SM652101240		R3516	SM653206222	SMNTC-2.2K
R3062	SM652101120	SM12S	R3517	SM652101122	SM1.2KS
R3064	SM652101302	SM3KS	R3518	SM185457502	SM5K-1T
R3065	SM652101302	SM3KS	R3519	SM652101822	SM8.2KS
R3066	SM652101750	SM75S	R3520	SM652101103	SM10KS
R3067	SM652101510	SM51S	R3521	SM652101151	SM150S
R3068	SM652101220	SM22S	R3522	SM652101151	SM150S
R3069	SM652101330	SM33S	R3523	SM652101201	SM200S
R3070	SM652101301	SM300S	R3524	SM652101201	SM200S
R3071	SM652101301	SM300S	R3525	SM652101201	SM200S
R3073	SM652101101	SM100S	R3526	SM652101201	SM200S
R3074	SM652101301	SM300S	R3527	SM652101680	SM68S
R3075	SM652101301	SM300S	R3528	SM652101680	SM68S
R3076	SM652101100	SM10S	R3529	SM654101000	SM0S
R3077	SM652101100	SM10S	R3530	SM652101201	SM200S
R3078	SM652101301	SM300S	R3531	SM652101201	SM200S
R3080	SM652101101	SM100S	R3532	SM652101151	SM150S
R3081	SM652101152	SM1.5KS	R3533	SM652101151	SM150S
R3082	SM652101562	SM5.6KS	R3534	SM652101220	SM22S
R3083	SM652101750	SM75S	R3535	SM652101750	SM75S
R3084	SM185457203	SM20K-1T	R3536	SM652101151	SM150S
R3085	SM652101152	SM1.5KS	R3537	SM652101151	SM150S
R3086	SM652101302	SM3KS	R3538	SM652101201	SM200S
R3087	SM652101221	SM220S	R3539	SM652101201	SM200S
R3088	SM652101103	SM10KS	R3540	SM652101182	SM1.8KS
R3089	SM652101103	SM10KS	R3541	SM652101103	SM10KS
R3090	SM652101221	SM220S	R3542	SM652101101	SM100S
R3091	SM652101103	SM10KS	R3544	SM654101000	SM0S
R3092	SM652101105	SM1MS	R3545	SM652101431	SM430S
R3093	SM652101105	SM1MS	R3546	SM652101431	SM430S
R3094	SM652101103	SM10KS	R3547	SM652101431	SM430S
R3095	SM652101221	SM220S	R3548	SM652101431	SM430S
R3096	SM652101105	SM1MS	R3549	SM652101431	SM430S
R3097	SM652101105	SM1MS	R3550	SM652101431	SM430S
R3098	SM652101221	SM220S	R3551	SM652101431	SM430S
R3099	SM652101100	SM10S	R3552	SM652101431	SM430S
R3100	SM652101512	SM5.1KS	R3553	SM652101431	SM430S
R3101	SM652101470	SM47S	R3554	SM652101910	SM91S
R3102	SM652101470	SM47S	R3555	SM652101910	SM91S
R3506	SM652101510	SM51S	R3556	SM652101910	SM91S
R3508	SM652101153	SM15KS	R3557	SM652101910	SM91S

R3558 SM652101910 SM91S R4026 SM652101105 SM1MS R3559 SM652101910 SM91S R4027 SM652101105 SM1MS R3560 SM652101910 SM91S R4028 SM652101220 SM22S R3561 SM652101910 SM91S R4029 SM652101151 SM150S R3562 SM652101301 SM300S R4031 SM652101512 SM5.1KS R3563 SM652101301 SM300S R4031 SM652101512 SM5.1KS R3564 SM652101201 SM200S R4033 SM652101101 SM100S R3567 SM652101201 SM200S R4033 SM652101133 SM30KS R3569 SM652101201 SM200S R4034 SM652101103 SM100S R3569 SM652101201 SM150S R4036 SM652101133 SM30KS R3570 SM652101151 SM150S R4036 SM652101133 SM30KS R3571 SM652101201 SM200S R4037 SM65210133 SM30KS
R3559 SM652101910 SM91S R4028 SM652101120 SM1MS R3560 SM652101910 SM91S R4028 SM652101220 SM22S R3561 SM652101910 SM91S R4029 SM652101511 SM150S R3562 SM652101301 SM300S R4030 SM652101512 SM5.1KS R3563 SM652101301 SM300S R4031 SM652101512 SM5.1KS R3564 SM652101201 SM200S R4032 SM652101105 SM100S R3567 SM652101201 SM200S R4033 SM652101185 SM1.8MS R3568 SM652101201 SM200S R4034 SM652101133 SM330KS R3569 SM652101151 SM150S R4035 SM652101101 SM100S R3571 SM652101201 SM200S R4037 SM652101133 SM33KS R3571 SM652101201 SM20S R4037 SM652101133 SM10KS R3572 SM652101201 SM20S R4037 SM65210133 SM10KS </td
R3561 SM652101910 SM91S R4029 SM652101151 SM150S R3562 SM652101910 SM91S R4030 SM652101512 SM5.1KS R3563 SM652101301 SM300S R4031 SM652101512 SM5.1KS R3564 SM652101201 SM200S R4032 SM652101185 SM10S R3567 SM652101201 SM200S R4033 SM652101185 SM1.8MS R3568 SM652101201 SM200S R4034 SM652101103 SM18MS R3569 SM652101151 SM150S R4035 SM652101101 SM100S R3570 SM652101151 SM150S R4036 SM652101103 SM100S R3571 SM652101201 SM200S R4037 SM652101103 SM10KS R3571 SM652101201 SM200S R4038 SM65210120 SM22S R3571 SM652101201 SM200S R4038 SM65210133 SM30S R3573 SM185457501 SM500-1T R4039 SM65210133 SM30S </td
R3562 SM652101910 SM91S R4030 SM652101512 SM5.1KS R3563 SM652101301 SM300S R4031 SM652101512 SM5.1KS R3564 SM652101301 SM300S R4032 SM652101101 SM100S R3567 SM652101201 SM200S R4033 SM652101185 SM1.8MS R3568 SM652101151 SM150S R4035 SM652101134 SM300KS R3569 SM652101151 SM150S R4035 SM65210110 SM100S R3570 SM652101201 SM200S R4036 SM652101103 SM100S R3571 SM652101201 SM200S R4037 SM652101120 SM10KS R3572 SM652101201 SM200S R4038 SM652101122 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM2KS R4041 SM185457103 SM10K-1T
R3563 SM652101301 SM300S R4031 SM652101512 SM5.1KS R3564 SM652101301 SM300S R4032 SM652101101 SM100S R3567 SM652101201 SM200S R4033 SM652101185 SM1.8MS R3568 SM652101151 SM200S R4034 SM652101101 SM100S R3570 SM652101151 SM150S R4036 SM652101333 SM33KS R3571 SM652101201 SM200S R4037 SM652101120 SM20S R3571 SM652101201 SM200S R4037 SM652101220 SM22S R3573 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM652101221 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4038 SM652101331 SM30S R3575 SM652101223 SM2KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS
R3564 SM652101301 SM300S R4032 SM652101101 SM100S R3567 SM652101201 SM200S R4033 SM652101185 SM1.8MS R3568 SM652101201 SM200S R4034 SM652101334 SM330KS R3569 SM652101151 SM150S R4035 SM652101101 SM100S R3570 SM652101201 SM150S R4036 SM652101333 SM33KS R3571 SM652101201 SM200S R4037 SM652101103 SM10KS R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101120 SM22S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457503 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM65210133 SM10K-1T R3577 SM185457502 SM1K-1T R4043 SM652101182 SM1.8
R3567 SM652101201 SM200S R4033 SM652101185 SM1.8MS R3568 SM652101201 SM200S R4034 SM652101334 SM330KS R3569 SM652101151 SM150S R4035 SM652101101 SM100S R3570 SM652101201 SM150S R4036 SM652101333 SM33KS R3571 SM652101201 SM200S R4037 SM65210120 SM20S R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101223 SM22KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3577 SM185457503 SM50K-1T R4042 SM65210113 SM30KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM652101330 SM33S R4044 SM652101182 SM1.2KS </td
R3568 SM652101201 SM200S R4034 SM652101334 SM330KS R3569 SM652101151 SM150S R4035 SM652101101 SM100S R3570 SM652101151 SM150S R4036 SM652101333 SM33KS R3571 SM652101201 SM200S R4037 SM652101103 SM10KS R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM65210113 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM652101330 SM33S R4045 SM652101162 SM1.2K
R3569 SM652101151 SM150S R4035 SM652101101 SM100S R3570 SM652101151 SM150S R4036 SM652101333 SM33KS R3571 SM652101201 SM200S R4037 SM652101103 SM10KS R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM652101330 SM33S R4046 SM652101163 SM16KS R4001 SM652101391 SM390S R4047 SM65210110 SM100S<
R3570 SM652101151 SM150S R4036 SM652101333 SM33KS R3571 SM652101201 SM200S R4037 SM652101103 SM10KS R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1.K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4001 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101392 SM3.9KS R4048 SM65210110
R3571 SM652101201 SM200S R4037 SM652101103 SM10KS R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM652101182 SM1.8KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101470 SM47S R4002 SM652101392 SM3.9KS R4048 SM652101470
R3572 SM652101201 SM200S R4038 SM652101220 SM22S R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM65210113 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101182 SM1.8KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101332 SM3.3KS R4050 SM652101470
R3573 SM185457501 SM500-1T R4039 SM652101511 SM510S R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM65210132 SM3.3KS R4049 SM652101470 SM47S R4004 SM65210132 SM3.3KS R4050 SM652101223 S
R3574 SM652101472 SM4.7KS R4040 SM652101331 SM330S R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM65210105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM65210140 SM24S R4005 SM652101181 SM180S R4052 SM652101101 SM100S
R3575 SM652101223 SM22KS R4041 SM185457103 SM10K-1T R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101101 SM100S R4003 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101470 SM47S R4005 SM6521013954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223
R3576 SM185457503 SM50K-1T R4042 SM652101103 SM10KS R3577 SM185457102 SM1K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101392 SM3.9KS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652101382 SM3.3KS R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101471
R3577 SM185457102 SM1K-1T R4043 SM652101913 SM91KS R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101392 SM3.9KS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652101332 SM3.3KS R4050 SM652101101 SM100S R4005 SM652101181 SM180S R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101471 SM47
R3579 SM652101182 SM1.8KS R4044 SM652101182 SM1.8KS R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101102 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101750 <t< td=""></t<>
R3580 SM653206222 SMNTC-2.2K R4045 SM652101163 SM16KS R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101101 SM100S R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101750 S
R4000 SM652101330 SM33S R4046 SM652101122 SM1.2KS R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/00 R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4001 SM652101391 SM390S R4047 SM652101101 SM100S R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4002 SM652101392 SM3.9KS R4048 SM652101470 SM47S R4003 SM652101105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4003 SM652101105 SM1MS R4049 SM652101470 SM47S R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4004 SM652101332 SM3.3KS R4050 SM652101240 SM24S R4005 SM652113954 SM950K-3/00 R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4005 SM652113954 SM950K-3/oo R4051 SM652101101 SM100S R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4006 SM652101181 SM180S R4052 SM652101223 SM22KS R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4007 SM168651297 SM100-1%MM R4053 SM652101822 SM8.2KS R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4008 SM652101822 SM8.2KS R4054 SM652101100 SM10S R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4009 SM652101683 SM68KS R4055 SM652101471 SM470S R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4010 SM185457502 SM5K-1T R4056 SM652101471 SM470S R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4011 SM652101101 SM100S R4057 SM652101750 SM75S
R4012 SM652101360 SM36S R4058 SM652101240 SM24S
R4013 SM652101220 SM22S R4059 SM652101100 SM10S
R4014 SM168651297 SM100-1%MM R4060 SM652101100 SM10S
R4016 SM652113523 SM52.63K-3/oo R4061 SM652101240 SM24S
R4017 SM652101101 SM100S R4062 SM652101120 SM12S
R4018 SM652101114 SM110KS R4064 SM652101302 SM3KS
R4019 SM652110904 SM900K-5/oo R4065 SM652101302 SM3KS
R4020 SM652101272 SM2.7KS R4066 SM652101750 SM75S
R4021 SM652101512 SM5.1KS R4067 SM652101510 SM51S
R4022 SM652101390 SM39S R4068 SM652101220 SM22S
R4023 SM652101475 SM4.7MS R4069 SM652101330 SM33S
R4024 SM652101122 SM1.2KS R4070 SM652101301 SM300S
R4025 SM652101221 SM220S R4071 SM652101301 SM300S

Location	Part Number	Description	Locatior.	Part Number	Description
R4073	SM652101101	SM100S	R4526	SM652101201	SM200S
R4074	SM652101301	SM300S	R4527	SM652101680	SM68S
R4075	SM652101301	SM300S	R4528	SM652101680	SM68S
R4076	SM652101100	SM10S	R4529	SM654101000	SM0S
R4077	SM652101100	SM10S	R4530	SM652101201	SM200S
R4078	SM652101301	SM300S	R4531	SM652101201	SM200S
R4080	SM652101101	SM100S	R4532	SM652101151	SM150S
R4081	SM652101152	SM1.5KS	R4533	SM652101151	SM150S
R4082	SM652101562	SM5.6KS	R4534	SM652101220	SM22S
R4083	SM652101750	SM75S	R4535	SM652101750	SM75S
R4084	SM185457203	SM20K-1T	R4536	SM652101151	SM150S
R4085	SM652101152	SM1.5KS	R4537	SM652101151	SM150S
R4086	SM652101302	SM3KS	R4538	SM652101201	SM200S
R4087	SM652101221	SM220S	R4539	SM652101201	SM200S
R4088	SM652101103	SM10KS	R4540	SM652101182	SM1.8KS
R4089	SM652101103	SM10KS	R4541	SM652101103	SM10KS
R4090	SM652101221	SM220S	R4542	SM652101101	SM100S
R4091	SM652101103		R4544	SM654101000	SM0S
R4092	SM652101105	SM1MS	R4545	SM652101431	SM430S
R4093	SM652101105	SM1MS	R4546	SM652101431	SM430S
R4094	SM652101103	SM10KS	R4547	SM652101431	SM430S
R4095	SM652101221	SM220S	R4548	SM652101431	SM430S
R4096	SM652101105	SM1MS	R4549	SM652101431	SM430S
R4097	SM652101105	SM1MS	R4550	SM652101431	SM430S
R4098	SM652101221	SM220S	R4551	SM652101431	SM430S
R4099	SM652101100	SM10S	R4552	SM652101431	SM430S
R4100	SM652101512	SM5.1KS	R4553	SM652101431	SM430S
R4101		SM47S	R4554	SM652101910	
R4102		SM47S	R4555	SM652101910	
R4506	SM652101510	SM51S	R4556	SM652101910	
R4508	SM652101153		R4557	SM652101910	
R4510	SM652101750		R4558	SM652101910	
R4513	SM652101103		R4559	SM652101910	
R4514	SM652101122		R4560	SM652101910	
R4515	SM185457501	SM500-1T	R4561	SM652101910	
R4516	SM653206222		R4562	SM652101910	
R4517	SM652101122		R4563	SM652101301	
R4518	SM185457502		R4564	SM652101301	
R4519	SM652101822	SM8.2KS	R4567	SM652101201	SM200S
R4520	SM652101103	SM10KS	R4568	SM652101201 SM652101151	SM200S
R4521	SM652101151	SM150S	R4569		SM150S
R4522	SM652101151	SM150S	R4570	SM652101151	SM150S SM200S
R4523	SM652101201	SM200S	R4571	SM652101201	
R4524	SM652101201	SM200S	R4572	SM652101201	SM200S
R4525	SM652101201	SM200S	R4573	SM185457501	SM500-1T

Location	Part Number	Description	Location	Part Number	Description
R4574	SM652101472	SM4.7KS	R5040	SM652101182	SM1.8KS
R4575	SM652101223	SM22KS	R5041	SM652101510	SM51S
R4576	SM185457503	SM50K-1T	R5042	SM652101182	SM1.8KS
R4577	SM185457102	SM1K-1T	R5043	SM652101330	SM33S
R4579	SM652101182	SM1.8KS	R5044	SM652101330	SM33S
R4580	SM653206222	SMNTC-2.2K	R5045	SM652101561	SM560S
R5000	SM652101330	SM33S	R5046	SM652101101	SM100S
R5001	SM652101220	SM22S	R5047	SM652101330	SM33S
R5002	SM652101100		R5048	SM652101330	SM33S
R5003	SM652101330		R5049	SM652101561	SM560S
R5004	SM652101330		R5050	SM652101101	
R5005	SM652101104		R5051	SM652101512	
R5006	SM652110904		R5052	SM652101163	
R5007	SM652101101		R5053	SM185457203	
R5008	SM652101182		R5054	SM652101163	
R5009	SM652101272		R5055	SM185457203	
R5010		SM900K-5/00	R5056	SM652101332	
R5011	SM652101510		R5057	SM654101000	
R5012	SM652101182		R5060	SM654101000	
R5013	SM652101122		R5061	SM652101332	
R5014	SM652101221		R5062	SM652101332	
R5015	SM652101475		R5064	SM654101000	
R5016		SM111.1K-1/00	R5066	SM654101000	
R5017	SM652101153		R5067	SM652101332	
R5018	SM652101183		R5068	SM652101512	
R5019	SM185457201		R5071	SM652101510	
R5020	SM652101101		R5072	SM652101510	
R5021	SM652101151		R5073	SM652101182	
R5022	SM:652101680		R5074	SM652101182	
R5023	SM652101474		R5075	SM652101561	
R5024	SM652101684		R5076	SM652101561	
R5025	SM652101103			SM652101163	
R5026	SM652101104		R5078	SM185457203	
R5027	SM652101330		R5079	SM652101163	
R5028	SM652101391		R5080	SM185457203	
R5029	SM652110904		R5081	SM652101332	
R5030	SM652101101	SM100S	R5082	SM654101000	
R5031	SM652101331	SM330S	R5084	SM654101000	
R5032	SM652101103		R5086	SM652101332	
R5033	SM652101680		R5087	SM652101512	
R5034	SM652101100		R5088	SM652101332	
R5035	SM652101471	SM470S	R5089	SM654101000	
R5036	SM652101101		R5091	SM654101000	
R5038	SM652101824		R5093	SM652101332	
R5039	SM652101510	SM51S	R5094	SM652101512	SM5.1KS

Location	Part Number	Description	Location	Part Number	Description
R5095	SM652101510	SM51S	R6002	SM168659297	SM100-1/00
R5096	SM652101561	SM560S	R6003	SM168659297	SM100-1/00
R5097	SM652101182	SM1.8KS	R6004	SM652101331	SM330S
R5098	SM652101101	SM100S	R6005	SM652101112	SM1.1KS
R5099	SM652101561	SM560S	R6006	SM652101330	SM33S
R5100	SM652101271	SM270S	R6007	SM652101181	SM180S
R5101	SM652101101	SM100S	R6008	SM652101112	SM1.1KS
R5102	SM652101561	SM560S	R6009	SM652101621	SM620S
R5103	SM652101163	SM16KS	R6010	SM652101512	SM5.1KS
R5104	SM652101221	SM220S	R6011	SM652101512	SM5.1KS
R5105	SM652101391	SM390S	R6012	SM652101131	SM130S
R5106	SM652101471	SM470S	R6013	SM652101391	SM390S
R5107	SM652101512	SM5.1KS	R6014	SM168659007	SM3.0K-1/oo
R5108	SM185457203	SM20K-1T	R6015	SM168659007	SM3.0K-1/oo
R5109	SM652101471	SM470S	R6016	SM168659004	SM900-1/oo
R5110	SM652101512	SM5.1KS	R6017	SM168659297	SM100-1/00
R5111	SM652101512	SM5.1KS	R6018	SM652101392	SM3.9KS
R5112	SM652101332	SM3.3KS	R6019	SM652101112	SM1.1KS
R5113	SM654101000	SM0S	R6020	SM168659007	SM3.0K-1/oo
R5115	SM654101000	SM0S	R6021	SM652101220	SM22S
R5117	SM652101332	SM3.3KS	R6022	SM652101101	SM100S
R5118	SM652101512	SM5.1KS	R6023	SM652101101	SM100S
R5119	SM652101562	SM5.6KS	Sl	SM654101000	SM0S-2P
R5120	SM652101562	SM5.6KS	S5	SM654101000	SM0S-2P
R5121	SM652101512	SM5.1KS	S6	SM654101000	SM0S-2P
R5122	SM652101562	SM5.6KS	S7	SM654101000	SM0S-2P
R5123	SM652101562	SM5.6KS	Y700	311210000	OSC-18D-10MHz
R5124	SM652101241	SM240S	Y5000	SM310900015	SM15.5029MHz
R5125	SM652101271	SM270S	BZ700	530040007	TMB-05
R5126	SM168651297	SM100-1%MM	CR1	SM236030099	BAV99
R5127	SM168651297	SM100-1%MM	CR2	SM232120070	BAV70
R5128	SM652101202	SM2KS	CR100	SM253032823	HSMS2823
R5129	SM185457502	SM5K-1T	CR200	SM240218451	BZX84-C5V1
R5130	SM652101683	SM68KS	CR201	SM240218475	BZX84-C7V5
R5131	SM652101392	SM3.9KS	CR202	SM240218475	BZX84-C7V5
R5132	SM652101105	SM1MS	CR400	SM236654004	SM4004
R5133	SM652101512	SM5.1KS	CR401	SM236654004	SM4004
R5134	SM652101512	SM5.1KS	CR402	SM236654004	SM4004
R5135	SM652101512	SM5.1KS	CR410	SM253032823	HSMS2823
R5136	SM652101822	SM8.2KS	CR411	SM253032823	HSMS2823
R5137	SM652101332	SM3.3KS	CR412	SM253032823	HSMS2823
R5141	SM652101512	SM5.1KS	CR413	SM253032823	HSMS2823
R5142	SM652101512	SM5.1KS	CR414	SM253032823	HSMS2823
R6000	SM652101330		CR415	SM253032823	HSMS2823
R6001	SM168659007		CR416	SM253032823	HSMS2823

Location	Part Number	Description	Location	Part Number	Description
CR417	SM253032823	HSMS2823	CR1501	SM240050051	TZMC5V1
CR418	SM253032823		CR2000		SMTVSS-5V6
CR501	SM236030099	BAV99	CR2001	SM236030099	BAV99
CR503	SM240218451	BZX84-C5V1	CR2002	SM236030099	BAV99
CR504	SM240218451	BZX84-C5V1	CR2003	SM236030099	BAV99
CR505	SM240218451	BZX84-C5V1	CR2004	SM252023018	BAT18
CR507	SM240218451	BZX84-C5V1	CR2005	SM240050056	TZMC5V6
CR508	SM240218451	BZX84-C5V1	CR2500	SM240050051	TZMC5V1
CR601	SM236030099		CR2501	SM240050051	TZMC5V1
CR603	SM240218451		CR3000		SMTVSS-5V6
CR604		BZX84-C5V1	CR3001	SM236030099	
CR605		BZX84-C5V1	CR3002	SM236030099	
CR607	SM240218451		CR3003	SM236030099	
CR608		BZX84-C5V1	CR3004	SM252023018	
CR700	SM240218451		CR3005	SM240050056	
CR701	SM236030099		CR3500	SM240050051	
CR702		BZX84-C5V1	CR3501	SM240050051	
CR703		BZX84-C5V1	CR4000		SMTVSS-5V6
CR704		BZX84-C5V1	CR4001	SM236030099	
CR705	SM236654004		CR4002	SM236030099	
CR707	SM252080682		CR4003	SM236030099	
CR708 CR710	SM252080682 SM252080682		CR4004	SM252023018 SM240050056	
CR710	SM236030099		CR4005 CR4500	SM240050050 SM240050051	
CR716	SM236030099 SM236030099		CR4501	SM240050051	
CR717	SM252080682		CR5000		SMTVSS-5V6
CR717	SM252080682		CR5000	SM252023018	
CR719		BZX84-C5V1	CR5001	SM232120070	
CR720		BZX84-C5V1	CR5002	SM236030099	
CR721	SM240218451		CR5004	SM240050033	
CR722		BZX84-C5V1	CR5005	SM240050033	
CR723	SM232022822			SM240050033	
CR724	SM236030099			SM240050033	
CR725	SM232022822			SM240218451	
CR730	SM236030099		CR5009	SM240050033	
CR731	SM236030099	BAV99	CR5010	SM232120070	BAV70
CR732	SM236030099	BAV99	CR5011	SM236030099	BAV99
CR733	SM236030099	BAV99	CR5012	SM236030099	BAV99
CR1000	SM229020150	SMTVSS-5V6	CR6000	SM229020150	SMTVSS-5V6
CR1001	SM236030099	BAV99	CR6001	SM253032823	HSMS2823
CR1002	SM236030099	BAV99	CR6002	SM232022822	HSMS2822
CR1003	SM236030099	BAV99	CR6003	SM240050051	TZMC5V1
CR1004	SM252023018	BAT18	CR6004	SM236030099	BAV99
CR1005	SM240050056	TZMC5V6	DL700	290199015	DL-1L6-15
CR1500	SM240050051	TZMC5V1	DL701	290199015	DL-1L6-15

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T

Location	Part Number	Description	Location	Part Number	Description
DL705	290120009	9nS	RL3001	430430002	RL-FBR22-12
DL706	290120004	4nS	RL3002	430441732	RL-732-12
DL707	290120002	2nS	RL3003	430430002	RL-FBR22-12
DL708	290120002	2nS	RL4000	430441732	RL-732-12
DL709	290120002	2nS	RL4001	430430002	RL-FBR22-12
DL710	290120009	9nS	RL4002	430441732	RL-732-12
DL711	290120002	2nS	RL4003	430430002	RL-FBR22-12
DL712	290120005	5nS	RL5000	430490003	RL-TQ2-12
RL200	430490750	RL-UR1-12	RL5001	430430002	RL-FBR22-12
RL201	SIMUL	SIMUL-RL-UR1	TP201	454313010	2x5-ST-M-NW-SP
RL202	SIMUL	SIMUL-RL-UR1	TP202	454313010	2x5-ST-M-NW-SP
RL203	430490750	RL-UR1-12	TP203	454313010	2x5-ST-M-NW-SP
RL1000	430441732	RL-732-12	TP1000	454340002	2x1-ST-M-NW
RL1001	430430002	RL-FBR22-12	TP1500	454311008	2x4-ST-M-NW
RL1002	430441732	RL-732-12	TP2000	454340002	2x1-ST-M-NW
RL1003	430430002	RL-FBR22-12	TP2500	454311008	2x4-ST-M-NW
RL2000	430441732	RL-732-12	TP3000	454340002	2x1-ST-M-NW
RL2001	430430002	RL-FBR22-12	TP3500	454311008	2x4-ST-M-NW
RL2002	430441732	RL-732-12	TP4000	454340002	2x1-ST-M-NW
RL2003	430430002	RL-FBR22-12	TP4500	454311008	2x4-ST-M-NW
RL3000	430441732	RL-732-12	TP5000	454340002	2x1-ST-M-NW

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
146544471	CAP MINI ALUM 20% 470UF	1
146554476	CAP MINI ALUM 20% 47 UF	2
146574227	CAP MINI ALUM 20% 220 UF	3
158849009	CAP VARIABLE .5 - 2.5 PF	8
158849012	CAP VARIABLE 5.0-15 PF	4
169416473	RESISTOR DISC NTC 47 K	1
208122002	IC VOLT REG POS UA7805	2
208123002	IC +12 VOLT REG LM340T-12	3
208124002	IC VOLT REG -5V UA7905UC	1
208124003	IC VOLT REG NEG LM320T-12	3
290120002	DELAY LINE 2 N-SEC	4
290120004	DELAY LINE 4 NS	1
290120005	DELAY LINE 5NS	1
290120009	DELAY LINE 9 N-SEC	2
290199015	DELAY LINE 1.5 NS	2
311210000	CRYSTAL OSCILLATOR 3PPM 1	0 1
430430002	RELAY 1 FORM C SPDT	9
430441732	RELAY 2 FORM CDPDT	8
430490003	RELAY 2 FORM C DPDT	1

PART: F9354-31 DESC: DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
430490750 454111024 454115014	RELAY HF DPDT 75 OHMS	2
454111024	HDR 2MM PRESSFIT TO FEM 4	
454115014	HDR FRICTION LOCK 14-PIN	
454220096	HDR PRESSFIT TO FEM 96	1
454313010	HDR DIP SOLD TO PCB 2X5	
454315008	HDR DIP SOLD TO PCB 2X4	
454340002	HDR MALE PIN TO WW 02	5
454390002	HDR FRICTION LOCK 2-PIN	
505019968	HEAT SINK VERTICAL MTG	
505070220	HEAT SINK + TAG FOR TO220	
505132001	HEATSINK (DIAMETER 19MM)	4
505368202	HEATSINK FOR 68 PIN PGA SELF LOCK FRAME GROUND.S	
520001020		SPA 2
530009002	SHIELD (RFI/EMI) FINGER ST	4
530040007	BUZZER 85DB 5V SMALL	1
554416000 554425003 709354331	NAIL RIVET 1.6X6	2
554425003	SCREW S/TAP PHIL M2.5X6 BL	
709354331	BASE SHIELD	1
709354351		
709354361	SHIELD LEFT LOWER PARTITI	
709354411 7093XXP01	9354-4 OCILLATOR SHIELD	1
7093XXP01	RIGHT ANGLE RECEPT. CONN BULKHEAD RECEPTACLE FEM	EC 6
7093XXP41		6
7093XXP91	PROBE RING CONTACT	6
709450321	HEAT SINK FOR FADC PC BD PREASS'Y 9354-31 HEAT SINK EPOXY 400-500MHZ PLL OSCILLATOR	1
719354313	PC BD PREASS Y 9354-31	1
CH599043022 F9354-4 FP9354-3 HSH416	HEAT SINK EPOXY	0
F9354-4	MAIN CARD PANEL 9354-3	. 1 1
FP9354-3	MAIN CARD PANEL 9354-3	
MGI 404	HYB 500MS/S SAMPLE & HOLI IC MEM GATE ARRAY MCL404	
MICLHOT	IC DEMUX/MINMAX GATE AR	
MDX416 MFE409	MONOL. DSO FRONT END (500	
MST412	IC SMART TRIGGER GATE-AR	
MTB411	IC TIME BASE GATE-ARRAY	1
MTR408	TRIGGER COUPLING & COMPA	
SM158240200	CAP VARIABLE .6 - 2.5 PF	1
SM158240200 SM158240202	CAP VARIABLE :0 - 2:3 11 CAP VARIABLE 2.5 - 10 PF	4
SM168651297	RES METAL FILM 1% 100 OHM	
SM168659004	RES METAL FILM 1% 100 OHM	
SM168659004 SM168659006	RES METAL FILM .1% 900 OHN RES METAL FILM .1% 111.1 K	1
SM168659007	RES METAL FILM .1% 111.1 K	5
SM168659297	RES METAL FILM .1% 3.00K	
SM185457101	RES VARI CERMET 100 OHMS	2
3141 (242 / 101	ALS VAIG CERTIES 100 OFINIS	4

PART: F9354-31 DESC: DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T

COMPONENT		QTY PER ASSEMBLY
SM185457102	RES VARI CERMET 1 K	4
SM185457103	RES VARI CERMET 10 K	4
SM185457201	RES VARI CERMET 200 OHMS	2
SM185457203	RES VARI CERMET 20 K	9
SM185457501	RES VARI CERMET 500 OHMS	8
	RES VARI CERMET 5 K	9
SM185457503	RES VARI CERMET 50 K	4
SM200167102	IC NOR GATE 10H102 IC M-S TYP D FLOP 10H131	2
SM200167131	IC M-S TYP D FLOP 10H131	2
SM200167164	IC 8 TO 1 MPLX 10H164	1
SM200169016	IC BINARY UP COUNTER 10E01	3
SM200169191	IC UP-DOWN BIN COUNTER 74F	5
SM200172008	IC AND GATE 74F08	1
SM200178000	IC 2-INPUT NAND HCT00	1
SM200178002	IC 2-INPUT NOR HCT02	2
SM200178030	IC UP-DOWN BIN COUNTER 74F IC AND GATE 74F08 IC 2-INPUT NAND HCT00 IC 2-INPUT NOR HCT02 IC 8-IN NAND HCT30	1
SM2001/80/4	IC D-1 YP FLOP /4HC1/4	2
SM200178138	IC 3-8 LINE DECOD HCT 138 IC D-TYP FLOP 74HCT273	4
SM200178273	IC D-TYP FLOP 74HCT273	2
SM200178374	IC D-TYP FLOP 74HCT374	1
SM200278040	IC COUNTER HCT4040	1
SM201164104	IC QUIET 2-IN AND/NAND IC M/S D-TYP FLOP 10E131 IC 6-BIT 2:1 MUX REGISTER IC ECL PROG DELAY 2NS 10E1	1
SM201164131	IC M/S D-TYP FLOP 10E131	3
SM201164167	IC 6-BIT 2:1 MUX REGISTER	1
SM201166195	IC ECL PROG DELAY 2NS 10E1	4
SM201174001	IC ECL 4 IN OR/NOR 10EL01D	2
SM201174005	IC ECL 2-IN DIF AND/NAND	8
SM201174011	IC ECL 1:2 DIF CLOCK DRVR IC ECL FLIP/FLOP SET/RES	12
SM201174031	IC ECL FLIP/FLOP SET/RES	2
SM201274032	IC ECL DIV:2 10EL32D	3
	IC ECL DIV:4 10EL33D	1
SM201570016	IC ECL DIF RECEIVER 10EL16	2
SM205045300	PROGRAMMED GAL MIMOSA-A	
SM205045350	PROGRAMMED GAL ROUTE1-A	
SM205045351	PROGRAMMED GAL ROUTE2-A	1
SM205045352	PROGRAMMED GAL ROUTE2-B	1
SM205045354	PROGRAMMED GAL AVENUE-A	
SM205045355	PROGRAMMED GAL RUELLE-A	_
SM205045357	PROGRAMMED GAL CHEMIN-A	
SM205045358	PROGRAMMED GAL ROUTE3-C	1
SM205045359	PROGRAMMED GAL ARTERE-B	1
SM205108002	IC EEPROM 2K BIT IIC BUS	1
SM205618165	IC 8-BIT SHIFT REG 74HCT16	1
SM205618594	IC 8-BIT SHIFT REG 74HC594	24
SM205701070	IC 128KX8 STAT RAM 70 NS	8

PART: F9354-31 DESC: DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T

SM206070584 IC BUS CONTROLLER PCF8584T 1	
SM206260858 IC OCT 8-BIT ADC0858 1	
SM206884623 IC OCTAL BUS TRANSCVR ABT6 10	
SM206884623 IC OCTAL BUS TRANSCVR ABT6 10 SM206885245 IC BUS TRANSCVR ABT245 2	
SM206970457 IC 3 DIF 2:1 MUX MC10E457 3	
SM207130025 TRANSISTOR NPN BFT25A 1	
SM207170367 IC HEX BUFFER 74HC367 1	
SM207171244 IC OCTAL BUFFER ABT244 6	
SM207172241 IC OCTAL BUFFER ABT241 3	
SM207260718 IC 8-BIT ADC 8718 4	
SM207280703 IC 16-BIT DAC 703 1	
SM207288800 IC OCTAL 8-BIT CMOS D/A CO 2	
SM207360125 IC TRANSLATO MC10125 3	
SM207367124 IC TRANSLATOR 10H124 1	
SM207367125 IC TRANSLATOR 10H125 2	
SM207770201 IC ANALOG SWITCH DG201 8	
SM207770403 IC ANALOG SWITCH DG403 1	
SM207770442 IC ANALOG SWITCH DG442 2	
SM207960157 IC QUAD 2:1 MULTIPLEX 10E1 1 SM207961158 IC 5 BIT 2:1 MUX 10E158 2	
SM207961158 IC 5 BIT 2:1 MUX 10E158 2	
SM207970139 IC DECODER/DEMUX 74F139 4	
SM207970351 IC OCTAL ANALOG MUX/DEMUX 1	
SM207970508 IC ANALOG MULT PLX 8-1 DG5 1	
SM207972157 IC DATA SEL/MUX 74F157A 1	
SM207978153 IC 4-INPUT MUX HCT153 1	
SM207978251 IC 8-IN MUX 3-ST 74HCT251 2	
SM208030245 IC TRANS ARRAY NPNX6 SL324 1	
SM208470037 IC OP AMP 37GS 1 SM208470347 IC J-FET OP AMP 347 8	
SM208470347 IC J-FET OP AMP 347 8 SM208470351 IC J-FET OP AMP 351 1	
SM208470351 IC J-FET OP AMP 351 1 SM208470353 IC DUAL OP AMP 353 2	
SM208470705 IC OP AMP PICOAMP INPUT AD 6	
SM208570078 IC LOW POWER REG +12V 78L1 1	
SM208570805 IC POS VOLT REG 78L05 1	
SM208870339 IC VOLT COMPARATOR 339 6	
SM208880079 IC LOW POWER REG -12V 79L1 1	
SM208971881 IC VIDEO SYNC SEPARATOR LM 1	
SM229020150 MLC TR.VOLT SUP.VC08050561 6	
SM232022822 DIODE ARRAY SCHTTKY 2822 3	
SM232120070 DIODE ARRAY BAV70 3	
SM236030099 DIODE SO-PKG BAV99 27	
SM236654004 DIODE RECTIFIER 4004 4	
SM240050033 DIODE ZENER TZM-C-3V3 5	
SM240050051 DIODE ZENER TZM-C-5V1 9	
SM240050056 DIODE ZENER TZM-C-5V6 4	

PART: F9354-31 DESC: DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T


COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
SM240218451	DIODE ZENER BZX84C5V1	20
SM240218475	DIODE ZENER BZX84C7V5	2
SM252023018	DIODE PIN BAT 18	5
SM252080682	DIODE PIN BA682	5
SM253032823	DIODE SCHOTTKY 2823	11
SM270030020	TRANSISTOR NPN BFS20	1
SM270130092	TRANSISTOR NPN BFR92A	40
SM270130093	TRANSISTOR NPN BFR93A	3
SM270140092	TRANSISTOR NPN BFR92AR	
SM275030092	TRANSISTOR PNP BFT92	8
SM275030093	TRANSISTOR PNP BFT93	4
SM275030550	TRANSISTOR PNP BF550	2
SM275040092	TRANSISTOR PNP BFT92R	4
SM275330858	TRANSISTOR PNP BC858C	22
SM280120416	TRANSISTOR JFET N MMBF441	
SM289240061	TRANSISTOR NPN BCV61	4
SM289240062	TRANSISTOR ARRAY BCV62	
SM289772003	TRANSISTOR ARRAY 2003	4
SM300446150	INDUCTOR .015UH	1
SM300486104	INDUCTOR WOUND 100uH	8
SM301502001	BEAD (FERRITE CHIP)	35
SM310900015	CRYSTAL 15.5029MHZ	1
SM454120025	CONN 1MM FEMALE 25	î
SM651104182	RES CHIP 1% 25PPM 1.8K	1
SM651104183	RES CHIP 1% 25PPM 18 K	1
SM651104201		
SM651104204	RES CHIP 1% 25PPM 200 K	î
SM651104241	RES CHIP 1% 25PPM 240 OHM	
SM651104392	RES CHIP 1% 25PPM 3.9K	1
SM652101100	RES CHIP (E24) 1% 10 OHMS	
SM652101101	RES CHIP (E24) 1% 100 OHM	58
SM652101102	RES CHIP (E24) 1% 1 K	43
SM652101103	RES CHIP (E24) 1% 10 K	92
SM652101104	RES CHIP (E24) 1% 100 K	2
SM652101105	RES CHIP (E24) 1% 1 M	29
SM652101112	RES CHIP (E24) 1% 1.1 K	5
SM652101114	RES CHIP (E24) 1% 110 K	4
SM652101120	RES CHIP (E24) 1% 12 OHMS	4
SM652101121	RES CHIP (E24) 1% 120 OHM	26
SM652101122	RES CHIP (E24) 1% 1.2 K	19
SM652101131	RES CHIP (E24) 1% 130 OHM	17
SM652101151	RES CHIP (E24) 1% 150 OHM	37
SM652101152	RES CHIP (E24) 1% 1.5 K	11
SM652101153	RES CHIP (E24) 1% 15 K	10
SM652101163	RES CHIP (E24) 1% 16 K	9
5141032101103	10.5 CIII (124) 170 10 K	7

PART: F9354-31 DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T


COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
SM652101181	RES CHIP (E24) 1% 180 OHM	107
SM652101182	RES CHIP (E24) 1% 1.8 K	19
SM652101183	RES CHIP (E24) 1% 18 K	1
SM652101185	RES CHIP (E24) 1% 1.8 M	4
SM652101201	RES CHIP (E24) 1% 200 OHM	74
SM652101202	RES CHIP (E24) 1% 2 K	2
SM652101220	RES CHIP (E24) 1% 22 OHMS	34
SM652101221	RES CHIP (E24) 1% 220 OHM	33
SM652101223	RES CHIP (E24) 1% 22 K	13
SM652101240	RES CHIP (E24) 1% 24 OHMS	13
SM652101241	RES CHIP (E24) 1% 240 OHM	1
SM652101271	RES CHIP (E24) 1% 270 OHM	5
SM652101272	RES CHIP (E24) 1% 2.7 K	5
SM652101301	RES CHIP (E24) 1% 300 OHM	31
SM652101302 SM652101330	RES CHIP (E24) 1% 3 K RES CHIP (E24) 1% 33 OHMS	13 18
SM652101330 SM652101331	RES CHIP (E24) 1% 33 OHMS RES CHIP (E24) 1% 330 OHM	7
SM652101331 SM652101332	RES CHIP (E24) 1% 3.3 K	23
SM652101332 SM652101333	RES CHIP (E24) 1% 33 K	4
SM652101334	RES CHIP (E24) 1% 330 K	4
SM652101360	RES CHIP (E24) 1 % 36 OHM	4
SM652101390	RES CHIP (E24) 1% 39 OHMS	4
SM652101391	RES CHIP (E24) 1% 390 OHM	16
SM652101392	RES CHIP (E24) 1% 3.9 K	6
SM652101431	RES CHIP (E24) 1% 430 OHM	36
SM652101470	RES CHIP (E24) 47 OHMS	16
SM652101471	RES CHIP (E24) 1% 470 OHM	34
SM652101472	RES CHIP (E24) 1% 4.7 K	4
SM652101474	RES CHIP (E24) 1% 470 K	1
SM652101475	RES CHIP (E24) 1% 4.7 M	5
SM652101510	RES CHIP (E24) 1% 51 OHMS	33
SM652101511	RES CHIP (E24) 1% 510 OHM	4
SM652101512	RES CHIP (E24) 1% 5.1 K	38
SM652101561	RES CHIP (E24) 1% 560 OHM	8
SM652101562	RES CHIP (E24) 1% 5.6 K	12
SM652101621	RES CHIP (E24) 1% 620 OHM	5
SM652101680	RES CHIP (E24) 1% 68 OHMS	15 5
SM652101683 SM652101684	RES CHIP (E24) 1% 68 K RES CHIP (E24) 1% 680 K	1
SM652101750	RES CHIP (E24) 1% 080 K RES CHIP (E24) 1% 75 OHMS	28
SM652101750	RES CHIP (E24) 1% 750 OHM	8
SM652101731 SM652101820	RES CHIP (E24) 1% 730 OHMS RES CHIP (E24) 1% 82 OHMS	4 .
SM652101821	RES CHIP (E24) 1% 820 OHM	1
SM652101822	RES CHIP (E24) 1% 8.2 K	13
SM652101823	RES CHIP (E24) 1% 82 K	1
	` '	

PART: F9354-31 DESC: DESC: MAIN CARD (FRONT END, ADC, TDC) FOR 9354A/T


COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
SM652101824	RES CHIP (E24) 1% 820 K	2
SM652101910	RES CHIP (E24) 1% 91 OHMS	
SM652101911	RES CHIP (E24) 1% 91 OHMS RES CHIP (E24) 1% 910 OHM	1
SM652101913	RES CHIP (E24) 1% 91 K	4
SM652110904	RES CHIP 900K 0.5%	7
SM652113523	RES CHIP (24) 0.3% 52.63 K	
SM652113954	RES CHIP (E24) 0.3% 950 K	4
SM652115062		
SM653206222	RESISTOR NTC 10% 2.2K OHM	
SM654101000		27
	CAP CERA CHIP 5% 4700 PF	4
SM661205822	CAP CERA CHIP 8200PF	5
SM661207102	CAP CERA CHIP 8200PF CAP CERA CHIP 10% .001UF	8
SM661207103	CAP CERA CHIP 20% .01UF (0	457
	CAP CERA CHIP 20% .1 UF	169
SM661207223		
SM661255010	CAP CERA CHIP 1.0 PF	1
SM661255010 SM661255022	CAP CERA CHIP 2.2 PF	1
SM661255027	CAP CERA CHIP 2.7 PF	1
	CAP CERA CHIP 3.3 PF	5
	CAP CERA CHIP 5.6 PF	10
SM661255100	CAP CERA CHIP 10PF	2
SM661255101	CAP CERA CHIP 5% 100 PF	10
SM661255102	CAP CERA CHIP 5% 1000 PF	
SM661255121		8
SM661255150		2
SM661255152	CAP CERA CHIP 5% 1500 PF	4
SM661255180	CAP CERA CHIP 5% 18PF	9
SM661255181		1
SM661255270		5
	CAP CERA CHIP 5% 33 PF	5
	CAP CERA CHIP 56PF	2
SM661255820	CAP CERA CHIP 5% 82 PF	4
SM661255821	CAP CERA CHIP 5% 820 PF	1
SM661256120	CAP CERA CHIP 10% 12 PF	4
SM661446474	CAP CERA CHIP 10% .47 UF	2
SM661495561	CAP CERA CHIP 5% 560 PF	5
SM661726103	CAP CERA CHIP 10% .01UF (2	15
SM666247106	CAP MOLD TANT CHIP 10 UF	4
SM666257336	CAP MOLD TANT CHIP 33 UF	4
SM666327225	CAP MOLD TANT CHIP 2.2 UF	43
SM666377226	CAP MOLD TANT CHIP 22 UF	4
SM666427105	CAP MOLD TANT CHIP 1 UF	5
SM669080181	CHIP FERRITE BEAD	8
51,100,000101		3

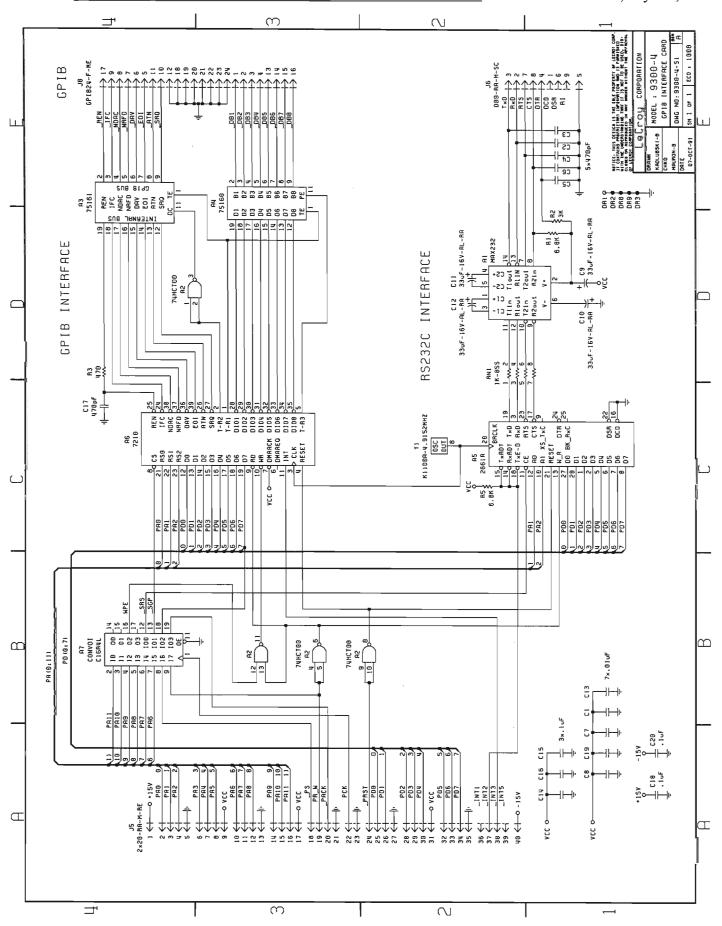

Page 8-157

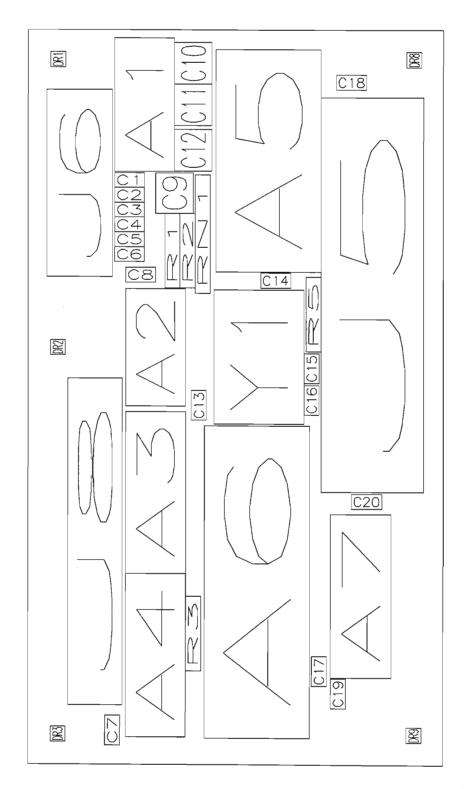

9300-4 REV:D

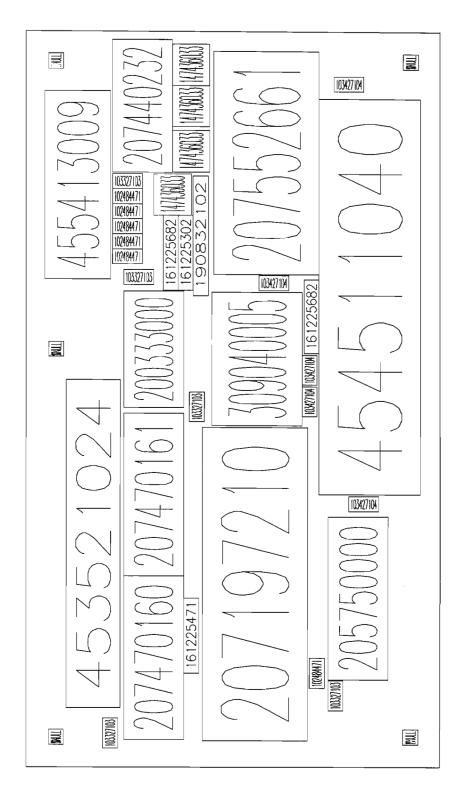

9300-4 REV:D




9300-4 REV:D

PART: F9300-4 DESC: GPIB + RS232 INTERFACE CARD


Location	Part Number	Description
A1	207440232	MAX232
A2	200333000	74HCT00
A3	207470161	75161
A 4	207470160	75160
A5	207552661	2661A
A6	207197210	7210
A 7	205750000	C16R4L
C1	103327103	.01uF
C2	102484471	470pF
C3	102484471	470pF
C4	102484471	470pF
C5	102484471	470pF
C6	102484471	470pF
C7	103327103	.01uF
C8	103327103	.01uF
C9	147436033	33uF-16V-AL-RA
C10	147436033	33uF-16V-AL-RA
C11	147436033	33uF-16V-AL-RA
C12	147436033	33uF-16V-AL-RA
C13	103327103	.01uF
C14	103427104	.1uF
C15	103427104	.1uF
C16	103427104	.luF
C17	102484471	470pF
C18	103427104	.1uF
C19	103327103	.01uF
C20	103427104	.1uF
J5	454511040	2x20-RA-M-RE
J6	455413009	DB9-RA-M-SC
Ј8	453521024	GPIB24-F-ME
R1	161225682	6.8K
R2	161225302	3K
R3	161225471	470
R5	161225682	6.8K
RN1	190832102	1K-8SS
Y 1	309040005	K1100A-4.9152MHZ

PART: F9300-4 DESC: GPIB +RS232 INTERFACE CARD


COMPONENT	PART DESCRIPTION Q	TY PER ASSEMBLY
102484471	CAP CERA DISC 100V 470 PF	6
103327103	CAP CERA MONO 50V .01 UF	5
103427104	CAP CERA MONO 100V .1 UF	5
147436033	CAP ALUM METAL CAN 33 UF	4
161225302	RES COMP 1/8W 5% 3 K	1
161225471	RES COMP 1/8W 5% 470 OHMS	1
161225682	RES CARBON FILM 6.8 K	2
190832102	RES NETWORK 1 K	1
200333000	IC QUAD 2-IN NAND HCT00	1
205750000	IC AND-OR GATE ARRAY 16V8	1
207197210	IC BUS INTERF CONTR 7210	1
207440232	IC XMTR/RCVR MAX 232	1
207470160	IC OCTAL BUS XCVR 75160A	1
207470161	IC OCTL BUS XCEIR 75161A	1
207552661	IC INTERFACE 2661A	1
309040005	CRYSTAL OSCIL. 4.9152MHZ	1
453521024	CONN RT ANGLE IEEE FEM 24	1
454511040	HDR SOLD TAIL/MALE/40/RT	1
455413009	CONN RT ANGLE MALE 9 S-CLIP	1
455980002	MOUNTING HDW FOR CONN SHE	LL 2
550130108	SCREW CYL HD M3X8	2
550430106	SCREW CYL HD PHIL M3X6	1
551430400	WASHER SHAKEPROOF M3	1
709300411	GPIB-RS232 INTERFACE BRACKET	ΓD 1
709300421	LABEL RS232-IEEE488-2 A	1
719300403	PC BD PREASS'Y 9300-4 D	1

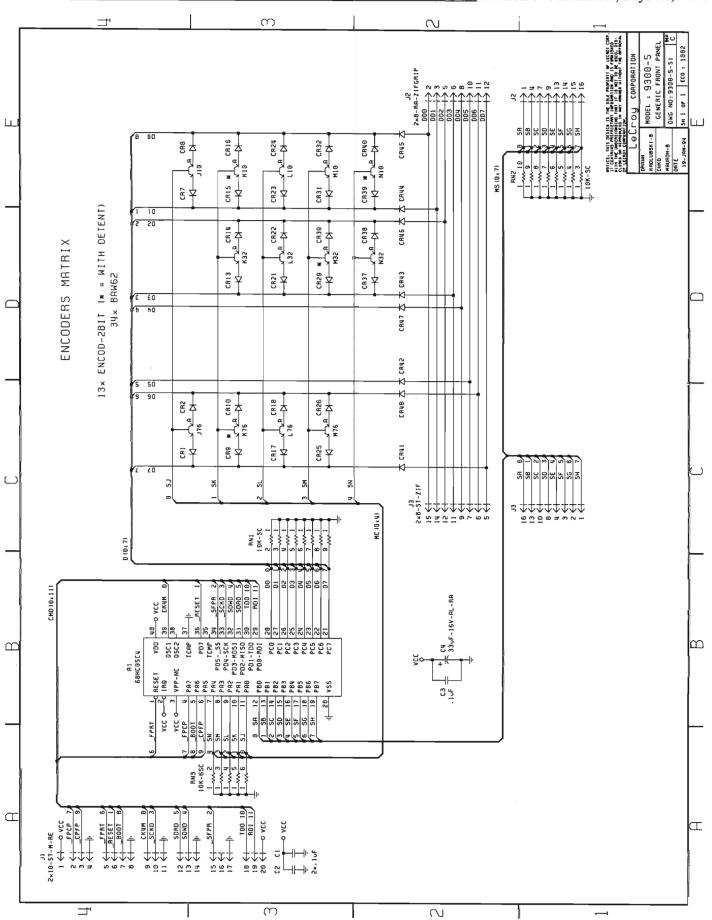


Page 8-163

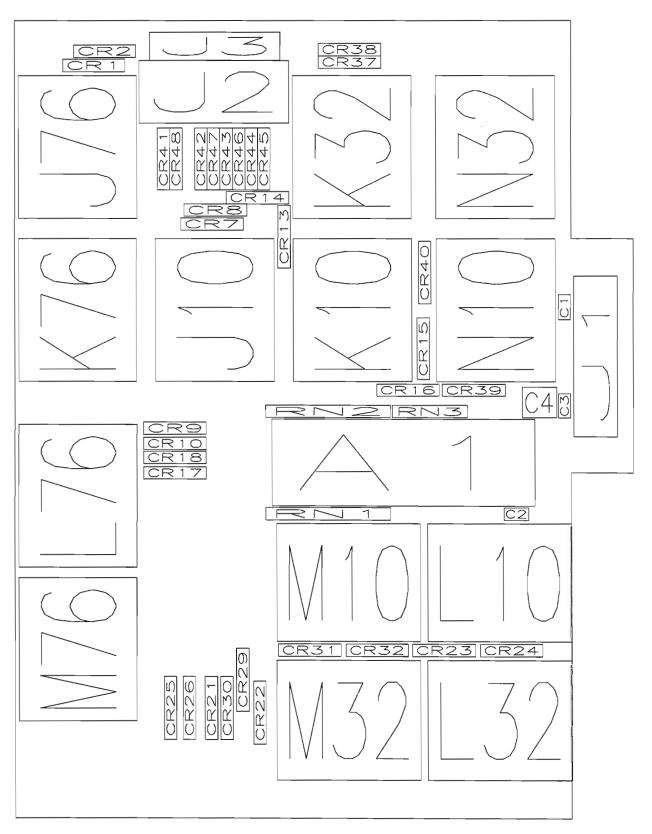


9300-5 Rev:B

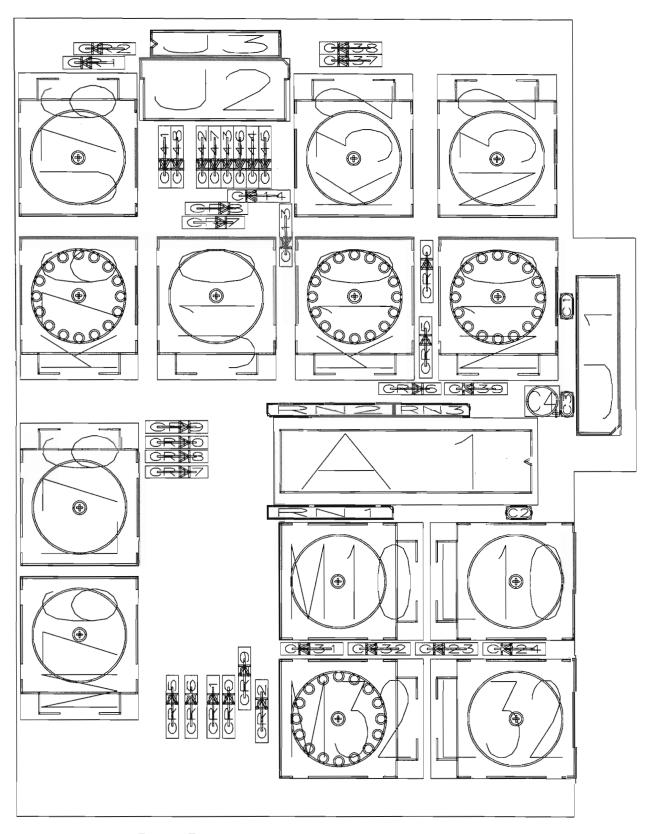

9300-5 Rev:B

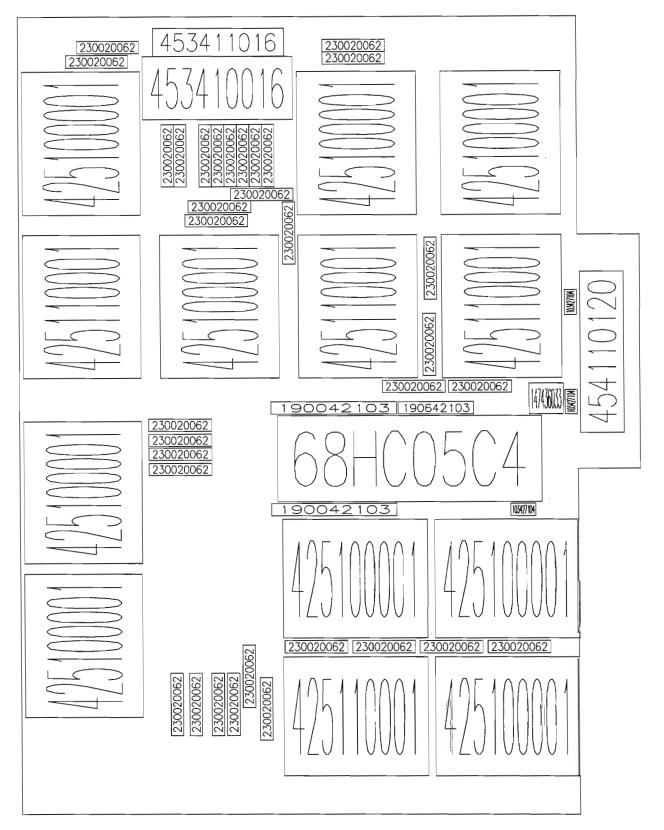


9300-5 Rev:B

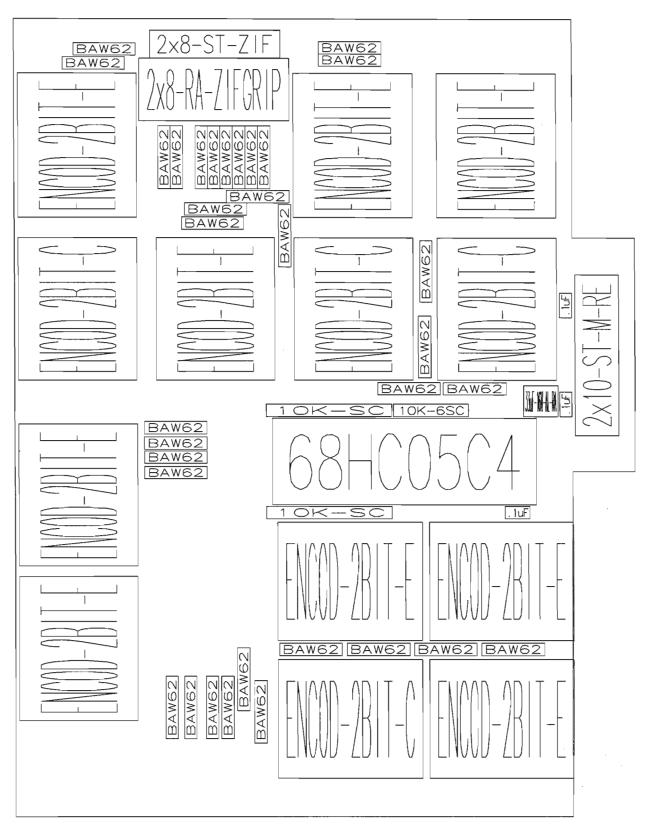


9300-5 Rev:B

PART: F9354-5 DESC: Quad Channel Front Panel


Location	n Part Number	Description	Location	Part Number	Description
A1	68HC05C4	68HC05C4	CR15	230020062	BAW62
C1,2,3	103427104	.1uF	CR16	230020062	BAW62
C4	147436033	33uF-16V	CR17	230020062	BAW62
J1	454110120	2x10-ST-M-RE	CR18	230020062	BAW62
J2	453410016	2x8-RA-ZIFGRIP	CR21	230020062	BAW62
J3	453411016	2x8-ST-ZIF	CR22	230020062	BAW62
J10	425100001	ENCOD-2BIT-E	CR23	230020062	BAW62
J76	425100001	ENCOD-2BIT-E	CR24	230020062	BAW62
K10	425110001	ENCOD-2BIT-C	CR25	230020062	BAW62
K32	425100001	ENCOD-2BIT-E	CR26	230020062	BAW62
K76	425110001	ENCOD-2BIT-C	CR29	230020062	BAW62
L10	425100001	ENCOD-2BIT-E	CR30	230020062	BAW62
L32	425100001	ENCOD-2BIT-E	CR31	230020062	BAW62
L76	425100001	ENCOD-2BIT-E	CR32	230020062	BAW62
M10	425100001	ENCOD-2BIT-E	CR37	230020062	BAW62
M32	425110001	ENCOD-2BIT-C	CR38	230020062	BAW62
M76	425100001	ENCOD-2BIT-E	CR39	230020062	BAW62
N10	425110001	ENCOD-2BIT-C	CR40	230020062	BAW62
N32	425100001	ENCOD-2BIT-E	CR41	230020062	BAW62
CR1	230020062	BAW62	CR42	230020062	BAW62
CR2	230020062	BAW62	CR43	230020062	BAW62
CR7	230020062	BAW62	CR44	230020062	BAW62
CR8	230020062	BAW62	CR45	230020062	BAW62
CR9	230020062	BAW62	CR46	230020062	BAW62
CR10	230020062	BAW62	CR47	230020062	BAW62
CR13	230020062	BAW62	CR48	230020062	BAW62
CR14	230020062	BAW62	RN1,2,3	190042103	10K-SC
COMPONENT		PART DESCRIPTION		QTY PER ASS	SEMBLY
103427	104	CAP CERA MONO 100'	V .1 UF	3	
1474360	033	CAP ALUM METAL CA		1	
190042		RESISTOR NETWORK		2	
190642		RESISTOR NETWORK		1	
2300200		DIODE SWITCHING BA		34	
4251000		ENCODER DIGITAL 24		8	
4251100		ENCODER DIGITAL 24		3	
4534100		CONN FLEX CIRCUIT		1	
454110		HDR SLD TAIL/MALE/			
5544350		SCREW PT PHIL KA35		1	
7093XX		KNOB 10MM DIAMET		7	
7093XX		KNOB 14MM DIAMET		4	
719300		PC BD PREASS'Y 9300-		1	
729354		FP KEYBOARD ASS'Y		1	
MFP414		IC FRT PANEL PROCE			
1411 1 4 7.	•	ICTRITANEL I ROCE	SSOK WII	1 - 1 - 1	

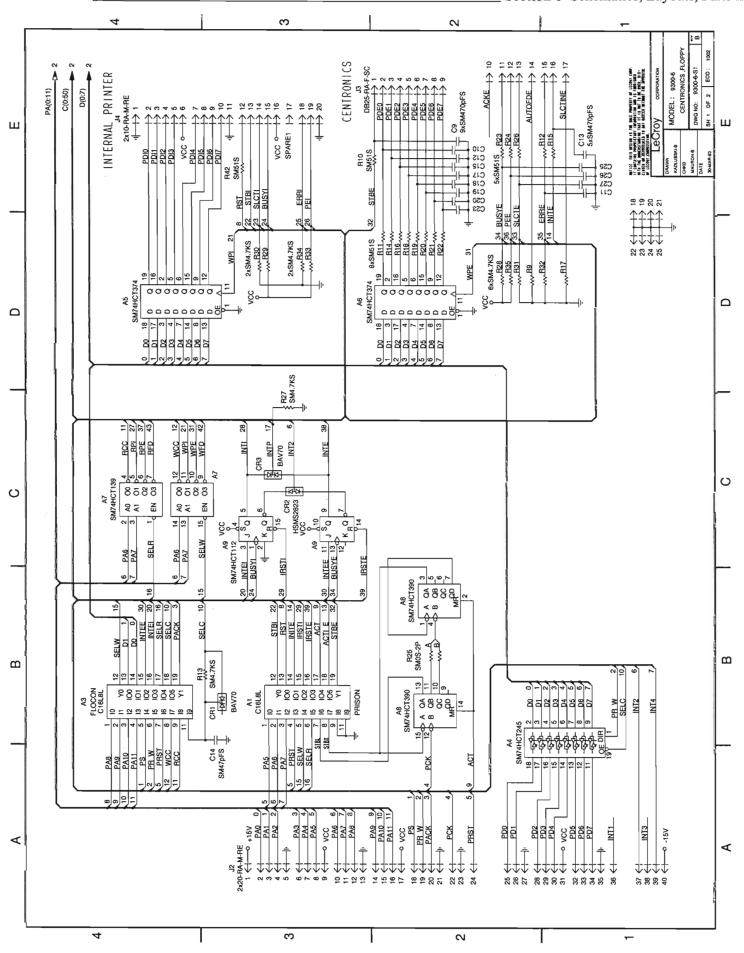


Page 8-169

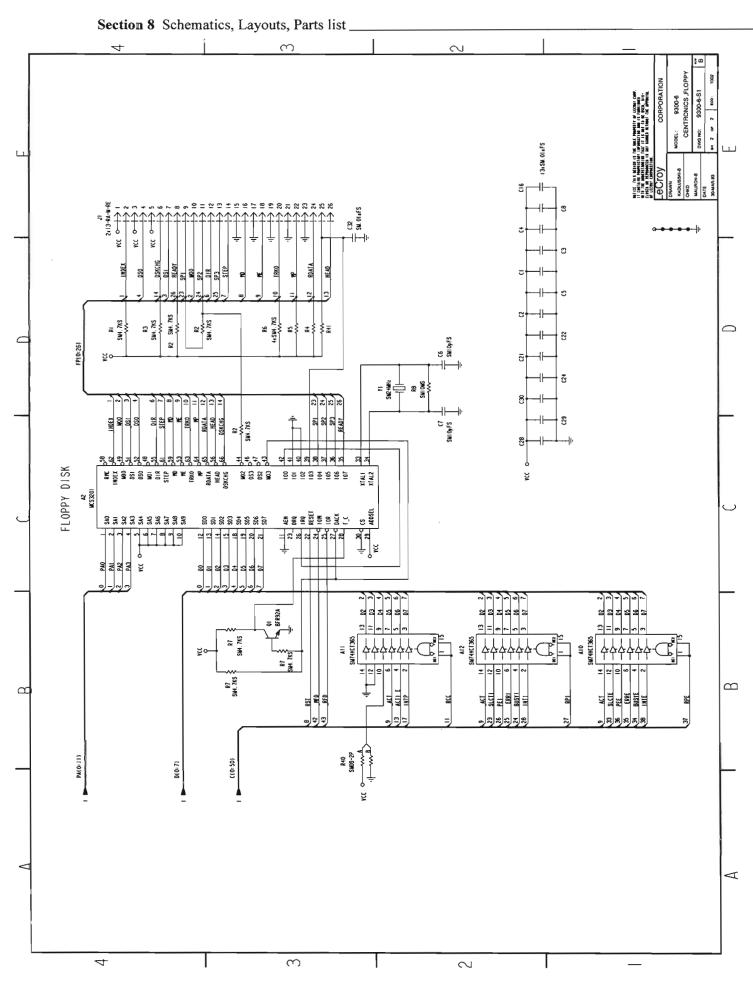


Page 8-170

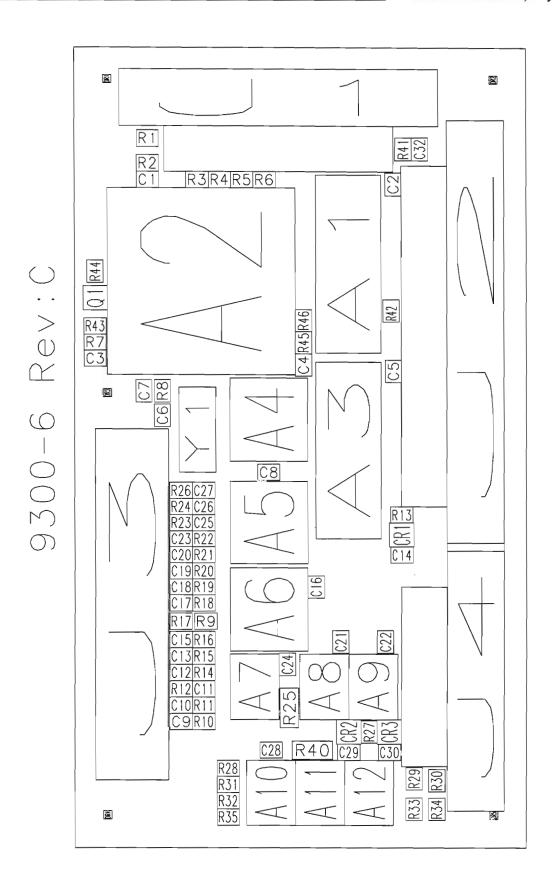

Page 8-171

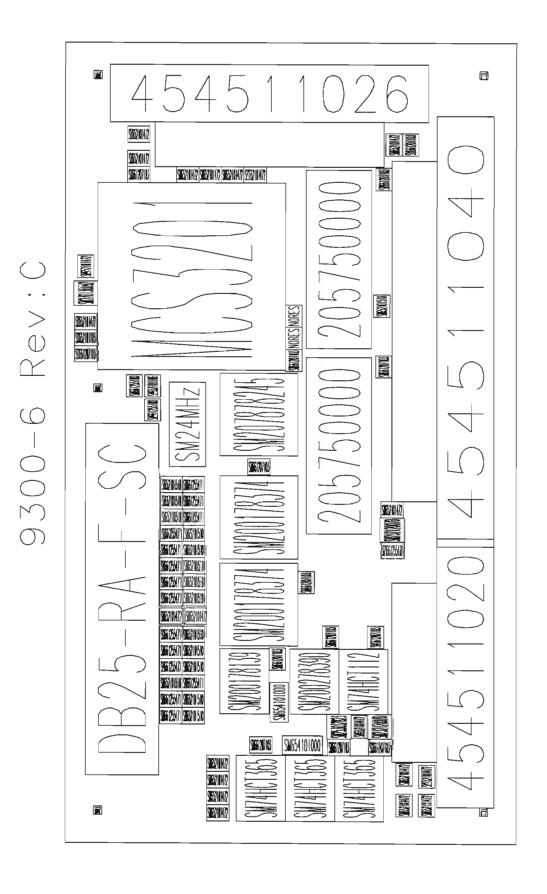

Page 8-172

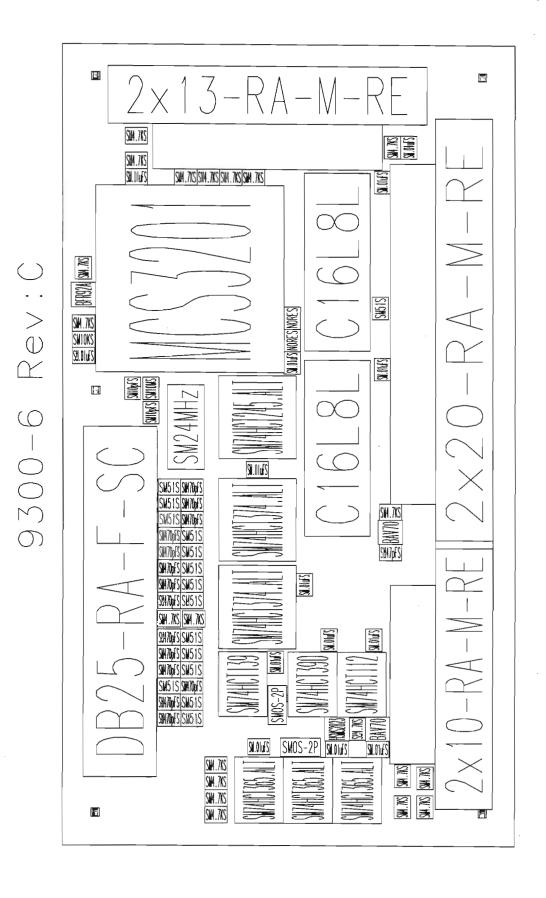

Page 8-173

PART: F9300-6 DESC: CENTRONICS, FLOPPY AND PRINTER INTERFACE


Locatio	on Part Number	Description	Location	n Part Number	Description
A 1	205750000	C16L8L	CR2	SM253032823	HSMS2823
A2	SM227063201	MCS3201	CR3	SM232120070	BAV70
A 3	205750000	C16L8L	J1	454511026	2x13-RA-M-RE
A 4	SM207878245	SM74HCT245	J2	454511040	2x20-RA-M-RE
A 5	SM200178374	SM74HCT374	J3	454520025	DB25-RA-F-SC
A6	SM200178374	SM74HCT374	J4	454511020	2x10-RA-M-RE
A 7	SM200178139	SM74HCT139	Q1	SM270130092	BFR92A
A8	SM200278390	SM74HCT390	R1	SM652101472	SM4.7KS
A 9	SM201170112	SM74HCT112	R2	SM652101472	SM4.7KS
A10	SM207170036	SM74HCT365	R3	SM652101472	SM4.7KS
A11	SM207170036	SM74HCT365	R4	SM652101472	SM4.7KS
A12	SM207170036	SM74HCT365	R5	SM652101472	SM4.7KS
C1	SM661207103	SM.01uF	R6	SM652101472	SM4.7KS
C2	SM661207103	SM.01uF	R 7	SM652101103	SM10KS
C3	SM661207103	SM.01uF	R8	SM652101106	SM10MS
C4	SM661207103	SM.01uF	R9	SM652101472	SM4.7KS
C5	SM661207103	SM.01uF	R10	SM652101510	SM51S
C6	SM661255100	SM10pF	R11	SM652101510	SM51S
C7	SM661255100	SM10pF	R12	SM652101510	SM51S
C8	SM661207103	SM.01uF	R13	SM652101472	SM4.7KS
C9	SM661255471	SM470pF	R14	SM652101510	SM51S
C10	SM661255471	SM470pF	R15	SM652101510	SM51S
C11	SM661255471	SM470pF	R16	SM652101510	SM51S
C12	SM661255471	SM470pF	R17	SM652101472	SM4.7KS
C13	SM661255471	SM470pF	R18	SM652101510	SM51S
C14	SM661255470	SM47pF	R19	SM652101510	SM51S
C15	SM661255471	SM470pF	R20	SM652101510	SM51S
C16	SM661207103	SM.01uF	R21	SM652101510	SM51S
C17	SM661255471	SM470pF	R22	SM652101510	SM51S
C18	SM661255471	SM470pF	R23	SM652101510	SM51S
C19	SM661255471	SM470pF	R24	SM652101510	SM51S
C20	SM661255471	SM470pF	R25	SM654101000	SM0S-2P
C21	SM661207103	SM.01uF	R26	SM652101510	SM51S
C22	SM661207103	SM.01uF	R27	SM652101310	SM4.7KS
C23	SM661255471	SM470pF	R28	SM652101472	SM4.7KS
C24	SM661207103	SM.01uF	R29	SM652101472	SM4.7KS
C25	SM661255471	SM470pF	R30	SM652101472	SM4.7KS
C26	SM661255471	SM470pF	R31	SM652101472	SM4.7KS
C27	SM661255471	•			
C27	SM661207103	SM470pF	R32	SM652101472	SM4.7KS
C28		SM.01uF	R33	SM652101472	SM4.7KS
	SM661207103	SM.01uF	R34	SM652101472	SM4.7KS
C30	SM661207103	SM.01uF	R35	SM652101472	SM4.7KS
C32	SM661207103	SM.01uF	R40	SM654101000	SM0S-2P
CR1	SM232120070	BAV70	R41	SM652101472	SM4.7KS

PART: F9300-6 DESC: CENTRONICS/FLOPPY/PRINTER INTERFACE


Location	Part Number	Description
R42	SM652101510	SM51S
R43	SM652101472	SM4.7KS
R44	SM652101472	SM4.7KS
Y 1	SM310900024	SM24MHz


PART: F9300-6 DESC: CENTRONICS/FLOPPY/PRINTER INTERFACE


Component	Part Description	Qty Per	Assembly
205750000	IC AND-OR GATE ARRAY 16V8		2
454511020	HDR SOLD TAIL/MALE 20		1
454511026	HDR SOLD TAIL/MALE 26		1
454511040	HDR SOLD TAIL/MALE/40/RT		1
454520025	CONN RT ANGLE FEM 25 S-CLIP		1
455980002	MOUNTING HDW FOR CONN SHI	ELL	2
550430106	SCREW CYL HD PHIL M3X6		4
551430400	WASHER SHAKEPROOF M3		4
709300611	CENTR. FLOPPY INTERF. BRACK	ET B	1
709300621	LABEL PARA-INTERF. CENTRON	ICS A	1
719300603	PC BD PREASS'Y 9300-6 C		1
SM200178139	IC 2-TO-4-LINE DEC HCT139		1
SM200178374	IC D-TYP FLOP 74HCT374		2
SM200278390	IC 4-BIT RIPPLE COUNTER		1
SM201170112	IC DUAL JK FF WITH SET-RESET		1
SM207170036	IC HEX BUFFER 3-STATE		3
SM207878245	IC BUS TRANSCVR HCT 245		1
SM227063201	IC IBM PC FLOPPY DISK CONTR.		1
SM232120070	DIODE ARRAY BAV70		1
SM253032823	DIODE SCHOTTKY 2823		Ţ
SM270130092	TRANSISTOR NPN BFR92A		1
SM310900024	CRYSTAL 24 MHZ SMD		1
SM652101103	RES CHIP (E24) 1% 10 K		1
SM652101106	RES CHIP (E24) 1% 10 MEG		1
SM652101472	RES CHIP (E24) 1% 4.7 K		21
SM652101510	RES CHIP (E24) 1% 51 OHMS		15
SM654101000	CHIP JUMPER ZERO OHMS		2
SM661207103	CAP CERA CHIP 20% .01UF		14
SM661255100	CAP CERA CHIP 10PF		2
SM661255470	CAP CERA CHIP 47PF		1
SM661255471	CAP CERA CHIP 5% 470 PF		14

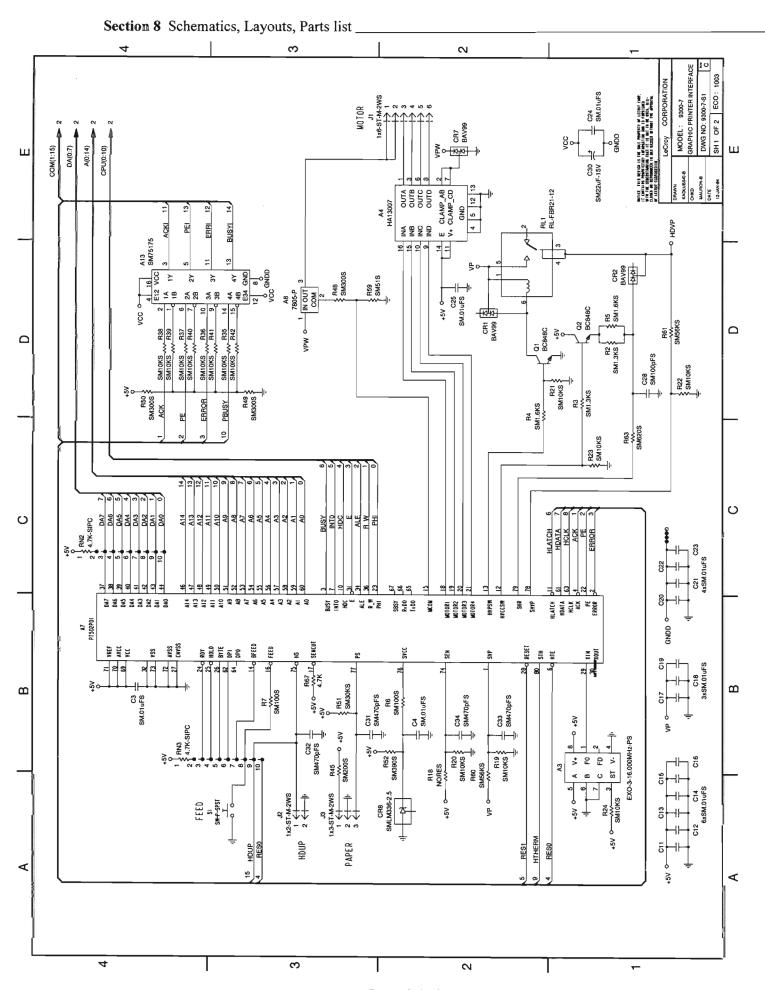


Page 8-176

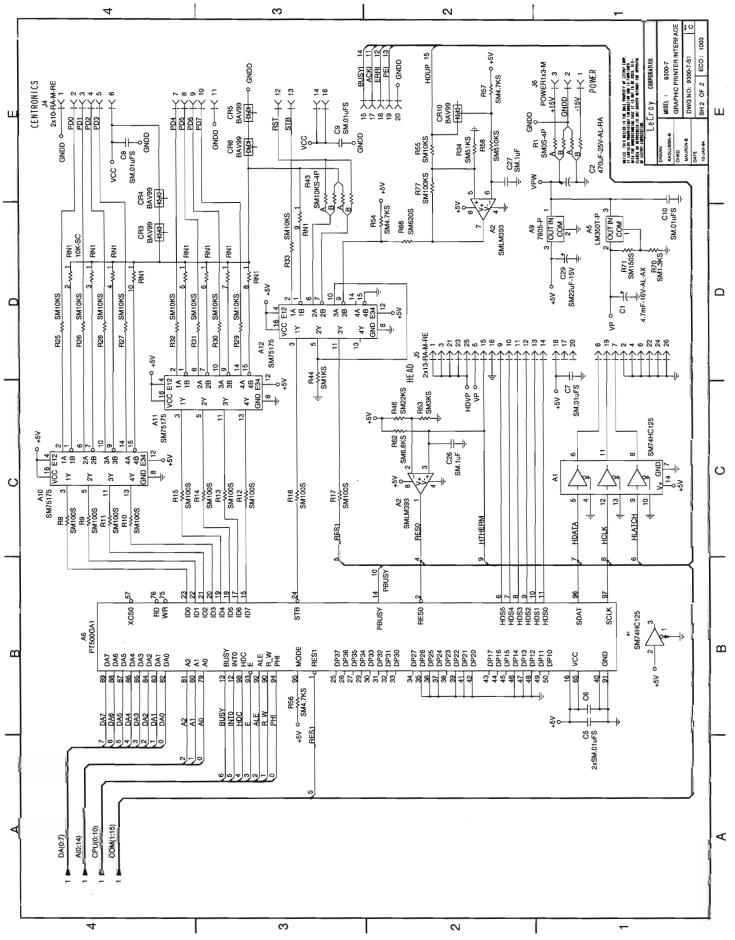

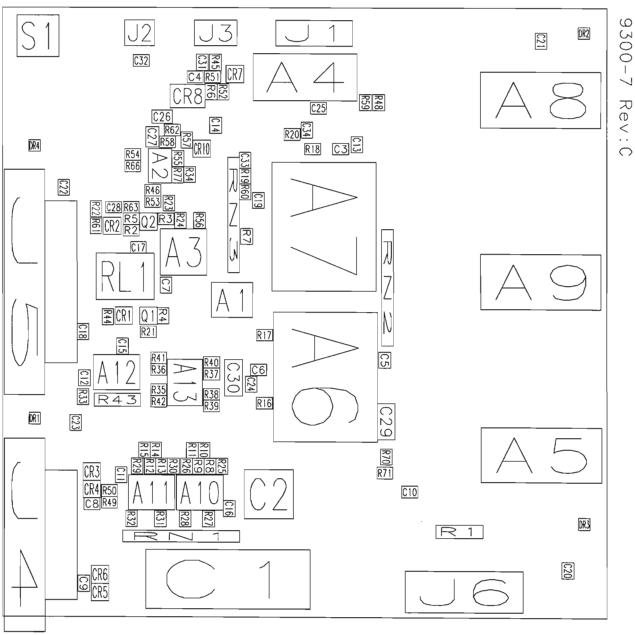

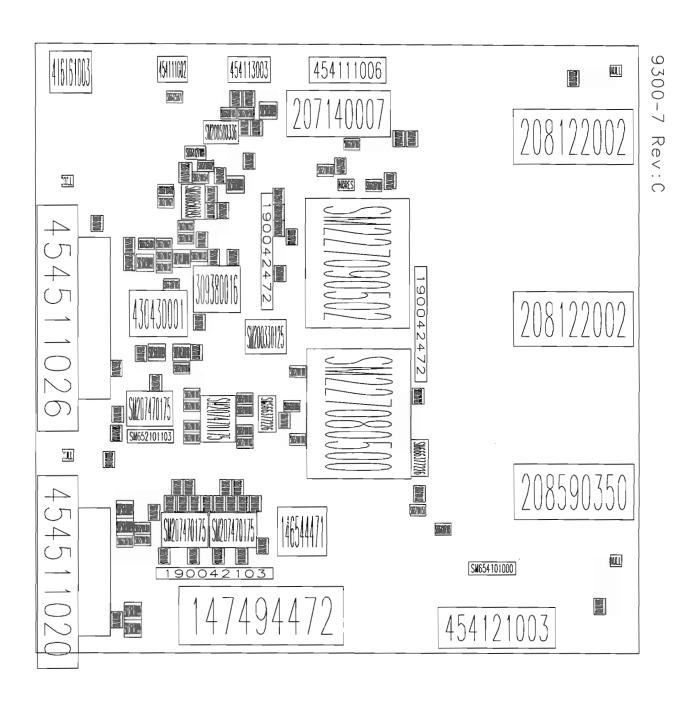

Page 8-179

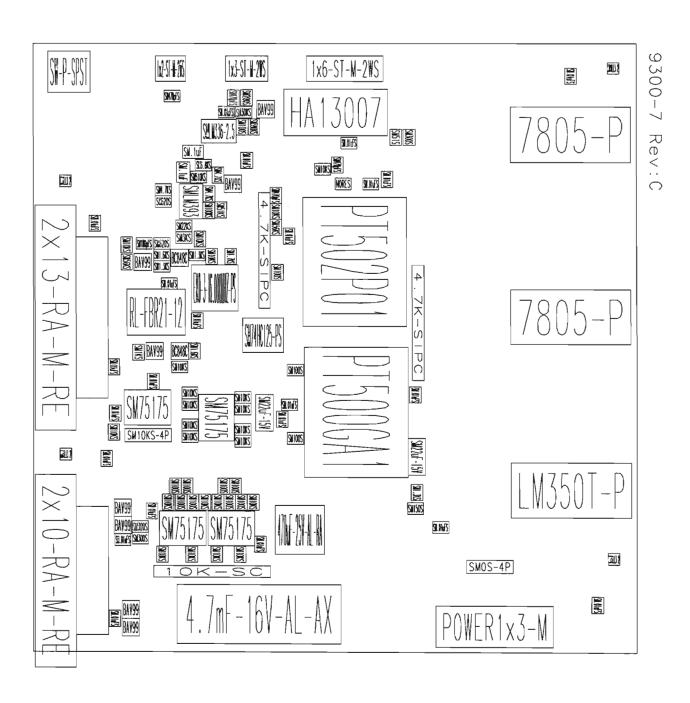

Page 8-180

PART: F9300-7 DESC: LTP 5446 PRINTER CONTROLLER

Locatio	on Part Number	Description	Location	Part Number	Description
A 1	SM200330125	SM74HC125	C32	SM661255471	SM470pF
A2	SM208650393	SMLM393	C33	SM661255471	SM470pF
A 3	309380016	16.000MHZ	C34	SM661255471	SM470pF
A 4	207140007	HA13007	CR1	SM236030099	BAV99
A 5	208590350	LM350T-P	CR2	SM236030099	BAV99
A6	SM227080500	PT500GA1	CR3	SM236030099	BAV99
A 7	SM227090501	PT501P01	CR4	SM236030099	BAV99
A8	208122002	7805-P	CR5	SM236030099	BAV99
A9	208122002	7805-P	CR6	SM236030099	BAV99
A10	SM207470175	SM75175	CR7	SM236030099	BAV99
A 11	SM207470175	SM75175	CR8	SM208580336	SMLM336-2.5
A12	SM207470175	SM75175	CR10	SM236030099	BAV99
A13	SM207470175	SM75175	J1	454111006	1x6-ST-M-2WS
C1	147494472	4.7mF-16V	J2	454111002	1x2-ST-M-2WS
C2	146544471	470uF-25V	<i>3</i> 3	454113003	1x3-ST-M-2WS
C3	SM661207103	SM.01uF	J4	454511020	2x10-RA-M-RE
C4 C5	SM661207103	SM.01uF	J5	454511026	2x13-RA-M-RE
C6	SM661207103 SM661207103	SM.01uF SM.01uF	J6	454121003 SM270330848	POWER1x3-M BC848C
C7	SM661207103	SM.01uF	Q1 Q2	SM270330848	BC848C
C8	SM661207103	SM.01uF	R1	SM654101000	SM0S-4P
C9	SM661207103	SM.01uF	R2	SM652101132	SM1.3KS
C10	SM661207103	SM.01uF	R3	SM652101132	SM1.3KS
C11	SM661207103	SM.01uF	R4	SM652101162	SM1.6KS
C12	SM661207103	SM.01uF	R5	SM652101162	SM1.6KS
C13	SM661207103	SM.01uF	R6	SM652101101	SM100S
C14	SM661207103	SM.01uF	R7	SM652101101	SM100S
C15	SM661207103	SM.01uF	R8	SM652101101	SM100S
C16	SM661207103	SM.01uF	R9	SM652101101	SM100S
C17	SM661207103	SM.01uF	R10	SM652101101	SM100S
C18	SM661207103	SM.01uF	R11	SM652101101	SM100S
C19	SM661207103	SM.01uF	R12	SM652101101	SM100S
C20	SM661207103	SM.01uF	R13	SM652101101	SM100S
C21	SM661207103	SM.01uF	R14	SM652101101	SM100S
C22	SM661207103	SM.01uF	R15	SM652101101	SM100S
C23	SM661207103	SM.01uF	R16	SM652101101	SM100S
C24	SM661207103	SM.01uF	R17	SM652101101	SM100S
C25	SM661207103	SM.01uF	R19	SM652101103	SM10KS
C26	SM661127104	SM.luF	R20	SM652101103	SM10KS
C27	SM661127104	SM.1uF	R21	SM652101103	SM10KS
C28	SM661255101	SM100pF	R22	SM652101103	SM10KS
C29	SM666377226	SM22uF-15V	R23	SM652101103	SM10KS
C30	SM666377226	SM22uF-15V	R24	SM652101103	SM10KS
C31	SM661255471	SM470pF	R25	SM652101103	SM10KS

PART: F9300-7 DESC: LTP 5446 PRINTER CONTROLLER

Location	Part Number	Description	Location	n Part Number	Description
		·			
R26	SM652101103	SM10KS	R50	SM652101301	SM300S
R27	SM652101103	SM10KS	R51	SM652101303	SM30KS
R28	SM652101103	SM10KS	R52	SM652101391	SM390S
R29	SM652101103	SM10KS	R53	SM652101302	SM3KS
R30	SM652101103	SM10KS	R54	SM652101472	SM4.7KS
R31	SM652101103	SM10KS	R55	SM652101103	SM10KS
R32	SM652101103	SM10KS	R56	SM652101472	SM4.7KS
R33	SM652101103	SM10KS	R57	SM652101472	SM4.7KS
R34	SM652101513	SM51KS	R58	SM652101514	SM510KS
R35	SM652101103	SM10KS	R59	SM652101510	SM51S
R36	SM652101103	SM10KS	R60	SM652101563	SM56KS
R37	SM652101103	SM10KS	R61	SM652101563	SM56KS
R38	SM652101103	SM10KS	R62	SM652101682	SM6.8KS
R39	SM652101103	SM10KS	R63	SM652101621	SM620S
R40	SM652101103	SM10KS	R66	SM652101621	SM620S
R41	SM652101103	SM10KS	R70	SM652101132	SM1.3KS
R42	SM652101103	SM10KS	R71	SM652101151	SM150S
R43	SM652101103	SM10KS-4P	R77	SM652101104	SM100KS
R44	SM652101102	SM1KS	RL1	430430001	RL-FBR21-12
R45	SM652101201	SM200S	RN1	190042103	10K-SC
R46	SM652101223	SM22KS	RN2	190042472	4.7K-SIPC
R48	SM652101301	SM300S	RN3	190042472	4.7K-SIPC
R49	SM652101301	SM300S	S 1	416161003	SW-P-SPST


PART: F9300-7 DESC: LTP 5446 PRINTER CONTROLLER

Component	Part Description Qty	Per Assembly
		
146544471	CAP MINI ALUM 20% 470UF	1
147494472	CAP ALU COMPACT AXIAL 4700 UI	F 1
190042103	RESISTOR NETWORK 10 K	1
190042472	RESISTOR NETWORK 4.7 K	. 2
207140007	IC QUAD STEP MOTOR DRIVER	1
208122002	IC VOLT REG POS UA7805	2
208590350	IC ADJ POWER REG 3A LM350	1
309380016	CRYSTAL OSC (PROGR) 16 MHZ	1
416161003	SWITCH PUSHBUTTON SPST	1
430430002	RELAY 1 FORM C SPDT	1
454111002	HEADER STRAIGHT 2-PINS	1
454111006	HEADER STRAIGHT 6-PINS	1
454113003	HEADER STRAIGHT 3-PINS	1
454121003	BLOC FOR SOCKETS 3-PIN	1
454511020	HDR SOLD TAIL/MALE 20	1


PART: F9300-7 DESC: LTP 5446 PRINTER CONTROLLER

Component	Part Description	Qty Per Assembly
454511026	HDR SOLD TAIL/MALE 26	1
554435401	RIVET "RIVSCREW" M 3.5	3
719300703	PC BD PREASS'Y 9300-7	1
SM200330125	IC QUAD BUFFER 74HC125	1
SM207470175	IC QUAD DIFF LINE RECEIVER	4
SM208580336	IC REF DIODE LM336-2.5V	1
SM208650393	IC DUAL VOLT COMP LM393M	1
SM227080500	IC THERM PRINTER GATE ARR	AY 1
SM227090501	IC THERM PRINTER CPU	1
SM236030099	DIODE SO-PKG BAV99	8
SM270330848	TRANSISTOR NPN BC848C	2
SM652101101	RES CHIP (E24) 1% 100 OHM	12
SM652101102	RES CHIP (E24) 1% 1 K	1
SM652101103	RES CHIP (E24) 1% 10 K	25
SM652101104	RES CHIP (E24) 1% 100 K	1
SM652101132	RES CHIP (E24) 1% 1.3 K	3
SM652101151	RES CHIP (E24) 1% 150 OHM	1
SM652101162	RES CHIP (E24) 1% 1.6 K	2
SM652101201	RES CHIP (E24) 1% 200 OHM	1
SM652101223	RES CHIP (E24) 1% 22 K	1
SM652101301	RES CHIP (E24) 1% 300 OHM	3
SM652101302	RES CHIP (E24) 1% 3 K	1
SM652101303	RES CHIP (E24) 1% 30 K	1
SM652101391	RES CHIP (E24) 1% 390 OHM	1
SM652101472	RES CHIP (E24) 1% 4.7 K	3
SM652101510	RES CHIP (E24) 1% 51 OHMS	1
SM652101513	RES CHIP (E24) 1% 51 K	1
SM652101514	RES CHIP (E24) 1% 510 K	1
SM652101563	RES CHIP (E24) 1% 56 K	2
SM652101621	RES CHIP (E24) 1% 620 OHM	2
SM652101682	RES CHIP (E24) 1% 6.8 K	1
SM654101000	CHIP JUMPER ZERO OHMS	1
SM661127104	CAP CERA CHIP 20% .1 UF	2
SM661207103	CAP CERA CHIP 20% .01UF	23
SM661255101	CAP CERA CHIP 5% 100 PF	1
SM661255471	CAP CERA CHIP 5% 470 PF	4
SM666377226	CAP MOLD TANT CHIP 22 UF	2


Page 8-184

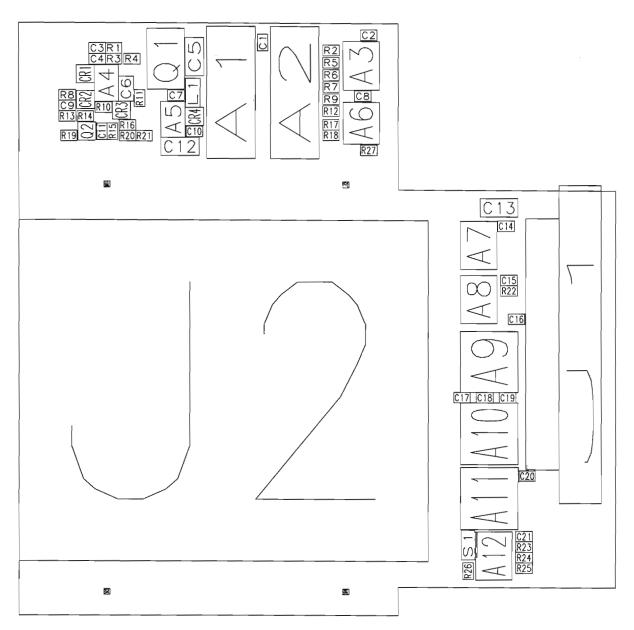

9300-8 Rev:B

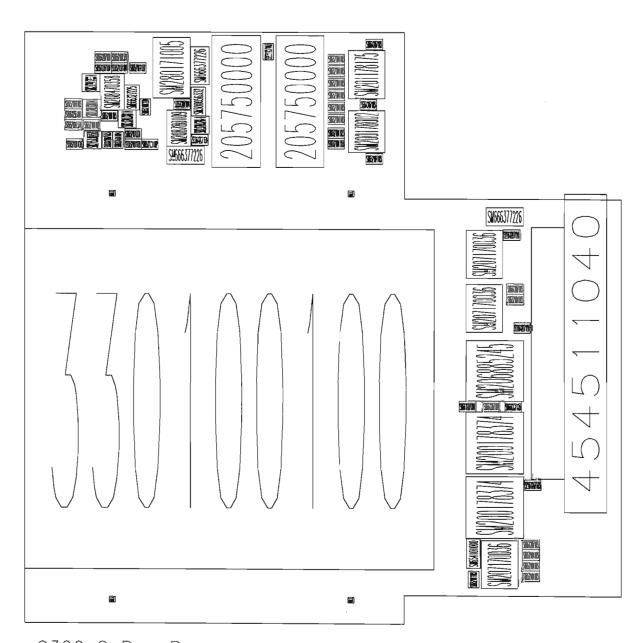

9300-8 Rev:B

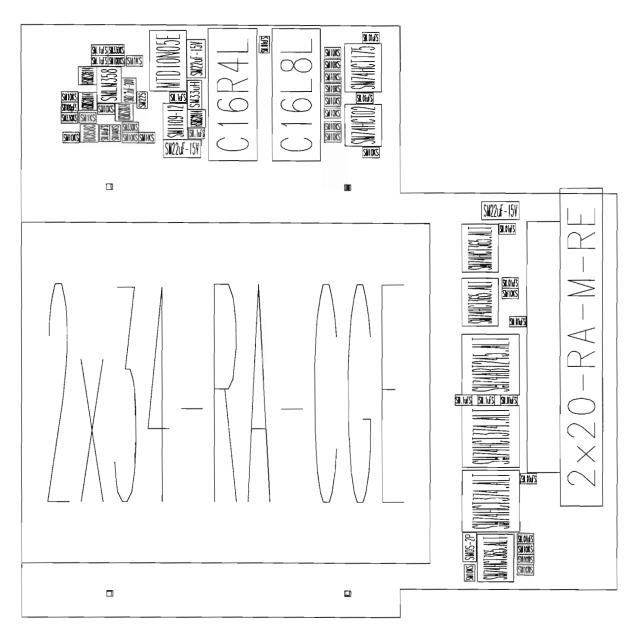

9300-8 Rev:B


PART: F9300-8 DESC: PCMCIA 3 HARD DISK CONTROLLER

Locatio	n Part Number	Description	Locatio	n Part Number	Description
			L1	SM300056332	SM33uH
A 1	205750000	C16R4L	Q1	SM280171005	MTD10N05E
A2	205750000	C16L8L	Q2	SM275330858	BC858C
A 3	SM201178175	SM74HCT175	R1	SM652101334	SM330KS
A 4	SM208470358	SMLM358	R2	SM652101103	SM10KS
A 5	SM208780109	SM1109-12	R3	SM652101104	SM100KS
A6	SM200178002	SM74HCT02	R4	SM652101102	SM1KS
A 7	SM207170036	SM74HCT365	R5	SM652101103	SM10KS
A8	SM207170036	SM74HCT365	R6	SM652101103	SM10KS
A9	SM206885245	SM74ABT245	R7	SM652101103	SM10KS
A10	SM200178374	SM74HCT374	R8	SM652101103	SM10KS
A 11	SM200178374	SM74HCT374	R9	SM652101103	SM10KS
A12	SM207170036	SM74HCT365	R10	SM652101103	SM10KS
C1	SM661207103	SM.01uFS	R11	SM652101220	SM22S
C2	SM661207103	SM.01uFS	R12	SM652101103	SM10KS
C3	SM661207104	SM.1uFS	R13	SM652101334	SM330KS
C4	SM661207104	SM.1uFS	R14	SM652101102	SM1KS
C5	SM666377226	SM22uF-15V	R15	SM652101104	SM100KS
C6	SM666327225	SM2.2uF-20V	R16	SM652101334	SM330KS
C7	SM661207104	SM.1uFS	R17	SM652101103	SM10KS
C8	SM661207103	SM.01uFS	R18	SM652101103	SM10KS
C9	SM661255101	SM100pFS	R19	SM652101103	SM10KS
C10	SM661207104	SM.1uFS	R20	SM652101103	SM10KS
C11	SM661207103	SM.01uFS	R21	SM652101102	SM1KS
C12	SM666377226	SM22uF-15V	R22	SM652101103	SM10KS
C13	SM666377226	SM22uF-15V	R23	SM652101103	SM10KS
C14	SM661207103	SM.01uFS	R24	SM652101103	SM10KS
C15	SM661207103	SM.01uFS	R25	SM652101103	SM10KS
C16	SM661207103	SM.01uFS	R26	SM652101103	SM10KS
C17	SM661207104	SM.1uFS	R27	SM652101103	SM10KS
C18	SM661207104	SM.1uFS	S 1	SM654101000	SM0S-2P
C19	SM661207103	SM.01uFS	CR1	SM232032814	HSMS2814
C20	SM661207103	SM.01uFS	CR2	SM232032814	HSMS2814
C21	SM661207103	SM.01uFS	CR3	SM232032814	HSMS2814
Jl	454511040	2x20-RA-M-RE	CR4	SM232032814	HSMS2814
J2	330100100	2x34-RA-CGE			


PART: F9300-8 DESC: PCMCIA III HARD DISK CONTROLLER

Component	Part Description	Qty Per Assembly
205750000	IC AND-OR GATE ARRAY 16V8	2
330100100	PCMCIA HEADER ASS'Y TOP/LI	EFT 1
389340009	AUTO-ADHES. RUBBER BAND	1
454511040	HDR SOLD TAIL/MALE/40/RT	1
550120606	SCREW OVAL HD PHIL M2X6	4
550430106	SCREW CYL HD PHIL M3X6	4
551430400	WASHER SHAKEPROOF M3	4
552120100	NUT HEX M2X0.5D	4
594230002	CABLE CLIP ADHESIVE BACK	1
709300811	9300-8 PCMCIA III CONT.BRACI	KET 1
709300821	9300-8 PCMCIA III CONT. COVE	R 1
709300831	9300-8 PCMCIA III CONTR. LAB	EL 1
719300803	PC BD PREASS'Y 9300-8	1
SM200178002	IC 2-INPUT NOR HCT02	1
SM200178374	IC D-TYP FLOP 74HCT374	2
SM201178175	IC QUAD D FLIP/FLOP 74HCT17	5 1
SM206885245	IC BUS TRANSCVR ABT245	1
SM207170036	IC HEX BUFFER 3-ST. PC74HCT	365 3
SM208470358	IC DUAL OP AMP 358D	1
SM208780109	IC MICROPOWER DC-DC CONV	· 1
SM232032814	DIODE 2814	4
SM275330858	TRANSISTOR PNP BC858C	1
SM280171005	TRANS POWER MOSFET MTD1	0N05E 1
SM300056332	INDUCTOR WOUND 33 UH	1
SM652101102	RES CHIP (E24) 1% 1 K	3
SM652101103	RES CHIP (E24) 1% 10 K	18
SM652101104	RES CHIP (E24) 1% 100 K	2
SM652101220	RES CHIP (E24) 1% 22 OHMS	1
SM652101334	RES CHIP (E24) 1% 330 K	3
SM654101000	CHIP JUMPER ZERO OHMS	1
SM661207103	CAP CERA CHIP 20% .01UF (080	5) 10
SM661207104	CAP CERA CHIP 20% .1 UF	6
SM661255101	CAP CERA CHIP 5% 100 PF	1
SM666327225	CAP MOLD TANT CHIP 2.2 UF	1
SM666377226	CAP MOLD TANT CHIP 22 UF	3

Page 8-190

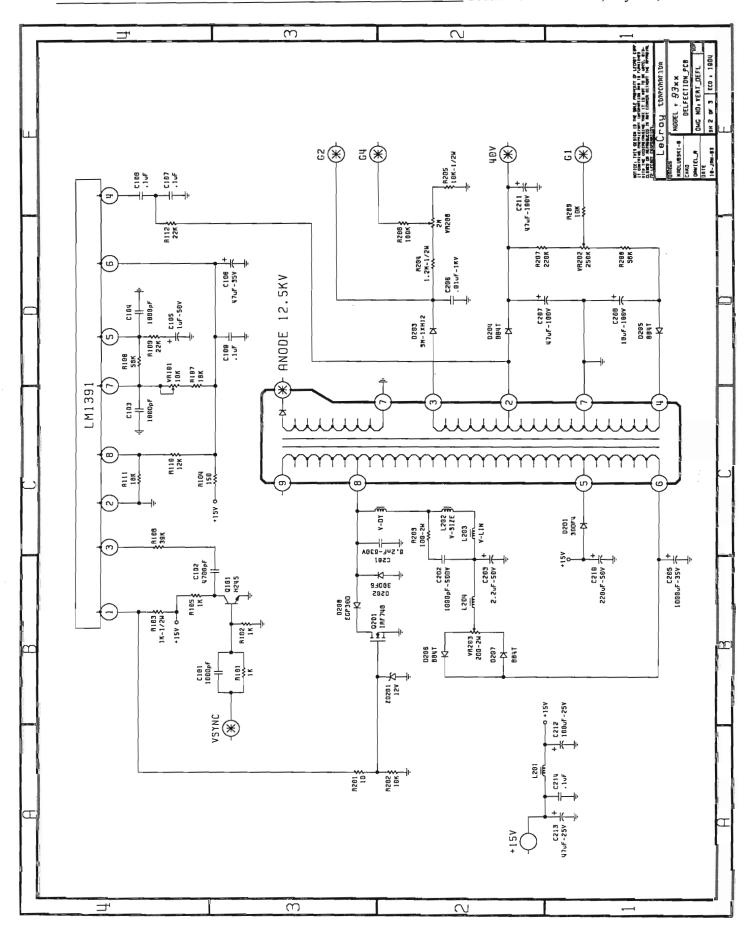

Page 8-191

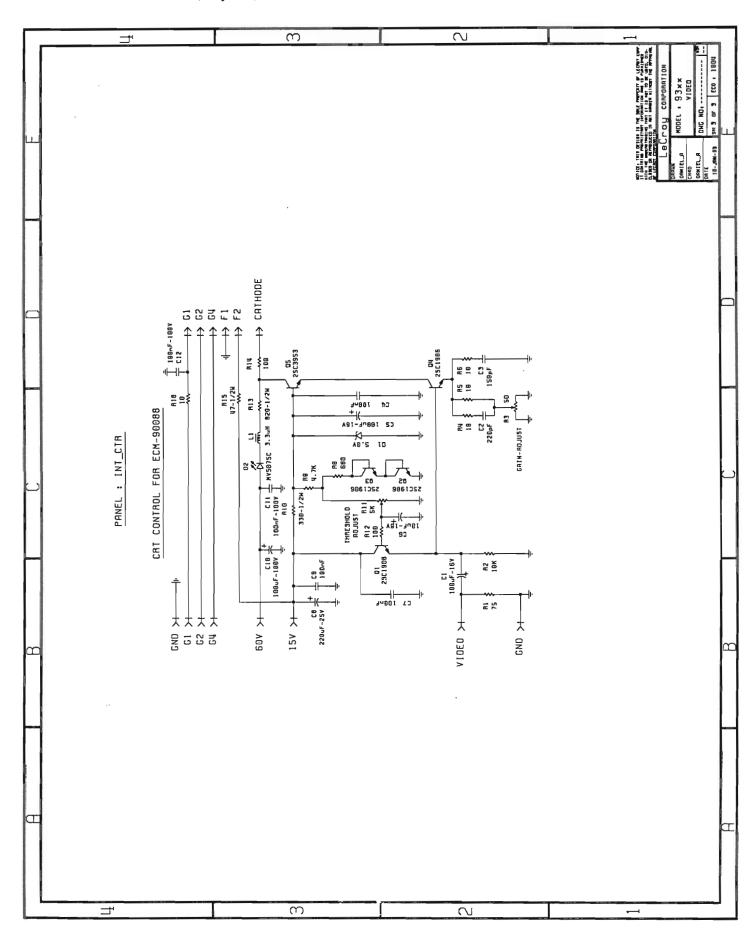


PART: F93XX-I	DEFLECTION
---------------	------------

Location	Description	Location	Description
C1	10uF	D202	30DF6
C2	680pF	D203	SM-1XH12
C3	22nF	D204	BB4T
C4	.1uF	D205	BB4T
C5	.1uF	D206	BB4T
C6	82nF	D207	BB4T
C7	.luF	L201	5nH
C8	.1uF	V-DY	V-DY
C9	470uF	L202	V-SIZE
C10	.luF	L203	V-LIN
C11	.1uF	L204	5nH
C12	470uF	Q1	A733P
C13	4.7nF250V	Q2	A733P
C14	1uF-63V	Q3	C945
C101	1000pF	Q4	A733P
C102	4700pF	Q5	J177
C103	1000pF	Q6	A733P
C104	1000pF	Q7	C945
C105	1uF-50V	Q8	A733P
C106	.1uF	Q9	C945
C107	.1uF	Q10	IRF630
C108	47uF-35V	Q11	C945
C109	.luF	Q101	H245
C201	8.2nF-630V	Q201	IRF740
C202	1000pF-500V	R1	20K
C203	2.2uF-50V	R2	10K
C205	1000uF-35V	R4	6.65K-1%
C206	.01uF-1KV	R5	10K
C207	47uF-100V	R6	7.5K
C208	10uF-100V	R7	20K
C210	220uF-50V	R8	2.2M
C211	47uF-100V	R9	510K
C212	100uF-25V	R10	10M
C213 C214	47uF-25V .1uF	R11 R12	2.26K-1% 13.3K-1%
D1			
D1 D2	1N4448 1N4448	R13 R14	510K 1M
D2 D3	1N746A	R14 R15	1 K
D3 D4		R15	220
D4 D5	1N746A	R17	470
	BYV36C	R18	1.5K
D6 D7	1N758D 1N758D	R18	1.5K 10K
D/ D8	1N5245B	R19 R20	6.8K
D8 D201	30DF4	R20 R21	220K
D201	JUDF4	R21	ZZUK

PART: F93XX-DEFLECTION

Location	Description	Location	Description
R22	5K	VR101	10K
R23	5K	VR202	250K
R24	300	VR203	200-2W
R25	30K	VR206	2M
R26	510	ZD201	12V
R27	300	20201	12 4
R28	7.5K	PART:	F93XX-VIDEO
R29	2.7	IAKI.	T / JAA - VIDEO
R30	300	Location	Description
R31	300	Location	Description
R32	5K	C1	100uF-16V
R33	510	C2	220pF
R34	300	C3	150pF
R35	7.5K	C4	100nF
R36	2.7	C5	100m 100uF-16V
R37	910	C6	10uF-16V
R38	6.2-1/2W	C7	100nF
R40	1.5K	C8	220uF-25V
R40 R41	1.5K	C9	100nF
R42	7.5K	C10	100nF 100uF-100V
R101	1K	C10	100uF-100V 100nF-100V
R102	1K	C12	
R102	1K-1/2W		100nF-100V 5.0V
R104	150	D1 D2	MV5075C
R105	1K	L1	3.3uH
R106	39K		2SC1906
R100	18K	Q1	2SC1906 2SC1906
R108	56K	Q2	2SC1906
R109	22K	Q3	
		Q4	2SC1906
R110	12K	Q5	2SC3953
R111	18K	R1	75
R112	22K	R2	10K
R201	10	R3	50
R202	10K	R4	10
R203	100-2W	R5	10
R204	1.2M-1/2W	R6	10
R205	10K-1/2W	R8	680
R206	100K	R9	4.7K
R207	220K	R10	330-1/2W
R208	56K	R11	5K
R209	10K	R12	100
T201	HT	R13	820-1/2W
U1	LM3080	R14	100
U2	LF353	R15	47-1/2 W
U3	LF353	R16	10

Page 8-195

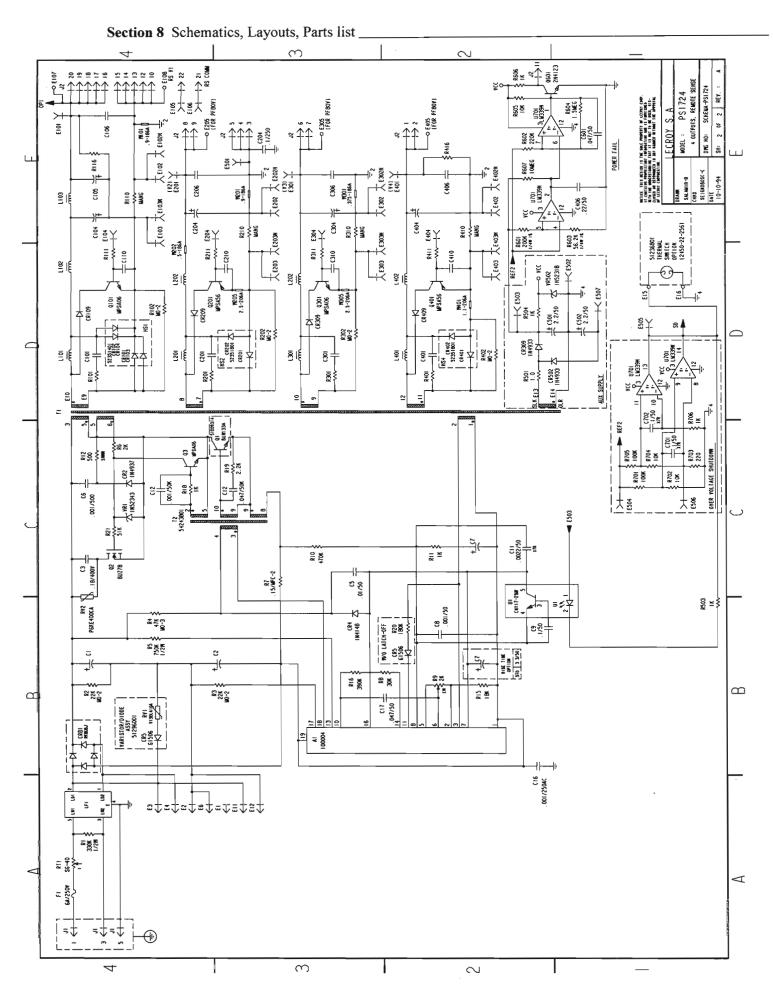

Page 8-196

PART: M935X DESC: MECHANICAL FOR 9354A/T

COMPONENT	PART DESCRIPTION	-
315910006	COMBI FILTER WITH FUSES - 6AMP LABEL "DANGERONLY" LABEL (GROUND SYMBOL)	1
	LABEL "DANGERONLY"	1
377131001	LABEL (GROUND SYMBOL)	1
433162630	FUSE SLO-BLO 250V 6.3AMP	2
485023462	FOOT BUMPON GREY	4
485123001	BUMPER (FOOT) SQUARE GREY RUB	2
530301009	BLK HANDLE W/2 BLACK END CAPS	1
550430106	SCREW CYL HD PHIL M3X6	11
550430116	SCREW CYL HD PHIL M3X16	6
550430120	SCREW CYL HD PHIL M3X20	10
550430508	SCREW FLAT HD PHIL M3X8	2
550430706	SCREW ECO-FIX M3X6	7
550440605	SCREW OVAL HD PHIL M4X5	8
550440608	SCREW OVAL PHIL M4X8	7
551430400	WASHER SHAKEPROOF M3	6
551450400	WASHER SHAKEPROOF M5	2
554030101	NUT BANC-LOK TYPE MV M3	7
554035101	CLIP-ON NUT DIAM. 3.5	4
554425003	SCREW S/TAP PHIL M2.5X6 BLACK	6
554435003	SCREW PT PHIL KA35X20	4
554435004	SCREW PT PHIL KA35X10	4
554435005	SCREW CYL HD PHIL 3.5X9.5	4
554440001	SCREW PT PHIL KA 40 X 12	4
554440202	FLAT WASHER M4	4
560032008	SCREW PHILIPS 10-32X1/2	2
594120003	TIEWRAP	1
709300911	LABEL CE	1
7093XX041	FOOT SUPPORT 93XX	2
7093XX051	FOOT 93XX	2
7093XX091	FRONT FRAME BRACKET 93XX	4
7093XX321		2
7093XX902	FAN 93XX-9 ASSEMBLY	1
7093XX931	INTERF. HOLE CLOSURE 93XX-9	2
709424096	INSERTION GUIDE FOR MC	1
780661104	FLAT CABLE 2X7 (4 CM)	1
780671110	FLAT CABLE 2X20 (10 CM)	1
780721105	FLAT CABLE 2X10 (5,5CM)	1
780834509	GROUND CABLE YELLOW/GREEN	1
93XX-DISPLAY	RASTER MONITOR KIT	1
FF93X1	FRONT FRAME DSO 93XX	1
LC93X1	LOWER COVER DSO 93XX	1
PS9351	POWER SUPPLY	1
RP9354-9	REAR PANEL 9354-9	1
UC93X1	UPPER COVER DSO 93XX	1
US9354-3	UPPER SHIELD ASSEMBLY	1

PART: ACCESSORIES-9354 DESC: ACCESSORIES FOR 9354A/T

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
407099008	PLUG FOR AC LINE - ENGLAND	1
433162630	FUSE SLO-BLO 250V 6.3AMP	2
589202200	AC CORD/PLUG FOR GERMANY	1
589203100	AC CORD/"SEV-ASE" PLUG	1
589203218	AC CORD/US-CANADA PLUG	1
597930001	CARTON FOR 93XX	1
597930002	ETHAFOAM FOR 93XX	2
597940014	PLASTIC BAG FOR 94XX & 93XX	2
597940015	MANUAL/ACCESSORY CTN 9400	2
7093XX061	FRONT COVER 93XX	1
931X-RCM-E	931X SERIES REMOTE CONTROL MAN	1
935X-OM-E	9350/54 OPERATOR'S MANUAL ENG.	1
PP002	PASSIVE PROBE 10 MOHM 10:1	4
PP092	2GS/s ADAPTOR FOR 9354	1

PART: 93XX-FDGP DESC: GRAPHIC PRINTER & FLOPPY DISK

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
		~
334000402	THERMAL PAPER FOR SEIKO PRINT	1 .
334000832	THERMAL PRINTER UNIT	1
335023203	FLOPPY DISK DRIVE 31/2"	1
530040005	SLIDE LATCH TAB STYLE	2
550425104	SCREW CYL HD PHIL M2,5X4	4
550430106	SCREW CYL HD PHIL M3X6	6
551430100	FLAT WASHER M3	3
551430400	WASHER SHAKEPROOF M3	4
552430300	NUT OPEN-END ACORN M3	3
554030101	NUT BANC-LOK TYPE MV M3	2
554430002	SCREW S/TAP PHIL M3X5	10
594120003	TIE WRAP	2
709450523	PUSH SWITCH EXTENDER	1
70FD01021	FLOPPY DISK DRIVE SUPPORT	1
70FD01031	FLOPPY DISK DRIVE FRAME	1
70GP01031	GRAPHIC PRINTER FRAME	1
70GP01041	GRAPHIC PRINTER COVER AXLE	. 1
70GP01051	GRAPHIC PRINTER CUTTER	1
70GP01061	GRAPHIC PRINTER SWITCH BUTTON	1
780210030	DISPLAY POWER CABLE	1
780721022	FLAT CABLE 2X10 (22CM)	1
780791604	FLAT CABLE 2X13 (4CM)	1
780791630	FLAT CABLE 2X13 (30CM)	1
780801015	FLAT CABLE 2X20 (3 CONNECT.)	1
BOX-GP01	GP01 GRAPHIC PRINTER BOX	1
COVER-GP01	GP01 GRAPHIC PRINTER COVER	1
CUP-FD01	FD01 FLOPPY DISK DRIVE CUP	1
F9300-6	CENTRONICS/FLOPPY/PRINTER INT	1
F9300-7	LTP 5446 PRINTER CONTROLLER	1
UC93X1-FDGP	UPPER COVER FOR FD/GP OPTIONS	1

PART: 93XX-FD01	DESC: FLOPPY DISK
FARI: 33AA-FDUI	DESC. FLOIT I DISK

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
335023203	FLOPPY DISK DRIVE 31/2"	1
550425104	SCREW CYL HD PHIL M2,5X4	4
550430106	SCREW CYL HD PHIL M3X6	4
551430400	WASHER SHAKEPROOF M3	2
551430400	WASHER SHAKEPROOF M3	2
554030101	NUT BANC-LOCK TYPE MV M3	2
554430002	SCREW S/TAP PHIL M3X5	4
70FD01021	FLOPPY DISK DRIVE SUPPORT	1
70FD01031	FLOPPY DISK DRIVE FRAME	1
780791630	FLAT CABLE 2X13 (30CM)	1
780801015	FLAT CABLE 2X20 (3 CONNECT.)	1
CUP-FD01	FD01 FLOPPY DISK DRIVE CUP	1
F9300-6	CENTRONICS/FLOPPY/PRINTER INT. B	1
UC93X1-FD01	UPPER COVER FOR FD01 OPTION	1

PART: 93XX-GP01 DESC: GRAPHIC PRINTER

COMPONENT	PART DESCRIPTION	QTY PER ASSEMBLY
340000402	THERMAL PAPER FOR SEIKO PRINT	I
334000832	THERMAL PRINTER UNIT	1
530040005	SLIDE LATCH TAB STYLE	2
550430106	SCREW CYL HD PHIL M3X6	4
551430100	FLAT WASHER M3	3
551430400	WASHER SHAKEPROOF M3	4
552430300	NUT OPEN-END ACORN M3	3
554430002	SCREW S/TAP PHIL M3X5	6
594120003	TIE WRAP	2
709450523	PUSH SWITCH EXTENDER	1
70GP01031	GRAPHIC PRINTER FRAME	1
70GP01041	GRAPHIC PRINTER COVER AXLE	1
70GP01051	GRAPHIC PRINTER CUTTER	1
70GP01061	GRAPHIC PRINTER SWITCH BUTTON	1
780210030	DISPLAY POWER CABLE	1
780721022	FLAT CABLE 2X10 (22CM)	1
780791604	FLAT CABLE 2X13 (4CM)	1
780801015	FLAT CABLE 2X20 (3 CONNECT.)	j .
BOX-GP01	GP01 GRAPHIC PRINTER BOX	1
COVER-GP01	GP01 GRAPHIC PRINTER COVER	1
F9300-6	CENTRONICS/FLOPPY/PRINTER INT	1
F9300-7	LTP 5446 PRINTER CONTROLLER	£
UC93X1-GP01	UPPER COVER FOR GP01 OPTION	4

SECTION 9 MECHANICAL PARTS

9354A, 9354AM, 9354AL, 9354T & 9354TM

Digital Storage Oscilloscope

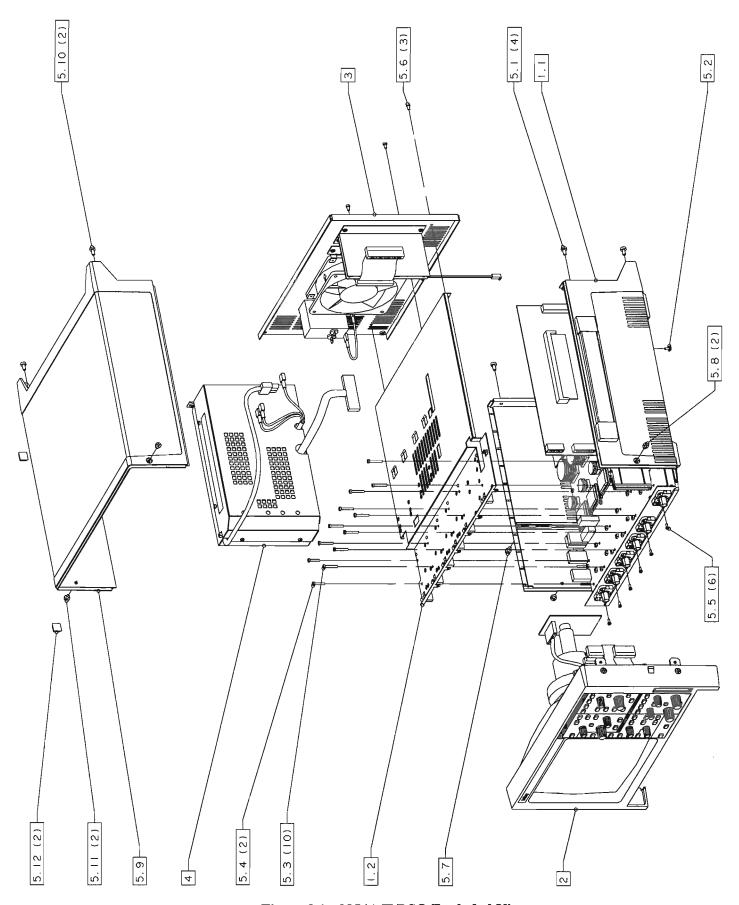


Figure 9.1: 9354A/T DSO Exploded View

9.1.1	9354A/T Assembly	Part Description	Quantity per Assembly
1.1	9354A/T lower cover assembly	LC93X1	1
1.2	9354A/T upper shield assembly	US9354-3	1
2.	9354A/T front frame assembly		1
3.	9354A/T Rear panel assembly		1
4.	PS9351Power supply	PS9351	1
5.1	Screw oval head M4x8	550 440 608	4
5.2	Screw eco fix M3x6	550 430 706	1
5.3	Screw cyl head M3x20	550 430 120	10
5.4	Screw M3x16	550 430 116	2
5.5	Self tapping screw M2.5x6	554 425 003	6
5.6	Screw M3x6	554 430 706	3
5.7	Screw oval head M4x8	550 440 608	1
5.8	Screw M4x5	550 440 605	2
5.9	9354A/T Upper cover	UC 93X1	1
5.10	Screw oval head M4x8	550 440 608	2
5.11	Screw M4x5	550 440 605	2
5.12	Foot bumpon grey 6 mm	485 023 462	2

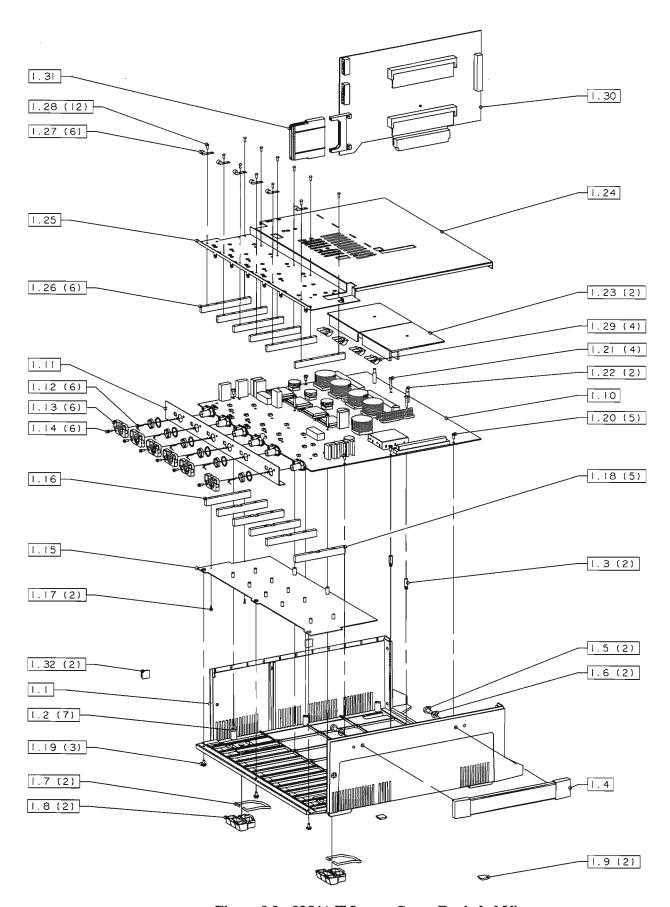


Figure 9.2: 9354A/T Lower Cover Exploded View

1.1 Lawer seven	
1.1 Lower cover LC 93X1	1
1.2 Nut Banc-Lock M3 554 030 101	7
1.3 Main card standoff 12 mm M3 709 3XX 321	2
1.4 Handle with caps 530 301 009	1
1.5 Screw cy! head 10-32 x 1/2 560 032 008	2
1.6 Lockwasher M5 551 450 400	2
1.7 Foot 709 3XX 051	2
1.8 Foot support 709 3XX 041	2
1.9 Foot bumpon grey 3 mm 485 123 001	2
1.10 Main board 9354A/T F9354-31	1
1.11 Main board panel 9354A/T FP9354-3	1
1.12 Probe ring contact 709 3XX P91	<u>.</u> 6
1.13 Probe holder 709 3XX P41	6
1.14 Self tapping screw M2,5x6 554 425 003	6
1.15 9354A/T base shield 709 354 331	1
1.16 Left lower partition 709 354 361	1
1.17 Nail rivet 1.6x6 554 416 000	2
1.18 Lower partition 709 354 351	5
1.19 Screw eco-fix M3x6 550 430 706	3 5
1.20 Screw cyl head M3x6 550 430 106	3 4
1.21 Screw cyl head M3x16 550 430 116 1.22 Self locking nylon spacer 520 000 118	2
1.22 Self locking nylon spacer 520 000 118	2
1.23 9354A Acquisition memory card F9350-21	2
9354AM Acquisition memory card F9350M-21	2
9354AL Acquisition memory card F9350L-2	2 2
9354T Acquisition memory card F9350T-21	
9354TM Acquisition memory card F9350TM-21	2
1.24 Upper shield assembly US9354-3	1
1.25 Upper shield 709 354 321	1
1.26 Upper partition shield 709 354 341	6
1.27 Shieid contact 709 3XX 371	6
1.28 Nail rivet M2,5x6 554 425 004	12
1.29 Shield finger stock 530 009 002	4
1.30 9354A & 9354T Processor card F9302-1-4	1
9354AM & 9354TM Processor F9302-1-8	1
9354AL Processor card F9302-1-16	1
1.31 Memory card insertion guide 709 424 096	1
1.32 Self adhesive foot 485 023 462	2

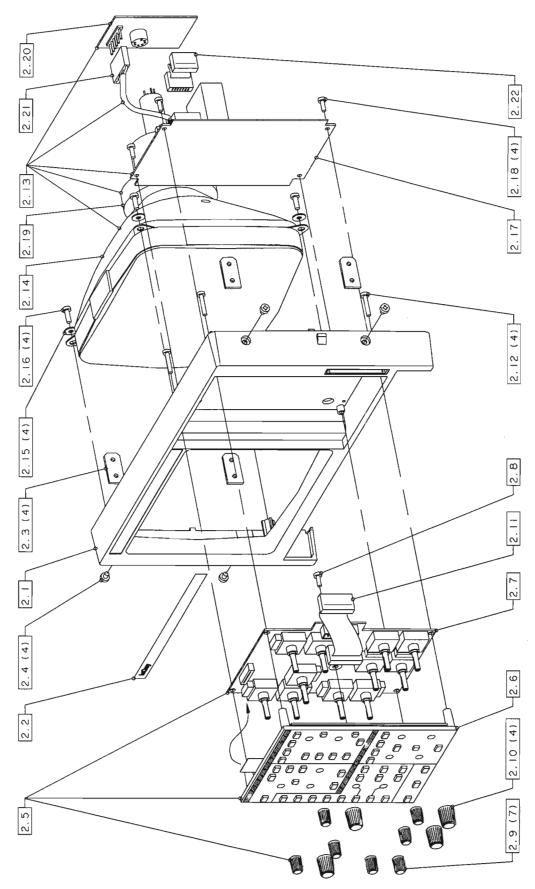


Figure 9.3: 9354A/T Front Frame Exploded View

9.3.1	9354A/T Front Panel Assembly	Part Description	Quantity per Assembly	
2.1	Front frame	FF 93X1	1	
2.2	Front label 9354A	709 354 A16	1	
	Front label 9354AM Front label 9354AL	709 354 AM16	1	
		709 354 AL16	1	
	Front label 9354T	709 354 T16	1	
	Front label 9354TM	709 354 TM16	1	
2.3	Front frame bracket	709 3XX 091	4	
2.4	Screw oval head M4x5	550 440 605	4	
2.5	Front panel assembly	F9354-5	1	
2.6	Front panel keyboard ass'y	729 354 513	1	
2.7	Front panel pcb ass'y	9354-5	1	
2.8	Screw PT KA 35x10	554 435 004	. 1	
2.9	Knob diameter 10mm	709 3XX 511	7	
2.10	Knob diameter 14mm	709 3XX 521	4	
2.11	20 lines flat cable	780 721 105	1	
2.12	Screw PT KA 35x20	554 435 003	4	
2.13	Raster monitor kit	93XX-Display	1	
2.14	9 inch CRT	93XX-CRT	1	
2.15	Flat washer M4	554 440 202	4	
2.16	Screw PT KA 40x12	554 440 001	4	
2.17	Deflection board	93XX-Deflection	1	
2.18	Screw PT KA 35x10	554 435 004	4	
2.19	Deflection yoke	93XX-Yoke	1	
2.20	Video board	93XX-Video	1	
2.21	Monitor cable		1	
2.22	14 lines flat cable	780 661 104	1	

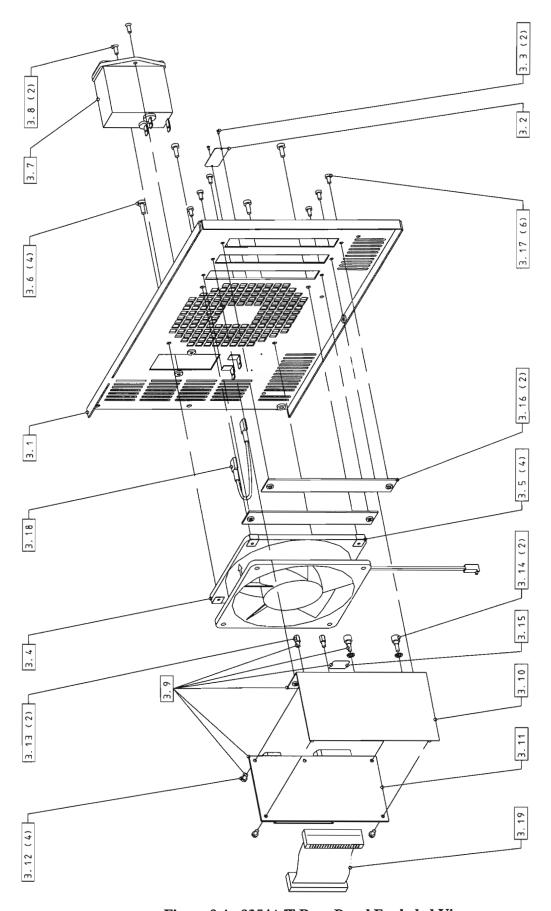


Figure 9.4 : 9354A/T Rear Panel Exploded View

9.4.1	9354A/T Rear Panel Assembly	Part Description	Quantity per Assembly
3.1	Rear panel	RP 9354-9	1
3.2	Serial number plate	709 354 913	1
3.3	Taping screw	554 500 001	2
3.4	Fan asssembly	709 3XX 902	1
3.5	Clip on nut 3.5	554 035 101	4
3.6	Screw 3.5 X 9.5	554 435 005	4
3.7	Line input module Fuse holder	315 910 006	1
	Fuse 6.3A / 250 V	433 162 630	1 2
3.8	Screw flat head M3x8	550 430 508	2
3.9	RS232/GPIB interface assembly	F9300-4	1
3.10	Interface card bracket	709 300 411	1
3.11	Interface card	9300-4	1
3.12	Screw cyl head M3x6 Washer Shakeproof M3	550 430 106 551 430 400	4 4
3.13	Mounting hardware	455 980 002	2
3.14	Connector kit	435 521 024	2
3.15	Label " RS232C "	709 300 421	1
3.16	Interface hole closure	709 3XX 931	1
3.17	Screw cyl head M3x6 Washer shakeproof M3	550 430 106 551 430 400	4 1
3.18	Ground wire cable	780 834 509	1
3.19	40 lines flat cable	780 671 110	1

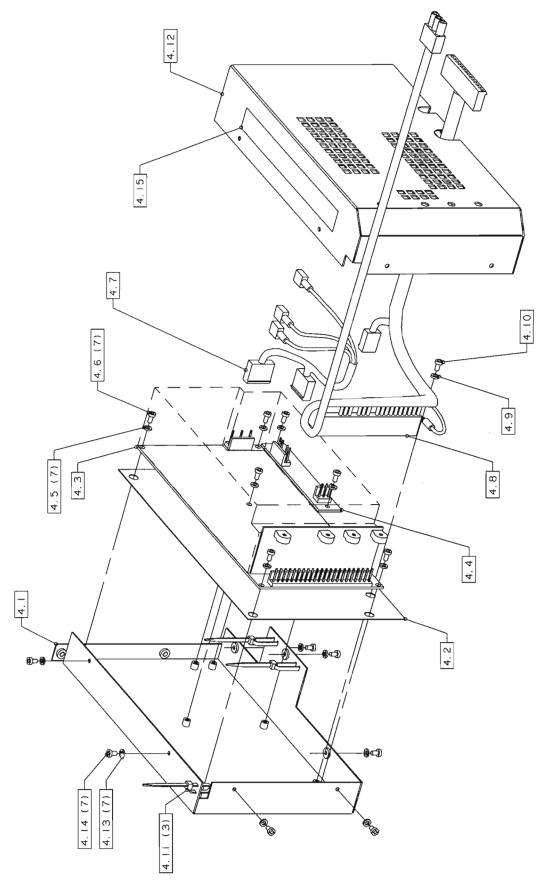


Figure 9.5: PS9351 Power Supply Exploded View

9.5.1	Power supply PS9351	Part Description	Quantity per Assembly
4.1	Power supply bracket	709 351 041	1
4.2	Power supply insulator	709 351 031	1
4.3	Power supply board	PS 1724	1
4.4	Power supply line sync card	FPS9351-2	1
4.5	Lockwasher M3	551 430 400	7
4.6	Screw cyl head M3x6	550 430 106	7
4.7	Power supply input cable	780 811 622	1
4.8	Power supply output cable	780 872 972	1
4.9	Lockwasher M3	551 430 400	1
4.10	Screw cyl head M3x6	550 430 106	1
4.11	Tie wrap	594 120 006	3
4.12	Power supply cover	709 351 051	1
4.13	Lockwasher M3	551 430 400	7
4.14	Screw cyl head M3x5	550 430 105	7
4.15	Label " Dangeronly "	377 051 005	1

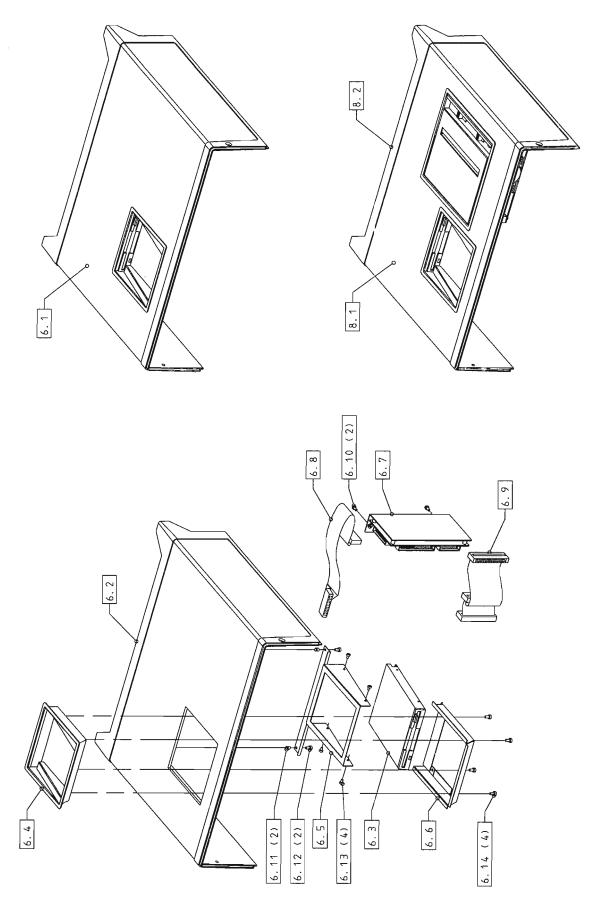


Figure 9.6: FD01 Floppy Option

9.6.1	FD01 Floppy Option	Part Description	Quantity per Assembly
6.1	Floppy drive option	93XX-FD01	1
6.2	Upper cover	UC93X1-FD01	1
6.3	Floppy drive	335 023 203	1
6.4	Cup	CUP-FD01	1
6.5	Support	70FD01021	1
6.6	Frame	70FD01031	1
6.7	Floppy/Printer/Cent interface	F9300-6	1
6.8	Flat cable 26 P	780 791 630	1
6.9	Flat cable 40 P	780 801 015	1
6.10	Screw M3x6 Washer M3	550 430 106 551 430 400	2 2
6.11	Nut banc lock M3	554 030 101	2
6.12	Screw M3x6	550 430 106	2
6.13	Screw M2.5x4	550 425 014	4
6.14	Screw self taping M3x5	554 430 002	4
8.1	Floppy and Printer options	93XX-FDGP	1
8.2	Floppy&Printer Upper cover	UC93X1-FDGP	1

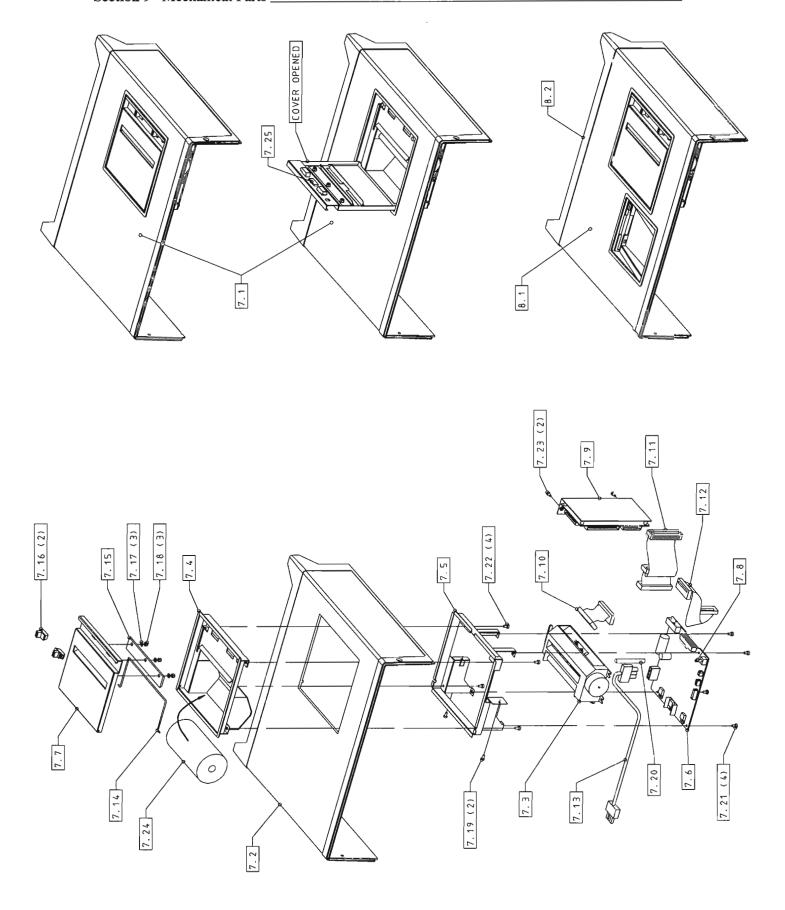


Figure 9.7: GP01 Printer Option

9.7.1	GP01 Printer Option	Part Description	Quantity per Assembly
7.1	Graphic printer option	93XX-GP01	1
7.2	Upper cover	UC93X1-GP01	1
7.3	Graphic printer	334 000 832	1
7.4	Box	BOX-GP01	1
7.5	Frame	70GP01031	1
7.6	Printer interface card	F9300-7	1
7.7	Cover	COVER-GP01	1
7.8	Switch push button	709 450 523	1
7.9	Floppy/Printer/Cent interface	F9300-6	1
7.10 7.11 7.12 7.13	Flat cable 26 P Flat cable 40 P Flat cable 20 P Power supply cable	780 791 604 780 801 015 780 721 022 780 210 030	1 1 1 1 not used
7.14 7.15 7.16	Cover Axle Cutter Slide latch	70GP01041 70GP01051 530 040 005	1 1 2
7.17 7.18 7.19	Flat washer M3 Nut acorn M3 Screw self taping M3x5	551 430 100 552 430 300 554 430 002	3 3 2
7.20	Push switch extender	70GP01061	1
7.21 7.22 7.23	Screw M3x6 Washer M3 Screw M3x5 Screw M3x6	550 430 106 551 430 400 554 430 002 550 430 106	4 4 4 2
, , 23	Washer M3	551 430 400	2
7.24 7.25	Thermal paper roll Auto adhesive rubber band	344 000 042	1 1
8.1 8.2	Floppy and Printer options Floppy&Printer Upper cover	93XX-FDGP UC93X1-FDGP	1 1

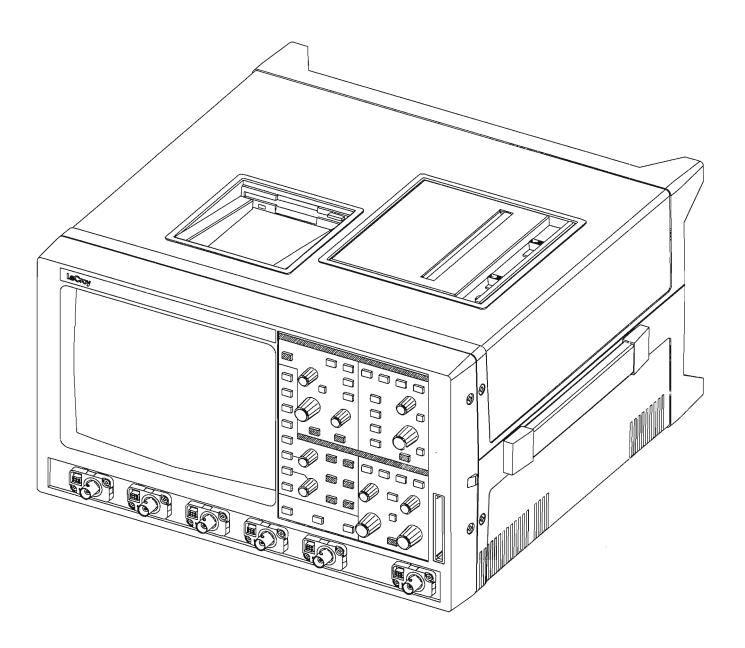


Figure 9.8: 9354A/T DSO Front View

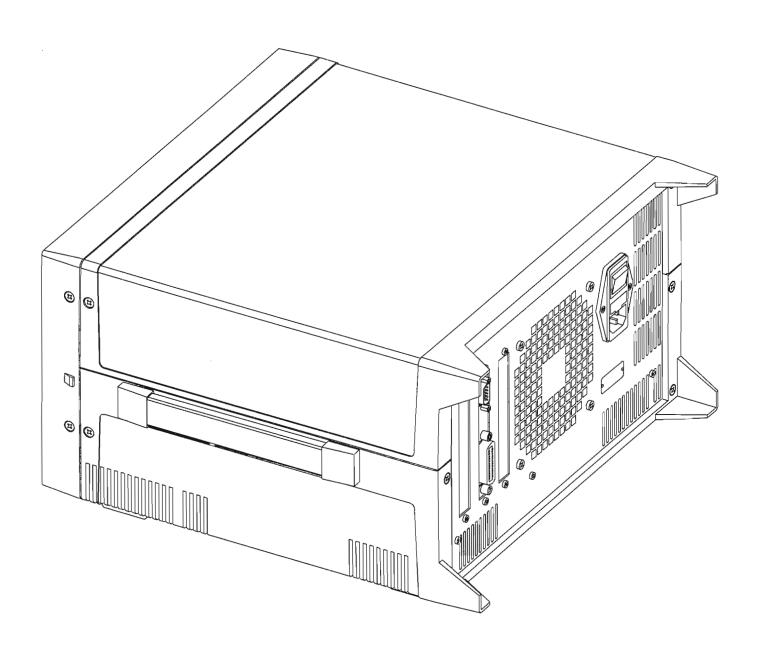


Figure 9.9: 9354A/T DSO Rear View

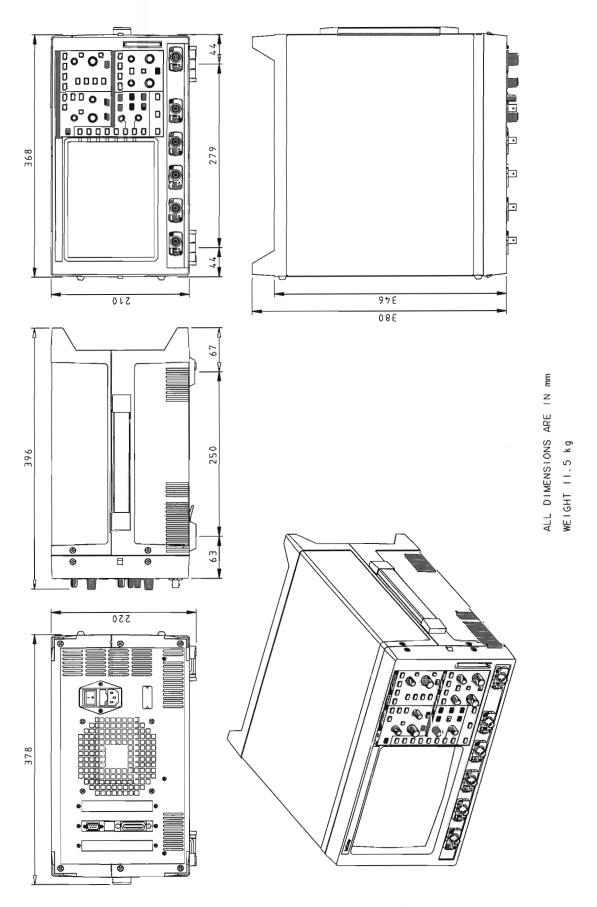


Figure 9.10: 9354A/T DSO Dimensions


SECTION 10 CONNECTING the 9354A/T to a PLOTTER or a PRINTER

10.1 Introduction

LeCroy oscilloscopes are supplied with a list of plotters and printers known to work with them.

This list is not final, so any suggestions are welcome.

HP plotter responses to some RS-232 configuration commands have been evolved. Consequently, the 9354A/T generation DSO support HP plotters of two types, 7470A and 7550A. The only difference lies in the RS-232 initialization codes. They may however, despite these changes, work with HPGL compatible plotters from other manufacturers. If the HPGL data is used as input for a CAD or word processing system, it might be necessary to remove the data preceding the in command. Before connecting a plotter to a 9354A/T, do not forget to select the appropriate settings in the printer setup menu and the GPIB & RS-232 setup menu.

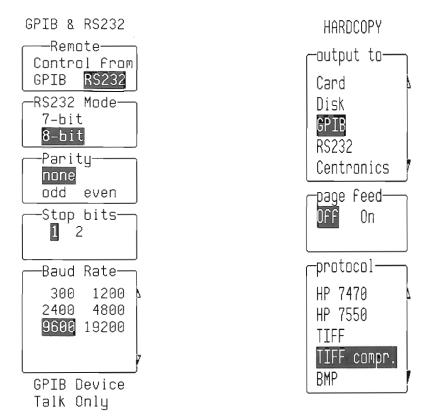

RS-232 connection

The following settings are assumed for the scope.

Baud rate

9600

Character

: 8 bits

Parity

none

Stop bits


: 1

Any exceptions will be mentioned.

RS 232 interface

Pin 1 : DCD 2 : RD 3 TD 4 DTR 5 **GND** 6 DSR 7 : **RTS** 8 : **CTS** 9: RI

A cable with the following pinout can be used in almost every case:

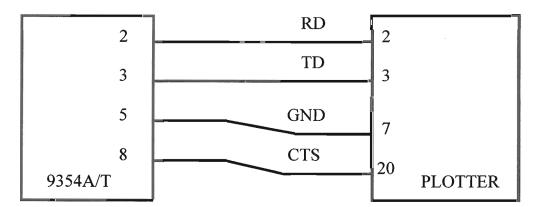

The cable has D25 connector with male pins on the plotter side, and a D9 connector with female pins on the 9354A/T oscilloscope side.

GPIB Connection

To have a plot done through GPIB initiated with the front panel screen dump push button, you must set the 9354A/T in talk only mode by selecting remote control from RS-232, and the plotter in listen only mode.

If a computer controls the GPIB Bus, both the scope and the plotter must be set in addressed mode (remote control from GPIB).

Remark: the listen only mode does not work on some old HP plotters such as HP7585B or HP7475. The plotter must be set to listener before being able to receive any commands, which is a violation of the GPIB standard.

10.2 Plotters

10.2.1 HP 7470A Plotter

Switch settings:

- RS-232 Connection:

S1 and S2 : 0 0 Y/D : D

A4/US : User selectable

B4 to B1 : 1010

- GPIB listen only:

A4/US : User selectable

16 to 1 : 1 1 1 1 1

- GPIB Addressed:

A4/US : User selectable

16 to 1 : 0 0 1 1 1

10.2.2 HP 7550A Plotter

Responses to some ESC characters commands are not the same in this plotter as in older HP models like the 7470A. In fact, ESC sequences of commands which give excellent results in the 7470A can prevent any handshake in RS-232.

Problems of this kind have been reported in the case of ESC.R and ESC.@ commands. When combined with ESC.I and ESC.N, ESC.@ breaks up all handshakes.

RS-232 configuration:

- Enter into display 5 (HP-IB MONITOR...).
- Select STANDARD OF STANDARD/ENHANCED.
- Enter into SERIAL sub-menu (display 6)
- For DATA_FLOW, select REMOTE. Either STANDALONE or EAVESDROP may be chosen.
- Enter into display 7 (DUPLEX, PARITY, BAUD).
- Select FULL duplex.
- Configuration PARITY and BAUD rate to the same values as on the DSO.

A standard cable may be used.

Do not start a plot while a sheet of paper is being loaded!

GPIB configuration:

If the scope is in TALK ONLY, the plotter must be in LISTEN ONLY. Selection will be done at display 5.

Note: Its seems that the plotter must be powered off, then on again, to take any configuration change into account.

10.2.3 Hitachi 672 Graph Plotter (or NSA 672)

As this plotter is compatible with the 7470A, select this mode on the plotter menu page. Switch settings

- RS-232 Connection:

Sw. A, 1 and 2 : 1 1 (ISO A3) or (ISO A4).

Sw. A, 3 to 8 : 1 0 1 1 0 1 Sw. B : 1 1 1 1

Note: When switches are set to ISO A4, the pen must be manually repositioned at the top of the page (or plotter reset by powering it off and on) before loading a new sheet of paper.

10.3 Printers

Interfacing is possible through RS-232, GPIB directly, and in option through Centronics. The parallel interface F9300-6 (Centronics) is an option, see section 4.5.

10.3.1 Centronics Printers

Most printers use a Centronics parallel connection which makes direct connection possible if the 9354A/T is equipped with the optional Centronics interface F9300-6 board. If the printer has a Centronics connector then it's a parallel printer, and the F9300-6 board is required or a serial to parallel converter.

If a serial to parallel converter is used, in the printer setup menu select device type Epson, and remote control from RS-232.

RS-232 Remote control port settings:

Baud rate : 9600 or 19200

Characters length (bits): 8
Parity: none
Number of stop bits: 1

The following printers and printer switch positions have been tested via serial to parallel adapter.

	Switch 1	Switch 2	
1. Epson LQ-1000	1, 2, 3, 4 : ON	2, 6, 7 : ON	
2. Diconix 150P	1: ON	2, 6, 7 : ON	
3. HP-ThinkJet 2225C	2, 4, 5 : ON		
4. HP-DeskJet 550 C	all down	6 up for 19200 bauds	

Note: all Epson and Epson Compatible printers are likely to work if the switches are set properly, (Some experimentation may be required).

Some available serial to parallel converters need power through the RS-232 lines. Do not use them, as we do not guarantee that the serial port is able to furnish enough power.

10.3.2 RS-232 Printers

10.3.2.1 Epson FX80

It is possible to use the standard RS-232 cable. Such a printer has the optional RS-232 interface "#8143" installed. The configuration that follows is valid for the default scope setting. The standard cable is usable.

In the particular case of an FX850:

- the main switches SW1 SW2 remain at the factory configuration

SW1 : 1 2 3 4 5 6 7 8 OFF OFF ON OFF OFF ON ON ON

SW2 : 1 2 3 4 ON OFF OFF OFF

- the 8143 switches are set to:

1 2 3 4 5 6 7 8 ON OFF OFF OFF n/a OFF OFF ON

- the 8143 jumpers remain at the factory settings:

J1 J2 J3 J4 J5 JC JNOR JRVE JF JX OFF OFF OFF OFF ON OFF ON OFF ON OFF

Note: Epson printers only support XON/XOFF support handshake if they have a print buffer. Such printer are: FX, FX+, JX-80, LQ-800/1000, EX-800 and LQ-25000. Otherwise, use DTR/RTS handshake.

10.3.2.2 Citizen 120D

To use this printer with the default RS-232 setting and default printer setting of the 9354A/T, select the following switch configuration:

DIP switch bank 1: all OFF except 3 and 8, DIP switch bank 2: all OFF.

10.3.2.3 HP LaserJet

Make sure that page feed is ON in the plotter menu to use the LaserJet. It is advisable to start out in single density with a size of A5. Then, depending upon the internal buffer size on the LaserJet, the image size and/or density can be increased. At one point, the internal buffer size of the DSO is also reached. The image is simply truncated, indicating that either density or size have to be reduced.

10.3.2.4 HP QuietJet

10.3.2.5 HP ThinkJet

To use printer with the default RS-232 setting and with the default cable select the following switch configuration:

- mode switch:

- RS-232 switch:

Note: it may be possible that old ThinkJet recognize only the Epson protocol. If it is the case use the Epson.

10.3.2.6 HP DeskJet 550C

The standard cable is usable. The printer has been tested at 19200 bauds with the following configuration :

Switch 1 or Bank A: all down

Switch 2 or Bank B: 6 up for 19200 bauds, all the other down

10.3.2.7 Brother Printers

The Brother M-1509 and M-1709 have been tested with a serial connection. On the oscilloscope select "Epson FX-80 or compatible printer".

The switch settings are identical for both the printers:

- SW1 : 1 2 3 4 5 6 7 8
ON ON ON OFF ON n/a n/a ON

- SW1 : 1 2 3 4 5 6 7 8

$$\leftarrow$$
 ALL OFF \rightarrow

- SW1 : 1 2 3 4 5 6 7 8
OFF OFF OFF OFF 11": OFF OFF ON OFF 12": ON

10.3.3 GPIB Printers

10.3.3.1 HP QuietJet

Make sure the dip switches on the backplane of the printer are set to

- SRQ enable:

0

- GPIB listen only:

Listen always:

1

A5 to A1:

00111

- GPIB Addressed:

Listen always:

0

A5 to A1:

00111

10.3.3.2 HP ThinkJet (HP 2225A)

Make sure the dip switches on the backplane of the printer are set to

- SRQ Enable:

0

- GPIB listen only:

Listen always

1

A5 to A1:

0 0 1 1 1

- GPIB Addressed:

Listen always:

 $\mathbf{0}$

A5 to A1:

0 0 1 1 1

10.3.3.3 HP PaintJet (black/white only)

Make sure the dip switches near the GPIB connector are set to:

- GPIB Listen only:

NORM/SCS:

NORM

A3 to A1:

1 1 1

PC8/ROM8:

N/A

ENG/MET:

has to match paper size ENG = 11" MET = 12"

- GPIB addressed:

NORM/SCS:

NORM

A3 to A1:

any combination except 1 1 1

(correspond to add. 0-6)

PC8/ROM8:

N/A

ENG/MET:

has to match paper size ENG = 11" MET = 12"

10.4 Information on GPIB

10.4.1 Introduction

This section is a simple description of the GPIB interface as an aid to understanding the interface in the 9354A/T DSO: it is not intended as a complete specification of the system.

The GPIB system is designed for the interaction of a number of devices, which may transmit or receive information as required. The system includes data lines over which the actual data are sent, bus management lines for control, and handshake lines to ensure correct acceptance of data at the right destination. The main features of the bus are summarized below:

Maximum number of devices 15

Maximum bus length

20 meters or

2 meters per device, whichever is less.

Connection

star or chain

Note that more than half of any connected devices must be powered up, even if they will not be used.

Data lines	8 DIO	1 to 8
Handshake lines	DAV NRFD NDAC	Data available Not ready for data not data accepted
Bus management l	ines EOI IFC SRQ ATN REN	End or identity Interface clear Service request Attention Remote enable
Active level	+0.4 V +3.3 V	

Note that all signal lines are active low, and that they are wire 0Red to allow participation by all devices.

In addition, there are 8 ground lines, making a total of 24 lines.

10.4.2 Functions in the GPIB

In order to allow satisfactory interconnection of several devices the following functions must be provided

- Enabling any device to transmit data
- Preventing any device from transmitting data
- Enabling any device to receive data

- Preventing any device to receive data
- Transmitting data to a specific device
- Ensuring that only one device is transmitting
- Ensuring that transmitting takes place only when reception is possible
- Enabling any device to request servicing
- Identify type of data to be sent

Any device can be activated into the "talk" or "listen" state, and can be deactivated by the commands "untalk" and "unlisten". Also a device can be a "controller".

Maximum number of current talkers 1
Maximum number of current listeners 14
Maximum number of current controllers 1

Function of bus lines:

- DAV	Data available:	talker sa	avs the da	ta on the	line are valid.
101 K V	Data available.	tuinei 3	ays are aa	ta on the	mic are vand.

- NRFD Not ready for data; listener says it is not ready for more data.

All listeners must release the NRFD line, i.e., let it go high, before talker can send.

- NDAC Not data accepted; listener says it has not yet accepted the data. Talker must hold all data lines steady until all listeners have released this line, i.e., it goes high.

Clearly, the NRFD and NDAC are easy to implement by a wired OR system, so that any one device asserting the signal prevents progress to the next step. Progress is made at the speed of the slowest listener. A simple timing diagram is given in figure 10.1, and another way of presenting the system is given in figure 10.2.

The bus management lines functions as follows:

- EOI	End Or Identify; talker sends this with last byte of a block transfer to
	indicate last byte. Also used with ATN to parallel poll devices for their
	status bit.

- IFC InterFace Clear; places the GPIB system into a quiescent state.

- SRQ Service ReQuest; any device can send it to the controller to indicate need for attention, and to request interruption of current operations.

- ATN ATeNtion; controller sends this to specify whether DIO lines are to be used for interface messages, e.g., addressing, or for data.

REN Remote ENable; selects a device as being under local or remote control.

Addressing of the devices on the GPIB bus consult a specialized GPIB-IEEE488 document.

The principles of GPIB are quite simple - the system must wait for all users, and lines are wire ORed so that all can pull the lines down. The handshake sequence is illustrated in two ways. In figure 10.1 the signal waveforms are sketched.

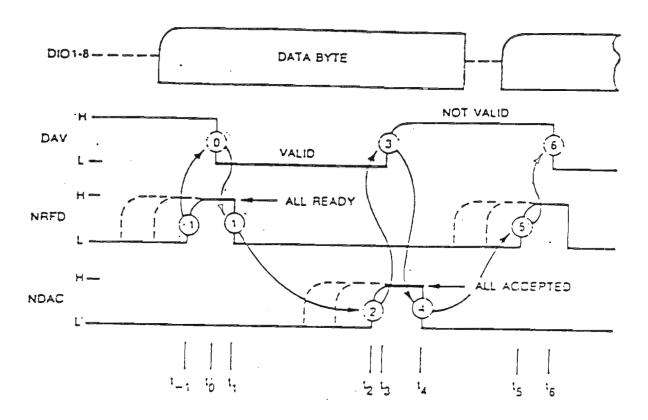


Figure 10.1: DATA BYTE TRANSFER IN GPIB IEEE-488

The handshake timing sequence proceeds as follows:

Preliminary	The source checks for presence of listeners and places the next data
	byte on the data lines DI01-8.
t-1	Acceptors one by one become ready for byte. Last one allows
	NRFD to go high.
t0	Sources pulls down DAV to validate data.
t1	The first litener to accept the data pulls down NRFD to show it is
	no longer ready for a new byte.
t2	The listeners one by one accept the data, and the last one
	lets NDAC go high.
t3	The source sets DAV high to show this byte is no longer valid.
t4	The listeners one by one accept this, the first one pulling NDAC
	low for the next cycle.
t5	As for t-1.

LeCroy