Canon SERVICE INFORMATION

Issued by Copying Machine Quality Assurance Center, Canon Inc.

MODEL: COLOR LASER COPIER
1120/1130/1150

□ Major quality issues
□ Quality upgrade/production efficiency
□ Field quality problems
■ Miscellaneous

LOCATION SUBJECT

Revision of Service Handbook

The captioned technical documentation has been revised to reflect the following:

Reasons

to update the descriptions in the previous documentation covering modification of functions and correction of typographical mistakes.

The present revision is a full revision. Kindly make arrangements so that the old document may be replaced with the one being released. Further, please make sure the old document is properly disposed of.

FY8-23B4-02Y

COLOR LASER COPIER 1120/1130/1150

SERVICE HANDBOOK

REVISION 2

Canon

DEC. 2000

FY8-23B4-020

COPYRIGHT© 2000 CANON INC.

CANON CLC1120/11301150 REV.2 DEC. 2000 PRINTED IN JAPAN (IMPRIME AU JAPON)

IMPORTANT

THE INFORMATION CONTAINED HEREIN IS PUBLISHED BY CANON, INC., JAPAN, AND IS FOR REFERENCE USE ONLY. SPECIFICATIONS AND OTHER INFORMATION CONTAINED HEREIN MAY VARY SLIGHTLY FROM ACTUAL MACHINE VALUES OR THOSE FOUND IN ADVERTISING AND OTHER PRINTED MATTER.

ANY QUESTIONS REGARDING INFORMATION CONTAINED HEREIN SHOULD BE DIRECTED TO THE COPIER SERVICE DEPARTMENT OF THE SALES COMPANY.

COPYRIGHT © 2000 CANON INC.

Printed in Japan
Imprimé au Japon

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

Prepared by

OFFICE IMAGING PRODUCTS TECHNICAL SUPPORT DIVISION

CANON INC.

5-1, Hakusan 7-chome, Toride-shi Ibaraki, 302-8501 Japan

1

2

3

_	
74	
74	
	П

ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS

CONTENTS

MAINTENANCE AND INSPECTION

STANDARDS AND ADJUSTMENTS

5	I	
	L	$\overline{}$
	T	

A.	Sensors	
	1. CLC1120/1130	
	2. CLC1150	3-3
В.	Thermistors, Lamps, and Heaters	3-5
C.	Clutches	3-6
	1. CLC1120/1130	3-6
	2. CLC1150	3-7
D.	Solenoids	
	1. CLC1120/1130	3-8
	2. CLC1150	3-9
E.	Fans	
F.	Motors	3-11
G.	PCBs	3-13
Н.	Paper Deck	3-15
	1. Sensors and Switches	

CHAPTER 1

CHAPTER 2

CHAPTER 3

A. Scheduled Servicing List1-1

B. Periodically Replaced Parts 1-4

C. Consumables and Durables 1-5

A. Image Adjustment System2-1

B. Exposure System.....2-8

C. Image Formation System2-9
D. Pickup/Feeding System2-14

1. Copier 1-1

2. Paper Deck1-3

	2.	Motors, Clutches, Solenoids,	
		and PCBs	3-16
l.	Var	iable Resistors (VR), Light-Emitting	
	Dio	des (LED), and Check Pins by PCB	3-17
	1.	DC Driver PCB	3-17
	2.	CPU PCB	3-18
	3.	IP main PCB	3-18
	4.	Analog Processor PCB	3-19
	5.	Laser Driver PCB	
	6.	Lamp Regulator PCB	3-20
	7.	DC Fuse PCB	3-20
	8.	AC Fuse PCB	3-21
	9.	Developing Bias PCB	3-21
		HVT-AC PCB	
		Potential Measurement PCB	

Copier 1-5

2. Paper Deck 1-7

D. Image Adjustment Basic Procedure 1-9

E. Points to Note for Scheduled Servicing ... 1-12

G. Paper Deck2-28

H. Electrical System2-32

CHAPTER 4 SERVICE MODE

B.	Outline	DC-CPU R-CPU D. ADJUST (adjustment mode) E. FUNCTION (operation check mode) F. OPTION (settings mode) G. PG (test print) H. COUNTER (counter mode)	4-48 4-51) 4-97 4-119 4-134
	CHAPTER 5 S	ELF DIAGNOSIS	
	Copier	C. Sorter	5-23
	APPE	NDIX	
В. С.	General Timing Chart	 Type	A-15 A-16 A-17 A-17
	Specifications A-15	7. CLC Paper Deck-E1	

CHAPTER 1 MAINTENANCE AND INSPECTION

A. Scheduled Servicing List

1. Copier

Caution:
Do not use solvents or oils other than those listed.
Do not use solvents of one other than those listed.

△ Cl	ean ● Replace × Lubricat	e □ <i>A</i>	Adjust	© Ins	spect	As of December 2000
Unit	Part	every 20.000	Inter every 25,000	every	every 50.000	Remarks
Externals and controls	Copyboard glass Copyboard cover Ozone filter Air filter		△ △ •			Use alcohol. Or, 1 yr. Or, 1 yr.
Original exposure	Toner filter Original reflecting cover No. 1 through No. 3 mirrors, Lens Scanner rail					Or, 1 yr. Use blower brush. After cleaning, apply
Pickup/ feeding	Attraction, registration spring clutch Attraction roller Attraction roller cleaner pan Registration roller Pre-registration roller 2 Pre-registration roller 1 Registration path middle guide Pickup vertical path roller		△ △		×	silicone oil. Use lubricant. Remove unit, and clean. Remove unit, and clean. Remove unit, and clean. every 250,000 Remove unit, and clean. Clean every 250,000 Clean the guide surface. every 250,000 Clean every 250,000
Transfer drum	Transfer drum cleaner Jam sensor (PS6) metal plate (resin tape used for No.2 static eliminator mount) Jam sensor (PS5) metal plate (polishing roller motor mounting plate)				×	Apply lubricant to the busing of the brush.
Laser exposure	Dust-proofing glass					
Charging	Shielding plate, block					Clean with lint-free paper; then, clean with alcohol. Be sure the part is completely dry before mounting. Do not use water. For post-cleaning charging assembly, clean every 20,000 copies.

			Intervals			
Unit	Part	every 20,000	every 25,000	every 40,000		Remarks
	Primary charging wire, Post-cleaning charging wire Separation, Internal/external static eliminator charging wire	•				For primary charging assembly, clean every 20,000 copies in low-humidity areas; for high-temperature/humidity areas, clean every 15,000 copies. In high-temperature/-humidity areas, replace every 15,000 copies.
	Grid plate, primary charging wire cleaning pad	•				For high-temperature/- humidity areas, replace every 15,000 copies.
Photosensitive drum area	No. 2 cleaner blade Black toner concentration sensor	\triangle				Turn over blade. See Note .
	Pre-cleaner sensor Pre-exposure lamp filter					Clean with cotton wad; see Note. Clean when replacing photosensitive drum.
	Photosensitive drum butting block	\triangle (front)				Clean when replacing photosensitive drum.
	Drum heater slip ring					Dry wipe every 150.000 copeis.
Developing assembly	Photosensitive drum butting roll Bias electrode	Δ				Clean when replacing developer. Clean each time developing assembly (each color) is mounted.
Fixing assembly	Fixing inlet guide Lower roller separation claw Oil applying blade Oil applying felt Thermistor Fixing oil		Δ	©		Use solvent. Use lint-free paper. Turn over felt. Dry wipe.
Others	Waste toner Hopper toner pan					Remove build up of toner.
	Leakage breaker Image adjustment					Includes execution of auto gradation correction.

Note: ■

If you have cleaned the sensor, be sure to execute the following in service mode:

- For the black toner concentration sensor, FUNCTION>INSTALL>INIT-D.
- For pre-cleaning sensor, FUNCTION>SENS-ADJ>CLN-OFST.

2. Paper Deck

	\triangle Clean	Replace	\times Lubricate	\Box Adj	ust	Inspe	ct	As of December 2000
					I	ntervals		
	Unit	Unit Part			every	every	every	Remarks
- 1					25 000	40,000	250,000	

	_	11	ntervals		
Unit	Part	every	every	every	Remarks
		25,000	40,000	250,000	
Pickup assembly	Feed roller, roll			\triangle	

B. Periodically Replaced Parts

As of December 2000

No.	Part name	Part number	Q'ty	Life (copies)	Remarks
1 2 3 4 5 6	Ozone filter (FM2, 5, 6) Air filter (FM1) Air filter (FM3) Air filter (FM14, 15) Toner filter (FM5, 6) Ozone filter (FM5)	FB2-4397 FB4-4819 FF5-8405 FB2-0247 FB4-4442 FB4-9641	3 1 1 2 2 1	25,000 25,000 25,000 25,000 25,000 25,000	Or, 1 yr.

C. Consumables and Durables

1. Copier

As of December 2000

No.	Part name	Part number	Q'ty	Life	Remarks
				(copies)	
1	Cleaner blade (drum cleaner	FB4-4677	1	20,000	Simultaneously with
	assembly)				photosensitive drum.
2	Drum cleaner scoop-up sheet	FF5-3993	1	20,000	Simultaneously with
					cleaning blade.
3	Side seal, front (drum cleaner	FF5-8392	1	20,000	Simultaneously with
4	assembly)	EE5 9202	1	20,000	cleaning blade.
4	Side seal, rear (drum cleaner assembly)	FF5-8393	1	20,000	Simultaneously with cleaning blade.
5	No. 2 scoop-up sheet (pre-	FG6-1046	1	20,000	Simltaneously with cleaning
	cleaning sensor)	1 00 10 10	1	20,000	blade.
6	Grid plate (primary charging	FB4-5117	1	20,000	For high temperature/high
	assembly)			- ,	humidity, 15,000.
7	Primary charging assembly	FF2-3552	1	20,000	For high temperature/high
	cleaning pad, upper				humidity, 15,000.
8	Primary charging assembly	FF2-3551	1	20,000	
	cleaning pad, lower				
9	Primary charging wire, 100V	FY3-0030	1	20,000	For high temperature/high
	Primary charging wire, 120/	FY3-0040	1	20,000	humidity, 15,000.
10	230V	EU7 2240	1	25,000	
10	Scanning lamp	FH7-3349	1	25,000	
11	Manual feeder pickup roller	FF5-4327	2	25,000	Manual feeder counter
	Transact Promap 101101	110 .027	-	20,000	reading.
12	Manual feeder feed roller	FF5-4331	1	25,000	Manual feeder counter
					reading.
13	Manual feeder separation	FF2-4710	1	25,000	Manual feeder counter
	roller				reading.
14	Attraction roller scraper	FF5-8427	1	25,000	
15	Waste toner case (6 pc/box)	FY9-7006	1	25,000	By user.
16	Post-cleaning charging wire	FY3-0030	1	20,000	100V
17	Post-cleaning charging wire	FY3-0040 FB4-4543	1	20,000 25,000	120/230V
1/	Fixing cleaning belt (upper, lower)	FD4-4343	1	23,000	
18	Drum cleaner end felt, front	FF5-2246	1	40,000	Simultaneously with
19	Drum cleaner end felt, rear	FF5-2247	1	40,000	cleaning blade.
20	No. 2 cleaning blade	FB2-0421	2	40,000	20,000 per edge.
21	Fixing upper roller	FB4-4484	1	40,000	Or, 1 yr.
22	Oil applying felt	FF5-9084	1	40,000	20,000 per side.
23	Y starter developer	F42-3132	1	40,000	
		F42-3133	1	40,000	120V UL only.
24	M starter developer	F42-3122	1	40,000	
		F42-3123	1	40,000	120V UL only.
25	C starter developer	F42-3112	1	40,000	1207/111 221-
		F42-3113	1	40,000	120V UL only.


26	No.	Part name	Part number	Q'ty	Life	Remarks
Page						
Page	26	Rk starter developer	F42-3102	1	40,000	
27 Separation/internal and external static charging wires Separation/internal and external charging wires Separation brush unit FG6-0797	20	BK starter developer		1		120V III. only
external static charging wires Separation/internal and external charging wires 28 Attraction brush unit FG6-0798 1 50,000 As a unit. 30 Transfer blade unit FG6-0797 1 50,000 As a unit. 31 Transfer drum cleaner FB4-4953 2 50,000 Simultaneously with transfer sheet. 32 Transfer drum sheet FB4-4111 1 50,000 Simultaneously with transfer sheet. 33 Separation push-up roll FB2-0631 1 50,000 Simultaneously with transfer sheet. 57 Simultaneously with transfer sheet. 58 Separation push-up roll FB2-0631 1 50,000 Simultaneously with transfer sheet. 57 Simultaneously with transfer sheet. 57 Simultaneously with transfer sheet. 58 Simultaneously with transfer sheet. 59 Separation foller, front (re-pickup assembly) FF5-2101 1 100,000 Duplexing counter reading. 57 Simultaneously with transfer sheet. 58 Simultaneously with transfer sheet. 59 Separation roller (re-pickup assembly) FF5-2101 1 100,000 Duplexing counter reading. 57 Simultaneously with transfer sheet. 58 Simultaneously with transfer sheet. 59 Simult	27	Separation/internal and		1 1		
Separation/internal and external charging wires P3-0040 1 50,000 120/230V	- '	_	113 0030	1	30,000	100 7
external charging wires 28			FY3-0040	1	50,000	120/230V
Attraction bruish unit		-			,	
30	28		FG6-0798	1	50,000	As a unit.
31 Polishing roller FB4-5111 1 50,000	29	Transfer blade unit	FG6-0797	1	50,000	As a unit.
32	30	Transfer drum cleaner	FB4-4953	2	50,000	
33 Separation push-up roll			FB4-5111	1	50,000	
34 Transfer side scraper FF5-2070 2 50,000 35 Fixing lower roller FB4-4486 1 50,000 Or, 1 yr.				1		
34 Transfer side scraper FF5-2070 2 50,000 7 7 7 7 7 7 7 7 7	33	Separation push-up roll	FB2-0631	1	50,000	,
35	١					sheet.
36 Re-pickup feed roller, front (re-pickup assembly)		•				
(re-pickup assembly) Re-pickup feed roller, rear (repickup assembly) FF5-2102 1 100,000 Duplexing counter reading. Dup						
37 Re-pickup feed roller, rear (repickup assembly) FF5-2103 1 100,000 Duplexing counter reading.	36		FF5-2101	1	100,000	
pickup assembly Feed roller (re-pickup assembly) Feed roller (re-pickup assembly) Feed roller (re-pickup assembly)	27		EE5 2102	1	100.000	
38 Feed roller (re-pickup assembly) FF5-2103 1 100,000 Duplexing counter reading.	3/		FF5-2102	1	100,000	
assembly Separation roller (re-pickup assembly) FF5-2104 1 100,000 Duplexing counter reading.	20		EE5 2102	1	100.000	
39 Separation roller (re-pickup assembly) FF5-2104 1 100,000 Duplexing counter reading.	30		FF3-2103	1	100,000	
assembly Feed roller, front (duplexing unit) FF5-8366 1 100,000 Duplexing counter reading.	30		FF5-2104	1	100.000	
Feed roller, front (duplexing unit)			113-2104	1	100,000	
unit Feed roller, rear (duplexing unit)	40	• .	FF5-8366	1	100 000	, and the second
Feed roller, rear (duplexing unit)			110 0000	1	100,000	
Unit Oil applying blade	41		FF5-8367	1	100.000	, and the second
42 Oil applying blade					,	
FH7-4618	42	Oil applying blade	FB4-4536	1	100,000	
FH7-4619	43	Fixing heater, upper	FH7-4617	1	100,000	100V
44			FH7-4618	1	100,000	120V
FH7-4612			FH7-4619	1	100,000	230V
FH7-4613	44	Fixing heater, lower	FH7-4611	1	100,000	100V
45						
46 Primary charging assembly FG6-0892 1 150,000 47 Separation charging assembly FG6-0795 1 150,000 48 Internal static eliminator FG6-0796 1 150,000 49 Eternal static eliminator FG6-0801 1 150,000 50 Post-cleaning charging assembly FG6-0888 1 150,000 51 Insulating bush (fixing assembly) FB4-7807 4 150,000 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 Per cassette holder. 57 M developing assembly FG6-0782 1 500,000 Per cas						230V
47 Separation charging assembly FG6-0795 1 150,000 48 Internal static eliminator FG6-0796 1 150,000 49 Eternal static eliminator FG6-0801 1 150,000 50 Post-cleaning charging assembly FG6-0888 1 150,000 51 Insulating bush (fixing assembly) FB4-7807 4 150,000 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 Per cassette holder. 57 M developing assembly FG6-0782 1 500,000 FG6-0783 1 500,000		1 1				
1		• • •				
49 Eternal static eliminator FG6-0801 1 150,000 50 Post-cleaning charging assembly FG6-0888 1 150,000 51 Insulating bush (fixing assembly) FB4-7807 4 150,000 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 Per cassette holder. 57 M developing assembly FG6-0782 1 500,000 1 58 C developing assembly FG6-0783 1 500,000				1 1		
50 Post-cleaning charging assembly FG6-0888 1 150,000 51 Insulating bush (fixing assembly) FB4-7807 4 150,000 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000				1 1		
assembly FB4-7807 4 150,000 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 For cassette holder. 57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000						
51 Insulating bush (fixing assembly) FB4-7807 4 150,000 Per cassette holder. 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000	50		FG6-0888	1	150,000	
assembly) 52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000	51		ED 4 7007		150,000	
52 Pickup roller, front (cassette) FF5-7829 1 250,000 Per cassette holder. 53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 Per cassette holder. 57 M developing assembly FG6-0782 1 500,000 1 58 C developing assembly FG6-0783 1 500,000	31		FB4-7807	4	150,000	
53 Pickup roller, rear (cassette) FF5-7830 1 250,000 Per cassette holder. 54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 Per cassette holder. 57 M developing assembly FG6-0782 1 500,000 1 58 C developing assembly FG6-0783 1 500,000	52		EE5 7820	1	250,000	Por cossatta holdar
54 Separation roller (cassette) FB2-7777 1 250,000 Per cassette holder. 55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 Per cassette holder. 57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000						
55 Feed roller (cassette) FF5-7837 1 250,000 Per cassette holder. 56 Y developing assembly FG6-0781 1 500,000 FG6-0782 1		_				
56 Y developing assembly FG6-0781 1 500,000 57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000		*				
57 M developing assembly FG6-0782 1 500,000 58 C developing assembly FG6-0783 1 500,000		· /				2 51 Subbotto Holder.
58 C developing assembly FG6-0783 1 500,000		1 0				
		1 0				
	59	Bk developing assembly	FG6-0784	1	500,000	


2. Paper Deck


As of December 2000


No	Part name	Part number	Q'ty	Life	Remarks
				(copies)	
1 2 3	Paper deck pickup roller Paper deck feeding roller Paper deck separation roller	FB4-2033 FB4-2034 FB2-7777	2 2 1	250,000 250,000 250,000	1

D. Image Adjustment Basic Procedure

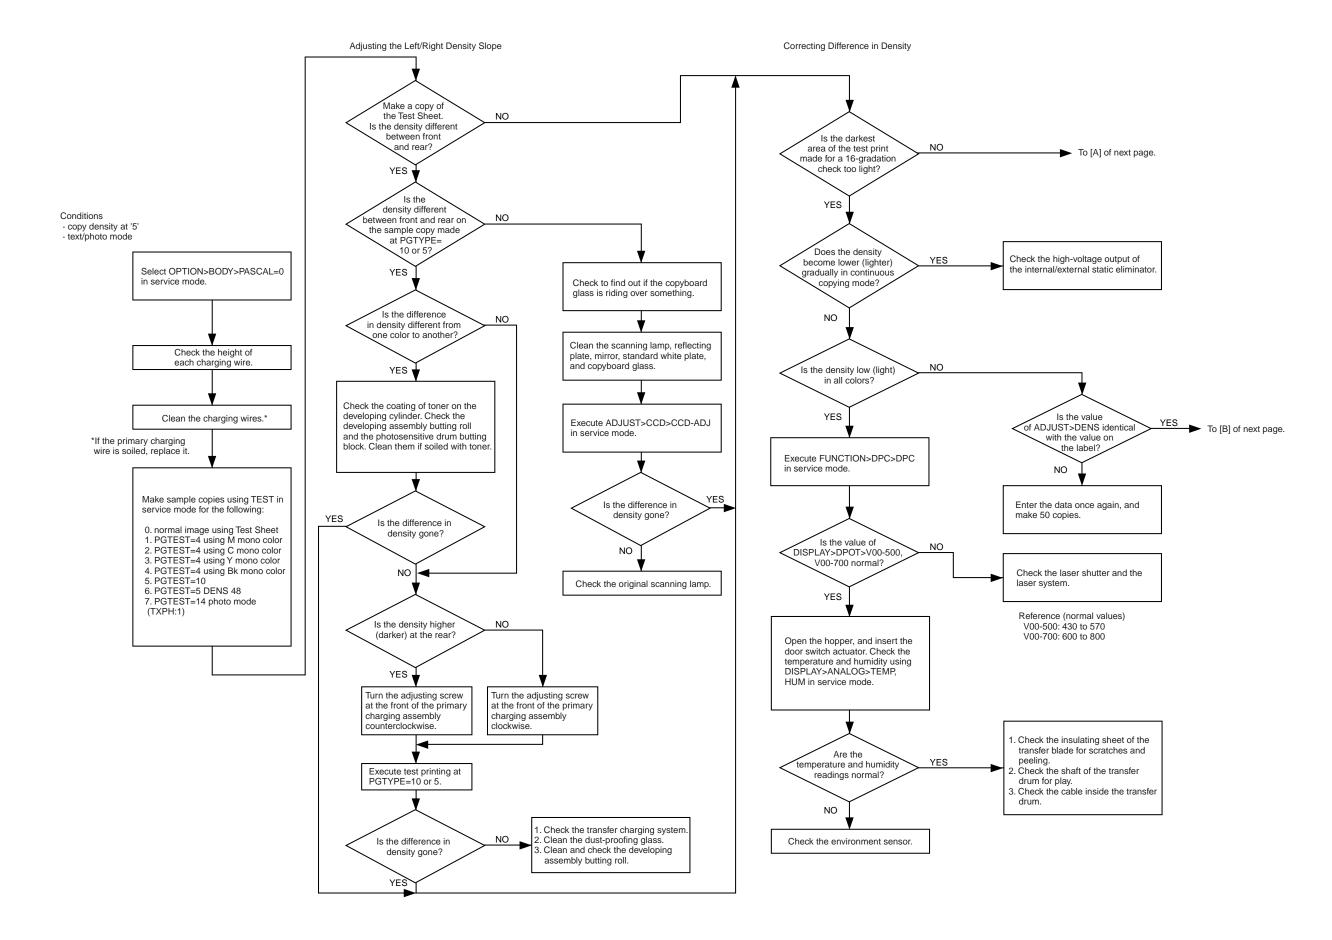

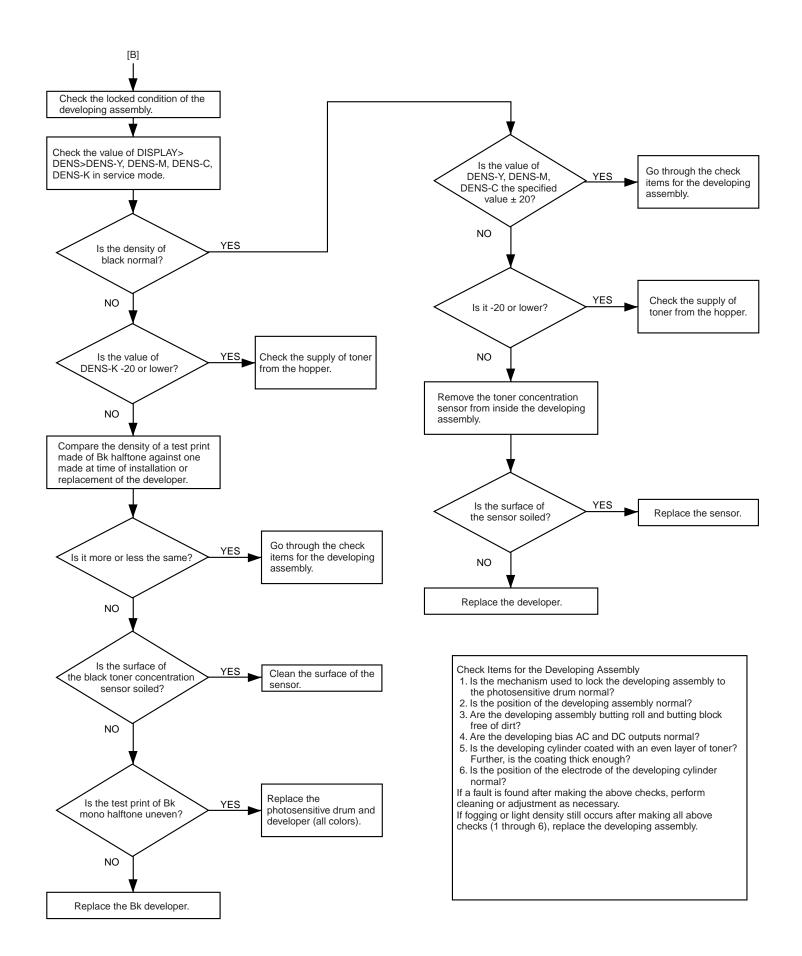

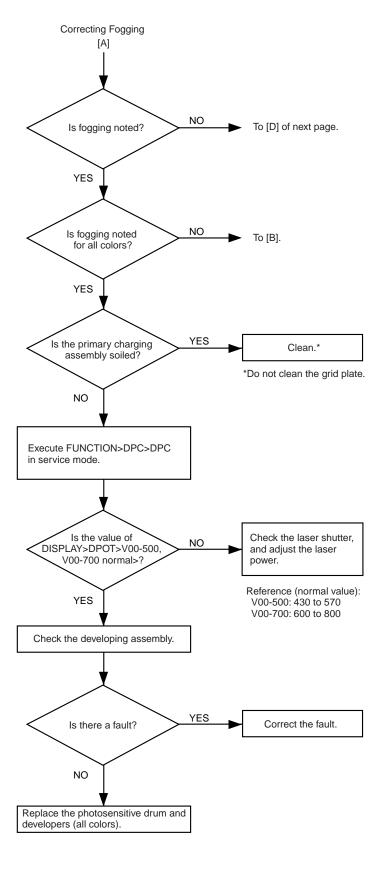

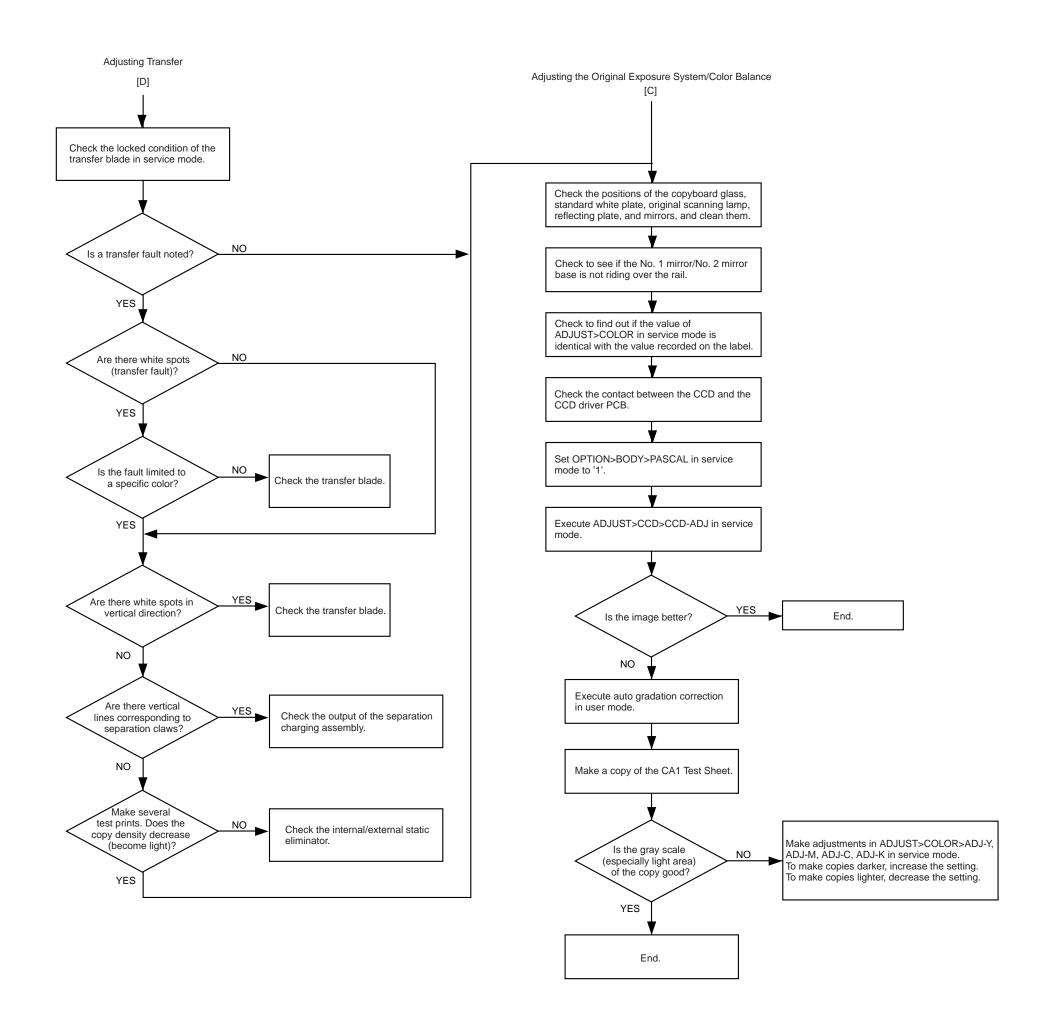

E. Points to Note for Scheduled Servicing

.					Process System		
Part	Tool and others	Work and remarks			Part	Tool and others	Work and remarks
Lens, CCD Copyboard sheet, copyboard glass	Blower brush Alcohol, lint-free paper	Cleaning (Note 1) Cleaning			Charging wire, shielding plate, block	Lint-free paper, alcohol	Dry wiping; then, cleaning with alcohol Do NOT use water. (Note 2)
Standard white plate					Pre-exposure lamp, filter, dust-proofing glass, potential sensor	Lint-free paper, blower brush	Cleaning
Reflecting plate, No. 1 through No. 3 mirrors	Blower brush	Cleaning			Pre-cleaning sensor assembly, No. 2 scoop-up	Cotton wad, lint-free paper	Use cotton wad to clean the sensor assembly. (Note 3)
Scanner rail	Silicone oil	Cleaning; then, lubricating	9	/ +	Black toner concentration	Blower brush Lint-free paper, blower	Remove the buildup of toner
Fixing System			1		sensor assembly, No. 2 blade assembly	brush	then, dry wipe. Do NOT use solvent. (Note
Part	Tool and others	Work and remarks					
Oil applying felt, oil applying blade	Paper rag	Cleaning			Developing System		
Thermistor	Solvent	Cleaning			Part	Tool and others	Work and remarks
Separation claw					Developing assembly butting roll, butting block (photosensitive drum)	Solvent	Cleaning at time of replacin the drum.
Inlet guide					Developing roll	Solvent	Cleaning at time of replacin the developer.
Transfer Drum System				L			,
			/ 6 - 6				
Part	Tool and others	Work and remarks					
Part Charging wire, shielding plate, block	Tool and others Lint-free paper, alcohol	Dry wiping; then, cleaning with alcohol.		\ _	Pickup/Feeding System		
Charging wire, shielding plate, block		Dry wiping; then, cleaning			Pickup/Feeding System Part	Tool and others	Work and remarks
Charging wire, shielding		Dry wiping; then, cleaning with alcohol.				Tool and others Lint-free paper	Work and remarks Cleaning (Remove the unit.
Charging wire, shielding plate, block Transfer drum cleaner	Lint-free paper, alcohol	Dry wiping; then, cleaning with alcohol. Do NOT use water. (Note 2)			Part Attraction roller, attraction		
Charging wire, shielding plate, block Transfer drum cleaner assembly Jam sensor (PS6) metal	Lint-free paper, alcohol Blower brush	Dry wiping; then, cleaning with alcohol. Do NOT use water. (Note 2) Cleaning		//	Part Attraction roller, attraction roller cleaner pan Registration roller,	Lint-free paper	Cleaning (Remove the unit.

CHAPTER 2 STANDARDS AND ADJUSTMENTS

A. Image Adjustment System

1 Image Margin

The image margin of a copy is normal if it is as follows when made in Direct with original detection OFF.

Leading edge: $8/0 \pm 1.5 \text{ mm} (8.0 \pm 2.0 \text{ mm})$ Left/right: $2.0 \pm 1.5 \text{mm} (2.0 \pm 1.5 \text{ mm})$ Trailing edge: $2.5 \pm 1.5 \text{ mm} (4.5 \pm 2.0 \text{ mm})$

The value in parentheses represents double-sided copying.

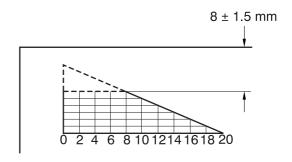


Figure 2-1 Leading Edge Image Margin

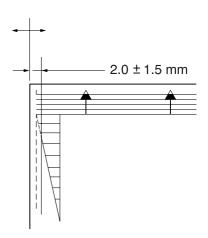


Figure 2-2 Left/Right Image Margin

2 Checking/Adjusting the Image Margin

When making checks and adjustments, observe the following order:

- a. Adjusting the left/right registration
- b. Adjusting the attraction position (ATT-T)
- c. Adjusting the image margin (RG-XA, RG-XB)
- d. Adjusting the transfer delay (TR-DELAY)
- e. Adjusting the image read start position (ADJ-XY)
- f. Adjust the image trailing edge margin (TR-END-A, TR-END-B)

- a. Adjusting the Left/Right Registration
- 1) Make ten copies each from all cassettes, multifeeder, and duplexing unit, and check the left/right registration A; it is correct if as follows:

 $\begin{array}{ll} \text{for cassette:} & 2.0 \pm 1.5 \text{ mm} \\ \text{for multifeeder:} & 2.0 \pm 1.5 \text{ mm} \\ \text{for duplexing unit:} & 2.0 \pm 1.5 \text{ mm} \end{array}$

2) If the registration A is not as indicated, perform the following:

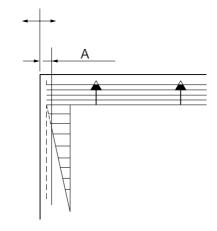


Figure 2-3

- For the Cassette
- 1) Remove the cassette front cover from the cassette holder you want to adjust.
- 2) Loosen the left/right screw [1].
- 3) Turn the adjusting screw [2] to adjust the position of the horizontal registration adjusting plate so that the horizontal registration on an image is 2.0 ± 1.5 mm. (A full turn causes a shift of about 0.7 mm.)
 - · To increase the registration along the front, turn the adjusting screw counterclockwise.
 - · To increase the registration along the rear, turn the adjusting screw clockwise.
- 4) After the adjustment, be sure to perform "registering the paper width basic value."

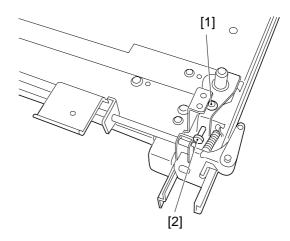


Figure 2-4

For the Multifeeder Turn the screw [1] to move the position of the tray so that the registration is 2.0 ± 1.5 mm in Direct.

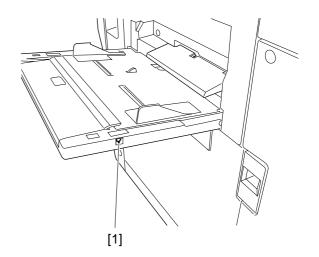


Figure 2-5

• For the Duplexing Unit Loosen the screw [1], and move the position of the paper jogging guide so that the registration is 2.0 ± 1.5 mm in Direct.

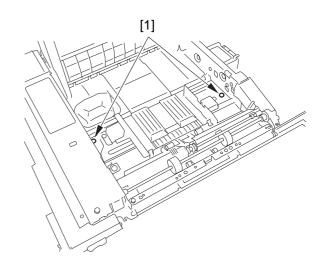


Figure 2-6

- b. Adjusting the Attraction Position (ATTRACT)
- 1) Select A4.
- 2) Select ADJUST>FEED-ADJ>ATT-CHK
- 3) Set ATT-CHK to '1' (2-sheet retention; sides B and A), and press OK.
- 4) Select ATT-ON, and press OK.
 - Copy paper will be picked up, attracted, and stopped.

- 5) Slide out the transfer frame.
- 6) Place a ruler and copy paper against the marking (Figure 2-7) etched to the transfer drum ring (front, rear), and measure the position d of the copy paper in relation to the leading edge of the copy paper. Perform this for both sides A and B.
- 7) Make adjustments so that d is 0 ± 0.5 mm in service mode (ADJUST>FEED-ADJ). for side A: ATT-T-A for side B: ATT-T-B
 - Changing ATT-T-A, ATT-T-B to '1' will shift the point of attraction by about 0.4 mm.
 - A higher setting will delay the start of attraction (in the direction of the black arrow) while a lower setting advances it (in the direction of the white arrow).
- 8) After adjustment, turn off and then on the power switch.
 - Keep in mind that copies made in normal mode will be black if you forget to turn off and then on the power switch.

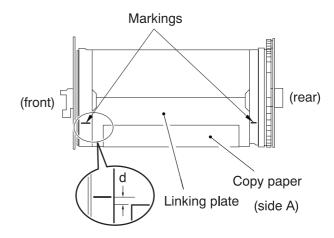


Figure 2-7


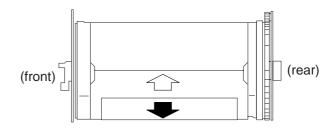


Figure 2-8

- c. Adjusting the Image Leading Edge Margin (RG-XA, RG-XB)
- 1) Select ADJUST>FEED-ADJ>**RGST- CHK** in service mode.
- 2) Set RGST-CHK to '1' (2-sheet retention; sides B and A), and press OK.
- 3) Select RGST-ON, and press OK.
 - A total of two prints (one each shown in the figure) will be generated.



5) Select the following service modes; then, make adjustments by changing the settings so that the leading edge d is 8 ± 0.5 mm.

for side A: ADJUST>FEED-ADJ> \mathbf{RG} - \mathbf{XA}

for side B: ADJUST>FEED-ADJ> \mathbf{RG} - \mathbf{XB}

- Setting it to '1' will shift the leading edge margin by about 0.06 mm.
- A higher setting increases the leading edge margin while a lower setting decreases it.



Test print on side A



Test print on side B

Figure 2-9


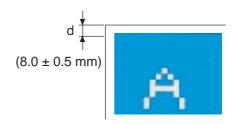


Figure 2-10

- d. Adjusting the Transfer Delay (TR-DELAY)
- 1) Select FUNCTION>ATTRACT>**TR1- CHK** in service mode.
- 2) Set TR1-CHK to '1' (2-sheet retention; both sides B and A), and press OK.
- 3) Select TR1-ON, and press OK.
 - A total of two prints (one each shown in the figure) will be generated.

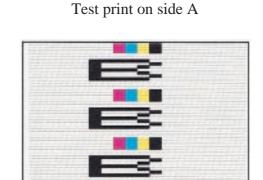

Test print on side B

Figure 2-11

- 4) Measure the transfer delay d on side B on the generated print.
- 5) Select ADJUST>FEED-ADJ>**TR-DLY**-A or B in service mode, and make adjustments so that the transfer delay is 3 ± 0.5 mm.
 - Changing the setting to '1' will shift the transfer delay by about 0.4 mm.
 - A higher setting will increase the transfer delay while a lower setting will decrease it.
- 6) Select FUNCTION>ATTRACT>**TR2- CHK** in service mode, and set '1' (2-sheet retention; both sides B and A), and press OK.
- 7) Select TR2-ON, and press OK.
- 8) Check the leading edge margin (8 \pm 0.5 mm) on the print.

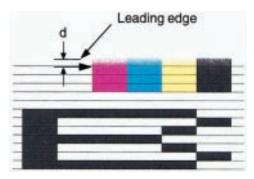


Figure 2-12

- e. Adjusting the Image Read Start Position (ADJ-XY)
- 1) Place the Test Sheet on the copyboard glass.
- 2) Select ADJUST>ADJ-XY in service mode.
- 3) on the ADJ-XY screen, press the Copy Start key.
 - The appropriate copying mode will automatically be selected, and a copy is made with a shift of about 50 mm as shown in the figure.
- 4) If part of the image is missing, decrease the setting of **ADJ-X**, **ADJ-Y** in service mode.
- 5) If part of the image is outside the image area, increase the setting of **ADJ-X**, **ADJ-Y**.
- 6) Press the Copy Start key once again, and make a check.
- 7) Press the Reset key.
- f. Adjusting the Image Trailing Edge Margin (TR-END-A, B; end of transfer high voltage)

If you have replaced the transfer drum unit in the field, correct the variation in the end of the transfer voltage.

- 1) Select ADJUST>FEED-ADJ>TR-END-A or B in service mode, and enter '25' (10 mm).
- 2) Select ADJUST>FEED-ADJ>TR2-ON; then, press the OK key.
- 3) Measure the distance X (mm) between the point at which blurring starts along the trailing edge of the image on the generated test print and the trailing edge of the image.
- 4) Enter the result of (10 x)/0.4 as the adjustment value of TR-END-A or -B. (Round the result up to a whole number.)
- 5) Select ADJUST>FEED-ADJ>TR2-ON in service mode once again; then, press the OK key.
- 6) Check to make sure that the image along the trailing edge of the generated test print is not blurred.
- 7) Record the value of ADJUST>FEED-ADJ>TR-END-A or -B on the service label.

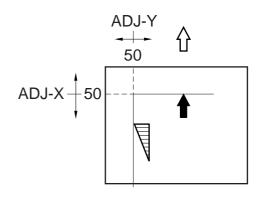


Figure 2-13

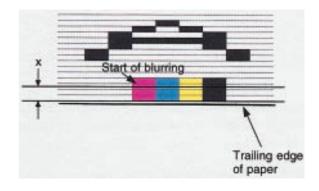


Figure 2-13a

B. Exposure System

1 Routing the Scanner Drive Cable

Route the scanner drive cable as indicated; i.e., [1] through [8]. Then, perform "adjusting the mirror position."

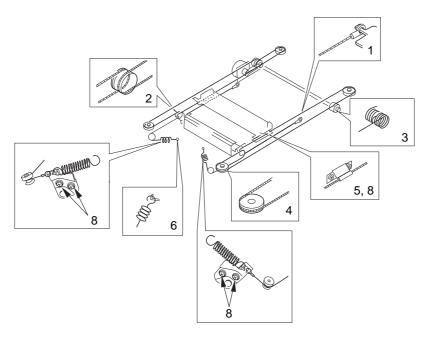


Figure 2-14

2 Adjusting the Mirror Position

Be sure to adjust the position of the mirror when you have routed the scanner drive cable.

- 1) Extend the arm of the mirror positioning tool (FY9-3040) fully.
- 2) Fit the mirror positioning tool between No. 1 mirror base and No. 2 mirror base.
- 3) Route the scanner drive cable to the No. 1 mirror mount.

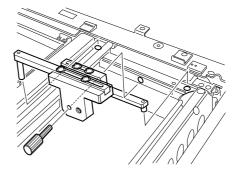


Figure 2-15

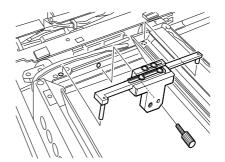


Figure 2-16

C. Image Formation System

1 Adjusting the Height of Charging Wires

The height (position) of the charging wire of each charging assembly may be adjusted by turning the screw found behind the assembly. A full turn of the screw will shift the charging wire by about 0.7 mm.

You cannot, however, change the height of the wire of the internal static eliminator, external charge eliminator, separation charging assembly or the post-cleaning charging assembly.

Points to Note about the Photosensitive Drum

- a. The photosensitive drum is vulnerable to strong light, and exposure to strong light for an appreciable period of time will lead to white spots or black bands on copies.

 Whenever you have removed the photosensitive drum from the copier, be sure to wrap the light-blocking sheet (or five to six sheets of fresh copy paper) around it, and keep it in a dark place.
- b. If you are installing a new photosensitive drum, be sure to perform the following:
 - 1) Install the new photosensitive drum. At this time, be sure to mount it so that the lot No. label attached inside it is toward the front of the copier.
 - 2) Mount the primary charging assembly, pre-cleaning charging assembly, photosensitive drum cleaner assembly, and developing assemblies.
 - 3) Coat the No. 2 blade of the black toner concentration sensor evenly with drum cleaner lubricant (TKN-0480).
 - 4) Coat the blade of the photosensitive drum cleaner assembly with drum cleaner lubricant (TKN-0480).
 - 5) Dry wipe the window of the black toner concentration sensor, and mount it.

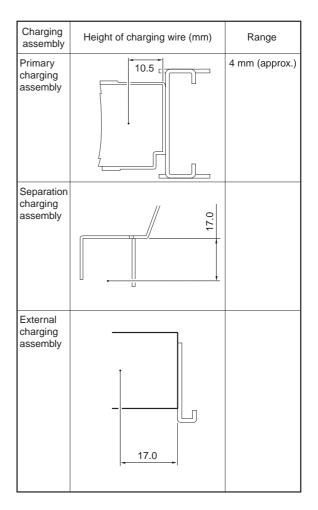


Figure 2-17

- 6) Dry wipe the window of the precleaning sensor, and mount it.
- 7) Turn on the power switch, and keep the copier in standby state.
- 8) Select FUNCTION>INSTALL> STIR-4 in service mode, and execute it.
- 9) Select FUNCTION>SENS-ADJ> **CLN-OFST**, and execute it.
- 10) Record the settings of ADJUST> SENS-ADJ>CLN-TH, CLN-TMP on the service label attached behind the front right cover.
- 11) Select FUNCTION>INSTALL>
 INIT-D in service mode, and execute it
- c. If the surface of the photosensitive drum is soiled, wipe it with a flannel cloth coated with toner. (Do NOT use paper, lint-free or otherwise.)

Do not use solvent when cleaning it. Do not touch its surface.

Adjusting the Position of the Photosensitive Drum Fixing Shaft

Slide the photosensitive drum frame unit about 5 cm out of the copier, and then slide it back in. If the movement is not smooth, adjust the position of the photosensitive drum fixing shaft using the drum shaft positioning tool (FY9-3045).

This adjustment, however, need not be made if the images are free of color displacement, blurring, and faults at intervals and, moreover, the discrepancy between the photosensitive drum fixing shaft and the hole of the photosensitive drum flange is about 1 mm.

- 1) Slide out the photosensitive drum unit from the copier.
- 2) Remove the six screws [1], and detach the photosensitive drum butting blocks [2] (front, back); then, detach the photosensitive drum [3] from the photosensitive drum frame unit [4].
- 3) Slide the photosensitive drum frame unit into the copier, and secure it in place with three screws.
- 4) Secure the drum motor assembly [5] to the copier temporarily with seven screws [6].

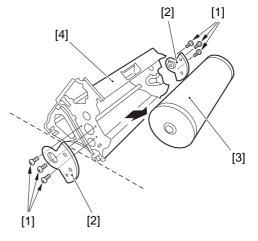


Figure 2-18

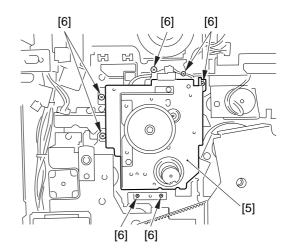


Figure 2-19

- 5) Secure the drum shaft positioning tool [7] in place to the photosensitive drum frame unit with the two screws [8] removed in step 2).
- 6) Secure the drum motor assembly in place with seven screws.
- 7) Detach the drum shaft positioning tool, and slide out the photosensitive drum unit from the copier; then, mount the unit and parts removed in step 1).

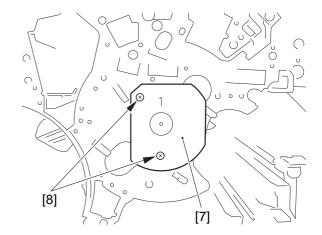


Figure 2-20

4 Use of Grease

Do NOT use grease (conducting or otherwise) to the slip ring for the drum heater.

5 Adjusting the Developing Assembly S-B Gap

If you have replaced the developing blade, adjust the S-B gap of each sleeve using the S-B gap gauge (FY9-3044).

Developer	S-B gap
Yellow	0.62 mm
Cyan	0.74 mm
Magenta	0.74 mm
Black	0.48 mm

Table 2-1

Replacing the Developer

- 1) Open the hopper unit fully.
- 2) An appreciable amount of developer will fall out in the next step. Keep a plastic bag [1] as shown.
- 3) Detach the cap [2] from the discharge opening found at the front bottom of the developing assembly whose developer you want to replace.
- 4) Select FUNCTION>INSTALL in service mode.
- 5) While keeping the plastic bag against the discharge opening, press **RECV-M/C/Y/K**, as appropriate, in service mode.
 - When the developer has stopped pouring, press the Stop key to stop the operation.
- 6) Fit the cap back on the discharge opening.
- 7) Remove the screw, and detach the developing assembly; then, detach the cap from the discharge opening.
 - In the case of the black developing assembly, disconnect the connector also.
- 8) While tilting the developing assembly, turn the gear by hand to discharge all remaining developer.
 - At this time, tilt the developing assembly farther down while turning the gear so that no toner will remain when it is finally held upright.
- 9) Fit the cap to the discharge opening.
- 10) Mount the developing assembly to the copier.
- 11) At the end of the wait period, select FUNCTION>INSTALL in service mode.
- 12) Press SPLY-M/C/Y/K, as appropriate.
- 13) See that the developing assembly is locked in place, and the screw inside it rotates (about 10 sec).

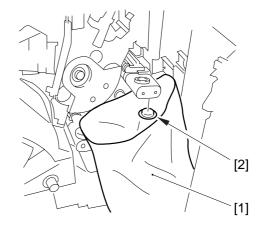


Figure 2-21

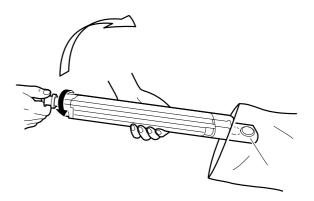


Figure 2-22

14) Fit the developer supply funnel that comes with the copier to the developing assembly upright.

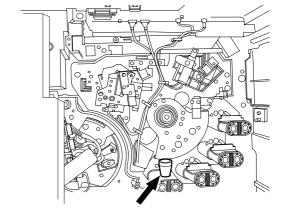


Figure 2-23

Figure 2-24

- 15) Put the developer into the developing assembly.
 - Turn the developer container slowly while tilting it to facilitate the work.
- 16) When done, press the Stop key to stop the operation.
- 17) Execute **STIR-Y/M/C/K** in service mode (about 10 min).
- 18) Execute **INIT-Y/M/C/K** in service mode (about 10 min).
- 19) Select ADJUST>**DENS** in service mode.
- 20) Record the data of the DENS screen on the service label.

Points to Note about the Pre-Cleaning Sensor

If you have removed or replaced the precleaning sensor assembly, perform the following:

- 1) Dry wipe the window of the pre-cleaning sensor, and mount it.
- 2) Turn on the power switch, and keep the copier in standby state.
- 3) Select and execute FUNCTION>SENS-ADJ>CLN-OFST in service mode.
- 4) Record the settings of ADJUST>SENS-ADJ>CLN-TH, CLN-TMP in service mode to the service label behind the front right door.

8 Points to Note about the Black Toner Concentration Sensor

If you have dry wiped the window of the black toner concentration sensor, select and execute FUNCTION>INSTALL>INIT-D after mounting it.

D. Pickup/Feeding System

1 Orientation of the Cassette Pickup Roller

When mounting the pickup roller [1] to the pickup assembly, be sure that the round marking [2] on the rubber portion is at the copier's front. The pickup roller is identified by color as follows:

- for the front, use the gold-colored roller.
- for the rear, use the silver-colored roller.

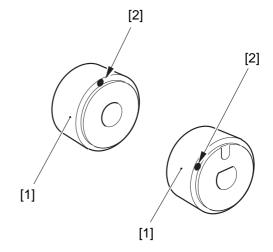


Figure 2-25

2 Orientation of the Cassette Feed Roller

When mounting the feed roller [1] to the pickup assembly, be sure that the gear [2] of the feed roller is at the copier's front.

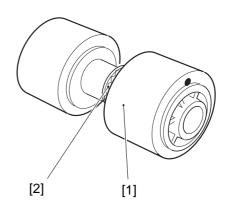


Figure 2-26

Orientation of the Cassette Separation Roller

When mounting the separation roller [1] to the pickup assembly, be sure that the round marking [2] is at the copier's front.

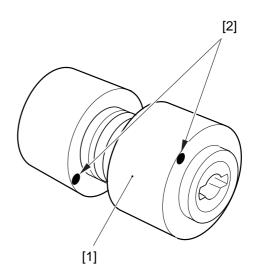


Figure 2-27

4 Adjusting the Pressure of the Separation Roller

If double feeding or pickup failure occurs during pickup, adjust the position of the pressure spring of the separation roller.

- a. If double feeding occurs, move the spring in the direction of arrow A.
- b. If pickup failure occurs, move the spring in the direction of arrow B.

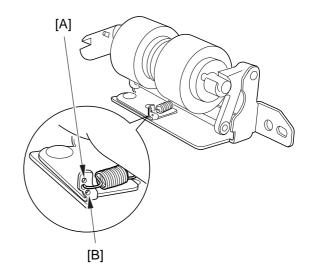


Figure 2-28

Orientation of the Duplexing Feed Roller and the Duplexing Separation Roller

When mounting the feed roller [1], be sure that the round marking [2] is at the copier's front.

When mounting the separation roller [3], be sure that the round marking [4] is at the copier's rear.

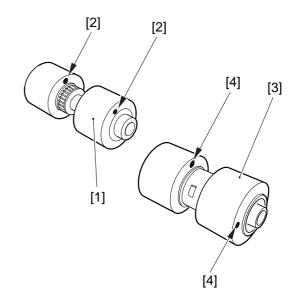


Figure 2-29

Orientation of the Manual Pickup, Feed, and Separation Rollers

When mounting each roller, be sure that the round marking [1], [2], [3] is at the copier's rear.

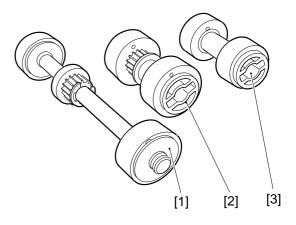


Figure 2-30

7 Attaching the Timing Belt for the Multifeeder Assembly

Keep the rack plate [1] of the multifeeder in closed state.

Move the slide volume [2] in the direction of the arrow, and attach the timing belt [3] to the pulley.

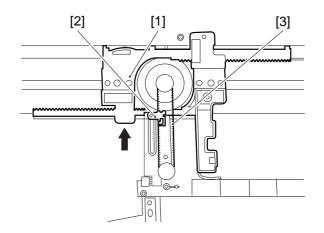


Figure 2-31

Adjusting the Position of the Duplexing Unit Paper Jogging Guide Sensor

- 1) Select A4R or LTRR, and perform copying on the first side of a double-sided copy.
- 2) Slide out the duplexing unit.
- 3) Measure the distance L of the paper jogging guide plate [1].

A4R: $L = 210 \pm 0.3 \text{ mm}$ LTRR: $L = 216 \pm 0.3 \text{ mm}$

4) If the distance is not as indicted, adjust the position of the paper jogging guide sensor.

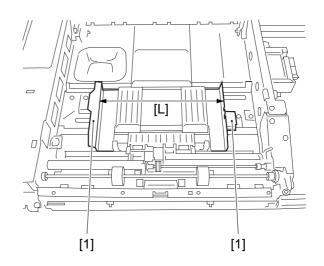


Figure 2-32

9 Position of the Duplexing Unit Stopper Plate Solenoid

- 1) Keep the steel core [1] of the solenoid drawn to the copier.
- 2) Rotate the shutter [2], and keep the distance as indicated, i.e., L1 is 1.0 ± 0.2 mm. Then, secure the stopper plate solenoid.

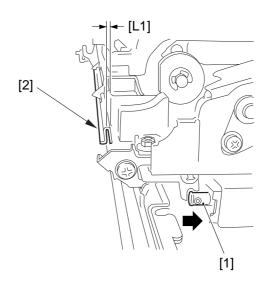


Figure 2-33

Position of the Duplexing Feed Roller Solenoid

While the steel core of the solenoid is drawn to the copier, mount the duplexing feed solenoid so that the distance L2 between the top edge of the feed roller and the holding tray is 49 ± 0.5 mm.

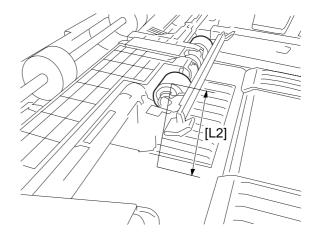


Figure 2-34

11 Replacing the Transfer Drum Sheet

Caution: -

The transfer drum frame is equipped with a slip-stop mechanism; as such, keep the following in mind:

- Do not turn the transfer drum clockwise with your fingers inside the opening in the transfer drum while the transfer drum is on the transfer drum frame.
- When the transfer drum is off the frame, it will tend to rotate in clockwise direction. (If the transfer drum is rotated clockwise, the transfer brush and the attraction brush will become damaged.
- a. Removing the Transfer Drum Sheet
- 1) Open the front cover; then, slide out the hopper, and open it 180°.
- 2) Slide out the transfer drum frame.
- 3) Detach the transfer drum from the transfer drum frame.
- 4) Remove the four TP screws [1], and remove the transfer drum side scraper [2].

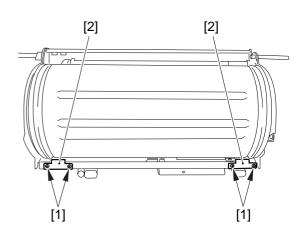


Figure 2-35

5) Peel off the trailing edge of the transfer drum sheet and keep it off the transfer drum.

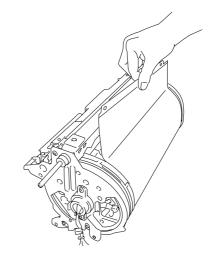


Figure 2-36

6) Peel off the leading edge of the transfer drum sheet.

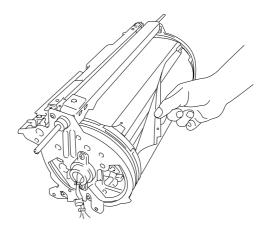


Figure 2-37

7) Peel off the transfer drum sheet while holding it on its leading edge.

Caution: —

Remove all traces of adhesive from the transfer drum ring.

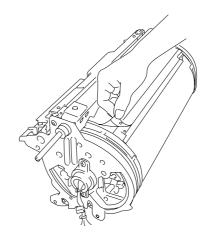


Figure 2-38

b. Attaching the Transfer Drum Sheet

Caution:

Do not touch the area on the transfer drum sheet where copy paper will be attracted.

- 1) Shift the locking lever of the transfer blade and the attraction brush in clockwise direction to release them.
- 2) Clean the area where double-sided tape is attached on the transfer drum ring with alcohol.
- 3) Turn the ring so that the ring linking plate [1] is positioned as shown.



Figure 2-39

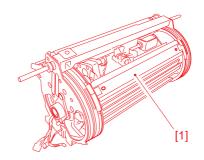


Figure 2-40

- 4) Remove the double-sided tape from the leading edge (where holes are found) of the transfer drum sheet.
- 5) By referring to the long hole in the left side of the linking plate and the long hole on the left side of the sheet, attach the transfer drum sheet so that it is horizontal while observing the following:

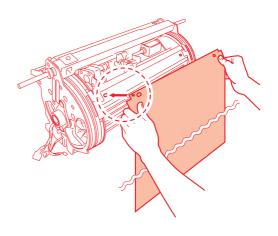


Figure 2-41

Caution: -

- 1. Fix the side of the transfer drum sheet with a long hole temporarily in place so that that the gap between the left side of the transfer drum sheet and the edge of the transfer ring is about 0.5 mm.
- 2. Then, lightly pull the transfer drum sheet to the right so that the middle of the sheet will not become slack, and attach the right side of the sheet where a round hole is found.
- 3. At this time, check to make sure that the right edge of the transfer drum sheet will not overlap the edge of the transfer ring; otherwise, shift the left side of the sheet where a long hole is found, and start over with step 2.

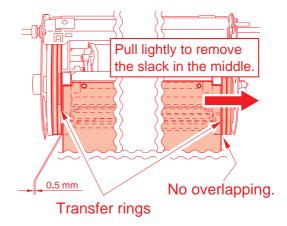


Figure 2-42

6) Let the transfer drum sheet drop on its own weight, and remove the backing paper from both sides of the sheet.

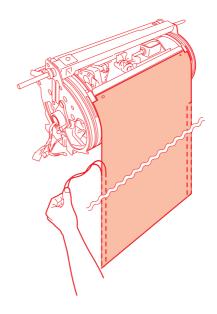


Figure 2-43

7) without holding the transfer drum sheet, turn the front side of the transfer ring to wrap it around the transfer drum.

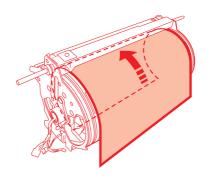


Figure 2-44

Caution:

After wrapping the transfer drum sheet around the transfer drum, check the gap between the leading edge and the trailing edge of the sheet; make sure it is 0 ± 1.5 mm. If not, go back to step 5), and make sure that the sheet is horizontal, and start over.

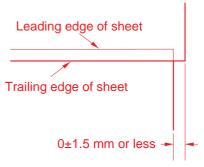


Figure 2-44a

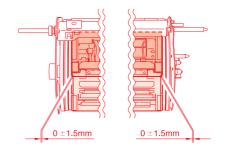


Figure 2-44b

- 8) After making sure that there is no gap, start attaching both ends of the sheet to the transfer drum.
 - At this time, try using both thumbs as shown, moving them as if to rub the sheet in axial direction. (Do not move the thumbs in peripheral direction, which can cause parts of the sheet to lift.)

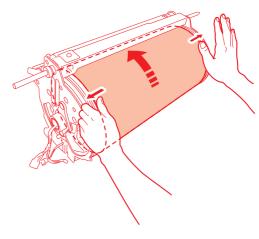


Figure 2-45

9) Remove the backing paper from the trailing edge of the transfer drum sheet.


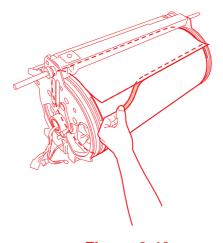


Figure 2-46

10) Without pulling the transfer drum sheet, lightly press along the middle of the double-sided tape, along the trailing edge of the sheet in sequence: [1], [2], and [3].



- 12) Shift back the lever released in step 1).
- 13) Check the transfer drum sheet for scratches, dents, and slack.

Caution:

Be sure there is no distortion or slack in the middle of the transfer drum. If distortion exists, the transfer drum will likely come into contact with the photosensitive drum, causing toner to fuse to the photosensitive drum and ultimately leading to cleaning faults of the photosensitive drum; if slack exists, on the other hand, such image faults as transfer faults and color displacement can occur.

14) Mount the transfer drum side scraper removed when detaching the old transfer drum sheet, and then mount the transfer drum to the machine.

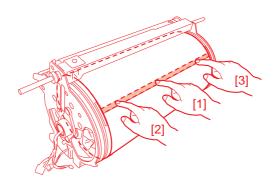


Figure2-46a


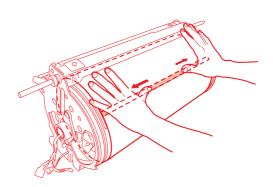


Figure 2-46b



Correctly Attached Sheet

Figure 2-46c



Incorrectly Attached Sheet

Figure 2-46d



Incorrectly Attached Sheet

Figure 2-46e

When Replacing the Transfer Drum Assembly

If you have replaced the transfer drum, perform the following in service mode (ADJUST>**FEED-ADJ**; p. 2-1):

- 1. Adjusting the attraction position (ATT-T-A, ATT-T-B)
- 2. Adjusting the image leading edge margin (RG-XA, RG-XB, RG-Y)
- 3. Transfer delay (TR-DLY-A, TR-DLY-B)
- 4. Adjusting the image trailing edge margin (TR-END-A, TR-END-B)

Position of the Paper Deflecting Plate Solenoid (SL10; delivery assembly)

Loosen the adjusting screw [4] to make adjustments while the paper deflecting plate [2] is butting against the delivery upper guide [3] when the solenoid [1] is on (viewing the delivery assembly from the side at the rear).

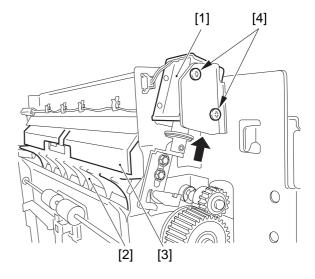


Figure 2-47

14 Applying Lubricant to the Transfer drum Cleaner

- 1) Use a specific lubricant (e.g., FY9-6006).
- 2) Put a drop of lubricant (one drop each) at points indicated (A).
- 3) Turn the gear several times by hand so that the lubricant spreads inside the bushing.
- 4) Put another drop (one each) once again, and repeat step 3.
- 5) When all amounts of lubricant have spread to the inside of the bushing, wipe the excess lubricant with lint-free paper (indicated by dashed lines).

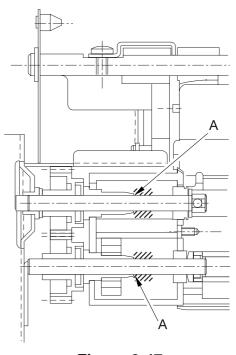


Figure 2-47a

E. Fixing System

When Replacing the Fixing Heater

Do not touch the surface of the heater.

Reference:

The copier's fixing heater has a specific orientation (front, rear); be sure to mount it so that the black lead line is at the rear.

2 Adjusting the Nip (nut for locking the fixing assembly)

a. Measuring the Nip Width


If you are taking measurements while the roller is not hot, let the copier complete its standby period, wait 15 min, and make 20 copies.

- b. Taking Measurements
- 1) Start service mode.
- 2) Select FUNCTION>FIXING>NIP-CHK, and press OK.

The nip width is correct if as indicated; otherwise, use the adjusting nut [1] to make adjustments.

Caution: -

b and c are points 10 to 15 mm from paper ends.

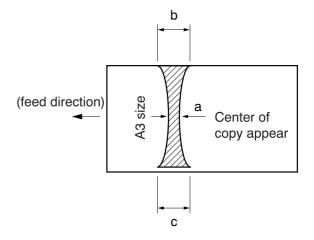

Dimension	Measurements*
a	7.3 ±0.3 mm
b-c	0.5 mm or less
b-a	0.5 mm or less
c-a	

^{*} Be sure both upper and lower rollers are sufficiently heated.

Figure 2-48

3 Orientation of the Cleaning Belt

Mount the fixing cleaning belt as shown.



Figure 2-49 Fixing Upper Cleaning Belt (rear view)




Figure 2-50 Fixing Lower Cleaning Belt (rear view)

4 Orientation of the fixing Upper/ Lower Solenoid

Adjust the position so that the stroke [A] is 3 ± 0.2 mm for the fixing paper solenoid and 4 ± 0.2 mm for the lower fixing solenoid.

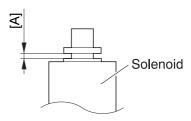


Figure 2-51

Points to Note When Replacing the Oil Coating Assembly

- Caution: -

5

- 1. The oil coating unit is adjusted and assembled at the factory, and must not be removed. Do not touch the screws [1] shown in the figure.
- 2. If you have replaced the oil felt, be sure to execute COPIER>OPTION> FIXING>PUMP-ON in service mode to impregnate it with fixing oil. Be sure to press the Stop key in about 10 min.

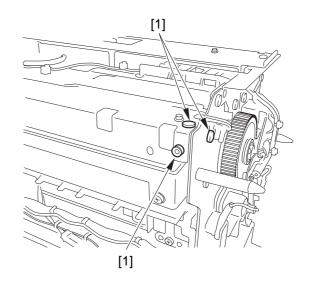


Figure 2-52 (rear)

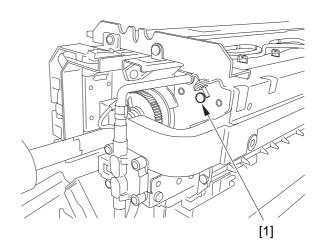


Figure 2-53 (front)

F. Externals/Controls

1 Handling the Flywheel

The copier's flywheel [1] weighs 8 kg in total. Take extra care not to drop it during work. When holding it, be sure to support it on its left and right as shown.

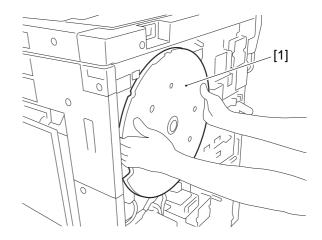


Figure 2-54

G. Paper Deck

1 Mounting the Paper Level Indicator

If you have moved the paper level indicator drive belt behind the front cover or the deck lifter when removing the front cover, perform the following to correct its position:

- 1) Move down the deck lifter to the lower limit
- 2) Move the drive belt [1] behind the front cover by hand lightly in the direction of the arrow until it stops (so that the white area in the window [2] increases).
- 3) Mount the front cover [3].

 If you operate the deck without matching the paper level indicator and the deck lifter, you can damage the drive system of the paper level indicator. Exercise care.

2 Adjusting the Left/Right Registration of the Deck

If the left/right registration is 0 ± 2.0 mm, adjust the position of the latch plate [1] with two screws [2]. (At this time, use the graduation [3] on the latch plate as a guide.)

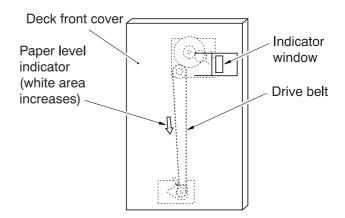


Figure 2-55

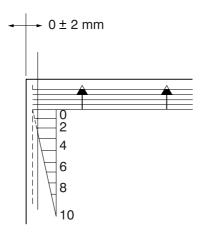


Figure 2-56

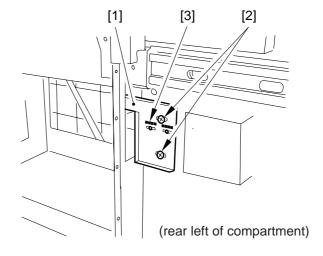


Figure 2-57

Adjusting the Position of the Roll

Make adjustments using the four mounting screws [4] of the roll support plate [3] so that the roll [1] is about 3 mm from the floor [2] when the compartment is fully slid out.

(At this time, use the graduation [5] on the front side plate as a reference.)

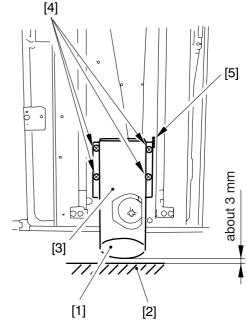


Figure 2-58

4 Routing the Lifter Cable

- 1) Fix the lifter drive shaft and the lifter in place with a hex wrench [1] and a long screwdriver [2]
- 2) Fix the cable fixing plate [3] in place to the lifter with two screws.
- 3) Hook the lifter cable on the pulley [4].
- 4) Hook the ball of the lifter cable on the pulley [5] of the lifter drive shaft, and wind the cable along the groove about 1.5 turns. At this time, be sure that the lifter cable is taut until the long screwdriver used to keep it in position is lightly lifted.
- 5) In this condition, secure the pulley in place to the lifter drive shaft with two set screws [6].
- 6) Secure all pulleys to the lifter drive shaft; then, measure the distance from the base plate of the compartment to the top surface of the lifter to make sure that the lifter is level.

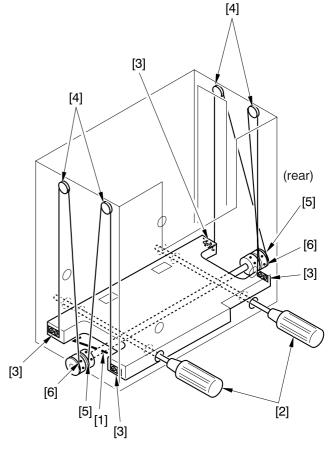


Figure 2-59

5 Orientation of the Deck Pickup Roller

When mounting the deck pickup roller [1] at the front, be sure that the marking [2] on the collar (silver-colored) is at the copier's front and the marking [3] on the side of the roller is at the copier's rear.

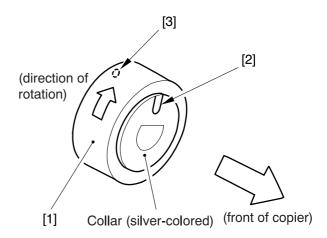


Figure 2-60

When mounting the deck pickup roller [4], be sure that the marking [5] on its inside and the marking [6] on its collar (gold-colored) are at the copier's rear.

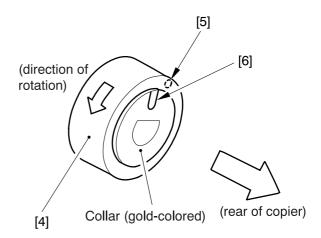


Figure 2-61

6 Orientation of the Deck Pickup/ Feed Roller

When mounting the deck pickup/feed roller [1], be sure that the belt pulley [2] is at the copier's front.

When mounting the pickup/feed roller rubber to the pickup/feed roller shaft, be sure that the marking [3] is at the copier's rear.

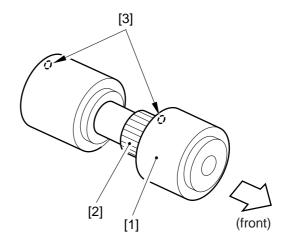


Figure 2-62

7 Adjusting the Deck Separation Roller Pressure

If double feeding or pickup failure occurs when pickup is from the side paper deck, adjust the position of pressure spring of the deck separation roller.

- If pickup failure occurs, move the position of the spring in the direction of arrow A.
- If double feeding occurs, move the position of the spring in the direction of arrow B.

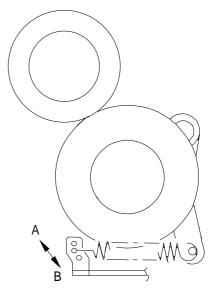


Figure 2-63

H. Electrical System

The copier's service mode is used to adjust its electrical mechanisms. Most of them are adjusted at the factory, and require high precision. As a rule, do not make those adjustments that are not discussed herein.

1 When Replacing the CPU PCB

- 1) Check the data of ADJUST and OPTION in service mode before replacement, and take notes. Or, back up the data using the downloading tool.
- 2) Remove the CPU PCB.
- 3) Mount the new CPU PCB.
- 4) Remove the three flash memories and the memory PCB from the old CPU PCB, and mount them to the new CPU PCB.
- 5) Turn on the power switch.
- 6) Select FUNCTION>CLEAR>DC-CON, R-CON and MMI-COPY in service mode; then, press the OK key.
- 7) Turn off and then on the power switch.
- 8) Enter the data you took notes of in step 1).
- 9) Execute FUNCTION>CCD>CCD-ADJ in service mode.
- 10) Turn off and then on the power switch.

When Replacing the Flash Memory on the CPU PCB

- 1) Check the data of ADJUST and OPTION in service mode before replacement, and take notes. Or, back up the data using the downloading tool.
- 2) Detach the old flash memory from the CPU PCB.
- 3) Mount the new flash memory to the CPU PCB.
- 4) Turn on the power switch.
- 5) Select FUNCTION>CLEAR>DC-CON, R-CON and MMI-COPY in service mode; then, press the OK key.
- 6) Turn off and then on the power switch.
- 7) Enter the data you took notes of in step 1).
- 8) Execute FUNCTION>CCD>CCD-ADJ in service mode.
- 9) Turn off and then on the power switch.

3 Adjusting the Laser Power

If you replaced the laser scanner unit, laser driver PCB, or laser controller PCB, enter the values attached to the PCB in service mode (ADJUST>LASER). Attach the label behind the right front cover for future reference.


If the output of the laser decreases, be sure to adjust the laser power.

- Laser power checker (FY9-4013)
- Digital multimeter (CK-0436)

Caution:

Check the values recorded on the label attached to the right front door.

- 1) Turn off the power switch.
- 2) Remove the copyboard glass; then, remove the lens base cover and the laser scanner cover.
- 3) Turn on the power switch.
- 4) Open the front left cover. Make sure the front left cover will not close.
- 5) Remove the left inside cover.
- 6) Remove the laser power checker inlet cover.
- 7) Set the laser power checker switch to '2'.
- 8) Holding the laser power checker [1] so that its light-receiving face is on the right, fit it into the slot [2].
- 9) Insert the probe of the laser power checker into the digital multimeter, and set the range to 200 mV.
- 10) Select FUNCTION>ADJUST>**POWER** in service mode, and press OK. (laser output)
- 11) Check the reading of the digital multimeter.
- 12) Compare the reading (Pmax) indicated on the label and the measurement. If different, turn VR2 [3] on the laser driver PCB.

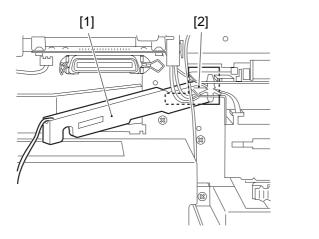

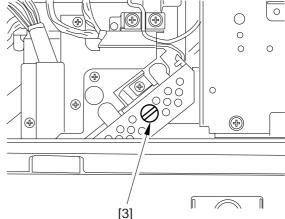


Figure 2-64

Figure 2-65

Caution: -

- 1. Turn VR2 slowly while monitoring the output of the laser power checker so as to avoid increasing the laser power excessively. Turning VR2 counterclockwise will decrease the laser output.
- 2. Be sure not to exceed the value recorded on the label. Otherwise, the laser diode may become damaged.
- 3. Do NOT press the Copy Start key while making adjustments using VR2.
- 13) Press the Stop key to stop the laser output.
- 14) Adjust the laser.

4 Adjusting the Laser

Caution: -

Be sure to adjust the laser power before starting the following work:

- 1) Select ADJUST>LASER in service mode.
- 2) Select T-V00 and enter '255'; then, press OK.
- 3) Select T-V00-ON, and press OK. (The laser will turn on.) Take notes of the reading (offset). To stop the laser output, press the Stop key.
- 4) Select T-V00, and adjust T-V00 so that the following is true: offset value + (0.15 to 0.20 mV)
- 5) Likewise, adjust T-VFF, PE-V00, P3-VFF-1, P3-VFF-2, P3-VFF-3, and P3-VFF-4. To stop the laser output, press the Stop key. Study the following table for an idea of optimum output.

Item	Standard (mV)	Laser ON key
T-V00	Offset value + (0.15 to 0.2)	T-V00-ON
T-VFF	Pmax ×70%	T-VFF-ON
P3-V00	Offset value + (0.1 to 0.15)	P3V00-ON
P3-VFF-1	Pmax ×45%	P3-V1-ON
P3-VFF-2	Pmax ×55%	P3-V2-ON
P3-VFF-3	Pmax ×65%	P3-V3-ON
P3-VFF-4	Value on label ×70%	P3-V4-ON

- 6) Press the Reset key to end service mode.
- 7) Turn off the power switch.

- 8) Detach the laser power checker, and secure the slot cover in place.
- 9) Mount the left inside cover.

When Replacing the Scanning Lamp, Standard White Plate, Lamp Regulator, Lamp Reflecting Plate, Analog Processor PCB, No. 1 Mirror Base Unit, No. 1 Mirror, No. 2 Mirror Base Unit, No. 2 Mirror, No. 3 Mirror, and CCD Unit

- 1) Close the front cover, and wait until the copier enters standby state. (Do not open the front cover while CCD-ADJ is being executed.)
- 2) Replace the part, and execute FUNCTION>CCD>CCD-ADJ in service mode. When 'END' appears, end the operation. If 'ERR' appears, start over.
- 3) Turn off and then on the power switch.

6 When Replacing the BD Unit

If you have replaced the BD unit, adjust the position as follows:

- 1) Set the meter range to VAC.
- 2) Connect the + probe to the check pin (TP301) and the probe to the check pin GND on the BD PCB
- 3) Execute FUNCTION>LASER>**POWER** in service mode.
- 4) Loosen the screw used to secure the BD unit in place, and tighten it when the output reading of the meter is maximum.

7 Checking the Environment Measurement PCB

The environment measurement PCB and the environment sensor are checked using the environment measurement PCB checker (TKN-0457) and the environment sensor calibrator (TKN-0456).

- a. Checking the Environment Measurement PCB
- 1) Turn off the power.
- 2) Open the hopper.
- 3) Remove the environment sensor from the environment measurement PCB, and fit the environment measurement PCB checker (TKN-0457) in its place.
- 4) Insert the door switch actuator, and turn on the power.
- 5) Set the meter range to 30 VDC.
 - Check to make sure that the voltage between J1-1 (+) and J1-2 (-) on the environment measurement PCB is 24 ± 2.4 V. If not, check the DC power supply PCB(DCP1).
- 6) Select DISPLAY>ANALOG in service mode.
- 7) Check the temperature and the humidity on the ANALOG screen.

TEMP: $25 \pm 5^{\circ}$ C

ABS-HUM: $40 \pm 10\%$

8) Check to make sure that the reading is as indicated.

If no, go to step 9).

If yes, go to step 14).

- 9) Press the Reset key, and turn off the power switch.
- 10) Disconnect the connector J1 of the environment measurement PCB.
- 11) Turn on the power switch.
- 12) Check the temperature and the humidity on the DISPLAY>**ANALOG** screen in service mode.

TEMP: $25 \pm 5^{\circ}$ C ABS-HUM: $36 \pm 10\%$

13) Check to see that the reading is as indicated.

If not, suspect a fault on the DC driver PCB or the CPU PCB.

- 14) Press the Reset key.
- 15) Turn off the power switch.
- 16) Connect the connector J1 to the environment measurement PCB.
- 17) Detach the environment measurement PCB checker from the environment measurement PCB, and connect the environment sensor in its place.
- 18) Attach all covers.

b. Checking the Environment Sensor

- 1) Check the environment measurement PCB.
- 2) Turn on the power switch, and leave the copier alone for 5 min.
- 3) Check the temperature and the humidity on the DISPLAY>ANALOG screen in service mode, and record the readings. (data A)

TEMP: °C data A1 ABS-HUM: % data A2

- 4) Press the Reset key, and turn off the power switch.
- 5) Detach the environment sensor from the environment measurement PCB, and insert the environment sensor calibration tool (TKN-0456) in its place.
- 6) Turn on the power switch, and leave the copier alone for 5 min.
- 7) Check the temperature and the humidity on the DISPLAY>**ANALOG** screen in service mode, and take notes of them.

TEMP: °C data B1 ABS-HUM: % data B2

- 8) Compare data A and data B.
 - difference between data A1 and data B1 is 0 ± 5 .
 - difference between data A2 and data B2 is 0 ± 20

If the difference between data A and data B is not as indicated, replace the environment sensor.

- 9) Press the Reset key, and turn off the power switch.
- 10) Detach the environment sensor calibrating tool from the environment measurement PCB, and fit the environment sensor.
- 11) Mount all covers.

Caution: -

The environment sensor calibration tool (TN-0456) is adjusted at the factory to high precision. Be sure to store it in an airtight container with a drying agent for storage.

8 Registering the Cassette/Multifeeder Paper Width Basic Value

Perform what follows below for the following:

- If you have replaced the copier's paper width detecting VR (including the multifeeder).
- If you have adjusted the front/rear registration of the cassette.

You need to register a paper width basic value of STMTR and A4R for each cassette; for the multifeeder, you must register A6R, A4R, and A4.

a. Cassette

- 1) Slide out the cassette for which you want to register the basic value, and set the paper width guide inside the cassette to A4R.
- 2) Set the cassette in the copier.
- 3) Select FUNCTION>CST in service mode.
- 4) Select a size (C1-A4R, C2-A4R, C3-A4R) for the cassette in question, and press OK.
- 5) See that basic value 1 has been registered.
- 6) Slide out the cassette for which you want to register a basic value, and set the paper width guide plate inside the cassette to STRMTR.
- 7) Set the cassette in the copier.
- 8) Select FUNCTION>CST in service mode.
- 9) Select a size (C1-STMTR, C2-STMTR, C3-STMTR) for the cassette in question, and press OK.
- 10) See that basic value 2 has been registered.
- 11) Set the cassette to the size desired by the user.

b. Multifeeder

- 1) Set the width of the multifeeder guide plate to A6R (105 mm).
- 2) Select service mode FUNCTION>CST.
- 3) Select MF-A6R for which you want to register a basic value, and press OK.
- 4) See that basic value 1 has been registered.
- 5) Set the width of the multifeeder guide plate to A4R (210 mm).
- 6) Select MF-A4R for which you want to register a basic value, and press OK.
- 7) See that basic value 2 has been registered.
- 8) Set the width of the multifeeder guide plate to A4 (297 mm).
- 9) Select MF-A4 for which you want to register a basic value, and press OK.
- 10) See that basic value 3 has been registered.

Caution:

After registering basic values, be sure to record the values on the service label.

9 Checking the Surface Potential System

If an image fault has occurred, you must be sure if the cause is in the static latent image formation block (including the photosensitive drum and the potential control system) or the developing/transfer system. To that end, the surface potential must be checked as follows:

- a. Checking the Surface Potential
- 1) Select FUNCTION>**DPC**>**DPC** in service mode (for potential control).
- 2) Check the following using DISPLAY>**DPOT** in service mode.

Screen display	Guide
V00-500	430 to 570
V00-700	600 to 800
VFF-500	50 to 150
VFF-700	100 to 200

3) If the value is not as indicated, make a zero-level check.

b. Zero-Level Check

You can make use of a zero-level check to see whether the surface potential control circuit is good or not, thereby finding out whether the level shift circuit of the DC driver PCB and the potential measurement unit is good or not.

Reference:

A zero-level check is designed to find out whether the CPU reads the surface potential of the drum as '0' when it is 0 V.

A zero-level check may be either of the following two:

Method 1: to find out whether the level shift circuit on the DC driver PCB is good or not

Method 2: to find out whether the potential measurement circuit is good or not

Method 1

- 1) Remove the rear cover.
- 2) Turn on the power switch, and wait until the copier is in standby state.
- 3) Disconnect the connector J4 (J440) of the potential measurement PCB.
- 4) Short the check pins J1040-1 and -2 on the DC driver PCB with a jumper wire.
- 5) Check to make sure that the reading of DISPLAY>DPOT>**DPOT** is 100 ± 30 V in service mode.
 - If yes, the part is normal. Go to step 8).
- 6) Measure the voltage between GND CP and CP4 of the DC driver PCB to see if it is 0.49 ± 0.1 V.
 - If no, suspect a fault in the level shift circuit on the DC driver PCB. If yes, suspect a fault in the A/D converter on the CPU PCB.
- 7) Turn off the power switch, and disconnect the jumper wire; then, connect the connector.
- 8) Mount the rear cover, and turn on the power switch.

Method 2

- 1) Turn off the power switch.
- 2) Remove the photosensitive drum unit.
- 3) Fit the potential sensor electrode (TKN-0197) to the potential sensor.

Caution:

When fitting the potential sensor electrode to the potential sensor, make sure that magenta of the electrode will not come into contact with the potential sensor base.

4) Attach the clip of the jumper line to the potential sensor electrode.

Caution:

Be sure NOT to let the clip come into contact with the sensor cover. Further, be sure to allow enough distance from the sensor window.

- 5) Connect one end of the jumper wire to the copier's chassis metal plate (GND) of the copier.
- 6) Insert the door switch actuator into the door switch assembly.
- 7) Turn on the power switch.

 After turning on the power switch, do NOT touch the potential sensor assembly.
- 8) Check to make sure that DISPLAY>DPOT>**DPOT** is 100 ± 30 V in service mode.

Reference:

If the reading is as indicated in method 1 but not as indicated in method 2, suspect dirt on the sensor or a fault in the potential measurement unit.

If the reading is not as indicated in method 1 and method 2, you may assume that the signal path from the potential sensor unit to the CPU on the CPU PCB is normal.

- 9) Turn off the power switch.
- 10) Detach the potential sensor electrode.
- 11) Mount the photosensitive drum unit.
- 12) Turn on the power switch.

10 When Replacing the DC Driver PCB

Check the setting of the DIP switch on the old DC driver PCB, and set the DIP switch on the new DC driver PCB.

In addition, be sure to remove the jumper connector J1050 from the old DC driver PCB, and connect it to J1050 of the new DC driver PCB.

11 Checking the Photointerrupter

The copier allows the use of its service mode when checking its photointerrupers in addition to the use of a conventional meter.

- 1. Using a Meter
- 1) Set the meter range to 30 VDC.
- 2) Connect the probe of the meter to J101-7 (GND) on the DC driver PCB or J3-3 (GND) on the deck driver PCB.
- 3) Connect the (+) probe of the meter to the terminals (on the driver PCB) indicated on the pages that follow.
- 4) Make checks as shown.
- 2. Using Service Mode
- 1) Select I/O DISPLAY in service mode.
- 2) Bring up the I/O address to check, and make checks as shown.

Sensor	Connector No. I/O address	Che	ecks	I/O display	Voltage reading
PS1 Original scanner HP sensor	J602-2	Move the scanner by hand while in standby.	When the light-blocking plate is at PS1, While the light-blocking plate is not at PS1,		5V 0V
PS2 Side A sensor	J1014-B8 P009-8	Move the transfer drum by hand while in standby.	When the light-blocking plate is at PS2, When the light-blocking plate is not at PS2,	0	5V 0V
PS3 Side B sensor	J1014-B7 P009-9	Move the transfer drum by hand while in standby.	When the light- blocking plate is at PS3, When the light- blocking plate is not at PS3,	0	0V 5V
PS4 C sensor	J1014-B5 P009-10	Move the transfer drum by hand while in standby.	When the light-blocking-plate is at PS4, When the light-blocking plate is not at PS4,	0	5V 0V
PS5 Pre-transfer sensor	J1014-B3 P001-9	Put paper on the transfer drum and move it by hand while in standby.	When paper is present over PS5, When paper is absent over PS5,	0	5V 0V
PS6 Post-transfer sensor	J1014-B2 P001-10	Put paper over PS6 while in standby.	When paper is present over PS6, When paper is absent over PS6,	0	5V 0V
PS7 Separation sensor	J10013-B4 P001-11	Put paper over PS7 while in standby.	When paper is present over PS7, When paper is absent over PS7,	0	5V 0V
PS8 Attraction/ transfer locking cam HP sensor	J1014-B1 P009-3	Take measurements during copying operation.	When cam is not at HP, When cam is at HP,	0	5V 0V
PS9 Multifeeder pickup sensor	J1017-B10 P001-5	Put paper over PS9 while in standby.	When paper is present over PS9, When paper is absent over PS9,	0	5V 0V
PS10 Fixing oil level sensor	J1004-B5 P006-4	Remove PS10 while in standby.	When oil is present, When oil is absent,	1 0	5V 0V

Sensor	Connector No. I/O address	Che	ecks	I/O display	Voltage reading
PS11 Fixing upper cleaning belt	J1004-B2 P006-3	Put paper over PS11 while in standby.	When paper is present over PS11, When paper is absent	1 0	5V 0V
length sensor			over PS11,	U	
PS12 Internal delivery sensor	J1004-B3 P001-13	Put paper over PS12 while in standby.	When paper is present over PS12, When paper is absent over PS12	0	5V 0V
PS15 Multi feeder paper sensor	J1017-B16 P002-13	Put paper over PS15 while in standby.	When paper is present over PS15, When paper is absent	1 0	5V 0V
PS17	J1017-B13	Move up the lifter	over PS15, When the lifter is	1	5V
Multifeeder lifter H sensor	P007-15	while in standby.	down, When the lifter is up,	0	0V
PS18 Multifeeder lifter L sensor	J1017-B12 P007-14	Move up the lifter while in standby.	When the lifter is down, When the lifter is up,	1 0	5V 0V
PS19 (CLC1120/	J1020-B3 P007-10	Put paper over PS19 while in standby.	When paper is present over PS19,	1	5V
1130) Cassette 1 lifter sensor	1007-10	wiffe in standay.	When paper is absent over PS19	0	0V
PS20 (CLC1120/	J1020-B5 P002-10	Put paper over PS20 while in standby.	When paper is present over PS20,	1	5V
1130) Cassette 1 paper sensor	1 002 10	wine in standey.	When paper is absent over PS20,	0	0V
PS21 (CLC1120/	J1019-A2 P001-2	Put paper over PS21 while in standby.	When paper is present over PS21,	1	5V
1130) Pickup vertical path 1		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	When paper is absent over PS21,	0	0V
PS22/DPS22 Cassette 2/1 lifter sensor	J1017-A5 P007-1	Push the light- blocking plate while in standby.	When the light- blocking plate is pushed,	1	5V
inter sensor		in standby.	When the light- blocking plate is not pushed,	0	0V
PS23/DPS23 Cassette 3/2 lifter sensor	J1018-A3 P007-8	Push the light- blocking plate while in standby.	When the light- blocking plate is pushed,	1	5V
			When the light- blocking plate is not pushed,	0	0V
PS24/DPS24 Cassette 2/1	J1017-A7 P002-9	Put paper over PS24 while in standby.	When paper is present over PS24,	1	5V
paper sensor			While paper is not present over PS24,	0	0V

Sensor	Connector No. I/O address	Che	ecks	I/O display	Voltage reading
PS25/DPS25 Cassette 3/2 paper sensor	J1018-A5 P002-8	Put paper over PS25 while in standby.	When paper is present over PS25, When paper is absent	1 0	5V 0V
		D D D D D D D D D D D D D D D D D D D	over PS25,		
PS26 Pickup vertical path 2/1 sensor	J1017-A4 P001-1	Put paper over PS26 while in standby.	When paper is present over PS26, When paper is absent over PS26,	0	5V 0V
PS27 Pickup vertical path	J1018-A2 P001-2	Put paper over PS27 while in standby.	When paper is present over PS27, When paper is absent	0	5V 0V
3/2 sensor PS28 (CLC1150)	J1019-A2 P001-3	Put paper over PS28 while in standby.	over PS27, When paper is present over PS28,	1	5V
Re-pickup vertical path sensor		,	When paper is absent over PS28,	0	0V
PS30 Pre-	J1013-B6 P002-15	Put paper over PS30 while in standby.	When paper is present over PS30,	1	5V
registration sensor	1002 10	wine in standey.	When paper is absent over PS30,	0	0V
PS31 External	J1008-B2 P001-12	Put paper over PS31 while in standby.	When paper is present over PS31.	1	5V
delivery sensor			When paper is absent over PS31,	0	0V
PS32 (CLC1150)	J1029-6 P002-0	Put paper over PS32 while in standby.	Paper is present over PS32,	1	5V
Delivery vertical path 1 sensor			Paper is absent over PS32,	0	0V
PS33 (CLC1150)	J1029-11 P002-1	Put paper over PS33 while in standby.	When paper is present over PS33,	1	5V
Delivery vertical path 2 sensor			When paper is absent over PS33,	0	0V
PS34 (CLC1150)	J1022-B8 P002-3	Put paper over PS34 while in standby.	When paper is present over PS34,	1	5V
Duplexing path paper sensor			When paper is absent over PS34,	0	0V
PS35 (CLC1150)	J1022-B7 P002-4	Put paper over PS35 while in standby.	When paper is present over PS35,	1	5V
Duplexing reversal paper sensor			When paper is absent over PS35,	0	0V
PS36 (CLC1150)	J1022-B6 P002-11	Put paper over PS36 while in standby.	When paper is present over PS36,	0	0V
Duplexing tray paper sensor			When paper is absent over PS36,	1	5V

Sensor	Connector No. I/O address	Che	ecks	I/O display	Voltage reading
PS37 (CLC1150)	J1022-A3 P002-2	Put paper over PS37 while in standby.	When paper is present over PS37,	1	5V
Duplexing inlet paper sensor		-	When paper is absent over PS37,	0	0V
PS40 (CLC1150)	J1022-A4 P009-4	Move the guide while in standby.	While the guide is present over PS40,	1	5V
Paper jogging guide HP sensor		·	While the guide is absent over PS40,	0	0V
PS41 Right front	J1027-B8 P004-1	Open and close the cover while in	When the cover is closed,	1	5V
cover sensor		standby.	When the cover is open,	0	0V
PS42 Left front	J1027-A8 P004-2	Open and then close the cover while in	When the cover is closed, When the cover is	0	5V 0V
cover sensor		standby.	open,	0	
PS43 Delivery	J1027-B2 P004-0	Open and then close the cover while in	When the cover is closed,	1	5V
cover sensor		standby.	When the cover is open,	0	0V
PS44 Pickup cover	J1007-B5 P004-3	Open and close the cover while in	When the cover is closed,	1	5V
sensor		standby.	When the cover is open,	0	0V
PS46 (CLC120/	J1020-B2 P008-3	Open and close the cassette while in	When the cassette is closed,	1	5V
1130) Cassette 1 open/closed sensor		standby.	When the cassette is open,	0	0V
PS47/DPS47 Cassette 2/1	J1017-A3 P008-2	Open and close the cassette while in	When the cassette is closed,	1	5V
open/closed sensor		standby.	When the cassette is open,	0	0V
PS48/DPS48 Cassette 3/1	J1018-A1 P008-1	Open and close the cassette while in	When the cassette is closed,	1	5V
open/closed sensor		standby.	When the cassette is open,	0	0V
PS49 M developing assembly HP sensor	J1016-B2 P00A-8	Take measurements during copying operation.	When at HP, When not at HP,	1 0	5V 0V
PS51 C developing assembly HP sensor	J1015-A3 P00A-9	Take measurements during copying operation.	When at HP, When not at HP,	1 0	5V 0V

Sensor	Connector No. I/O address	Che	ecks	I/O display	Voltage reading
PS53 Y developing assembly HP sensor	J1016-A2 P00A-10	Take measurements during copying.	When at HP, When not at HP,	1 0	5V 0V
PS55 Bk developing assembly HP sensor	J1015-B3 P00A-11	Take measurements during copying operation.	When at HP, When not at HP,	1 0	5V 0V
PS57 Transfer drum HP sensor	J1002-A2 P009-1	Take measurements during copying.	When at HP, When not at HP,	1 0	5V 0V
PS59 Transfer drum cleaner HP sensor	J1002-B2 P009-2	Take measurements during copying operation.	When at HP, When not at HP,	1 0	5V 0V
PS62 Multifeeder tray open/ closed sensor	J1017-B9 P004-6	Open and close the tray during standby.	When the tray is closed, When the tray is	0	0V 4V
PS67	J1004-B1	Put paper over PS67	open, When paper is	1	5V
Fixing lower cleaning belt length sensor	P006-2	while in standby.	present over PS67, When paper is absent over PS67,	0	0V
PS68 Waste toner case full sensor	J1027-B4 P006-6	Put paper over PS68 while in standby.	When paper is present over PS68, When paper is absent over PS68,	0	0V 5V
PS69 (Note) Transparency	J1013-B9 P001-6	Take measurements during copying	When paper is present over PS69,	1	5V
sensor		operation.	When pepper is absent over PS69,	0	0V
PS70 (Note) Registration	J1013-B8 P001-8	Take measurements during copying	When paper is present over PS70,	1	5V
sensor		operation.	When paper is absent over PS70,	0	0V
PS71 (Note) Pre-cleaning	J1007-B14 P00B-1	Take measurements during copying	When paper is present over PS71,	1	several V
paper sensor	1 002 1	operation.	When paper is absent over PS71,	0	0V
PS101 Deck pickup	J5-B4 P001-4	Put paper over PS101 while in standby.	When paper is present over PS101,	1	5V
sensor			When paper is absent over PS101,	0	0V
PS102 Deck paper	J5-A4 P002-12	Put paper over PS102 while in standby.	When paper is present over PS102,	1	5V
absent sensor	- 00- 12		When paper is absent over PS102,	0	0V

Note: The sensor detects paper after the LED of the sensor turns on; normally, '1' is indicated, since the LED is not ON.

Sensor	Connector No. I/O address	Che	ecks	I/O display	Voltage reading
PS103 Deck lifter upper limit sensor	J5-A7 P007-13	Put the light-blocking plate while in standby.	When the light- blocking plate is pushed, When the light- blocking plate is not pushed,	1	5V 0V
PS104 Deck lifter position sensor 18	J5-A10 	Push the light-blocking plate while in standby.	When the light- blocking plate is pushed, When the light- blocking plate is not pushed,	-	5V 0V
PS105 Deck set sensor	J6-4 P016-14	Push the light-blocking plate while in standby.	When the light- blocking plate is pushed, When the light- blocking plate is not pushed,	1	5V 0V
PS107 Deck paper level upper sensor	J4-5 P016-12	Push the light-blocking plate while in standby.	When the light- blocking plate is pushed, When the light- blocking plate is not pushed,	0	5V 0V
PS108 Deck paper level lower sensor	J4-2 P016-11	Push the light-blocking plate while in standby.	When the light- blocking plate is pushed, When the light- blocking plate is not pushed,	0	5V 0V
PS109 Deck open sensor	J6-7 P016-15	Release the deck assembly while in standby.	When the deck assembly is open, When the deck assembly is closed,	0	0V 5V

CHAPTER 3 ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS

A. Sensors

1. CLC1120/1130

PS	S 1	Original scanner home position sensor
PS	S2	Side A sensor
PS	S 3	Side B sensor
PS	S 4	C sensor
PS	S5	Pre-transfer paper sensor
PS	S6	Post-transfer paper sensor
PS	S 7	Separation sensor
PS	S8	Attraction/transfer locking cam HP sensor
PS	S 9	Multifeeder pickup sensor
PS	S10	Fixing oil level sensor
PS	S11	Fixing upper cleaning belt level sensor
PS	S12	Internal delivery sensor
PS	S15	Multifeeder paper sensor
PS	S17	Multifeeder lifter H sensor
PS	S18	Multifeeder lifter L sensor
PS	S 19	Cassette 1 lifter position sensor
PS	S20	Cassette 1 paper sensor
PS	S21	Pickup vertical path 1 sensor
PS	S22	Cassette 2 lifter position sensor
PS	S23	Cassette 3 lifter position sensor (CLC1130 only)
PS	S24	Cassette 2 paper sensor
PS	S25	Cassette 3 paper sensor (CLC1130 only)
PS	S26	Pickup vertical path 2 sensor
PS	S27	Pickup vertical path 3 sensor (CLC1130 only)
PS	S30	Pre-registration sensor
PS	S31	External delivery sensor

Table 3-1a (CLC1120/1130)

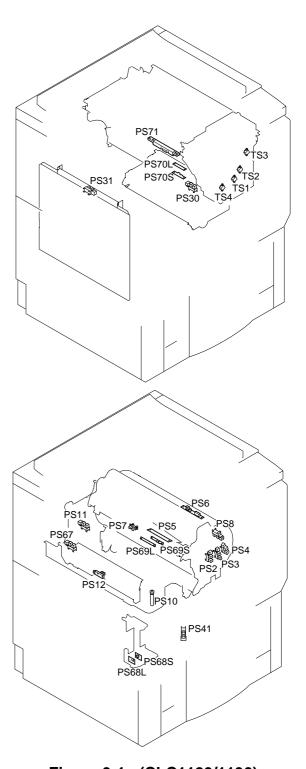


Figure 3-1a (CLC1120/1130)

PS41	Right front cover sensor
PS42	Left front cover sensor
PS43	Delivery cover sensor
PS44	Pickup cover sensor
PS46	Cassette 1 open/closed sensor
PS47	Cassette 2 open/closed sensor
PS48	Cassette 3 open/closed sensor (CLC1130 only)
PS49	M developing assembly HP sensor
PS51	C developing assembly HP sensor
PS53	Y developing assembly HP sensor
PS55	Bk developing assembly HP sensor
PS57	Transfer drum HP sensor
PS59	Transfer drum cleaner HP sensor
PS62	Multifeeder tray open/closes sensor
PS67	Fixing lower cleaning belt length sensor
PS68L/S	Waste toner case full sensor
PS69L/S	Transparency sensor
PS70L/S	Registration sensor
PS71	Pre-cleaning paper sensor
PSU2	Cassette 2 paper length sensor (CLC1120 only)
PSU3	Cassette 3 paper length sensor (CLC1130 only)
VR2	Cassette 1 paper level detecting VR
VR3	Cassette 2 paper width detecting VR (CLC1120 only)
VR4	Cassette 2 paper level detecting VR
VR5	Cassette 3 paper width detecting VR (CLC1130 only)
VR6	Cassette 3 paper level detecting VR (CLC1130 only)
VR7	Multifeeder paper width detecting VR
TS1	M toner level sensor
TS2	C toner level sensor
TS3	Y toner level sensor
TS4	Bk toner level sensor
UN10	Environment sensor

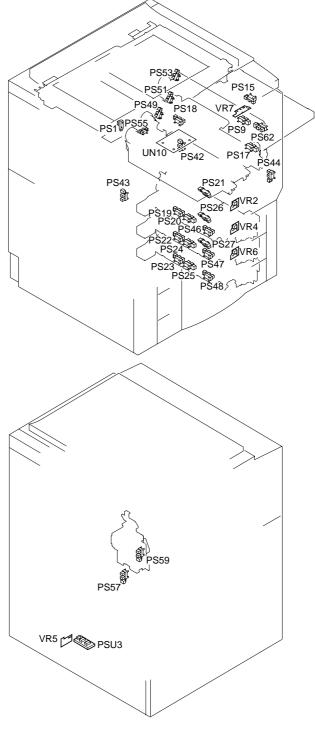


Table 3-1b (CLC1120/1130)

Table 3-1b (CLC1120/1130)

2. CLC1150

PS1	Original scanner home position sensor
PS2	Side A sensor
PS3	Side B sensor
PS4	C sensor
PS5	Pre-transfer paper sensor
PS6	Post-transfer paper sensor
PS7	Separation sensor
PS8	Attraction/transfer locking cam HP sensor
PS9	Multifeeder pickup sensor
PS10	Fixing oil level sensor
PS11	Fixing upper cleaning belt length sensor
PS12	Internal delivery sensor
PS15	Multifeeder paper sensor
PS17	Multifeeder lifter H sensor
PS18	Multifeeder lifter L sensor
DPS22	Cassette 1 lifter position sensor
DPS23	Cassette 2 lifter position sensor
DPS24	Cassette 1 paper sensor
DPS25	Cassette 2 paper sensor
PS26	Pickup vertical path 1 sensor
PS27	Pickup vertical path 2 sensor
PS28	Re-picup vertical path sensor
PS30	Pre-registration sensor
PS31	External delivery paper sensor
PS32	Delivery vertical path 1 sensor
PS33	Delivery vertical path 2 sensor
PS34	Duplexing path paper sensor
PS35	Duplexing reversal paper sensor
PS36	Duplexing tray paper sensor

Table 3-2a (CLC1150)

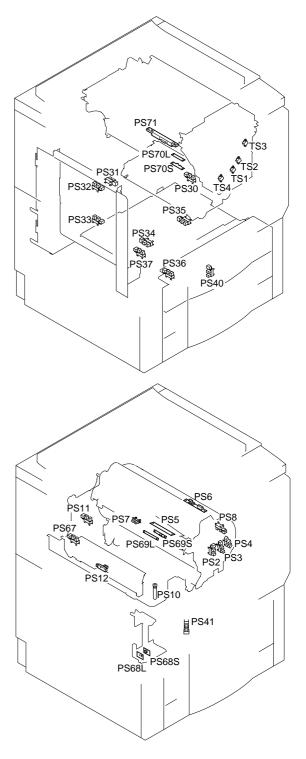


Figure 3-2a (CLC1150)

PS37	Duplexing inlet paper sensor
PS40	Paper jogging guide HP sensor
PS41	Right front cover sensor
PS42	Left front cover sensor
PS43	Delivery cover sensor
PS44	Pickup cover sensor
DPS47	Cassette 1 open/closed sensor
DPS48	Cassette 2 open/closed sensor
PS49	M developing assembly HP sensor
PS51	C developing assembly HP sensor
PS53	Y developing assembly HP sensor
PS55	Bk developing assembly HP sensor
PS57	Transfer drum HP sensor
PS59	Transfer drum cleaner HP sensor
PS62	Multifeeder tray open/closed sensor
PS67	Fixing lower cleaning belt length sensor
PS68L/S	Waste toner case full sensor
PS69L/S	Transparency sensor
PS70L/S	Registration sensor
PS71	Pre-cleaning paper sensor
DPSU3	Cassette 2 paper length sensor
DVR4	Cassette 1 paper level detecting VR
DVR5	Cassette 2 paper width detecting VR
DVR6	Cassette 2 paper level detecting VR
VR7	Multifeeder paper width detecting VR
TS1	M toner level sensor
TS2	C toner level sensor
TS3	Y toner level sensor
TS4	Bk toner level sensor
UN10	Environment sensor

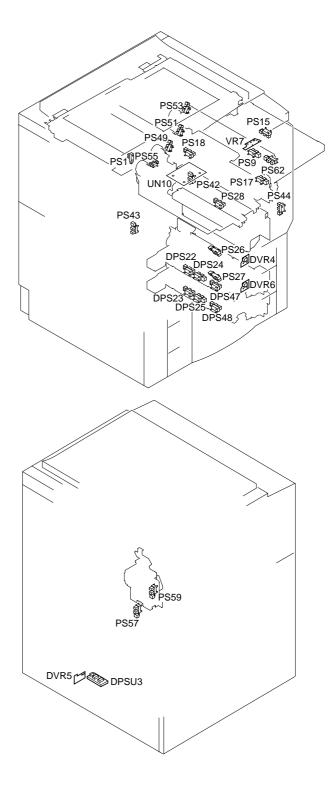


Table 3-2b (CLC1150)

Figure 3-2b (CLC1150)

B. Thermistors, Lamps, and Heaters

THM1	Fixing upper thermistor 1
THM2	Fixing upper thermistor 2
THM3	Fixing lower thermsitor 3
THM4	Fixing lower thermistor 4
TP1	Scanner thermal switch 1
TP2	Fixing upper thermal switch
TP3	Fixing lower thermal switch
TP6	Scanner thermal switch 2
LA1	Pre-exposure lamp
LA2	Scanning lamp
H1	Fixing upper heater
H2	Fixing lower heater
Н3	Drum heater
H4	Cassette heater 1
H5	Cassette heater 2
ELB	Leakage breaker
LF1	Noise filer
SSR1	Fixing heater SSR
SSR2	Drum, cassette, deck heater SSR
RL1	AC power cut relay
RL3	DC power cut relay
P1	Power cord
SW1	Power switch
SW2	Control switch
SW3	Transfer unit lever switch
SW4	Left front door switch
SW5	Delivery door switch
SW6	Environment switch
SW7	Waste toner feedscrew locked detecting switch
SW8	

Table 3-3

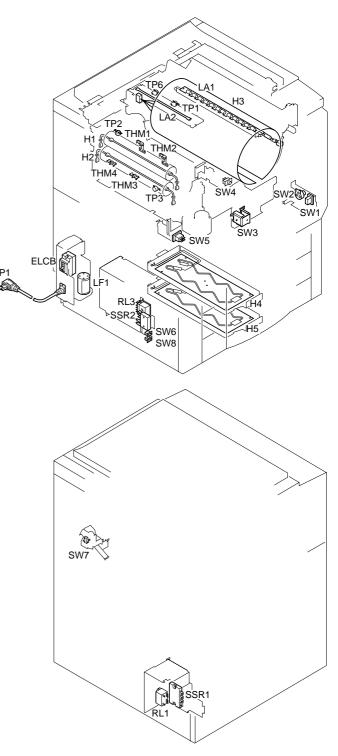


Figure 3-3

C. Clutches

1. CLC1120/1130

CL1	M developing cylinder clutch
CL2	C developing cylinder clutch
CL3	Y developing cylinder clutch
CL4	Bk developing cylinder clutch
CL5	M toner supply clutch
CL6	C toner supply clutch
CL7	Y toner supply clutch
CL8	Bk toner supply clutch
CL9	Registration clutch
CL10	Multifeeder feeding clutch
CL11	Cassette 1 pickup clutch
CL12	Cassette 2 pickup clutch
CL13	Cassette 3 pickup clutch (CLC1130 only)
CL16	Multifeeder pickup clutch
CL18	Postcard feeding clutch (100-V model only)

Table 3-4 (CLC1120/1130)

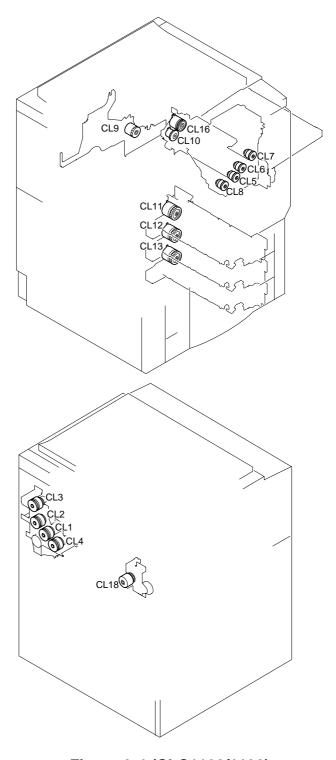


Figure 3-4 (CLC1120/1130)

2. CLC1150

CL1	M developing cylinder clutch
CL2	C developing cylinder clutch
CL3	Y developing cylinder clutch
CL4	Bk developing cylinder clutch
CL5	M toner supply clutch
CL6	C toner supply clutch
CL7	Y toner supply clutch
CL8	Bk toner supply clutch
CL9	Registration clutch
CL10	Multifeeder feeding clutch
DCL12	Cassette 1 pickup clutch
DCL13	Cassette 2 pickup clutch
CL14	Duplexing feeding clutch
CL15	Re-pickup clutch
CL16	Multifeeder pickup clutch
CL18	Postcard feeding clutch (100-V model only)
CL19	Delivery vertical path roller clutch

Table 3-5 (CLC1150)

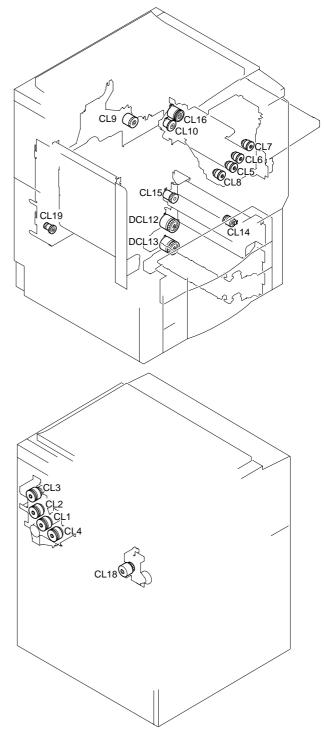


Figure 3-5 (CLC1150)

D. Solenoids

1. CLC1120/1130

SL1	Eiving uman algoning halt galancid
SLI	Fixing upper cleaning belt solenoid
SL2	Fixing lower cleaning belt solenoid
SL3	Separation push-up solenoid
SL4	Separation claw solenoid
SL5	Registration roller releasing solenoid
SL6	Attraction roller solenoid
SL7	Pickup roller 1 solenoid
SL8	Pickup roller 2 solenoid
SL9	Pickup roller 3 solenoid (CLC1130 only)
SL14	Multifeeder pickup solenoid

Table 3-6 (CLC1120/1130)

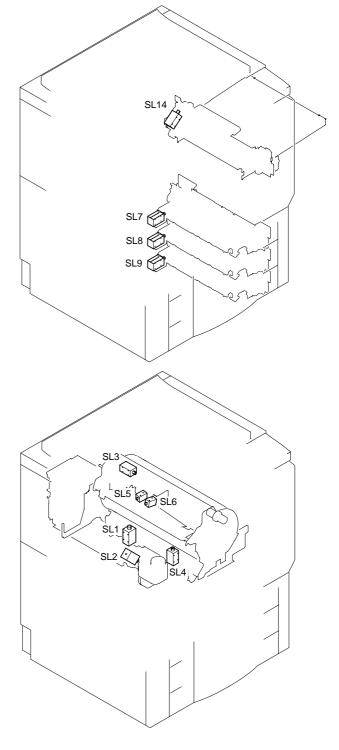


Figure 3-6 (CLC1120/1130)

2. CLC1150

SL1	Fixing upper cleaning belt solenoid		
SL2	Fixing lower cleaning belt solenoid		
SL3	Separation push-up solenoid		
SL4	Separation claw solenoid		
SL5	Registration roller releasing solenoid		
SL6	Attraction roller solenoid		
DSL8	Pickup roller 1 solenoid		
DSL9	Pickup roller 2 solenoid		
SL10	Delivery paper deflecting plate solenoid		
SL12	Stopper plate solenoid		
SL13	Duplexing paper feed roller solenoid		
SL14	Multifeeder pickup solenoid		
SL15	Stacking guide plate solenoid		

Table 3-7 (CLC1150)

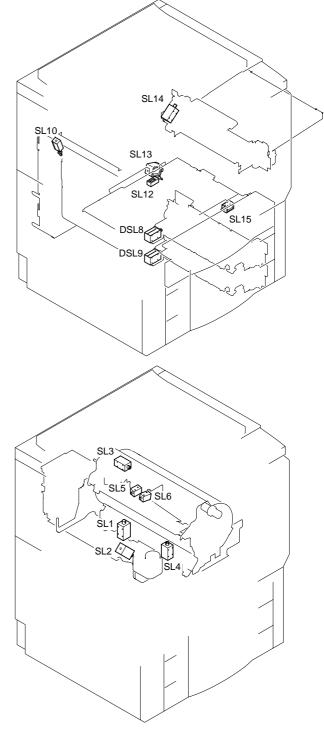


Figure 3-7 (CLC1150)

E. Fans

FM1	Original exposure system cooling fan 1
FM2	Exhaust discharge fan
FM3	Primary charging assembly fan
FM4	Laser scanner motor cooling fan
FM5	Ozone suction fan
FM6	Toner suction fan
FM7	IP cooling an
FM8	Electrical unit cooling fan
FM9	Power supply cooling fan 1
FM11	Delivery cooling fan
FM13	Power supply cooling fan 2
FM14	Original exposure system cooling fan 2
FM15	Original exposure system cooling fan 3
FM16	Back suction fan
FM17	Power cord mount cooling fan

Table 3-8

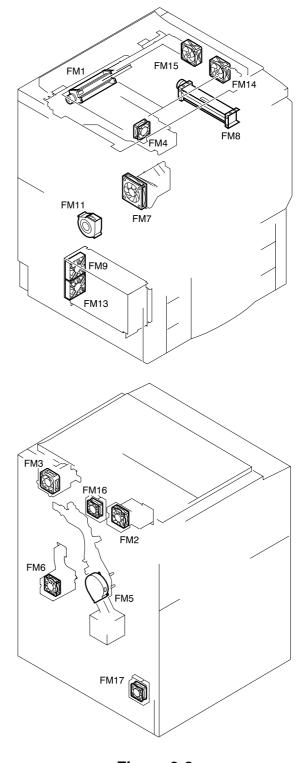


Figure 3-8

F. Motors

M2	Drum motor			
M3	Laser scanner motor			
M4	Main motor			
M5	Fixing motor			
M6	Primary charging wire cleaning motor			
M7	Cleaning blade reciprocating motor			
M8	Transfer drum cleaning brush motor			
M9	Polishing roller motor			
M10	Hopper motor			
M11	Cassette 1 lifter motor			
M12	Cassette 2 lifter motor			
M13	Cassette 3 lifter motor (CLC1130 only)			
M15	Multifeeder lifter motor			
PM1	M developing assembly locking motor			
PM2	C developing assembly locking motor			
PM3	Y developing assembly locking motor			
PM4	Bk developing assembly locking motor			
PM5	Transfer drum locking motor			
PM6	Transfer drum cleaner locking motor			
PM7	Attraction/transfer locking cam motor			
PM8	Pre-registration motor 2			
PM9	Pre-registration motor 1			
PM10	Cassette 1 pickup motor			
PM11	Cassette 2 pickup motor			
PM12	Cassette 3 pickup motor (CLC130 only)			
PM15	Original scanner motor			



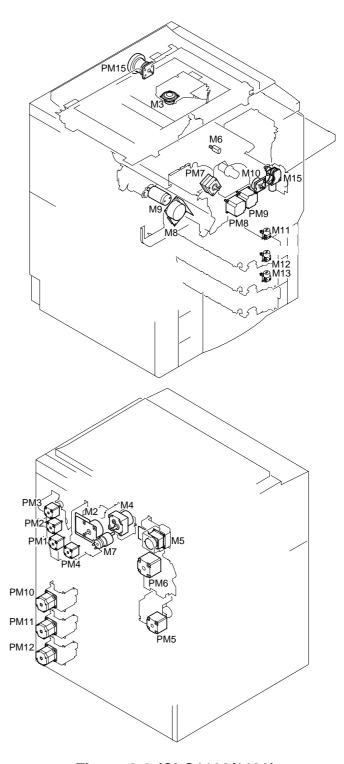


Figure 3-9 (CLC1120/1130)

M2	Drum motor		
M3	Laser scanner motor		
M4	Main motor		
M5	Fixing motor		
M6	Primary charging wire cleaning motor		
M7	Cleaning blade reciprocating motor		
M8	Transfer drum leaner brush motor		
M9	Polishing roller motor		
M10	Hopper motor		
DM12	Cassette 1 lifter motor		
DM13	Cassette 2 lifter motor		
M14	Duplexing motor		
M15	Multifeeder lifter motor		
PM1	M developing assembly locking motor		
PM2	C developing assembly locking motor		
PM3	Y developing assembly locking motor		
PM4	Bk developing assembly locking motor		
PM6	Transfer drum cleaner locking motor		
PM7	Attraction/transfer locking cam motor		
PM8	Pre-registration motor 2		
PM9	Pre-registration motor 1		
DPM11	Cassette 1 pickup motor		
DPM12	Cassette 2 pickup motor		
PM13	Re-pickup motor		
PM14	Duplexing paper jogging motor		
PM15	Original scanner motor		

Table 3-10 (CLC1150)

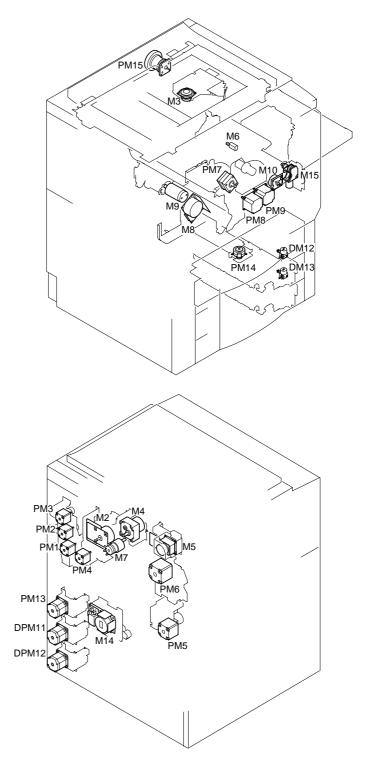


Figure 3-10 (CLC150)

G. PCBs

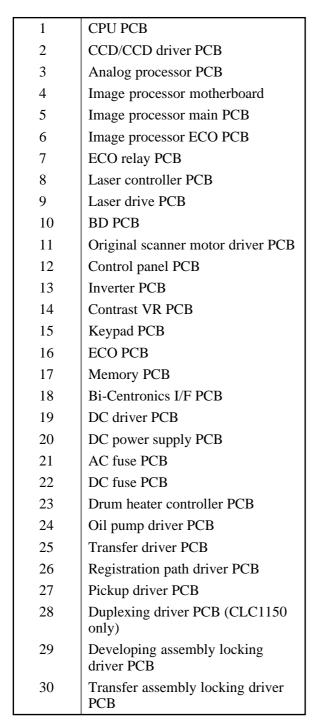


Table 3-11a

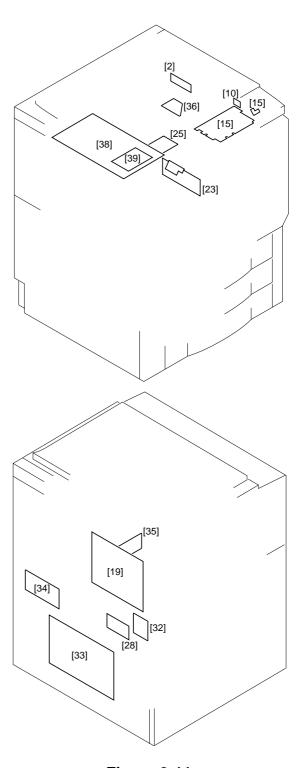


Figure 3-11a

31	Developing bias PCB
32	HVT-AC PCB
33	HVT-DC PCB
34	Potential measurement PCB
35	Main motor driver PCB
36	Laser scanner motor PCB
37	Hopper motor PCB
38	IP-ED/IF PCB (accessory)
39	IP-PRJ PCB (accessory)
40	Flicker controller PCB (230-V
	model only)
41	Transformer PCB

Table 3-11b

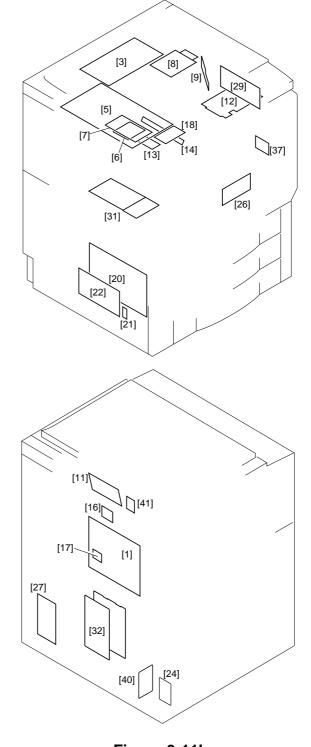


Figure 3-11b

H. Paper Deck

1. Sensors and Switches

PS101	Deck pickup sensor			
PS102	Deck paper absent sensor			
PS103	Deck lifter upper limit sensor			
PS104	Deck position sensor			
PS105	Deck set sensor			
PS107	Deck paper level upper sensor			
PS108	Deck paper level lower sensor			
PS109	Deck open sensor			
SW100	Deck open switch			
SW101	Deck open detecting switch			
SW102	Deck lifter lower limit detecting switch			

Table 3-12

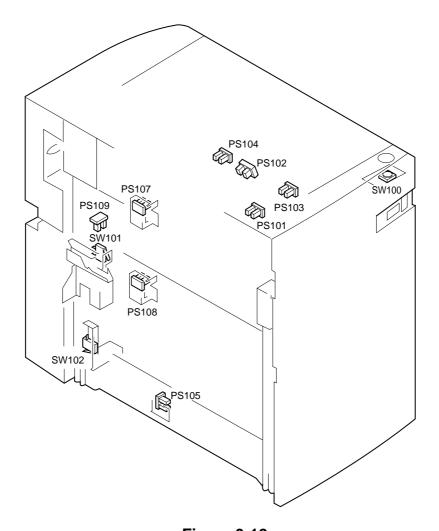


Figure 3-12

2. Motors, Clutches, Solenoids, and PCBs

PM101	Deck pickup motor	
M101	Deck lifter motor	
CL102	Deck pickup clutch	
SL101	Deck pickup solenoid	
SL102	Deck open solenoid	
[1]	Deck driver PCB	
[2]	Deck open switch PCB	

Table 3-13

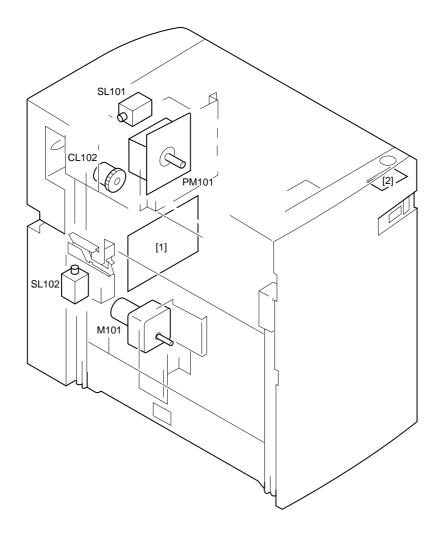


Figure 3-13

I. Variable Resistors (VR), Light-Emitting Diodes (LED), and Check Pins by PCB

Of the variable resistors (VR), light-emitting diodes (LED), and check pins used in the copier, those that may be used in the field are discussed.

Caution:

- 1. Some LEDs emit light even when off because of leakage current. It is a normal condition, and must be kept in mind.
- 2. VRs that may be used in the field: VRs that must not be used it the field:
- 3. The VRs and check pins that are not found in the tables are for the factory only, and require special tools and high accuracy. Do NOT touch them in the field.

1. DC Driver PCB

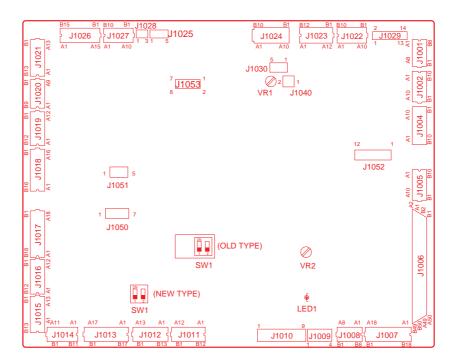


Figure 3-14

LED: turns on when +24 V is supplied, and turns off when the front cover is opened.

SW1-1	SW1-2	OUT	Remarks
OFF	OFF	Normal	Normal area
ON	OFF	Case 1	Highland 1
OFF	ON	Case 2	Highland 2
ON	ON	Not used	

Table 3-14

Caution: -

If the copier is used in highlands (low atmospheric pressure), images may suffer from transfer faults. Try changing the setting of the DIP switch (SW1) to highland 1, and see if the problem is corrected; if the problem still occurs, switch SW1 to highland 2.

If the problem still remains thereafter, shift SW1 back to its normal setting, and try to check other possible causes.

2. CPU PCB

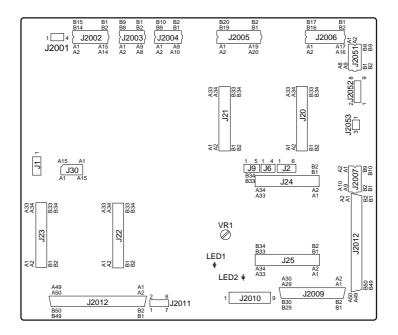


Figure 3-15

LED1: turns on when +5 V is supplied. LED2: turns on when +24 V is supplied.

3. IP main PCB

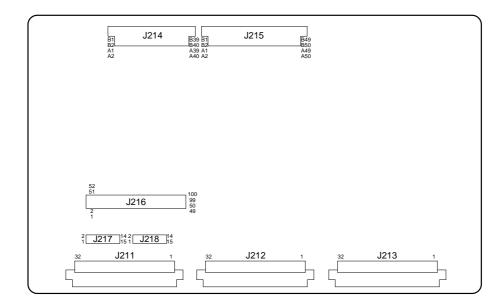


Figure 3-16

4. Analog Processor PCB

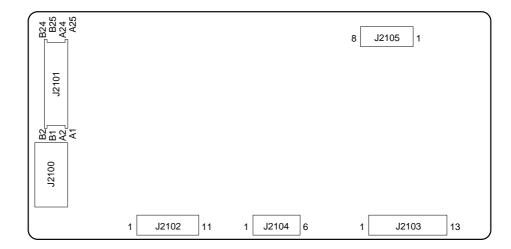


Figure 3-17

5. Laser Driver PCB

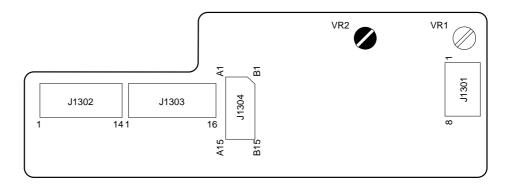


Figure 3-18

VR2: for Pmax adjustment of the laser.

6. Lamp Regulator PCB

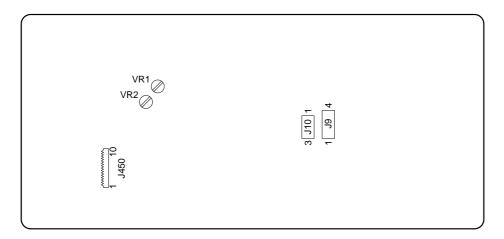


Figure 3-19

7. DC Fuse PCB

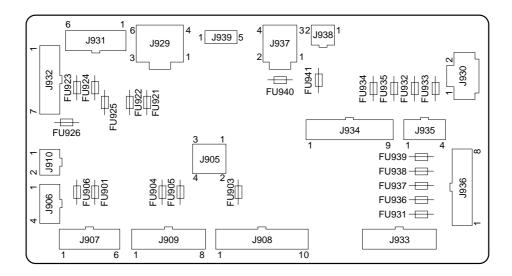


Figure 3-20

8. AC Fuse PCB




Figure 3-21

9. Developing Bias PCB

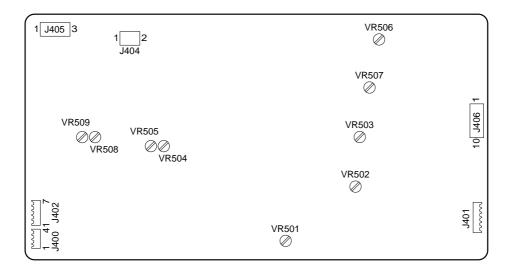


Figure 3-22

10. HVT-AC PCB

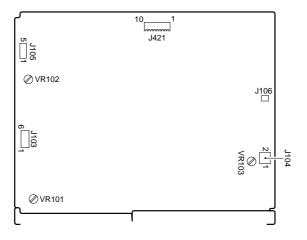


Figure 3-23

11. Potential Measurement PCB

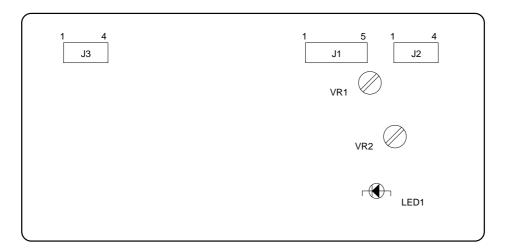


Figure 3-24

LED1: remains on while the surface potential of the drum is being measured.

CHAPTER 4 SERVICE MODE

A. Outline

The copier's service mode consists of three levels, each using its own screen: Initial screen, Level 1/Level 2 item Screen, and Level 3 item screen.

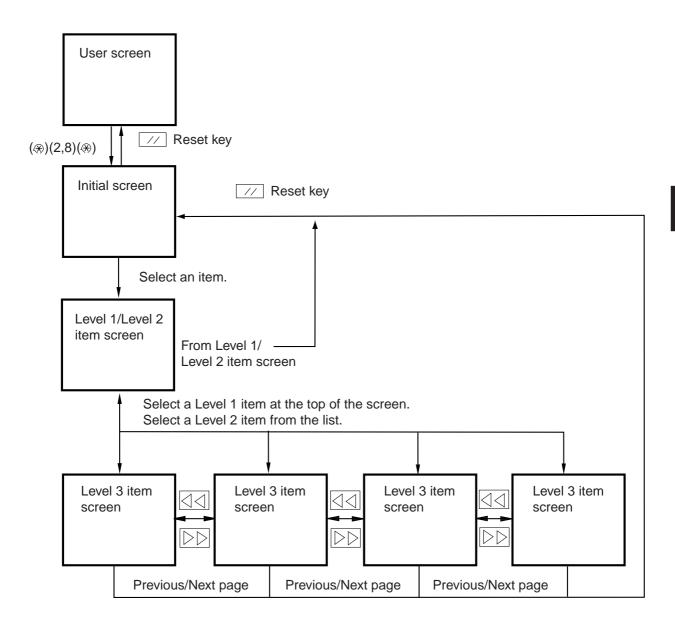


Figure 4-1 Organization of Screens

The copier's service mode consists of the following seven:

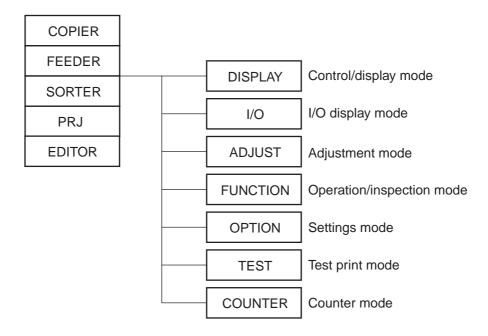


Figure 4-2 Division of Service Mode

1. Starting Service Mode and Making Selections

- 1) Press the asterisk key \Re on the control panel.
- 2) Press '2' and '8' on the keypad at the same time.
- 3) Press the asterisk key \Re on the control key.
- The above operations will bring up the following Initial screen:

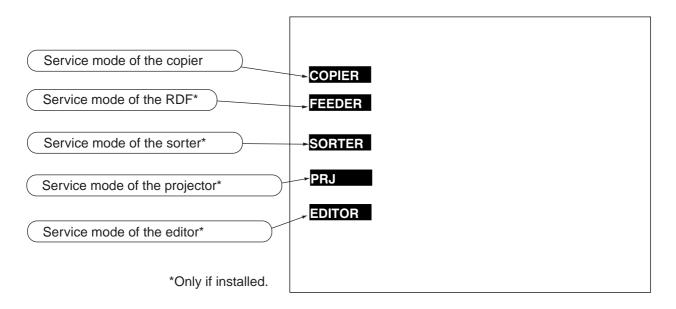


Figure 4-3 Initial Screen

2. Ending Service Mode

- Press the Reset key once to bring back the service mode Initial screen (Figure 4-3).
- Press the Reset key twice to end service mode and to bring back the User screen (standard screen).

Caution:

If you used ADJUST, FUNCTION, or OPTION in service mode, be sure to turn off and then on the power switch after ending service mode.

3. Backing Up the RAM

At time of shipment from the factory, each machine is adjusted individually and its adjustment values are recorded on the service label (one of the two labels attached to the service data sheet cover behind the front cover).

If you have replaced the CPU PCB or initialized the RAM, be sure to record all service mode values (ADJUST/OPTION) of the service label. (The values will return to default values upon replacement or initialization.)

If you cannot find an appropriate heading on service label 1, make use of the blanks of service label 2.

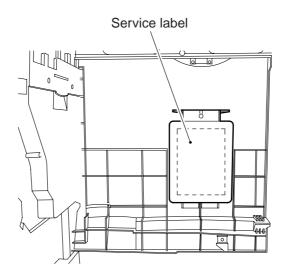


Figure 4-4 Service Label

Back-Up Data Items

A	djust		
ADJ-XY	ADJ-X		
	ADJ-Y		
	ADJ-S		
	ADJ-J		
CCD	EC-B		
	EC-G		
	EC-R		
LASER	T-V00		
	T-VFF		
	P3-V00		
	P3-VFF-1		
	P3-VFF-2		
	P3-VFF-3		
	P3-VFF-4		
DENS	SGNL-Y		
	SGNL-M		
	SGNL-C		
	REF-Y		
	REF-M		
	REF-C		
	SIGG-Y		
	SIGG-M		
	SIGG-C		
	RGAIN-K		
	D-Y-TRGT		
	D-M-TRGT		
	D-C-TRGT		
	PTOFST-Y		
	PTOFST-M		
	PTOFST-C		
	PTOFST-K		
	D-REF-Y		
	D-REF-M		
	D-REF-C		
	D-REF-K		
	D-REF-4		
	D-SGNL-Y		

	Adjust		
DENS	D-SGNL-M		
	D-SGNL-C		
	D-SGNL-K		
	D-SGNL-4		
	P-REF-Y		
	P-REF-M		
	P-REF-C		
	P-REF-K		
	P-SGNL-Y		
	P-SGNL-M		
	P-SGNL-C		
	P-SGNL-K		
	SIGG-K		
	SIGG-P-Y		
	SIGG-P-M		
	SIGG-P-C		
	SIGG-P-K		
	RGAN-P-Y		
	RGAN-P-M		
	RGAN-P-C		
	RGAN-P-K		
V-CONT	VBACK-Y		
	VBACK-M		
	VBACK-C		
	VBACK-K		
	EPOTOFST		
	PF-CRT-Y		
	PF-CRT-M		
	PF-CRT-C		
	PF-CRT-K		
PASCAL	OFST-P-Y		
	OFST-P-M		
	OFST-P-C		
	OFST-P-K		
COLOR	ADJ-Y		
	ADJ-M		
	ADJ-C		
	ADJ-K		
	OFST-Y		

	Adjust		
COLOR	OFST-M		
	OFST-C		
	OFST-K		
	P-ADJ-Y		
	P-ADJ-M		
	P-ADJ-C		
	P-ADJ-K		
	P-OFST-Y		
	P-OFST-M		
	P-OFST-C		
	P-OFST-K		
HV-TR	TR-TR		
	TR-L1		
	HV-L2		
	TR-N1		
	TR-N2		
	TR-T1		
	TR-T2		
	TR-UT1		
	TR-UT2		
	TR-S1-1		
	TR-S2-1		
	TR-OHP		
	TR-POST		
HV-SP	HV-SP		
	SP-L1		
	SP-L2		
	SP-N1		
	SP-N2		
	SP-T1		
	SP-T2		
	SP-UT1		
	SP-UT2		
	SP-S1-1		
	SP-S2-1		
	SP-OHP		
	SP-POST		
	SP-ON-N1		
	SP-ON-N2		
	SP-ON-L1		
	DI -OIA-FI		1

	Adjust		
HV-SP	SP-ON-L2		
	SP-ON-T1		
	SP-ON-T2		
	SP-ONUT1		
	SP-ONUT2		
	SP-ON-S1		
	SP-ON-S2		
	SP-ONOHP		
	SP-ON-PT		
HV-IEL	HV-IEL		
	IEL-L1		
	IEL-L2		
	IEL-N1		
	IEL-N2		
	IEL-T1		
	IEL-T2		
	IEL-UT1		
	IEL-UT2		
	IEL-S1-1		
	IEL-S2-1		
	IEL-OHP		
	IEL-POST		
HV-ATT	HV-ATT		
	ATT-L1		
	ATT-L2		
	ATT-N1		
	ATT-N2		
	ATT-T1		
	ATT-T2		
	ATT-S1		
	ATT-S2		
	ATT-OHP		
	ATT-UT1		
	ATT-UT2		
	ATT-POST		
DOC-REC	DA-XS		
	DA-XE		
	DA-YS		
	DA-YE		

DOC-REC DS-DOC	
ATT-T-B RG-XA RG-XB RG-Y TR-DLY-A TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-LVOL C3-LVOL C3-HVOL C3-HVOL ATT-RTN1 ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
ATT-T-B RG-XA RG-XB RG-Y TR-DLY-A TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-LVOL C3-LVOL C3-HVOL C3-HVOL ATT-RTN1 ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
RG-XA RG-XB RG-Y TR-DLY-A TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A4R C1-LVOL C1-HVOL C2-HVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
RG-XB RG-Y TR-DLY-A TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
RG-Y TR-DLY-A TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
TR-DLY-A TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-HVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
TR-DLY-B TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A6 MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
TR-END-A TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-HVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN4 ATT-RTN4	
TR-END-B CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
CST-ADJ C2-STMTR C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-LVOL C3-HVOL C3-HVOL C3-HVOL C3-HVOL C3-HVOL ATT-RTN1 ATT-RTN1 ATT-RTN2 ATT-RTN4 ATT-RTN4	
C2-A4R C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-LVOL C3-HVOL C3-HVOL C3-HVOL C3-HVOL C3-HVOL ATT-RTN1 ATT-RTN1 ATT-RTN2 ATT-RTN4 ATT-RTN4	
C3-STMTR C3-A4R MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL C3-HVOL ATT-RTN1 ATT-RTN2 ATT-RTN4 ATT-RTN4	
C3-A4R	
MF-A4R MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN4 ATT-RTN4	
MF-A6R MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-LVOL C3-LVOL C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
MF-A4 C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C1-LVOL C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C1-HVOL C2-LVOL C2-HVOL C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C2-LVOL C2-HVOL C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C2-HVOL C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C3-LVOL C3-HVOL MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
C3-HVOL	
MISC SEG-ADJ K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
K-ADJ ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
ATT-RTN1 ATT-RTN2 ATT-RTN3 ATT-RTN4	
ATT-RTN2 ATT-RTN3 ATT-RTN4	
ATT-RTN3 ATT-RTN4	
ATT-RTN4	
DC ADI	
BC-ADJ	
ACS-ADJ	
SENS-ADJ CLN-TH	
CLN-TMP	

	Adjust		
HV-SP-AC	HV-SP		
	SP-L1		
	SP-L2		
	SP-N1		
	SP-N2		
	SP-T1		
	SP-T2		
	SP-UT1		
	SP-UT2		
	SP-S1-1		
	SP-S2-1		
	SP-OHP		
	SP-POST		
HV-PSTCL	HV-PSTCL		
FEEDER	ADJ-RX		
	ADJ-RY		
	ADJ-DX		
	ADJ-DY		
PRJ	DS-PRJ		
	DS-OHP		
	RD-XS		
	RD-XE		
	RD-YS		
	RD-YE		
	DA-XS		
	DA-XE		
	DA-YS		
	DA-YE		
	NEGA-B		
	NEGA-G		
	NEGA-R		
	POSI-B		
	POSI-G		
	POSI-R		
	N-LMT		
	N-G-LMT		
	P-LMT		
	P-G-LMT		
		L	

Ad	ljust		
PRJ	OHP-LMT		
	P-DA-XS		
	P-DA-XE		
	P-DA-YS		
	P-DA-YE		
	N-DA-XS		
	N-DA-XE		
	N-DA-YS		
	N-DA-YE		
	O-DA-XS		
	O-DA-XE		
	O-DA-YS		
	O-DA-YE		
	CHNGR-X		
	CHNGR-Y		
EDITOR	ED-X		
	ED-Y		
	LOOP-MB		
	LOOP-TH		
	MRK-MB		
	MRK-TH		

Opt	tion		
BODY	CCD-DISP		
	MODEL-SZ		
	RCPR-MD		
	F-WEB		
	PASCAL		
	PSCL-MD		
	EC-GLASS		
	PSTCL-ON		
USER	METAL		
	OHP-MODE		
	COPY-LIM		
	COUNTER1		
	COUNTER2		
	COUNTER3		
	COUNTER4		
	COUNTER5		
	COUNTER6		
	CONTROL		
	COLDOFST		
	MONO-SPD		
	CLR-L-SP		
	PRJ-L-SP		
	BKL-L-SP		
CST	P-SZ-C1		
	P-SZ-C2		
ACC	COIN		
	DK-P		
INT-FACE	REMOTE		
	B-CLR		
	P-PRT-MF		

4. Basic Operation

a. Initial Screen

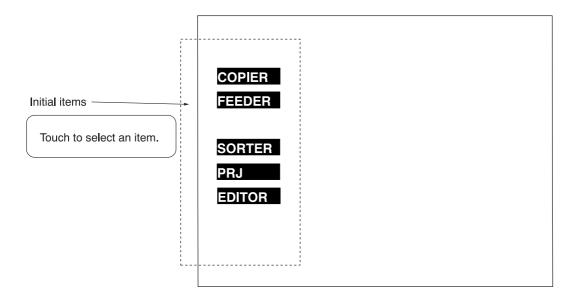


Figure 4-5

b. Level 1/Level 2 Item Screen

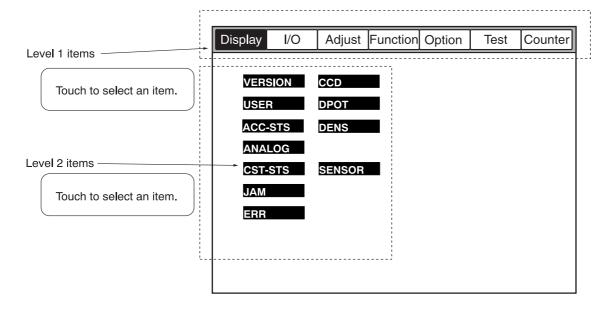


Figure 4-6

c. Level 3 Item Screen

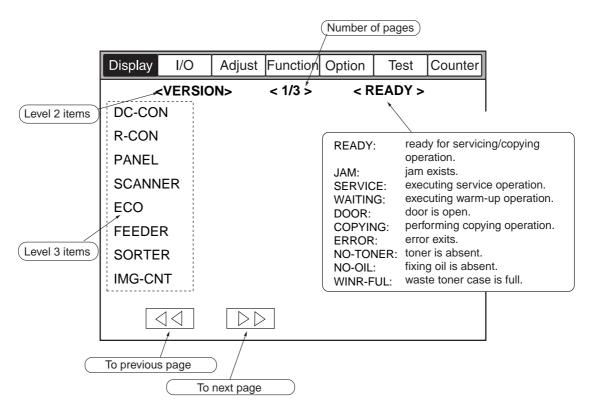


Figure 4-7


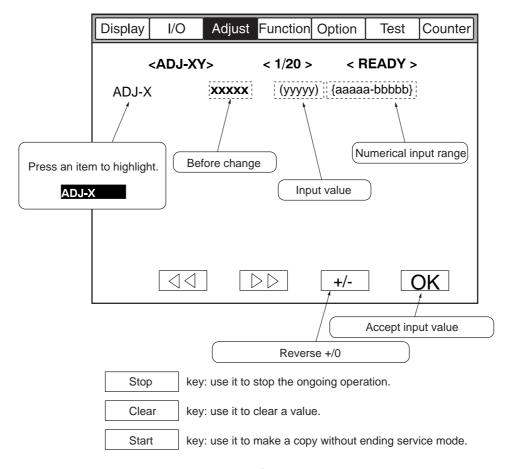



Figure 4-8


B. DISPLAY (control display mode)

COPIER>DISPLAY Items

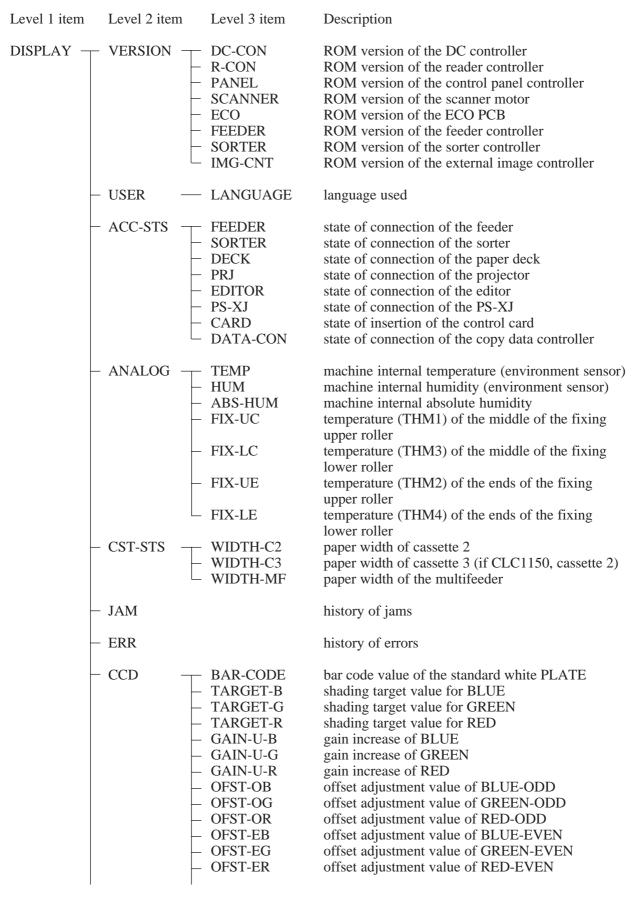


```
GAIN-OB
                                    gain adjustment value of LUE-ODD
                  GAIN-OG
                                    gain adjustment value of GREEN-ODD
                  GAIN-OR
                                    gain adjustment value of RED-ODD
                  GAIN-EB
                                    gain adjustment value for BLUE-EVEN
                                    gain adjustment value for GREEN-EVEN
                  GAIN-EG
                                    gain adjustment value for RED-EVEN
                  GAIN-ER
                  CCD-TYPE
                                    indicates type (CCD/analog processor)
                  METAL
                                    indicates the result of automatic adjustment (normal
                                    mode/precious metal mode)
                  BOF-OB
                                    black offset value for BLUE-ODD
                                    black offset value for GREEN-ODD
                  BOF-OG
                  BOF-OR
                                    black offset value for RED-ODD
                  BOF-EB
                                    black offset value for BLUE-EVEN
                  BOF-EG
                                    black offset value for GREEN-EVEN
                  BOF-ER
                                    black offset value for RED-EVEN
                  LAMP-DAT
                                    data value of activation voltage for the scanning
                                    lamp
DPOT
                                    surface potential (V) of the photosensitive drum
                  DPOT
                  V00-Y
                                    setting (V) of Y at laser output 00
                                    setting (V) of M at laser output 00
                  V00-M
                  V00-C
                                    setting (V) of C at laser output 00
                  V00-K
                                    setting (V) of Bk at laser output 00
                  VFF-Y
                                    setting (V) of Y at laser output FF
                  VFF-M
                                    setting (V) of M at laser output FF
                  VFF-C
                                    setting (V) of C at laser output FF
                                    setting (V) of Bk at laser output FF
                  VFF-K
                  VDC-Y
                                    setting (V) of Y for developing bias DC component
                  VDC-M
                                    setting (V) of M for developing bias DC component
                  VDC-C
                                    setting (V) of C for developing bias DC component
                  VDC-K
                                    setting (V) of Bk for developing bias DC component
                  VG-Y
                                    setting (V) of Y for grid bias
                  VG-M
                                    setting (V) of M for grid bias
                                    setting (V) of C for grid bias
                  VG-C
                  VG-K
                                    setting (V) of Bk for grid bias
                                    setting (V) of Y for target contrast potential
                  VCONT-Y
                  VCONT-M
                                    setting (V) of M for target contrast potential
                  VCONT-C
                                    setting (V) of C for target contrast potential
                  VCONT-K
                                    setting (V) of Bk for target contrast potential
                  VBACK-Y
                                    setting (V) of Y for de-fogging potential
                  VBACK-M
                                    setting (V) of M for de-fogging potential
                  VBACK-C
                                    setting (V) of C for de-fogging potential
                  VBACK-K
                                    setting (V) of for de-fogging potential
                  V00-500
                                    setting of drum surface potential at laser V00 while
                                    the primary charging assembly is at -500 V
                - V00-700
                                    setting of drum surface potential at laser VFF while
                                    the primary charging assembly is at -700 V
                  VFF-500
                                    setting of drum surface potential at laser V00 while
                                    the primary charging assembly is at -500 V
                  VFF-700
                                    setting of drum surface potential at laser VFF while
                                    the primary charging assembly is at -700 V
                                    dark area potential attenuation (\triangle V) at laser V00
                  DV00-500
                                    while the drum surface potential is at 500 V
                  DV00-700
                                    dark area potential attenuation (\triangle V) at laser V00
                                    while the drum surface potential is at 700 V
                  DVFF-500
                                    dark area potential attenuation (\triangle V) at laser VFF
                                    while the drum surface potential is at 500 V
```

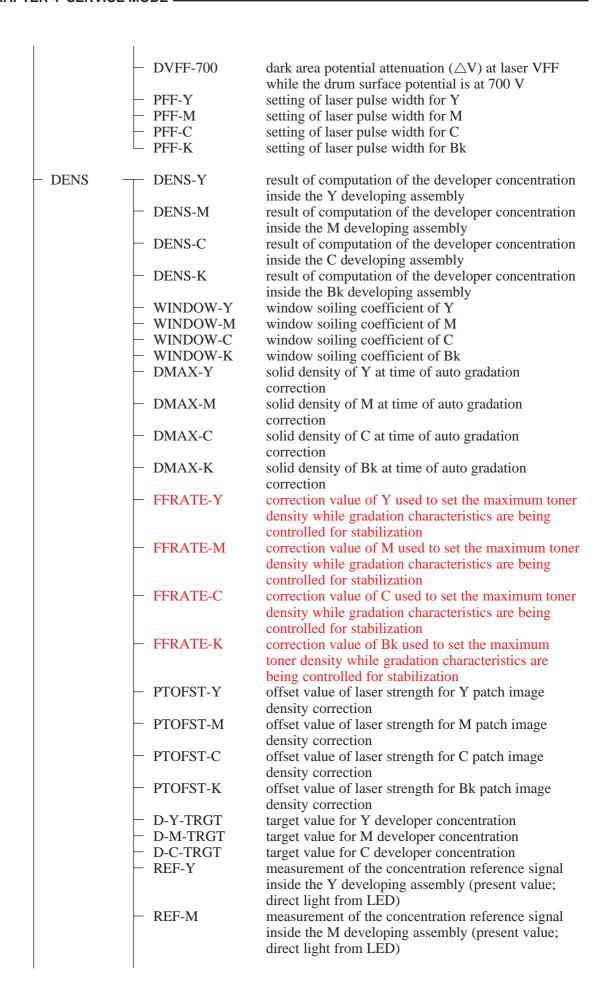

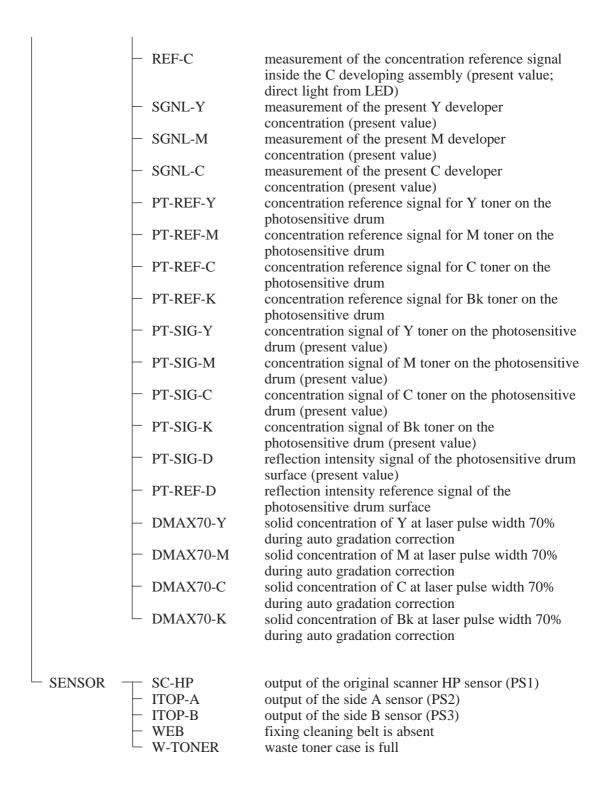

PRJ>DISPLAY Items

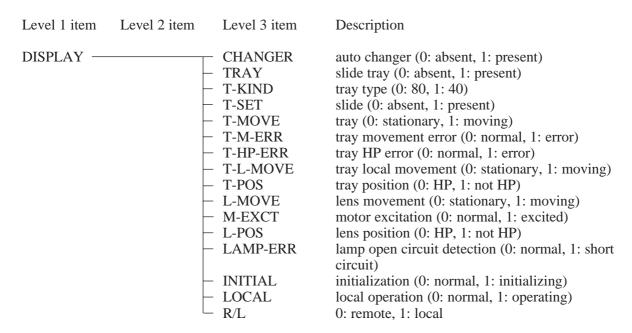

EDITOR>DISPLAY Items

Level 1 item	Level 2 item	Level 3 item	Description
DISPLAY —		- ED-X	input coordinates in editor sub scanning (X) direction
	L	- ED-Y	input coordinates in editor main scanning (Y) direction

VERSION

Indicates the ROM version of the PCBs of the copier and its accessories.

Level 3	Description	Remarks
DC-CON	Indicates the version of the flash memory of the DC-CPU.	Display < <u>XX</u> . <u>YY</u> >
R-CON	Indicates the version of the flash memory on the R-CPU.	R&D number Version number
PANEL	Indicates the version of the flash memory on the PANEL-CPU.	
SCANNER	Indicates the version of the CPU (IC8) on the original scanner motor driver PCB.	
ECO	Indicates the version of the ROM (IC2) on the ECO PCB.	
FEEDER	Indicates the version of the ROM on the feeder controller.	
SORTER	Indicates the version of the ROM on the sorter controller.	
IMG-CNT	Indicates the version of the ROM on the external image controller.	

USER COPIER>DISPLAY

Indicates items related to the User screen and the user.

Level 1	Description		Remarks		
LANGUAGE	xx (first 2 d yy (last 2 d zz: destina	ne language used/paper size configuration. digits): country code ligits): language code lation code (00: CANON, 01: OEM) size configuration code		Display <language xxyy-zz.aa=""></language>	
		Code	Configuration		
		00	AB		
		01	Inch		
		02	A		
		03	All sizes		
				-	

ACC-STS

Indicates the state of connection of accessories.

Level 3	Description	Remarks
FEEDER	Indicates the sate of connection of the feeder.	0: not connected
SORTER	Indicates the state of connection of the sorter.	1: connected
DECK	Indicates the state of connection of the paper deck.	
PRJ	Indicates the state of connection of the projector.	
EDITOR	Indicates the state of connection of the editor.	
PS-XJ	Indicates the state of connection of the PS-XJ.	
CARD	Indicates the state of insertion of a control card.	
DATA-CON	Indicates the state of connection of the copy data controller.	

ANALOG COPIER>DISPLAY

Indicates the measurements taken by the analog sensor.

Level 1	Description	Remarks
TEMP	Indicates the machine internal temperature (environment sensor).	Unit: °C
HUM	Indicates the machine internal humidity (movement sensor).	Unit: %RH
ABS-HUM	Indicates the machine internal absolute humidity.	Unit: g
FIX-UC	Indicates the temperature (THM1) of the middle of the fixing upper roller.	Unit: °C
FIX-LC	Indicates the temperature (THM3) of the middle of the fixing lower roller.	Unit: °C
FIX-UE	Indicates the temperature (THM2) of the ends of the fixing upper roller.	Unit: °C
FIX-LE	Indicates the temperature (THM4) of the ends of the fixing lower roller.	Unit: °C

CST-STS

Indicates the paper size of the cassette/multifeeder.

Level 1	Description	Remarks
WIDTH-C2	Indicates the paper switch of the cassette 2 (CLC1120 only).	Unit: mm (decimal places are omitted)
WIDTH-C3	Indicates the paper width of the cassette 3 (for CLC1150, cassette 2).	
WIDTH-MF	Indicates the paper width of the multifeeder.	

JAM COPIER>DISPLAY

Indicates jam data.

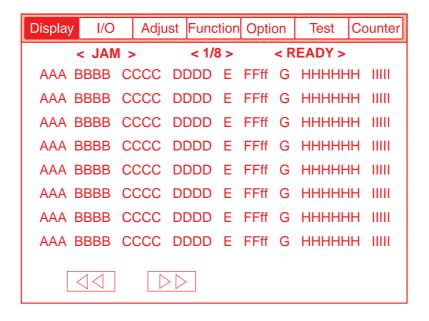


Figure 4-9

Item	Description	Remarks
AAA	Indicates the order of jams (higher the number, older the jam).	1 to 64 (64 jams max.)
BBBB		
CCCC		
DDDD		
Е	Indicates the location of the jam.	0: copier 1: feeder 2: sorter
FFff	Jam code	FF: type of jam (Table 13-701) ff: sensor (Table 13-702)
G	Indicates the source of paper.	See Table 13-703.
нннннн	Indicates the soft counter for the source of paper.	
ШШ	Indicates the size of paper.	USER: non-default size PCARDR: post card

FF: Type of Jam

COPIER>DISPLAY

Code	Туре	Code	Type
00xx	Feeder	04xx	service mode
01xx	delay	05xx	sorter
02xx	stationary	EExx	service call
03xx	remaining	FFxx	door open

Table 4-1

ff: Jam Sensor

	Jam sensor	Code	Jam sensor
xx01*	pickup vertical path sensor (PS27)	xx50	post-transfer paper sensor (PS6)
xx02*	pickup vertical path sensor (PS26)	xx51	pre-transfer paper sensor (PS5)
xx03*	pickup vertical path sensor 1 (PS21)	0052	pre-cleaning paper sensor (PS71)
xx04*	re-pickup vertical path sensor (PS28)	xx60	separation sensor (PS7)
xx05	deck pickup sensor (PS101)	xx61	internal delivery paper sensor (PS12)
xx06	multifeeder pickup sensor (PS9)	xx70	external delivery sensor (PS31)
xx09	pickup vertical path sensor (PS27)	xx80	delivery vertical path sensor 1 (PS32)
xx10	pickup vertical path sensor 2 (PS26)	xx81	delivery vertical path sensor 1 (PS33)
xx11	pickup vertical path sensor 1 (PS21)	xx82	duplexing inlet paper sensor (PS37)
xx12	re-pickup vertical path sensor (PS28)	xx83	duplexing path paper sensor (PS34)
0020	transparency sensor (PS69)	xx84	duplexing path reversal paper sensor
xx30	pre-registration sensor (PS30)		(PS35)
xx40	registration sensor(PS70)	xx90	buffer path unit sensor assembly

^{*} Detection at time of pickup.

Table 4-2a

ff: Detail of Sorter Jam

COPIER>DISPLAY

Code	Туре	Code	Type of jam
xx03	feeding delay	xx08	door open jam (paper present)
xx04	feeding stationary	xx09	door open jam (paper absent)
xx06	staple jam	xx0A	bin outside jam
xx07	power-on jam		

Table 4-2b

G: Source of Paper

Code	Description	Code	Description
1	cassette 1	6	not used
2	cassette 2	7	paper deck
3	cassette 3	8	multifeeder
4	not used	9	duplexing unit
5	not used		

Table 4-3

ERR COPIER>DISPLAY

Indicates error codes.

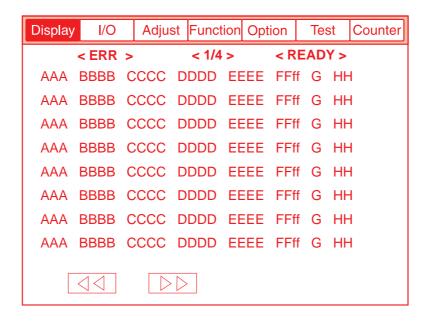


Figure 4-10

Level 3	Description	Remarks
AAA	Indicates the order of errors (the higher the number, the older the error).	1 to 32 (32 max.)
BBBB		
CCCC		
DDDD		
EEEE	Indicates the error code.	See "Self Diagnosis."
FFff	Indicates the detail code.	If none, '0000'.
G	Indicates the location of the error.	0: copier 1: feeder 2: sorter
НН	alarm code (not used: indicates '00')	

CCD COPIER>DISPLAY

Indicates the measurements related to the CCD.

Level 3	Description	Remarks
BAR-CODE	bar code value of the standard white plate	Indicated only when FUNCTION>CCD>CCD-ADJ has been executed.
TARGET-B	shading target value of BLUE	
TARGET-G	shading target value of GREEN	
TARGET-R	shading target value of RED	
GAIN-U-B	gain increase value of BLUE	
GAIN-U-G	gain increase value of GREEN	
GAIN-U-R	gain increase value of RED	
OFST-OB	offset adjustment value of BLUE-OD	
OFST-OG	offset adjustment value of GREEN-ODD	
OFST-OR	offset adjustment value of RED-ODD	
OFST-EB	offset adjustment value of BLUE-EVEN	
OFST-EG	offset adjustment value of GREEN-EVEN	
OFST-ER	offset adjustment value of RED-EVEN	
GAIN-OB	gain adjustment value of BLUE-ODD	
GAIN-OG	gain adjustment value of GREEN-ODD	
GAIN-OR	gain adjustment value of RED-ODD	
GAIN-EB	gain adjustment value of BLUE-EVEN	
GAIN-EG	gain adjustment value of GREEN-EVEN	
GAIN-ER	gain adjustment value of RED-EVEN	
CCD-TYPE	type (CCD/analog processor)	(3: CLC1100 only)
METAL	result of automatic adjustment (normal mode/ precious metal mode)	0: normal mode 1: precious metal mode
BOF-OB	black offset value of BLUE-ODD	
BOF-OG	black offset value of GREEN-ODD	
BOF-OR	black offset value of RED-ODD	
BOF-EB	black offset value of BLUE-EVEN	
BOF-EG	black offset value of GREEN-EVEN	
BOF-ER	black offset value of RED-EVEN	
LAMP-DAT	original scanning lamp activation voltage for CVR	0 to 999

DPOTIndicates the control data for the surface potential of the photosensitive drum.

Level 3	Description	Remarks
DPOT	surface potential (V) of the photosensitive drum	Indicated in round numbers,
V00-Y	setting (V) of Y at laser output 00	omitting decimal places.
V00-M	setting (V) of M at laser output 00	
V00-C	setting (V) of C at laser output 00	
V00-K	setting (V) of Bk at laser output FF	
VFF-Y	setting (V) of Y at laser output FF	
VFF-M	setting (V) of M at laser output FF	
VFF-C	setting (V) of C at laser output FF	
VFF-K	setting (V) of Bk at laser output FF	
VDC-Y	setting (V) of Y for developing bias DC component	
VDC-M	setting (V) of M for developing bias DC component	
VDC-C	setting (V) of C for developing bias DC component	
VDC-K	setting (V) of Bk for developing bias DC component	
VG-Y	setting (V) of Y for grid bias	
VG-M	setting (V) of M for grid bias	
VG-C	setting (V) of C for grid bias	
VG-K	setting (V) of Bk for grid bias	

COPIER>DISPLAY

Level 3	Description	Remarks
VCONT-Y	setting (V) of Y for target contrast potential	Indicated in round numbers,
VCONT-M	setting (V) of M for target contrast potential	omitting decimal places.
VCONT-C	setting (V) of C for target contrast potential	
VCONT-K	setting (V) of Bk for target contrast potential	
VBACK-Y	setting (V) of de-fogging potential for Y	
VBACK-M	setting (V) of de-fogging potential for M	
VBACK-C	setting (V) of de-fogging potential for C	
VBACK-K	setting (V) of de-fogging potential for Bk	
V00-500	measurement of drum surface potential at laser V00 with the primary charging assembly at -500 V	
V00-700	measurement of drum surface potential at laser V00 with the primary charging assembly at -700 V	
VFF-500	measurement of drum surface potential at laser VFF with the primary charging assembly at -500 V	
VFF-700	measurement of drum surface potential at laser VFF with the primary charging assembly at -700 V	
DV00-500	dark area potential attenuation ($\triangle V$) at laser V00 with the drum surface potential at 500 V	
DV00-700	dark area potential attenuation ($\triangle V$) at laser V00 with the drum surfaced potential at 700 V	
DVFF-500	dark area potential attenuation (△V) at laser VFF with the drum surfaced potential at 500 V	
DVFF-700	dark area potential attenuation (△V) at laser VFF with the drum surfaced potential at 700 V	
PFF-Y	setting of laser pulse width for Y	
PFF-M	setting of laser pulse width for M	
PFF-C	setting of laser pulse width for C	
PFF-K	setting of laser pulse width for Bk	

DENS COPIER>DISPLAY

Indicates the concentration of developer.

Level 3	Description	Remarks
DENS-Y	computed value (%) of the developer inside the Y developing assembly	Indicates to the second decimal place.
DENS-M	computed value (%) of the developer inside the M developing assembly	
DENS-C	computed value (%) of the developer inside the C developing assembly	
DENS-K	computed value (%) of the developer inside the Bk developing assembly	
WINDOW-Y	window soiling correction coefficient for Y	Error if lower than 70%
WINDOW-M	window soiling correction coefficient for M	
WINDOW-C	window soiling correction coefficient for C	
WINDOW-K	window soiling correction coefficient for Bk	
DMAX-Y	solid density (%) of Y during auto gradation correction	Compares against the design value, and omits decimal
DMAX-M	solid density (%) of M during auto gradation correction	places.
DMAX-C	solid density (%) of C during auto gradation correction	
DMAX-K	solid density (%) of Bk during auto gradation correction	
FFRATE-Y	correction value of each used to determine the	Reference: 100
FFRATE-M	maximum toner density (FF) while gradation characteristics are being controlled for stabilization	
FFRATE-C	characteristics are some controlled for statements.	
FFRATE-K		
PTOFST-Y	offset value of laser strength for Y patch image density adjustment	Uses whole numbers, omitting decimal places
PTOFST-M	offset value of laser strength for M patch image density adjustment	
PTOFST-C	offset value of laser strength for C patch image density adjustment	
PTOFST-K	offset value of laser strength for Bk patch image density adjustment	

COPIER>DISPLAY

Level 3	Description	Remarks
D-Y-TRGT	target value of Y developer concentration	Indicated in round numbers,
D-M-TRGT	target value of M developer concentration	omitting decimal places
D-C-TRGT	target value of C developer concentration	
REF-Y	present value of the density reference signal for the Y developing assembly (direct light form (LED)	
REF-M	present value of the density reference signal for the M developing assembly (direct light form (LED)	
REF-C	present value of the density reference signal for the C developing assembly (direct light from LED)	
SGNL-Y	measurement of the present Y developer concentration	
SGNL-M	measurement of the present M developer concentration	
SGNL-C	measurement of the present C developer concentration	
PT-REF-Y	concentration reference signal for the Y toner on the photosensitive drum	
PT-REF-M	concentration reference signal for the M toner on the photosensitive drum	
PT-REF-C	concentration reference signal for the C toner on the photosensitive drum	
PT-REF-K	concentration reference signal for the Bk toner on the photosensitive drum	
PT-SIG-Y	concentration signal for the Y toner on the photosensitive drum (present value)	
PT-SIG-M	concentration signal for the M toner on the photosensitive drum (present value)	
PT-SIG-C	concentration signal for the C toner on the photosensitive drum (present value)	
PT-SIG-K	concentration signal for the Bk toner on the photosensitive drum (present value)	
PT-SIG-D	reflection intensity signal for the photosensitive drum surface (present value)	
PT-REF-D	reflection intensity reference signal for the photosensitive drum surface	
DMAX70-Y	solid density of Y at laser pulse width 70% during auto gradation correction	Indicated in round numbers, omitting decimal places.
DMAX70-M	solid density of M at laser pulse width 70% during auto gradation correction	
DMAX70-C	solid density of C at laser pulse width 70% during auto gradation correction	
DMAX70-K	solid density of Bk at laser pulse width 70% during auto gradation correction	

SENSOR COPIER>DISPLAY

Indicates the state of sensors of particular importance for servicing work.

Level 3	Description	Remarks
SC-HP	output of the original scanner HP sensor (PS1)	0: HP 1: not HP
ITOP-A	output of the side A sensor (PS2)	0: sensor not detecting signal plate
ITOP-B	output of side B sensor (PS3)	sensor detecting signal plate
WEB	cleaning belt is out	0: present 1: absent
W-TONER	case full	0: case not full 1: case is full

Projector PRJ>DISPLAY

Level 3	Description	Remarks
CHANGER	presence/absence of the auto changer	0: absent, 1: present
TRAY	presence/absence of the slide tray	0: absent, 1: present
T-KIND	type of tray	0: 80, 1: 140
T-SET	presence/absence of slides	0: absent, 1: present
T-MOVE	state of the tray	0: stationary, 1: moving
T-M-ERR	tray movement error	0: normal, 1: error
T-HP-ERR	tray HP error	0: normal, 1: error
T-L-MOVE	tray local movement	0: stationary, 1: moving
T-POS	position of the tray	0: HP, 1: not HP
L-MOVE	lens movement	1: stationary, 1: moving
M-EXCT	state of motor excitation	0: normal, 1: excited
L-POS	position of the lens	0: HP, 1: not HP
LAMP-ERR	open circuit in the lamp	0: normal, 1: open circuit
INITIAL	initialization	0: normal, 1: being initialized
LOCAL	local movement	0: normal, 1: moving
R/L	remote/local	0: remote, 1: local

Editor EDITOR>DISPLAY

Level 3	Description	Remarks
ED-X	input coordinates in editor sub scanning direction (X)	Not indicated if
ED-Y	input coordinates in editor main scanning direction (Y)	EDITOR>OPTION> ED-MODE is set to '0'.

C. I/O (I/O display mode)

1. DC-CPU I/O>DC-CON

Address	bit	Description	Remarks
P001	15	buffer path unit jam detection	1: paper present
	14	not used	
	13	internal delivery sensor (PS12) signal	1: paper present
	12	external delivery sensor (PS31) signal	1: paper present
	11	separation sensor (PS7) signal	1: paper present
	10	post-transfer paper sensor (PS6) signal	1: paper present
	9	pre-transfer paper sensor (PS5) signal	1: paper present
	8	registration sensor (PS70) signal	1: paper present (Note)
	7	pre-registration sensor (PS30) signal	1: paper present
	6	transparency sensor (PS69) signal	1: paper present (plain paper) (Note)
	5	multifeeder pickup sensor (PS9) signal	1: paper present
	4	deck pickup sensor (PS101) signal	1: paper present
	3	re-pickup vertical path sensor (PS28) signal	1: paper present
	2	pickup vertical path 1 sensor (PS28) signal	1: paper present
	1	pickup vertical path 2 sensor (PS26) signal	1: paper present
	0	pickup vertical path 3 sensor (PS27) signal	1: paper present
P002	15	pre-registration sensor (PS30) signal	1: paper present
	14	not used	
	13	multifeeder paper sensor (PS15) signal	1: paper present
	12	deck paper absent sensor (PS102) signal	1: paper present
	11	duplexing tray paper sensor (PS36) signal	0: paper present
	10	cassette 1 paper sensor (PS20) signal	1: paper present
	9	cassette 2 paper sensor (PS24/DPS24) signal	1: paper present
	8	cassette 3 paper sensor (PS25/DPS25)	1: paper present
	7	not used	
	6	not used	
	5	not used	
	4	duplexing reversal paper sensor (PS35) signal	1: paper present
	3	duplexing path paper sensor (PS34) signal	1: paper present
	2	duplexing inlet paper sensor (PS37) signal	1: paper present
	1	delivery vertical path 2 sensor (PS33) signal	1: paper present
	0	delivery vertical path 1 sensor (PS32) signal	1: paper present

Note: The sensor detects paper after the LED of the sensor turns on; normally, '1' is indicated, since the LED is not ON.

Address	bit	Description	Remarks
P003	15	hopper motor (M10) ready signal	0: READY
	14	transfer drum cleaner brush motor (M8) ready signal	0: READY
	13	not used	
	12	duplexing motor (M14) ready signal	0: READY
	11	laser scanner motor (M3) ready signal	0: READY
	10	fixing motor (M5) ready signal	0: READY
	9	drum motor (M2) ready signal	0: READY
	8	main motor (M4) ready signal	0: READY
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	not used	
	2	not used	
	1	not used	
	0	not used	
P004	15	not used	
	14	paper deck connect signal	0: connect
	13	duplexing unit connect	0: connect
	12	buffer path unit connect signal	1: buffer path is present
	11	transfer drawer connector connect signal	0: transfer unit is present
	10	registration path driver drawer connect signal	0: connected
	9	transfer drawer connector signal	0: lever is set
	8	fixing drawer connector signal	0: connected
	7	control switch (SW2) off detection	1: OFF
	6	multifeeder tray open/closed sensor (PS62) signal	0: open
	5	not used	
	4	buffer door switch signal	1: open
	3	pickup cover sensor (PS44) signal	0: open
	2	left front cover sensor (PS42) signal	0: open
	1	right front cover sensor (PS41) signal	0: open
	0	delivery cover sensor (PS43) signal	0: open

Address	bit	Description	Remarks
P005	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	pickup holder model code 3 signal	
	10	pickup holder model code 2 signal	
	9	pickup holder model code 1 signal	
	8	pickup holder model code 0 signal	
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	cassette 2 paper length sensor 1 (PSU2) signal	1: ON
	2	cassette 2 paper length sensor 0 (PSU2) signal	1: ON
	1	cassette 3 paper length sensor 1 (PSU3/DPSU3) signal	1: ON
	0	cassette 3 paper length sensor (PSU3/DPSU3) signal	1: ON
P006	15	not used	
	14	Bk toner level sensor (TS4) signal not used	0: lower than specified
	13	not used	
	12	Y toner level sensor (TS3) signal	0: lower than specified
	11	not used	
	10	C toner level sensor (TS2)	0: lower than specified
	9	not used	
	8	M toner level sensor (TS1) signal	0: lower than specified
	7	waste toner feedscrew locked detecting switch (SW7) signal	0: locked
	6	waste toner case full sensor (PS68) signal	1: full
	5	not used	
	4	fixing oil level sensor (PS10) signal	0: lower than specified
	3	fixing upper cleaning belt length sensor (PS11) signal	0: belt absent
	2	fixing lower cleaning belt length sensor (PS67) signal	0: belt absent
	1	not used	
	0	not used	

Address	bit	Description	Remarks
P007	15	multifeeder lifter H sensor (PS17) signal	1: ON
	14	multifeeder lifter L sensor (PS18) signal	1: ON
	13	deck lifter upper limit sensor (PS103) signal	1: upper limit
	12	not used	
	11	not used	
	10	cassette 1 lifter sensor (PS19) signal	1: ON
	9	cassette 2 lifter sensor (PS22/DPS22) signal	1: ON
	8	cassette 3 lifter sensor (PS23/DPS23) signal	1: ON
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	shutoff (SHUTOFF) error detection	1: error
	2	SSR2 error detection	0: error
	1	not used	
	0	not used	
P008	15	not used	
	14	not used	
	13	counter mode 5 signal	
	12	counter mode 4 signal	
	11	counter mode 3 signal	
	10	counter mode 2 signal	
	9	counter mode 1 signal	
	8	counter mode 0 signal	
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	not used	
	2	cassette 1 sensor (PS46) signal	1: cassette is present
	1	cassette 2 sensor (PS47/DPS47) signal	1: cassette is present
	0	cassette 3 sensor (PS48/DPS48) signal	1: cassette is present

Address	bit	Description	Remarks
P009	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	C sensor (PS4) signal	1: ON
	9	side B sensor (PS3) image leading edge signal	1: ON (light-blocking plate present)
	8	side A sensor (PS2) image leading edge signal	1: ON (light-blocking plate present)
	7	not used	
	6	not used	
	5	not used	
	4	paper jogging guide HP sensor (PS40) signal	1: HP
	3	attraction/transfer locking cam home position sensor (PS8) signal	1: HP
	2	transfer drum cleaner HP sensor (PS59) signal	1: HP
	1	transfer drum HP sensor (PS57) signal	1: HP
	0	not used	
P00A	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	Bk developing assembly HP sensor (PS55) signal	1: HP
	10	Y developing assembly HP sensor (PS53) signal	1: HP
	9	C developing assembly HP sensor (PS51) signal	1: HP
	8	M developing assembly HP sensor (PS49) signal	1: HP
	7	not used	
	6	polishing roller motor (M9) error detection	1: error
	5	multifeeder lifter motor (M15) error detection	1: error
	4	deck lifter motor (M101) error detection	0: error
	3	not used	
	2	cassette 1 lifter motor (M11) error detection	1: error
	1	cassette 2 lifter motor (M12/DM2) error detection	1: error
	0	cassette 3 lifter motor (M13/DM13) error detection	1: error

Address	bit	Description	Remarks
P00B	15	power supply cooling fan (FM9) error detection	1: error
	14	not used	
	13	24 V off detection (linked to door)	1: OFF
	12	not used	
	11	not used	
	10	internal static eliminator high voltage error	1: error
	9	HVT AC error detection	1: error
	8	cleaning blade reciprocating motor (M7) error detection	0: error
	7	buffer path unit locking cam sensor signal	1: HP
	6	not used	
	5	not used	
	4	not used	
	3	not used	
	2	not used	
	1	pre-cleaning paper sensor (PS71) signal	1: paper present (Note)
	0	not used	
P00C	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	fixing motor (M5) CLK signal	Alternates between 0 and 1.
	2	not used	
	1	drum motor (M2) CLK signal (divided by 1/2)	Alternates between 0 and 1.
	0	drum motor (M2) CLK signal	Alternates between 0 and 1.

Note: The sensor detects paper after the LED of the sensor turns on; normally, '1' is indicated, since the LED is not ON.

Address	bit	Description	Remarks
P00D	15	not used	1: HP
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	fixing oil pump driver error detection	error if pump is in operation. error if pump is at rest.
	6	not used	
	5	fixing upper thermistor open circuit detection	1: open circuit
	4	fixing lower thermistor open circuit detection	1: open circuit
	3	fixing upper heater error detection	1 error
	2	fixing lower heater error detection	1 error
	1	SSR1 (fixing upper heater side) error detection	1 error
	0	SSR1 (fixing lower heater side) error detection	1 error
P00E	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	not used	
	6	toner suction fan (FM6) error detection	1: error
	5	not used	
	7	not used	
	3	not used	
	2	not used	
	1	not used	
	0	delivery cooling fan (FM11) error detection	1: error

Address	bit	Description	Remarks
P00F	15-0	not used	
P010	15-0	not used	
P011	15	hard check output	
	14	hard check output	
	13	har d check output	
	12	hard check output	
	11	hard check output	
	10	hard check output	
	9	hard check output	
	8	hard check output	
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	not used	
	2	not used	
	1	not used	
	0	pre-exposure lamp (LA1) activation signal	1: ON
P012	15	laser scanner motor (M3) clock switch signal	
	14	transfer drum cleaner brush motor (M8) drive signal	0: ON
	13	duplexing motor (M14)	0: ON
	12	not used	
	11	not used	
	10	not used	
	9	cleaning blade reciprocating motor (M7) drive signal	1: ON
	8	laser sensor motor (M3) drive signal	0: ON
	7	Bk toner supply clutch (CL8) drive signal	1: ON
	6	Y toner supply clutch (CL7) drive signal	1: ON
	5	C toner supply clutch (CL6) drive signal	1: ON
	4	M toner supply clutch (CL5) drive signal	1: ON
	3	Bk developing cylinder clutch (CL4) drive signal	1: ON
	2	Y developing cylinder clutch (CL3) drive signal	1: ON
	1	C developing cylinder clutch (CL2) drive signal	1: ON
	0	M developing cylinder clutch (CL1) drive signal	1: ON

Address	bit	Description	Remarks
P013	15	control state of the fixing heater	0: during control
	14	not used	
	13	transparency sensor LED (PS69L) ON signal	1: ON
	12	pre-cleaning paper sensor LED (PS71L) ON signal	1: ON
	11	fixing upper heater drive signal	0: ON
	10	fixing lower heater drive signal	0: ON
	9	fixing oil pump (PSP1) drive signal	0: ON
	8	SSR2	1: ON
	7	not used	
	6	not used	
	5	stopper plate solenoid (SL12) drive signal	0: open, 1: closed
	4	stopper plate solenoid (SL12) drive signal	0: closed, 1: open
	3	not used	
	2	not used	
	1	not used	
	0	duplexing feeding clutch (CL14) drive signal	1: ON
P014	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	Bk toner concentration measurement LED ON signal	1: ON
	10	Y toner concentration measurement LED ON signal	1: ON
	9	C toner concentration measurement LED ON signal	1: ON
	8	M toner concentration measurement LED ON signal	1: ON
	7	not used	
	6	not used	
	5	primary charging wire cleaning motor (M6) forward signal	0: forward, 1: reverse
	4	primary charging wire cleaning motor (M6) reverse signal	1: forward, 0: reverse
	3	not used	1: ON
	2	not used	1: ON
	1	polishing roller motor (M9) reverse rotation signal	1: reverse, 0: normal direction
	0	polishing roller motor (M9) normal rotation signal	0: reverse, 1: normal (roller contact)

Address	bit	Description	Remarks
P015	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	counter 3 (CNT4) signal	
	10	counter 2 (CNT3) signal	
	9	counter 1 (CNT2) signal	
	8	counter 0 (CNT1) signal	
	7	registration jam timing signal	
	6	deck sensor select signal 2	
	5	deck sensor select signal 1	
	4	deck sensor select signal 0	
	3	pre-registration jam timing signal	
	2	pickup sensor select signal 2	
	1	pickup sensor select signal 1	
	0	pickup sensor select signal 0	
P016	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	A/D multiplex select signal 2	
	9	A/D multiplex select signal 1	
	8	A/D multiplex select signal 0	
	7	not used	
	6	not used	
	5	fixing upper cleaning belt solenoid (SL1)	1: ON
	4	fixing lower cleaning belt solenoid (SL2)	1: ON
	3	delivery vertical path clutch (CL19)	1: ON
	2	delivery paper deflecting plate solenoid (SL10)	1: ON
	1	separation claw solenoid (SL4)	1: ON
	0	shutoff signal	1: shutoff

Address	bit	Description	Remarks
P017	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	registration clutch (CL9) drive signal	1: ON
	6	multifeeder feed clutch (CL10) drive signal	1: ON
	5	multifeeder pickup clutch (CL16) drive signal	1: ON
	4	deck pickup clutch (CL102) drive signal	1: ON
	3	duplexing feed clutch (CL14) drive signal	1: ON
	2	cassette 1 pickup clutch (CL1) drive signal	1: ON
	1	cassette 2 pickup clutch (CL12/DCL12) drive signal	1: ON
	0	cassette 3 pickup clutch (CL13/DCL13) drive signal	1: ON
P018	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	toner suction fan (FM6) drive signal 1	1: ON
	6	toner suction fan (FM6) drive signal 0	1: ON
	5	laser scanner motor cooling fan (FM4) drive signal	1: ON
	4	not used	
	3	not used	
	2	not used	
	1	delivery cooling fan (FM11) drive signal 1	0: full speed, 1: half speed
	0	delivery cooling fan (FM11) drive signal 0	1: full speed, 0: half speed

Address	bit	Description	Remarks
P019	15	No. 3/No. 4 DC remote signal	0: remote
	14	No. 3/No. 4 WBP remote signal	0: remote
	13	No. 1/No. 2 DC remote signal	0: remote
	12	No. 1/No. 2 WBP remote signal	0: remote
	11	DC output select 4 signal	0: select
	10	DC output select 3 signal	0: select
	9	DC output select 2 signal	0: select
	8	DC output select 1 signal	0: select
	7	transfer acceleration remote signal	1: accelerate, 0: 0 μ
	6	trainer 0 µ remote signal	0: accelerate, 1: 0 μ
	5	transfer DC remote signal	0: remote
	4	attraction acceleration remote signal	1: accelerate, 0: 0 μ
	3	attraction 0 μ remote signal	0: accelerate, 1: 0 μ
	2	attraction DC remote signal	0: remote
	1	grid remote signal	0: remote
	0	primary DC remote signal	0: remote
P01A	15	HV-DEV-ENABLE signal	0: ENABLE
	14	HV-DC-ENABLE signal	0: ENABLE
	13	HV-AC-ENABLE signal	0: ENABLE
	12	post-cleaning charging DC remote signal	0: remote
	11	separation DC remote signal	0: remote
	10	separation AC remote signal	0: remote
	9	internal static eliminator DC remote signal	0: remote
	8	internal static eliminator AC remote signal	0: remote
	7	not used	
	6	multifeeder lifter motor (M15) reverse drive signal	1: down
	5	multifeeder lifter motor (M15) normal rotation drive signal	1: up
	4	deck lifter motor (M101) drive signal	0: ON
	3	deck lifter down signal	1: down
	2	cassette 1 lifter motor (M11) drive signal	1: ON
	1	cassette 2 lifter motor (M12/DM12) drive signal	1: ON
	0	cassette 3 lifter motor (M13/DM13) drive signal	1: ON

Address	bit	Description	Remarks
P01B	15	deck open sensor (PS109) signal	0: open
	14	deck set sensor (PS105) signal	0: set
	13	deck open switch (SW101) signal	1: open
	12	deck stack level upper sensor (PS107) signal	0: paper present
	11	deck paper level lower sensor (PS108) signal	0: paper present
	10	deck detection signal	0: deck present
	9	deck lifter lower limit detecting switch (SW102) signal	0: lower limit
	8	not used	
	7	not used	
	6	not used	
	5	hopper motor (M10) reverse rotation drive signal	1: reverse (stirring)
	4	hopper motor (M10) drive signal	0: ON
	3	fixing motor (M5) speed signal 1	1: low speed
	2	fixing motor (M5) speed signal 0	0: normal
	1	not used	
	0	fixing motor (M5) driver signal	0: ON
P01C	15	not used	
	14	not used	
	13	main motor reversal signal	
	12	main motor (M4) drive signal	0 : ON
	11	drum motor (M2) speed signal 1	1: low speed
	10	drum motor (M2) speed signal 0	0: low speed, 1: BD sync
	9	drum motor (M2) reversal signal	1: normal rotation
	8	drum motor (M2) drive signal	0: ON
	7	deck open indication (LED100) ON signal	1: ON
	6	deck open solenoid (SL102) drive signal	1: ON
	5	not used	
	4	not used	
	3	not used	
	2	not used	
	1	postcard feeding clutch (CL18) drive signal	1: ON
	0	registration roller releasing solenoid (SL5) drive signal	1: ON

Address	bit	Description	Remarks
P01D	15	not used	
	14	not used	
	13	multifeeder pickup solenoid (SL14) drive signal	1: ON
	12	deck pickup roller releasing solenoid (SL101) drive signal	1: ON
	11	duplexing paper feed roller solenoid (SL13) drive signal	1: ON
	10	pickup roller 1 solenoid (SL7)	1: ON
	9	pickup roller 2 solenoid (SL8/DSL8)	1: ON
	8	pickup roller 3 solenoid (SL9/DSL9)	1: ON
	7	buffer path unit solenoid (SL1) drive signal	1: ON
	6	buffer path unit clutch (CL1) drive signal	1: ON
	5	buffer path unit solenoid (SL2) drive signal	-
	4	buffer path unit cam HP select signal	0: left side when viewed from rear
	3	duplexing stacking guide plate solenoid (SL15) drive signal	1: ON
	2	not used	
	1	attraction roller solenoid (SL6) drive signal	1: ON
	0	separation push-up solenoid (SL3) drive signal	0: ON
P01E	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	not used	
	6	not used	
	5	back suction fan (FM16) drive signal 1	1: full speed, 0: half speed
	4	back suction fan (FM16) drive signal 0	0: full speed, 1: half speed
	3	exhaust fan (FM2) full speed drive signal	1: full speed, 0: half speed
	2	exhaust fan (FM2) half speed drive signal	0: full speed, 1: half speed
	1	IP cooling fan (FM7) full speed drive signal	1: full speed, 0: half speed
	0	IP cooling fan (FM7) half speed drive signal	0: full speed, 1: half speed

Address	bit	Description	Remarks
P01F	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	ozone suction fan (FM5) drive signal	1: ON
	6	not used	
	5	primary charging assembly fan (FM3) full speed drive signal	1: full speed, 0: half speed
	4	primary charging assembly fan (FM3) half speed drive signal	1: half speed, 0: full speed
	3	laser scanner motor cooling fan (FM4) drive signal	1: ON
	2	not used	
	1	electrical unit cooling fan (FM8) full speed drive signal	1: full speed, 0: half speed
	0	electrical unit cooling fan (FM8) half speed drive signal	1: full speed, 0: half speed
P020	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	ozone suction fan (FM5) error detection	1: error
	6	primary charging assembly fan (FM3) error detection	1: error
	5	laser scanner motor cooling fan (FM4) error detection	1: error
	4	electrical unit cooling fan (FM8) error detection	1: error
	3	not used	
	2	back suction fan (FM16) error direction	1: error
	1	exhaust fan (FM2) error detection	1: error
	0	IP cooling fan (FM7) error detection	1: error

Address	bit	Description	Remarks
P021	15	not used	
	14	not used	
	13	not used	
	12	not used	
	11	not used	
	10	not used	
	9	not used	
	8	not used	
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	not used	
	2	not used	
	1	LD-J2DCON	1: download mode
	0	power switch off signal	1: OFF
P022	15-0	not used	
P023	15-0	not used	
P024	15-0	not used	
P025	15-0	not used	
P026	15-0	not used	
P027	15-0	not used	
P028	15-0	not used	

2. R-CPU I/O>R-CON

Address	bit	Description	Remarks
P001	15-8	not used	
	7	not used	
	6	not used	
	5	WATCH DOG pulse signal	
	4	ECO PCB internal signal	
	3	ECO PCB internal signal	
	2	ECO PCB internal signal	
	1	R-CON to DC-CON power ready signal	
	0	R-CON to PANEL-CON power ready signal	
P002	15-8	not used	
	7	digitizer request signal	1: request
	6	CVR time rest signal	1: RESET
	5	scanning lamp (LA2) ON signal	1: ON
	4	not used	
	3	original exposure system cooling fan 1 (FM1) half speed drive signal	1: half speed, 0: full speed
	2	original exposure system cooling fan 1 (FM1) full speed drive signal	1: full speed, 0: half speed
	1	original scanner motor driver RESET signal	1: RESET
	0	projector SSR-ON signal	1: ON
P003	15-8	not used	
	7	digitizer ACK signal	1: ACK
	6	digitizer connect signal	0: connect
	5	original exposure system cooling fan (FM1) error detected	1: error
	4	READER-ITOP-B input signal	0: side B image leading edge
	3	READER-ITOP-A input signal	0: side B image leading edge
	2	CC-V connect signal	0: connect
	1	DC-CON to R-CON power ready signal	
	0	PANEL-CON to R-CON power ready signal	

I/O>R-CON

Address	bit	Description	Remarks
P004	15-8	not used	
	7	internal signal	
	6	internal signal	
	5	internal signal	
	4	internal signal	
	3	internal signal	
	2	internal signal	
	1	internal signal	
	0	internal signal	
P005	15-8	not used	
	7	RS-232C input signal	
	6	scanner IPC error 3	1: error
	5	scanner IPC error 2	1: error
	4	scanner IPC error 1	1: error
	3	scanning lamp (LA2) ON detection signal	1: ON
	2	CVR error detection	0: error
	1	internal signal	
	0	internal signal	
P006	15-8	not used	
	7	RS-232C output signal	
	6	internal signal	
	5	not used	
	4	not used	
	3	not used	
	2	internal signal	
	1	internal signal	
	0	internal signal	

I/O>R-CON

Address	bit	Description	Remarks
P007	15-8	not used	
	7	not used	
	6	not used	
	5	not used	
	4	not used	
	3	original exposure system cooling fan 2 (FM14) half speed drive signal	1: half speed
	2	original exposure system cooling fan 2 (FM14) full speed signal	1: full speed
	1	CC-X count signal	1: count increase
	0	CC-V count signal	1: count increase
P008	15-8	not used	
	7	internal signal	
	6	internal signal	
	5	internal signal	
	4	internal signal	
	3	control switch (SW2) detection signal	0: ON
	2	not used	
	1	internal signal	
	0	download mode signal	download mode
P009	15-8	not used	
	7	for factory adjustment	
	6	not used	
	5	not used	
	4	for factory adjustment	
	3	original exposure system cooling fan 3 (FM15) error detection	1: error
	2	original exposure system cooling fan 2 (FM14) error detection	1: error
	1	PCB check mode 1	
	0	PCB check mode 0	


D. ADJUST (adjustment mode)

COPIER>ADJUST Items

		00.	ILIVADOGG	i itomo
Level 1	Level 2	Level 3	Settings	Description
ADJUST -	– ADJ-XY	— ADJ-X	-200 to +200	adjusts the image read start position (X direction; units of 0.1 mm)
		– ADJ-Y	-100 to +100	adjusts the image read start position (Y
		– ADJ-S	0 to 32	direction; in units of 0.1 mm) adjusts measurement position for shading correction from the standard white plate (in
		_ ADJ-J	0 to 500	units of 0.1 mm) adjusts the period of acceleration for the original scanner motor
	– CCD	— EC-B		for future expansion
		– EC-G		for future expansion
		└─ EC-R		for future expansion
	- LASER	T-V00	0 to 255	enters the laser control initial value at V00 for text mode (800 lines) as for laser unit replacement
		T-VFF	0 to 255	enters the laser control initial value at VFF for text mode (800 lines) as for laser unit replacement
		- P3-V00	0 to 255	enters the laser control initial value at V00 for photo mode (400 lines) as for laser unit replacement
		- P3-VFF-1	0 to 255	enters the laser control initial value at VFF (45%) for photo mode (400 lines) as for laser unit replacement
		- P3-VFF-2	0 to 255	enters the laser control initial value at VFF (55 %) for photo mode (400 lines) as for laser unit replacement
		– P3-VFF-3	0 to 255	enters the laser control initial value at VFF (65%) for photo mode (400 lines) as for laser unit replacement
		– P3-VFF-4	0 to 255	enters the laser control initial value at VFF (70%) for photo mode (400 lines) as for laser unit replacement
		- POWER		turns on the laser output for laser power adjustment (OK key to start, Stop key to stop)
		T-V00-ON		turns on the laser output for a check on T-V00 (OK key to start, Stop key to stop)
		T-VFF-ON		turns on the laser output for a check on T-
		– P3V00-ON		VFF (OK key to start, Stop key to stop) turns on the laser output for a check on P3-
		– P3-V1-ON		V00 (OK key to start, Stop key to stop) turns on the laser output for a check on P3-
		– P3-V2-ON		VFF-1 (OK key to start, Stop key to stop) turns on the laser output for a check on P3-
		– P3-V3-ON		VFF-2 (OK key to start, Stop key to stop) turns on the laser output for a check on P3-
				VFF-3 (OK key to start, Stop key to stop)
		└ P3-V4-ON		turns on the laser output for a check on P3-VFF-4 (OK key to start, Stop key to stop)

– DENS	S — SGNL-Y	0 to 1023	concentration signal of Y toner during INIT
	SGNL-M	0 to 1023	for ATR control concentration signal of M toner during INIT
	– SGNL-C	0 to 1023	for ATR control concentration signal of C toner during INIT
	– REF-Y	0 to 1023	for ATR control concentration reference signal of Y toner
	– REF-M	0 to 1023	during INIT for ATR control concentration reference signal of M toner
	– REF-C	0 to 1023	during INIT for ATR control concentration reference signal of C toner during INIT for ATR control
	– SIGG-Y	0 to 255	gain for concentration reference signal of Y toner during ATR control
	– SIGG-M	0 to 255	gain for concentration reference signal of M toner during ATR control
	– SIGG-C	0 to 255	gain for concentration reference signal of C toner during ATR control
	– RGAIN-K	0 to 255	gain for concentration reference signal of Bk toner during toner concentration control
	– D-Y-TRGT	0 to 1023	present value of the concentration target of Y toner during ART control
	– D-M-TRGT	0 to 1023	present value of the concentration target of M toner during ART control
	– D-C-TRGT	0 to 1023	present value of the concentration target of C toner during ART control
	– PTOFST-Y	-127 to +128	correction value (%) for the laser output of Y toner during ART control
	– PTOFST-M	-127 to +128	correction value (%) for the laser output of M toner during ART control
	– PTOFST-C	-127 to +128	correction value (%) for the laser output of C toner during ART control
	– PTOFST-K	-127 to +128	correction value (%) for the laser output of Bk toner during ART control
	D-REF-Y	0 to 1023	reference signal value for the concentration sensor of Y toner in relation to the reflection
			intensity of light from the photosensitive drum (upon initialization)
	D-REF-M	0 to 1023	reference signal value for the concentration sensor of M toner in relation to the reflection
	D DEE C	0 / 1022	intensity of light from the photosensitive drum (upon initialization)
	D-REF-C	0 to 1023	reference signal value for the concentration sensor of C toner in relation to the reflection intensity of light from the photographics.
	– D-REF-K	0 to 1023	intensity of light from the photosensitive drum (upon initialization) reference signal value for the concentration
	D-REI'-K	0 to 1023	sensor of Bk toner in relation to the reflection intensity of light from the
	- D-REF-4	0 to 1023	photosensitive drum (upon initialization) reference signal value for the concentration sensor of all toners in relation to the reflection intensity of light from the
			photosensitive drum (upon initialization)

1		
– D-SGNL-Y	0 to 1023	reference signal value for the concentration sensor of Y toner in relation to the reflection intensity of light from the photosensitive
– D-SGNL-M	0 to 1023	drum (upon initialization) reference signal value for the concentration sensor of M toner in relation to the reflection intensity of light from the photosensitive
– D-SGNL-C	0 to 1023	drum (upon initialization) reference signal value for the concentration sensor of C toner in relation to the reflection intensity of light from the photosensitive
– D-SGNL-K	0 to 1023	drum (upon initialization) reference signal value for the concentration sensor of Bk toner in relation to the reflection intensity of light from the
– D-SGNL-4	0 to 1023	photosensitive drum (upon initialization) reference signal value for the concentration sensor of all toners in relation to the reflection intensity of light from the photosensitive drum (upon initialization)
P-REF-Y	0 to 1023	reference signal value of Y toner on the photosensitive drum during INIT for ATR control
— P-REF-M	0 to 1023	reference signal value of M toner on the photosensitive drum during INIT for ATR control
— P-REF-C	0 to 1023	reference signal value of C toner on the photosensitive drum during INIT for ATR control
— P-REF-K	0 to 1023	reference signal value of Bk toner on the photosensitive drum during INIT for ATR control
– P-SGNL-Y	0 to 1023	signal value of Y toner on the photosensitive drum during INIT for ATR control
P-SGNL-M	0 to 1023	signal value of M toner on the photosensitive drum during INIT for ATR control
– P-SGNL-C	0 to 1023	signal value of C toner on the photosensitive drum during INIT for ATR control
– P-SGNL-K	0 to 1023	signal value of Bk toner on the photosensitive drum during INIT for ATR control
– SIGG-K	0 to 255	gain for concentration reference signal of Bk toner during ATR control
– SIGG-P-Y	0 to 255	correction of the patch data gain for ATR control when INIT-Y is executed
– SIGG-P-M	0 to 255	correction of the patch data gain for ATR control when INIT-M is executed
– SIGG-P-C	0 to 255	correction of the patch data gain for ATR control when INIT-C is executed
– SIGG-P-K	0 to 255	correction of the patch data gain for ATR control when INIT-K is executed
– RGAN-P-Y	0 to 255	correction of the patch gain for toner density control when INIT-Y is executed
– RGAN-P-M	0 to 255	correction of the patch gain for toner density control when INIT-M is executed
– RGAN-P-C	0 to 255	correction of the patch gain for toner density control when INIT-C is executed

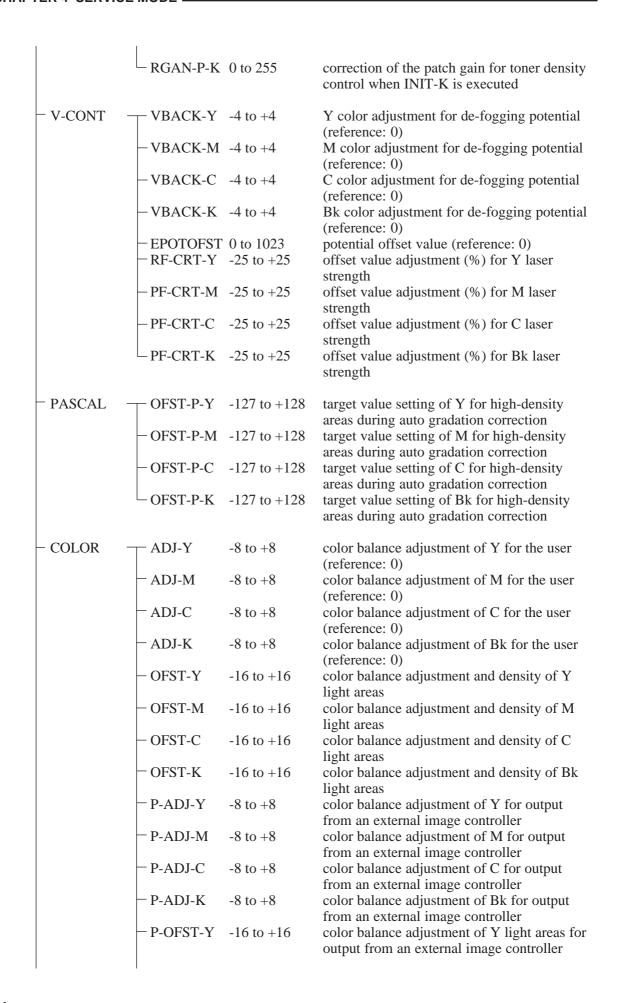

	– P-OFST-C	-16 to +16 -16 to +16	color balance adjustment of M light areas for output from an external image control color balance adjustment of C light areas
	P-OFST-K	-16 to +16	for output from an external image control color balance adjustment of Bk light area for output from an external image control
– HV-TR	HV-TR	-4 to +4	adjustment of transfer high-voltage output
		-4 to +4	Environment A (A-ZONE) for thin paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	TR-L2	-4 to +4	copy (in units of μ A) for thin paper, transfer charging bias adjustment for copying on the 2nd side of
	_ TR-N1	-4 to +4	double-sided copy (in units of μA) for plain paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	_ TR-N2	-4 to +4	copy (in units of μ A) for plain paper, transfer charging bias adjustment for copying on the 2nd side of
	— TR-T1	-4 to +4	double-sided copy (in units of μA) for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA)
	— TR-T2	-4 to +4	for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA)
	TR-UT1	-4 to +4	for extra thick paper, transfer charging bi adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μ A)
	TR-UT2	-4 to +4	for extra thick paper, transfer charging bi adjustment for copying on the 2nd side of double-sided copy (in units of μA)
	- TR-S1-1	-4 to +4	for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μ A)
	— TR-S2-1	-4 to +4	for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μ A)
	TR-OHP	-4 to +4	for transparencies, transfer charging bias adjustment (in units of μA)
	TR-POST	-4 to +4	for postcards, transfer charging bias adjustment (in units of μA)

adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) France	- TR-L1	-4 to +4	Environment B (B-ZONE) for thin paper, transfer charging bias
copy (in units of μA) For thin paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) For plain paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) For thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For thick paper, transfer charging bias adjustment for single-sided copying or copying on the 2nd side of double-sided copy (in units of μA) For thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 2nd side of double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 2nd side of double-sided copy (in units of μA) For special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For special paper 2, transfer charging bias adjustment (in units of μA) For transparencies, transfer charging bias adjustment (in units of μA)		110 11	adjustment for single-sided copying or
TR-L2 -4 to +4 for thin paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-N1 -4 to +4 for plain paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-N2 -4 to +4 for plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-T1 -4 to +4 for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT1 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-OHP -4 to +4 for postcards, transfer charging bias adjustment (in units of μA)	i		
adjustment for copying on the 2nd side of double-sided copy (in units of μA) France of the temperature of	1		
double-sided copy (in units of μA) for plain paper, transfer charging bias adjustment for copying on the 2nd side of copy (in units of μA) TR-N2 -4 to +4 for plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-T1 -4 to +4 for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for transparencies, transfer charging bias adjustment (in units of μA) for transparencies, transfer charging bias adjustment (in units of μA) for transparencies, transfer charging bias adjustment (in units of μA) for pastcards, transfer charging bias	TR-L2	-4 to +4	
TR-N1 -4 to +4 for plain paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of µA) for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of µA) for extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) for transparencies, transfer charging bias adjustment (in units of µA) for transparencies, transfer charging bias adjustment (in units of µA) for postcards, transfer charging bias adjustment (in units of µA)	1		
adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) TR-N2 -4 to +4 for plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of µA) TR-T1 -4 to +4 for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of µA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bias adjustment for copying on the 2nd side of copy (in units of µA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of µA) TR-POST -4 to +4 for transparencies, transfer charging bias adjustment (in units of µA) TR-POST -4 to +4 for postcards, transfer charging bias adjustment (in units of µA)	TED NII	4.4 4	
copying on the 1st side of a double-sided copy (in units of μA) for plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) - TR-T2 -4 to +4 for extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) for transparencies, transfer charging bias adjustment (in units of μA) for transparencies, transfer charging bias adjustment (in units of μA) for postcards, transfer charging bias adjustment (in units of μA) for postcards, transfer charging bias	TR-N1	-4 to +4	
copy (in units of μA) Frank 2 -4 to +4 For plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) Frank 2 -4 to +4 For thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) Frank 2 -4 to +4 For thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) Frank 3 -4 to +4 Frank 4 to +4 Frank 5 -1 Frank 5 -1 Frank 6 -4 to +4 Frank 7 -4 to +4 For extra thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) Frank 7 -4 to +4 Frank 8 -1 Frank 9 -2 to +4 Frank 9 -3 to +4 Frank 9 -4 to +4 Frank 9 -4 to +4 For special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) Frank 9 -3 to +4 Frank 9 -4 Frank 9 -4	İ		
TR-N2 -4 to +4 for plain paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-T1 -4 to +4 for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-OHP -4 to +4 for postcards, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		1.0
adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-T1 -4 to +4 for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias adjustment (in units of μA)	TD NO	4.44	
double-sided copy (in units of μA) For thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) For extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) For extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) For special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) For transparencies, transfer charging bias adjustment (in units of μA) For transparencies, transfer charging bias adjustment (in units of μA) For postcards, transfer charging bias	- 1R-N2	-4 10 +4	
TR-T1 -4 to +4 for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-OHP -4 to +4 for postcards, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	!		
adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias adjustment (in units of μA)	 TD T1	1 to 11	
copying on the 1st side of a double-sided copy (in units of μA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	- 1K-11	-4 10 +4	
copy (in units of μA) TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
TR-T2 -4 to +4 for thick paper, transfer charging bias adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	I I		
adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	TD T2	1 to 11	• •
double-sided copy (in units of μA) TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	- 1K-12	-4 to +4	
TR-UT1 -4 to +4 for extra thick paper, transfer charging bia adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		3
adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	TR_IIT1	-4 to ±4	
copying on the 1st side of a double-sided copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	TK-011	-4 10 14	
copy (in units of μA) TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
TR-UT2 -4 to +4 for extra thick paper, transfer charging bia adjustment for copying on the 2nd side of double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
adjustment for copying on the 2nd side of double-sided copy (in units of μA) — TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) — TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) — TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) — TR-POST -4 to +4 for postcards, transfer charging bias	TR-IJT2	-4 to +4	
double-sided copy (in units of μA) TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias			
TR-S1-1 -4 to +4 for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	├ TR-S1-1	-4 to +4	
copying on the 1st side of a double-sided copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
copy (in units of μA) TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
TR-S2-1 -4 to +4 for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	TR-S2-1	-4 to +4	
copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	1		
copy (in units of μA) TR-OHP -4 to +4 for transparencies, transfer charging bias adjustment (in units of μA) TR-POST -4 to +4 for postcards, transfer charging bias	i		copying on the 1st side of a double-sided
adjustment (in units of µA) — TR-POST -4 to +4 for postcards, transfer charging bias	1		
adjustment (in units of µA) — TR-POST -4 to +4 for postcards, transfer charging bias	TR-OHP	-4 to +4	for transparencies, transfer charging bias
	1		adjustment (in units of μA)
adjustment (in units of µA)	TR-POST	-4 to +4	for postcards, transfer charging bias
i	1		adjustment (in units of μA)
	:		

4-56

I		
– TR-L1	-4 to +4	Environment C (C-ZONE) for thin paper, transfer charging bias adjustment for single-sided copying or
- TR-L2	-4 to +4	copying on the 1st side of a double-sided copy (in units of μA) for thin paper, transfer charging bias adjustment for copying on the 2nd side of a
- TR-N1	-4 to +4	double-sided copy (in units of 50 µA) for plain paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
- TR-N2	-4 to +4	copy (in units of μA) for plain paper, transfer charging bias adjustment for copying on the 2nd side of a double-sided copy (in units of μA)
- TR-T1	-4 to +4	for thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
-TR-T2	-4 to +4	copy (in units of μA) for thick paper, transfer charging bias adjustment for copying on the 2nd side of a double-sided copy (in units of μA)
- TR-UT1	-4 to +4	for extra thick paper, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA)
TR-UT2	-4 to +4	for extra thick paper, transfer charging bias adjustment for copying on the 2nd side of a double-sided copy (in units of μA)
- TR-S1-1	-4 to +4	for special paper 1, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA)
— TR-S2-1	-4 to +4	for special paper 2, transfer charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of µA)
TR-OHP	-4 to +4	for transparencies, transfer charging bias adjustment (in units of μ A)
_ TR-POST	-4 to +4	for postcards, transfer charging bias adjustment (in units of µA)

Cont'd

adjustment for single-sided copying on the 1st side of a do copy (in units of 50 μA) SP-N1 -6 to 0 for plain paper, transfer chargin adjustment for single-sided copying on the 1st side of a do copy (in units of 50 μA) SP-N2 -6 to 0 for plain paper, transfer chargin adjustment for copying on the 1st side of a do copy (in units of 50 μA) SP-N2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the 2 double-sided copy (in units of 50 μA) SP-T1 -6 to 0 for thick paper, transfer chargin adjustment for single-sided copy (in units of 50 μA) SP-T2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the 1st side of a dor copy (in units of 50 μA) SP-UT1 -6 to 0 for extra thick paper, separation bias adjustment for copying on the 1st side of a dor copy (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units of 50 μA) SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-S	high-voltage	adjustment of separation DC high output (in units of $50 \mu\text{A}$)	-6 to 0	HV-SP	– HV-SP
SP-L2 -6 to 0 for thin paper, separation charg adjustment for copying on the double-sided copy (in units of for plain paper, transfer chargin adjustment for single-sided copy (in units of 50 μA) SP-N2 -6 to 0 for plain paper, transfer chargin adjustment for copying on the double-sided copy (in units of for thick paper, transfer chargin adjustment for single-sided copy (in units of sopying on the 1st side of a docopy (in units of 50 μA) SP-T2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the double-sided copy (in units of 50 μA) SP-UT1 -6 to 0 for extra thick paper, separation bias adjustment for copying on the 1st side of a docopy (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units of 50 μA) SP-S1-1 -6 to 0 for special paper 1, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA)	opying or	for thin paper, separation chargin adjustment for single-sided copyi copying on the 1st side of a double	-6 to 0	– SP-L1	
SP-N1 -6 to 0 for plain paper, transfer chargin adjustment for single-sided copy (in units of 50 μA) SP-N2 -6 to 0 for plain paper, transfer chargin adjustment for copying on the 1st side of a double-sided copy (in units of 50 μA) SP-T1 -6 to 0 for thick paper, transfer chargin adjustment for single-sided copy (in units of 50 μA) SP-T2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the 1st side of a double-sided copy (in units of 50 μA) SP-UT1 -6 to 0 for extra thick paper, separation bias adjustment for single-sided copy (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units of 50 μA) SP-S1-1 -6 to 0 for special paper 1, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA) FSP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA)	e 2nd side of a	for thin paper, separation chargin adjustment for copying on the 2nd	-6 to 0	SP-L2	
SP-N2 -6 to 0 for plain paper, transfer chargin adjustment for copying on the double-sided copy (in units of adjustment for single-sided copying on the 1st side of a double-sided copy (in units of 50 μA) SP-T2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the 1st side of a double-sided copy (in units of 50 μA) SP-UT1 -6 to 0 for extra thick paper, separation bias adjustment for single-sided copy (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units of 50 μA) SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-SP-S	ging bias opying or	for plain paper, transfer charging adjustment for single-sided copyi copying on the 1st side of a double	-6 to 0	_ SP-N1	1
SP-T1 -6 to 0 for thick paper, transfer chargin adjustment for single-sided cop copying on the 1st side of a dor copy (in units of 50 μA) SP-T2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the 2 double-sided copy (in units of 3 double-sided copy (in units of 3 copy) (in units of 3 double-sided copy) (in units of 4 copy) (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on copy (in units of 50 μA) SP-S1-1 -6 to 0 for special paper 1, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA) FOR SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA)	e 2nd side of a	for plain paper, transfer charging adjustment for copying on the 2nd	-6 to 0	– SP-N2	1
SP-T2 -6 to 0 for thick paper, transfer chargin adjustment for copying on the double-sided copy (in units of 3 double-sided copy) (in units of 3 double-sided copying on the 1st side of a double copying on the 1st side of a double sided copy (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units of 3 double-sided copy) (in units of 50 μA) SP-S1-1 -6 to 0 for special paper 1, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA)	ging bias opying or	for thick paper, transfer charging adjustment for single-sided copyi copying on the 1st side of a double	-6 to 0	SP-T1	
SP-UT1 -6 to 0 for extra thick paper, separation bias adjustment for single-side copying on the 1st side of a docopy (in units of 50 μA) SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units of a double-sided copy (in units of special paper 1, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA)	e 2nd side of a	for thick paper, transfer charging adjustment for copying on the 2nd	-6 to 0	SP-T2	1
SP-UT2 -6 to 0 for extra thick paper, separation bias adjustment for copying on of a double-sided copy (in units for special paper 1, separation adjustment for single-sided copy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copy (in units of 50 μA)	on charging led copying or	for extra thick paper, separation of bias adjustment for single-sided of copying on the 1st side of a double	-6 to 0	SP-UT1	1
SP-S1-1 -6 to 0 for special paper 1, separation adjustment for single-sided copying on the 1st side of a docopy (in units of 50 μA) SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided copying on the 1st side of a docopy (in units of 50 μA)	on the 2nd side	for extra thick paper, separation c bias adjustment for copying on th	-6 to 0	- SP-UT2	
SP-S2-1 -6 to 0 for special paper 2, separation adjustment for single-sided cop	n charging bias opying or	for special paper 1, separation characteristics adjustment for single-sided copyi copying on the 1st side of a double	-6 to 0	— SP-S1-1	1 1 1
	opying or	for special paper 2, separation characteristic adjustment for single-sided copyi copying on the 1st side of a double	-6 to 0	- SP-S2-1	1 1
copy (in units of 50 μA) SP-OHP -6 to 0 for transparencies, separation of adjustment (in units of 50 μA)		for transparencies, separation cha	-6 to 0	- SP-OHP	1
	ging bias	for postcards, separation charging	-6 to 0	SP-POST	

		Environment A (A-ZONE)
- SP-L1	-6 to 0	for thin paper, separation charging bias
		adjustment for single-sided copying or
		copying on the 1st side of a double-sided copy (in units of $50 \mu A$)
- SP-L2	-6 to 0	for thin paper, separation charging bias
~		adjustment for copying on the 2nd side of
		double-sided copy (in units of 50 μA)
– SP-N1	-6 to 0	for plain paper, transfer charging bias
		adjustment for single-sided copying or
		copying on the 1st side of a double-sided copy (in units of $50 \mu A$)
- SP-N2	-6 to 0	for plain paper, transfer charging bias
· ·—	,	adjustment for copying on the 2nd side of
		double-sided copy (in units of 50 μA)
- SP-T1	-6 to 0	for thick paper, transfer charging bias
		adjustment for single-sided copying or
		copying on the 1st side of a double-sided copy (in units of $50 \mu A$)
- SP-T2	-6 to 0	for thick paper, transfer charging bias
21 1 <i>2</i>	0.00	adjustment for copying on the 2nd side of
		double-sided copy (in units of 50 μA)
- SP-UT1	-6 to 0	for extra thick paper, separation charging
		bias adjustment for single-sided copying
		copying on the 1st side of a double-sided copy (in units of $50 \mu A$)
- SP-UT2	-6 to 0	for extra thick paper, separation charging
51 012	0.00	bias adjustment for copying on the 2nd si
		of a double-sided copy (in units of 50 μA
- SP-S1-1	-6 to 0	for special paper 1, separation charging b
		adjustment for single-sided copying or
		copying on the 1st side of a double-sided
- SP-S2-1	-6 to 0	copy (in units of 50 μA) for special paper 2, separation charging b
SI 52 I	0 10 0	adjustment for single-sided copying or
		copying on the 1st side of a double-sided
		copy (in units of 50 μA)
- SP-OHP	-6 to 0	for transparencies, separation charging bi
CD DOCT	6 to 0	adjustment (in units of 50 µA)
- SP-POST	-6 to 0	for postcards, separation charging bias adjustment (in units of $50 \mu A$)

Cont'd Cont'd

		Environment C (C-ZONE)
SP-L1	-6 to 0	for thin paper, separation charging bias
		adjustment for single-sided copying or
		copying on the 1st side of a double-side
an	- 0	copy (in units of 50 μA)
SP-L2	-6 to 0	for thin paper, separation charging bias
		adjustment for copying on the 2nd side of
an 111	- 0	double-sided copy (in units of 50 μ A)
SP-N1	-6 to 0	for plain paper, transfer charging bias
		adjustment for single-sided copying or
		copying on the 1st side of a double-side
CD NO	6.4.0	copy (in units of 50 μA)
SP-N2	-6 to 0	for plain paper, transfer charging bias
		adjustment for copying on the 2nd side of
SP-T1	6 to 0	double-sided copy (in units of 50 µA)
SP-11	-6 to 0	for thick paper, transfer charging bias
		adjustment for single-sided copying or copying on the 1st side of a double-sided
		copy (in units of $50 \mu A$)
SP-T2	-6 to 0	for thick paper, transfer charging bias
51-12	-0 10 0	adjustment for copying on the 2nd side of
		double-sided copy (in units of $50 \mu A$)
SP-UT1	-6 to 0	for extra thick paper, separation charging
51 011	0 10 0	bias adjustment for single-sided copying
		copying on the 1st side of a double-sided
		copy (in units of 50 μA)
SP-UT2	-6 to 0	for extra thick paper, separation charging
		bias adjustment for copying on the 2nd s
		of a double-sided copy (in units of 50 µA
SP-S1-1	-6 to 0	for special paper 1, separation charging l
		adjustment for single-sided copying or
		copying on the 1st side of a double-side
		copy (in units of 50 μA)
SP-S2-1	-6 to 0	for special paper 2, separation charging l
		adjustment for single-sided copying or
		copying on the 1st side of a double-sided
		copy (in units of 50 μA)
SP-OHP	-6 to 0	for transparencies, separation charging b
		adjustment (in units of 50 μA)
SP-POST	-6 to 0	for postcards, separation charging bias
		adjustment (in units of 50 μA)

– SP-ON-N1	1 to 32	for plain paper, separation re-charging ON environment adjustment value for single-sided copying or copying on the 1st side of a double-sided copy (in units of 50 µA)
- SP-ON-N2	1 to 32	for plain paper, separation re-charging ON environment adjustment value for copying on the 2nd side of a double-sided copy
– SP-ON-L1	1 to 32	for thin paper, separation re-charging ON environment adjustment value for single-sided copying or copying on the 1st side of a double-sided copy)
– SP-ON-L2	1 to 32	for thin paper, separation re-charging ON environment adjustment value for copying on the 2nd side of a double-sided copy
– SP-ON-T1	1 to 32	for thick paper, separation re-charging ON environment adjustment value for single- sided copying or copying on the 1st side of a double-sided copy
– SP-ON-T2	1 to 32	for thick paper, separation re-charging ON environment adjustment value for copying on the 2nd side of a double-sided copy
– SP-ONUT1	1 to 32	for extra thick paper, separation re-charging ON environment adjustment value for single-sided copying or copying on the 1st side of a double-sided copy
– SP-ONUT2	1 to 32	for extra thick paper, separation re-charging ON environment adjustment value for copying on the 2nd side of a double-sided copy
– SP-ON-S1	1 to 32	for special paper 1, separation re-charging ON environment adjustment value for single-sided copying or copying on the 1st side of a double-sided copy
– SP-ON-S2	1 to 32	for special paper 2, separation re-charging ON environment adjustment value for single-sided copying or copying on the 1st side of a double-sided copy
– SP-ONOHP	1 to 32	for transparencies, separation re-charging ON environment adjustment value
– SP-ON-PT	1 to 32	for postcards, separation re-charging ON environment adjustment value

HV-IEL	HV-IEL	-8 to 0	internal static eliminator high-voltage output adjustment (in units of 0.5 kV)
	EL-L1	-8 to 0	Environment A (A-ZONE) for thin paper, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	- IEL-L2	-8 to 0	copy (in units of 0.5 kV) for thin paper, internal static eliminator bias adjustment for copying on the 2nd side of a
	- IEL-N1	-8 to 0	double-sided copy (in units of 0.5 kV) for plain paper, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	- IEL-N2	-8 to 0	copy (in units of 0.5 kV) for plain paper, internal static eliminator bias adjustment for copying on the 2nd side
	– IEL-T1	-8 to 0	of a double-sided copy (in units of 0.5 kV) for thick paper, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	– IEL-T2	-8 to 0	copy (in units of 0.5 kV) for thick paper, internal static eliminator bias adjustment for copying on the 2nd side
	– IEL-UT1	-8 to 0	of a double-sided copy (in units of 0.5 kV) for extra thick paper, internal static eliminator bias adjustment for single-sided copying or copying on the let side of a
	– IEL-UT2	-8 to 0	copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV) for extra thick paper, internal static eliminator bias adjustment for copying on the 2nd side of a double-sided copy (in units
	- IEL-S1-1	-8 to 0	of 0.5 kV) for special paper 1, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	- IEL-S2-1	-8 to 0	copy (in units of 0.5 kV) for special paper 2, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	- IEL-OHP	-8 to 0	copy (in units of 0.5 kV) for transparencies, internal static eliminator bias adjustment (in units of 0.5 kV)
	- IEL-POST	-8 to 0	for postcards, internal static eliminator bias adjustment (in units of 0.5 kV)
Cont'd	Cont'd		

		Environment B (B-ZONE)
· IEL-L1	-8 to 0	for thin paper, internal static eliminator
		adjustment for single-sided copying or
		copying on the 1st side of a double-side
TEX 1.0	0 . 0	copy (in units of 0.5 kV)
· IEL-L2	-8 to 0	for thin paper, internal static eliminator
		adjustment for copying on the 2nd side of
IEI NII	0.4-0	double-sided copy (in units of 0.5 kV)
- IEL-N1	-8 to 0	for plain paper, internal static eliminator
		bias adjustment for single-sided copying
		copying on the 1st side of a double-side copy (in units of 0.5 kV)
IEL-N2	-8 to 0	for plain paper, internal static eliminator
ILL-I\2	-0 10 0	bias adjustment for copying on the 2nd s
		of a double-sided copy (in units of 0.5 k
IEL-T1	-8 to 0	for thick paper, internal static eliminator
122 11	0.00	bias adjustment for single-sided copying
		copying on the 1st side of a double-sided
		copy (in units of 0.5 kV)
- IEL-T2	-8 to 0	for thick paper, internal static eliminator
		bias adjustment for copying on the 2nd s
		of a double-sided copy (in units of 0.5 k
· IEL-UT1	-8 to 0	for extra thick paper, internal static
		eliminator bias adjustment for single-sid
		copying or copying on the 1st side of a
		double-sided copy (in units of 0.5 kV)
- IEL-UT2	-8 to 0	for extra thick paper, internal static
		eliminator bias adjustment for copying of
		the 2nd side of a double-sided copy (in t
TTT 01 1	0 0	of 0.5 kV)
· IEL-S1-1	-8 to 0	for special paper 1, internal static elimin
		bias adjustment for single-sided copying
		copying on the 1st side of a double-side
IEL CO 1	0.4-0	copy (in units of 0.5 kV)
IEL-S2-1	-8 to 0	for special paper 2, internal static elimin
		bias adjustment for single-sided copying
		copying on the 1st side of a double-side
· IEL-OHP	-8 to 0	copy (in units of 0.5 kV) for transparencies, internal static eliminates
IEL-UHF	-0 10 0	bias adjustment (in units of 0.5 kV)
- IEL-POST	-8 to 0	for postcards, internal static eliminator b
1EE-1 OS 1	-0 10 0	adjustment (in units of 0.5 kV)

Cont'd Cont'd

- IEL-L1	-8 to 0	Environment C (C-ZONE) for thin paper, internal static eliminator bias
		adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- IEL-L2	-8 to 0	for thin paper, internal static eliminator bia adjustment for copying on the 2nd side of a
- IEL-N1	-8 to 0	double-sided copy (in units of 0.5 kV) for plain paper, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided
- IEL-N2	-8 to 0	copy (in units of 0.5 kV) for plain paper, internal static eliminator bias adjustment for copying on the 2nd side
- IEL-T1	-8 to 0	of a double-sided copy (in units of 0.5 kV) for thick paper, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- IEL-T2	-8 to 0	for thick paper, internal static eliminator bias adjustment for copying on the 2nd side
– IEL-UT1	-8 to 0	of a double-sided copy (in units of 0.5 kV) for extra thick paper, internal static eliminator bias adjustment for single-sided copying or copying on the 1st side of a
- IEL-UT2	-8 to 0	double-sided copy (in units of 0.5 kV) for extra thick paper, internal static eliminator bias adjustment for copying on the 2nd side of a double-sided copy (in uni of 0.5 kV)
— IEL-S1-1	-8 to 0	for special paper 1, internal static eliminate bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- IEL-S2-1	-8 to 0	for special paper 2, internal static eliminate bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- IEL-OHP	-8 to 0	for transparencies, internal static eliminato bias adjustment (in units of 0.5 kV)
L IEL-POST	-8 to 0	for postcards, internal static eliminator bias adjustment (in units of 0.5 kV)

HV-ATT	HV-ATT	-5 to +5	attraction high-voltage output adjustment (in units of 2 μA)
	– ATT-L1	-5 to +5	Environment A (A-ZONE) for thin paper, attraction high-voltage output adjustment for single-sided copying or copying on the let side of a double sided
	– ATT-L2	-5 to +5	or copying on the 1st side of a double-sided copy (in units of $2 \mu A$) for thin paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
1	— ATT-N1	-5 to +5	μA) for plain paper, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
1 1 1	ATT-N2	-5 to +5	copy (in units of 2 μA) for plain paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
1 1 1	ATT-T1	-5 to +5	μA) for thick paper, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
1 1	– ATT-T2	-5 to +5	copy (in units of 2 μA) for thick paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
1 1 1	– ATT-UT1	-5 to +5	μA) for extra thick paper, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
1	– ATT-UT2	-5 to +5	copy (in units of 2 μA) for extra thick paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
1 1	– ATT-S1	-5 to +5	μA) for special paper 1, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 2 μA)
1 1 1	- ATT-S2	-5 to +5	for special paper 2, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
1	– АТТ-ОНР	-5 to +5	copy (in units of 2 μA) for transparencies, attraction high-voltage
1	– ATT-POST		output adjustment (in units of 2 μA) for postcards, attraction high-voltage output adjustment (in units of 2 μA)
			,
Cont'd	Cont'd		


4-65

– ATT-L1	-5 to +5	Environment B (B-ZONE) for thin paper, attraction high-voltage
711 DI	5 10 15	output adjustment for single-sided copying or copying on the 1st side of a double-side
- ATT-L2	-5 to +5	copy (in units of 2 μA) for thin paper, attraction high-voltage
		output adjustment for copying on the 2nd
		side of a double-sided copy (in units of 2
- ATT-N1	-5 to +5	μA) for plain paper, attraction high-voltage
		output adjustment for single-sided copying
		or copying on the 1st side of a double-sid copy (in units of 2 μA)
- ATT-N2	-5 to +5	for plain paper, attraction high-voltage
111111		output adjustment for copying on the 2nd
		side of a double-sided copy (in units of 2
- ATT-T1	-5 to +5	μA) for thick paper, attraction high-voltage
2111 11	3 10 13	output adjustment for single-sided copying
		or copying on the 1st side of a double-sid
- ATT-T2	5 to 15	copy (in units of 2 μA)
A11-12	-5 to +5	for thick paper, attraction high-voltage output adjustment for copying on the 2nd
		side of a double-sided copy (in units of 2
		μΑ)
- ATT-UT1	-5 to +5	for extra thick paper, attraction high-volt
		output adjustment for single-sided copying or copying on the 1st side of a double-side
		copy (in units of 2 μA)
- ATT-UT2	-5 to +5	for extra thick paper, attraction high-volt
		output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
		μ A)
- ATT-S1	-5 to +5	for special paper 1, attraction high-voltage
		output adjustment for single-sided copying
		or copying on the 1st side of a double-sid copy (in units of 2 μA)
- ATT-S2	-5 to +5	for special paper 2, attraction high-voltage
		output adjustment for single-sided copying
		or copying on the 1st side of a double-sid copy (in units of 2 μA)
- ATT-OHP	-5 to +5	for transparencies, attraction high-voltage
		output adjustment (in units of 2 µA)
- ATT-POST	-5 to +5	for postcards, attraction high-voltage out
		adjustment (in units of 2 μ A)

4-66

1		
– ATT-L1	-5 to +5	Environment C (C-ZONE) for thin paper, attraction high-voltage output adjustment for single-sided copying
- ATT-L2	-5 to +5	or copying on the 1st side of a double-sided copy (in units of 2 µA) for thin paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
– ATT-N1	-5 to +5	μA) for plain paper, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
– ATT-N2	-5 to +5	copy (in units of 2 μA) for plain paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
– ATT-T1	-5 to +5	μA) for thick paper, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
— ATT-T2	-5 to +5	copy (in units of 2 μA) for thick paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
– ATT-UT1	-5 to +5	μA) for extra thick paper, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
– ATT-UT2	-5 to +5	copy (in units of 2 μA) for extra thick paper, attraction high-voltage output adjustment for copying on the 2nd side of a double-sided copy (in units of 2
– ATT-S1	-5 to +5	μA) for special paper 1, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
– ATT-S2	-5 to +5	copy (in units of 2 μA) for special paper 2, attraction high-voltage output adjustment for single-sided copying or copying on the 1st side of a double-sided
– АТТ-ОНР	-5 to +5	copy (in units of $2 \mu A$) for transparencies, attraction high-voltage
ATT-POST	-5 to +5	output adjustment (in units of 2 μ A) for postcards, attraction high-voltage output adjustment (in units of 2 μ A)

- DOC-REC	DX-XS - DA-XE - DA-YS - DA-YE - DS-DOC	-99 to +99 -99 to +99 -99 to +99 -99 to +99 0 to 31	fine-adjustment of the original detection area fine-adjustment of the original detection area fine-adjustment of the original detection area fine-adjustment of the original detection area adjustment of the slice level for original detection
FEED-ADJ	TATT-T-A	-10 to +10	adjustment of side A attraction timing for the transfer drum
	— ATT-T-B	-10 to +10	adjustment of side B attraction timing for the transfer drum
	RG-XA	-47 to +47	adjustment of registration in sub scanning direction of side A on the transfer drum
	– RG-XB	-47 to +47	adjustment of registration in sub scanning direction of side B on the transfer drum
	– RG-Y	-70 to +70	adjustment of registration in main scanning direction on the transfer drum
	– TR-DLY-A	-10 to +10	Use it to adjust the transfer delay on side A of the transfer drum.
	- TR-DLY-B	-10 to +10	Use it to adjust the transfer delay on side B of the transfer drum.
	– АТТ-СНК	1 to 3	specification of position of attraction on the transfer drum during ATT-ON (1: 2-sheet retention of sides B and A; 2: retention on
	– ATT-ON		side A, 3: retention on side B) executes attraction of copy paper to the transfer drum according to ATTCHK (OK key to start; auto stop)
	– RGST-CHK	1 to 3	specifies position of attraction on the transfer drum during RGST-ON (1: 2-sheet retention on sides B and A, 2: retention on side A, 3: retention on side B)
	– RGST-ON		executes printing for checking registration (retention side) using C according to RGST-
	TR1-CHK	1 to 3	CHK (OK key to start; auto stop) specifies position of attraction on the transfer drum during TR1-ON (1: 2-sheet retention of sides B and A, 2: retention on side A, 3: retention on side B)
	– TR2-CHK	1 to 3	specifies position of attraction on the transfer drum during TR2-ON (1: 2-sheet retention of sides B and A, 2: retention on side A, 3:
	– TR1-ON		retention on side B) executes printing for checking the leading edge margin (1 mm) according to TR1-CHK
	– TR2-ON		(OK key to start; auto stop) executes printing for checking the leading edge margin (8 mm) according to TR2-CHK
	– TR-END-A	0 to 25	(OK key to start; auto stop) adjusts the falling edge (trailing edge margin) of transfer high voltage for side A retention
	└ TR-END-B	0 to 25	adjusts the falling edge (trailing edge margin) of transfer high voltage for side B retention

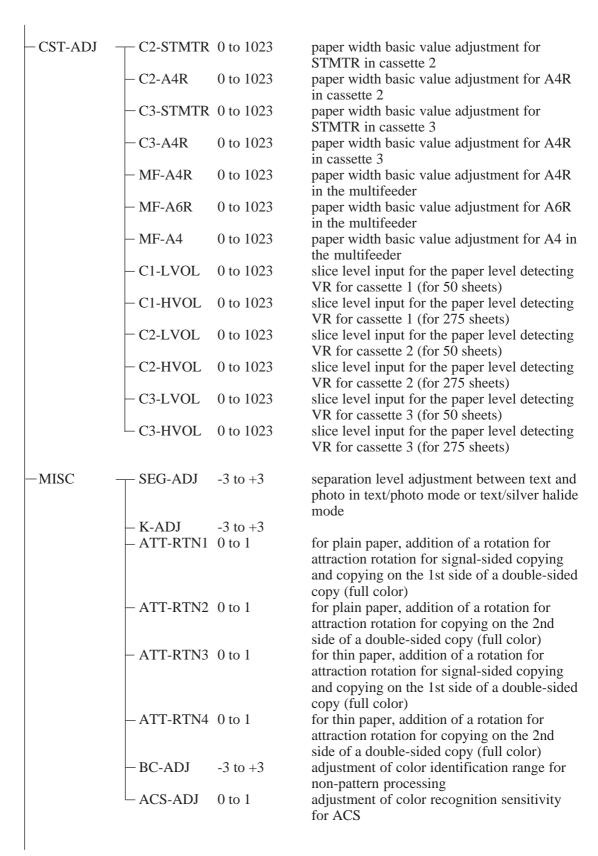

– SENS-ADJ	CLN-TH CLN-TMP	2300 to 5500 0 to 60	input of thermal correction for the pre- cleaning paper sensor (PS71; in units of mV) input of a thermal correction value for the pre-cleaning paper sensor (PS71; in units
– HV-SP-AC	HV-SP	-4 to +4	of °C) separation AC high-voltage output (in units of 0.5 kV)
	– SP-L1	-4 to +4	Environment A (A-ZONE) for thin paper, separation charging AC bias adjustment for single-sided copying or
1 1 1	- SP-L2	-4 to +4	copying on the 1st side of a double-sided copy (in units of 0.5 kV) for thin paper, separation charging AC bias adjustment for copying on the 2nd side of a double-sided copy (in units of 0.5 kV)
1	– SP-N1	-4 to +4	for plain paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
1	- SP-N2	-4 to +4	copy (in units of 0.5 kV) for plain paper, separation charging bias adjustment for copying on the 2nd side of a
	- SP-T1	-4 to +4	double-sided copy (in units of 0.5 kV) for thick paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	- SP-T2	-4 to +4	copy (in units 0.5 kV) for thick paper, separation charging bias adjustment for copying on the 2nd side of a
	– SP-UT1	-4 to +4	double-sided copy (in units of 0.5 kV) for extra thick paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
	- SP-UT2	-4 to +4	copy (in units of 0.5 kV) for extra thick paper, separation charging bias adjustment for copying on the 2nd side
	– SP-S1-1	-4 to +4	of a double-sided copy (in units of 0.5 kV) for special paper 1, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
1 1 1	- SP-S2-1	-4 to +4	copy (in units of 0.5 kV) for special paper 2, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided
1 1	- SP-OHP	-4 to +4	copy (in units of 0.5 kV) for transparencies, separation charging AC
	SP-POST	-4 to +4	bias adjustment (in units of 0.5 kV) for postcards, separation charging AC bias


- SP-L1	4 to +4	Environment B (B-ZONE) for thin paper, separation charging AC b
SI -L1	7 10 17	adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- SP-L2	-4 to +4	for thin paper, separation charging AC to adjustment for copying on the 2nd side double-sided copy (in units of 0.5 kV)
SP-N1	-4 to +4	for plain paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- SP-N2	-4 to +4	for plain paper, separation charging bias adjustment for copying on the 2nd side double-sided copy (in units of 0.5 kV)
- SP-T1	-4 to +4	for thick paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-side copy (in units 0.5 kV)
- SP-T2	-4 to +4	for thick paper, separation charging bias adjustment for copying on the 2nd side double-sided copy (in units of 0.5 kV)
- SP-UT1	-4 to +4	for extra thick paper, separation chargin bias adjustment for single-sided copying copying on the 1st side of a double-side copy (in units of 0.5 kV)
- SP-UT2	-4 to +4	for extra thick paper, separation chargin bias adjustment for copying on the 2nd of a double-sided copy (in units of 0.5 k
- SP-S1-1	-4 to +4	for special paper 1, separation charging adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- SP-S2-1	-4 to +4	for special paper 2, separation charging adjustment for single-sided copying or copying on the 1st side of a double-side copy (in units of 0.5 kV)
- SP-OHP	-4 to +4	for transparencies, separation charging A bias adjustment (in units of 0.5 kV)
- SP-POST	-4 to +4	for postcards, separation charging AC b adjustment (in units of 0.5 kV)

Cont'd Cont'd


- SP-L1	-4 to +4	Environment C (C-ZONE) for thin paper, separation charging AC bias adjustment for single-sided copying or copying on the 1st side of a double-sided
SP-L2	-4 to +4	copy (in units of 0.5 kV) for thin paper, separation charging AC bias adjustment for copying on the 2nd side of a double-sided copy (in units of 0.5 kV)
SP-N1	-4 to +4	for plain paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
SP-N2	-4 to +4	for plain paper, separation charging bias adjustment for copying on the 2nd side of a double-sided copy (in units of 0.5kV)
SP-T1	-4 to +4	for thick paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units 0.5 kV)
SP-T2	-4 to +4	for thick paper, separation charging bias adjustment for copying on the 2nd side of a double-sided copy (in units of 0.5 kV)
— SP-UT1	-4 to +4	for extra thick paper, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
SP-UT2	-4 to +4	for extra thick paper, separation charging bias adjustment for copying on the 2nd side of a double-sided copy (in units of 0.5 kV)
— SP-S1-1	-4 to +4	for special paper 1, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
— SP-S2-1	-4 to +4	for special paper 2, separation charging bias adjustment for single-sided copying or copying on the 1st side of a double-sided copy (in units of 0.5 kV)
- SP-OHP	-4 to +4	for transparencies, separation charging AC
SP-POST	-4 to +4	bias adjustment (in units of 0.5 kV) for postcards, separation charging AC bias adjustment (in units of 0.5 kV)
HV-PSTCL -HV-PSTC	L -6 to +6	adjusting the post-cleaning high-voltage output (in units of $20~\mu A$)

4-72


FEEDER>ADJUST Items

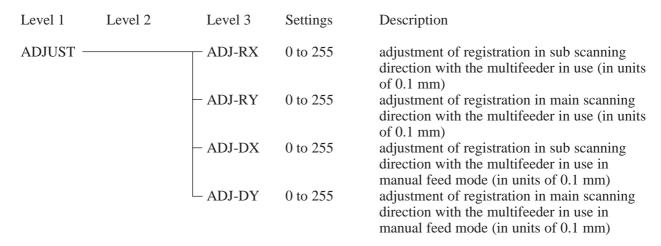


PRJ>ADJUST Items

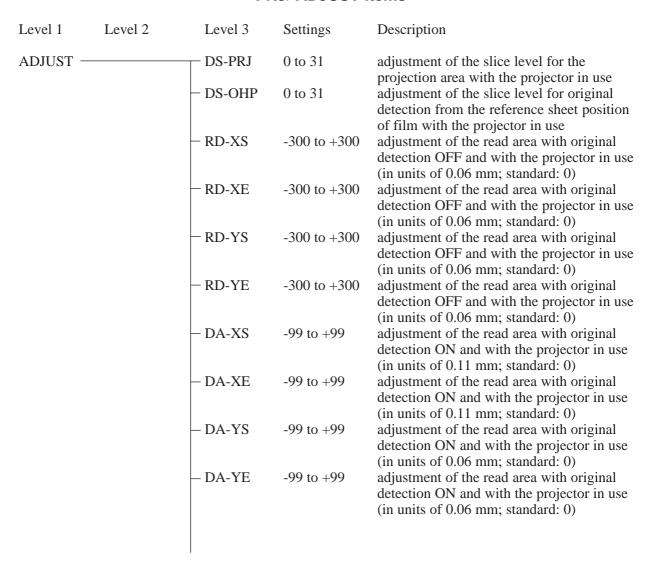

— NEGA-B	-100 to +100	adjustment of the target value for shading correction when copying negative film with the projector in use (a higher setting darkens Y area)
– NAGA-G	-100 to +100	adjustment of the target value for shading correction when copying negative film with the projector in use (a higher setting darkens
— NEGA-R	-100 to +100	M area) adjustment of the target value for shading correction when copying negative film with the projector in use (a higher setting darkens
— POSI-B	-100 to +100	C area) adjustment of the target value for shading correction when copying positive film with the projector in use (a higher setting darkens
— POSI-G	-100 to +100	Y area) adjustment of the target value for shading correction when copying positive film with the projector in use (a higher setting darkens
— POSI-R	-100 to +100	M area) adjustment of the target value for shading correction when copying positive film with the projector in use (a higher setting darkens
— N-LMT	0 to 255	C area) change of the limit for the projector lamp in negative normal mode with the projector in
— N-G-LMT	0 to 255	change of the limit for the projector lamp in negative normal mode with the projector in
— P-LMT	0 to 255	change of the limit for the projector lamp in positive normal mode with the projector in
— P-G-LMT	0 to 255	change of the limit for the projector lamp in positive normal mode with the projector in use
— OHP-LMT	0 to 255	change of the limit for the projector lamp in
– P-DA-XS	-99 to +99	transparency mode with the projector in use adjustment of frame erasing width for positive film with the projector in use (in units of 0.6 mm; standard: 24)
– P-DA-XE	-99 to +99	adjustment of frame erasing width for positive film with the projector in use (in units of 0.6 mm; standard: 8)
– P-DA-YS	-99 to +99	adjustment of frame erasing width for positive film with the projector in use (in units of 0.6 mm; standard: 32)
— P-DA-YE	-99 to +99	adjustment of frame erasing width for positive film with the projector in use (in units of 0.6 mm; standard: 24)
– N-DA-XS	-99 to +99	adjustment of frame erasing width for negative film with the projector in use (in units of 0.6 mm; standard: 50)
1		

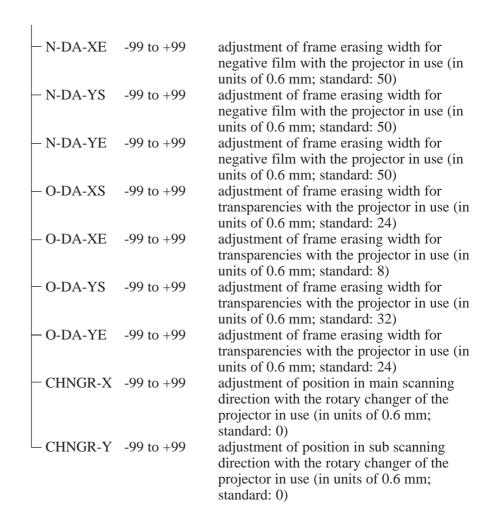

EDITOR>ADJUST Items

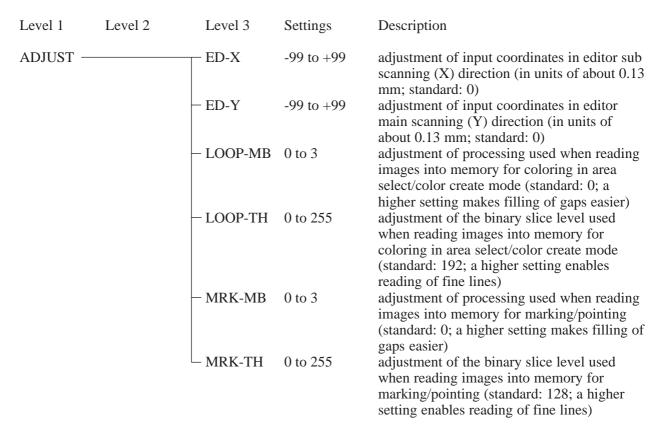

ADJ-XY COPIER>ADJUST

Indicates	the	image	read	start	position.

Level 3	Description	Remarks
ADJ-X (Note 1)	Use it to make adjustments so that the image read position matches the reference point on the copyboard glass. Fine-adjusts the distance between the original scanner HP sensor to the read start position. • Unit: number of steps from the stepping motor • Make adjustments as shown in the next page.	-200 to +200 (-3.9 to +3.9 mm) Unit: about 0.107 mm
ADJ-Y (Note 1)	Fine-adjusts the CCD reading start position. • Unit: pixels • Make adjustments as shown in the next page. Horizontal size late CCD	-100 to +100 (-2.5 to +2.5 mm) Unit: about 0.06 mm

Level 3	Description	Remarks
ADJ-S (Note 1)	Use it to fine-adjust the position at which data is collected for shading correction from the standard white plate. • Unit: number of steps from the stepping motor • Scratches or dirt on the standard plate can cause vertical white lines on copies. To correct the problem, shift the point of measurement using this item.	0 to 45 (0 to 4.8 mm) Unit: about 0.107 mm
	(front)	
	Point of measurement	
	Standard white plate	
ADJ-J (Note 1)	Use it to adjust the period of acceleration for the original scanner motor.	0 to +190 Unit: about 0.1 msec

Note 1: Execute this mode upon replacement of a PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

Adjusting the Image Read Start Position

Be sure to check the present point of attraction before starting the work.

- 1) Turn off the original detection mechanism before starting service mode.
- 2) Bring up the ADJ-XY screen, and press the Copy Start key.
 - Appropriate copying mode will automatically be set, and a copy is made with a shift of about 50 mm as shown.
- 3) If any part of the image is missing, decrease the setting of ADJ-X, ADJ-Y.
- 4) If an area outside the image is copied, increase the setting of ADJ-X, ADJ-Y.

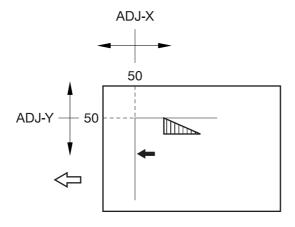


Figure 4-11

CCD COPIER>ADJUST

Adjusts the CCD

Level 3	Description	Remarks
EC-B	For future expansion.	
EC-G		
EC-R		

LASER

Adjusts the laser system.

Level 3	Description	Remarks
T-V00	Use it to enter the laser control initial value at V00 for text mode (800 lines) as upon replacement of the laser unit.	0 to 255
T-VFF	Use it to enter the laser control initial value at VFF for text mode (800 lines) as upon replacement of the laser unit.	
P3-V00	Use it to enter the laser control initial value at V00 for photo mode (400 lines) as upon replacement of the laser unit.	
P3-VFF-1	Use it to enter the laser control initial value at VFF (45%) for photo mode (400 lines) as upon replacement of the laser unit.	
P3-VFF-2	Use it to enter the laser control initial value at VFF (55%) for photo mode (400 lines) as upon replacement of the laser unit.	
P3-VFF-3	Use it to enter the laser control initial value at VFF (65%) for photo mode (400 lines) as upon replacement of the laser unit.	
P3-VFF-4	Use it to enter the laser control initial value at VFF (70%) for photo mode (400 lines) as upon replacement of the laser unit.	
POWER	Use it to turn on the laser output when adjusting the laser power.	Press the OK key to start and the Stop key to stop.
T-V00-ON	Use it to turn on the laser output when checking T-V00.	
T-VFF-ON	Use it to turn on the laser output when checking T-VFF.	
P3V00-ON	Use it to turn on the laser output when checking P3-V00.	
P3-V1-ON	Use it to turn on the laser output when checking P3-VFF-1.	
P3-V2-ON	Use it to turn on the laser output when checking P3-VFF-2.	
P3-V3-ON	Use it to turn on the laser output when checking P3-VFF-3.	
P3-V4-ON	Use it to turn on the laser output when checking P3-VFF-4.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

DENS COPIER>ADJUST

Adjusts items related to developer concentration.

Level 3	Description	Remarks
SGNL-Y SGNL-M SGNL-C (Note 1)	Use it to adjust the toner concentration signal value of each color during INIT for ATR control.	0 to 1023
REF-Y REF-M REF-C (Note 1)	Use it to adjust the toner concentration reference signal value for each color during INIT for ATR control.	0 to 1023
SIGG-Y SIGG-M SIGG-C (Note 1)	Use it to adjust the toner concentration reference signal gain value for each color during ATR control.	0 to 255
RGAIN-K (Note 1)	Use it to adjust the toner concentration reference signal gain value for Bk during toner concentration control.	0 to 255
D-Y-TRGT D-M-TRGT D-C-TRGT (Note 1)	Use it to adjust the toner concentration target present value of each color during ATR control.	0 to 1023
PTOFST-Y PTOFST-M PTOFST-C PTOFST-K (Note 1)	Use it to adjust the correction value (%) of the laser output of each color during ATR control.	-127 to +128
D-REF-Y D-REF-M D-REF-C D-REF-K	Use it to adjust the reference signal value (during initialization) of each toner concentration sensor in relation to light reflected by the photosensitive drum.	0 to 1023
D-REF-4 (Note 1)	Use it to adjust the reference signal value (during initialization) of the toner concentration sensor for all colors in relation to light reflected by the photosensitive drum.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

Level 3	Description	Remarks
D-SGNL-Y D-SGNL-M D-SGNL-C D-SGNL-K	Use it to adjust the signal value (during initialization) for the toner concentration sensor of each color in relation to light reflected by the photosensitive drum.	0 to 1023
D-SGNL-4 (Note 1)	Use it to adjust the signal value (during initialization) for the toner concentration sensor of all colors in relation to light reflected by the photosensitive drum.	
P-REF-Y P-REF-M P-REF-C P-REF-K (Note 1)	Use it to adjust the toner concentration reference signal value for each color on the photosensitive drum during INIT for ATR control.	0 to 1023
P-SGNL-Y P-SGNL-M P-SGNL-C P-SGNL-K (Note 1)	Use it to adjust the toner concentration reference signal value for each color on the photosensitive drum during INIT for ATR control.	0 to 1023
SIGG-K (Note 1)	Use it to adjust the gain for the Bk toner concentration reference signal during ATR control.	0 to 255
SIGG-P-M SIGG-P-C SIGG-P-Y SIGG-P-K (Note 1)	correction of the patch gain for ATR control when INIT-x (mono INIT) is executed	0 to 255
RGAN-P-M RGAN-P-C RGAN-P-Y RGAN-P-K (Note 1)	correction of the patch gain for toner density control when INIT-x (mono INIT) is executed	0 to 255

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

V-CONT COPIER>ADJUST

Adjusts the photosensitive drum surface potential contrast.

Level 3	Description	Remarks
VBACK-Y VBACK-M VBACK-C VBACK-K	Use it to adjust the de-fogging potential for each color.	-4 to +4 Standard: 0 + side: darkens - side: lightens
EPOTOFST	Use it to adjust the potential offset value.	0 to 1023 Standard: 0
PF-CRT-Y PF-CRT-M PF-CRT-C PF-CRT-K	Use it to adjust the offset value (%) of laser strength for each color.	-25 to +25

PASCAL

Adjusts automatic gradation correction.

Level 3	Description	Remarks
OFST-P-Y OFST-P-M OFST-P-C OFST-P-K	Use it to adjust the target value of each color in high-density areas during auto gradation correction.	-127 to +128

COLOR COPIER>ADJUST

Adjusts the color balance.

Level 3	Description	Remarks
ADJ-Y ADJ-M ADJ-C ADJ-K (Note 1)	Use it to correct the color balance of each color selected by the user. • Be sure to set the user color balance to '0' before using this item. • Be sure to follow the Image Adjustment Basic Procedure.	-8 to +8 Standard: M=0, C=0, Y=0, K=0 + side: darkens - side: lightens
OFST-Y OFST-M OFST-C OFST-K (Note 1)	Use it to adjust the color balance and density of light areas of each color. • Be sure to follow the Image Adjustment Basic Procedure. • To increase the degree of reproduction of extremely light areas, decrease the setting.	-16 to +16 Standard: M=0, C=0, Y=0, K=0
P-ADJ-Y P-ADJ-M P-ADJ-C P-ADJ-K (Note 1)	Use it to correct the color balance of each color when output is from an external image controller. • Be sure to set the user color balance to '0' before using this mode. • Be sure to follow the Image Adjustment Basic Procedure.	-8 to +8 Standard: M=0, C=0, Y=0, K=0 + side: darkens - side: lightens
P-OFST-Y P-OFST-M P-OFST-C P-OFST-K (Note 1)	Use it to adjust the color balance and the density of light areas of each color when the output is from an external image controller. • Be sure to follow the Image Adjustment Basic Procedure. • If fogging is noted, increase the value. • To increase the degree of reproduction of extremely light areas, decrease the setting.	-16 to +16 Standard M=0, C=0, Y=0, K=0

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

HV-TR COPIER>ADJUST

Adjusts the transfer high-voltage output by condition.

Level 3	Description	Remarks
HV-TR	Use it to adjust the transfer high-voltage output.	-4 to +4 Unit: 1.0 μA
TR-L1	Use it to adjust the transfer charging bias for single-sided copying and when copying on the 1st side of a double-sided copy using thin paper.	-4 to +4 Unit: 1.0 μA The copier may be adapted to
TR-L2	Use it to adjust the transfer charging bias when copying on the 2nd side of a double-sided copy using thin paper.	the site of installation (temperature, humidity) by changing its various settings.
TR-N1	Use it to adjust the transfer charging bias for single-sided copying and copying on the 1st side of a double-sided copy using plain paper.	For this mode, you will find settings grouped into three zones (A, B, C). On the Level
TR-N2	Use it to adjust the transfer charging bias for copying on the 2nd side of a double-sided copy using plain paper.	3 item screen (page 1), be sure to adjust Level 3 items of the appropriate zones (TEMP, ABS-HUM).
TR-T1	Use it to adjust the transfer charging bias for one-sided copying and when copying on the 1st side of a double-sided copy using thick paper.	Division by Moisture Content Zone A: 0 to 6.17 g Zone B: 6.18 to 18.40 g
TR-T2	Use it to adjust the transfer charging bias when copying on the 2nd side of a double-sided copy using thick paper.	Zone C: 18.41 g or more
TR-UT1	Use it to adjust the transfer charging bias for single- sided copying and when copying on the 1st side of a double-sided copying using extra thick paper.	
TR-UT2	Use it to adjust the transfer charging bias when copying on the 2nd side of a double-sided copy using extra thick paper.	
TR-S1-1	Use it to adjust the transfer charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 1.	
TR-S2-1	Use it to adjust the transfer charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 2.	
TR-OHP	Use it to adjust the transfer charging bias when using transparencies.	
TR-POST	Use it to adjust the transfer charging bias when using postcards.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

HV-SP COPIER>ADJUST

Adjusts the separation charging high-voltage output by condition.

Level 3	Description	Remarks
HV-SP	Use it to adjust the separation DC high-voltage output.	-6 to 0 Unit: 50 μA
SP-L1	Use it to adjust the separation charging bias for single-sided copying and when copying on the 1st side of a double-sided copy using thin paper.	-6 to 0 Unit: 50 μA The copier may be adapted to
SP-L2	Use it to adjust the separation charging bias when copying on the 2nd side of a double-sided copy using thin paper.	the site of installation (temperature, humidity) by changing its various settings.
SP-N1	Use it to adjust the separation charging bias for single-sided copying and copying on the 1st side of a double-sided copy using plain paper.	For this mode, you will find settings grouped into three zones (A, B, C). On the Level
SP-N2	Use it to adjust the separation charging bias for copying on the 2nd side of a double-sided copy using plain paper.	3 item screen (page 1), be sure to adjust Level 3 items of the appropriate zones (TEMP, ABS-HUM).
SP-T1	Use it to adjust the separation charging bias for one- sided copying and when copying on the 1st side of a double-sided copy using thick paper.	Division by Moisture Content Zone A: 0 to 6.17 g Zone B: 6.18 to 18.40 g
SP-T2	Use it to adjust the separation charging bias when copying on the 2nd side of a double-sided copy using thick paper.	Zone C: 18.41 g or more
SP-UT1	Use it to adjust the separation charging bias for single-sided copying and when copying on the 1st side of a double-sided copying using extra thick paper.	
SP-UT2	Use it to adjust the separation charging bias when copying on the 2nd side of a double-sided copy using extra thick paper.	
SP-S1-1	Use it to adjust the separation charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 1.	
SP-S2-1	Use it to adjust the separation charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 2.	
SP-OHP	Use it to adjust the separation charging bias when using transparencies.	
SP-POST	Use it to adjust the separation charging bias when using postcards.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

COPIER>ADJUST

Level 3	Description	Remarks
SP-ON-N1	Use it to adjust the separation re-charging ON environment adjustment value for single-sided copying and copying on the 1st side of a double-sided copy.	1 to 32 In this mode, the blue offset is decreased; check the setting of COPIER>ANALOG-ABS-
SP-ON-N2	Use it to adjust the separation re-charging ON environment adjustment value for copying on the 2nd side of a double-sided copy using plain paper.	HUM, and enter the appropriate value (1 through 32) from below.
SP-ON-L1	Use it to adjust the separation re-charging on environment adjustment value for single-sided copying or copying on the 1st side of a double-sided copy using thin paper.	1: all environment OFF 2: 3.03 g or less 3: 3.42 g or less 4: 3.81 g or less 5: 4.21 g or less
SP-CN-L2	Use it to adjust the separation re-charging on environment adjustment value for copying on the 2nd side of a double-sided copy using thin paper.	5: 4.21 g or less 6: 4.60 g or less 7: 4.99 g or less 8: 5.38 g or less
SP-ON-T1	Use it to adjust the separation re-charging on environment adjustment value for single-sided copying and copying on the 1st side of a double-sided copy using thick paper.	9: 5.77 g or less 10: 6.17 g or less 11: 6.65 g or less 12: 7.13 g or less
SP-ON-T2	Use it to adjust the separation re-charging on environment adjustment value for copying on the 2nd side of a double-sided copy using thick paper.	13: 7.61 g or less 14: 8.09 g or less 15: 8.57 g or less
SP-ONUT1	Use it to adjust the separation re-charging on environment adjustment value for single-sided copying and copying on the 1st side of a double-sided copy using extra thick paper.	16: 9.05 g or less 17: 9.53 g or less 18: 10.01 g or less 19: 10.50 g or less 20: 11.44 g or less
SP-ONUT2	Use it to adjust the separation re-charging on environment adjustment value for copying on the 2nd side of a double-sided copy using extra thick paper.	21: 12.38 g or less 22: 13.32 g or less 23: 14.26 g or less 24: 15.20 g or less
SP-ON-S1	Use it to adjust the separation re-charging on environment adjustment value for single-sided copying and copying on the 1st side of a double-sided copy using special paper 1.	25: 16.00 g or less 26: 16.80 g or less 27: 17.60 g or less 28: 18.40 g or less 29: 19.20 g or less
SP-ON-S2	Use it to adjust the separation re-charging on environment adjustment value for single-sided copying and copying on the 1st side of a double-sided copy using special paper 2.	30: 20.00 g or less 31: 20.80 g or less 32: 21.60 g or less For instance, in the case of 5
SP-ONOHP	Use it to adjust the separation re-charging on environment adjustment value using transparencies.	g, enter '8' for the paper type in question so that the
SP-ON-PT	Use it to adjust the separation re-charging on environment adjustment value using postcards.	separation re-charging mechanism will turn on when the moisture content is 0 to 5.38 g.

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

HV-IELAdjusts the internal static eliminating high-voltage output by condition.

Level 3	Description	Remarks
HV-IEL	Use it to adjust the internal static eliminating high-voltage output.	-8 to 0 Unit: 0.5 kV
IEL-L1	Use it to adjust the internal static eliminating bias for single-sided copying and when copying on the 1st side of a double-sided copy using thin paper.	-8 to 0 Unit: 0.5 kV The copier may be adapted to
IEL-L2	Use it to adjust the internal static eliminating bias when copying on the 2nd side of a double-sided copy using thin paper.	the site of installation (temperature, humidity) by changing its various settings.
IEL-N1	Use it to adjust the internal static eliminating bias for single-sided copying and copying on the 1st side of a double-sided copy using plain paper.	For this mode, you will find settings grouped into three zones (A, B, C). On the Level 3 item screen (page 1), be
IEL-N2	Use it to adjust the internal static eliminating bias for copying on the 2nd side of a double-sided copy using plain paper.	sure to adjust Level 3 items of the appropriate zones (TEMP, ABS-HUM).
IEL-T1	Use it to adjust the internal static eliminating bias for one-sided copying and when copying on the 1st side of a double-sided copy using thick paper.	Division by Moisture Content Zone A: 0 to 6.17 g Zone B: 6.18 to 18.40 g
IEL-T2	Use it to adjust the internal static eliminating bias when copying on the 2nd side of a double-sided copy using thick paper.	Zone C: 18.41 g or more
IEL-UT1	Use it to adjust the internal static eliminating bias for single-sided copying and when copying on the 1st side of a double-sided copy using extra thick paper.	
IEL-UT2	Use it to adjust the internal static eliminating bias when copying on the 2nd side of a double-sided copy using extra thick paper.	
IEL-S1-1	Use it to adjust the internal static eliminating bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 1.	
IEL-S2-1	Use it to adjust the internal static eliminating bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 2.	
IEL-OHP	Use it to adjust the internal static eliminating bias when using transparencies.	
IEL-POST	Use it to adjust the internal static eliminating bias when using postcards.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

HV-ATT COPIER>ADJUST

Adjusts the attraction charging high-voltage output by condition.

Level 3	Description	Remarks
HV-ATT	Use it to adjust the attraction high-voltage output.	-5 to +5 Unit: 2 μA
ATT-L1	Use it to adjust the attraction charging bias for single-sided copying and when copying on the 1st side of a double-sided copy using thin paper.	-5 to +5 Unit: 2 μA The copier may be adapted to
ATT-L2	Use it to adjust the attraction charging bias when copying on the 2nd side of a double-sided copy using thin paper.	the site of installation (temperature, humidity) by changing its various settings.
ATT-N1	Use it to adjust the attraction charging bias for single-sided copying and copying on the 1st side of a double-sided copy using plain paper.	For this mode, you will find settings grouped into three zones (A, B, C). On the Level
ATT-N2	Use it to adjust the attraction charging bias for copying on the 2nd side of a double-sided copy using plain paper.	3 item screen (page 1), be sure to adjust Level 3 items of the appropriate zones (TEMP, ABS-HUM).
ATT-T1	Use it to adjust the attraction charging bias for one-sided copying and when copying on the 1st side of a double-sided copy using thick paper.	Division by Moisture Content Zone A: 0 to 6.17 g Zone B: 6.18 to 18.40 g
ATT-T2	Use it to adjust the attraction charging bias when copying on the 2nd side of a double-sided copy using thick paper.	Zone C: 18.41 g or more
ATT-UT1	Use it to adjust the attraction charging bias for single-sided copying and when copying on the 1st side of a double-sided copy using extra thick paper.	
ATT-UT2	Use it to adjust the attraction charging bias when copying on the 2nd side of a double-sided copy using extra thick paper.	
ATT-S1	Use it to adjust the attraction charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 1.	
ATT-S2	Use it to adjust the attraction charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 2.	
ATT-OHP	Use it to adjust the attraction charging bias when using transparencies.	
ATT-POST	Use it to adjust the attraction charging bias when using postcards.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

DOC-REC COPIER>ADJUST

Adjusts the original detection area/slice level.

Level 3	Description	Remarks
DA-XS DA-XE DA-YS DA-YE (Note 1)	Fine-Adjusting the Original Detection Area If an original is placed on the copyboard glass at an angle, its copy will be framed in black by the work of original detection mode. Use this item to make settings so as to remove such frames. Keep in mind that a change in the settings will affect the frame width in original detection mode while the projector is in use. DA-YS DA-XS DA-XE	-99 to +99 (0 to 6.3 mm) Standard: SX=24 XE=8 YS=32 YE=24 Unit: 0.06 mm (approx.)
DS-DOC (Note 1)	Adjusting the Slice Level for Original Detection You may set a slice level of your choice for original detection. A higher slice level will increase the degree of detection of an original, but at the same time will lead to wrong detection.	0 to 31 (density level of 0 to 248) Standard: 21

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

FEED-ADJ

COPIER>ADJUST

Level 3	Description	Remarks
ATT-T-A	Use it to enter a transfer drum side A attraction timing adjustment value.	-10 to +10 Unit: 0.4 mm
ATT-T-B	Use it to enter a transfer drum side B attraction timing adjustment value.	
RG-XA	Use it to enter a registration (point of attraction) fine-adjustment value for transfer drum side A sub scanning direction (feeding direction).	-47 to +47 Unit: 0.06 mm
RG-XB	Use it to enter a registration (point of attraction) fine-adjustment value for transfer drum side B sub scanning direction (feeding direction).	
RG-Y	Use it to enter a registration (point of attraction) fine-adjustment value for transfer drum main scanning direction (drum axial).	-70 to +70
TR-DLY-A	Enter a fine-adjustment value for the transfer delay on side A of the transfer drum.	-10 to +10 Unit: 0.4 mm
TR-DLY-B	Enter a fine-adjustment value for the transfer delay on side B of the transfer drum.	
ATT-CHK	Use it to select a point of attraction on the transfer drum during ATT-ON.	1: 2-sheet retention (sides B and A) 2: side A retention 3: side B retention
ATT-ON	Use it to execute attraction of copy paper to the transfer drum according to ATT-CHK settings.	OK key to start; auto stop
RGST-CHK	Use it to select a point of attraction on the transfer drum during RGST-ON.	1: 2-sheet retention (sides B and A) 2: side A retention 3: side B retention
RGST-ON	Use it to execute printing for checking registration (side of retention) using C according to RGST-CHK settings.	OK key to start; auto stop
TR1-CHK	Use it to select a point of attraction on the transfer drum during TR1-ON.	1: 2-sheet retention (sides B and A)
TR2-CHK	Use it to select a point of attraction on the transfer drum during TR2-ON.	2: side A retention 3: side B retention
TR1-ON	Use it to execute printing for checking a 1-mm leading edge margin according to TR1-CHK settings.	OK key to start; auto stop
TR2-ON	Use it to execute printing for checking an 8-mm leading edge margin according to TR2-CHK settings.	
TR-END-A	Use it to adjust the falling edge (trailing edge margin) of transfer high voltage for side A retention.	0 to 25 Unit: 0.4 mm
TR-END-B	 Use it to adjust the falling edge (training edge margin) of transfer high voltage for side B retention. Be sure to make adjustments whenever you have replaced the transfer drum unit. A lower setting will shift the point at which blurring starts toward the trailing edge. 	Executes test printing at TR2-ON.

CST-ADJAdjusts cassette-/manual feed-related items.

Level 3	Description	Remarks
C2-STMTR	Use it to adjust the paper width basic value for STMTR in cassette 2.	0 to 1023 When you have replaced the
C2-A4R	Use it to adjust the paper width basic value for A4R in cassette 2.	CPU PCB or initialized the RAM of the DC-CPU, enter the values recorded on the
C3-STMTR	Use it to adjust the paper width basic value for STMTR in cassette 3 (for CLC1150, cassette 2).	service label. If you have replaced the paper
C3-A4R	Use it to adjust the paper width basic value for A4R in cassette 3 (for CLC1150, cassette 2).	width sensor, execute COPIER>FUNCTION>CST.
MF-A4R	Use it to adjust the paper width basic value for A4R in the multifeeder.	
MF-A6R	Use it to adjust the paper width basic value for A6R in the multifeeder.	
MF-A4	Use it to adjust the paper width basic value for A4 in the multifeeder.	
C1-LVOL	Use it to enter a slice level for the cassette 1 paper level detecting VR (for 50 sheets).	0 to 1023 When you have replaced the
C1-HVOL	Use it to enter a slice level for the cassette 1 paper level detecting VR (for 275 sheets).	CPU PCB or initialized the RAM of the DC -CPU, enter the values recorded on the
C2-LVOL	Use it to enter a slice level for the cassette 2 (for CLC1150, cassette 1) paper level detecting VR (for 50 sheets).	service label.
C2-HVOL	Use it to enter a slice level for the cassette 2 (for CLC1150, cassette 1), paper level detecting VR (for 275 sheets).	
C3-LVOL	Use it to enter a slice level for the cassette 3 (for CLC1150, cassette 2) paper level detecting VR (for 50 sheets).	
C3-HVOL	Use it to enter a slice level for the cassette 3 (for CLC1150, cassette 2) paper level detecting VR (for 275 sheets).	

MISC COPIER>ADJUST

Level 3	Description	Remarks
SEG-ADJ	Use it to adjust the separation level between text and photo in text/photo mode or text/silver halide mode.	-3 to +3
K-ADJ	Use it to correct the black text mechanism.	-3 to +3
ATT-RTN1	Use it to add a single rotation to attraction rotation for single-sided copying and copying on the 1st side of double-sided copying using plain paper (full color/ black).	0 to 1
ATT-RTN2	Use it to add a single rotation to attraction rotation for copying on the 2nd side of a double-sided copy using plain paper (full color/black).	
ATT-RTN3	Use it to add a single attraction rotation for single-sided copying and copying on the 1st side of a double-sided copy using thin paper (full color/black).	
ATT-RTN4	Use it to add a single rotation to attraction rotation for copying on the 2nd side of a double-sided copy using thin paper (full color/black).	
BC-ADJ	Use it to adjust the color recognition range when pattern processing is not performed.	-3 to +3 A higher setting will decrease the recognition range (i.e., a light color or a dark color will be identified as white or black, respectively).
ACS-ADJ	Use it to adjust the color recognition sensitivity for ACS.	-6 to +6

SENS-ADJ

Adjusts sensor-related items.

Level 3	Description	Remarks
CLN-TH	Use it to enter a thermal correction value for the precleaning paper sensor (PS71).	2300 to 5500 Unit: mV
CLN-TMP	Use it to enter a thermal correction value for the precleaning paper sensor (PS71).	0 to 60 Unit: °C When you have replaced the CPU PCB or initialized the RAM of the DC-CPU, be sure to enter the values recorded on the service label. If you have replaced the pre- cleaning paper sensor or the photosensitive drum, or removed the sensor unit, be sure to execute COPIER>FUNCTION>SENS- ADJ>CLN-OFST after cleaning the sensor unit.

HV-SP-AC COPIER>ADJUST

Adjusts the separation charging AC high-voltage output by condition.

Level 3	Description	Remarks
HV-SP	Use it to adjust the separation AC high-voltage	-4 to +4
(Note 1)	output.	Unit: 0.5 kV
SP-N1	Use it to adjust the separation charging bias for single-sided copying and copying on the 1st side of a double-sided copy using plain paper.	-4 to +4 Unit: 0.5 kV The copier may be adapted to
SP-N2	Use it to adjust the separation charging bias for copying on the 2nd side of a double-sided copy using plain paper.	the site of installation (temperature, humidity) by changing its various settings.
SP-T1	Use it to adjust the separation charging bias for one-sided copying and when copying on the 1st side of a double-sided copy using thick paper.	For this mode, you will find settings grouped into three zones (A, B, C). On the Level 3 item screen (page 1), be
SP-T2	Use it to adjust the separation charging bias when copying on the 2nd side of a double-sided copy using thick paper.	sure to adjust Level 3 items of the appropriate zones (TEMP, ABS-HUM).
SP-UT1	Use it to adjust the separation charging bias for single-sided copying and when copying on the 1st side of a double-sided copying using extra thick paper.	Division by Moisture Content Zone A: 0 to 6.17 g Zone B: 6.18 to 18.40 g Zone C: 18.41 g or more
SP-UT2	Use it to adjust the separation charging bias when copying on the 2nd side of a double-sided copy using extra thick paper.	
SP-S1-1	Use it to adjust the separation charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 1.	
SP-S2-1	Use it to adjust the separation charging bias for single-sided copying and copying on the 1st side of a double-sided copy using special paper 2.	
SP-OHP	Use it to adjust the separation charging bias when using transparencies.	
SP-POST	Use it to adjust the separation charging bias when using postcards.	
SP-L1	Use it to adjust the separation charging bias for single-sided copying and when copying on the 1st side of a double-sided copy using thin paper.	
SP-L2 (Note 1)	Use it to adjust the separation charging bias when copying on the 2nd side of a double-sided copy using thin paper.	

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

HV-PSTCL COPIER>ADJUST

Adjusts the post-cleaning high-voltage output.

Level 1	Description	Remarks
HV-PSTCL (Note 1)	Adjusting the Post-Cleaning High Voltage • Increase the setting if a width of about 5 cm along the leading edge of paper is dark when making halftone copies.	-6 to +6 Unit: 20 μA

Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.

Feeder-Related Items

FEEDER>ADJUST

Level 3	Description	Remarks
ADJ-RX	Use it to adjust the registration in sub scanning direction with the feeder in use.	-50 to +50 Unit: 0.1 mm
ADJ-RY	Use it to adjust the registration in main scanning direction with the feeder in use.	
ADJ-DX	Use it to adjust the registration in sub scanning direction with the feeder in use in manual mode.	
ADJ-DY	Use it to adjust the registration in main scanning direction with the feeder in use in manual feed mode.	

Projector-Related Items

PRJ>ADJUST

Level 3	Description	Remarks
DS-PRJ	Use it to adjust the slice level for projection area detection with the projector in use.	0 to 31 Standard: 28
DS-OHP	Use it to adjust the slice level for original detection in reference to the reference sheet of film (e.g., 6x6, 8x10) placed on the copyboard glass with the projector in use.	0 to 31 Standard: 22
RD-XS RD-XE RD-YS RD-YE	Use it to adjust the read area when the original detection mechanism is off or when original detection fails even when the original detection mechanism is on with the projector in use.	-300 to +300 Unit: 0.06 mm Standard: 0
DA-XS DA-XE DA-YS DA-YE	Use it to adjust the read area when the original detection mechanism is on with the projector in use. • This is also used for the read area when the original detection mechanism is off in copyboard mode.	-99 to +99 Standard: 0 XS, XE Unit: 0.11 mm YS, YE Unit: 0.06 mm

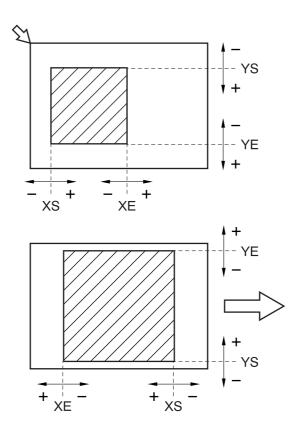


Figure 4-12

PRJ>ADJUST

Level 3	Description	Remarks
NEGA-B NEGA-G NEGA-R	Use it to adjust the target value for shading correction when copying negative film with the projector in use.	-100 to +100 A higher value darkens the color.
POSI-B POSI-G POSI-R	Use it to adjust the target value for shading correction when copying positive film with the projector in use.	$\begin{array}{c} B \to Y \\ G \to M \\ R \to C \end{array}$
N-LMT	Use it to change the limit for the projector lamp in negative normal mode with the projector in use	0 to 255 (effective range: 32 to 63)
N-G-LMT	Use it to change the limit for the projector lamp in negative copyboard mode with the projector in use.	0 to 255 (effective range: 32 to 48)
P-LMT	Use it to change the limit for the projector in positive normal mode with the projector in use.	0 to 255 (effective range: 32 to 41)
P-G-LMT	Use it to change the limit for the projector in positive copyboard mode with the projector in use.	0 to 255 (effective range: 32 to 41)
OHP-LMT	Use it to change the limit for the projector in transparency mode with the projector in use.	0 to 255 (effective range: 32 to 41)
P-DA-XS P-DA-XE P-DA-YS P-DA-YE	Use it to adjust the degree of the positive film original frame erasing mechanism with the projector in use.	-99 to +99 Unit: 0.6 mm (approx.) Standard: XS=24 XE=8 YS=32 YE=24
N-DA-XS N-DA-XE N-DA-YS N-DA-YE	Use it to adjust the degree of negative film original frame erasing mechanism with the projector in use.	-99 to +99 Unit: 0.6 mm (approx.) Standard: 50
O-DA-XS O-DA-XE O-DA-YS ODAS-YE	Use it to adjust the degree of transparency film original erasing mechanism with the projector in use.	-99 to +99 Unit: 0.6 mm (approx.) Standard: XS=24 XE=8 YS=32 YE=24
CHNGR-X	Use it to adjust the position in main scanning direction with the projector rotary changer in use. Use it to adjust the position in sub scanning direction	-99 to +99 Unit: 0.6 mm (approx.) Standard: 0
CIIIVON-1	with the projector rotary changer in use.	

Editor-Related Items


EDITOR>ADJUST


Level 3	Description	Remarks
ED-X	Use it to adjust the input coordinates in editor sub scanning (X) direction.	-99 to +99 Unit: 0.13 mm (approx.)
ED-Y	Use it to adjust the input coordinates in editor main	Standard: 0
(Note 1)	scanning (Y) direction.	
	+ ▼ -	
LOOP-MB (Note 1)	Use it to adjust processing for reading images into memory when coloring in area select/color create mode. • A higher setting makes filling of gaps easier, but too high a setting can lead to bleeding.	0 to 3 Standard: 0
LOOP-TH (Note 1)	Use it to adjust the binary slice level for reading images into memory when coloring in area select/color create mode. • A higher setting enables reading fine lines.	0 to 255 Standard: 192
MRK-MB	Use it to adjust processing for reading images into memory in marker select/point select mode. • A higher setting makes filling of gaps easier.	0 to 3 Standard: 0
MRK-TH	Use it to adjust the binary slice level for reading images into memory in marker select/point select mode. • A higher setting enable reading fine lines.	0 to 255 Standard: 128
	11: 1 1 (CONTROL : :: 11:	. C.I DANGEL


Note 1: Execute this mode upon replacement of a CPU PCB or initialization of the RAM. The settings will be returned to standard settings, requiring you to enter the appropriate settings. Be sure to record any new settings on the service label.


E. FUNCTION (operation check mode)

COPIER>FUNCTION Items

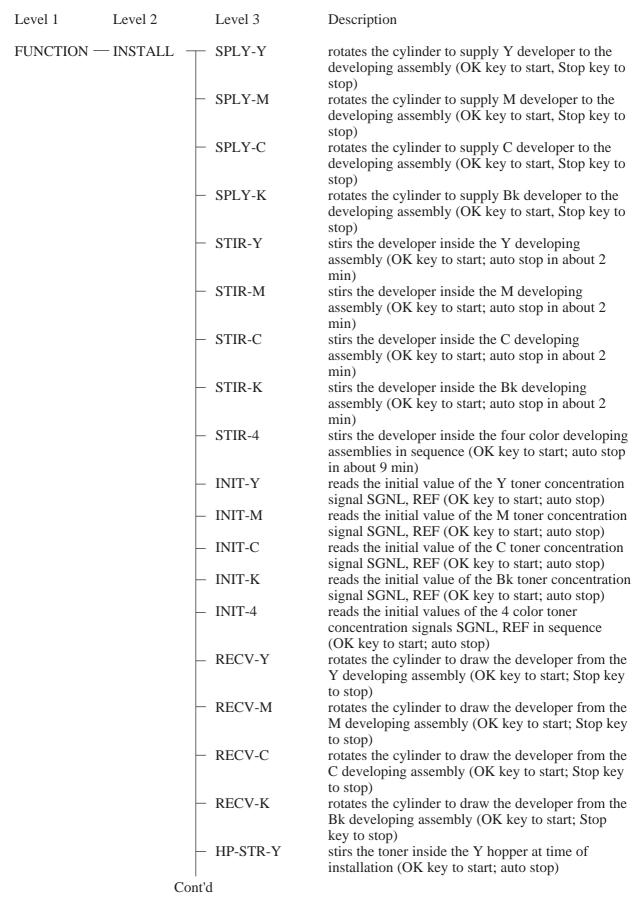


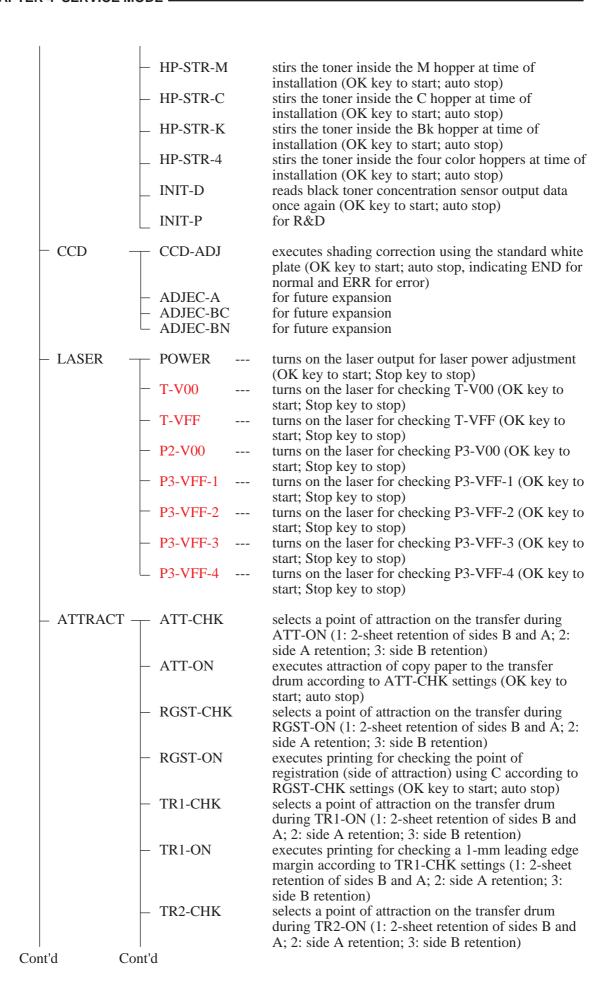

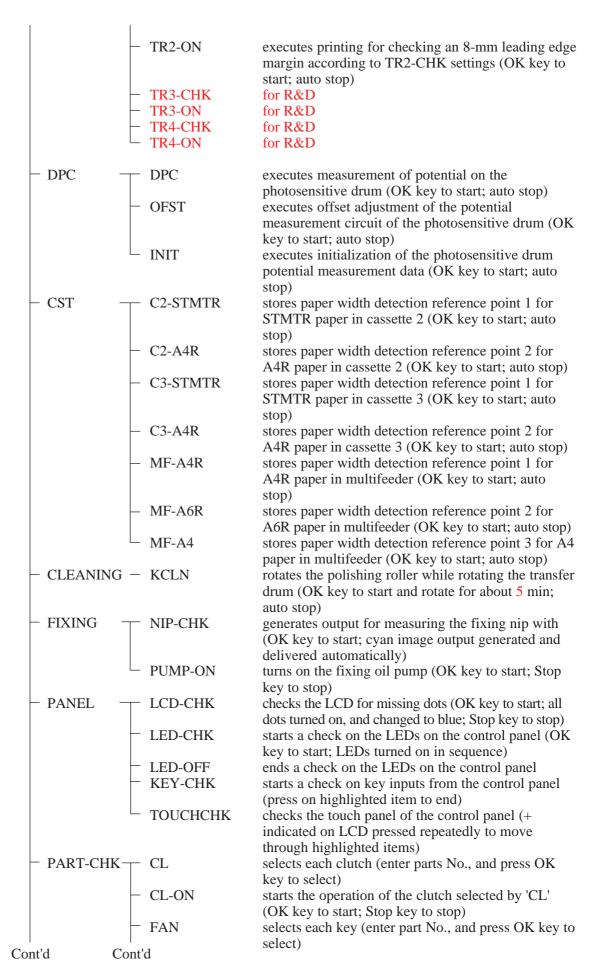

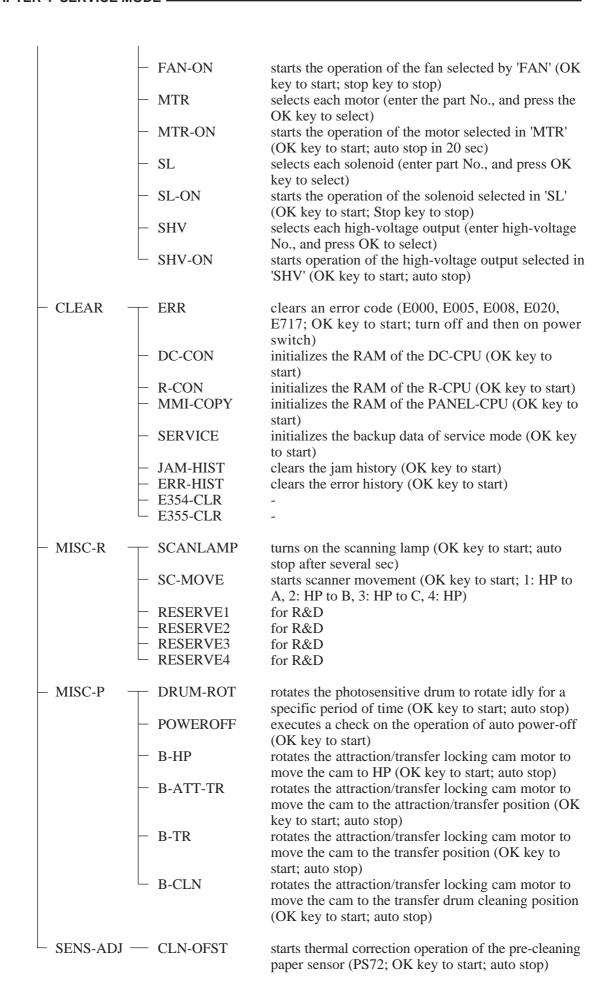

PRJ>FUNCTION Items

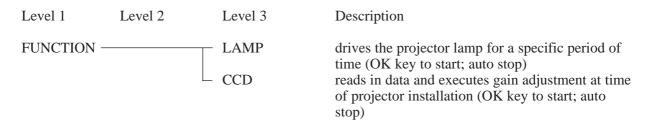

INSTALL

COPIER>FUNCTION

Used at time of installation.

Level 3	Description	Remarks
SPLY-Y SPLY-M SPLY-C SPLY-K	Use it to rotate the developing cylinder to supply a specific color developer to the developing assembly. Using the Item 1) Select an item (to highlight), and press the OK key. 2) To stop, press the Stop key.	
STIR-Y STIR-M STIR-C STIR-K	Use it to stir the developer inside a specific color developing assembly. Using the Item 1) Select an item (to highlight), and press the OK key. 2) The operation will stop automatically in about 2 min.	
STIR-4	Use it to stir the developer in the four developing assemblies in sequence. 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically in about 9 min.	
INIT-Y INIT-M INIT-C INIT-K	Use it to read the initial value of a specific toner concentration signal SGNL, REF. The screen (COPIER>ADJUST>DENS) will show the reading. Be sure to record it on the service label. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically in about 2 min.	
INIT-4	Use it to read the initial value of the four color toner concentration signals SGNL, REF in sequence. The screen (COPIER>ADJUST>DENS) will show the readings. Be sure to record them on the service label. Using the Item Select the item (to highlight), and press the OK key. The operation will stop automatically in about 9 min.	
RECV-Y RECV-M RECV-C RECV-K	Use it to rotate the developing cylinder, thereby drawing the developer from a specific color developing assembly. Using the Item 1) Select an item (to highlight), and press the OK key. 2) To stop, press the stop key. Note: You will use this mode during installation.	

Level 3	Description	Remarks
HP-STR-Y HP-STR-M HP-STR-C HP-STR-K	Use it to stir the toner inside a specific color hopper to prevent blocking at time of installation and hopper unit replacement. Using the Item 1) Select an item (to highlight), and press the OK key. 2) The operation will stop automatically in about 30 sec. Note: This item is designed to prevent blocking of toner supplied to an empty hopper at high speed, as occurring at time of installation or hopper unit replacement.	
HP-STR-4	Use it to stir the toner inside the four color hoppers to prevent blocking at time of installation or hopper unit replacement. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically in about 2 min. Caution: This item is designed to prevent blocking of toner supplied to ampty hoppers at high speed, as	
	supplied to empty hoppers at high speed, as occurring at time of installation or hopper unit replacement.	
INIT-D	Use it to read the concentration sensor output data once again after cleaning the black toner concentration sensor to suit the light reflected by the photosensitive drum. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	
INIT-P	for R&D	

CCD COPIER>FUNCTION

Executes automatic adjustment of CCD-/shading-related items.

Level 3	Description	Remarks
CCD-ADJ	Use it to execute shading correction using the standard white plate. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically, and the result will be indicated. 3) Turn off and then on the power switch. Caution: Do not open the front cover while executing this mode. Otherwise, the CCD adjustment may fail.	END: normal ERR: error* *Try executing the item once again. Execute this item if you have replaced the CCD unit, scanning lamp, image processor, or the standard white plate.
ADJEC-A ADJEC-BC ADJEC-BN	For future expansion.	

LASER

Adjusts laser-related items.

Level 3	Description	Remarks
POWER	Use it to turn on the laser output for adjusting the laser power.	OK key to start; Stop key to stop
T-V00	Use it to turn on the laser output when checking T-V00.	
T-VFF	Use it to turn on the laser output when checking T-VFF.	
P2-V00	Use it to turn on the laser output when checking P3-V00.	
P3-VFF-1	Use it to turn on the laser output when checking P3-VFF-1.	
P3-VFF-2	Use it to turn on the laser output when checking P3-VFF-2.	
P3-VFF-3	Use it to turn on the laser output when checking P3-VFF-3.	
P3-VFF-4	Use it to turn on the laser output when checking P3-VFF-4.	

ATTRACT

COPIER>FUNCTION

Executes attraction point auto adjustment.

Level 3	Description	Remarks
ATT-CHK	Use it to select a point of attraction on the transfer drum during ATT-ON. 1: 2-sheet retention (sides B and A) 2: side A retention 3: side B retention	
ATT-ON	Use it to execute attraction of copy paper to the transfer drum according to ATT-CHK settings. This item uses the source of paper selected before starting service mode. Using the Item 1) Select an item (to highlight), and press the OK key. 2) The operation will stop automatically.	
RGST-CHK	Use it to select the point of attraction on the transfer drum during RGST-ON. 1: 2-sheet retention (sides B and A) 2: side A detecting 3: side B retention	
RGST-ON	Use it to execute printing for checking the point of registration (side of attraction) using C according to RGST-CHK settings. This mode uses the source of paper selected before starting service mode. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	
TRI-CHK	Use it to select a point of attraction on the transfer drum during TR1-ON. 1: 2-sheet retention (sides B and A) 2: side A detecting 3: side B retention	
TRI-ON	Use it to execute printing for checking a 1-mm leading edge margin according to TR1-CHK settings. This mode uses the source of paper selected before starting service mode. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	

COPIER>FUNCTION

Level 3	Description	Remarks
TR2-CHK	Use it to select a point of attraction on the transfer drum during TR2-ON. 1: 2-sheet retention (sides B and A) 2: side A detecting 3: side B retention	
TR2-ON	Use it to execute printing for checking an 8-mm leading edge margin according to TR2-CHK settings. This mode uses the source of paper selected before starting service mode. Using the Item 1) Select an item (to highlight), and press the OK key. 2) The operation will stop automatically.	
TR3-CHK	for R&D	
TR3-ON	for R&D	
TR4-CHK	for R&D	
TR4-ON	for R&D	

DPCMeasures the potential of the photosensitive drum.

Level 3	Description	Remarks
DPC	Use it to execute measurement of the potential of the photosensitive drum. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	
OFST	Use it to execute offset adjustment of the potential measurement circuit of the photosensitive drum. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	
INIT	Use it to execute initialization of the measurement data on the potential of the photosensitive drum if DPC cannot be executed normally. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	

CST

COPIER>FUNCTION

Executes cassette/multifeeder size auto adjustment.

Level 3	Description	Remarks
C2-STMTR C2-A4R C3-STMTR C3-A4R	Use it to store the paper width detection reference point for cassette 2/3 (for CLC1150, cassette 3). Using ht Item 1) Adjust the side guide pal of the bottommost cassette to STMTR. 2) Select C2-STMTR or C3-STMTR (to highlight), and press the OK key. 3) Likewise, store a reference point for A4R size.	STMTR width: 139.5 mm A4R width: 210 mm For fine adjustment after storing a reference point, use paper width basic value adjustment in ADJUST>CST-ADJ.
MF-A4R MF-A6R MF-A4	Use it to store the paper width detecting reference point for the multifeeder. Using the Item 1) Place A4R paper in the multifeeder, and adjust the side guide to A4R. 2) Select MF-A4R (to highlight), and press the OK key. 3) Likewise, store the reference point for A6R and A4.	A4R width: 210 mm A6R width: 105 mm A4 width: 297 mm For fine adjustment after storing a reference point, use paper width basic value adjustment in ADJUST>CST-ADJ.

CLEANING

Checks cleaning operation.

Level 3	Description	Remarks
KCLN	Use it to rotate the transfer drum while keeping the polishing roller in contact. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically in about 5 min.	You cannot stop this mode before the ongoing job ends.

FIXING

COPIER>FUNCTION

Executes automatic adjustment of fixing assembly-related items.

Level 3	Description	Remarks
NIP-CHK	Use it to generate an output for measuring the fixing nip width. This mode uses the source of paper selected before service mode is started. Using the Item 1) Make about 20 copies of the Test Sheet in A4. 2) Select the item (to highlight), and press the OK key. 3) A cyan image will automatically be prepared and discharged. 4) Measure the width of the area indicated in the figure. Standard 7.3 ± 0.3 mm Center of copy paper Standard: b-a c-a 1 mm or less Note: b and c are points 10 to 15 mm from the sides of paper.	Terminals .
PUMP-ON	Use it to impregnate the felt with oil by running the fixing oil pump for about 10 min when replacing the oil applying felt. Using the Item 1) Select the item (to highlight), and press the OK key. • The fixing motor will rotate, and the fixing oil pump will turn on. 2) Press the Stop key to stop.	

PANEL

COPIER>FUNCTION

Checks the activation of the indicators on the control panel.

Level 3	Description	Remarks
LCD-CHK	Use it to check the LCD for missing dots. Using the Item 1) Select the item (to highlight), and press the OK key. • The entire LCD will alternately turn on white, and then blue. 2) To stop, press the Stop key.	
LED-CHK	Use it to start a check on the LEDs on the control panel. Using the Item 1) Select the item (to highlight), and press the OK key. • The LEDs on the control panel will turn on in sequence. 2) To stop, press LED-OFF.	
LED-OFF	Use it to end a check on the LEDs on the control panel. 1) Press the item (highlighted) to end the operation.	
KEY-CHK	Use it to start a check on the key inputs from the control panel. Using the Item 1) Select the item (to highlight). 2) Press any key to check. If normal, the corresponding character will appear on the LCD. 3) To stop, press KEY-CHK (to highlight) once again.	See Table 4-4.
TOUCHCHK	Use it to adjust the coordinates of the touch panel on the control panel. Using the Item 1) Select an item (to highlight), and press the OK key. 2) Press the nine +s appearing on the touch panel in sequence. 3) To stop, press TOUCH-CHK (to highlight) once again.	This is to match the coordinates representing a point on the touch panel and the LCD. Execute this mode if you have replaced the LCD.

Input Keys and Indications

COPIER>FUNCTION

Key	Indication	Key	Indication
Counter Check	BILL	Start	START
ACS	ACS	Clear	CLEAR
Full Color	F-COLOR	0 to 9	0 to 9
Black	BLACK	ID	ID
Original Recognition	SIZE	Interrupt	INTERRUPT
Center Shift	C-SHIFT	Additional Function	USER
Energy Saver	STAND BY	Guide	?
Stop	STOP	Reset	RESET

Table 4-4

PART-CHK

Checks the operation of various loads.

Level 3	Description	Remarks
CL	Use it to select the clutch to check. Using the Item 1) Select the item (to highlight). 2) Enter the code of the clutch using the keypad. 3) Press the OK key.	See Table 4-5. Codes 13 through 20 are not used.
CL-ON	Use it to check the operation of the clutch selected using CL. 1) Select the item (to highlight), and press the OK key. • The clutch will tun on. 2) To stop, press the Stop key.	
FAN	Use it to select the fan to check. Using the Item 1) Select the item (to highlight). 2) Enter the code of the fan using the keypad. 3) Press the OK key.	See Table 4-6. Codes 12 through 20 are not used.
FAN-ON	Use it to check the operation of the fan selected using FAN. Using the Item 1) Select the item to select (to highlight), and press the OK key. • The fan will turn on. 2) To stop, press the Stop key.	
MTR	Use it to select the motor to check. Using the Item 1) Select the item (to highlight). 2) Enter the code of the motor. 3) Press the OK key.	See Table 4-7. Codes 8 through 20 are not used.

COPIER>FUNCTION

Level 3	Description	Remarks
MTR-ON	Use it to check the operation of the motor selected using MTR. Using the Item 1) Select the item (to highlight), and press the OK key. • The motor will turn on. 2) In about 20 sec, the operation will stop automatically.	
SL	Use it to select the solenoid to check. Using the Item 1) Select the item (to highlight). 2) Enter the code of the solenoid using the keypad. 3) Press the OK key.	See Table 4-8. Codes 10 through 20 are not used.
SL-ON	Use it to check the operation of the solenoid selected using SL. Using the Item 1) Select the item (to highlight), and press the OK key. • The solenoid will turn on. 2) To stop, press the Stop key.	
SHV	Use it to select the high-voltage output to check. Using the Item 1) Select the item (to highlight). 2) Enter the code of the high-voltage output using the keypad. 3) Press the OK key.	See Table 4-9. Codes 6 through 20 are not used.
SHV-ON	Use it to check the operation of the high-voltage output selected using SHV. Using the Item 1) Select the item (to highlight), and press the OK key. • The high-voltage output will turn on. 2) The operation will stop automatically after generating a specific high-voltage output.	

Codes and Clutches

Code	Name	Code	Name
0	duplexing feed clutch (CL14)	7	cassette 1 pickup clutch (CL11)
1		8	cassette 2 pickup clutch (CL12/DCL12)
2	registration clutch (CL9)	9	cassette 3 pickup clutch (CL13/DCL13)
3	multifeeder feed clutch (CL10)	10	not used
4	multifeeder pickup clutch (CL16)	11	postcard feed clutch (CL18)
5	deck pickup clutch (CL102)	12	buffer path clutch (CL1)
6	re-pickup clutch (CL15)	_	-

Table 4-5

Codes and Fans

COPIER>FUNCTION

Code	Name	Code	Name
0	electrical unit cooling fan (FM8)	6	not used
1	IP cooling fan (FM7)	7	primary charging assembly fan (FM3)
2	exhaust fan (FM2)	8	delivery cooling fan (FM11)
3	ozone suction fan (FM5)	9	original exposure cooling fan 1 (FM1)
4	toner suction fan (FM6)	10	not used
5	laser scanner motor cooling fan (FM4)	11	original exposure system cooling fan 2/3 (FM14/15)

Table 4-6

Codes and Motors

Code	Name	Code	Name
0	hopper motor (M10)	4	laser scanner motor (M3)
1	transfer drum cleaner brush motor (M8)	5	fixing motor (M5)
2	not used	6	drum motor (M2)
3	duplexing motor (M14)	7	main motor (M4)

Table 4-7

Codes and Solenoids

Code	Name	Code	Name
0	multifeeder pickup solenoid (SL14)	5	pickup roller 3 solenoid (SL9/DSL9)
1	deck pickup solenoid (SL101)	6	buffer path solenoid 1 (SL1)
2	duplexing paper feed roller solenoid	7	buffer path solenoid 2 (SL2)
	(SL13)	8	attraction roller solenoid (SL6)
3	pickup roller 1 solenoid (SL7)	9	separation claw solenoid (SL4)
4	pickup roller 2 solenoid (SL8/DLS8)		•

Table 4-8

Codes and High-Voltage Outputs

COPIER>FUNCTION

Code	High-voltage output	Description
0		Absence of high-voltage output
1	primary output, grid output	drum motor ON pre-exposure lamp ON photosensitive drum 1 rotation primary output, grid output (500 V) ON (wait for stop command; equivalent of photosensitive drum 10 rotations) primary output, grid output OFF photosensitive drum 1 rotation pre-exposure lamp OFF drum motor OFF
2	primary output, grid output, M color developing bias output	drum motor ON pre-exposure lamp ON photosensitive drum 1 rotation primary output, grid output (500 V) ON M color developing assembly locked, developing bias (AC/DC) ON (wait for stop command; equivalent of photosensitive drum 10 rotations) M developing assembly unlocked, developing bias (AC/DC) OFF primary output, grid output OFF photosensitive drum 1 rotation pre-exposure lamp OFF drum motor OFF
3	primary output, grid output, C developing bias output	drum motor ON pre-exposure lamp ON photosensitive drum 1 rotation primary output, grid output (500 V) ON C developing assembly locked, developing bias (AC/DC) ON (wait for stop command; equivalent of photosensitive drum 10 rotations) C developing assembly unlocked; equivalent of 10 rotations) primary output, grid output OFF photosensitive rum 1 rotation pre-exposure lap OFF drum motor OFF

Table 4-9a

COPIER>FUNCTION

Code	High-voltage output	Description
4	primary output, grid output, Y developing assembly bias output	drum motor ON pr-exposure lamp ON photosensitive drum 1 rotation primary output, grid output (500 V) ON Y developing assembly locked, developing bias (AC/DC) ON (wait for stop command; equivalent of photosensitive drum 10 rotations) Y developing assembly unlocked, developing bias (AC/DC) OFF primary output, grid output OFF photosensitive drum 1 rotation pre-exposure lamp OFF drum motor OFF
5	primary output, grid output, Bk color developing bias output	drum motor ON pre-exposure lamp ON photosensitive drum 1 rotation primary output, grid output (500 V) ON Bk color developing assembly locked, developing bias (AC/DC) ON (wait for stop command; equivalent of photosensitive drum 10 rotations) Bk developing assembly unlocked, developing bias (AC/DC) OFF primary output, grid output OFF photosensitive drum 1 rotation pre-exposure lamp OFF drum motor OFF

Table 4-9b

CLEAR

COPIER>FUNCTION

Initializes the RAM, and resets the jam/ error history.

Level 3	Description	Remarks
ERR	Use it to reset an error code (E000, E005, E008, E020, E717, E719). Using the Item 1) Select the item (to highlight), and press the OK key. 2) Turn off and then on the power switch.	Be sure to turn off and then on the power switch. Note: 'E020' is indicated only when the detail code is 'xxE0'.
DC-CON	Use it to initialize the RAM of the DC-CPU on the CPU PCB. Using the Item 1) Select the item (to highlight), and press the OK key. 2) Turn off and then on the power switch.	Be sure to turn off and then on the power switch.
R-CON	Use it to initialize the RAM of the R-CPU on the CPU PCB. 1) Select the item (to highlight), and press OK key. 2) Turn off and then on the power switch.	Be sure to turn off and then on the power switch.
MMI-COPY	Use it to initialize the RAM of the PANEL-CPU on the CPU PCB. Using the Item 1) Select the item (to highlight), and press the OK key. 2) Turn off and then on the power switch.	Be sure to turn off and then on the power switch.
SERVICE	Use it to reset the backup data of service mode. Using the Item 1) Select the item (to highlight), and press the OK key. 2) Turn off and then on the power switch.	Be sure to turn off and then on the power switch.
JAM-HIST	Use it to reset the jam history. Using the Item 1) Select the item (to highlight), and press the OK key. • The jam history will be reset.	
ERR-HIST	Use it to reset the error history. Using the Item 1) Select the item (to highlight), and press the OK key. • The error history will be reset.	
E354-CLR		
E355-CLR		

MISC-R

COPIER>FUNCTION

Checks the operation of the reader unit.

Level 3	Description	Remarks
SCANLAMP	Use it t check the activation of the scanning lamp. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The scanning lamp will remain on for several seconds, and then will turn off automatically.	
SC-MOVE	 Use it to check the operation of the scanner. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The scanner moves to point A, and '1/4' is indicated on the display. 3) Each press on the OK key causes the scanner to move as follows: HP → B → HP → C → HP. 4) The operation ends when the scanner moves to 4 (HP) in response to a press on the OK key. 1: HP → A → HP 2: HP → B → HP 1: HP → C 4: HP 	A B C
RESERVE 1 to 4	For R&D	

MISC-P

Checks the operation of the printer unit.

Level 3	Description	Remarks
DRUM-ROT	Use it to rotate the photosensitive drum idly for a specific period of time. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The photosensitive drum rotates idly for 30 sec, and will stop automatically.	
POWEROFF	Use it to check the operation of the auto power-off mechanism. 1) Select the item (to highlight), and press the OK key. • The power switch will turn off automatically.	

COPIER>FUNCTION

Level 3	Description	Remarks
В-НР	Use it to rotate the attraction/transfer locking cam motor, thereby moving the cam to the home position (HP). Using the Item 1) Select the item (to highlight), and press the OK key. 2) The attraction/transfer locking cam will stop at HP.	
B-ATT-TR	Use it to rotate the attraction/transfer locking cam motor, thereby moving the cam to the point of attraction/transfer. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The cam will move to the point of attraction/transfer, and will stop automatically.	
B-TR	Use it to rotate the attraction/transfer locking cam motor, thereby moving the cam to the point of transfer. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The cam will move to the point of transfer, and will stop automatically.	
B-CLN	Use it to rotate the attraction/transfer locking cam motor, thereby moving the cam to the transfer drum cleaning position. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The cam will move to the transfer drum cleaning position, and will stop automatically.	

SENS-ADJ

Checks sensor-related operations.

Level 3	Description	Remarks
CLN-OFST	Use it to execute temperature correction for the precleaning paper sensor (PS72). Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically. • The screen (COPIER>ADJUST>SENS-ADJ) will show the readings. Be sure to record them on the service label.	Execute this mode if you have removed (e.g., for cleaning) or replaced the pre-cleaning sensor (PS72) or have replaced the photosensitive drum.


Projector-Related Items


PRJ>FUNCTION

Level 3	Description	Remarks
LAMP	Use it to keep the lamp of the projector on for a specific period of time. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The lamp of the projector will remain on for about 1 min, and will turn off automatically.	
CCD	Use it to read CCD gain adjustment and data at time of installing a projector. Using the Item 1) Select the item (to highlight), and press the OK key. 2) The operation will stop automatically.	Note: Do not execute this mode while the copier is warming up.

F. OPTION (settings mode)

COPIER>OPTION Items

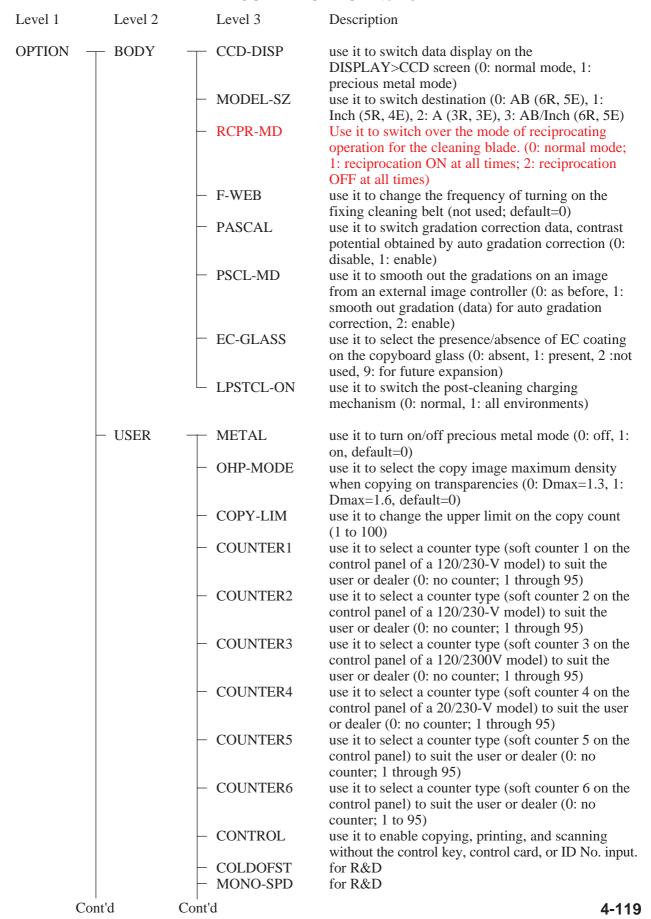

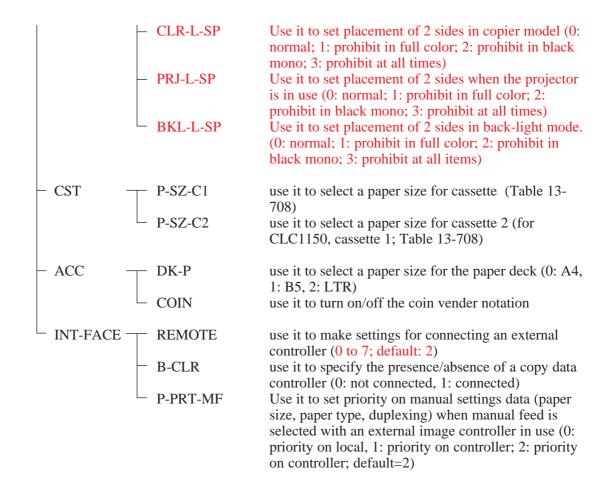

PRJ>OPTION Items

Level 1 Level 2 Level 3 Description

OPTION———— BK-LIGHT not used

EDITOR>OPTION Items

Level 1 Level 2 Level 3 Description

OPTION — ED-MODE use it to switch editor operation mode (0: prohibit

input, 1: 1-point input, 2: continuous input)

BODY COPIER>OPTION

Level 3	Description	Remarks
CCD-DISP	Use it to switch data display within the DISPLAY>CCD screen.	0: normal mode 1: precious metal mode
MODEL-SZ	Use it to switch the destination.	0: AB (6R, 5E) 1: Inch (5R, 4E) 2: A (3R, 3E) 3: AB/Inch (6R, 5E)
RCPR-MD	Use it to switch cover the mode of reciprocating operation for the drum cleaning blade.	0: normal 1: reciprocation ON at all times 2: reciprocation OFF at all times
F-WEB (not used)	Use it to change the frequency of turning on the fixing cleaning belt.	default: 0
PASCAL	Use it to switch the gradation correction data, contrast potential obtained by auto gradation correction	0: do not use 1: use
PSCL-MD	Use it to smooth out the gradation of an image from an external image controller.	0: as before 1: smooth out gradation (data) for auto gradation correction 2: smooth
EC-GLASS	Use it to specify the presence/absence of EC coating on the copyboard glass. • After specifying, be sure to turn off and then on the power switch.	0: coating provided 1: coating not provided 2: not used 9: for future expansion
PSTCL-ON	Use it to switch the post-cleaning charging mechanism. • Take advantage of the item if memory or cyan/black dots appear on the edges of paper in a low humidity environment.	0: normal 1: ON in all environments

USER Soloate user related settings

COPIER>OPTION

Selects user-related settings.

Level 3		Descr	ription		Remarks
METAL	Use it to turn	on and off pr	0: off 1: on default: 0		
OHP-MODE		ect the copy in ransparencies.	0: Dmax=1.3 1: Dmax=1.6 Default: 0		
COPY-LIM	Use it to cha	nge the upper	limit on the c	opy count.	1 through 100
COUNTER1 COUNTER2 COUNTER3 COUNTER4		ect a counter ty counter 1 throu -V model).			0: do not indicate 1 to 95 See Table 4-10.
COUNTER5 COUNTER6		ect a counter ty 5/6 on the co		use or dealer	0: do not indicate 1 to 95 See Table 4-10.
CONTROL	No. input, co	ce of a control opying, remote permitted with digits of CON	Settings of each digit: 0 to 4 Standard for each digit: 0 CONTROL xxx		
	Disabling	Control Key	with Condition	ons	→ 3rd digit
	1st digit of CONTROL	Black-and- white copying	Remote printing	Remote scanning	
	0	NO	NO	NO	
	1	NO	NO	YES	
	2	NO	YES	YES	
	3	YES	YES	YES	
	4	YES	YES	YES	
		e Reference Ta Control Card	ons		
	2nd digit of CONTROL	Black-and- white copying			
	0	NO			
	1	NO			
	2	NO			
	3				
	4	YES			
	Note: See th	e Reference Ta	able.		

Level 3			Descr	ipti	on			Remarks			
CONTROL	• Disablin	Disabling ID Number Input with Conditions									
	3rd digit of Black-a CONTROL white co		k-and- copying		Remote printing	Remote scanning					
	0	NO	17 0	NC		NO	1				
	1	NO		NO		YES					
	2	NO		YE	ES	YES					
	3	YES		YE	ES	YES					
	4	YES		YE	ES	YES					
	Note: See th	e Refer	ence Ta	ible			-				
	Reference T	able									
	Counter t			ing ol ith	Disabling control card with conditions	Disabling ID No. input with conditions					
	Counter chec		YES		YES	YES					
	CC-V Card	counter	YES		NO	YES					
	CC-X Card	counter	YES		NO	YES					
	- Devi	ce* total	YES		YES	YES] ;	* Copy data controller or			
	ID No. counter		YES YES		YES	NO	┨╢	remote diagnostic device.			
	Yes: increment the count. No: do not increment the count. Guide to the Reference Table The counter on the Counter Check screen is incremented under all conditions; i.e., disabling control key, control card, or ID No. input with conditions. 1 For CC-V In the case of '3' or '4' for black-and-white copying without a card, the CC-V card counter will not be incremented. In the case of '2', '3', or '4' for remote printing						99				
	increment In the card c	nted. se of '2 ounter v	or '4' fowill not	or re	emote prin	r will not be ting, the CC- ed regardless rd.	2-				

Level 3	Description	Remarks
CONTROL	2 For device* The device* total counter is incremented under all conditions; i.e., disabling control key, control card, or ID No. input with conditions. In the case of '3' or '4' for black-and-white copying without a card, the copy data controller card counter will not be incremented. In the case of '2', '3', or '4' for remote printing without a card, the copy data controller card counter will not be incremented. In the case of '2' or '4' for remote printing, the copy data controller card counter will be incremented regardless of the presence/absence of a copy data controller card. 3 With ID No. Registration in Use For '3' or '4' for black-and-white copying without an ID No. input, the counter for the group in question for the ID. No. will not be incremented. For '2', '3', or '4' for remote printing without an ID No. input, the counter for the group in question for the ID No. will not be incremented. For '2' or '4' for remote printing, the counter for the group in question for the ID No. will not be incremented regardless of the presence/absence of an ID No. or password input.	* copy data controller or remote diagnostic device.
	 When CONTROL is set to '002', In the absence of a control key, remote printing and remote scanning are possible. In the absence of a control card, no job is possible. In the absence of an ID No. input, no job is possible. When CONTROL is set to '421', In the absence of a control key, only remote scanning is possible. In the absence of a control card, remote printing and remote scanning are possible. In the absence of an ID No. input, black-and-white copying, remote printing, are remote scanning are possible. 	
COLDOFST	for R&D	
MONO-SPD	for R&D	
CLR-L-SP	Use it to set placement of 2 sides in copier mode.	0: normal
PRJ-L-SP	Use it to set placement of 2 sides when the projector is in use.	1: prohibit in full color 2: prohibit in black mono 3: prohibit at all times
BKL-L-SP	Use it to set placement of 2 sides in back-light mode with the projector in use.	(invalid in printer mode)

CST COPIER>OPTION

Selects cassette-related settings.

Level 3	Description	Remarks
P-SZ-C1	Use it to select a paper size for cassette 1.	See Table 4-11.
P-SZ-C2	Use it to select a paper size for cassette 2 (for CLC1150, cassette 1).	

ACC

Selects accessory-related settings.

Level 3	Description	Remarks
COIN	Use it to turn on/off the coin vendor notation.	
DK-P	Use it to select a paper size for the paper deck.	0: A4 1: B5 2: LTR

INT-FACE

Selects interface-related settings.

Level 3	Description	Remarks
REMOTE	Use it to make settings when an external controller is connected. 0: local; priority on the settings selected on the copier. 1: remote 1; uses parameters selected on the controller, with the remaining settings from the copier 2: remote 2; uses parameters selected on the controller, with the remaining settings from the factory defaults of the copier Note: If you selected '0' for this item, be sure to set all color balance settings under 'print color' of user mode (adjust/cleaning) to '+5'.	default: 2 Controller Parameters
B-CLR	Use it to specify the presence/absence of a copy data controller.	0: not connected (detached) 1: connected
P-PRT-MF	Use it to select priority on settings data for manual pickup with an external image controller in use (local or controller). 0: local; priority on the settings of the copier 1: remote 1; uses parameters selected on the controller, with the remaining settings from the copier 2: remote 2; uses parameters selected on the controller, with the remaining settings from the factory defaults of the copier	Controller Parameters • paper size • paper type • duplexing

Soft Counter Specifications

No.	Counter	Function	Color	Paper size	Count for double-sided sheet	Increment for large- size sheet
0	no indication	-	-	-	-	-
1	total 1	C+P	All	M	-	1
2	total 2	C+P	All	M	-	2
3	total (full color 1)	C+P	4C	M	-	1
4	total (full color 2)	C+P	4C	M	-	2
5	total (mono color)	C+P	Mono	M	-	1
6	total (black-and-white1)	C+P	Bk	M	-	1
7	total (black-and-white2)	C+P	Bk	M	-	2
8	total (large)	C+P	All	L	-	1
9	total (small)	C+P	All	S	-	-
10	copy 1	C	All	M	-	1
11	copy 2	C	All	M	-	2
12	copy (full color 1)	C	4C	M	-	1
13	copy (full color 2)	C	4C	M	-	2
14	copy (mono color 1)	C	Mono	M	-	1
15	copy (mono color 2)	C	Mono	M	-	2
16	copy (black-and-white 1)	C	Bk	M	-	1
17	copy (black-and-white 2)	C	Bk	M	-	2
18	copy (full color, large)	C	4C	L	-	1
19	copy (full color, small)	C	4C	S	-	-
20	copy (mono color, large)	C	Mono	L	-	1
21	copy (mono color, small)	C	Mono	S	-	-
22	copy (black-and-white, large)	C	Bk	L	-	1
23	copy (black-and-white, small)	C	Bk	S	-	-
24	copy (full color, large, double-sided)	С	4C	L	0	1
25	copy (mono color, small, double-sided)	С	4C	S	0	_
26	copy (mono color, large, double-sided)	С	Mono	L	0	1
27	copy (mono color, small, double-sided)	С	Mono	S	0	-
28	copy (black-and-white, large, double-sided)	С	Bk	L	0	1
29	copy (black-and-white, small, double-sided)	С	Bk	S	0	-

Table 4-10a

No.	Counter	Function	Color	Paper size	Count for double-sided sheet	Increment for large- size sheet
30	print 1	P	All	M	-	1
31	print 2	P	All	M	-	2
32	print (full color 1)	P	4C	M	-	1
33	print (full color 2)	P	4C	M	-	2
34	print (mono color 1)	P	Mono	M	-	1
35	print (mono color 2)	P	Mono	M	-	2
36	print (black-and-white 1)	P	Bk	M	-	1
37	print (black-and-white 2)	P	Bk	M	-	2

Table 4-10a

No.	Counter	Function	Color	Paper size	Count for double-sided sheet	Increment for large- size sheet
38	print (full color, large)	P	4C	L	-	1
39	point (full color, small)	P	4C	S	-	_
40	print (mono color, large)	P	Mono	L	-	1
41	print (mono color, small)	P	Mono	S	-	-
42	print (black-and-white, large)	P	Bk	L	-	1
43	print (black-and-white, small)	P	Bk	S	-	-
44	print (full color, large, double-sided)	P	4C	L	0	1
45	print (full color, small, double-sided)	P	4C	S	0	-
46	print (mono color, large, double-sided)	P	Mono	L	0	1
47	print (mono color, small, double-sided)	P	Mono	S	0	_
48	print (black-and-white, large, double-sided)	P	Bk	L	0	1
49	print (black-and-white, small, double-sided)	P	Bk	S	0	_
54	copy scan (full color, large)	S	4C	L	-	1
55	copy scan (full color, small)	S	4C	S	-	-
56	copy scan (black-and-white, large)	S	Bk	L	-	1
57	copy scan (black-and-white, small)	S	Bk	S	-	-
58	copy + print (full color, large)	C+P	4C	L	-	1
59	copy + print (full color, small)	C+P	4C	S	-	-
60	copy + print (black-and-white, large)	C+P	Bk	L	-	1
61	copy + print (black-and-white, small)	C+P	Bk	S	-	-
62	copy + print (black-and-white 2)	C+P	Bk	M	-	2
63	copy + print (black-and-white 1)	C+P	Bk	M	-	1
64	copy + print (full color + mono color, large)	C+P	4C+Mono	L	-	1
65	copy + print (full color + mono color, small)	C+P	4C+Mono	S	-	-
66	copy + print (full color + mono color , 2)	C+P	4C+Mono	M	-	2
67	copy + print (full color + mono color, 1)	C+P	4C+Mono	M	-	1
68	copy (full color + mono color, large)	С	4C+Mono	L	-	1
69	copy (full color + mono color, small)	С	4C+Mono	S	-	-

Table 4-10b

No.	Counter	Function	Color	Paper size	Count for double-sided sheet	Increment for large- size sheet
70	copy (full color + mono color, 2)	С	4C+Mono	M	-	2
71	copy (full color + mono color, 1)	C	4C+Mono	M	-	1
72	print (full color + mono color, large)	P	4C+Mono	L	-	1
73	print (full color + mono color, small)	P	4C+Mono	S	-	-
74	print (full color + mono color, 2)	P	4C+Mono	M	-	2
75	print (full color + mono color, 1)	P	4C+Mono	M	-	1
76	copy + print (large)	C+P	All	L	-	1
77	copy + print (small)	C+P	All	S	-	-
78	copy + print (2)	C+P	All	M	-	2
79	cop + ring (1)	C+P	All	M	-	1

Table 4-10b

No.	Counter	Function	Color	Paper size	Count for double-sided sheet	Increment for large- size sheet
80	copy (large)	С	All	L	-	1
81	copy (small)	C	All	S	-	-
82	print (large)	P	All	L	-	1
83	print (small-size)	P	All	S	-	-
84	total (mono-color, large)	C+P	Mono	L	-	1
85	total (mono-color, small)	C+P	Mono	S	-	-
86	total (black-and-white, large)	C+P	Bk	L	-	1
87	total (black-and-white, small)	C+P	Bk	S	-	-
88	copy scan (full-color)	S	4C	M	-	-
89	copy scan (black-and-white)	S	Bk	M	-	-
90	copy scan (large)	S	All	L	-	-
91	copy scan (small)	S	All	S	-	-
92	copy scan (total)	S	All	M	-	-
93	copy scan (large-size; 4)	S	All	L	-	-
94	copy scan (small-size; 4)	S	All	S	-	-
95	copy scan (total; 4)	S	All	M	-	-

Table 4-10c

Guide to the table

Function

C: copy, P: print, S: scan

Color

4C: 4-color full

MONO: yellow, magenta, cyan

Bk: black

ALL: 4C, MONO, and Bk

Paper Size

L: large-size (larger than B4)

S: small-size (B4 and smaller)

M: both large and small

Count at Duplexing

O: incremented by 1

-: same as normal copying

Count Increment for Large-Size Paper

1: incremented by 1

2: incremented by 2

Codes and Cassette Paper Sizes

Code	Notation	Paper	Code	Notation	Paper
01	A1	A1	21	LGL	Legal
02	A2	A2	22	K-LGL	Korean Government
03	A3R	A3R	23	K-LGLR	Korean Government R
04	A3	A3	24	FLSC	Foolscap
05	A4R	A4R	25	A-FLS	Australian
06	A4	A4	26	OFI	Foolscap
07	A5	A5	27	E-OFI	Oficio
08	A5R	A5R	28	B-OFI	Ecuadorian Officio
09	B1	B1	29	A-LTR	Bolivian Officio
10	B2	B2	30	A-LTRR	Argentine Letter
11	В3	В3	31	G-LTR	Argentine Letter-R
12	B4R	B4R	32	G-LTRR	Government Letter
13	B4	B4	33	A-LGL	Government Letter-R
14	B5R	B5R	34	G-LGL	Argentine Legal
15	B5	B5	35	FGLI	Government Legal
16	11x17	11x17	36	FOLI	Folio
17	LTRR	Letter-R	37	A-OFI	Argentine Officio
18	LTR	Letter	38		
19	STMT	Statement	39		
20	STMTR	Statement-R	40	ALL	

Table 4-11

Projector-Related Items

PRJ>OPTION

Level 3	Description	Remarks
BK-LIGHT (not used)	Use it to enable or disable indication of a mode on the User screen when copying positive film with a protective sheet using back light BOX.	0: do not indicate 1: indicate default: 0


Editor-Related Items

EDITOR>OPTION

Level 3	Description	Remarks
ED-MODE	Use it to switch editor operation mode.	0: prohibit input 1: 1-point input 2: continuous input

G. PG (test print)

COPIER>TEST Items

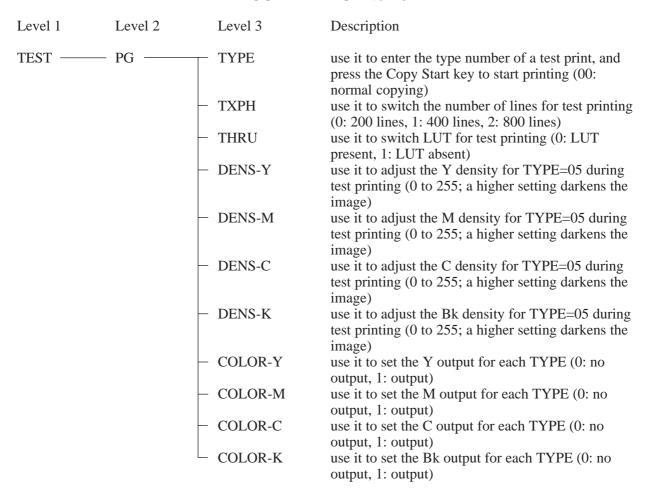

PG COPIER>TEST

Generates test prints.

Level 3	Description	Remarks
ТҮРЕ	Use it to enter the type No. of a test print, and press the Copy Start key to start printing.	00: normal copying See Table 4-12. Be sure to set it back to '00' at the end of test printing.
ТХРН	Use it to switch the number of lines used for test printing.	0: 200 lines 1: 400 lines 2: 800 lines
THRU DENS-Y DENS-M DENS-C DENS-K	Use it to switch LUT used for test printing.	0: LUT present 1: LUT absent 0 to 255
COLOR-Y COLOR-M COLOR-C COLOR-K	Use it to set the output (each color) for each TYPE. • For example, to generate on M mono test print, set COLOR-M to '1', and others to '0'.	0: do not generate 1: generate You can generate no more than one color.

Input Numbers and Test Prints

Input No.	Description	Input No.	Description
00	image from CCD (normal copying)	10	MCYK horizontal stripes (laser FF
01	for R&D		activation)
02	256 colors	11	for R&D
03	256 gradations	12	MCYK 64 gradations
04	16 gradations (17 gradations)	13	BGR64 gradations
05	100% halftone	14	full color 16 gradations (17 gradations)
06	grid	15	full color light area 16 gradations (17
07	for R&D		gradations)
08	for R&D	16	MCYK horizontal stripes (laser A0 activation)
09	for R&D	-	-

Table 4-12


H. COUNTER (counter mode)


• You can check the number of times each mechanism has operated.


Resetting a Counter Reading


- 1) Select an item to highlight.
- 2) Press the Clear key on the control panel. The counter will be reset to '00000000'.
- Here, the notations "large-size" and "small-size" are used as follows: large size covers B4 or larger sheets small size covers sheets smaller than B4.

COPIER>COUNTER Items

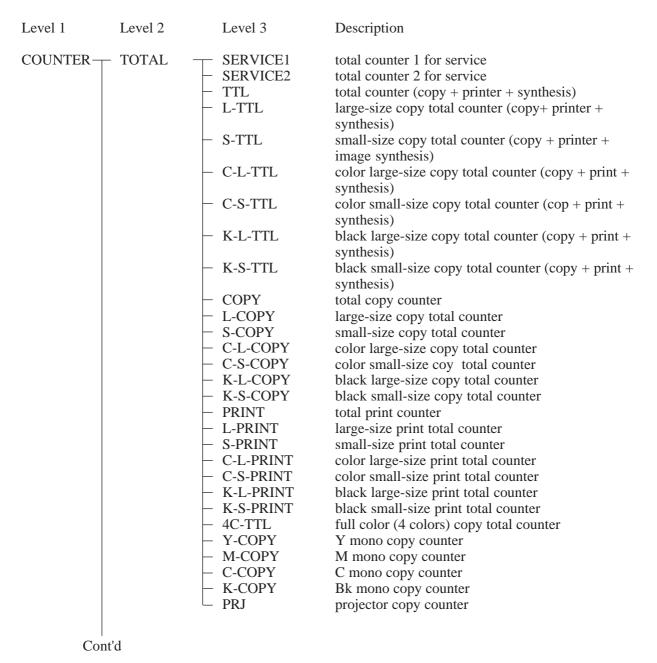

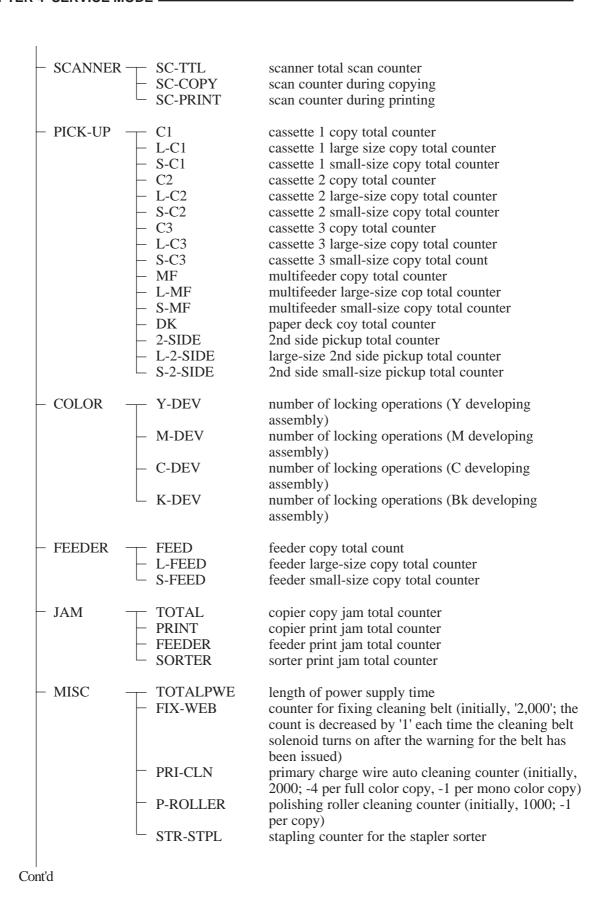

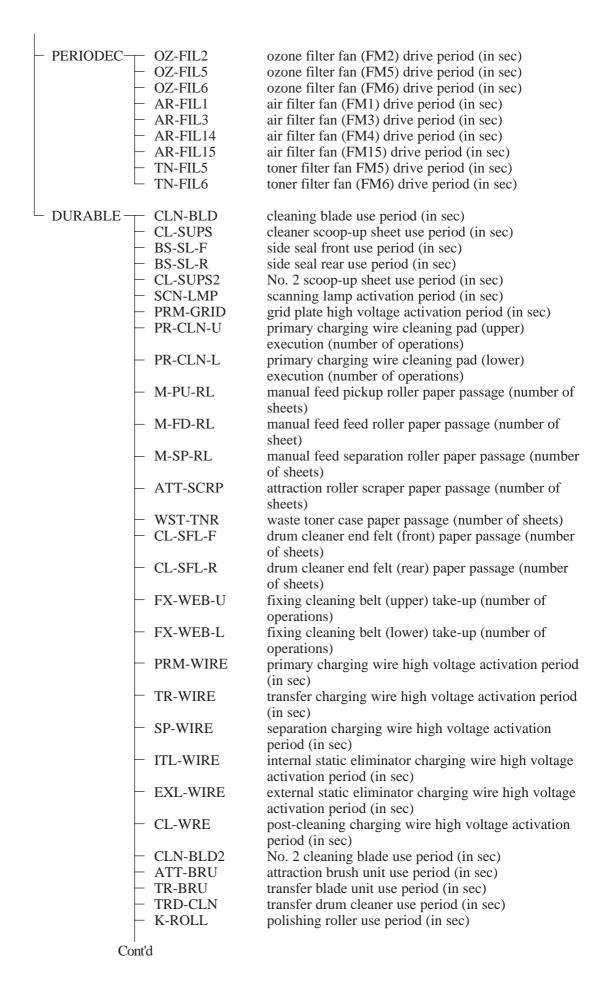

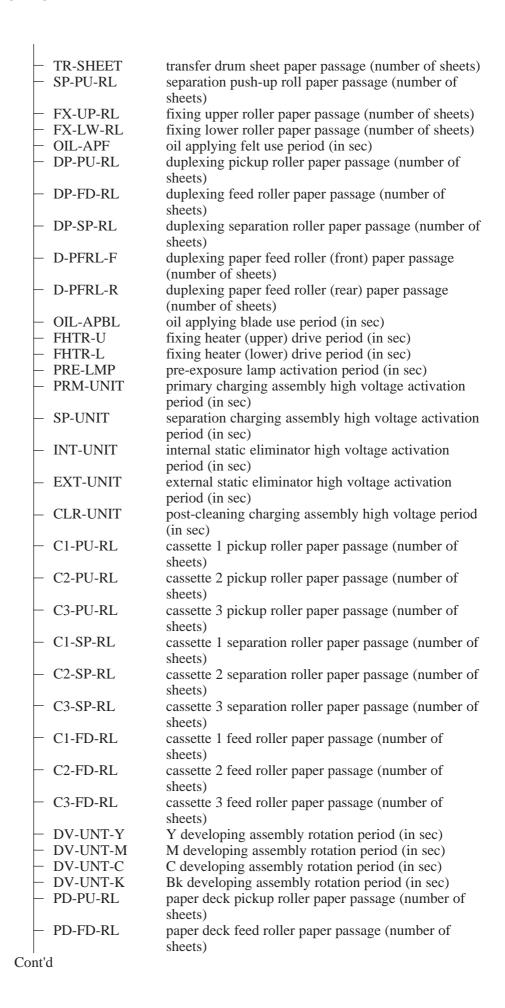

PD-SP-RL paper deck separation roller paper passage (number of sheets)

FX-IN-BS fixing insulating bush paper passage (number of sheets)

CHAPTER 5 SELF DIAGNOSIS

A. Copier

The R-CPU and the DC-CPU of the copier's CPU PCB are equipped with a self diagnostic mechanism to check the state of the machine (particularly, the condition of sensors). The mechanism runs checks as needed, and indicates a code on the control panel when it finds a fault.

The tables that follow show codes and timing of detection, the latter with discussions of detail codes indicated in service mode (COPIER>DISPLAY>JAM/ERR).

Code	Cause	Timing of detection
E000	The discussions that follow are compiled according to detail code.	xx indicates a heater. xx=01: upper heater xx=02: lower heater
	 The fixing thermistor is faulty. The SSR is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	xx01 The high temperature detection circuit on the DC driver PCB has detected overheating (220°C or more) in the middle of the heater.
		xx02 The thermistor (THM1/ THM3) has detected 210°C.
		xx04 The high temperature detection circuit on the DC driver PCB has detected overheating on the ends of the heater (220°C or more).
	 The fixing thermistor is faulty. The fixing heater (H1, H2) has an open circuit. The thermal switch (TP2, TP3) has an open circuit. The SSR is faulty. 	xx05 The open-circuit detection circuit of the DC driver PCB has determined that the difference in temperature (as detected by thermistors) between the middle and the end is 50°C or more.
		xx21 The temperature does not increase by 3°C or more in 4 min at power-on (i.e., the temperature of the fixing assembly is 100°C or less).
		xx32 At power-on (i.e., the temperature of the fixing assembly is 100°C or more or 130°C or more), the temperature does not increase by 1°C or more in 2 min.
		xx40 A temperature of 50°C or less has been detected for 1 sec or more during standby.
		xx50 A temperature of 50°C or less has been detected for 1 sec or more during copying.

Code	Cause	Timing of detection
E004 (Note 3)	 The SSR1 has a short circuit. The CPU PCB is faulty. DC driver PCB is faulty.	xx indicates a heater. xx=01: upper heater xx=02: lower heater
		xx03 The gate array of the DC driver PCB has determined that SSR1 (for the fixing heater) is on for about 1.6 sec or more even after the DC-CPU turned it off.
E005 (Note 2)	 The cleaning belt inside the fixing assembly has been taken up for a specific length. The fixing cleaning belt length sensor (PS11/PS67) is faulty. The DC driver PCB is faulty. 	0100 As many as 2,000 copies have been made after the fixing upper cleaning belt length sensor detected the sensor lever and indicated a warning on the control panel.
	• The CPU PCB is faulty.	0200 As many as 2,000 copies have been made after the fixing lower cleaning belt length sensor detected the sensor lever and indicated a warning on the control panel.
E006	 The drawer connector of the fixing unit is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	0000 During copying operation, the connecton signal (CNCT*) for the fixing assembly drawer connector goes '1'.
E008	 The fixing oil pump driver PCB is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	0000 The fixing oil pump driver PCB does not generate the drive signal even when the fixing oil pump drive signal has been turned on.
		0001 The fixing oil pump driver PCB generate the drive signal even when the fixing oil pump drive signal has been turned off.
E010	 The main motor (M4) is faulty. The main motor drive system is subjected to an overload. The main motor driver PCB is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	The main motor ready signal (MNMRDY) is '0' for 1 sec or more while the main motor is rotating.
E012	 The drum motor (M2) is faulty. The drum motor drive system is subjected to an overload. The DC driver PCB is faulty. The CPU PCB is faulty. 	0001 Not used. 0002 The drum motor ready signal (DRMRDY) is '0' for 1 sec (4 sec during deceleration) while the drum motor is rotating.
E013	 The waste toner feedscrew lock detecting switch (SW7) is faulty. The waste toner feedscrew is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	The waste toner feedscrew cannot rotate, and the waste toner feedscrew lock detecting switch has been pressed.

Code	Cause	Timing of detection
E014	 The fixing motor (M5) is faulty. The fixing motor drive system is subjected to an overload. The DC driver PCB is faulty. The CPU PCB is faulty. 	0000 The motor lock signal (FXMLK) is '0' for 1 sec or more while the fixing motor is rotating.
E016	 The cleaning blade reciprocating motor (M7) is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	The cleaning blade reciprocating motor driver circuit on the DC driver PCB has detected an overcurrent for 0.1 sec or more.
E017	 The duplexing motor (M14) is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	The duplexing motor clock signal (DUPMLK) is '0' for 1 sec or more while the duplexing motor is rotating.
E020	The discussions that follow are compiled according to detail code.	Toner Concentration Fault xx indicates the color of a developing assembly. xx=00: MCYBk in common xx=01: M xx=02; C xx=03: Y xx=04: Bk The notations used herein means the following: SGNL: toner concentration signal REF: concentration signal DENS: developer concentration inside developing assembly SIGG: gain value for concentration reference signal PT-REF: concentration reference signal for photosensitive drum surface PT-STG-D: reflection light intensity signal for photosensitive drum surface
	 The toner concentration sensor is faulty. The developer inside the developing assembly is not stirred properly. The sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated. 	xx00 The connector is disconnected or there is an open circuit; the REF or SGNL level is '50' or less xx12 At time of setting initial data (as during installation), the variation of SGNL-M/C/Y levels for ten concentration data samplings is '70' or more.

Code	Cause	Timing of detection
E020	faulty. • The developer inside the developing assembly is not stirred properly. • The sensor is subjected to stray	xx13 At time of setting initial data (as during installation), the variation of REF-M/C/Y levels for ten concentration data samplings is '70' or more. xx16 At time of setting initial data
	light (no cover, front cover open). • The photosensitive drum has deteriorated.	(as during installation), the variation of PT-SIG-M/C/Y levels for 16 concentration data samplings is '102' or more.
		xx17 At time of setting initial data (as during installation), the variation of PT-REF-M/C/Y levels for 16 concentration data samplings is '70' or more.
		xx20 At time of setting initial data (as during installation), the result of averaging samplings of SGNL-M/C/Y levels is '777' or less.
		xx21 At time of setting initial data (as during installation), the result of averaging samplings of REF-M/C/Y levels is '200' or less.
		xx23 At time of setting initial data (as during installation), the result of averaging samplings of PT-REF-M/C/Y levels is '777' or less.

Code	Cause	Timing of detection
E020	 The toner concentration sensor is faulty/soiled. The developer inside the developing assembly is not stirred properly. The sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated. 	xx24 At time of setting initial data (as during installation), the result of averaging five retry samplings of PT-SIG-M/C/Y levels is '683' or less or that of PT-SIG-K levels is '305' or less.
		xx30 At time of setting initial data (as during installation), the result of averaging samplings of SGNL-M/C/Y levels is '859' or more.
		xx31 At time of setting initial data (as during installation), the result of averaging samplings of REF-M/C/Y levels is '930' or more.
	 The toner concentration sensor is faulty. The developer inside the developing assembly is not stirred properly. The sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated. The window of the toner concentration 	xx32 At time of setting initial data (as during installation), the result of averaging the first sampling of PT-SIG-M/C/Y levels is '930' or more or that of PT-SIG-K levels is '550' or more.
	sensor is soiled or scratched, or the protective sheet is soiled. • The photosensitive drum is soiled (e.g., cleaning fault).	xx33 At time of setting initial data (as during installation), the result of averaging samplings of PT-REF-M/C/Y levels is '859' or more.
		xx34 At time of setting initial data (as during installation), the result of averaging five retry samplings of PT-SIG-M/C/Y levels is '749' or more or that of PT-SIG-K levels is '371' or more.

Code	Cause	Timing of detection
E020	 The toner concentration sensor is faulty. The developer inside the developing assembly is not stirred properly. The sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated. The window of the toner concentration sensor is soiled or scratched, or the protective sheet is soiled. The photosensitive drum is soiled (e.g., cleaning fault). 	xx40 At time of setting initial data (as during installation), gain setting cannot be performed (the level of SIGG-M/C/Y is 'E0' or more or '20H' or less). 0441 At time of setting initial data (as during installation), gain setting cannot be performed (the level of RGAIN-K is 'E0' or more or '20H' or less).
		xx42 At time of setting initial data (as during installation, gain setting cannot be performed (the level of SIGG-P-M/C/Y/K is '250' or more or '40' or less).
		xx43 At time of setting initial data (as during installation, gain setting cannot be performed (the level of RGAN-P-M/C/Y/K is '250' or more or '40' or less).
	The backup data on the CPU PCB is faulty* or the initial settings have not been made. *Be sure to initialize the RAM of the DC-CPU and enter the values recorded on the service label.	xx50 During copying sequence, gain setting cannot be performed because of an error in the memory backup data (the level of SIGG-M/C/Y is 'E0' or more or '20H' or less).
		0451 During copying sequence, gain setting cannot be performed because of an error in the memory backup data (the level of RGAIN-K is 'E0' or more or '20H' or less).
		xx52 During copying sequence, gain setting cannot be performed because of an error in the memory backup data (the level of SIGG-P-M/C/Y/K is '250' or more or '40' or less).

Code	Cause	Timing of detection	
E020	The backup data on the CPU PCB is faulty* or the initial settings have not been made. *Be sure to initialize the RAM of the DC-CPU and enter the values recorded on the service label.	xx53 During copying sequence, gain setting cannot be performed because of an er in the memory backup data (the level of RGAN-P-M/C K is '250' or more or '40' or less).	C/Y/
		xx60 During copying sequence, to level of SGNL-M/C/Y set initially is '777' or less because of an error in the memory backup data.	he
		xx61 During copying sequence, t level of REF-M/C/Y set initially is '200' or less because of an error in the memory backup data.	he
		xx62 During copying sequence, t level of PT-REF-M/C/Y set initially is '777' or less because of an error in the memory backup data.	
		xx63 During copying sequence, to level of PT-SIG-M/C/Y is '683' or less or that of PT-SIG-M is '305' or less because of error in the memory backup data.	IG- f an
		xx64 During copying sequence, t level of PT-REF-D is '400' less because of an error in t memory backup data.	or
		xx65 During copying sequence, to level of PT-SIG-D is '400' or less because of an error in to memory backup data.	or
		xx66 During copying sequence, t level of D-M-TRGT/D-C- TRGT/D-Y-TRGT (develop target value) is '700' or less because of an error in the memory backup data.	per
		xx70 During copying sequence, t level of SGNL-M/C/Y set initially is '859' or more because of an error in the memory backup data.	he
		xx71 During copying sequence, t level of REF-M/C/Y set initially is '930' or more because of an error in the memory backup data.	he

Code	Cause		Timing of detection	
E020	The backup data on the CPU PCB is faulty* or the initial settings have not been made. *Be sure to initialize the RAM of the DC-CPU and enter the values recorded on the service label.		During copying sequence, the level of PT-REF-M/C/Y/K set initially is '859' or more because of an error in the memory backup data. During copying sequence, the level of PT-SIG-M/C/Y set initially is '749' or more or that of PT-SIG-K is '371' or more because of an error in the memory backup data.	
		xx74	During copying sequence, the level of PT-REF-D set initially is '1000' or more because of an error in the memory backup data.	
		xx75	During copying sequence, the level of PT-SIG-D set initially is '1000' or more because of an error in the memory backup data.	
	 The developing cylinder fails to rotate. The developing assembly is not locked. The toner concentration (patch detection) sensor is faulty. The developer inside the developing assembly is faulty. The toner level sensor is faulty. The concentration sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated. 	xx76	During copying sequence, the level of D-M-TRGT/D-C-TRGT/D-Y-TRGT (developer target value) is '930' or more because of an error in the memory backup data.	
		 The developing cylinder fails to rotate. The developing assembly is not locked. The toner concentration (patch detection) sensor is faulty. The developer inside the developing assembly is faulty. The toner level sensor is faulty. 	xx80	When samplings are taken during copying sequence, the level of WINDOW-M/C/Y/K (window soiling correction coefficient) is '130%' or more.
			xx81	When samplings are taken during copying sequence, the level of WINDOW-M/C/Y/K (window soiling correction coefficient) is '70' or less.
		xxA0	When samplings are taken during copying sequence, the level of SGNL-M/C/Y is '306' or less.	
		xxA1	When samplings are taken during copying sequence, the level of REF-M/C/Y set initially decreases (intensity) by 30% or more.	
		xxA2	When samplings are taken during copying sequence, the level of PT-SIG-K is '51' or less.	

Code	Cause	Timing of detection
E020	 The developing cylinder fails to rotate. The developing assembly is not locked. The toner concentration (patch detection) sensor is faulty. The developer inside the developing assembly is faulty. The toner level sensor is faulty. The concentration sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated. 	xxB0 When samplings are taken during copying sequence, the level of SGNL-M/C/Y is '1020' or more (when feeding 10 sheets or more continuously). xxB1 When samplings are taken during copying sequence, the level of REF-M/C/Y set initially increases (intensity) by '30%' or more. xxB2 When samplings are taken during copying sequence, the level of PT-SIG-M/C/Y is '1020' or more and that of PT-SIG-K is '550' or more. xxC0 When samplings are taken during copying sequence, the level of DENS-M/C/Y/K is '+3%' (when feeding 20 sheets continuously). xxD0 When samplings are taken during copying sequence, the level of DENS-M/C/Y/K is '+3%' (when feeding 20 sheets '+3%'
	 The developer has deteriorated. The developing cylinder fails to rotate. The developer is not locked. The toner concentration sensor is faulty. The developer inside the developing assembly is not stirred properly. The toner level sensor is faulty. The sensor is subjected to stray light (no cover, front cover open). The photosensitive drum has deteriorated, or the toner level sensor is faulty. The hopper motor is faulty. The hopper motor has an open circuit. 	or more continuously). xxE0 When samplings are taken during copying sequence, the level of DENS-M/C/Y/K has exceeded '-5%'. 00FF After the hopper motor has turned on, the hopper motor lock signal (HOPMLK) is '0' for 0.1 sec or more. xxFF After the hopper motor has turned on, the hopper motor lock signal (HOPMLK) is '0' for 0.1 sec or more (the toner supply clutch is on).

Code	Cause		Timing of detection
E021	 The developing locking motor (PM1, PM2, PM3, PM4) is faulty. The developing assembly HP sensor (PS49, PS51, PS53, PS55) is faulty. The developing locking driver 	0200 V tl	When the power switch is on, he M developing assembly HP sensor is '0'. When the power switch is on, he C developing assembly HP sensor is '0'.
	PCB is faulty. • The DC driver PCB is faulty. • The CPU PCB is faulty.	0300 V	When the power switch is on, he Y developing assembly HP sensor is '0'.
		tl	When the power switch is on, he Bk developing assembly HP sensor is '0'.
		a d	When the developing assembly is locked, the M leveloping assembly HP ensor is '1'.
		a d	When the developing assembly is locked, the C leveloping assembly HP ensor is '1'.
		a d	When the developing assembly is locked, the Y leveloping assembly HP ensor is '1'.
		a d	When the developing assembly is locked, the Bk leveloping assembly HP ensor is '1'.
E030	 The jumper connector of J1050 on the DC driver PCB is disconnected. The DC driver PCB is faulty. 		circuit is detected in the switching signal.
E040	 The lifter motor drive system is subjected to an overload. The lifter motor (M11, M12/ 	n	When the cassette 1 lifter notor is on, an overcurrent is letected in the motor.
	DM12, M13/DM13, M15) is faulty. • The CPU PCB is faulty.	n	When the cassette 2 (for CLC1150, cassette 1) lifter notor is on, an overcurrent is letected in the motor.
		C n	When the cassette 3 (for CLC1150, cassette 2) lifter notor is on, an overcurrent is letected in the motor.
		n u	When the multifeeder lifter notor is on (lifter is moving up), an overcurrent is detected in the motor.
		n d	When the multifeeder lifter notor is on (lifter is moving lown), an overcurrent is letected in the motor.

Code	Cause	Timing of detection		
E041	 The deck lifter motor (M101) is faulty. The deck lifter position sensor (PS104) is faulty. The deck lifter cable is broken. The deck driver PCB is faulty. 	The deck lifter position sensor cannot detect the deck lifter even when the deck lifter UP signal has been kept on for a specific period of time.		
E050	 The duplexing paper jogging guide motor (PM14) is faulty. The duplexing paper jogging guide HP sensor (PS40) is faulty. The duplexing driver PCB is faulty. The CPU PCB is faulty. 	 O000 The paper jogging guide HP sensor does not go '0' when the paper jogging motor has been kept on for a specific period of time. O001 The paper jogging guide HP sensor does not go '1' when the paper jogging guide motor has been kept on for a specific period of time. 		
E061		Potential Control-Related Error VdI: potential during initial rotation Vd5: post-cleaning charging area during dark area attenuation potential measurement VL5: area of Vd5 where charges have been removed by pre-exposure lamp offset value: value determined in service mode (FUNCTION>DPC>OFST) xx indicates the color of a developing assembly. xx=01: M xx=02: C xx=03: Y xx=04: Bk		
	 The potential sensor is faulty. The pre-exposure lamp is faulty. 	0000 The offset value is not 100 ± 50. 0001 All Vd/VL is 10 V or less. 0010 VL5 is 100V or more.		
	The primary high-voltage output is faulty.	0020 Vd1/Vd2/VdI is 30V or less.		
	• The grid bias is absent.	0030 Vd1/Vd2/VdI is 100 V or less.		
	The grid bias is not controlled properly.	0031 VdI/Vd2/VdI is 900 V or more.		
	The grid bias output is faulty.	0032 The difference between Vd1 and Vd2 is 100 V or less.		
	• The post-cleaning charging output is faulty.	0040 Vd5-Vd3 is 100 V or less.		
	 The laser emission is faulty. The bending mirror is faulty. The laser shutter is faulty. 	0050 The difference between Vd1 and VL1 is 30 V or less and, in addition, Vd1 is 350 V or more; or, the difference between Vd2 and VL2 is 30 V or less and, in addition, Vd2 is 550 V or more.		

Code	Cause	Timing of detection
E061	• The laser is faulty.	0051 Vd1 is 300 V or less and, in addition, Vd2 is 500 V or less.
	 The laser light is inadequate. The bending mirror is faulty. The laser shutter is faulty.	0052 VL1 is 200 V or more and, in addition, VL2 is 250 V or more.
	• The laser is faulty.	0053 Vd1 is 100 V or less and, in addition, is 150 V or less.
	The dark area potential attenuation is at the upper control limit.	0060 The dark are potential attenuation value is 150 V or more.
	The grid bias is at the upper control limit.	0070 The grid bias output value is 900 V or more.
	The grid bias is at the lower control limit.	0071 The grid bias output value is 100 V or less.
	• The developing bias is at the upper control limit.	xx80 The developing bias output value is 700 V or more.
	• The developing bias is at the lower control limit.	xx81 The developing bias output value is 200 V or less.
	 Vd1 is at the upper measurement limit. The photosensitive drum has deteriorated. 	0090 Vd1 is 700 V or more.
	• VL1 is at the upper measurement limit.	0091 VL1 is 200 V or more.
	• Vd2 is at the upper measurement limit.	0092 Vd2 is 850 V or more.
	• VL2 is at the upper measurement limit.	0093 VL2 is 250 V or more.
	• Vd1 is at the lower measurement limit.	0094 Vd1 is 350 V or less.
	• VL1 is at the lower measurement limit.	0095 VL1 is 10 V or less.
	• Vd2 is at the lower measurement limit.	0096 Vd2 is 550 V or less.
	• VL2 is at the lower measurement limit.	0097 VL2 is 50 V or less.

Code	Cause	Timing of detection
E062	SSR2 has a short circuit.The CPU PCB is faulty.	While the DC-CPU keeps the cassette heater/drum heater SSR2 off, SSR2 is on.
E067	 The separation charging assembly is faulty. The internal/external static eliminator is faulty. The HVT-AC PCB is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	An error signal (AC-ERR*=0) has been generated by the HVT-PCB.
E071	 The side A sensor (PS2) is faulty. The side B sensor (PS3) is faulty. The C sensor (PS4) is faulty. The signal plate is faulty. The drum motor drive system is subjected to an overload. The transfer drum is not locked properly. The DC driver PC is faulty. The CPU PCB is faulty. 	F000 The side A sensor, side B sensor, or C sensor does not detect the signal plate within 10 sec after the operation to lock the transfer drum has started. 0001 There is an error in the falling edge timing of the signal plate detected by the side B sensor. 0002 There is an error in the rising edge timing of the signal plate detected by the side B sensor. 0003 There is an error in the rising edge timing of the signal plate detected by the C sensor. 0004 There is an error in the falling edge timing of the single plate C detected by the C sensor. 0005 There is an error in the rising edge timing of the signal plate detected by the side A sensor. 0006 There is an error in the falling edge timing of the signal plate detected by the side A sensor. 0006 There is an error in the rising edge timing of the signal plate detected by the side A sensor. 0007 There is an error in the rising edge timing of the signal plate D detected by the C sensor. 1001 The falling edge signal of the signal plate D detected by the C sensor. 1001 The falling edge signal of the signal plate D detected by the C sensor is not generated after the falling edge signal of the signal plate D detected by the C sensor has been generated.

Code	Cause		Timing of detection
E071	 The side A sensor (PS2) is faulty. The side B sensor (PS3) is faulty. The C sensor (PS4) is faulty. The signal plate is faulty. The drum motor drive system is subjected to an overload. The transfer drum locking 	1002	The rising edge signal of the signal plate to be detected by the side B sensor is not generated after the rising edge signal of the signal plate C detected by the C sensor has been generated.
	mechanism is faulty. • The DC driver PCB is faulty. • The CPU PCB is faulty.	1003	The rising edge signal of the signal plate C to be detected by the C sensor is not generated after the falling edge of the signal plate detected by the side B sensor has been generated.
		1004	The falling edge signal of the signal plate C to be detected by the C sensor is not detected after the rising edge of the signal plate detected by the side B sensor has been generated.
		1005	The rising edge signal of the signal plate to be detected by the side A sensor is not generated after the falling edge of the signal plate C detected by the C sensor has been generated.
		1006	The falling edge signal of the signal plate to be detected by the side A sensor is not generated after the rising edge of the signal plate D detected by the C sensor has been generated.
		1007	The rising edge signal of the signal plate D to be detected by the C sensor is not generated after the rising edge signal of the signal plate detected by the side A sensor has been generated.
		1008	The rising edge signal of the signal plate D to be detected by the C sensor is not generated after the falling edge signal of the signal plate detected by the side A sensor has been generated.

Code	Cause		Timing of detection
E071	 The side A sensor (PS2) is faulty. The side B sensor (PS3) is faulty. The C sensor (PS4) is faulty. The signal plate is faulty. The drum motor drive system is subjected to an overload. The transfer drum locking 	1101	The falling edge signal of the signal plate to be detected by the side B sensor is generated 10 ms earlier after the falling edge signal of the signal plate D detected by the C sensor has been generated.
	mechanism is faulty. • The DC driver PCB is faulty. • The CPU PCB is faulty.	1102	The rising edge signal of the signal plate to be detected by the side B sensor is generated 10 ms earlier after the rising edge signal of the signal plate C detected by the C sensor has been generated.
	 Side A sensor (PS2) is faulty. Side B sensor (PS3) is faulty. The C sensor (PS4) is faulty. The signal plate is faulty. The drum motor drive system is subjected to an overload. The transfer drum is not locked 	1103	The rising edge signal of the signal plate C to be detected by the C sensor is generated 10 ms earlier after the falling edge signal of the signal plate detected by the side B sensor has been generated.
	properly. • The DC driver PCB is faulty. • The CPU PCB is faulty.	1104	The falling edge signal of the signal plate C to be detected by the C sensor is generated 10 ms earlier after the rising edge signal of the signal plate detected by the side B sensor has been generated.
		1105	The rising edge of the signal plate to be detected by the side A sensor is generated 10 ms earlier after the falling edge signal of the signal plate C detected by the C sensor has been generated.
		1106	The falling edge signal of the signal plate to be detected by the side A sensor is generated 10 ms earlier after the rising edge signal of the signal plate D detected by the C sensor has been generated.
		1107	The rising edge signal of the signal plate D to be detected by the C sensor is generated 10 ms earlier after the rising edge of the signal 1 plate to be detected by the side A sensor has been generated.

Code	Cause	Timing of detection
E071	 Side A sensor (PS2) is faulty. Side B sensor (PS3) is faulty. The C sensor (PS4) is faulty. The signal plate is faulty. The drum motor drive system is subjected to an overload. The transfer drum is not locked 	1108 The rising edge signal of the signal plate D to be detected by the C sensor is generated 10 ms earlier after the falling edge signal of the signal plate detected by the side A sensor has been generated.
	properly. • The DC driver PCB is faulty. • The CPU PCB is faulty.	1201 The falling edge signal of the signal plate to be detected by the side B sensor is generated 10 ms later after the falling edge signal of the signal plate D detected by the C sensor has been generated.
		1202 The rising edge signal of the signal plate to be detected by the side B sensor is generated 10 ms later after the rising edge signal of the signal plate C detected by the C sensor has been generated.
		1203 The rising edge signal of the signal plate C to be detected by the C sensor is generated 10 ms later after the falling edge signal of the signal plate detected by the side by side B sensor has been generated.
		1204 The falling edge signal of the signal plate C to be detected by the C sensor is generated 10 ms later after the rising edge signal of the signal plate detected by the side B sensor has been generated.
		1205 The rising edge signal of the signal plate to be detected by the side A sensor is generated 10 ms later after the falling edge signal of the signal plate C detected by the C sensor has been generated.
		1206 The falling edge signal of the signal plate to be detected by the side A senor is generated 10 ms later after the rising edge signal of the single plate D detected by the C sensor has been generated.

Code	Cause		Timing of detection
E071	 The side A sensor (PS2) is faulty. The side B sensor (PS3) is faulty. The C sensor (PS4) is faulty. The signal plate is faulty. The drum motor drive system is subjected to an overload. The transfer drum is not locked 		The rising edge signal of the signal plate D to be detected by the C sensor is generated 10 ms later after the rising edge signal of the signal plate detected by the side A sensor has been detected.
	properly.The DC driver PCB is faulty.The CPU PCB is faulty.	1208	The rising edge signal of the signal plate to be detected by the C sensor is generated 10 ms later after the falling edge signal of the signal plate detected by the side A sensor has been generated.
E072	 The transfer drum cleaner brush motor (M8) is faulty. The polishing roller motor (M9) is faulty. The motor drive system is subjected to an overload. The attraction/transfer locking cam motor (PM7) is faulty. The attraction/transfer locking cam 	0002	The motor lock signal (TRCMLK) is '0' for 1 sec or more while the transfer drum cleaner brush motor is rotating. An overcurrent is detected for 1 sec or more while the polishing roller motor is rotating.
	 HP sensor (PS8) is faulty. The registration path driver PCB is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	0202	The attraction/transfer looking cam HP sensor does not go '1' within 4 sec after the attraction/transfer locking cam motor has started to rotate.

Code	Cause	Timing of detection
 The transfer unit drawer connector is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	0001 During copying, the drawer connect signal (FT-CNCT*) of the transfer unit lever is '1'. 0002 During copying operation, the	
		connection signal (TD-CNCT) of the drawer connector of the transfer unit is '1'.
		0003 During copying, the drawer connect signal (CONNECT*) of the registration path unit is '1'.
E074	 The transfer drum locking motor (PM5) is faulty. The transfer drum HP sensor (PS57) is faulty. The transfer locking driver PCB is faulty. 	0000 The transfer drum HP sensor does not go '1' when the transfer drum locking motor has been kept on for a specific period of time.
	faulty. • The DC driver PCB is faulty. • The CPU PCB is faulty.	0001 The transfer drum HP sensor does not go '0' when the transfer drum locking motor has been kept on for a specific period of time.
E079	 The transfer drum cleaner HP sensor (PS59) is faulty. The transfer locking driver PCB is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	0000 The transfer drum cleaner HP sensor does not go '1' when the transfer drum cleaner locking motor has been kept on for a specific period of time.
		0001 The transfer drum cleaner HP sensor does not go '0' when the transfer drum cleaner locking motor has been kept on for a specific period of time.
E100	 The laser unit is faulty. The laser driver PCB is faulty. The laser controller PCB is faulty. The CPU PCB is faulty. 	The BD signal cannot be detected for 1 sec or more when potential control operation starts.
E110	 The laser scanner motor (M3) is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	0000 The laser scanner motor ready signal (LSMRDY) is '1' for 0.5 sec or more while the laser scanner motor is rotating.
E120	The laser controller unit (laser thermistor, laser heater, laser	0001 The laser heater temperature has exceeded 60°C.
	controller PCB) is faulty. • The CPU PCB is faulty.	0002 When the machine internal temperature is 20°C or more, the laser heater does not reach a specific temperature within 20 min.
E190	The laser controller PCB is faulty.The CPU PCB is faulty.	An error has occurred while wiring data to the laser controller PCB from the CPU PCB at power-on.
E191	 The connector of the DC driver PCB is disconnected. The DC fuse PCB is faulty (blown fuse). The DC driver PCB is faulty. 	0000 At powe-on, a read/write error occurred in the register of the DC driver PCB.

Code	Cause	Timing of detection
(E202) No code indication; keys are disabled.	 The original scanner HP sensor (PS1) is faulty. The original scanner motor (PM15) is faulty. The original scanner motor driver PCB is faulty. The CPU PCB is faulty. 	The original scanner home position signal (SCHP) is not generated within 10 sec after the power switch has been turned on or the Copy Start key has been pressed.
E208	 The DC power supply to the original scanner motor driver PCB is faulty. The wiring or connectors are faulty. The original scanner motor driver PC is faulty. The CPU PCB is faulty. 	The communication between the original scanner driver PCB and the CPU PCB is interrupted or 5 sec or more.
E220	 The scanning is faulty. The lamp regulator PCB is faulty. 	During standby, the scanning lamp turns on even though the R-CPU keeps the scanning lamp ON signal off. During copying, the scanning lamp turns off even though the R-CPU keeps the scanning lamp ON signal on.
E305	The IP-MAIN PCB is faulty. The IP-PRJ PCB is faulty. The IP-ED PCB is faulty.	At power-on, RAM access within the IP-MAIN PCB does not take place normally. RAM access within the IP-PRJ PCB or IP-ED PCB does not take place normally. (For E305, the code is indicated when copying is started in projector mode or area select mode.) 0001 BD error (same as E100) 0002 concentration conversion RAM error 0004 B shading correction RAM error 0010 R shading correction RAM error 0010 R shading correction RAM error 0020 color correction RAM error 0040 original scanner motor error 0100 IP-ED PCB RAM error or disconnection 0400 IP-PRJ PCB RAM error 1000 IP-IF PCB RAM error

Code	Cause	Timing of detection
E351	 The IP-MAIN PCB is faulty. The IP-ECO PCB is faulty. The connection between IP-MAIN, IP-ECO PCB, and laser driver PCB is faulty. 	The IP-ECO PCB and the IP-MAIN PCB are not connected. The IP-ECO PCB and its ROM are a poor match.
E620	The IP-ED PCB is faulty.The IP-MAIN PCB is faulty.	The communication between IP-ED-PCB and IP-MAIN PCB is interrupted for 5 sec or more.
E634	The projector lamp is faulty.The projector thermal switch is faulty.	The LAOFF signal remains '0' when the projector controller PCB turns on the LCNT signal.
E700	 The CPU PCB is faulty. The DC power supply is faulty.	The communication between the DC-CPU and the R-CPU on the CPU PCB is interrupted for 5 sec or more.
E717	An error has occurred in conjunction with the copy data controller/remote diagnosis device.	The copy data controller or the remote diagnostic device has been physically detached.
E718	 The IP-PRJ PCB is faulty. The IP-MAIN PCB is faulty. The projector controller PCB is faulty. 	The communication between the projector controller PCB and the IP-MAIN PCB is interrupted for 5 sec or more.
E719	The wiring is faulty.The coin vendor is faulty.The CPU PCB is faulty.	0000 The communication between the coin vendor and the CPU PCB is disrupted.
E800	 The power switch is faulty. The DC harness is faulty. The DC driver PCB is faulty. The CPU PCB is faulty. 	An open circuit has been detected in the auto shut-off signal.
E803	 The 24V output is faulty. The DC power cut relay is faulty. The DC fuse PCB is faulty. The CPU PCB is faulty. The DC driver PCB is faulty. 	0000 During copying operation, the CPU does not detect a 24V output for about 5 sec when the transfer unit lever switch, front left door switch, and delivery door switch are closed.
E804	The operation of a fan (indicated by detail code) is faulty.	0001 The electrical unit fan (FM8) has stopped to rotate in error.
	 The CPU PCB is faulty. The DC driver PCB is faulty.	0002 The IP cooling fan (FM7) has stopped to rotate in error.
		0003 The exhaust fan (FM2) has stopped to rotate in error.
		0004 The ozone suction fan (FM5) has stopped to rotate in error.
		0005 The toner suction fan (FM6) has stopped to rotate in error.
		0006 The laser scanner motor cooling fan (FM4) has stopped to rotate in error.
		0008 The primary charging assembly fan (FM3) has stopped to rotate in error.

Code	Cause	Timing of detection
E804	• The operation of a fan (indicated by detail code) is faulty.	000A The back suction fan (FM16) has stopped to rotate in error.
	The CPU PCB is faulty.The DC driver PCB is faulty.	000B The power supply cooing fan 1/2 (FM9/FM13) has stopped in error.
		000C The power supply cord base fan (FM17) has stopped to rotate in error.
		0102 The original exposure system cooling fan 2/3 (FM14/FM15) has stopped to rotate in error.

Caution:

- 1. The copier may be reset by turning its power switch off and then on when its self diagnostic mechanism has turned on. This, however, does not apply to E000, E005, E008, E020 (if xxE0), E717 or E719. This is to prevent possible damage by an overheating fixing roller occurring if these errors were designed to be reset while the thermistor has an open circuit.
- 2. The fixing cleaning belt counter (COPIER>COUNTER>MISC>FIX-WEB in service mode) is cleared when the fixing cleaning belt is replaced.
- 3. 'E004' is indicated on the control panel for about 1.6 sec when the error occurs: thereafter, the power switch wil be disabled (i.e., error auto power-off is activated). If such is the case, turn on the power switch while the left front cover is open. The error code may be checked by COPIER>DISPLAY>ERR in service mode.

Resetting E000, E005, E008, E020, E717, or E719

- 1) Start service mode, and select COPIER>FUNCTION>CLEAR>ERR (to highlight).
- 2) Press the OK key.
- 3) Turn off and then on the power switch.

E717

E717 may be prevented by temporarily disconnecting the communication line using service mode as follows before disconnecting the copy data controller or the remot diagnostic device connected to the copier:

- 1) Start service mode, and select COPIER>OPTION>IN-FACE>B-CLR (to highlight).
- 2) Enter '0', and press the OK key.
- 3) End service mode, and perform appropriate servicing.

B. RDF

Note: -

If the self diagnostic mechanism has turned on, you can reset the machine by turning the copier's power switch off and then on.

If you want to continue to make copies while the RDF is out of order, place the original on the copyboard glass after lifting the RDF.

Code	Cause	Timing of detection
E400	The communication of data with the copier is faulty.	The communication is monitored at all times, and it is interrupted for 5 sec or more.
E401	 The pickup motor (M1) is faulty. The pickup roller home position sensor 1 (S8) is faulty. 	The state of the sensor remains unchanged after the pickup motor has been driven for 2 sec or more.
E402	 The belt motor (M3) is faulty. The belt motor clock sensor (S11) is faulty. 	The number of belt motor clock pulses is lower than a specific value for 100 msec.
E403	 The reversal motor (M2) is faulty. The slip sensor (S10) is faulty. 	The number of slip clock pulses is lower than a specific value for 100 msec.
E404	 The delivery motor (M5) is faulty. The delivery motor clock sensor (S12) is faulty. 	The number of delivery motor clock pulses is lower than a specific value for 200 msec.
E405	 The pickup motor (M1) is faulty. The pickup motor clock sensor (S12) is faulty. 	The number of pickup motor clock pulses is lower than a specific value for 200 msec.
E407	 The tray drive motor (M6) is faulty. The tray position sensor (S25) is faulty. 	The state of the sensor remains unchanged after the tray drive motor has been driven for 2 sec or more.
E408	 The feeder motor (M8) is faulty. The tray position sensor (S25) is faulty. 	The number of feed motor clock pulses is lower than a specific value for 100 msec.
E411	 The registration sensor 1 (S3) is faulty. The skew sensor 1 (S4) is faulty. The manual feed registration sensor (S19) is faulty. The image leading edge sensor (S20) is faulty. The original sensor 1 (S7) is faulty. 	The output of each sensor is a specific value or more in the absence of paper.


C. Sorter


Code	Cause	Timing of detection
E510	The feed motor (M1) fails to rotate.	The clock signal from the feed motor clock sensor (PI5) is absent for 250 msec.
E516	• The low-speed feed motor (M10) fails to rotate.	The clock signal from the feed motor clock sensor (PI23) is absent for 250 msec or more.
E517	The home position of the buffer path unit locking cam cannot be detected.	The home position cannot be detected within a specific period of time (varying from copier to copier) after the Copy Start key has been pressed.
E522	• The push bar motor (M7) fails to rotate.	The operation fails to end within 2000 msec after the motor drive signal has been generated.
E523	• The reference wall motor (M6) fails to rotate.	The operation does not end within 2000 msec after the motor drive signal has been generated.
E524	The multi guide motor (M5) fails to rotate.	The operation does not end within 2000 msec after the motor drive signal has been generated.
E525	• The bin internal paper sensor 1 (S3, S4) auto adjustment mechanism is faulty.	The auto adjustment mechanism of the bin internal paper sensor 1 (S3, S4) fails, or an error occurs in the auto adjustment value.
E526	• The bin internal paper sensor 2 (S6, S7) auto adjustment mechanism is faulty.	The auto adjustment mechanism of the bin internal paper sensor 2 (S6, S7) fails, or an error occurs in the auto adjustment value.
E530	The guide bar motor (M8) fails to rotate.	The operation does not end within a specific period of time after the motor drive signal has been generated. • for front access, 5000 msec • except front access, 2000 msec
E531	• The stapler unit drive motor (M4) fails to rotate.	The operation does not end within 2000 msec after the motor drive signal output has been generated. The clock signal from the motor clock sensor (PI8) is absent for 250 msec or more. The input signal from the swing home position sensor (PI9) remains unchanged for 1000 msec.

Code	Cause	Timing of detection
Code	Cause	Timing of detection
E532	• The stapler unit shift motor (M3) fails to rotate.	The operation does not end within 5000 msec after the motor drive signal has been generated.
E533	The stapler internal paper sensor auto adjustment mechanism is faulty.	The auto adjustment mechanism of the stapler internal paper sensor fails, or an error occurs in the auto adjustment value.
E540	The bin shift motor (M9) fails to rotate.	The operation fails to end within a specific period of time after the motor drive signal has been generated. • for initialization, 20000 msec • except initialization, 2000 msec The clock plate sensor of the motor does not generate clock signals for 250 msec. The input signal from the lead cam position sensor (PI20) remains unchanged for 2000 msec.
E550	• The DC output from the sorter controller PCB is faulty.	An error has occurred in the DC output (24 VL, 24 VP) from the sorter controller PCB.

APPENDIX

General Timing Chart

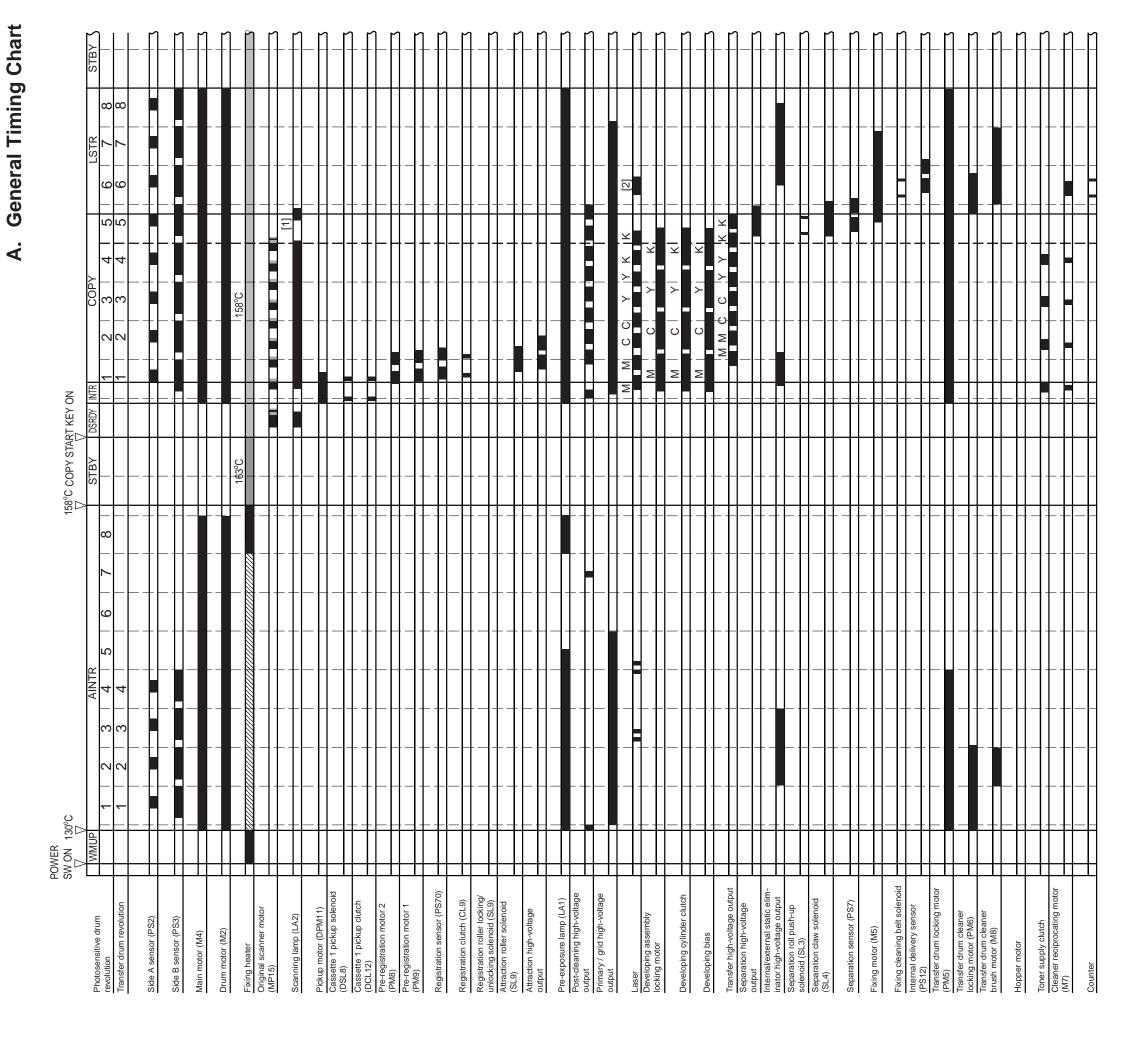

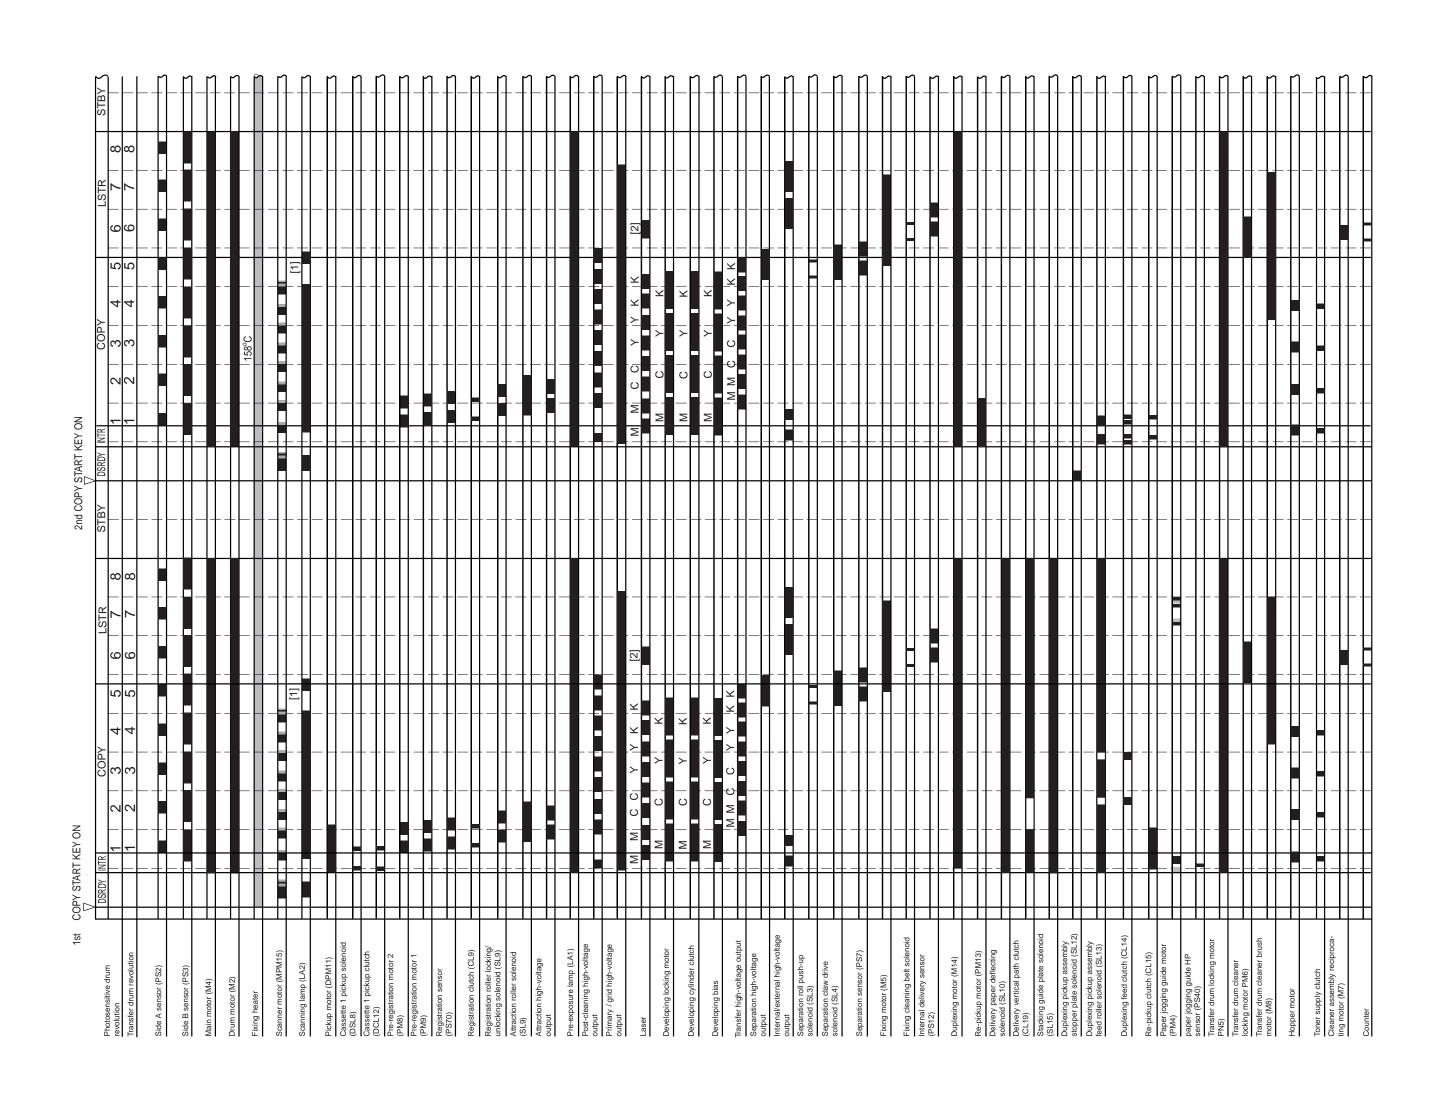

B. Signals and Abbreviations

1. Signals

400* LASER SELECT command

AC-ERR* HIGH VOLTAGE TRANSFORMER AC ERROR signal

ACSBY AC STANDBY command
AITOP A-SIDE SENSOR signal

APCHOLD AUTO POWER CONTROL HOLD command

BD BEAM DETECT signal
BITOP B-SIDE SENSOR signal
BK-REF BK-REFERENCE signal
BK-SGNL BK-TONER DENSITY signal
BKTEP BK-TONER EMPTY signal

BLRMA ATTRACTION/TRANSFER PRESSURE CAM MOTOR command BLRMA* ATTRACTION/TRANSFER PRESSURE CAM MOTOR command BLRMB ATTRACTION/TRANSFER PRESSURE CAM MOTOR command BLRMB* ATTRACTION/TRANSFER PRESSURE CAM MOTOR command

BLRMHL ATTRACTION/TRANSFER PRESSURE CAM MOTOR

HOLD command

BLRMHP ATTRACTION/TRANSFER PRESSURE

CAM HOME POSITION SENSOR signal

C-REF C-REFERENCE signal
C-SGNL C-TONER DENSITY signal

C1LFD CASSETTE-1 LIFTER SENSOR signal C1LFMON CASSETTE-1 LIFTER MOTOR ON command

C1PAD CASSETTE-1 PAPER SENSOR signal

C1PUCL CASSETTE-1 PAPER LEVEL VR signal
C1PUCL CASSETTE-1 PICK-UP CLUTCH command
C1PUMA CASSETTE-1 PICK-UP MOTOR command
C1PUMA* CASSETTE-1 PICK-UP MOTOR command
C1PUMB CASSETTE-1 PICK-UP MOTOR command
C1PUMB* CASSETTE-1 PICK-UP MOTOR command

C1PUMHL CASSETTE-1 PICK-UP MOTOR HOLD command

C2LFD/D1LFD CASSETTE-2/1 LIFTER SENSOR signal

C2LFMON CASSETTE-2/1 LIFTER MOTOR ON command

C2PAD/D1PAD
CASSETTE-2/1 PAPER SENSOR signal
C2PLVR/D1PLVR
CASSETTE-2/1 PAPER LEVEL VR signal
C2PUCL/D1PUCL
C2PUMA/D1PUMA
C2PUMA*/D1PUMA*
C2PUMA*/D1PUMA*
C2PUMB/D1PUMB
CASSETTE-2/1 PICK-UP MOTOR command
C2PUMB*/D1PUMB*
CASSETTE-2/1 PICK-UP MOTOR command
CASSETTE-2/1 PICK-UP MOTOR command
CASSETTE-2/1 PICK-UP MOTOR command

C2PUMHL/D1PUMHL CASSETTE-2/1 PICK-UP MOTOR HOLD command

C2PWVR CASSETTE-2 PAPER WIDTH VR signal

C2SZ0 CASSETTE-2 PAPER LENGTH SENSOR signal 0 C2SZ1 CASSETTE-2 PAPER LENGTH SENSOR signal 1

C3LFD/D2LFD CASSETTE-3/2 LIFTER SENSOR signal

C3LFMON CASSETTE-3/2 LIFTER MOTOR ON command

C3PAD/D2PAD CASSETTE-3/2 PAPER SENSOR signal C3PLVR/D2PLVR CASSETTE-3/2 PAPER LEVEL VR signal

C3PUCL/D1PUCL
CASSETTE-3/2 PICK-UP CLUTCH command
C3PUMA/D2PUMA*
C3PUMA*/D2PUMA*
C3PUMB/D2PUMB
C3PUMB*/D2PUMB*
C3PUMB*/D2PUMB*
C3PUMHL/D2PUMHL
CASSETTE-3/2 PICK-UP MOTOR command
C3PUMHL/D2PUMHL
CASSETTE-3/2 PICK-UP MOTOR command
CASSETTE-3/2 PICK-UP MOTOR command

C3PWVR/D2PWVR CASSETTE-3/2 PAPER WIDTH VR signal C3SZ0/D3SZ0 CASSETTE-3/2 PAPER SENSOR signal 0 C3SZ1/D3SZ1 CASSETTE-3/2 PAPER SENSOR signal 1

CBRCMA CLEANER BLADE RECIPROCATING MOTOR command A CBRCMB CLEANER BLADE RECIPROCATING MOTOR command B

CDEVA C-DEVELOPING ASSEMBLY ENGAGING

CDEVA*

C-DEVELOPING ASSEMBLY ENGAGING MOTOR command C
CDEVB

C-DEVELOPING ASSEMBLY ENGAGING MOTOR command C
CDEVB*

C-DEVELOPING ASSEMBLY ENGAGING MOTOR command C

CDEVCL C-DEVELOPING CYLINDER CLUTCH command C

CDEVHL C-DEVELOPING ASSEMBLY ENGAGING C MOTOR HOLD

command

CDEVHP C-DEVELOPING ASSEMBLY HOME POSITION SENSOR signal C

CITOP C SENSOR signal

CTEP C-TONER EMPTY signal

CTNRSUP* C-TONER SUPPLY CLUTCH command

DCFMERR POWER SUPPLY COOLING FAN ERROR signal
DELFLSL* DELIVERY PAPER DEFLECTOR SOLENOID command
DINPD DUPLEXING UNIT INLET PAPER SENSOR signal

DJGMA DUPLEXING UNIT PAPER JOGGING GUIDE MOTOR command DJOGMB*

PAPER JOGGING GUIDE MOTOR command DUPLEXING UNIT PAPER JOGGING GUIDE MOTOR command DUPLEXING UNIT PAPER JOGGING GUIDE MOTOR command DJOGMB*

DUPLEXING UNIT PAPER JOGGING GUIDE MOTOR command DUPLEXING UNIT PAPER JOGGING GUIDE MOTOR command

DLCOVD

DELIVERY COVER OPEN SENSOR signal

DLFMERR

DELIVERY COOLING FAN ERROR signal

DLFMON

DELIVERY COOLING FAN ON command

DLVP1D

DELIVERY VERTICAL PATH-1 SENSOR signal

DLVP2D

DELIVERY VERTICAL PATH-2 SENSOR signal

DREPD DUPLEXING UNIT REVERSAL PAPER SENSOR signal

DRHERR DRUM HEATER ERROR signal
DRHOFF DRUM HEATER OFF command
DRMCLK DRUM MOTOR CLOCK signal

DRMCW DRUM MOTOR ROTATIONAL DIRECTION signal

DRMFG DRUM MOTOR FG signal
DRMON DRUM MOTOR ON command
DRMRDY DRUM MOTOR READY signal

DRMSP0 DRUM MOTOR SPEED CONTROL signal 0
DRMSP1 DRUM MOTOR SPEED CONTROL signal 1
DUPFDCL* DUPLEXING UNIT FEEDER CLUTCH command

DUPMLK DUPLEXING UNIT MOTOR LOCK signal DUPMON DUPLEXING UNIT MOTOR command

DUPPFSL* DUPLEXING UNIT PAPER FEEDING ROLLER SOLENOID command

DUPPPD DUPLEXING UNIT PATH PAPER SENSOR signal DUPSAPD DUPLEXING UNIT TRAY PAPER SENSOR signal DUPUMA DUPLEXING UNIT PICK-UP MOTOR command DUPUMA* DUPLEXING UNIT PICK-UP MOTOR command

DUPUMB* DUPLEXING UNIT PICK-UP MOTOR command
DUPUMB* DUPLEXING UNIT PICK-UP MOTOR command
DUPUMHL DUPLEXING UNIT PICK-UP MOTOR HOLD command
DVERPCL DELIVERY VERTICAL PATH CLUTCH command
ENDPLSL* DUPLEXING UNIT STACK GUIDE SOLENOID command

EXFMERR EXHAUST FAN ERROR signal
EXFMON EXHAUST FAN ON command
FDC1D CASSETTE-1 OPEN SENSOR signal
FDC2D/FDD1D CASSETTE-2/1 OPEN SENSOR signal
FDC3D/FDD2D CASSETTE-3/2 OPEN SENSOR signal

FDCOVD PICK-UP ASSEMBLY COVER OPEN SENSOR signal

FXMLK FIXING MOTOR LOCK signal FXMON FIXING MOTOR ON command

FXMSP0 FIXING MOTOR SPEED CONTROL signal 0 FXMSP1 FIXING MOTOR SPEED CONTROL signal 1

FXOILD FIXING OIL LEVEL SENSOR signal

GGUIDSL ATTRACTION ROLLER SOLENOID command
HOPMCW HOPPER MOTOR ROTATIONAL DIRECTION signal

HOPMLK HOPPER MOTOR LOCK signal HOPPER MOTOR ON command

HUM ENVIRONMENT SENSOR HUMIDITY signal

HVATC ATTRACTION CORONA CURRENT ON/OFF CONTROL signal HVATI ATTRACTION CORONA CURRENT LEVEL CONTROL signal

HVCC POST-CLEANING CORONA ON/OFF CONTROL signal HVCI POST-CLEANING CORONA LEVEL CONTROL signal

HVGI GRID BIAS LEVEL CONTROL signal

HVGIC GRID BIAS ON/OFF command

HVIDCC INTERNAL STATIC ELIMINATOR DC ON/OFF

CONTROL signal

HVIDCI INTERNAL STATIC ELIMINATOR DC LEVEL

CONTROL signal

HVIOC EXTERNAL/INTERNAL STATIC

ELIMINATOR AC ON/OFF CONTROL signal

HVPR PRIMARY CURRENT ON/OFF command

HVTRC TRANSFER CORONA CURRENT ON/OFF CONTROL signal HVTRI TRANSFER CORONA CURRENT LEVEL CONTROL signal

INDELD INSIDE DELIVERY PAPER SENSOR signal

IPFMERRIP COOLING FAN ERROR signalIPFMONIP COOLING FAN ON commandITOPIMAGE LEADING EDGE signal

KDEVA BK-DEVELOPING ASSEMBLY ENGAGING MOTOR BK command KDEVA* BK-DEVELOPING ASSEMBLY ENGAGING MOTOR BK command KDEVB BK-DEVELOPING ASSEMBLY ENGAGING MOTOR BK command KDEVB* BK-DEVELOPING ASSEMBLY ENGAGING MOTOR BK command

KDEVCL BK-DEVELOPING CYLINDER CLUTCH command

KDEVHL BK-DEVELOPING ASSEMBLY ENGAGING MOTOR HOLD command KDEVHP BK-DEVELOPING ASSEMBLY HOME POSITION SENSOR signal

KEYSW* KEY SWITCH signal

KTNRSUP* BK-TONER SUPPLY CLUTCH command

L-ON LASER ON command L-RDY LASER READY command

LCOVD LEFT COVER OPEN SENSOR signal

LFRCWD LOWER FIXING ROLLER CLEANING WEB SENSOR signal

LHON LOWER FIXING HEATER ON command
LSMCLK LASER SCANNER MOTOR CLOCK signal
LSMON LASER SCANNER MOTOR command
LSMRDY LASER SCANNER MOTOR READY signal

LTHM3 LOWER FIXING ROLLER TEMPERATURE 3 signal LTHM4 LOWER FIXING ROLLER TEMPERATURE 4 signal LWEBSL LOWER CLEANING WEB SOLENOID command

M-REF M-REFERENCE signal
M-SGNL M-TONER DENSITY signal

MDEVA M-DEVELOPING ASSEMBLY ENGAGING MOTOR command MDEVA* M-DEVELOPING ASSEMBLY ENGAGING MOTOR command MDEVB M-DEVELOPING ASSEMBLY ENGAGING MOTOR command MDEVB* M-DEVELOPING ASSEMBLY ENGAGING MOTOR command

MDEVCL M-DEVELOPING CYLINDER CLUTCH command MDEVHL M-DEVELOPING ASSEMBLY ENGAGING MOTOR

HOLD command

MDEVHP M-DEVELOPING ASSEMBLY HOME POSITION

SENSOR signal

MFCOVD
MULTIFEEDER OPEN SENSOR signal
MFFDCL
MULTIFEEDER FEED CLUTCH command
MFLFMA
MULTIFEEDER LIFTER MOTOR command A
MFLFMB
MULTIFEEDER LIFTER MOTOR command B
MFLHD
MULTIFEEDER LIFTER-HIGH SENSOR signal
MFLD
MULTIFEEDER LIFTER-LOW SENSOR signal
MFPAD
MULTIFEEDER PAPER SENSOR signal

MFPUCL MULTIFEEDER PICK-UP CLUTCH command
MFPUD MULTIFEEDER PICK-UP SENSOR signal
MFPUSL MULTIFEED PICK-UP SOLENOID command
MFPWVR MULTIFEEDER PAPER WIDTH VR signal

MNMON MAIN MOTOR ON command MNMRDY MAIN MOTOR READY signal MTEP M-TONER EMPTY signal

MTNRSUP* M-TONER SUPPLY CLUTCH command

OHPDTC OHP SENSOR signal

OTDELD* EXTERNAL DELIVERY PAPER SENSOR signal

OZFMERR OZONE SUCTION FAN ERROR signal OZFMON OZONE SUCTION FAN ON command PCDTC PRE-CLEANING PAPER SENSOR signal PCFDCL POSTCARD FEEDER CLUTCH command

PCFMERR PRIMARY CORONA ASSEMBLY FAN ERROR signal PCFMON PRIMARY CORONA ASSEMBLY FAN ON command

PCMFMERR POWER CORD MOUNT FAN ERR signal PRE-EXPOSURE LAMP ON command PELA10N ORIGINAL TYPE SELECT command PH/TX/H200 POST-TRANSFER PAPER SENSOR signal **POSTJD** POLISHING ROLLER MOTOR command A **PRDMA PRDMB** POLISHING ROLLER MOTOR command B PRE-TRANSFER PAPER SENSOR signal **PREJD PRERGD** PRE-REGISTRATION SENSOR signal

PRIMFW PRIMARY CORONA WIRE CLEANING MOTOR NORMAL

DRIVE command

PRIMRV PRIMARY CORONA WIRE CLEANING MOTOR REVERSE

DRIVE command

PRM1A PRE-REGISTRATION MOTOR 1 command

PRM1A* PRE-REGISTRATION MOTOR 1 command PRM1B PRE-REGISTRATION MOTOR 1 command PRM1B* PRE-REGISTRATION MOTOR 1 command

PRM1HL PRE-REGISTRATION MOTOR 1 HOLD command

PRM2A PRE-REGISTRATION MOTOR 2 command PRM2A* PRE-REGISTRATION MOTOR 2 command PRM2B PRE-REGISTRATION MOTOR 2 command PRM2B* PRE-REGISTRATION MOTOR 2 command

PRE-REGISTRATION MOTOR 2 HOLD command PRM2HL POWER UNIT COOLING FAN ERROR signal **PUFMERR** POWER UNIT COOLING FAN ON command **PUFMON PUP1SL** PICK-UP ROLLER 1 SOLENOID command PICK-UP ROLLER 2/1 SOLENOID command PUP2SL/PUPD1SL PICK-UP ROLLER 3/2 SOLENOID command PUP3SL/PUPD2SL PICK-UP VERTICAL PATH-1 SENSOR signal PUVP1AD PUVP2AD PICK-UP VERTICAL PATH-2 SENSOR signal PUVP3AD PICK-UP VERTICAL PATH-3 SENSOR signal **PVE** PAGE VERTICAL SYNCHRONOUS command

RCOVD RIGHT COVER OPEN SENSOR signal REFMERR REAR INTAKE FAN ERROR signal REFMON REAR INTAKE FAN ON command REGCL* REGISTRATION CLUTCH command REGDTC REGISTRATION SENSOR signal

REPUCL* DUPLEXING UNIT PICK-UP CLUTCH command

RGRLSL REGISTRATION ROLLER RELEASING SOLENOID command RPUVPD DUPLEXING UNIT PICK-UP VERTICAL PATH SENSOR signal

SCDSL SEPARATION CLAW SOLENOID command

SCFMERR LASER SCANNER MOTOR COOLING FAN ERROR signal LASER SCANNER MOTOR COOLING FAN ON command

SCHP SCANNER HOME POSITION signal

SHUTOFF* SHUT OFF signal

SJAMD SEPARATION SENSOR signal

SL1FMERR SCANNING LAMP COOLING FAN 1 ERROR signal **SL1FMON** SCANNING LAMP COOLING FAN 1 ON command SL2FMERR SCANNING LAMP COOLING FAN 2 ERROR signal SCANNING LAMP COOLING FAN 2 ON command **SL2FMON** SCANNING LAMP COOLING FAN 3 ERROR signal SL3FMERR **SL3FMON** SCANNING LAMP COOLING FAN 3 ON command SEPARATION CORONA AC ON/OFF CONTROL signal **SPACC** SEPARATION CORONA AC VOLTAGE LEVEL CONTROL signal **SPACI SPDCC** SEPARATION CORONA DC ON/OFF CONTROL signal

SPDCI SEPARATION CORONA DC CURRENT LEVEL CONTROL signal

SSPUPSL SEPARATION PUSH-UP SOLENOID command STCLOSE* STOP PLATE SOLENOID CLOSE command STOPEN* STOP PLATE SOLENOID OPEN command

TEMP ENVIRONMENT SENSOR TEMPERATURE signal

TNFMERR TONER SUCTION FAN ERROR signal TNFMON TONER SUCTION FAN ON command

TRCMLK TRANSFER DRUM CLEANER BRUSH MOTOR LOCK signal TRCMON TRANSFER DRUM CLEANER BRUSH MOTOR ON command

TRDCMA TRANSFER DRUM CLEANER MOTOR command TRDCMA* TRANSFER DRUM CLEANER MOTOR command TRDCMB TRANSFER DRUM CLEANER MOTOR command

TRDCMB* TRANSFER DRUM CLEANER MOTOR command

TRDCMHL TRANSFER DRUM CLEANER MOTOR HOLD command

TRDCPHP TRANSFER DRUM CLEANER HOME POSITION SENSOR signal

TRDMA TRANSFER DRUM MOTOR command TRDMA* TRANSFER DRUM MOTOR command TRDMB TRANSFER DRUM MOTOR command TRDMB* TRANSFER DRUM MOTOR command

TRDMHL TRANSFER DRUM MOTOR HOLD command

TRDPHP TRANSFER DRUM HOME POSITION SENSOR signal UFRCWD UPPER FIXING ROLLER CLEANING WEB SENSOR signal

UHON UPPER FIXING HEATER ON command

UTHM1 UPPER FIXING ROLLER TEMPERATURE 1 signal UTHM2 UPPER FIXING ROLLER TEMPERATURE 2 signal UWEBSL UPPER CLEANING WEB SOLENOID command

VCLK VIDEO CLOCK PULSE command

VD0-VD7 VIDEO0-7 command

WTNRBD WASTE TONER FEEDING SCREW LOCK DETECTING SWITCH

signal

WTONER WASTE TONER FULL SENSOR signal

Y-REF Y-REFERENCE signal Y-SGNL Y-TONER DENSITY signal

YDEVA
Y-DEVELOPING ASSEMBLY ENGAGING MOTOR command
YDEVA*
Y-DEVELOPING ASSEMBLY ENGAGING MOTOR command
YDEVB
Y-DEVELOPING ASSEMBLY ENGAGING MOTOR command
YDEVB*
Y-DEVELOPING ASSEMBLY ENGAGING MOTOR command

YDEVCL Y-DEVELOPING CYLINDER CLUTCH command

YDEVHL Y-DEVELOPING ASSEMBLY ENGAGING MOTOR HOLD

command

YDEVHP Y-DEVELOPING ASSEMBLY HOME POSITION SENSOR signal

YTEP Y-TONER EMPTY signal

YTNRSUP* Y-TONER SUPPLY CLUTCH command

2. Abbreviations

AINTR ADDITIONAL INITIAL ROTATION


CNTR CONTROL ROTATION


COPY COPY


DSRDY SCANNER READY INTR INITIAL ROTATION LSTR LAST ROTATION

STBY STANDBY WMPU WARM UP


General Circuit Diagram (1/3)

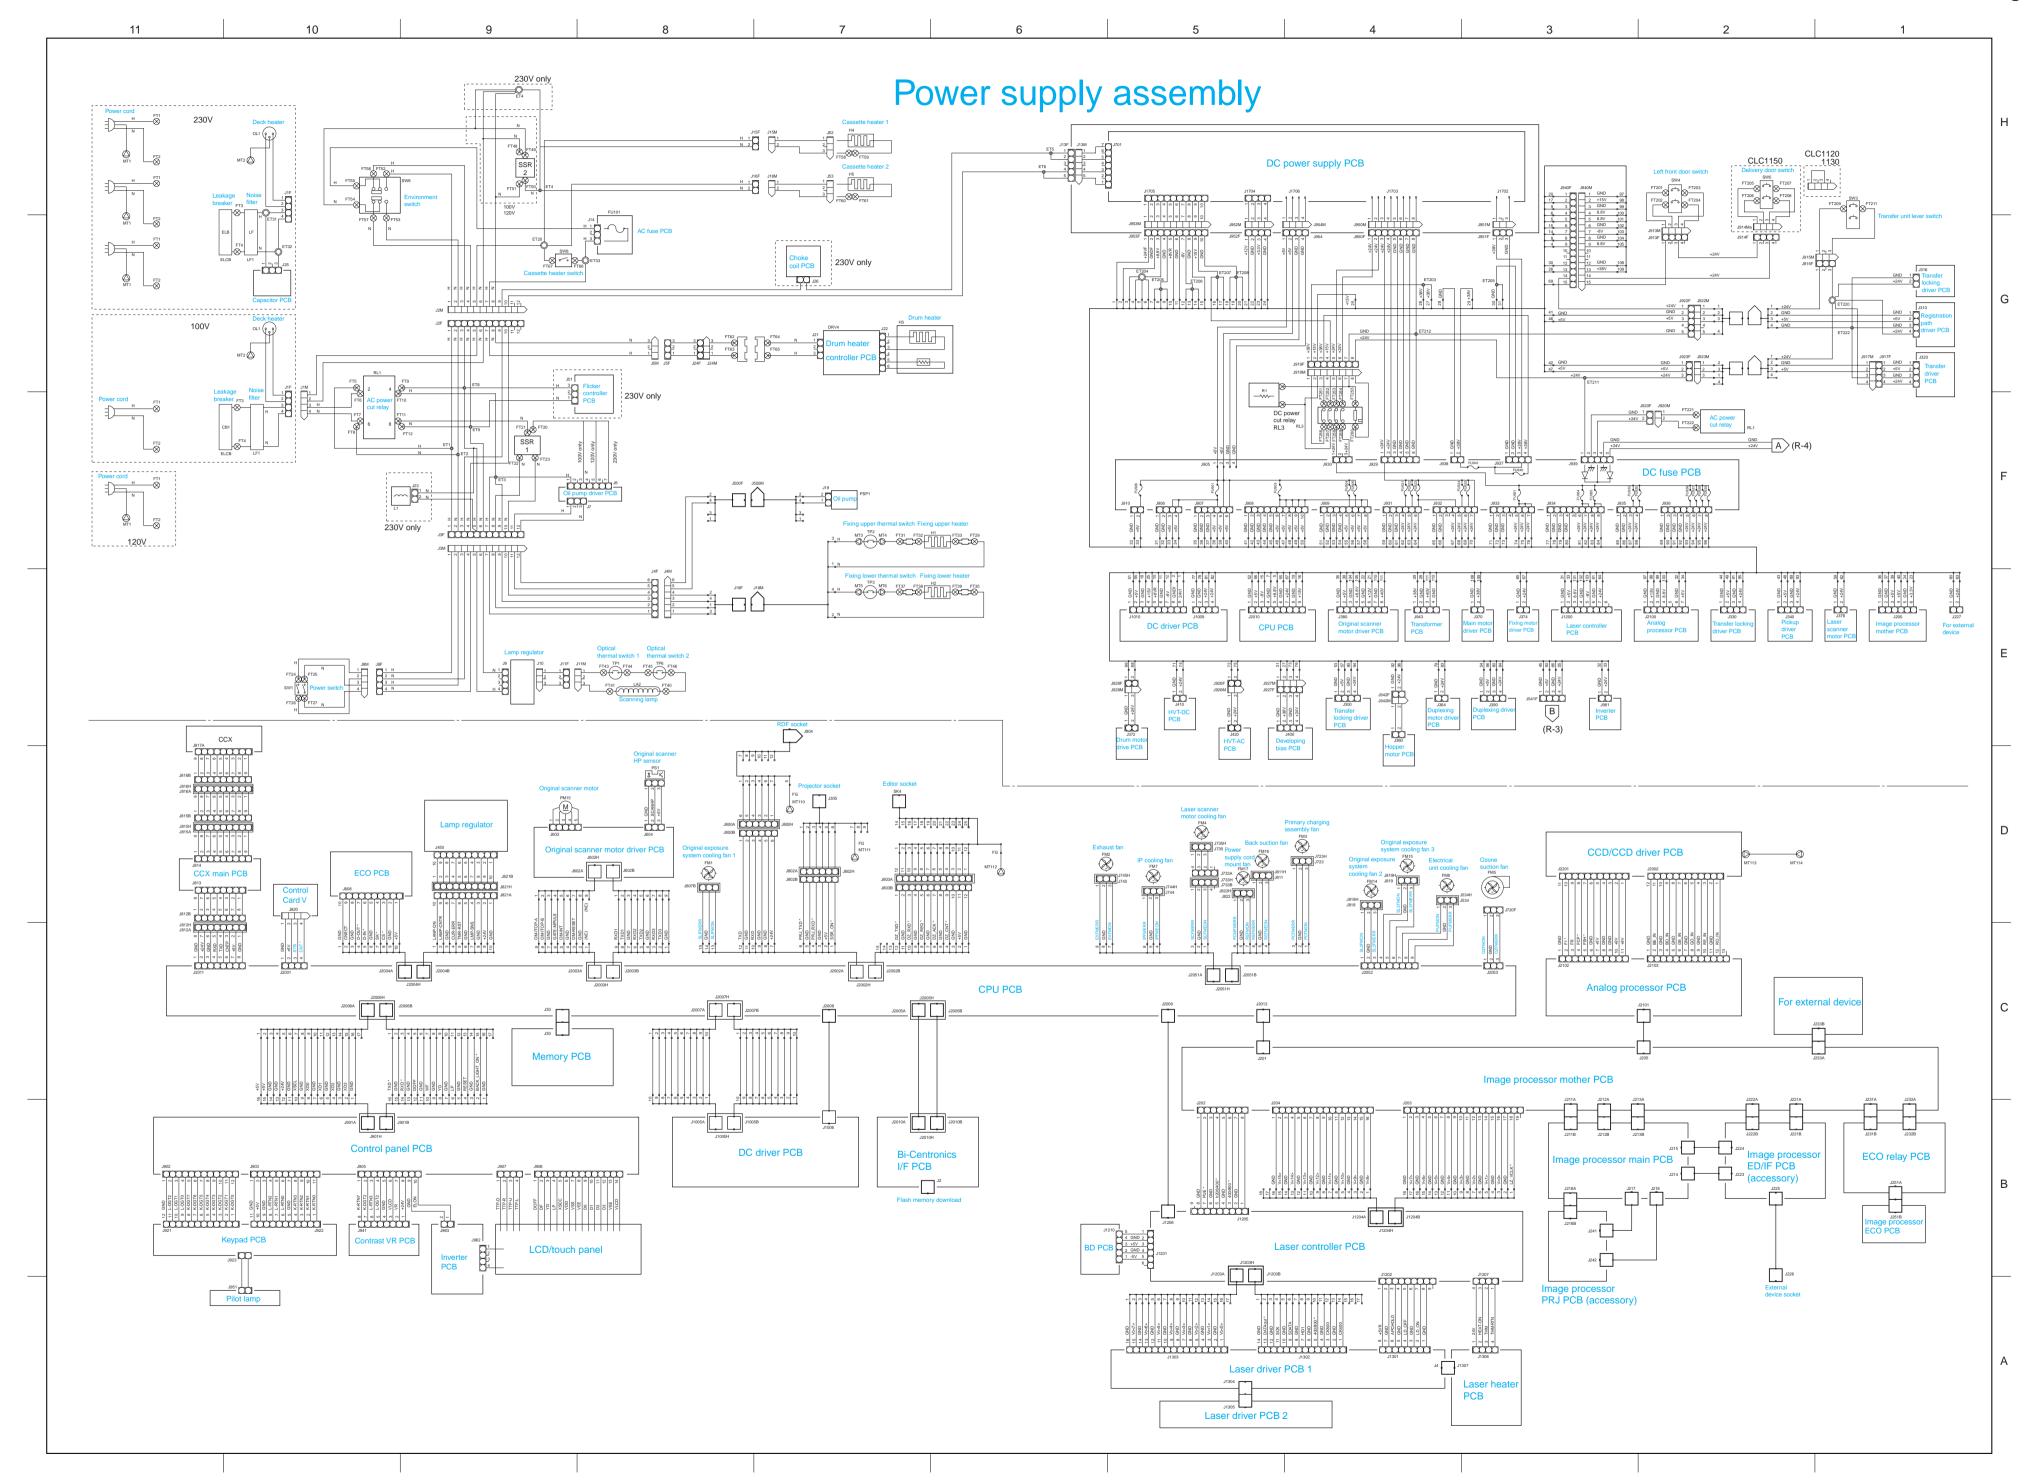

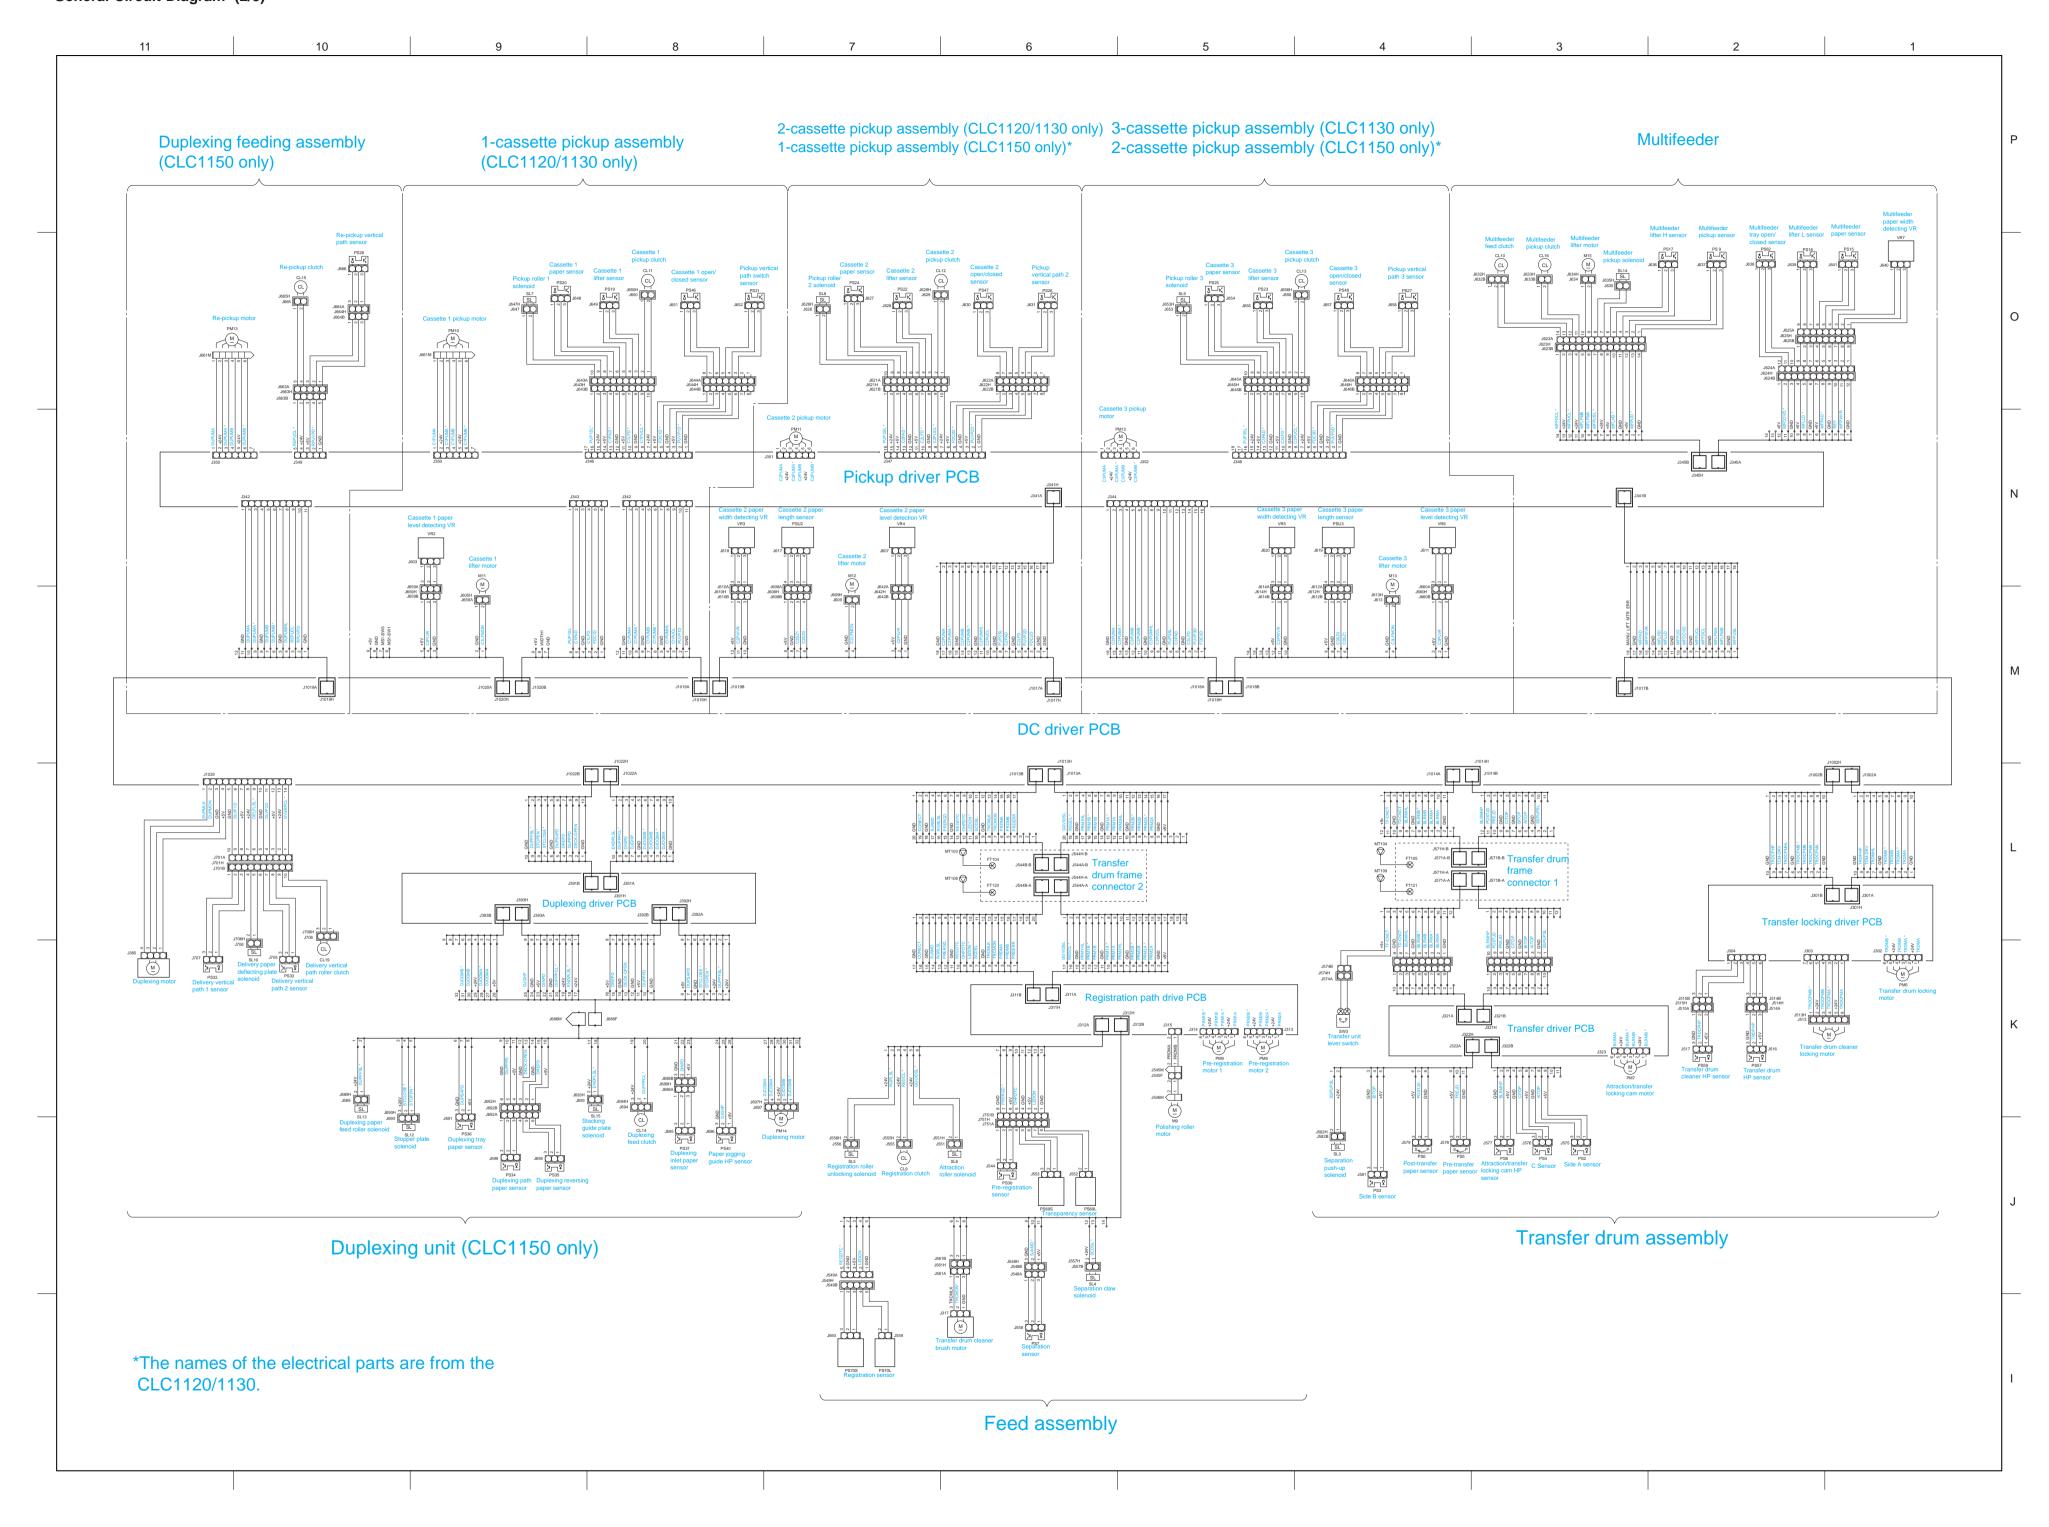

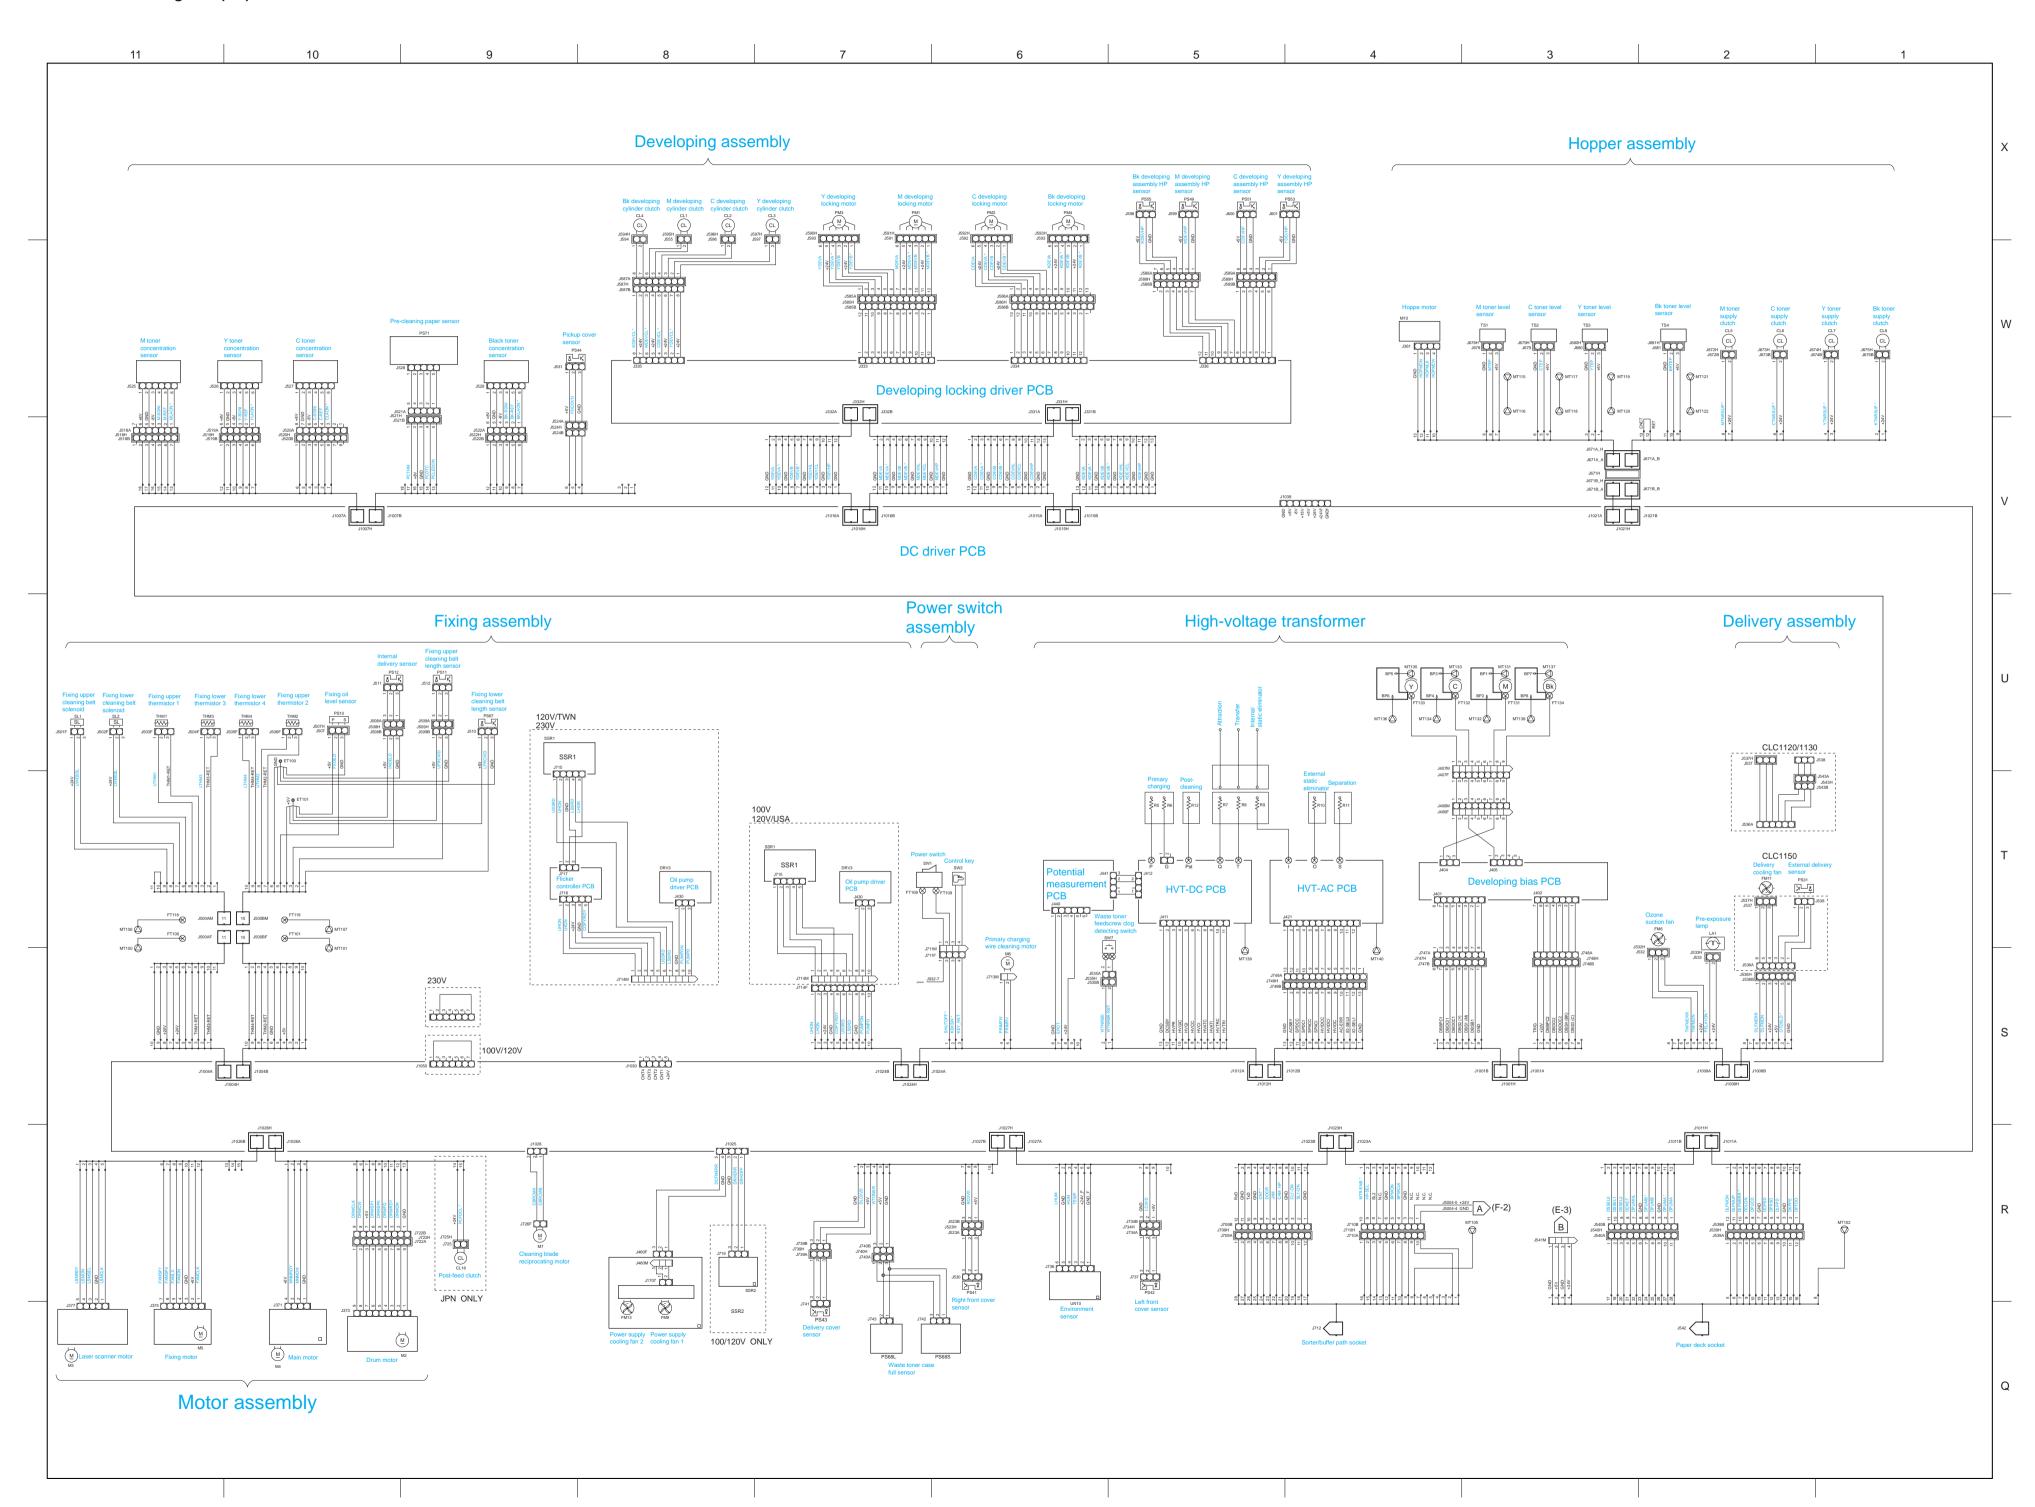

D. Paper Deck General Circuit Diagram

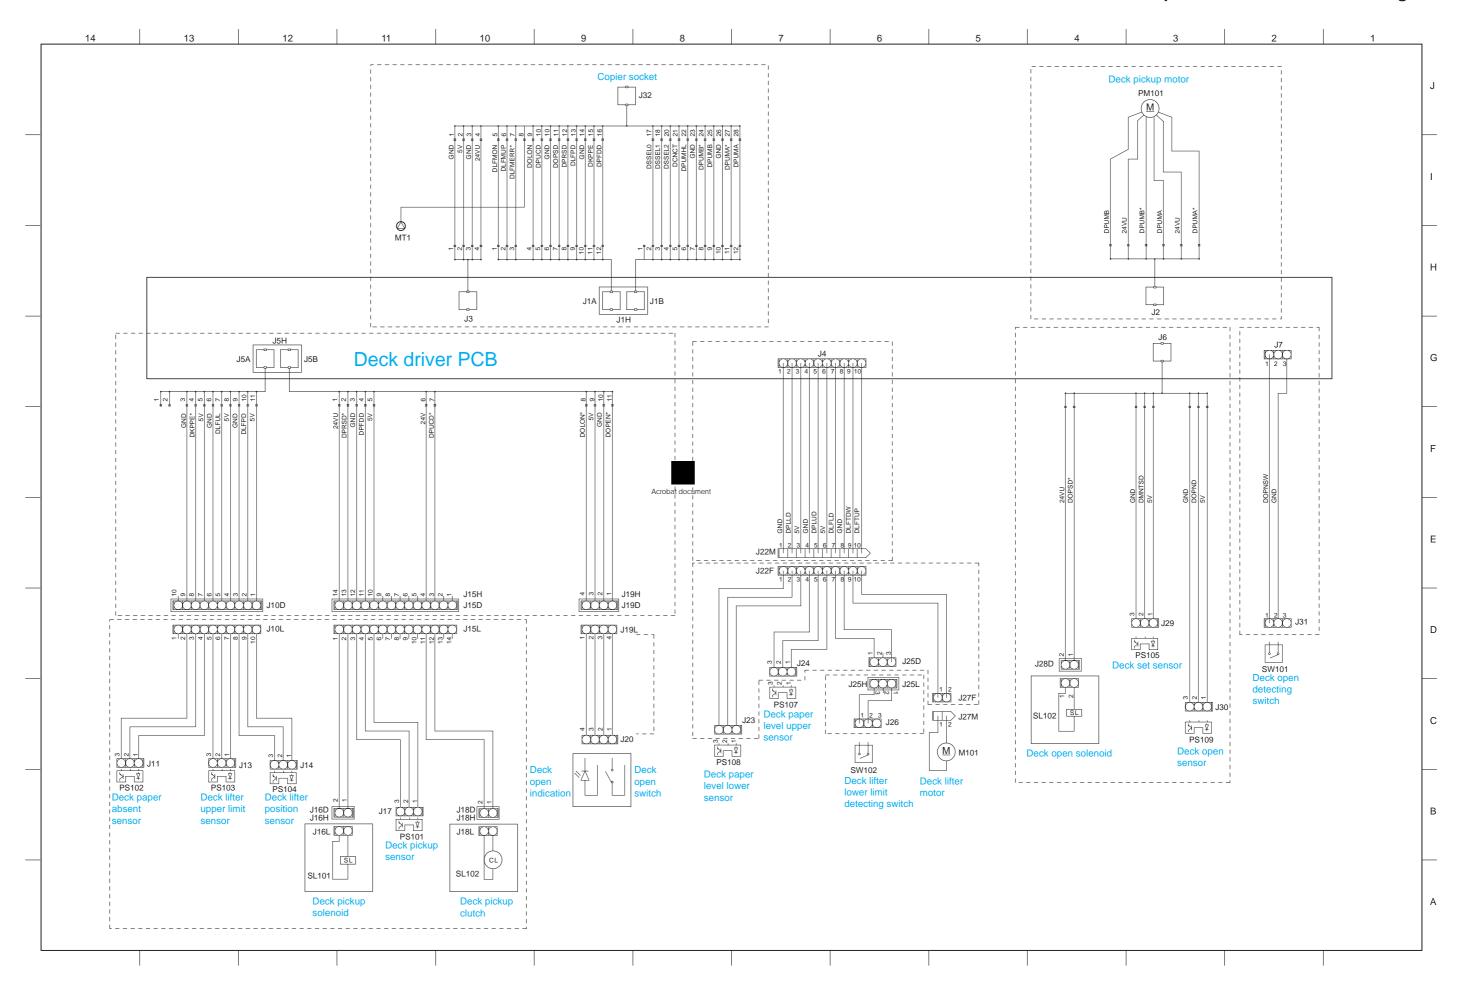

E. Specifications

1. Type

Item	Specifications	
Body	Console (reader and printer constructed as one)	
Copyboard	Fixed	
Light source	Halogen lamp	
Lens	Arranged in an array	
Image reader	Photocell (BRG line CCD; fixed, mirror scanning)	
Photosensitive medium	OPC drum (180-mm dia.)	

Table A-1

2. System

Item	Specifications	
Copying	Laser beam indirect photostatic transfer	
Charging	Corona	
Exposure	Slit, laser beam	
Contrast adjustment	Automatic	
Development	Dry toner projection	
Toner supply	Manual (345 g/bottle)	
Pickup	Cassette x 2 (CLC1120/1150), cassette x 3 (CLC1130), multifeeder tray, duplexing unit (CLC1150)	
Attraction	Pre-transfer static attraction	
Transfer	Blade transfer	
Separation	Separation claw, separation pushup roll (separation charging assembly as auxiliary mechanism)	
Cleaning	Cleaning blade	
Fixing	Heat roller Upper: 540 W (100/120 V), 700 W (230 V) Lower: 500 W (common for all models)	

Note: The CLC1120 is available only as a non-Japanese model.

Table A-2

3. Functions

Item	Specifications			
Resolution	Reader: 400 x 400 dpi			
	Recorder: 800-equivalent x 400 dpi			
Gradation	256 gradations			
Original type	Sheet, book, 3-D object (2 kg max.)			
Maximum original size	A3 (297 x 420 mm) / 279.4 x 431.8 mm (11 x 17)			
Copy size	AB: 6R5E (Japanese)			
	Inch/A: 5R4E (North or Central America)			
	AB/Inch: 6R5E (Asia, Oceania, South America)			
Zoom	25% to 400% (in 1% increments)			
Wait time	8 min 30 sec or less (at 20°C); 120V			
	8 min or less (at 20°C); 230V			
First copy time (w/o pre-scanning)	Less than 18.1 sec (full color; no pre-scanning)			
	Less than 9.6 sec (mono color; no pre-scanning)			
Continuous copying	1 to 100 sheets			
Copying speed	See Table 1-206.			
Copy size	Cassette: B5 (257 x 182 mm)/LTR to A3 (297 x 420			
	mm)/279.4 x 431.8 mm (11 x 17)			
	Multifeeder: B5 (257 x 182 mm) to A3 (297 x 420 mm)/			
	279.4 x 431.8 mm (11 x 17) + extra length			
	size (12 x 18)			
Copy paper type	Cassette: Plain paper (64 to 105 g/m²), transparency			
	(A4/LTR)			
	Multifeeder: Plain paper (64 to 209 g/m²), transparency			
	(A4/LTR) Auto double cided. Plain name only (00 to 105 g/m²)			
	Auto double-sided: Plain paper only (90 to 105 g/m²)			
Coggette	Multifeeder double-sided: Plain paper only (90 to 209 g/m²)			
Cassette Multifeeder	No claw, front loading, 60 mm deep (about 550 sheets of 81.4 g/m^2) 250 sheets (81.4 g/m^2)			
Duplexing unit	50 sheets (105 g/m²)			
Copy tray	100 sheets (103 g/m ²)			
Image margin	Leading edge: $8.0 \pm 1.5 \text{ mm} (8.0 \pm 2.0 \text{ mm})$			
image margin	Trailing edge: $2.5 \pm 1.5 \text{ mm} (4.5 \pm 2.0 \text{ mm})$			
	Left/right: $2.0 \pm 1.5 \text{ mm} (4.0 \pm 2.0 \text{ mm})$			
	Parentheses represent double-sided copying.			
Auto clear	Yes, 2-min standard (may be changed between 0 and 9 min)			
Auto power-off	Yes, 1-hr standard (may be changed between 0 and 24hr)			
Power Save mode	Yes, (Saving level may be either -10%, -25%, -50%, or			
1 ower save mode	non-recovery)			
Accessories	RDF-E2/RDF-E2 CLC1100 Series Power Supply Kit			
110005501105	Stapler Sorter-F1/CLC Buffer Pass Unit 1			
	CLC Paper Deck-E1			
	CLC Film Projector-D1			
	Editor-F1			
	CLC IP-ED Board-B1 (hereafter, IP-ED Board)			
	CLC Interface Board-D1 (hereafter, IP-IF Board)			
	Document Holder-E1			
	Cassette Heater Kit-15, Cassette Heater Kit-16 (non-			
	Japanese)			
	Control Card-V			
	Copy Data Controller-A1			
	Remote Diagnostic Device II			
	Toble A 2			

Table A-3

4. Others

Item	Specifications		
Operating environment	Temperature: 15° to 30°C / 59 to 86 °F Humidity: 5% to 80% Atmospheric pressure: 810 to 1013 hPa (0.8 to 1.0 atm)		
Power supply	100V / 50, 60Hz 120V / 60Hz, 230V / 50Hz		
Serial No.	CLC1120: NNE ***** NND ***** PNJ ***** RNC ***** SND ***** UND ***** CLC1130: LNC ***** PNM ***** QND ***** RNE ***** SNC ***** TNC ***** UNC ***** PNR ***** CLC1150: LNB ***** NNC ***** PNB ***** QNB ***** RNB ***** SNB *****		
Maximum power consumption	TNB ***** UNB ***** PNH ***** 1.5 kW or less Copying: 719 Wh or less (reference only) Standby: 338 Wh or less (reference only)		
Noise	Copying: 73 dB (sound power level) Standby: 59 dB (sound power level)		
Ozone	0.02 ppm or less (average; 0.05 ppm max.)		
Dimensions	Width: 768 mm / 30.2 in Depth: 773 mm / 30.5 in Height: 1000 mm / 39.4 in		
Weight	291.5 kg / 642.5 lb (approx.; CLC1150) 277.5 kg / 611.6 lb (approx.; CLC1130) 272.5 kg / 600.6 lb (approx.; CLC1120)		
Consumables	Copy paper: Keep wrapped, and protect against moisture. Toner: Protect against direct sunlight, and keep under 40°C, 85%.		

Table A-4

5. Default Ratios

a. Japan Australia, others (6R5E)

Item	Enlargement	Reduction
Default ratio	I 1:1.154	I 1:0.250
	II 1:1.224	II 1:0.500
	III 1:1.414	III 1:0.611
	IV 1:2.000	IV 1:0.707
	V 1:4.000	V 1:0.816
		VI 1:0.865

Table A-5a

■ APPENDIX ■ APPENDIX

b. North America (5R4E)

Item	Enlargement	Reduction
Default ratio	I 1:1.214	I 1:0.25
	II 1:1.294	II 1:0.50
	III 1:2.000	III 1:0.647
	IV 1:4.000	IV 1:0.733
		V 1:0.785

Table A-5b

c. Europe (3R3E)

Item	Enlargement	Reduction	
Default ratio	I 1:1.414 II 1:2.000 III 1:4.000	I 1:0.25 II 1:0.50 III 1:0.707	

Table A-5c

6. Copying Speed

Size	Copy paper size	copies/min (full color)	copies/min (mono color)
A3 (297 x 420 mm)	A3	5.5	21
A4 (210 x 297 mm)	A4	11	42
AAR (297 x 210 mm)	A4R	5.5	21
B4 (257 x 364 mm)	B4	5.5	21
B5 (182 x 257 mm)	B5	11	42
279.4 x 431.8 mm	11 x 17	5.5	21
(11" x 17")			
LTR	LTR	11	42
LTRR	LTRR	5.5	21
LGL	LGL	5.5	21

Table A-6

Specifications are subject to change for product improvement.

7. CLC Paper Deck-E1

Item	Specifications	
Pickup	No claw (retard)	
Storage	Side tray	
Copy paper type	Plain paper (64 to 105 g/m²)	
Copy paper size	A4, B5, LTR	
Storage size	2500 sheets (105 g/m²)	
Serial No.	ZRU ***** ZRT **** ZRS ****	
Paper size switch	By size guide plate in steps and in service mode (OPTION>ACC>DK-P)	
Dimensions	Width: 323.2 mm / 127 in Depth: 591 mm / 23.3 in Height: 432 mm / 17.0 in	
Width	30.6 kg / 67.4 lb	
Power supply	DC, from the copier	
Operating environment	Same as the copier	

Table A-7

Specifications are subject to change for product improvement.

Prepared by OFFICE IMAGING PRODUCTS TECHNICAL SUPPORT DIVISION CANON INC.

Printed in Japan

REVISION 0 (MAR. 1999) (18723/35338/71720) REVISION 1 (JAN. 2000) (18723) REVISION 2 (DEC. 2000) (18723)

5-1, Hakusan 7-chome, Toride-shi Ibaraki, 302-8501 Japan



Canon