# CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/ TRV46/TRV46PK

**SERVICE MANUAL** 



Ver 1.0 1999.01

Handycam Vision...
Video 8 XX
video Hi8

B MECHANISM





# US Model Canadian Model

CCD-TR416/TR516/TR716 CCD-TRV16/TRV36/TRV43/TRV46

# E Model

CCD-TR315/TR416PK/TR516PK CCD-TRV16/TRV16PK/TRV36PK/ TRV46/TRV46PK

Hong Kong Model
CCD-TRV16/TRV46

Taiwan Model

Brazilian Model

CCD-TR315/TR416 CCD-TRV16

NTSC

### **SPECIFICATIONS**

For MECHANISM ADJUSTMENTS, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL VII" (9-973-801-11).

### Video camera recorder System

Video recording system 2 Rotary heads Helical scanning FM system

Audio recording system Rotary heads, FM system

Video signal NTSC color, EIA standards

Usable cassette 8mm video format cassette CCD-TR315/TR416/TR416PK CCD-TRV16/TRV16PK

: standard 8 CCD-TR516/TR516PK/TR716 CCD-TRV36/TRV36PK/TRV43/TRV46/

Recording / Playback time (using 120 min. cassette)

SP mode: 2 hours LP mode: 4 hours

TRV46PK: Hi8

Fastforward/rewind time (using 120 min. cassette) Approx. 5 min.

Image device

1/4 inch CCD (Charge Coupled Device) CCD-TR315/TR416/TR416PK/TR516/ TR516PK

CCD-TRV16/TRV16PK/TRV36/ TRV36PK: Approx. 270,000 pixels (Effective: approx 250,000 pixels) CCD-TR716

CCD-TRV34/TRV46/TRV46PK: Approx. 320,000 pixels

(Effective : approx 200,000 pixels)

Viewfinder

Electronic viewfinder CCD-TR315/TRV series : Monochrome CCD-TR416/TR416PK/TR516/ TR516PK/TR716 : Color

Lens

Combined power zoom lens Filter diameter 1 7/16 in. (37 mm) CCD-TR315/TR416:US,CND CCD-TRV16/TRV16PK : 18 x (Optical), 180 x (Digital) CCD-TR416:BR/TR416PK : 18 x (Optical), 220 x (Digital)

CCD-TR516/TR516PK/TR716 CCD-TRV36/TRV36PK/TRV43/TRV46/ TRV46PK

: 18 x (Optical), 330 x (Digital)

Focal distance

3/16 - 8 in. (4.1 - 37.8 mm) When converted to a 35 mm still camera CCD-TR315/TR416/TR416PK/TR516/ TR516PK

CCD-TRV16/TRV16PK/TRV36/ TRV36PK

: 1 9/16 - 28 in. (39.4 - 709 mm) CCD-TR715

CCD-TRV43/TRV46/TRV46PK : 1 7/8 - 33 1/2 in. (47.2 - 850 mm)

Color temperature Auto

Minimum illumination 0.4 lux at F 1.4 0 lux (in NightShot mode)\*

Illumination range 0.4 lux to 100,000 lux

Recommended illumination More than 100 lux

\* Object invisible for the dark can be shot with infrared lighting.

### LCD screen (TRV series only)

Picture

2.5 inches measured diagonally 2 x 1 1/2 in.(50.3 x 37.4 mm)

On-screen display

TN LCD/TFT active matrix method

Total dot number 61,380 (279 x 220)

— Continued on next page —

# **B**VIDEO CAMERA RECORDER

CCD-TR315/TR416/TR416PK CCD-TRV16/TRV16PK

# HII BVIDEO CAMERA RECORDER

CCD-TR516/TR516PK/TR716 CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK





### Input and output connectors

Video output

Phono jack, 1 Vp-p, 75 ohms, unbalanced

Audio output

Monaural, Phone jack, 327 mV (at output impedance 47 kilohms) impedance less than 2.2 kilohms

RFU DC OUT

Special minijack, DC 5V

Earphone jack (TRV series only) Monaural minijack (ø 3.5 mm)

LANC control jack

Stereo mini-minijack (ø 2.5 mm)

MIC jack

Mini jack, 0.388mV low impedance with 2.5 to 3.0 V DC, output impedance 6.8 kilohms (ø 3.5 mm): Monaural type

Speaker (TRV series only) Dynamic speaker

### General

Power requirements 7.2 V (battery pack) 8.4 V (AC power adaptor) Averege power consumption(when

using the battery pack)
During camera recording
CCD-TR416/TR416PK/TR516/

TR516PK: 2.4 W CCD-TR315/TR716: 2.5 W During camera recording using LCD

CCD-TRV16/TRV16PK/TRV36/

TRV36PK: 3.1 W CCD-TRV43/TRV46/TRV46PK: 3.2 W

Viewfinder

CCD-TRV16/TRV16PK/TRV36/

TRV36PK: 2.5 W

CCD-TRV43/TRV46/TRV46PK: 2.6 W

Operating temperature 32°FC to 104°F (C0°C to 40°C)

Storage temperature

-4°FC to 140°F (-20°C to +60°C)

Dimentions (Approx.) 4 1/4 x 4 1/4 x 7 5/8 in. 107 x 107 x 193 mm)(w/h/d) Mass (Approx.)

CCD-TR315/TR716 : 1 lb 11 oz (790 g) CCD-TR416/TR416PK/TR516/ TR516PK : 1 lb 11 oz (780 g)

CCD-TRV16/TRV16PK/TRV36/ TRV36PK: 1 lb 14 oz (870 g) CCD-TRV43/TRV46/TRV46PK

: 1 lb 15 oz (880 g)

excluding the battery pack, lithium battery, cassette and shoulder strap

2 lb 3 oz (1 kg)

including the battery pack NP-F330, lithium battery CR2025, cassette and

shoulder strap

Microphone Monaural type

Supplied accessories

See page 4.

### AC power adaptor

Power requirements 100 -240 V AC, 50/60 Hz

Power consumption

23 W

Output voltage

DC OUT: 8.4 V, 1.5 A in operating mode

Operating temperature 32°F to 104°F(0°C to 40°C)

Storage temperature

-4°F to +140°F(-20°C to +60°C)

Dimentions (Approx.)

 $5 \times 19/16 \times 21/2$  in. (125 x 39 x 62 mm)(w/h/d) excluding projecting parts

Mass (Approx.)

9.8 oz (280 g) excluding power cord

Design and specifications are subject to change without notice.

Abbreviation

Canadian model is abbreviated as CND. Brazilian model is abbreviated as BR.

# **SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

- Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
- Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- 4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.

### **SAFETY-RELATED COMPONENT WARNING!**

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

- 5. Check the B+ voltage to see it is at the values specified.
- 6. Flexible Circuit board Repairing
  - Keep the temperature of the soldering iron around 270°C during repairing.
  - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
  - Be careful not to apply force on the conductor when soldering or unsoldering.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE A SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÉCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÉCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


# Table for difference of function

Model	CCD-	CCD-		CCD-	CCD-	CCD-	CCD-	CCD-	CCD-	CCD-	CCD-	Remark
	TR315	TR416		TR416PK	TR516	TR516PK	TR716	TRV16	TRV16PK	TRV36	TRV36PK	
Destination	E,BR	US,CND	BR	E	US,CND	E	US,CND	0.0,00.00,00,	E	US,CND	E	
								HK,BR,TW				
Classification	TYPE E		TYPE G		TYI	PE C	TYPE D	TYI	PE F	TY	PE A	
View finder	B/W	Color	Color	Color	Color	Color	Color	B/W	B/W	B/W	B/W	
Remote commander (RMT-708)	×	×	×	×	0	0	0	×	×	0	0	
Hi8	×	×	×	×	0	0	0	×	×	0	0	
Standard 8	0	0	0	0	×	×	×	0	0	×	×	
Lens (Digital ZOOM)	180X	180X	220X	220X	330X	330X	330X	180X	180X	330X	330X	
Video light	×	×	×	×	0	0	0	×	×	0	0	
CCD	510	510	510	510	510	510	510P	510	510	510	510	
Steadyshot	×	×	×	×	×	×	0	×	×	×	×	O: with SE-80/81board SE451,452,IC451
Laser Link	×	×	×	×	X	×	×	×	×	×	×	O: with VC-215board IC751
LCD panel	×	×	×	×	×	×	×	2.5 inch	2.5 inch	2.5 inch	2.5 inch	2.5 inch : TRV series only

Model	CCD-	CCD-	CCD-	Remark
	TRV43	TRV46	TRV46PK	
Destination	US,CND	US,CND,E,	E	
		HK		
Classification		TYPE B		
View finder	B/W	B/W	B/W	
Remote commander (RMT-708)	0	0	0	
Hi8	0	0	0	
Standard 8	×	×	×	
Lens (Digital ZOOM)	330x	330x	330x	
Video light	0	0	0	
CCD	510P	510P	510P	
Steadyshot	0	0	0	O: with SE-80/81board SE451,452,IC451
Laser Link	0	0	0	O: with VC-215board IC751
LCD panel	2.5 inch	2.5 inch	2.5 inch	2.5 inch : TRV series only

• Abbreviation
Canadian model is abbreviated as CND.
Brazilian model is abbreviated as BR.
Hong Kong model is abbreviated as HK.
Taiwan model is abbreviated as TW.

# Supplied accessories

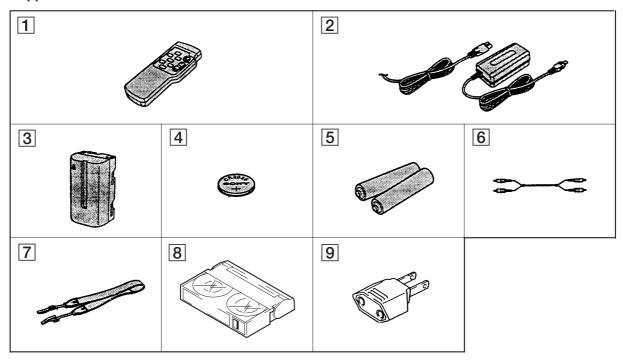

- T RMT-708 Wireless Remote Commander (1) CCD-TR516/TR516PK/TR716 CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK
- 2 AC-L10A/L10B/L10C AC power adaptor
- 3 NP-F330 Battery pack (1)
- 4 CR2025 Lithium Battery (1)
  The lithium battery is already installed in your camcorder.
- 5 Size AA (R6) battery for Remote Commander (2)
  CCD-TR516/TR516PK/TR716
  CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK
- 6 A / V connecting cable (1)

- 7 Shoulder strap (1)
- 8 Video P6-15P HB tape
  CCD-TR416: US/TR516: US/TR716:US
  CCD-TRV16:US/TRV36:US/TRV43:US/TRV46:US
- 9 2 pin conversion adaptor (1) CCD-TR315//TR416PK/TR516PK CCD-TRV16:E,BR,HK,TW/TRV16PK/TRV36PK/ TRV46:E,HK/TRV46PK
- Abbreviation
   Brazilian model is abbreviated as BR.
   Hong Kong model is abbreviated as HK.
   Taiwan model is abbreviated as TW.

# **SERVICE NOTE**

# 1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied (8.4V) to the battery terminal using the service power cord (J-6082-223-A), the power is shut off so that the unit cannot operate.

This following three methods are available to prevent this. Take note of which to use during repairs.

### Method 1.


Connect the servicing remote commander RM-95 (J-6082-053-B) to the LANC jack, and set the remote commander switch to the "ADJ" side.

### Method 2.

Press the battery switch of the battery terminal using adhesive tape, etc.


### Method 3.

Use the DC IN terminal. (Use the AC power adaptor.)

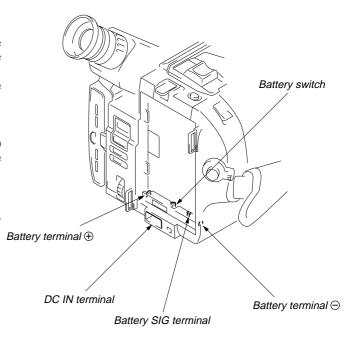

# 2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)

- ① Refer to 2-1. to remove the front panel block.
- 2 Refer to 2-4. to remove the cabinet (R) assembly.
- 3 Refer to 2-6. to remove the battery panel block.
- 4 Refer to 2-7. to remove the cabinet (L) block.
- (5) Add +5V from the DC POWER SUPPLY and unload with a pressing the cassette lid.

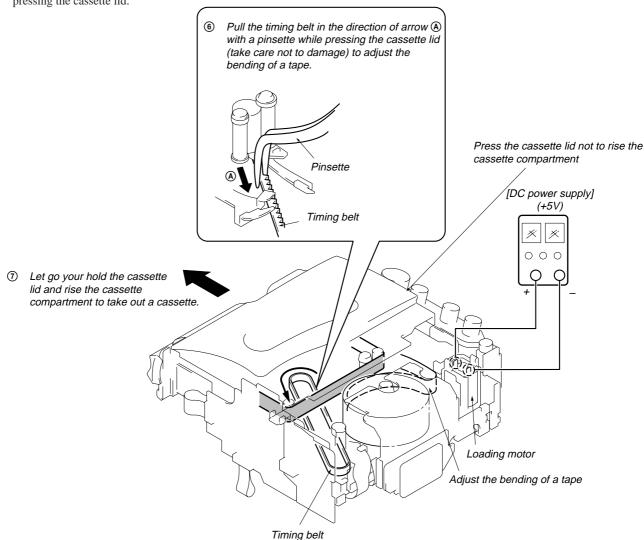

# **SELF-DIAGNOSIS FUNCTION**


### 1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder or Display window what to do. This function consists of two display; self-diagnosis display and service mode display.

Details of the self-diagnosis functions are provided in the Instruction manual.

### 2. Self-diagnosis display

When problems occur while the unit is operating, the counter of the viewfinder or Display window shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the "repaired by:", "block" in which the problem occurred, and "detailed code" of the problem.

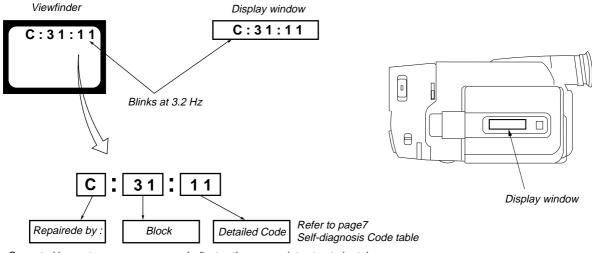

C: Corrected by customer

Indicates the appropriate step to be taken

H : Corrected by dealer E

31 ... Reload the tape.

E: Corrected by service engineer


32 ... Turn on power again.

### 3. Service Mode Display

The service mode display shows up to six self-diagnosis codes shown in the past.

### 3-1. Display Method

While pressing the "STOP" key, set the switch from OFF to "VTR or PLAYER", and continue pressing the "STOP" key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

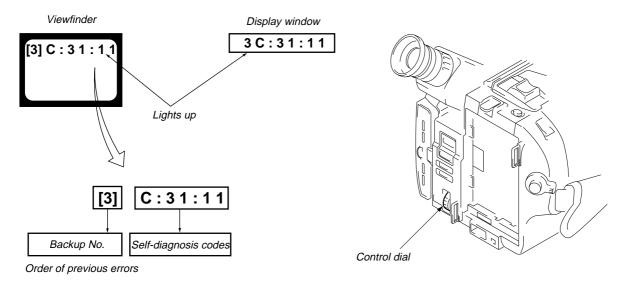

# 3-2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

[1] : Occurred first time
[2] : Occurred second time
[3] : Occurred third time
[6] : Occurred the last time

# 3-3. End of Display

Turning OFF the power supply will end the service mode display.

**Note:** The self-diagnosis display data will be backed up by the coin-type lithium battery. When this coin-type lithium battery is disconnected, the self-diagnosis data will be lost by initialization.

# 4. Self-diagnosis Code Table

C.	lf dioano	oio Codo		
_	elf-diagno	sis Code	_	
Repaired by:	Block Function	Detailed Code	Symptom/State	Correction
C	2 1	0 0	Condensation.	Remove the cassette, and insert it again after one hour.
	2 1		Video head is dirty.	Clean with the optional cleaning cassette.
C	2 2 2		Non-standard battery is used.	Use the InfoLITHIUM battery.
C	2 3	0 0	LOAD direction. Loading does not	Ose the iniolitinowi battery.
С	3 1	1 0	complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	1 1	UNLOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	-	T reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1	2 1	S reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1		T reel fault	Load the tape again, and perform operations from the beginning.
C	3 1		S reel fault	Load the tape again, and perform operations from the beginning.
C	3 1		FG fault when starting capstan	Load the tape again, and perform operations from the beginning.
C	3 1		FG fault during normal capstan operations	Load the tape again, and perform operations from the beginning.
C	3 1		FG fault when starting drum	Load the tape again, and perform operations from the beginning.
C	3 1	4 1	PG fault when starting drum	Load the tape again, and perform operations from the beginning.
C	3 1		FG fault during normal drum operations	Load the tape again, and perform operations from the beginning.
C	3 1		PG fault during normal drum operations	Load the tape again, and perform operations from the beginning.
С	3 1	4 4	Phase fault during normal drum operations	Load the tape again, and perform operations from the beginning.
	2 2	1 0	I OAD direction leading mater time out	Remove the battery or power cable, connect, and perform operations
C	3 2	1 0	LOAD direction loading motor time-out	from the beginning.
С	3 2	1 1	UNLOAD direction loading motor time- out	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3 2	2 0	T reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 1	S reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 2	T reel fault	Remove the battery or power cable, connect, and perform operations
C	3 2	2 3	S reel fault	from the beginning.  Remove the battery or power cable, connect, and perform operations
	3 2	2 3	S reer ruur	from the beginning.
C	3 2	3 0	FG fault when starting capstan	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	3 1	FG fault during normal capstan operations	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3 2	4 0	FG fault when starting drum	Remove the battery or power cable, connect, and perform operations from the beginning.
С	3 2	4 1	PG fault when starting drum	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 2	FG fault during normal drum operations	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 3	PG fault during normal drum operations	Remove the battery or power cable, connect, and perform operations
C	3 2	4 4	Phase fault during normal drum operations	from the beginning.  Remove the battery or power cable, connect, and perform operations
E	6 1	0 0	Difficult to adjust focus (Cannot initialize focus.)	from the beginning.  Inspect the lens block focus reset sensor (Pin (9) of CN551 of VC-215 board) when focusing is performed when the focus dial is rotated in the focus manual mode and the focus motor drive circuit (IC552 of VC-215 board) when the focusing is not performed.  Note: Use the remote commander RM-95 only for the model without the focus dial.
Е	6 1	1 0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset sensor (Pin ②) of CN551 of VC-215 board) when zooming is performed when the zoom lens is operated and the zoom motor drive circuit (IC552 of VC215 board) when zooming is not performed.
Е	6 2	0 0	Handshake correction function does not work well.(With pitch angular velocity sensor output stopped)	Inspect yaw angular velocity sensor (SE451 of SE-80/81 board) peripheral circuits.
Е	6 2	0 1	Handshake correction function does not work well.(With yaw angular velocity sensor output stopped)	Inspect pitch angular velocity sensor (SE452 of SE-80/81 board) peripheral circuits.

# **TABLE OF CONTENTS**

SERVICE NOTE
1. Power Supply During Repairs5
2. To Take out a Cassette when not Eject (Force Eject)
Self-Diagnosis Function
1. Self-diagnosis function
2. Self-diagnosis Display6
3. Service Mode Display6
3-1. Display Method6
3-2. Switching of Backup No
3-3. End of Display 6
4. Self-diagnosis Code Table
1. GENERAL
This section is extacked from instruction manual of
CCD-TRV36/TRV43/TRV46.
Using this manual1-1
Checking supplied accessories1-1
Installing and Charging the battery pack1-1
Inserting a cassette1-2
Camera recording1-2
Hints for better Shooting1-4
Checking the recorded picture
Playing back a tape1-5
Searching for the end of the picture1-5
Using alternative power sources1-6
Changing the mode settings1-6
Shooting with backlighting1-7
Using the FADER function1-7
Shooting in the dark (NightShot)1-8
Using the wide mode function
Using the PROGRAM AE function
Focusing manually
Enjoying picture effect
Adjusting the exposure
Superimposing a title
Making your own titles
Recording with the date/time
Using the built-in light1-12
Releasing the STEADYSHOT function
Watching on a TV screen
Editing onto another tape
Changing the lithium battery in the camcoder1-13
Resetting the date and time
Simple setting of clock by time difference1-14
Usable cassettes and playback modes1-14

Tips for using the battery pack 1-15

Maintenance information and precautions 1-15

Using your camcorder abroad 1-17

Truoble check 1-17

Self-diagnosis display 1-18

Identifying the parts 1-18

Warning Indicators 1-20

# 2. DISASSEMBLY

2-1.	Removal of Front Panel Block and Video Light Block	2-1
2-2.	Removal of LB-54, VF-119 and	
	VF-120 Boards (Color View Finder Models)	2-2
2-3.	Removal of VF-99 Board and	
	CRT Assembly (B/W View Finder Models)	2-2
2-4.	Removal of Cabinet (R) Block	2-3
2-5.	Removal of Cassette Lid Assembly	2-3
2-6.	Removal of Battery Panel Block	2-3
2-7.	Removal of Cabinet (L) Block	2-4
2-8.	Removal of Control Switch Block (FK-8500)	2-4
2-9.	Removal of Zoom Lens Block and VL-20/21 Board	2-4
2-10.	Removal of DD-117 and PJ-90/91 Boards	2-4
2-11.	Removal of VC-215 abd SE-80/81 Boards	2-5
2-12.	Removal of View Finder Block	2-5
2-13.	Removal of TR Cover, CF-60 Board and	
	Display Panel (TR series)	2-6
2-14.	Removal of IR Cover, CF-61 Board	
	and LCD Panel (TRV series)	2-6
2-15.	Service Position	2-7
2-16.	Circuit Boards Location	2-8
2-17.	Flexible Boards and Flat Cables Location	2-8
3. B	SLOCK DIAGRAMS	
-		
3-1.	Overall Block Diagram	3-1
3-2.	Camera/Video 1 Block Diagram	3-5
3-3.	VTR/Camera Control Block Diagram	3-9
3-4.	Servo Block Diagram	3-12
3-5.	Mode Control Block Diagram	3-15
3-6.	Audio Block Diagram	3-19
3-7.	LCD Block Diagram (TRV model)	
3-8.	Color EVF Block Diagram (Color EVF model)	
3-9.	B/W EVF Block Diagram (B/W EVF model)	
3-10.	Power Block Diagram	

# 4. PRINTED WIRING BOARDS AND SCHEMATIC 5. ADJUSTMENTS **DIAGRAMS**

4-1. Frame Schematic Diagram (1)	4-1
Frame Schematic Diagram (2)	4-4
4-2. Printed Wiring Boards and Schematic Diagrams	4-7
• CD-210/211 (CCD Imager) Board	4-8
<ul> <li>VC-215 (Camera, Y/C Processor, IN/OUT,</li> </ul>	
REC/PB Head Amp, Servo/System Control, Servo,	
Audio, IR Transmitter, Mode Control) Board	4-10
• VC-215 (Camera 1) Board	4-17
• VC-215 (Camera 2) Board	4-19
VC-215 (Y/C Processor) Board	4-23
• VC-215 (IN/OUT) Board	4-27
VC-215 (REC/PB Head Amp) Board	4-31
VC-215 (Servo/System Control) Board	4-35
• VC-215 (Servo) Board	4-38
• VC-215 (Audio) Board	4-41
<ul> <li>VL-20/21 (Video Light) Board (Video Light model)</li> </ul>	4-45
VC-215 (IR Transmitter) Board	4-46
VC-215 (Mode Control) Board	4-49
SE-80/81 (Steady Shot) Board	
• PJ-90/91 (AV OUT) Board	
• MA-345/346 (Mic, Laser Link) Board	4-59
CF-60 (Control (TR Series)) Board	4-65
CF-61 (Control (TRV Series)) Board	
<ul> <li>Control Switch Block (FK-8500/SS-8500)</li> </ul>	4-79
<ul> <li>PD-107 (RGB Decorder, LCD Drive,</li> </ul>	
Back Light, LCD (TRV Series)) Board	
• PD-107 (RGB Decorder (TRV Series)) Board	
• PD-107 (LCD Drive (TRV Series)) Board	
PD-107 (Back Light (TRV Series)) Board	
• PD-107 (LCD (TRV Series)) Board	
• VF-99 (B/W EVF (B/W EVF Model)) Board	
• VF-119 (COLOR EVF (COLOR EVF Model)) Board	
• VF-120 (COLOR EVF (COLOR EVF Model)) Board	
• LB-54 (Back Light (Color EVF model)) Board	
• DD-117 (Power) Board	4-109

5-1.	CAN	MERA SECTION ADJUSTMENTS	5-1
1-1.	Prep	parations before Adjustment (Camera Section)	5-1
	1-1-1.	List of Service Tools	5-1
	1-1-2.	Preparations	5-2
	1-1-3.	Precautions	5-5
	1.	Setting the Switch	5-5
2	2.	Adjusting Procedure	5-5
	3.	Subject	
	1-1-4.	Adjusting Remote Commander	5-6
	1.	Using the adjusting remote commander	5-6
2	2.	Precautions upon using the adjusting	
		remote commander	
		Data Processing	
1-2.	Initi	alization of D, E, F Page Data	
	1.	Initialization the D, E, F Page Data	
	2.	Modification of D, E, F Page Data	
	3.	D Page Table	
	4.	F Page Table	
	5.	E Page Table	
		nera System Adjustments	
	1.	G-CAM flip Adjustment	
	2.	Hall Adjustment	
	3.	Flange Back Adjustment	
	3-1.	Flange Back Adjustment (1)	
	3-2.	Flange Back Adjustment (2)	
	4.	Flange Back Check	
	5.	Picture Frame Setting	
	6.	Color Reproduction Adjustment	
	7.	IRIS IN/OUT Adjustment	
	8.	MAX GAIN Adjustment	
	9.	Auto White Balance Standard Data Input	
	10.	Auto White Balance Adjustment	
	11.	White Balance Check	
	12.	Angular Velocity Sensor Sensitivity Check	5-22
1-4.		or Electronic Viewfinder System Adjustments	<b>-</b>
		D-TR416/TR416PK/TR516/TR516PK/TR716)	
	1.	EVF Initial Data Input	
	2.	VCO Adjustment (VF-119 board)	
	3.	Bright Adjustment (VF-119 board)	
	4. -	Contrast Adjustment (VF-119 board)	5-25
•	5.	Backlight Consumption Current Adjustment	5 25
1 5	Mor	(VF-120 board)ochrome Electronic Viewfinder	3-23
1-3.		em Adjustments	5 26
		Horizontal Slant Check	
		Centering Adjustment	
		Focus Adjustment	
		Aberration Adjustment	
		Horizontal Amplitude Adjustment (VF-99 board)	
		Vertical Amplitude Adjustment (VF-99 board)	
		Brightness Adjustments (VF-99 board)	
		Horizontal Amplitude, Vertical Amplitude,	5-20
	1-5-0.	Focus Check	5_28
1-6	LCI	System Adjustment (TRV Series)	
	1.	LCD initial data input	
	2.	VCO adjustment (PD-107 board)	
	2. 3.	D range adjustment (PD-107 board)	
	4.	Bright adjustment (PD-107 board)	
	5.	Contrast adjustment (PD-107 board)	
	6.	V-COM adjustment (PD-107 board)	
	7.	Color adjustment (PD-107 board)	
	7. 8.	V-COM adjustment (PD-107 board)	
	9.	White balance adjustment (PD-107 board)	

5-2.	ME	CHANICAL SECTION ADJUSTMENT5-34
2-1.	Ope	rating without a Cassette5-34
2-2.	Tape	e path Adjustment5-34
1		Preparations for adjustments5-34
5-3.	VID	EO SECTION ADJUSTMENTS5-35
3-1.	Prep	parations before Adjustment5-35
3	-1-1.	Equipments to be Used5-35
3	-1-2.	Precautions on Adjusting5-36
		Adjusting Connectors5-36
3	-1-4.	Connecting the Equipments5-37
3	-1-5.	Alignment Tape5-37
		Output Level and Impedance5-39
		Recording Mode (Standard 8/Hi8) switching
		(Hi8 model)5-39
3	-1-8.	Service Mode5-39
1		Test mode setting5-39
2		Emergency memory address5-40
2	-1.	EMG CODE (Emergency Code)5-40
2	2-2.	MSW Codes5-41
3	١.	Bit value discrimination5-42
4		Switch check (1)5-42
5	<i>.</i>	Switch check (2)5-43
6	i.	Headphone jack check5-43
7	<b>'</b> .	Input/output selection check5-43
8	3.	LED, LCD (display window) check5-44
9	).	Record of use check5-44
3-2.	Syst	em Control System Adjustment5-45
1		Initialization of D, E, F Page Data5-45
2		Battery End Adjustment (VC-215 board)5-45
3-3.	Serv	ro System Adjustments5-46
1		CAP FG Offset Adjustment (VC-215 board)5-46
2		Switching Position Adjustment (VC-215 board) 5-46
3-4.	Vide	System Adjustments5-47
1.		28 MHz Origin Oscillation Adjustment
		(VC-215 board)5-47
2.		AFC f0 Adjustment (VC-215 board)5-48
3.		Filter f0 Adjustment (VC-215 board)5-48
4.		Y OUT Level Adjustment (VC-215 board)5-49
5.		C OUT Level Adjustment (VC-215 board)5-49
6.		RP Filter f0 Adjustment (VC-215 board)5-50
7.		Hi8 REC Y Current Adjustment (VC-215 board)
		(CCD-TR516/TR516PK/TR716 CCD-TRV36/
		TRV36PK/TRV43/TRV46/TRV46PK)5-51
8.		Standerd8 REC Y Current Adjustment
		(VC-215 board) (CCD-TR315/TR416/TR416PK
		CCD-TRV16/TRV16PK)5-52
9.		Hi8 REC L Level Adjustment (VC-215 board)
		(CCD-TR516/TR516PK/TR716 CCD-TRV36/
		TRV36PK/TRV43/TRV46/TRV46PK)5-53
10	0.	Standerd8 REC L Level Adjustment
		(VC-215 board) (CCD-TR315/TR416/TR416PK
		CCD-TRV16/TRV16PK)5-54
- 1	1	REC C Current Adjustment (VC-215 board) 5-55

3-5. IR Tr	ansmitter Adjustments
	(CCD-TRV43/TRV46/TRV46PK)5-56
	IR Video Carrier Frequency Adjustment
	(VC-215 board)5-56
2.	IR Video Deviation Adjustment (VC-215 board) 5-56
	IR Audio Deviation Adjustment (VC-215 board) 5-57
3-6. Mona	nural Audio System Adjustment5-58
1.	1.5 MHz Deviation Adjustment (VC-215 board) 5-59
2.	BPF Adjustment (VC-215 board)5-59
3-7. Arrar	ngement Diagram for Adjustment Parts5-60
6. REPA	JIR PARTS LIST
0	
	oded Views6-1
6-1-1.	Remote Commander and Cassette Lid Assembly 6-1
	Cabinet (L) and Battery Panel Assembly6-2
	Front Panel Block Assembly6-3
	Cabinet (R) Block Assembly (TR series)6-4
6-1-5.	Cabinet (R) Block Assembly (TRV series)6-5
6-1-6.	Main Boards Block Assembly6-6
6-1-7.	Clolor EVF Block Assembly
	(CCD-TR416/TR416PK/TR516/TR516PK/TR716) 6-7
6-1-8.	B/W EVF Block Assembly
	(CCD-TR315 and TRV series)6-8
6-1-9.	LCD Block Assembly (TRV series)6-9
	. Zoom Lens Block Assembly6-10
	. Cassette Compartment Assembly6-11
	LS Chassis Assembly6-12
	. Mechanism Chassis Assembly6-13
6-2. Elect	rical Parts List6-14

# CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

# **SECTION 1 GENERAL**

This section is extracted from instruction manual of CCD-TRV36/TRV43/TRV46.

### Before you begin **Using this manual**

The instructions in this manual are for the three models listed below. Before you start reading this manual and operating the unit, check your model number by looking at the bottom of your camcorder. The CCD-TRV46 is the model used for illustration purposes. Otherwise, the model name is indicated in the flustrations. Any differences in operation are clearly indicated in the text, for example, "CCD-TRV46 only." As your read through this manual, buttons and settings on the camcorder are shown in eapital letters.

capital letters. e.g. Set the POWER switch to CAMERA. You can hear the beep sound to confirm your operation.

### Types of differences

CCD-	TRV36	TRV43	TRV46
Steadyshot		•	•
LASER LINK		•	•

# Note on TV color systems

TV color systems differ from country to country. To view your recordings on a TV, you need an NTSC system-based TV.

### Precaution on copyright

Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

# Precautions on camcorder care

- The LCD screen is manufactured using high-precision technology. However, there may be some tiny black points and/or bright points (red, blue or green in color) that constantly appear on the LCD screen. These points are normal in the manufacturing process and do not affect the recorded picture in any way. Over 99.99% are operational for effective use.

  10 not let the camcorder get wet. Keep the camcorder away from rain and sea water. Letting the camcorder get wet way cause the unit to malfunction, and sometimes this malfunction cannot be repaired [a].

  Never leave the camcorder exposed to temperatures above 140°F (60°C), such as in a car parked in the sun or under direct sunlight [b].








# **Checking supplied accessories**

Check that the following accessories are supplied with your camcorder.

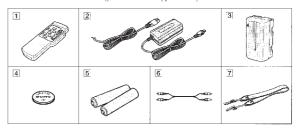

- [1] Wireless Remote Commander (1)
- 2 AC-L10A/L10B/L10C AC power adaptor (1), Power cord (1) (p. 7, 24)
- |3| NP-F330 Battery pack (1) (p. 6, 24)
- [4] CR2025 Lithium Battery (1) (p. 55) The lithium battery is already installed in your camcorder.
- 5 Size AA (R6) battery for Remote Commander (2) (p. 79)
- 6 A/V connecting cable (1) (p. 52)
- 7 Shoulder strap (1) (p. 80)

Contents of the recording cannot be compensated if recording or playback is not made due to a malfunction of the camcorder, video tape, etc.

Getting started

4

# Installing and charging the battery pack

Before using your camcorder, you first need to install and charge the battery pack. This camcorder operates only with the "InfoLITHIUM" battery pack (L series). "InfoLITHIUM" is a trademark of Sony Corporation.

# Installing the battery pack

Install the battery pack in the direction of the  $\nabla$  mark on the battery pack. Slide the battery pack down until it catches on the battery release lever and clicks Atlach the battery pack to the camcorder securely.



### Note on the battery pack

Do not carry the camcorder by grasping the battery pack

# Installing and charging the battery pack

# Charging the battery pack

Charge the battery pack on a flat surface without vibration. The battery pack is charged

- a little in the factory.

  (1) Open the DC IN jack cover and connect the supplied AC power adaptor to the DC IN jack with the plug's ▲ mark up.

  (2) Connect the power cord to the AC power adaptor.


  (3) Connect the power ord to a wall outlet.

  (4) Slide the POWER switch to OFF. Remaining battery time is indicated by the

(4) Slide the POWER switch to OIF. Remaining battery time is indicated by the minutes on the display window. Charging begins. When the remaining battery indicator becomes —, normal charge is completed. For full charge, which allows you to use the battery longer than usual, leave the battery pack attached for about 1 hour after normal charge is completed until FUIL appears in the display window.

the display window.

Before using the camcorder with the battery pack, unplug the AC power adaptor from the DC TN jack of the camcorder. You can also use the battery pack before it is completely charged

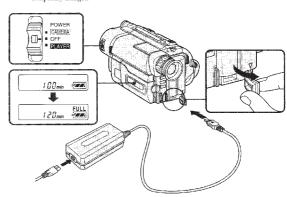

- min" appears in the display window until the camcorder calculates remaining
- battery time.

  •Remaining battery time indication in the display window roughly indicates the recording time with the viewfinder. Use it as a guide. It may differ from the actual recording time.

# Installing and charging the battery pack

### **Charging time**

Battery pack (NP-)	F330 (supplied)	F530/F550	1730/1730H/ F750	F930/1950
Charging	150	210	300	390
time* (min.)	(90)	(150)	(240)	(330)

The time required for a normal charge is indicated in parentheses.

\*Approximate minutes to charge an empty battery pack using the supplied AC power adaptor. (Lower temperatures require a longer charging time.)

### **Battery life**

Upper numbers are the time when recording with the viewfinder. Lower numbers are the time when recording with the LCD screen. Using both will further reduce recording

### CCD-TRV36

Battery pack (NP-)	F330 (supplied)	F530	F550	F730	F730H /F750	F930	F950
Continuous recording time*	130 (115) 100 (90)	225 (200) 170 (155)	260 (230) 205 (185)	450 (405) 350 (310)	530 (480) 425 (380)	710 (640) 555 (500)	815 (730) 650 (590)
Typical recording time**	65 (60) 55 (45)	115 (105) 90 (85)	135 (120) 110 (100)	235 (210) 190 (170)	280 (250) 230 (205)	375 (335) 305 (275)	430 (385) 355 (320)
Playing time on LCD	100 (90)	165 (150)	200 (180)	335 (300)	410 (365)	535 (480)	630 (570)

### CCD-TRV43/TRV46

Battery pack (NP-)	F330 (supplied)	F530	1550	F730	F730H /F750	F930	F950
Continuous recording time*	125 (110) 100 (90)	215 (190) 165 (150)	250 (220) 200 (180)	430 (385) 335 (300)	510 (460) 410 (365)	680 (610) 535 (480)	780 (700) 630 (570)
Typical recording time**	65 (55) 55 (45)	110 (100) 90 (80)	130 (115) 110 (95)	225 (200) 180 (165)	270 (240) 225 (200)	360 (320) 290 (260)	410 (370) 345 (310)
Playing time on LCD	100 (90)	165 (150)	200 (180)	335 (300)	410 (365)	535 (480)	630 (570)

Numbers in parentheses indicate the time when you use a normally charged battery. Battery life will be shorter if you use the camcorder in a cold environment.

Approximate continuous recording time at 77°F(25°C).

Approximate minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

### Installing and charging the battery pack

- Notes on remaining battery time indication during recording

  Remaining battery time is displayed in the viewfinder or on the LCD screen.
  However, the indication may not be displayed properly, depending on using
- conditions and circumstances.

   When you close the LCD panel and open it again, it takes about 1 minute for the correct remaining time to be displayed.

**To remove the battery pack**While pressing BATT RELEASE, slide the battery pack in the direction of the arrow



You can look at the demonstration of the functions available with this camcorder (p. 29).

9


# Inserting a cassette

8

- Make sure that the power source is installed. When you want to record in the Hi8 system, use Hi8 video cassette HiB.

  (1) While pressing the small blue button on the EJECT switch, slide it in the direction of the arrow. The cassette compartment automatically lifts up and opens.
- (2) Insert a cassette with the window facing out.

  (3) Close the cassette compartment by pressing the "PUSH" mark on the cassette compartment. The cassette compartment automatically goes down.

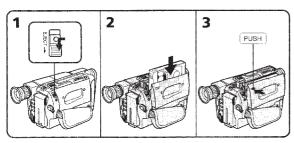

### To eject the cassette

While pressing the small blue button on the EJECT switch, slide it in the direction of the arrow.

To prevent accidental erasure
Slide the tab on the cassette to expose the red mark. If you insert the cassette with the red mark exposed and close the cassette compartment, the beeps sound for a while. If you try to record with the red mark exposed, the legs and ≜ indicators flash, and you

To re-record on this tape, slide the tab back out covering the red mark



### Basic operations

# **Camera recording**


- Make sure that the power source is installed and a cassette is inserted and that the START/STOP MODE switch inside the LCD panel is set to <u>B</u>. Before you record one-time events, you may want to make a trial recording to make sure that the camcorder is working correctly.

  When you use the camcorder for the first time, power on it and reset the date and time to your time before you start recording (p. 57). The date is automatically recorded for 10 seconds after you start recording (AUTO DATE feature). This feature works only once a day.

  (1) While pressing the small green button on the POWER switch, set it to CAMERA.

  (2) Turn STANDBY up to STANDBY.

  (3) Press START/STOP. The camcorder starts recording. The "REC" indicator appears. The red lamp lights up in the viewfinder when you record with the viewfinder. The camcord also lights up. camcorder also lights up.

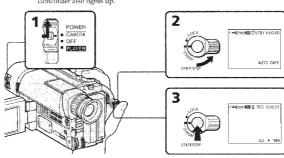

### To stop recording momentarily [a]

Press START/STOP again. The "STBY" indicator appears in the viewfinder (Standby mode).


To finish recording [b] Press START/STOP again. Turn STANDBY down to LOCK and set the POWER switch to OFE. Then, eject the cassette.



**Note**Be sure to remove the battery pack from the comcorder after using.

### To focus the viewfinder lens

If you cannot see the indicators in the viewfinder clearly, focus the viewfinder lens. Turn the viewfinder lens adjustment ring so that the indicators in the viewfinder come

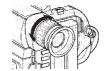

### Note on Standby mode

If you leave the camcorder in Standby mode for 5 minutes while the cassette is inserted, the camcorder turns off automatically for saving battery power as well as for preventing the battery and tape from wearing down. To resume Standby mode, turn STANDBY down and up again. To start recording, press START/STOP.

Note on recording
When you record from the beginning of a tape, run the tape for about 15 seconds before
starting the actual recording. Passing the tape lead will ensure that you will not miss
any start-up scenes when you play back the tape.

- Notes on the tape counter

   The tape counter indicates the recording or playback time. Use it as a guide. There will be a time lag of several seconds from the actual time. To set the counter to zero, press COUNTER RESET:

   If the tape is recorded in SP and LP modes mixed, the tape counter shows incorrect recording time. When you intend to edit the tape using the tape counter as a guide, record in same (SP or LP) mode.

Note on the beep sound
The beep sounds when you operate the camcorder. Several beeps also sound as a warning of any unusual condition of the camcorder.
Note that the beep sound is not recorded on the tape. If you do not want to hear the beep sound, select "OFF" in the menu system.

### Note on the AUTO DATE feature

Note on the ACTO DATE reature.

The clock is set to East Coast Standard Time at the factory. You can reset the clock in the menu system. You can change the AUTO DATE settings by selecting ON or OFF in the menu system. The AUTO DATE feature shows the date automatically once a day. the menu system. The AUTO DATE reature shows the date automatically one However, the date may automatically appear more than once a day when:

you reset the date and time.

you eject and insert the tape again.

you stop recording within 10 seconds.


you stop recording within 2 seconds.

### Camera recording

# Using the zoom feature

Zooming is a recording technique that lets you change the size of the subject in the

For more professional-looking recordings, use the zoom function sparingly.
"T" side: for telephoto (subject appears closer)
"W" side: for wide-angle (subject appears further away)

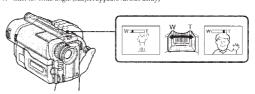

### Zooming speed (Variable speed zooming)

ve it further for a faster zoom

# When you shoot a subject using a telephoto zoom

when you shoot a studiest using a telephrotic 2001. If you cannot get a sharp focus while in extreme telephoto zoom, move the power zoom lever to the "W" side until the focus is sharp. You can shoot a subject that is at least about 2.5/8 feet (about 80 cm) away from the lens surface in the telephoto position, or about 1/2 inch (about 1 cm) away in the wide-angle position.

### Zooming more than 18x - digital zoom

When you set D ZOOM to ON in the menu system, more than 18x zoom is performed digitally, but the picture quality deteriorates as you move the lever toward the "T" side.

- Notes on digital zoom

   The right side [a] of the power zoom indicator shows the digital zooming zone, and the left side [b] shows the optical zooming zone. When you set D ZOOM to ON in the menu system, the [a] zone appears.

   Digital zoom function is set to OFF at the factory.



12

# Camera recording

# Selecting the START/STOP mode

Your camcorder has three modes. These modes enable you to take a series of quick

shots resulting in a lively video.

(1) While pressing OPEN, open the LCD panel.

(2) Set START/STOP MODE to the desired mode

 $\underline{\mathbb{K}}$  : Recording starts when you press START/STOP, and stops when you


A: Recording starts when you press \$1 ART/\$TOP, and stops when you press it again (factory setting).

ANTI GROUND SHOOTING ≟: The camcorder records only while you press down \$TART/\$TOP so that you can avoid recording unnecessary scenes. 5SEC: When you press \$TART/\$TOP, the camcorder records for 5 seconds and then stops automatically.

(3) Turn \$TAXDBY up to \$TANDBY and press \$TART/\$TOP.

Recording starts.

If you selected 5SEC, the tape counter disappears and five dots appear. The dots disappear at a rate of one per second as illustrated below.

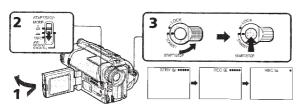

**To extend the recording time in 5SEC mode**Press START/STOP again before all the dots disappear. Recording continues for about 5 seconds from the moment you press START/STOP.

### Notes on START/STOP mode

• If you have turned off the indicators on the LCD screen, the dots do not appear. • You cannot use the fader function in the SSEC or ANTI GROUND SHOOTING  $\underline{1}$ 

mode

### Camera recording

### Shooting with the LCD screen

You can also record the picture while looking at the LCD screen.

You can also record the picture while looking at the LCD screen.
When using the LCD screen, the viewfinder turns of automatically. You cannot monitor the sound from the speaker during recording.

(1) While pressing OPEN, open the LCD panel.
(2) Adjust the angle of the LCD panel.
The LCD panel moves about 90 degrees to this side and about 210 degrees to the other side.


the other side.

To adjust the brightness of the LCD screen, press LCD BRIGHT.

+ side: to brighten the LCD screen

- side: to dim the LCD screen

The battery life is longer when the LCD panel is closed. Use the viewfinder instead of the LCD screen to save the battery power.

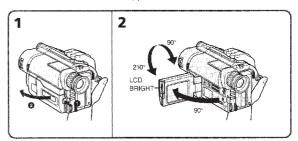

# **Backlighting the LCD screen**

If the LCD screen is insufficiently illuminated even after adjusting LCD BRIGHT, select LCD B. L. in the menu system and set to BRIGHT. You can select I CD B. L. only while using the battery pack as a power source.

13


### Camera recording

- Notes on the LCD panel

   When closing the LCD panel, turn it vertically until it clicks [a].

   When turning the LCD panel, turn it always vertically; otherwise, the camcorder body may be damaged or the LCD panel may not close properly [b].

   Close the LCD panel completely when not in use.

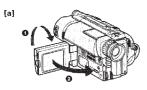



### Letting the subject monitor the shot (Mirror mode)

You can turn the LCD panel over so that it faces the other way and you can let the subject monitor the shot while shooting with the viewfinder.

Turn the LCD panel vertically first until it clicks, then turn it over. The  $\otimes$  indicator appears on the LCD screen (Mirror mode) and the date and remaining tape indicators disappear.

### To cancel mirror mode

Turn the LCD panel back toward the viewfinder.

### Notes on mirror mode

- the picture on the LCD looks as a mirror-image while recording in mirror mode. The SFBY indicator appears as **IIO** and REC as **①**. The other indicators may not appear in a second control of the control STBY indicator appears as ■● and REC as ●. The other indicators may not appear mirror mode.


  •While recording in mirror mode, you cannot operate the following buttons: TITLE, DATE, ITME and MENU.

  •The date appears in reverse when the AUTO DATE feature is turned on. When recorded, it will be normal.

### Hints for better shooting

For hand-held shots, you'll get better results by holding the camcorder according to the

following suggestions:
• Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the controls with your thumb.

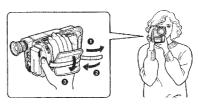



- Place your right elbow against your side.

   Place your left hand under the camcorder to support it. Be sure to not touch the

- Phace your left hand under me camanage as support in the same of the built-in microphone.

  Place your eye firmly against the viewfinder eyecup.

  Use the viewfinder frame as a guide to determine the horizontal plane.

  You can also record in a low position to get an interesting angle. Lift the viewfinder up for recording from a low position [a].

  You can also record in a low position or even in a high position using the LCD panel lb1.
- [b].

  When you use the LCD screen outdoors in direct sunlight, the LCD screen may be difficult to see. If this happens, we recommend that you use the viewlinder.







17 16

### Hints for better shooting

Place the camcorder on a flat surface or use a tripod
Try placing the camcorder on a table top or any other flat surface of suitable height. If
you have a tripod for a still camera, you can also use it with the camcorder.
When attaching a non-Sony tripod, make sure that the length of the tripod screw is less
than 9/32 inch (6.5 mm). Otherwise, you cannot attach the tripod securely and the
screw may damage the camcorder.

### Cautions on the viewfinder and the LCD

- Do not pick up the camcorder by the viewfinder or by the LCD panel [c].

  Do not place the camcorder so as to point the viewfinder or the LCD screen toward the sun. The inside of the viewfinder or the LCD screen may be damaged. Be careful when placing the camcorder under sunlight or by a window [d].










# Checking the recorded picture


Using EDITSEARCH, you can review the last recorded scene or check the recorded picture in the viewfinder or on the LCD screen.

(1) While pressing the small green button on the POWER switch, set it to CAMERA.

(2) Turn STANDBY up to STANDBY.

(2) Turn STANDET up to STANDET.
(3) Press the - (⑤) side of EDITSEARCH momentarily; the last few seconds of the recorded portion play back (Rec Review).
You can monitor the sound from the speaker or an earphone.
Hold down the - side of EDITSEARCH until the camcorder goes back to the scene you want. The last recorded portion is played back. To go forward, hold down the + side (Edit Search).

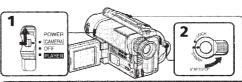

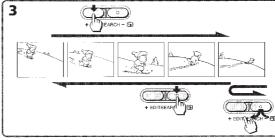

# To stop playback

### To go back to the last recorded point after edit search

Press END SEARCH. The last recorded point is played back for about 5 seconds (10 seconds in LP mode) and stops. Note that this function does not work once you eject the cassette after you recorded on the tape.


To begin re-recording
Press START/STOP. Re-recording begins from the point you released EDITSEARCH.
Provided you do not eject the cassette, the transition between the last scene you recorded and the next scene you record will be smooth.

### Playing back a tape

You can monitor the playback picture on the LCD screen

- (1) While pressing the small green button on the POWER switch, set it to PLAYER.
- (2) Insert the recorded tape with the window facing out
- (3) While pressing OPEN, open the LCD panel. Adjust the angle of the LCD panel or the brightness of the LCD screen if necessary.
   (4) Press ◄ to rewind the tape.
- (5) Press > to start playback
- (6) Adjust the volume using VOLUME and adjust the brightness of the LCD screen using LCD BRIGHT.

You can also monitor the picture on a TV screen, after connecting the camcorder to a TV or VCR.

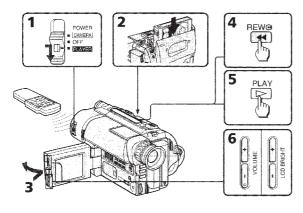

To stop playback, press ■.
To rewind the tape, press ◀◀.
To fast-forward the tape rapidly, press ▶▶

### Playing back a tape

When monitoring on the LCD screen
You can turn the LCD panel over and move back to the camcorder with the LCD screen
facing out [a]. You can adjust the angle of the LCD screen by turning the LCD screen
up to 15 degrees [b].



### Using the remote commander

You can control playback using the supplied Remote Commander. Before using the Remote Commander, insert the size AA (R6) batteries.

### Note on DISPLAY button

Press DISPLAY to display the screen indicators on the LCD screen. To erase the indicators, press DISPLAY again. If the POWER switch is set to CAMERA, you can erase the indicator by pressing DISPLAY.

### Using an earphone

Connect an carphone (not supplied) to the ③ jack. You can adjust the volume using VOLUME. When you use an earphone, the sound does not come from the speaker.

### To view the playback picture in the viewfinder

Close the LCD panel. The viewfinder turns on automatically. When using the viewfinder, you can monitor sound only by using an earphone. To view on the LCD screen again, open the LCD panel. The viewfinder turns off automatically.

**Note on the lens cover**The lens cover does not open when the POWER switch is set to PLAYER. Do not open the lens cover manually. It may cause malfunction.

20

# Playing back a tape

# Various playback modes

You can enjoy clear pictures on the LCD screen during still, slow and picture search. (Crystal-clear still/slow/picture search)

To view a still picture (playback pause)
Press II during playback. To resume playback, press II or

To locate a scene (picture search)
Keep pressing ◀◀ or ▶▶ during playback. To resume normal playback, release the button.

# To monitor the high-speed picture while advancing the tape or rewinding (skip scan) Keep pressing ◄ while rewinding or ▶ while advancing the tape. To resume normal playback, press ▶.

# To view the picture at 1/5 speed (slow playback)

Press ► on the Remote Commander during playback. To resume normal playback, press ►. If slow playback lasts for about 1 minute, it shifts to normal speed automatically.

# Notes on playback

- Notes on playback
  Notes on playback or Notes may appear when you use the crystal-clear still/slow/picture search function to
  play back the tape recorded in LP mode.
  Streaks appear and the sound is muted in the various playback modes.
  When playback pause mode lasts for 5 minutes, the camcorder automatically enters
  stop mode.
  Horizontal noise appears at the center or top and bottom of the screen when you play
  back a tape in reverse. This is normal.

# Searching for the end of the picture


You can go to the end of the recorded portion after you record and play back the tape to That all gold the factors have recorded portion and your econded and play starts the daye of make the transition between the last scene you recorded and the next scene smooth. The tape starts rewinding or fast-forwarding and the last 5 seconds (10 seconds in LP mode) of the recorded portion play back. Then the tape stops at the end of the recorded states (Factors 15 and mode) of the recorded portion play back. Then the tape stops at the end of the record picture (End Search).

Note that the End Search function does not work once you eject the cassette after you have recorded on the tape.

(1) While pressing OPEN, open the LCD panel.

(2) Press END SFARCH.

This function works when the POWER switch is set to either CAMERA or PLAYER.

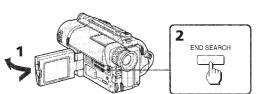

# If you start recording after using END SEARCH Occasionally, the transition between the last scene

ne you recorded and the next scene may

21

### Advanced operations

# Using alternative power sources

You can choose any of the following power sources for your camcorder: battery pack, house current, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used	
Indoors	House current	Supplied AC power adaptor	
Outdoors	Battery pack	Battery pack NP-F330 (supplied), NP-F530, NP-F550, NP-F730, NP-F730H, NP-F750, NP-F930 NP-F950	
In the car 12 V or 24 V car battery		Sony DC adaptor/charger DC-V700 (not supplied)	

### Notes on power sources

- Notes on power sources

  Disconnecting the power source or removing the battery pack during recording or playback may damage the inserted tape.


  The DC IN jack has power source priority. This means that the battery pack cannot supply any power if the power cord is connected to the DC IN jack, even when the power cord is not plugged into a wall outlet.

### Using alternative power sources

# Using the house current

- (1) Open the DC IN jack cover, and connect the AC power adaptor to the DC IN  $\,$
- jack on the camcorder.

  (2) Connect the power cord to the AC power adaptor
- (3) Connect the power cord to a wall outlet.

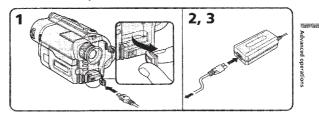

The power cord must only be changed at a qualified service shop

### PRECAUTION

The set is not disconnected from the AC power source (house current) as long as it is connected to the wall outlet, even if the set itself has been turned off.

Keep the AC power adaptor away from the camcorder if the picture is disturbed.



This mark indicates that this product is a genuine accessory for Sony

video products.

When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

25 24


### Changing the mode settings

You can change the mode settings in the menu system to further enjoy the features and functions of the camcorder.

(1) Press MENU to display the menu.

- (2) Turn the control dial to select the desired icon in the left side of the menu, then
- press the dial to set.

  (3) Turn the control dial to select the desired item, then press the dial to set
- (4) Turn the control dial to select the desired mode, and press the dial to set. If you want to change the other modes, repeat steps 3 and 4. If you want to change the other items, select  $\Rightarrow$  RETURN and press the dial, then repeat steps from 2
- (5) Press MENU or select ⊋ icon to erase the menu display

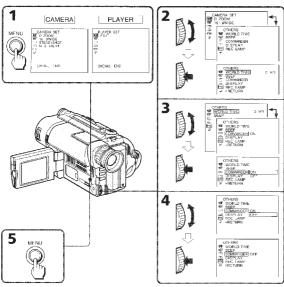

Note on the menu display
Depending on the model of your camcorder, the menu display may be different from
that in this illustration.

### Changing the mode settings

- Notes on changing the mode setting
   Menu Items differ depending on the setting of the POWER switch to PLAYER or
  CAMERA.
- When you let the subject monitor the shot (mirror mode), the menu display does not appear.

# Selecting the mode setting of each item

# Items for both CAMERA and PLAYER modes

TREMS TO FORT CAMERA AND PLAYER MODES

IN CO. B. L.\* SRT NORMAL/BRIGHTS

Normally select BRT NORMAL.

Select BRIGHT when the LCD screen is dark.

When you select BRIGHT, battery life is about 10 percent shorter during recording.

When you use the power sources other than the battery pack, BRIGHT is automatically selected, and LCD B.L. is not displayed in the menu.

### □ LCD COLOR\*

Select this item to adjust the color on the LCD screen

- Sciect AUTO when you want to display the remaining tape bar:
   for about 8 seconds after the camcorder is turned on and calculates the remainder
- of the tape.

  for about 8 seconds after a cassette is inserted and the camcorder calculates the of the tape.

  • for about 8 seconds after a cassette is inserted and the camcorder calculates the remainder of the tape.

  • for about 8 seconds after ▶ is pressed in PLAYER mode.

  • for about 8 seconds after DISPLAY is pressed to display the screen indicators.

  • for the period of tape rewinding, forwarding or picture search in PLAYER mode.

  • Select ON to always display the remaining tape indicator.

### 

- You can use this feature only with Sony TVs.

   Select ON to turn on the TV automatically when using the LASER LINK function.

   Select OFF not to turn on the TV.

# TV INPUT\* <VIDEO1/VIDEO2/VIDEO3/OFF> (CCD-TRV43/TRV46 only)

Select Lor 2 or 3 of the video input on the TV which the IR receiver (not supplied) is connected to when using the LASER LINK function.

- Normally select NORMAL.
   Select 2x to display selected menu item by twice size of normal.

- © BEEP\* <N/ON/OFF>
   Select ON so that beeps sound when you start/stop recording, etc.
   Select OFF when you do not want to hear the beep sound.

### Changing the mode settings

# ETC COMMANDER <ON/OFF>

- Select OFF when not using the supplied Remote Commander for the camcorder.
   Select OFF when not using the Remote Commander.

- | FIG | DISPLAY\* < LCD or V-OUT/LCD>
  | Normally select LCD. The display appears on the LCD screen.
  | Select V-OUT/LCD to show the display both on the TV screen and LCD screen.

# Items for CAMERA mode only © D ZOOM\* <ON/OFF>

- TO DESCRIPT OF AUGUSTS OF A CONTROL OF THE PROPERTY OF THE PRO back to optical zoom.

### 16:9WIDE\* <OFF/CINEMA/16:9FULL>

- Normally select OFF.
   Select CINEMA to record in CINEMA mode.
   Select 16:9FULL to record in 16:9FULL mode.

# STEADYSHOT\* <ON/OFF> (CCD-TRV43/TRV46 only) Normally select ON. Select OFF to release the Steadyshot function.

### ® N.S.LIGHT\* <ON/OFF>

- Normally select ON.
   Select OFF to not use the NightShot Light function.

# REC MODE\* <SP/LP>

- Select SP When recording in SP (standard play) mode.

  Select LP when recording in LP (long play) mode.

  Select LP when recording in LP (long play) mode.

  When a tape recorded on this camcurder in LP mode is played back on other types of 8mm camcorders or VCRs, the playback quality may not be as good as that on this

When you record tapes in LP mode, the picture is not recorded in the Hi8 system, but in the standard 8 system.

### ™ ORC TO SET\*

Select this item to automatically adjust the recording condition to get the best possible

Select unis firm an administration of the recording.

If you have already performed this function, "ORC ON" is displayed.

ORC stands for "Optimizing the Recording Condition."

CLOCK SET\*
Reset the date or time

- AUTO DATE\* < ON/OFF>
   Select ON to record the date for 10 seconds after recording has started.
   Select OFF to not record the date.

### Changing the mode settings

### DEMO MODE\* <ON/OFF>

- Select ON to make the demonstration appear.
   Select OFF to deactivate the demonstration mode

- Notes on DEMO MODE

   DEMO MODE is set to STBY (Standby) at the factory and the demonstration starts about 10 minutes after you set the POWER switch to CAMERA without inscring a
- cassette.

  Note that you cannot select STBY of DEMO MODE in the menu system.

  'You cannot select DEMO MODE when a cassette is inserted in the camcorder.

  'If you insert a cassette during the demonstration, the demonstration stops. You can start recording as usual. DEMO MODE automatically returns to STBY.

  'When NIGHTSHOT is set to ON, "NIGHTSHOT" appears in the viewfinder or on the LCD screen and you cannot select DEMO MODE.

To look at the demonstration at once Eject the cassette, if inserted. Select ON of DEMO MODE and erase the menu display. The demonstration will begin. When you turn off the carmoorder once, DEMO MODE automatically returns to

FIG. WORLD TIME\* Select this item to set the clock by a time difference.

- ETC REC LAMP\* <ON/OFF>
   Select OFF when you do not want the camera recording/battery lamp at the front of
- the unit to light u Normally select O.N.

### Items for PLAYER mode only

- EDIT < ON/OFF>
   Select ON to minimize picture deterioration
   Normally select OFF.
  The EDIT setting works only during playback ize picture deterioration when editing.


- \* These settings are retained even when the battery pack is removed, as long as the lithium battery is in place.

28

# **Shooting with backlighting**

When you shoot a subject with the light source behind the subject or a subject with a light background, use the BACK LIGHT function.

Press BACK LIGHT. The Maindicator appears in the viewfinder or on the LCD screen.

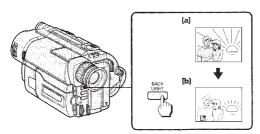

- [a] Subject is too dark because of backlight.

  [b] Subject becomes bright with backlight compensation

### After shooting

Be sure to release this adjustment condition by pressing BACK LIGHT again. The  $\boxtimes$  indicator disappears. Otherwise, the picture will be too bright under normal lighting

- This function is also effective under the following conditions:

  A subject with a light source nearby or a mirror reflecting light

  A white subject against a white background. Especially when you shoot a person wearing shiny clothes made of silk or synthetic fiber, his or her face tends to become dark if you do not use this function.


# To make a fine adjustment

You can adjust the exposure manually. However, when you adjust the exposure manually, you cannot operate the BACK LIGHT function.

# **Using the FADER function**

# Selecting the fader function

You can fade in or out to give your recording a professional appearance. When the picture fades in, the sound gradually increases. When the picture fades out, the sound gradually decreases.

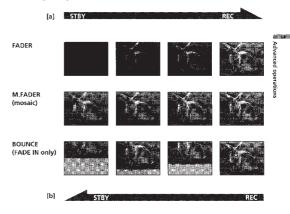

When fading in, the picture gradually changes from black and white to color. When fading out, the picture gradually changes from color to black and white.

When D ZOOM in the menu system is set to ON, you cannot use the BOUNCE function.

29

### Using the FADER function

# Using the fader function


### When fading in [a]

- (1) While the camcorder is in Standby mode, press FADER until the desired fade indicator flashes.
   (2) Press START/STOP to start recording. The fade indicator stops flashing.

### When fading out [b]

- (1) During recording, press FADBR until the desired fade indicator flashes.
  (2) Press START/STOP to stop recording. The fade indicator stops flashing, and
- then recording stops.
  The fading mode selected last is indicated (irst of all.



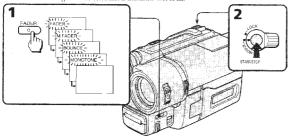

# When you use the BOUNCE function Set D ZOOM to OFF in the menu syste

### Note on the BOUNCE function

When you use the following functions, "BOUNCE" indicator does not appear – Wide mode

- Functions using the PICTURE EFFECT button
   Functions using the PROGRAM AE button

### To cancel the fader function

Before pressing START/STOP, press FADER until the indicator disappears.

# When the date or time indicator or title is displayed. The date or time indicator and title do not fade in or fade out

### When the START/STOP MODE switch is set to 5SEC or ANTI GROUND SHOOTING You cannot use the fader function.

- Note on the fader function
  While using the BOUNCE function, you cannot use the following functions.
   Exposure
   Focus
- Zoom


# Shooting in the dark (NightShot)

The NightShot function enables you to shoot a subject in a dark place. You can achieve



(1) While the camcorder is in Standby mode, slide NIGHTSHOT to ON.
(2) Press START/STOP to start recording.

and "NIGHTSHOT" indicators flash.

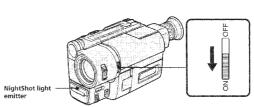

### To cancel the NightShot function

### **Using the NightShot Light**

When you set N.S.LIGHT to ON in the menu system, the picture will be more clear. NightShot Light rays are infrared and are therefore invisible. The maximum limit of NightShot Light is about 10 feet (about 3 meters).

- Notes on the NightShot

  \*Do not use the NightShot function in bright places (ex.outdoors). This may cause your cameorder to malfunction.

  \*The following functions are not operable when using the NightShot function.

  -PROCERAM AE

  -Exposure

  \*When you keep setting NIGHTSHOT to ON in normal recording, picture may be recorded in incorrect/unmatural color.
- Tree you seep setting (MSTATA) to the manual training, particle may be recorded in incorrect/unnatural color.

  If focusing is difficult with the autofocus mode when using the NightShot function, focus manually.


32

33

# Using the wide mode function

# Selecting the desired mode

You can record a cinemalike picture (CINEMA) or a 16:9 wide picture to watch on the 16:9 wide-screen TV (16:9 FULL).

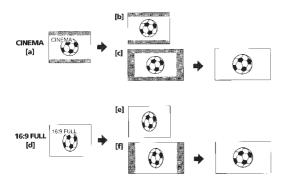

Black bands appear at the top and the bottom of the screen, and the viewfinder or LCD screen [a] and a normal TV screen [b] look wide. You can also watch the picture without black bands on a wide-screen TV [c].

The picture in the viewfinder or LCD screen [d] or on a normal TV [e] is horizontally compressed. You can watch the picture of normal images on a wide-screen TV [f].

### Using the wide mode function

### Using the wide mode function

You can select the wide mode (OFF, CINEMA, 16:9FULL) in the menu system (p. 28).

# To cancel wide mode Select OFF in the menu system

# To watch the tape recorded in wide mode

To watch the tape recorded in CINEMA mode, set the screen mode of the wide-screen TV to zoom mode. To watch the tape recorded in 16.9 FULL mode, set it to full mode. For details, refer to the operating instructions of your TV. Note that the picture recorded in 16.9 FULL mode looks compressed on a normal TV.

### Notes on wide mode

- Notes on wide mode

  If wide mode is set to 16:9FULL, the SteadyShot function does not work and the 'd'
  indicator flashes (CCD-TRV43/TRV46 only).

  In wide mode, you cannot select the BOUNCE function with FADER.
  When you necord in 16:9 FULL mode, the date or time indicator will be widened on
  the wide-screen IV.

- the wide-screen IV.

  If you dub a tape, the tape is copied in the same mode as the original recording.

  When recording, you cannot change the mode.

# **Using the PROGRAM AE function**

### Selecting the best mode

You can select one of six PROGRAM AE (Auto Exposure) modes to suit your shooting situation, referring to the following.











Spotlight mode
 For subjects in spotlight, such as at the theater or a formal event.

### & Soft Portrait mode

Soft Portrait mode
For zooming in on a still subject in telephotu mode, or for a subject behind an obstacle such as a screen. Creates a soft background for subjects such as people or flowers, and faithfully reproduces skin color.

### ℜ Sports Lesson mode

For recording fast-moving subjects such as in tennis or golf games


. Second as indue. For people or faces in strong light or reflected light, such as at a beach in midsummer or on a ski slope.

■ Landscape mode
For distant subjects such as mountains or when recording a subject behind an obstacle such as a window or screen.

### Using the PROGRAM AE function

### Using the PROGRAM AE function

- (1) Press PROGRAM AE.(2) Turn the control dial to select the desired PROGRAM AE mode.

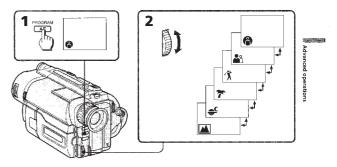

### To turn off PROGRAM AE

- Notes on focus setting
   In the Spotlight, Sports lesson and Beach & Ski modes, you cannot take cluse-ups because the camcorder is set to focus only on subjects in the middle to far distance.
   In the Sunset & Moon and Landscape modes, the camcorder is set to focus only on

### distant subjects. Note on PROGRAM AE

NOTE ON PROGRAM AE
Flickering or changes in color may occur in the following modes if recording is carried
out under a discharge tube such as a fluorescent lamp, sodium lamp or mercury lamp.
If this happens, turn off PROGRAM AE.

- Soft Portrait mode

- Sports Lesson mode

NOTE
When using the NightShot function, the PROGRAM AE indicator flashes to indicate that it will not operate with this function.


**37** 

36

# **Focusing manually**

### When to use manual focus

In the following cases you should obtain better results by adjusting the focus manually.

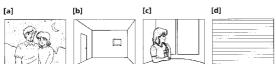

- Insufficient light [a]
- Insurincent iggit (a)
   Subjects with fittle contrast walls, sky, etc. [b]
   Too much brightness behind the subject [c]
   Horizontal stripes [d]
   Subjects through frosted glass
   Subjects beyond nets, etc.
   Bright subject or subject treflecting light
   Shooting a stationary subject when using a tripod




# Focusing manually

# Focusing manually

When focusing manually, first focus in telephoto before recording, and then reset the

- shot length.
  (1) Set FOCUS to MANUAL. The ® indicator appears in the viewfinder or on the LCD screen
- (2) Move the power zoom lever to the end of the "T" side in the optical zoom zone.
  (3) Turn the NEAR/FAR dial to achieve a sharp focus.
- (4) Set the desired shot length using the power

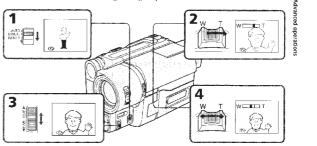

# To return to autofocus mode

Set FOCUS to AUTO. The @ indicator in the viewfinder or on the LCD screen disappears

### Shooting in relatively dark places

Shoot at wide-angle after focusing in the telephoto position.

To record a very distant subject
Push DOC US down to INFINITY. The lens focuses on the most distant subject while
POC US is held down. When it is released, manual focus mode is resumed.
Use this function when shooting through a window or a screen, to focus on a most distant subject.

### Note on manual focusing

The following indicators may appear:

when recording a very distant subject.

when the subject is too close to focus on

# **Enjoying picture effect**

# Selecting picture effect

You can digitally process images to obtain special effects like those in films or on the TV.













The contrast of the picture is emphasized, and the picture looks like an animated cartoon.

NEG. ART [b]
The color and brightness of the picture is reversed.

The picture is sepia

The picture is monochrome (black and white).

**SOLARIZE [c]**The light intensity is more clear, and the picture looks like an illustration.

MOSAIC [d]
The picture is mosaic

SLIM [e]
The picture expands vertically.


### STRETCH [f]

The picture expands horizontally.

### **Enjoying picture effect**

# Using picture effect function

- (1) Press PICTURE EFFECT.
  (2) Turn the control dial to select the desired picture effect mode.

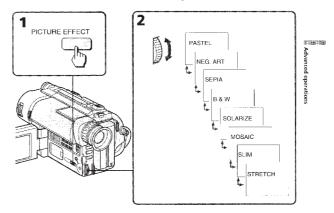

**To turn off picture effect**Press PICTURE EFFECT. The indicator in the viewfinder or on the LCD screen goes out.

Note on the picture effect When you turn the power off, the camcorder returns automatically to normal mode.

41 40

# Adjusting the exposure

# When to adjust the exposure

Adjust the exposure manually under the following cases.






[a]The background is too bright (back lighting)Insufficient light: most of the picture is dark

- [b]
   Bright subject and dark background
   To record the darkness faithfully

# Adjusting the exposure

(1) Press EXPOSURE.
(2) Turn the control dial to adjust the brightness.

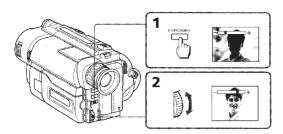

### To return to automatic exposure mode

# Adjusting the exposure

Shooting with the sun behind you
If the light source is behind your subject, or in the following situations, the subject will
be recorded too dark.

The subject is indoors and there is a window behind the subject.

Bright light sources are included in the scene.
When shooting a person wearing white or shiny clothes in front of a white
background, the face will be recorded too dark.

# Shooting in the dark

we recommend you to use the built-in light or a video light (not supplied). To get the best color, you must maintain a sufficient light level.

### You cannot adjust the exposure when using the NightShot function.

When you adjust the exposure manually

• BACK LIGHT does not work.

• If you change the PROGRAM AE mode, the comcorder automatically returns to automatic exposure mode.

You can select one of eight preset titles and two custom titles. You can also select the language, color, size and position of titles.

### Superimposing titles

Making your own titles

2

the dial.


dial

TITLE

- Press TITLE to display the title menu.
   Turn the control dial to select □ , then press the dial.
- (3) Turn the control dial to select the desired title, then press the dial. The titles are displayed in the language you selected.

  (4) Turn the control dial to select the color, size, or position, then press the dial.

  (5) Turn the control dial to select the desired item, then press the dial.
- (6) Repeat step 4 and 5 until the title is arranged as desired.
- (7) Press control dial again to complete the setting.
  (8) When you want to stop recording the title, press TITLE

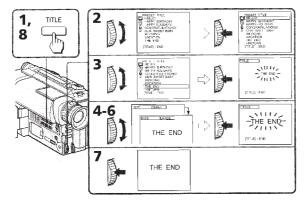

### Superimposing a title

# To superimpose the title from beginning

To superimpose the title while you are recording After pressing START/STOP to start recording, start from step 1. In this case, beep is not heard.

To select the language of preset title
When you want to select the language, select a before step 2. Then select language and
return to step 2.

### To use the custom title

stom title, select 🛍 in step 2.

- Notes on superimposing a title

   If you have not given any custom title, "----..." appears on the display.

   The FADER function works while the title is displayed, however, the title does not fade.
- adde.

  If you display the menu or title menu while superimposing a title, the title is not recorded while the menu or title menu is being displayed.

Title color changes as follows : WHITE  $\leftrightarrow$  YFLLOW  $\leftrightarrow$  VIOLET  $\leftrightarrow$  RED  $\leftrightarrow$  CYAN  $\leftrightarrow$  GREFN  $\leftrightarrow$  BLUE

# Title size changes as follows : $SMALL \longleftrightarrow LARGE$

 $\label{eq:themselection} \begin{tabular}{ll} Title position changes as follows: \\ When you select the fitle size "SMALL", you can choose 9 positions. When you select the fitle size "LARGE" you can choose 8 positions. \\ \end{tabular}$ 

### Notes on the title

- · Depending on size or position of the title, both of date and time or either of them is
- out displayed.

   If you input 13 characters or more for a LARGE title, the title is automatically reduced. into a proper size after the position is set.

  • When the title is displayed, LCD BRIGHT and VOLUME indicators do not appear

44

46

**To edit a title you have stored** In step 3, select CUSTOM1 or CUSTOM2, depending on which title you want to edit, then change the title.

Making your own titles

You can not enter over 20 characters title.

### If you take 5 minutes or longer to enter characters while a cassette is in the camcorder

**camcorder**The power goes off automatically. Characters you have entered remain. Turn STANDBY down once and then up again, then proceed from step 1.

# To delete a title

In step 4, turn the control dial to select  $[\P]$  then press the dial. The last character is crossed. Repeat this step until all characters are deleted.

45

# 3 12115 ALCUM 87330 SHYNI 86103 CHC 48103 CHC ABOAS 1 4 1 50NES [NET]

You can make up to two titles and store them in the camcorder. We recommend to set the POWER switch to PLAYER or eject the cassette before you begin. Your title can have up to 20 characters.

(1) Press TITLE to display the title menu.

(CUSTOM2), then press the dial.

(4) Turn the control dial to select the column of the desired character, then press

(5) Turn the control dial to select the desired character, then press the dial.
(6) Repeat step 4 and 5 until you finish the title.
(7) For finishing the titling work, turn the control dial to select SET, then press the

(2) Turn the control dial to select ♥ , then press the dial.
(3) Turn the control dial to select the first line (CUSTOM1) or second line




# Recording with the date/time

Before you start recording or during recording, press DATE or TIME. You can record the date or time displayed in the viewfinder or on the LCD screen with the picture. Press DATE (or TIME), then press TIME (or DATE) to display the date and time together.

These DATE (or LIME), then press TEME (or DATE) to display the date and time logether.

The clock is set to East Coast Standard time at the factory. You can reset the clock in the menu system.

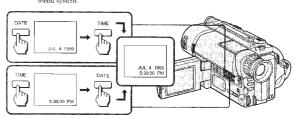

To stop recording with the date and/or time Press DATE and/or TIME again. The date and/or time indicator disappears. The recording continues


# **Optimizing the recording condition**

Use this feature to check the tape condition before recording, so that you can get the best possible picture (ORC).

- (1) While the camcorder is in Standby mode, press MENU to display the menu.
- (2) Turn the control dial to select , then press the dial.
  (3) Turn the control dial to select ORC TO SET, then press the dial.
- "START/STOP KEY" flashes.

(4) Press START/STOP.

The camcorder takes about 5 to 10 seconds to check the tape condition and then returns to Standby mode

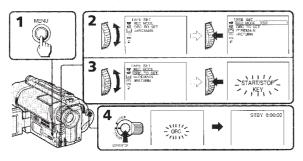

### Each time you insert the cassette

### Notes on the ORC function

- Notes on the ORC function

   When you set ORC TO SET, the recording on the tape is erased for about 0.1 second so that the camcorder can check the tape condition. Be careful when you use a recorded tape. The 0.1 second blank is crased if you record from the point where you set ORC TO SET for more than 2 seconds, or if you record over the blank.

   You cannot use this function on a tape with the red mark on the cassette exposed.


   ORC stands for "Optimizing the Recording Condition."

# Using the built-in light

You can use the built-in light to suit your shooting situation. The recommended distance between the subject and camcorder is about 5 feet (1.5 m).

While the camcorder is in Standby mode, slide LIG11T to ON. The built-in light turns

The built-in light turns on/off by turning on/off STANDBY.

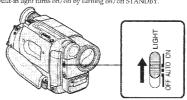

# To stop using the built-in light Slide LIGHT to OFF.

### To turn on the built-in light automatically

State LIGHT to Article.

The built-in light automatically turns on and off according to the ambient brightner. However, if the built-in light turns on for more than about 5 minutes, it automatica turns off. In this case, turn STANDBY down once and turn it up again.

- Notes

  The battery pack is quickly discharging while the built-in light is turned on. Slide
  LIGHT to OFF when not in use.

  When you do not use the camcorder, slide LIGHT to OFF and remove the battery pack
  to avoid turning on the built-in light accidentally.

  When flickering occurs when you shoot white and bright subjects in AUTO mode,
  slide LIGHT to ON.

  The built-in light may turn on/off when you use the PROGRAM AF or BACK LIGHT
  function.

- When inserting or ejecting a cassette, the built-in light may be turned off.

### CAUTION

Be careful not to touch the lighting section, because the plastic window and surrounding surfaces are hot while the light is on. It remains hot for a while after the light is turned off.

Not to be handled by children. Not to be framed by finders.

Use with caution to reduce the risk of fire or injury to persons.

Do not direct light at persons or materials from less than 4 feet (1.22 meters) during use and until cool.

Slide LIGHT of OFF when not in use.

48 49

# Using the built-in light

### Replacing the bulb


Lse the Sony XB-3D halogen lamp (not supplied). The supplied halogen lamp is not on the market. Purchase the Sony XB-3D halogen lamp. Remove the power source before replacing the bulb.

(1) While pushing the hole under the built-in light unit using a wire, remove the

unit.

(2) Turn the bulb housing counterclockwise and detach from the built-in light unit.

- (3) Replace the bulb using a dry cloth.
  (4) Attach the bulb housing turning it clockwise, then replace the built-in light

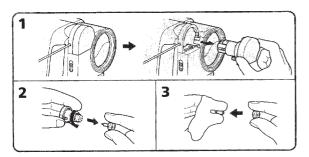

### CAUTION

- When replacing the bulb, use only the Suny XB-3D halogen lamp (not supplied) to reduce the risk of fire.
   To prevent possible burn hazard, disconnect the power source before replacing and do not touch the bulb until the bulb becomes cool enough to handle (for about 30 minutes or more).

To prevent the bulb from being smudged with finger prints, handle it with a dry cloth, etc. If the bulb is smudged, wipe it completely.

# Releasing the STEADYSHOT function

### - CCD-TRV43/TRV46 only

When the SteadyShot function is shake. working, the camcorder compensates for camera-

You can release the SteadyShot function when you do not need to use the SteadyShot function. The "G" indicator appear in the viewfinder or on the LCD screen. You do not need to use the SteadyShot function when shooting a stationary object with a tripod. You can select ON or OTF in the menu system (p. 28).

### To activate the SteadyShot function again

Set STEADYSHOT to ON in the menu systematical

### Notes on the SteadyShot function

- NOWS ON THE STEADYSHOT TUNCTION

  The SteadyShot function will not correct excessive camera-shake.

  When you set STEADYSHOT to ON or OFF in the menu system, the exposure may fluctuate
- fluctuate.
   SteadyShot does not operate in 16:9 FULL mode. If you set STEADYSHOT to ON in the menu system, the 'd' indicator flashes.

# Watching on a TV screen

Connect the camcorder to your TV or VCR to watch the playback picture on the TV screen. When monitoring the playback picture by connecting the ca we recommend you to use house current for the power source.


While playing back on a TV screen, close the LCD panel. Otherwise, picture distortion

# Connecting directly to a TV/VCR with Video/Audio input jacks

When connecting the  $\Lambda/V$  connecting cable, make sure you connect the plug to jacks of

When connecting the A/V connecting cable, make sure you connect the plug to Jacks of the same culour.

Open the Jack cover. With using the supplied A/V connecting cable, connect the camcorder to the LINE IN inputs on the TV or VCR connected to the TV. Set the TV/VCR selector on the TV to VCR. When connecting to the VCR, set the input selector on the VCR to LINE.

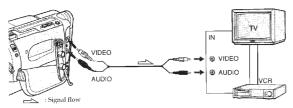

To connect to a TV or VCR without Video/Audio input jacks Use an NTSC type RFU adaptor (not supplied).

### Watching on a TV screen

### Using the AV cordless IR receiver

Once you connect the AV cordless IR receiver (not supplied) having the & LASER LINK mark to your TV or VCR, you can easily view the picture on your TV. For details, refer to the operating instructions of the AV cordless IR receiver.

LASER LINK is a system which transmits and receives a picture and sound between video equipment having the & mark by using infrared rays.

LASER LINK is a trademark of Sony Corporation.

### To play back on a TV

- To play back on a TV

  (1) After connecting your IV and AV cordless IR receiver, set the POWER switch on the AV cordless IR receiver to ON.

  (2) Set the POWER switch on the camcorder to PLAYER.

  (3) Turn the TV on and set the TV/VCR selector on the TV to VCR.

  (4) Press LASER LINK The lamp of the LASER LINK button lights up.

  (5) Press ▶ on the camcorder to start playback.

  (6) Point the LASER LINK emitter at the AV cordless IR receiver.

### To cancel the LASER LINK function

Press LASER LINK

- ryou use a sony iv

  You can turn on the TV automatically when you press the LASER I INK or ▶ button.
  To do so, set the AUTO TV ON to ON in the menu system and turn the TV's main
  switch on, then do either of the following;

   Point the LASER LINK emitter towards the TV's remote sensor and press LASER

- LINK.

  \*Turn on the LASER LINK button and press .

  \*You can switch the video input of the TV automatically to the one which the AV cordless IR receiver is connected. To do so, set the AUTO TV ON to ON and the TV NPUT to the same video input (1,2.3) in the menu system. With some models, however the picture and sound may be disconnected momentarily when the video input is switched.

  \*The above feature may not work with some TV models.

When LASER LINK is activated (the LASER LINK button is lit), the camcorder consumes power. Press and turn off the LASER LINK button when it is not needed.

52


Additional information

# Changing the lithium battery in the camcorder

Your camcorder is supplied with a lithium battery installed. When the battery becomes weak or dead, the & indicator flashes in the viewfunder for about 5 seconds when you set the POWER switch to CAMERA. In this case, replace the battery with a Sony CR2025 or Duracell Dt-2025 lithium battery. Use of any other battery may present a risk of fire or explosion. Discard used batteries according to the manufacturer's instructions.

a fisk of the of exposion 1798, and used cancers according to the cambinature instructions.

The lithium battery for the camcorder lasts for about 1 year under normal of (The lithium battery that comes installed at the factory may not last 1 year.)

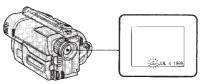

53

# before where you want to start editing, then press II to set the camcorder in playback pause mode. (3) On the VCR, locate the recording start point and set the VCR in recording

og talling belling ligt of all belling Turn down the volume of the camcorder while editing. Otherwise, picture distortion (1) Insert a blank tape (or a tape you want to record over) into the VCR, and insert your recorded tape into the camcorder.

(2) Play back the recorded tape on the camcorder until you locate the point just

pause mode. (4) First press  $\blacksquare$  on the camcorder, and after a few seconds press  $\blacksquare$  on the VCR to

You can create your own video program by editing with any other **B**18 mm, **HB**1H18, \*\* **IN**\* mini DV, **IN**\* DV, **N**\*IN, **SWS**1S-VHS, **WSB**1S-VHSC, **SWSB**1S-VHSC, **IB** Betaman or **BBB**1ED Betamax VCR that has video/audio inputs.

Before editing

Connect the camcorder to the VCR using the supplied A/V connecting cable. Set the input selector on the VCR to LINE, if available. Set EDIT to ON in the menu system (p. 29).

# start editing To edit more scenes

**Editing onto another tape** 

Repeat steps 2 to 4

Starting editing

To superimpose the title while you are editing You can superimpose the title while you are editing. Refer to "Su (p. 44). . uperimposing a title"

To stop editing
Press ■ on both the camcorder and the VCR

### Note on Fine Synchro Edit

If you connect a video deck that has the Fine Synchro Edit feature to the LANC & jack of the camcorder, using a LANC cable (not supplied), the edit will be even more

Notes on lithium battery

\*Keep the lithium battery out of the reach of children.

Should the battery be swallowed, immediately consult a doctor.

\*Wipe the battery with a dry cloth to assure a good contact.

\*Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

\*Note that the lithium battery has a positive (+) and a negative (-) terminals as illustrated. Be sure to install the lithium battery so that terminals on the ramorder. match the terminals on the camcorder.



The battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.

### Changing the lithium battery in the camcorder


# Changing the lithium battery

When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date, time and other items in the menu system retained by the lithium battery.

(1) Open the LCD panel and open the lid of the lithium battery compartment.

(2) Push the lithium battery down once and pull it out from the holder.

(3) Install the lithium battery with the positive (+) side facing out. Close the lid.

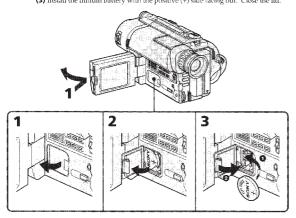

### Resetting the date and time

- You can reset the date and time in the menu system.


  (1) While the camcorder is in Standby mode, press MENU to display the menu.

  (2) Turn the control dial to select ## , then press the dial.

  (3) Turn the control dial to select CLOCK SET, then press the dial.

  (4) Turn the control dial to adjust the desired year, then press the dial.

  (5) Set the month, day, hour and minute by turning the control dial and pressing
- the dial.
- (6) Press MENU to erase the menu display.

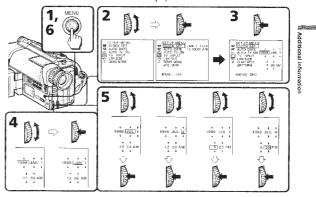

### To correct the date and time setting

### To check the preset date and time

Press DATE to display the date indicator.

Press TIME to display the time indicator.

When you press the same button again, the indicator goes off.

### The year changes as follows:



Note on the time indicator
The internal clock of this camcorder operates on a 12-hour cycle.
• 12:00 AM stands for midnight.
• 12:00 PM stands for moon.

56

57

# Simple setting of clock by time difference


You can easily set the clock for a local time by a time difference in the menu system. (1) While the camcorder is in the standby mode, press MENU to display the

- menu.

  (2) Turn the control dial to select ETC, then press the dial.

  (3) Turn the control dial to select WORLD TIME, then press the dial.
- (4) Turn the control dial to set a time difference, and press the dial. The hour of clock changes in relation to a time difference which you set.

  (5) Press MENU to crase the menu display.

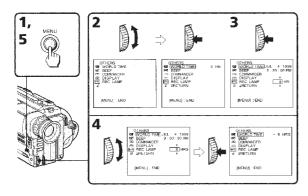

Note on WORLD TIME
If the time is not set, WORLD TIME does not work.

# **Usable cassettes and playback modes**

# Selecting cassette types

This Hi8 system is an extension of the standard 8 mm system, and was developed to realize higher picture quality. You can use either Hi8 or standard 8 mm video cassette for this camera. When you use a Hi8 video cassette, the recording is made in the Hi8 system. When you use a standard 8 mm video cassette, the recording is made in the standard 8 mm system. Standard 8 mm video cassette is incapable of recording in the Hi8 system.

If you intend to use a standard 8 mm video recordor? player to play back a video tape, you are required to use a standard 8 mm video cassette for recording.

### When you play back

The playback mode (SP/LP) and system (Hi8/standard 8 mm) are selected automatically according to the format in which the tape has been recorded. The quality of the recorded picture in LP mode, however, will not be as good as that in SP mode.

# Foreign 8 mm video

Because the TV color systems differ from country to country, you may not be able to play back foreign pre-recorded tapes. Refer to the list of "Using your camcorder abroad" to check the TV color system of foreign countries.

### Tips for using the battery pack

This section shows you how you can get the most out of your battery pack

# Preparing the battery pack as a many second and a second s

Always carry additional batteries
Have sufficient battery pack power to do 2 to 3 times as much recording as you have planned.

### Battery life is shorter in a cold environment

Battery efficiency is decreased, and the battery will be used up more quickly, if you are recording in a cold environment.

### To save battery power

To save battery power

Turn STANDBY down when not recording to save battery power.

A smooth transition between scenes can be made even if recording is stopped and
started again. While you are positioning the subject, selecting an angle, or looking
through the viewfinder lens or on the LCD screen, the lens moves automatically and the
battery is used. The battery is also used when a tape is inserted or removed.

Be sure and remove the battery pack after using the camcorder.

# When to replace the battery pack

While you are using your camcorder, the remaining battery indicator decreases gradually as battery power is used up. Remaining time in minutes appears.



When the remaining battery indicator reaches the lowest point, the  $\bigcap$  indicator may appear and start flashing in the viewfinder or on the LCD screen. When the  $\bigcap$  indicator changes from slow flashing to rapid flashing while you are recording, set the POWER switch to  $\bigcap$ Fo on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain a smooth transition between scenes after the battery pack has been replaced.

### Tips for using the battery pack

### Notes on the rechargeable battery pack

### Caution

Never leave the battery pack in temperatures above 140°F (60°C), such as in a car parked in the sun or under direct sunlight.

# The battery pack heats up

During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack This is not cause for concern and is normal.

### Be sure to observe the following

- Keep the battery pack away from fire.
  Keep the battery pack dry.
  Do not open nor try to disassemble the battery pack.
  Do not expose the battery pack to any mechanical shock.

### The life of the battery pack

indicator flashes rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

### Charging temperature

You should charge batteries at temperatures from 50°F to 86°F (from 10°C to 30°C). Lower temperatures require a longer charging time.

61

60

# Notes on the "infoLITHIUM" battery pack

### What is "InfoLITHIUM"

Tips for using the battery pack

What is "InfoLITHIUM" is a lithium ion battery pack which can exchange data with compatible video equipment about its battery consumption.

When you use this battery pack with video equipment having the \*\*\text{\text{\text{wown}}} \text{wown} \text{mark}, the video equipment will indicate the remaining battery time in minutes\*. However, if you use it with video equipment not having this mark, the remaining battery capacity will not be indicated in minutes.

"InfoLITHIUM" is a trademark of Sony Corporation.

\* The indication may not be accurate depending on the condition and environment which the equipment is used under.

How the battery consumption is displayed
The power consumption of the camcorder changes depending on its use, such as how
the autofocusing is working.
While checking the condition of the camcorder, the "InfoLITHIUM" battery pack
measures the battery consumption and calculates the remaining battery power. If the
condition changed drastically, the remaining battery indication may suddenly decrease
or increase by more than 2 minutes.
Even if 3 to 10 minutes is indicated as the battery remaining time on the LCD screen or
in the viewfinder, the ♥○ indicator may also flash under some condition.

### To obtain more accurate remaining battery indication

- To obtain more accurate remaining battery indication. Set the camcorder to recording standby mode and point towards a stationary object. Do not move the camcorder for 30 seconds or more.

  •If the indication seems incorrect, rechange the battery pack fully (Full charge!"). Note that if you have used the battery in a hot or cold environment for long time, or you have repeated charging many times, the battery pack may not be able to show the correct time even after being fully charge the state of the state of the state of the correct time even after being fully charge that they pack with an equipment not having the () meanname mark, make sure that you use up the battery pack on the equipment having the () meanname mark make sure that you use up the battery pack on the equipment having the () meanname mark and then recharge fully.

### Why the remaining battery indication does not match the continuous recording

Why the remaining battery indication does not match the continuous recording time in the operating instructions. The recording time is affected by the environmental temperature and conditions. The recording time becomes very short in a cold environment. The continuous recording time in the operating instructions is measured under the condition of using a fully charged (or normal charged) battery pack in 77°F (25°C). As the environmental temperature and condition are different when you actually use the camcorder, the remaining battery time is not same as the continuous recording time in the operating instructions.

<sup>6</sup> Full charge: Charging until FULL appears in the display window

# **Maintenance information and precautions**

# Moisture condensation

If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the unit may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with moisture sensors. Please take the following precautions.

### Inside the camcorder

Inside the camcorder if there is most but not some sounds and the ⓐ indicator flashes. If this happens, none of the functions except cassette ejection will work. Open the cassette compartment, turn off the camcorder, and leave it about 1 hour. When ♠ indicator flashes at the same time, the cassette is inserted in the camcorder. Fject the cassette, turn off the camcorder, and leave also the cassette about 1 hour. The camcorder can be used again if the ⑧ indicator does not appear when the power is turned on

If moisture condenses on the lens, no indicator appears, but the picture becomes dim. Turn off the power and do not use the camcorder for about 1 hour.

### How to prevent moisture condensation

When bringing the camcorder from a cold place to a warm place, put the camcorder in a plastic bag and allow it to adapt to room conditions over a period of time.

(1) Be sure to tightly seal the plastic bag containing the camcorder.

- (2) Remove the bag when the air temperature inside it has reached the temperature surrounding it (after about 1 hour).

### Maintenance information and precautions

### Video head cleaning

To ensure normal recording and clear pictures, clean the video heads. When the indicator and " CLEANING CASSETT," message appear one after another or playback pictures are "noisy" or hardly visible, the video heads may be dirty.



[a] Slightly dirty [b] Very dirty

If this happens, clean the video heads with the Sony V8-25CLD cleaning cassette (not supplied). After checking the picture, if it is still "noisy," repeat the cleaning. (Do not repeat cleaning more than 5 times in one session.)

### Caution

Do not use a video heads a commercially available wet-type cleaning cassette. It may damage the

Note
If the Sony V8-25CLD/V8-25CLDR cleaning cassette is not available in your area, consult your nearest Sony deale


### Maintenance information and precautions

### Removing dust from inside the viewfinder

- ove the screw with a screwdriver (not supplied). Then, while sliding the RELEASE knob, turn the eyecup in the direction of the arrow and pull it out.


  (2) Clean the surface with a blower sold on the market.



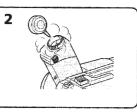

# To reattach the eyecup

- (1) Align the groove on the eyecup with the mark on the barrel.
  (2) Turn the eyecup in the direction of the arrow. Then replace the screw

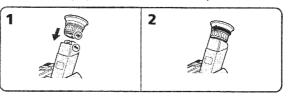

Do not remove any other screws. You may remove only the screw to remove the eyecup.

# Maintenance information and precautions

64

- Camcorder operation

  Operate the camcorder on 7.2 V (battery pack) or 8.4 V (AC power adaptor).

  For DC or AC operation, use the accessories recommended in this manual.

  Should any solid object or liquid get inside the casing, unplug the camcorder and have it checked by a Sony dealer before operating it any further.

  Avoid rough handling or mechanical shock. Be particularly careful of the lens.

  Keep the POWER switch setting to OFF when not using the camcorder.

  Do not wrap up the camcorder and operate it since heat may build up internally.

  Keep the camcorder away from strong magnetic fields or mechanical vibration.

  Do not push the LCD screen.

  If the camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.

- Do not knock or jolt the built-in light while it is turned on as it may damage the bulb or shorten the life of the bulb.
- or standard me me of the pub.

  Do not leave the built-in light on while it is resting on or against something; it may cause a fire or damage the built-in light.

# On handling tapes

On not insert anything in the small holes on the rear of the cassette. These holes are used to sense the type of tape, thickness of tape and if the recording tab is in or out.

### Camcorder care

- Carncorder care

  When the camcorder is not to be used for a long time, remove the tape. Periodically operate the comcorder both in the CAMERA and PLAYER modes and play back a tape for about 3 minutes.

  If ingerprints or debris make the LCD screen dirty, we recommend using a LCD Cleaning Kit (not supplied) to clean the LCD screen.

  Clean the lens with a soft brush to remove dust if there are fingerprints on it, remove them with a soft cloth.

  Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.

- 10 not let sand get into the camcorder. When you use the camcorder on a sandy boach or in a dusty place, protect if from the sand or dust with some protector such as Sony sports pack. Sand or dust may cause the unit to malfunction, and sometimes this malfunction cannot be repaired.

# Maintenance information and precautions

### AC power adaptor

- Unplug the unit from the wall outlet when not in use for a long time. To disconnect the power cord, pull it out by the plug. Never pull the power cord itself.

   Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.

- damaged:

  Do not bend the power cord forcibly, or put a heavy object on it. This will damage the cord and may cause a fire or electrical shock.

  Be sure that nothing metallic comes into contact with the metal parts of the connecting plate. If this happens, a short may occur and the unit may be damaged.

  Always keep the metal contacts clean.

  Do not dasseemble the unit.

  Do not apply mechanical shock or drop the unit.

  While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment because it will disturb AM reception and video operation.

  The unit becomes warm while in use. This is normal.

  Do not place the unit in locations that are:

  Fixtemely hot or cold

  Dusty or dirry

- Dusty or dirty
- Very humid Vibrating

### Notes on dry batteries

- Notes on dry batteries
  To avoid possible damage from battery leakage or corrosion, observe the following.
  Be sure to insert the batteries in the correct direction.
  Dry batteries are not rechargeable.
  Do not use a combination of new and old batteries.
  Do not use different types of batteries.
  The batteries slowly discharge while not in use.
  Do not use a battery that is leaking.

# If battery leakage occurred

- Wipe off the liquid in the Remote Commander carefully before replacing the batteries.
   If you touch the liquid, wash it off with water.

  If the liquid get into your eyes, wash your eyes with a lot of water and then consult a datator.

If any difficulty should arise, unplug the unit and contact your nearest Sony dealer.

65

# Using your camcorder abroad

Each country or area has its own electric and TV color systems. Before using your amcorder abroad, check the following points.

### Power sources and a conditional less than the discourse agrantiles to

You can use your camcorder in any country or area with the supplied AC power adaptor within 100 V to 240 V AC, 50/60 Hz.

Use a commercially available AC piug adaptor [a], if necessary, depending on the design of the wall outlet [b].



### Difference in color systems

This camcorder is an NTSC system based cancorder. If you want to view the playback picture on a TV, it must be an NTSC system based TV. Check the following list.

NTSC system Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Koroa, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

PAL system
Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Great
Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal,
Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, etc.

### PAL-M system

PAL-N system Argentina, Paraguay, Uruguay

Bulgaria, France, Guyana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Ukraine, etc.

# **Trouble check**

If you run into any problem using the camcorder, use the following table to troubleshoot the problem. Should the difficulty persist, disconnect the power source and contact your Sony dealer or local authorized Sony service facility.

Symptom	Cause and/or Corrective Actions		
The power is not on.	The battery pack is not installed.  Install the battery pack. (p. 6) The battery is dead.  Use a charged battery pack. (p. 7) The AC power adaptor is not connected to a wall outlet.  Connect the AC power adaptor to a wall outlet. (p. 24)		
The power goes off.	<ul> <li>While being operated in CAMERA mode, the camcorder has been in Standby mode for more than 5 minutes.</li> <li>Turn STANDBY down once and then up again. (p. 11)</li> <li>The battery is dead.</li> <li>Use a charged battery pack. (p. 7)</li> </ul>		
The battery pack is quickly discharged.	The camcorder does not operate when using a battery pack that is not an "Infol.ITHIUM" battery pack.  Use an "Infol.ITHIUM" battery pack. (p. 62)  The ambient temperature is too low. (p. 61)  The battery pack has not been charged fully.  Charge the battery pack again. (p. 7)  The battery pack is completely dead, and cannot be recharged.  See another battery pack. (p. 61)		
While charging the battery pack, no indicator appears or the indicator flashes in the display window.	<ul> <li>The AC power adaptor is disconnected.</li> <li>Connect it firmly.</li> <li>Something is wrong with the battery pack.</li> <li>Contact your Sony dealer or local authorized Sony service facility.</li> </ul>		

Symptom	Cause and/or Corrective Actions  The tape is stuck to the drum.  Eject the tape, (p. 10)  The tape has run out.  Rewind the tape or use a new one, (p. 10, 20)  The POWER switch is set to PLAYER.  Set it to CAMERA. (p. 11)  The tab on the cassette is out (red).	
START/SIÓP does not operate.		
Recording stops in a few seconds.	→ Use a new tape or slide the tab. (p. 10)  • The START/STOP MODE switch is set to 5SEC or ANTI GROUND SHOOTING ≟  → Set it to ∄. (p. 14)	

(to be continued) 69

68

# Trouble check

Symptom	Cause and/or Corrective Actions		
The cassette cannot be removed from the holder.	The battery is dead. Use a charged battery pack or the AC power adaptor. (p. 7,24) Moisture condensation has occurred. Remove the cassette and leave the camcorder for at leas 1 hour. (p. 63)		
■ and   indicators flash and no function except for cassette ejection works.			
The date or time indicator is flashing.	You pressed DATE and TIME together for more than 2 seconds. The camcorder is not malfunctioning. You may start recording. Flashing will stup soon. Ihe lithium battery is weak or dead. Replace the lithium battery with a new one. (p. 56)		
The tape does not move when a video control button is pressed.	The POWER switch is set to CAMERA or OFF. Set it to PLAYER. The tape has run out. Rewind the tape or use a new one. (p. 20)		
The Steadyshot function does not activate. (CCD-TRV43/TRV46 only)	STEADYSHOT is set to OFF in the menu system. Set it to ON. (p. 51) The Steadyshot function does not work when the wide mode is set to 169 FULL.		
The autofocusing function does not work.	FOCUS is set to MANUAL. Set it to AUTO. (p. 39) Shooting conditions are not suitable for autofocus. Set FOCUS to MANUAL to focus manually. (p. 39)		
The fader function does not work.	The START/STOP MODE switch is set to 5SEC or ANTI GROUND SHOOTING   → Set it to   (p. 14)		
The date or time indicator disappears.	Reset the date and time. (p. 57)		
Exposure adjustment or the PROGRAM AE function does not	The NICHTSHOT switch is set to ON.     → Set it to OFF.		

Cause and/or Corrective Actions

• The viewfinder lens is not adjusted.
• Adjust the viewfinder lens. (p. 12)
• The contrast between the subject and background is too high. The camecrder is not malfunctioning.
• Change locations.

### Trouble check

Symptom	Cause and/or Corrective Actions		
A vertical band appears when shooting a very bright subject.	The camcorder is not malfunctioning.		
The playback picture is not clear.	• EDIT is set to ON in the menu system. → Set it to OFF. (p. 29)		
The picture is "noisy".	<ul> <li>The video heads may be dirty.</li> <li>Clean the heads using the Sony V8-25CLD/V8-25CLDR cleaning cassette (not supplied). (p. 64)</li> </ul>		
The picture does not appear in the viewfinder.	The LCD panel is open.     Close the LCD panel. (p. 15)		
An unknown picture is displayed in the viewfinder or on the LCO screen.	If 10 minutes elapse after you set the POWER switch to CAMERA without inserting a cassette, the camcorder automatically starts the demonstration or DEMO is set ON in the menu system.     Insert the cassette and the demonstration stops. You can deactivate the demonstration, (p. 29)		
The picture does not appear on the LCD screen.	Incorporated fluorescent tube is worn out.  Please contact your nearest Sony dealer.		
The five digit code appears.	The self-diagnosis function is activated.  Check the code and solve the problem. (p. 72)		
Picture appears too bright, and the subject does not appear in the viewfinder or on the LCD screen.	<ul> <li>The NIGHTSHOT switch is set to ON in a bright place.</li> <li>→ Set it to OFF, or use the NightShot function in a dark place. (p. 33)</li> </ul>		
Picture is recorded in incorrect/ unnatural color.	The NIGHTSHOT switch is set to ON.     → Set it to OFF. (p. 33)		

Others		
Symptom	Cause and/or Corrective Actions	
The supplied Remote Commander does not work.	COMMANDER is set to OFF in the menu system.     ⇒ Set it to ON. (p. 28)     Something is blocking the infrared rays.     Remove the obstacle.     The batteries are not inserted with the correct polarity.     ⇒ Insert the batteries with the correct polarity. (p. 79)     The batteries are dead.     ⇒ Insert new ones. (p. 79)	
The beep sounds for 5 seconds,	Moisture condensation has occurred.     Remove the cassette and leave the camcorder for at least 1 hour. (p. 63)     Some troubles occur in your camcorder.     Remove the cassette and insert it again, then operate the camcorder.	
There is dust in the viewfinder.	Detach the evecup and clean the viewfinder lens (p.65)	

70

Symptom

The image on the viewfinder screen is not clear.

A vertical band appears when a subject such as lights or a candle flame is shot against a dark background.

# Self-diagnosis display


The camcorder has a self-diagnosis display. The cancorder has a self-diagnosis display. This function displays the camcorder's condition with five digits (a combination of a letter and figures) in the viewfinder, on the LCD screen or in the display window. If this cocurs, check the following code chart. The five-digit display informs you of the camcorder's current condition. The last two digits (indicated by  $\Box\Box$ ) will differ depending on the state of the camcorder.

- Contact your Sony dealer or local authorized Sony facility.

Five-digit display	Cause and/or Corrective Actions  • Moisture condensation has occurred.  • Remove the cassette and leave the camcorder for at least 1 hour. (p. 63)		
€:21:□□			
C:22:□□	<ul> <li>The video heads are dirty.</li> <li>→ Clean the heads using the Sony V8-25CLD/V8-25CLDR cleaning cassette (not supplied). (p. 64)</li> </ul>		
€23:□□	<ul> <li>You are using a battery pack that is not an "InfoLITHIUM" battery pack.</li> <li>→ Use an "InfoLITHIUM" battery pack. (p. 62)</li> </ul>		
C:31::::::: C:32:::::::	<ul> <li>A serviceable situation not mentioned above has occurred</li> <li>Remove the cassette and insert if again, then operate the camcorder.</li> <li>Disconnect the power cord of the AC power adaptor or remove the battery pack. After reconnecting the power source, operate the camcorder.</li> </ul>		
F:62:□□	<ul> <li>A camcorder malfunction which you cannot service has occurred.</li> <li>Contact your Sony dealer or local authorized Sony service facility and inform them of the five digits. (example: £61:10)</li> </ul>		

If you are unable to resolve the problem, contact your Sony dealer or local authorized Sony service facility.

# Identifying the parts

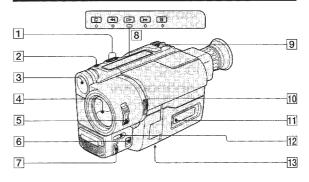

- 1 EDITSEARCH button (p. 19)
- 2 LASER LINK button (CCD-TRV43/ TRV46 only) (p. 53)
- 3 Built-in light (p. 49)
- 4 Lens cover
- 5 POWER switch (p. 11)
- 6: FOCUS switch (p. 39)
- 7 NEAR/FAR dial (p. 39)
- 8 Video control buttons (p. 20)
- STOP (stop)

  ◄◄ REW (rewind)
- ► PLAY (playback)
  ► FF (fastforward)
- PAUSE (pause)


74

- 9 Power zoom lever (p. 13)
- 10 NIGHTSHOT switch (p. 33)
- 11 Display window (p. 81)
- $\fbox{12} \ \textbf{FADER button} \ (p. \ 32)$
- Tipod receptacle (p. 18)
  Make sure that the length of the tripod screw is less than 9/32 inch (6.5 mm) otherwise, you cannot attach the tripod securely and the screw may damage the camcorder.

72


### Identifying the parts 14 22 15 23 16 17 24 18 25 19 26 20 27 21 28

- 14 Viewfinder (p. 12)
- [15] Speaker (p. 20, 21)
- 16 LCD screen (p. 15)
- [17] LCD BRIGHT buttons (p. 15)
- **18 OPEN button** (p. 14)
- 19 VOLUME buttons (p. 20)
- 20 Lithium battery compartment (p. 56)
- 21 Hook for shoulder strap (p. 80)
- 22 Eyecup
- $\begin{tabular}{ll} \hline \bf 23 & \textbf{BATT RELEASE lever} \ (p.\ 9) \\ \hline \end{tabular}$
- $[2\overline{4}]$  Hook for shoulder strap (p,80)
- $\overline{\textbf{25}}$  STANDBY switch (p. 11)
- 26 START/STOP button (p. 11)
- 27 Battery mounting surface
- 28 DC IN jack (p. 7, 24)

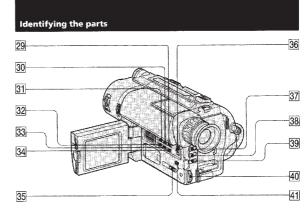

- 29 COUNTER RESET button (p. 12)
- [30] TIME button (p. 47)
- 31 DATE button (p. 47) 32 DISPLAY button (p. 21)
- 33 TITLE button (p. 44)
- 34 END SEARCH button (p. 23)
- |35| PICTURE EFFECT button (p. 41)
- 36 START/STOP MODE switch (p. 14)
- 37 BACK LIGHT button (p. 30)
- 38 PROGRAM AE button (p. 37) 39 EXPOSURE button (p. 42)
- 40 Control dial (p. 26)
- 41 MENU button (p. 26)

### Identifying the parts

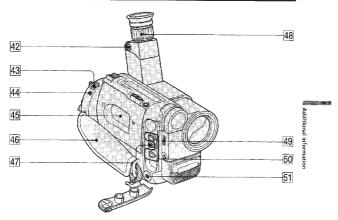


- 42 Eyecup RELEASE knob (p. 65)
- 43 EJECT switch (p. 10)
- 44 LANC C control jack
  - LANC & control jack

    & stands for Local Application Control
    Bus System. The & control jack is used
    for controlling the tape transport of
    video equipment and peripherals
    connected to it. This jack has the same
    function as the jack indicated as
    CONTROL L or REMOTIE.
- 45 Cassette compartment (p. 10)
- [46] Grip strap (p. 17)

- 47 RFU DC OUT (RFU adaptor DC output)
- 48 Viewfinder lens adjustment ring (p. 12)
- $\underline{49} \ \ \textbf{LIGHT switch} \ (p.\ 49)$
- 50 VIDEO/AUDIO jacks (p. 52)
- 51 (2) (earphone) jack (p. 21)

### Identifying the parts

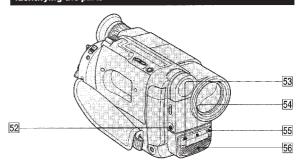

- 52 MIC jack (PLUG IN POWER)
- Connect an external microphone (not supplied). This jack also accepts a "plug-in-power" microphone.
- 53 Camera recording/battery lamp (p. 11)
- 54 LASER LINK emitter (CCD-TRV43/ TRV46 only) (p. 53)/NightShot light emitter (p. 33)
- 55 Remote sensor (p. 79) Aim the Remote Commander here for remote control.
- 56 Microphone


78

77

# Identifying the parts

# Remote Commander

The buttons that have the same name on the Remote Commander as on the camcorder function identically.

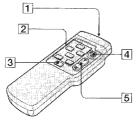

- 1 Transmitter
  Point toward the remote sensor to control the camcorder after turning on the camcorder
- 3 DISPLAY button (p. 21)
- 4 START/STOP button (p. 11) [5] Power zoom button (p. 13)
- 2 Video control buttons (p. 20)

### Notes on the Remote Commander

- Notes on the Remote Commander


   Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be effective.

   Be sure that there is no obstacle between the remote sensor on the camcorder and the Remote Commander.

   This camcorder works in commander mode VTR 2. The commander modes (1, 2 and 3) are used to distinguish this camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VCR with black paper.

### To prepare the Remote Commander

Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

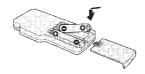

# Identifying the parts


### Note on battery life

The batteries for the Remote Commander last about 6 months under normal operation. When the batteries become weak or dead, the Remote Commander does not work.

To avoid damage from possible battery leakage Remove the batteries when you will not use the Remote Commander for a long time.

### Attaching the shoulder strap

Attach the supplied shoulder strap to the hooks for the shoulder strap

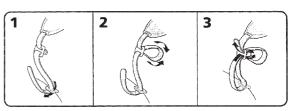

To watch the demonstration
You can start the demonstration by setting DEMO MODE in the menu system.
You can also start the demonstration by the following operation.
When NIGHTSHOT is set to ON, you cannot watch the demonstration.

### To enter demo mode

- Eject the cassette and set the POWER switch to PLAYER.
   Turn STANDBY up to STANDBY.
   While holding down ► set the POWER switch to CAMERA.

- (1) Set the POWER switch to PLAYER.
  (2) Turn STANDBY up to STANDBY.
  (3) While holding down set the POWER switch to CAMERA.

### **Identifying the parts**

### Operation indicators

 $\begin{tabular}{ll} \hline \bf 1 & Recording mode indicator $(p.\,28)$/\\ & Mirror mode indicator $(p.\,16)$ \\ \end{tabular}$ 

2 Playing back or recording in Hi8

format (p. 59)

3 Remaining battery time indicator

Exposure indicator (p. 42)/ Zoom indicator (p. 13)

6 Wide mode indicator (p. 35)

7 PICTURE EFFECT indicator (p. 41)

8 LCD BRIGHT indicator (p. 15) / VOLUME indicator (p. 20)

9 PROGRAM AE indicator (p. 36)

10 Backlight indicator (p. 30) 11 Steadyshot off indicator (CCD-TRV43/TRV46 only) (p. 51)

12 Manual focusing (p. 39)

5 FADER indicator (p. 32)

Viewfinder


### Display window 1 20 2 2 3 □ 40min Hi3 SISTBY W I III M.FADER CINEMA SEPIA 0:00:00 END SEARCH 14 FI S A CO FULL 23 F 8 8 8 8 8 8 8 min AM 22 4 15 5 6 16 1-7 -17 -[18] 9 - 19 10 -20 11 -21 12

- 3 Standby/Recording mode indicator (p. 11) /Video control mode indicator (p. 22)
- Tape counter (p. 12)/Self-diagnosis functions indicator (p. 72)/5SEC mode indicator (p. 14)
- 15 Remaining tape indicator
- 16 END SEARCH indicator (p. 23)
- $\fbox{17} \ \textbf{NIGHTSHOT indicator} \ (p.\ 33)$
- 18 AUTO DATE indicator (p. 11)/Date indicator (p. 47)

  19 Time indicator (p. 47)
- 20 Warning indicators (p. 82)
- 21 Recording lamp (p. 11)
- 22 Date or time indicator (p. 47)/Tape counter (p. 12)/Self-diagnosis functions indicator (p. 72)/Remaining battery time indicator
- 23 FULL charge indicator (p. 7)

# **Warning indicators**

If indicators flash in the viewfinder or in the display window, check the following:  $\mathcal{P}\mathcal{P}_m$ : you can hear the beep sound when the BEEP is set to ON.

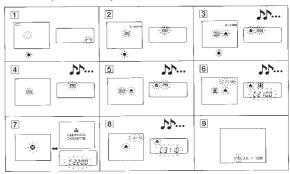

- 1 The battery is weak or dead. Slow flashing: The battery is weak Fast flashing: The battery is dead.
- |2| The tape is near the end. The flashing is slow.
- 3 The tape has run out. The flashing becomes rapid.
- 4 No tape has been inserted.
- 5 The tab on the tape is out (red).
- 6 Moisture condensation has occurred.
- The video heads may be contaminated.
- 8 Some other trouble has occurred. Use the self-diagnosis function (p. 72). If the display does not disappear, contact your Sony dealer or local authorized Sony service facility.
- 9 The lithium battery is weak or is not

81


-3

information

# CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK


# SECTION 2 DISASSEMBLY

The equipment can be removed using the following procedure.

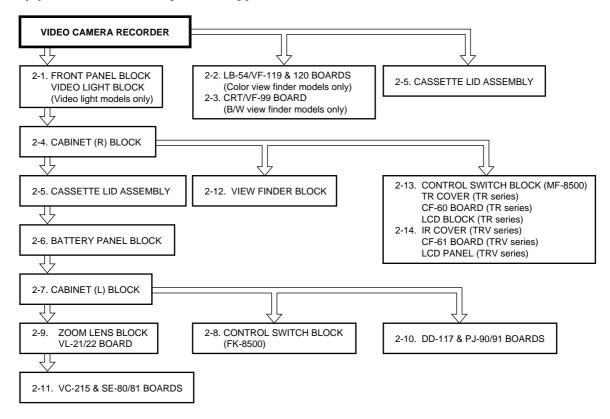

**NOTE:** Follow the disassembly procedure in the numerical order given.


### 2-1. REMOVAL OF FRONT PANEL BLOCK AND VIDEO LIGHT BLOCK

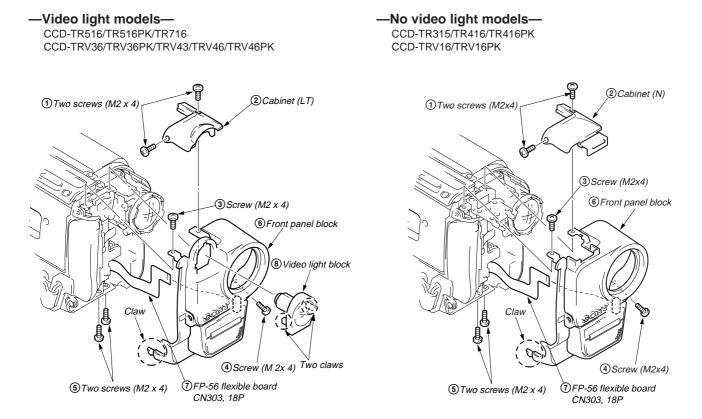

# 2-2. REMOVAL OF LB-54, VF-119 AND VF-120 BOARDS


(Color view finder model CCD-TR416/TR416PK/TR516/TR516PK/TR716)

1) Tilt-up the EVF block to the direction of arrow (A).

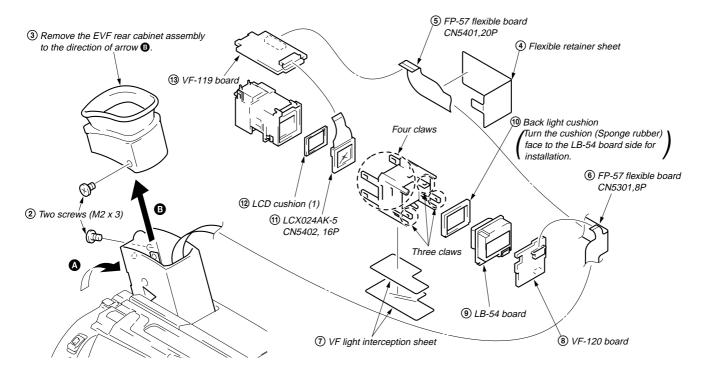


# 2-3. REMOVAL OF VF-99 AND CRT ASSEMBLY (B/W view finder model CCD-TR315 and TRV series)


1) Tilt-up the EVF block to the direction of arrow (A).

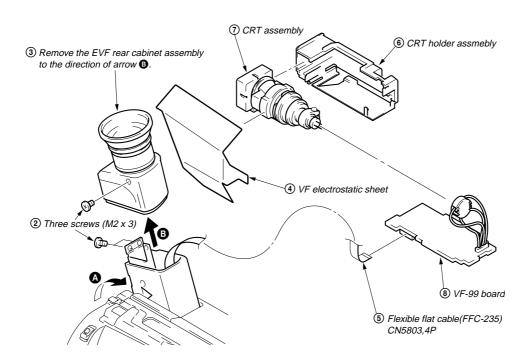

# 2-4. REMOVAL OF CABINET (R) BLOCK


**Note**: Be sure to that the pin of the Lens assembly is put into the hole of the IR knob when attaching.

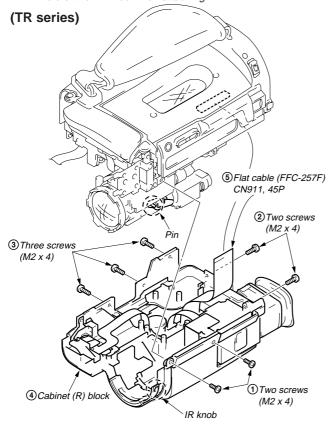


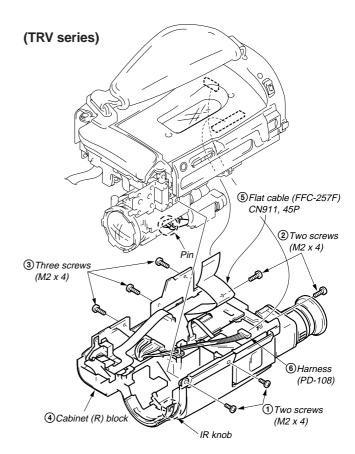

# 2-5. REMOVAL OF CASSETTE LID ASSEMBLY


# 2-6. REMOVAL OF BATTERY PANEL BLOCK

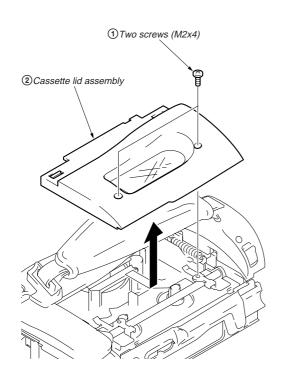


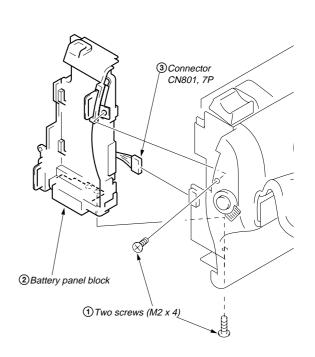

# 2-7. REMOVAL OF CABINET (L) BLOCK

# 2-8. REMOVAL OF CONTROL SWITCH BLOCK Function Key Switch (FK-8500)

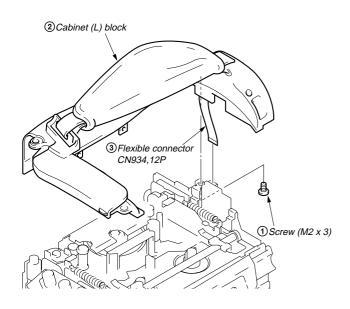

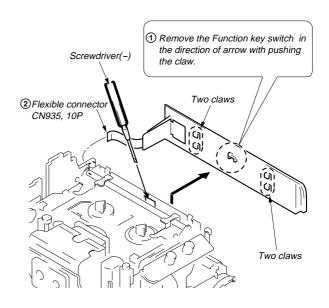

# 2-9. REMOVAL OF ZOOM LENS BLOCK AND VL-21/22 BOARD


# —Video light models—

CCD-TR516/TR516PK/TR716


9 Screw (M2 x 3) -

CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK

# —No video light models—

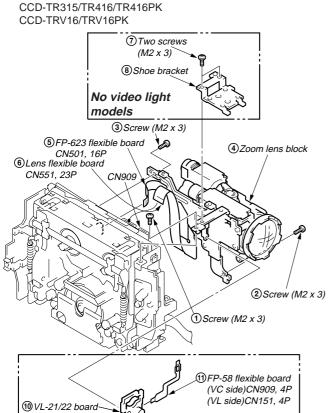


### 2-10. REMOVAL OF DD-117 AND PJ-90/91 BOARDS

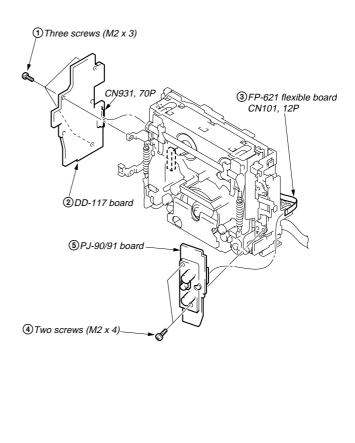


Video light models

# 2-11. REMOVAL OF VC-215 AND SE-80/81 BOARDS

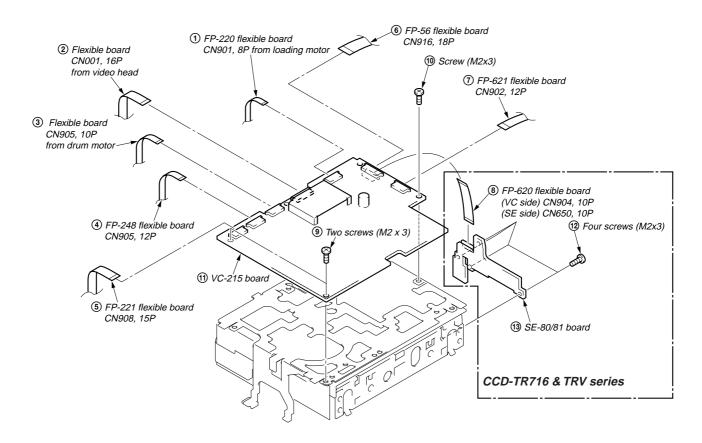


# 2-12. REMOVAL OF VIEW FINDER BLOCK




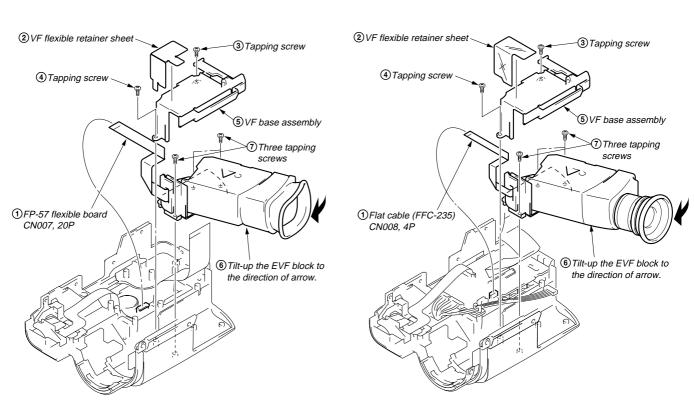


# 2-13. REMOVAL OF TR COVER, CF-60 BOARD AND DISPLAY PANEL ...(TR series)

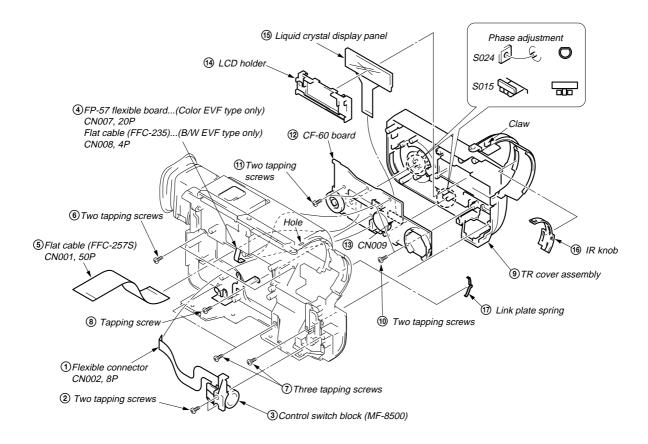


# 2-14. REMOVAL OF IR COVER, CF-61 BOARD AND LCD PANEL...(TRV series)

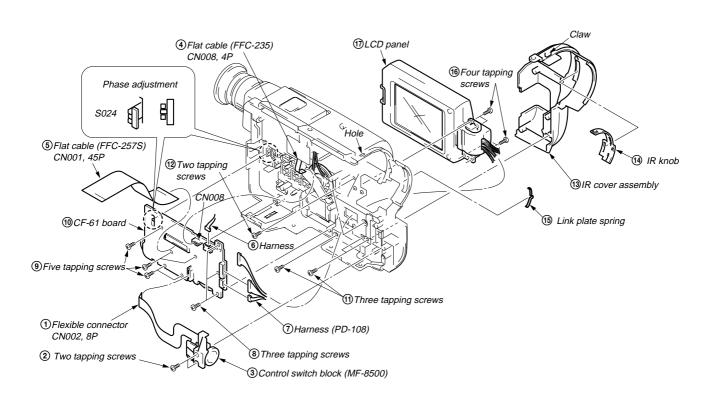


#### 2-15. SERVICE POSITION

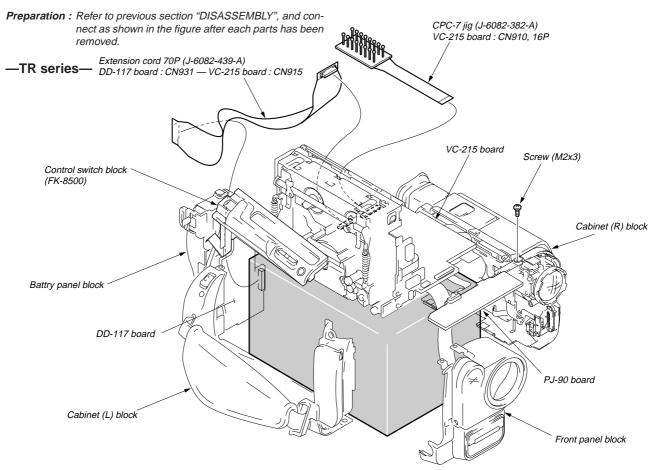


#### -TRV series-

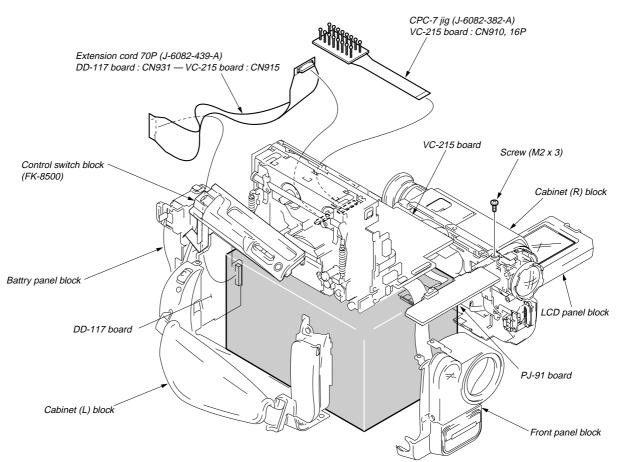


#### 2-16. CIRCUIT BOARDS LOCATION

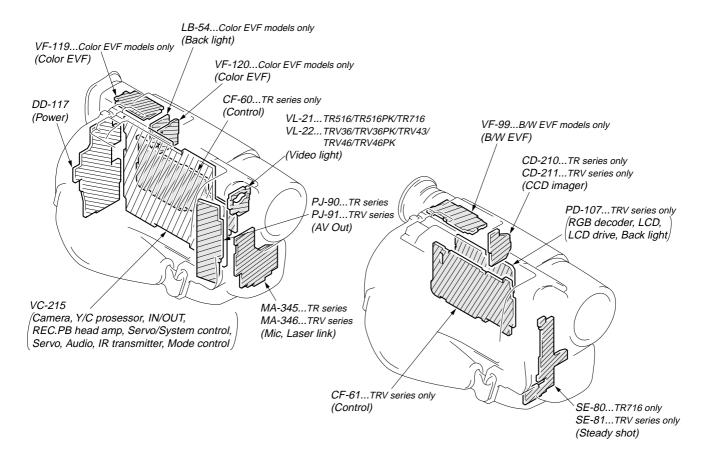


#### 2-17. FLEXIBLE BOARDS AND FLAT CABLES LOCATION

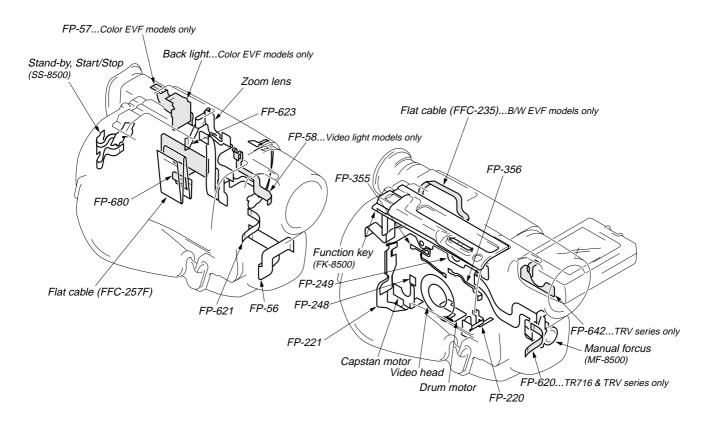


# SECTION 3 BLOCK DIAGRAMS

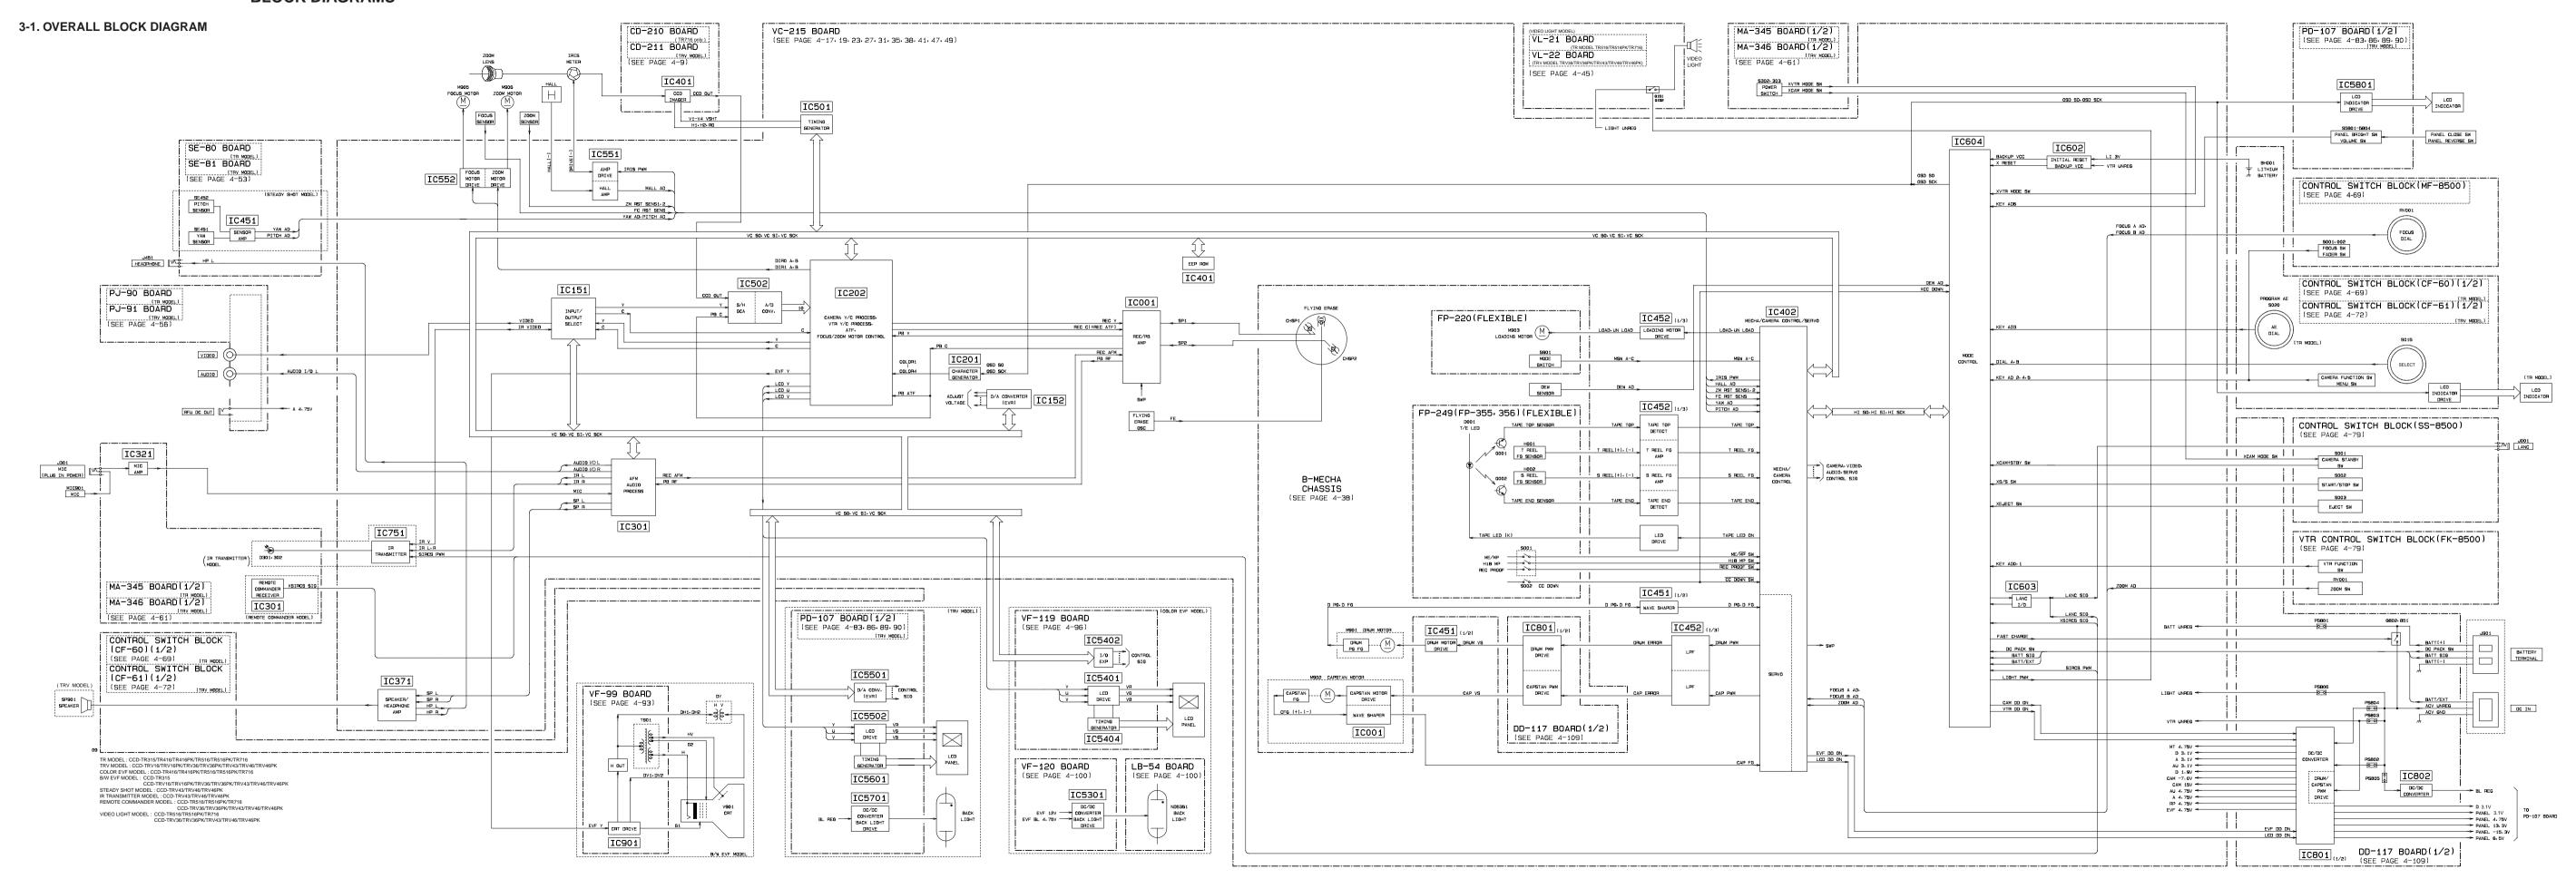


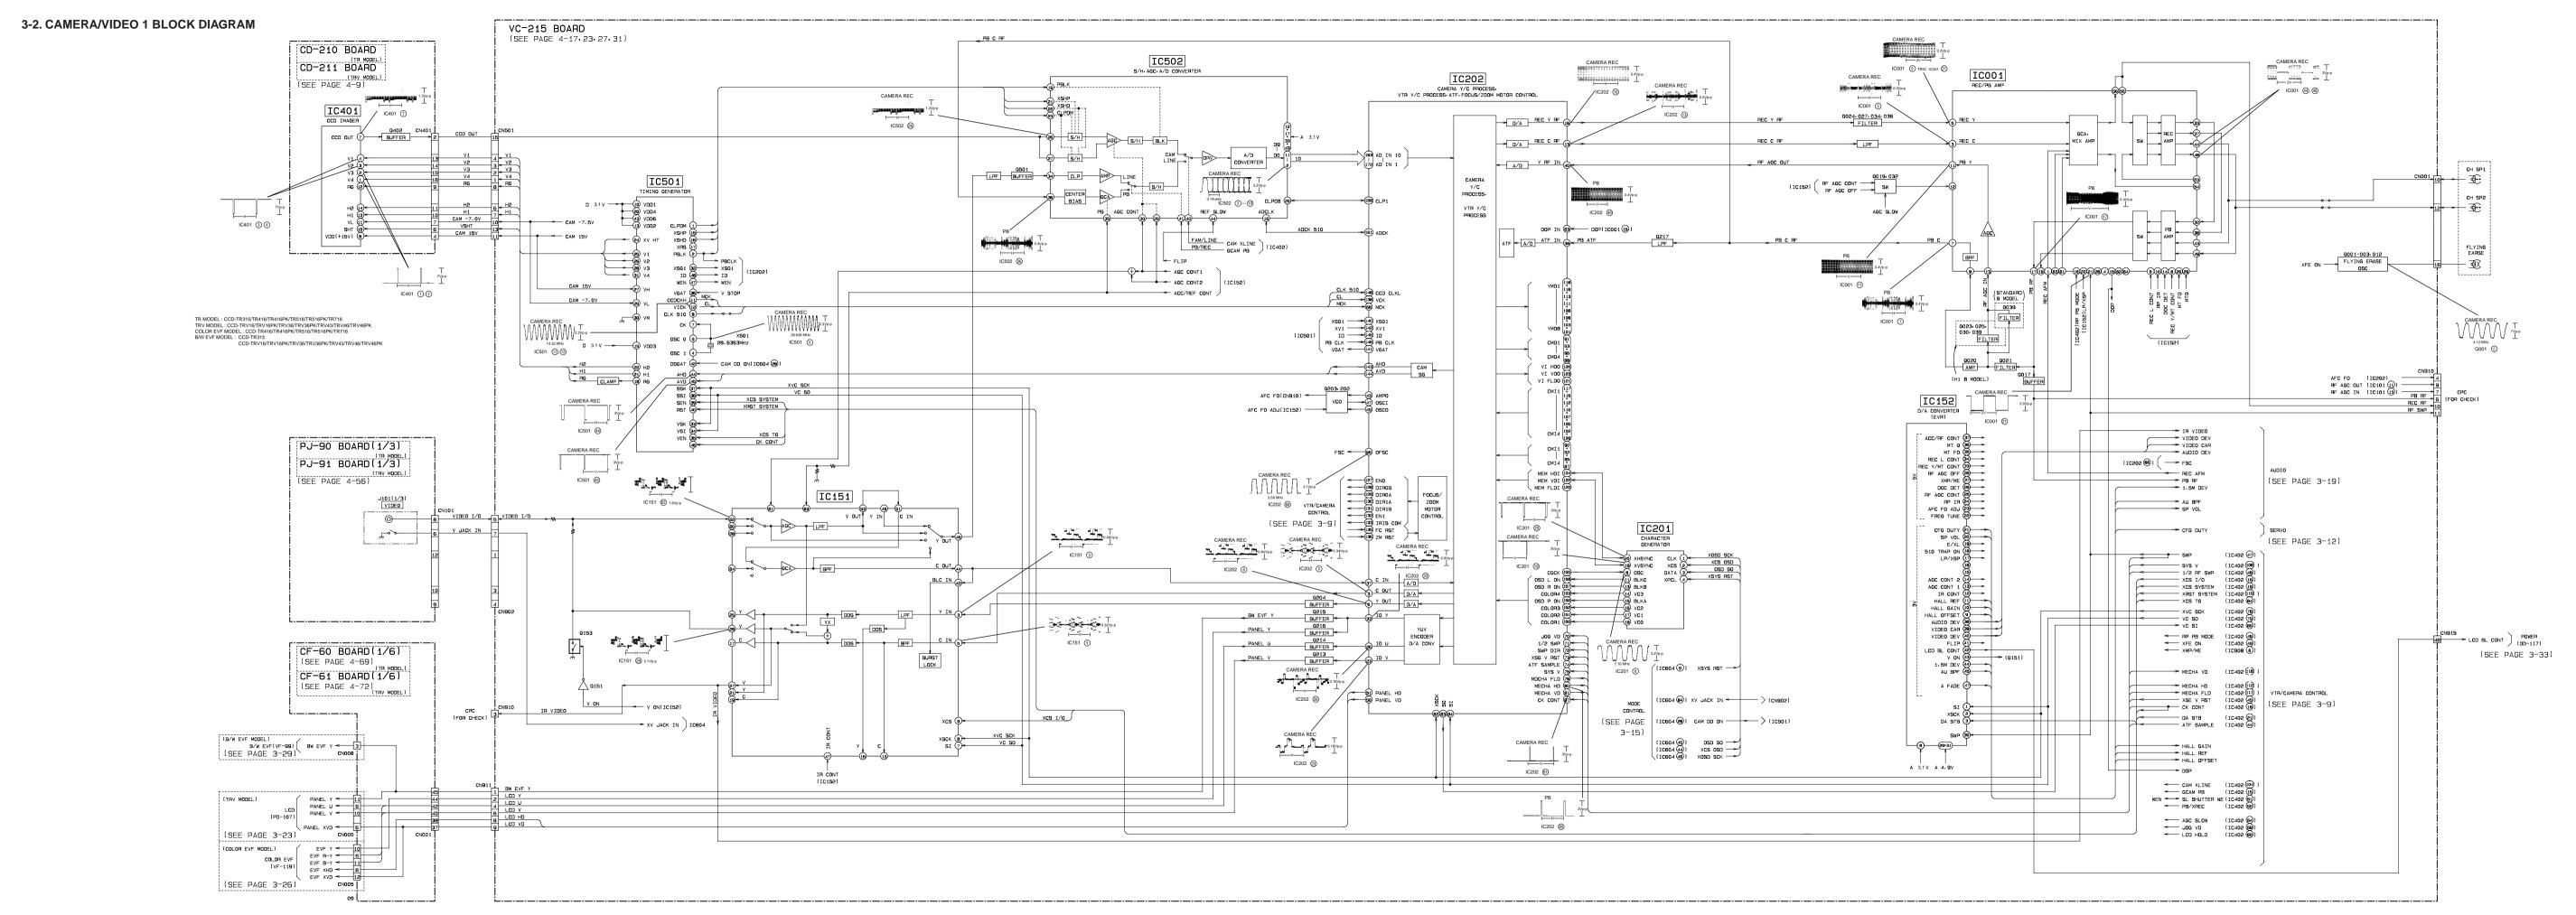


#### 3-3. VTR/CAMERA CONTROL BLOCK DIAGRAM

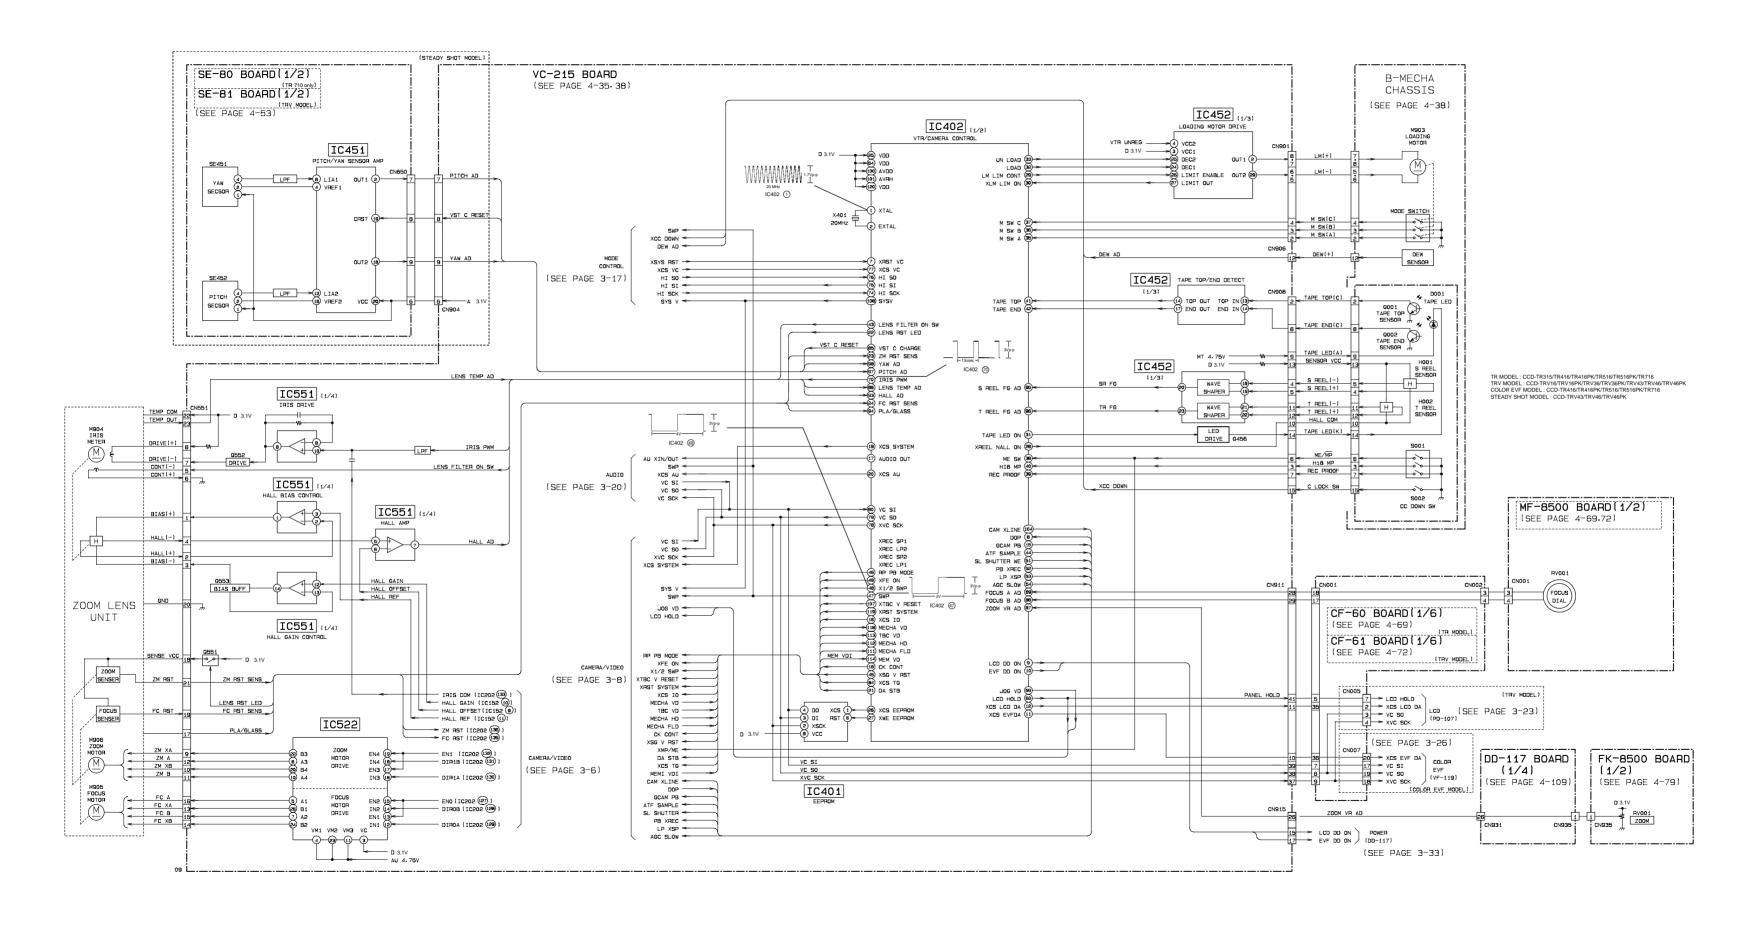


#### 3-4. SERVO BLOCK DIAGRAM

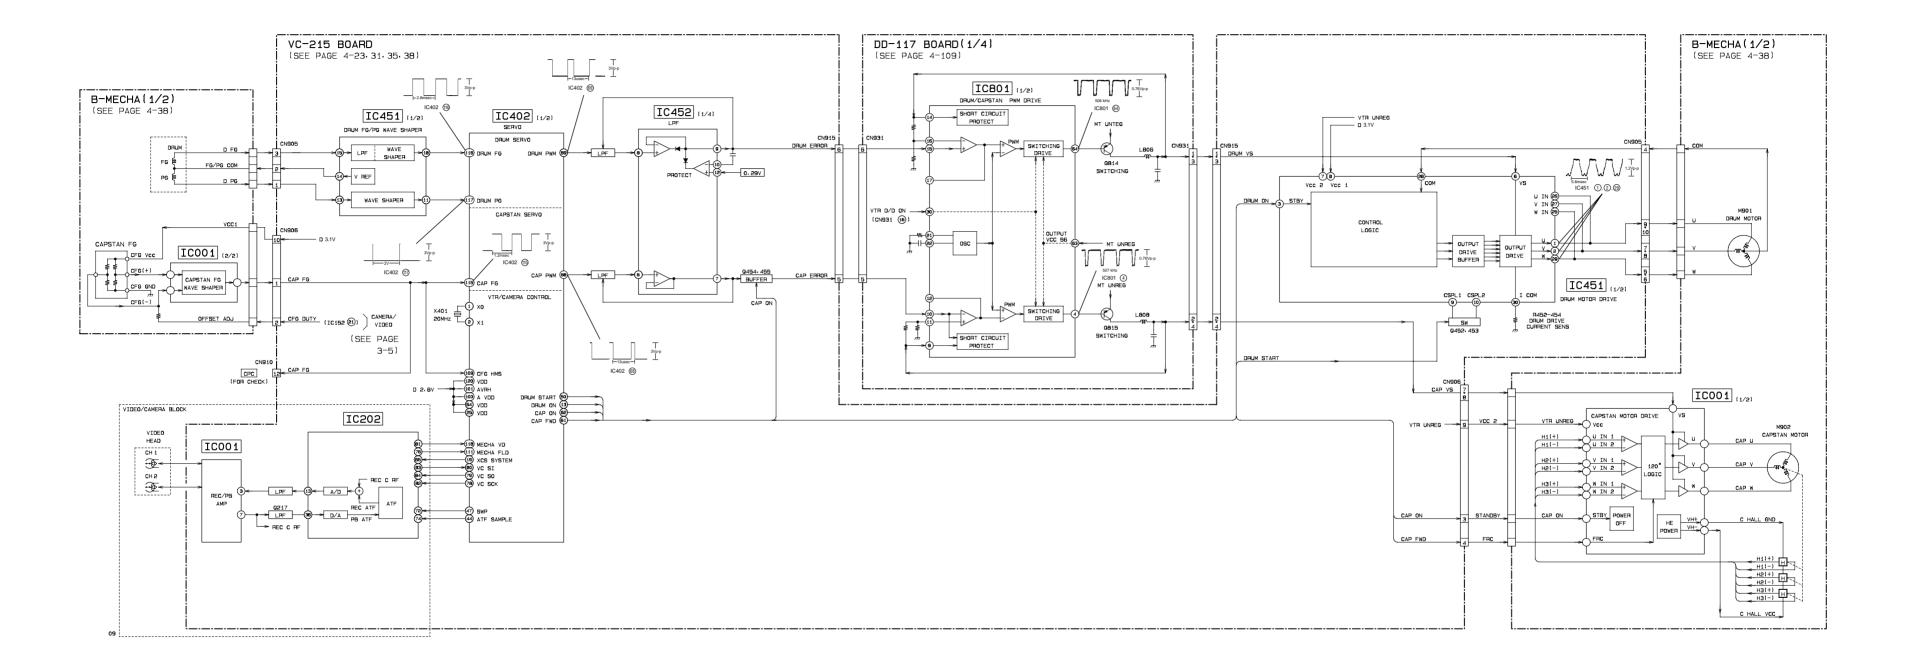


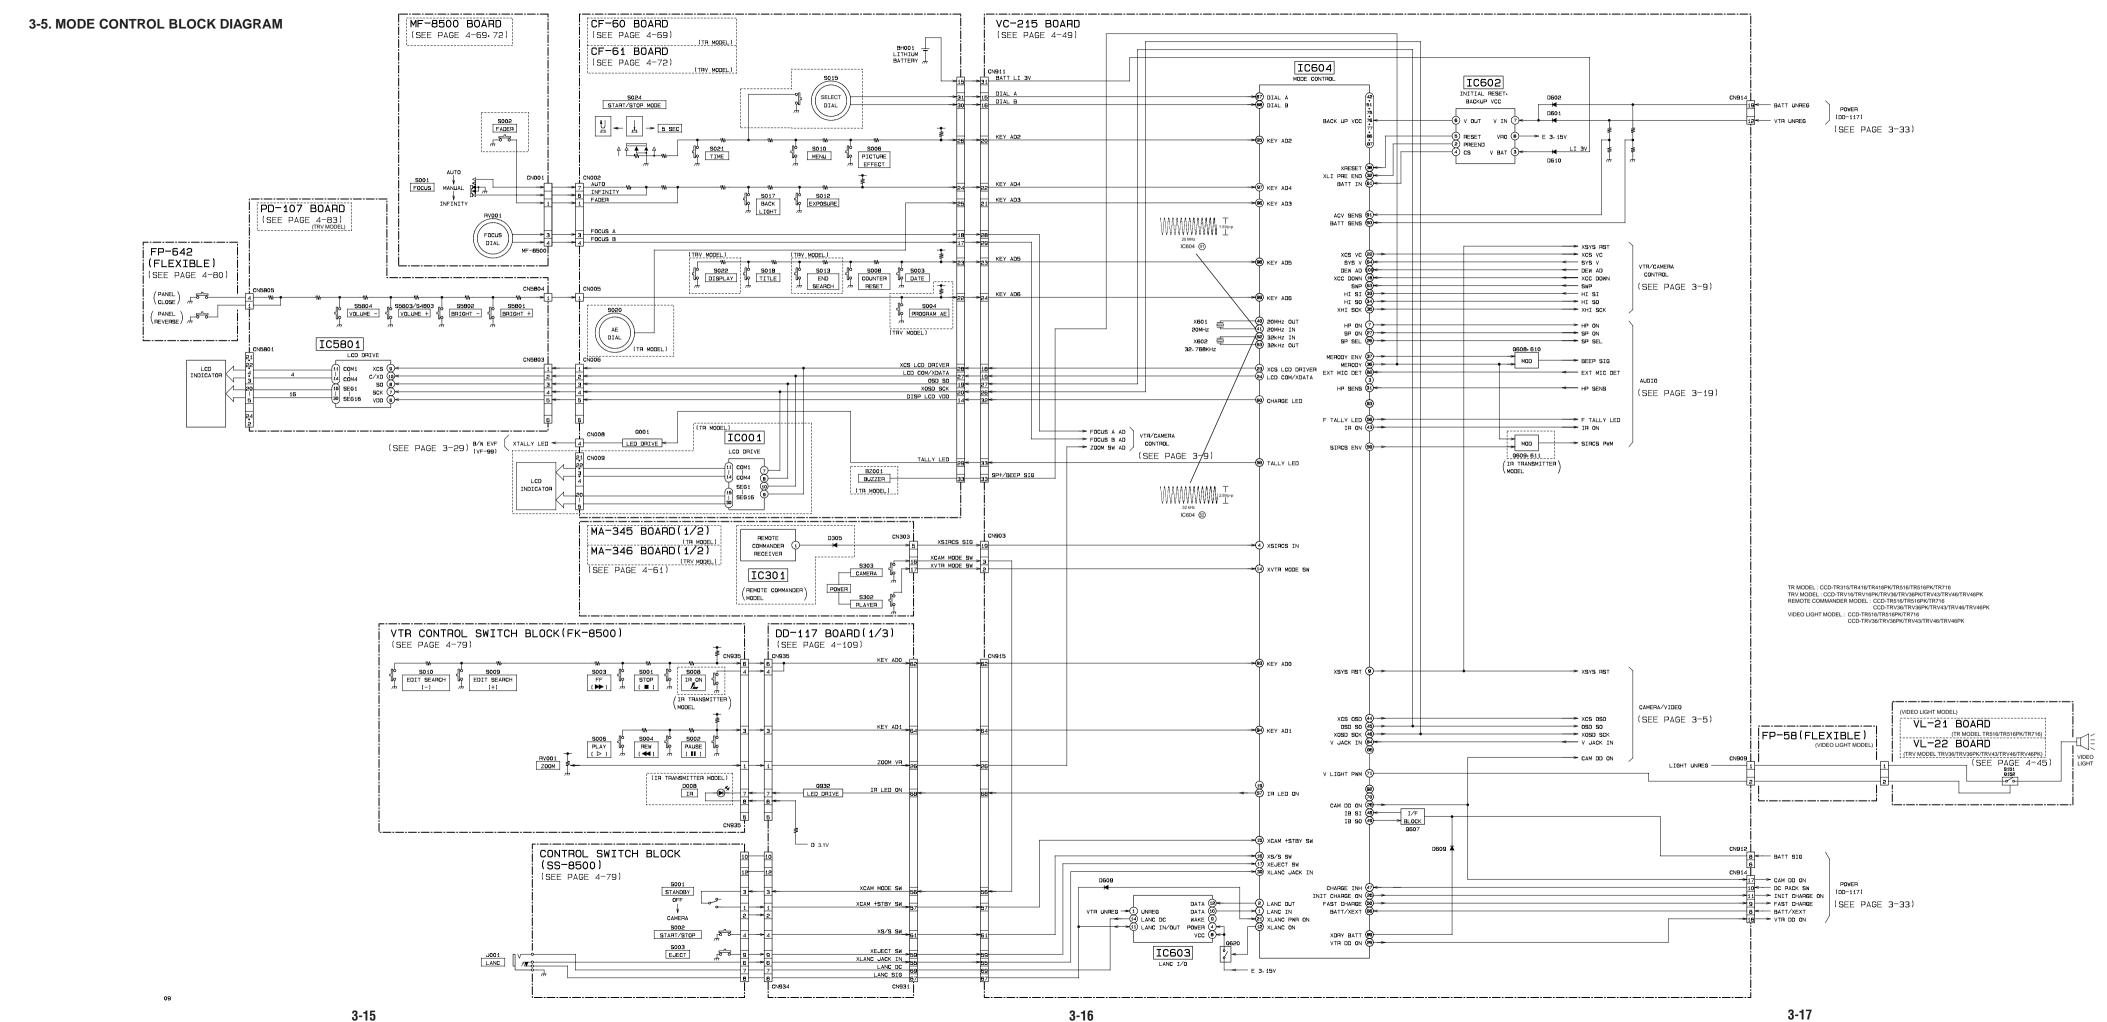


#### 3-6. AUDIO BLOCK DIAGRAM

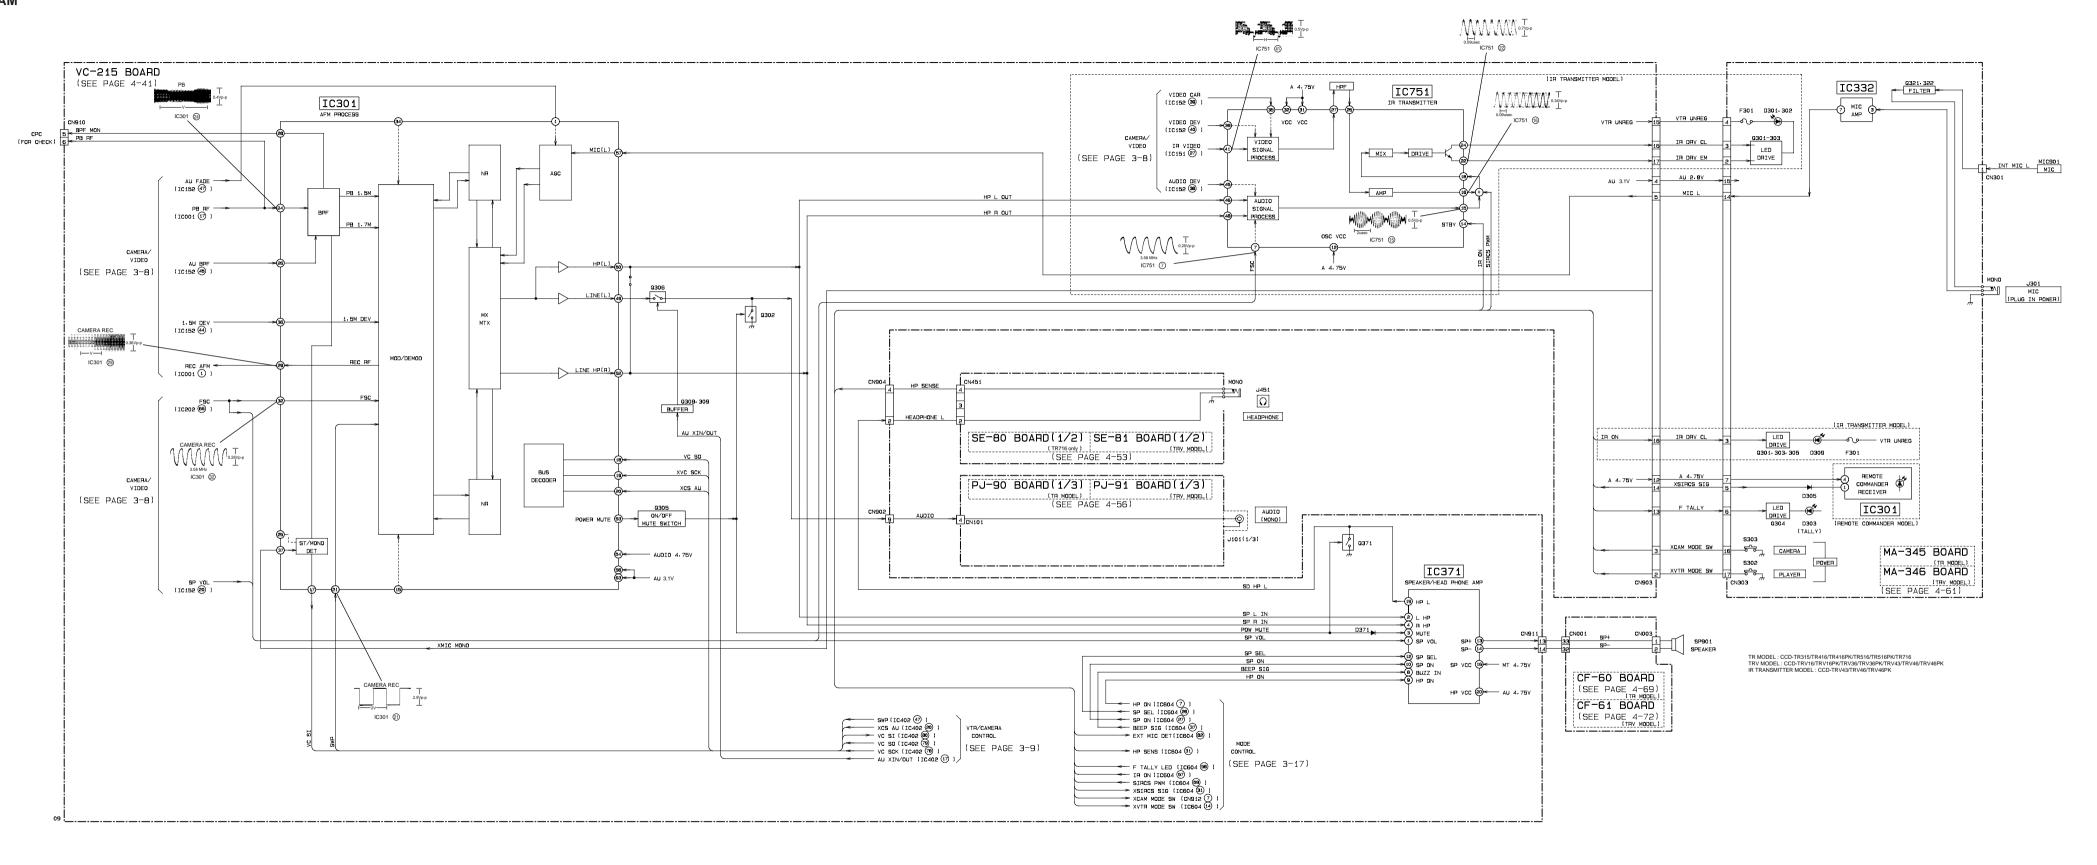


# 3-7. LCD BLOCK DIAGRAM (TRV MODEL)

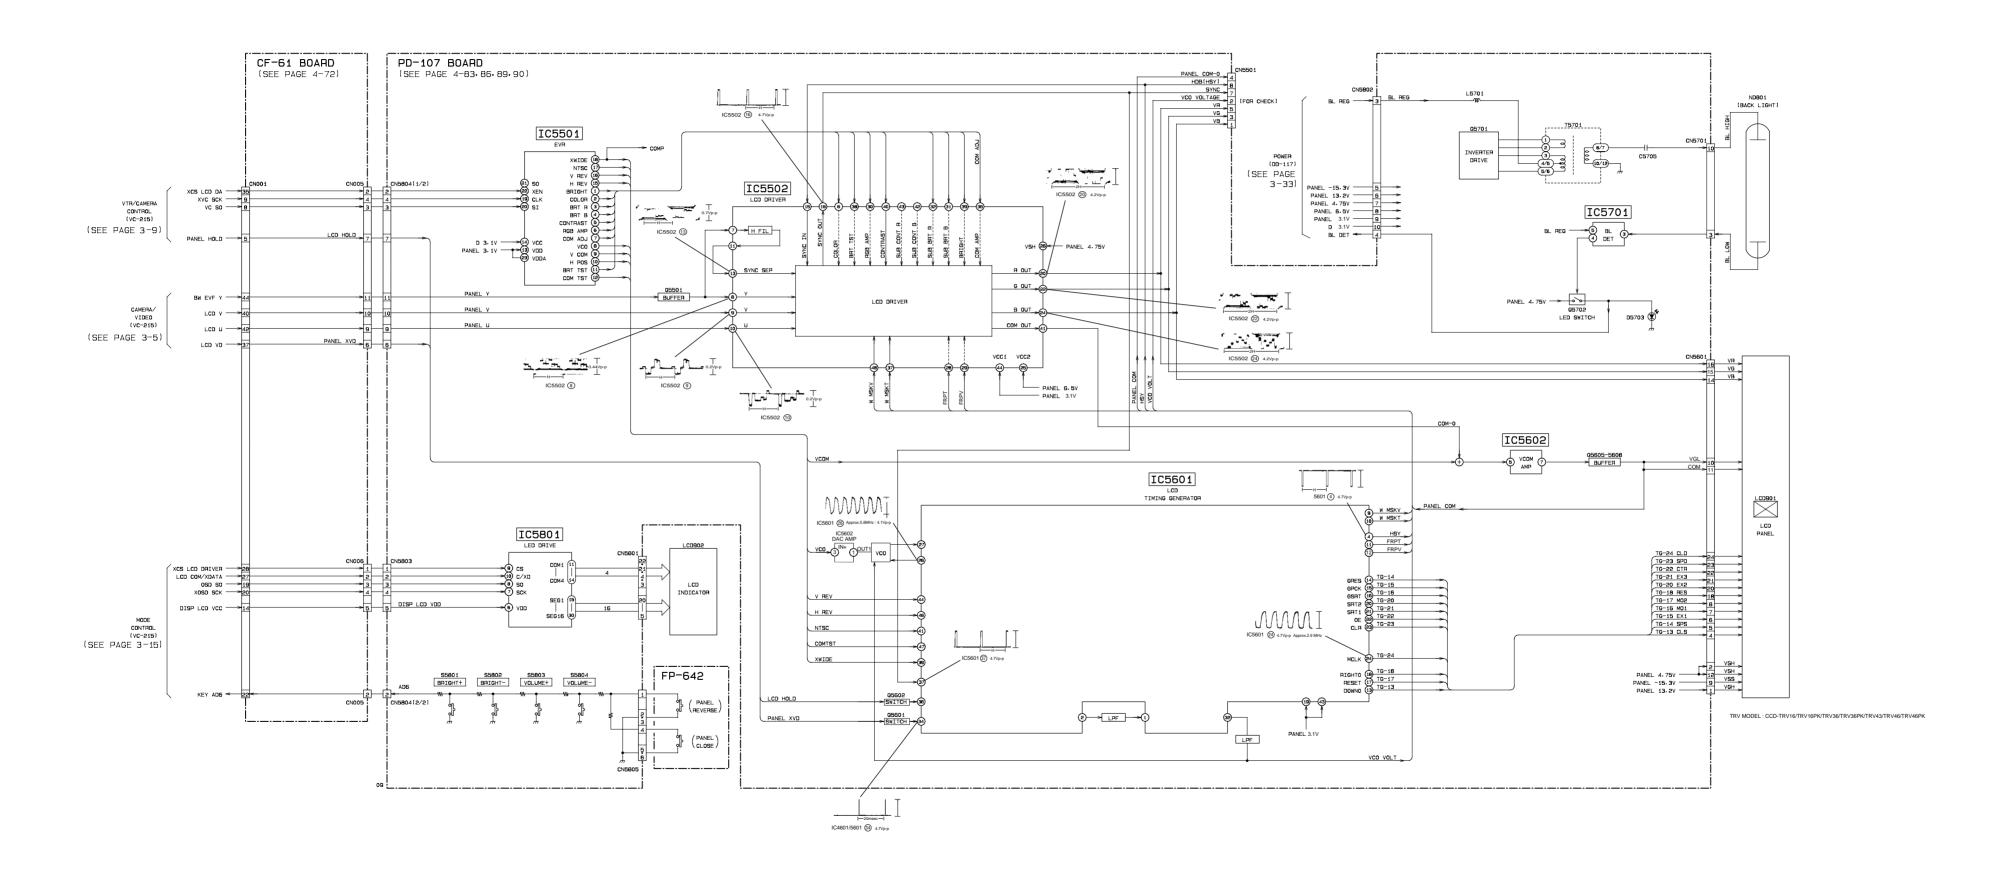

## 3-8. COLOR EVF BLOCK DIAGRAM (COLOR EVF MODEL)

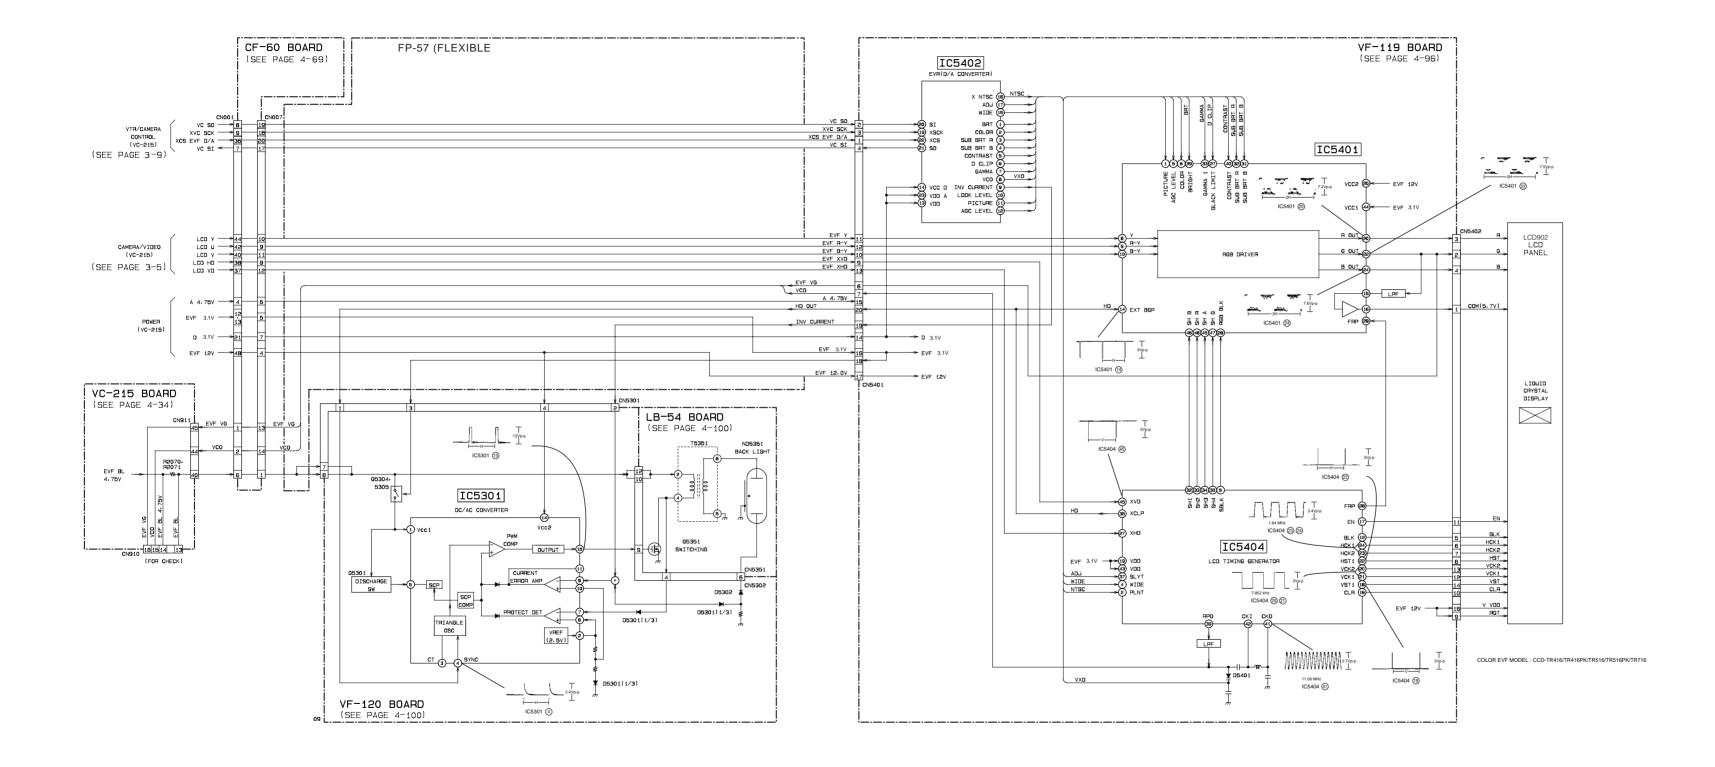


#### 3-9. B/W EVF BLOCK DIAGRAM B/W EVF MODEL

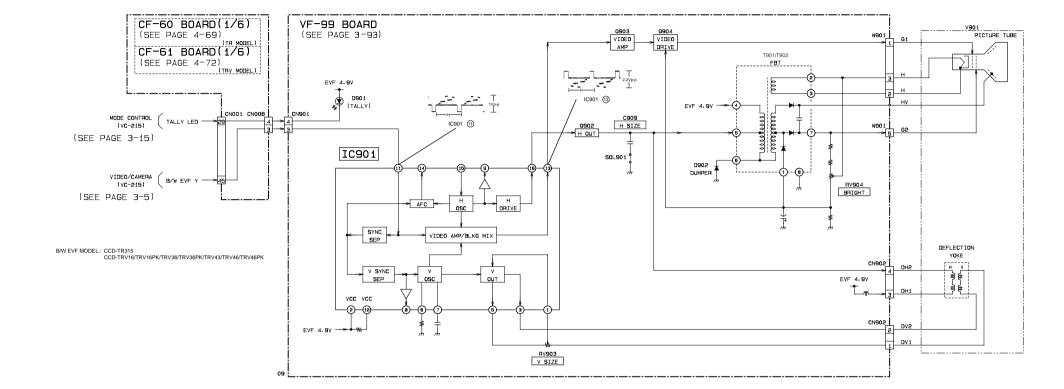



#### 3-10. POWER BLOCK DIAGRAM

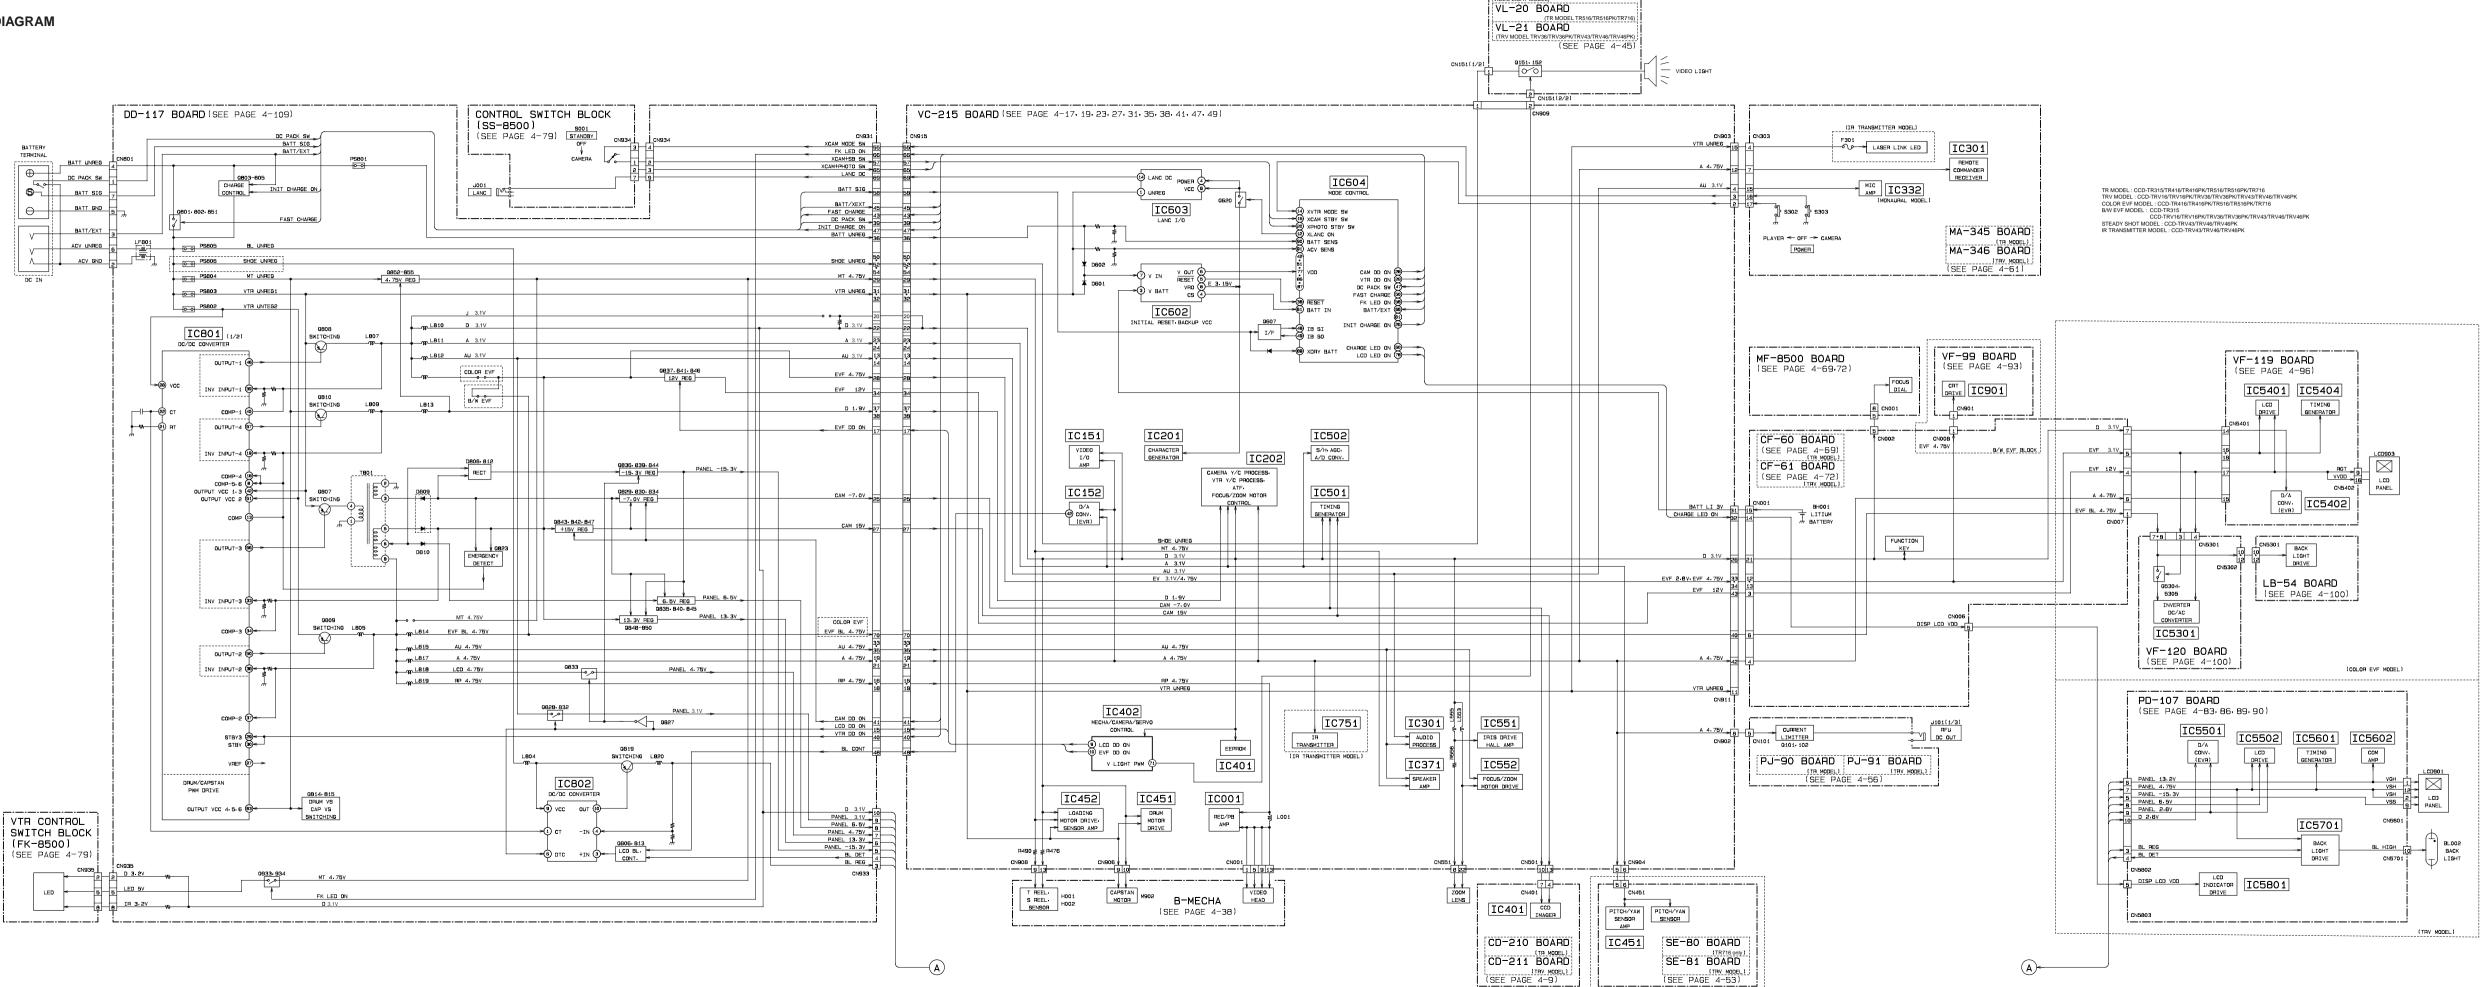


3-35

3-34


3-36 E

# SECTION 4 PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

#### 4-1. FRAME SCHEMATIC DIAGRAM (1)

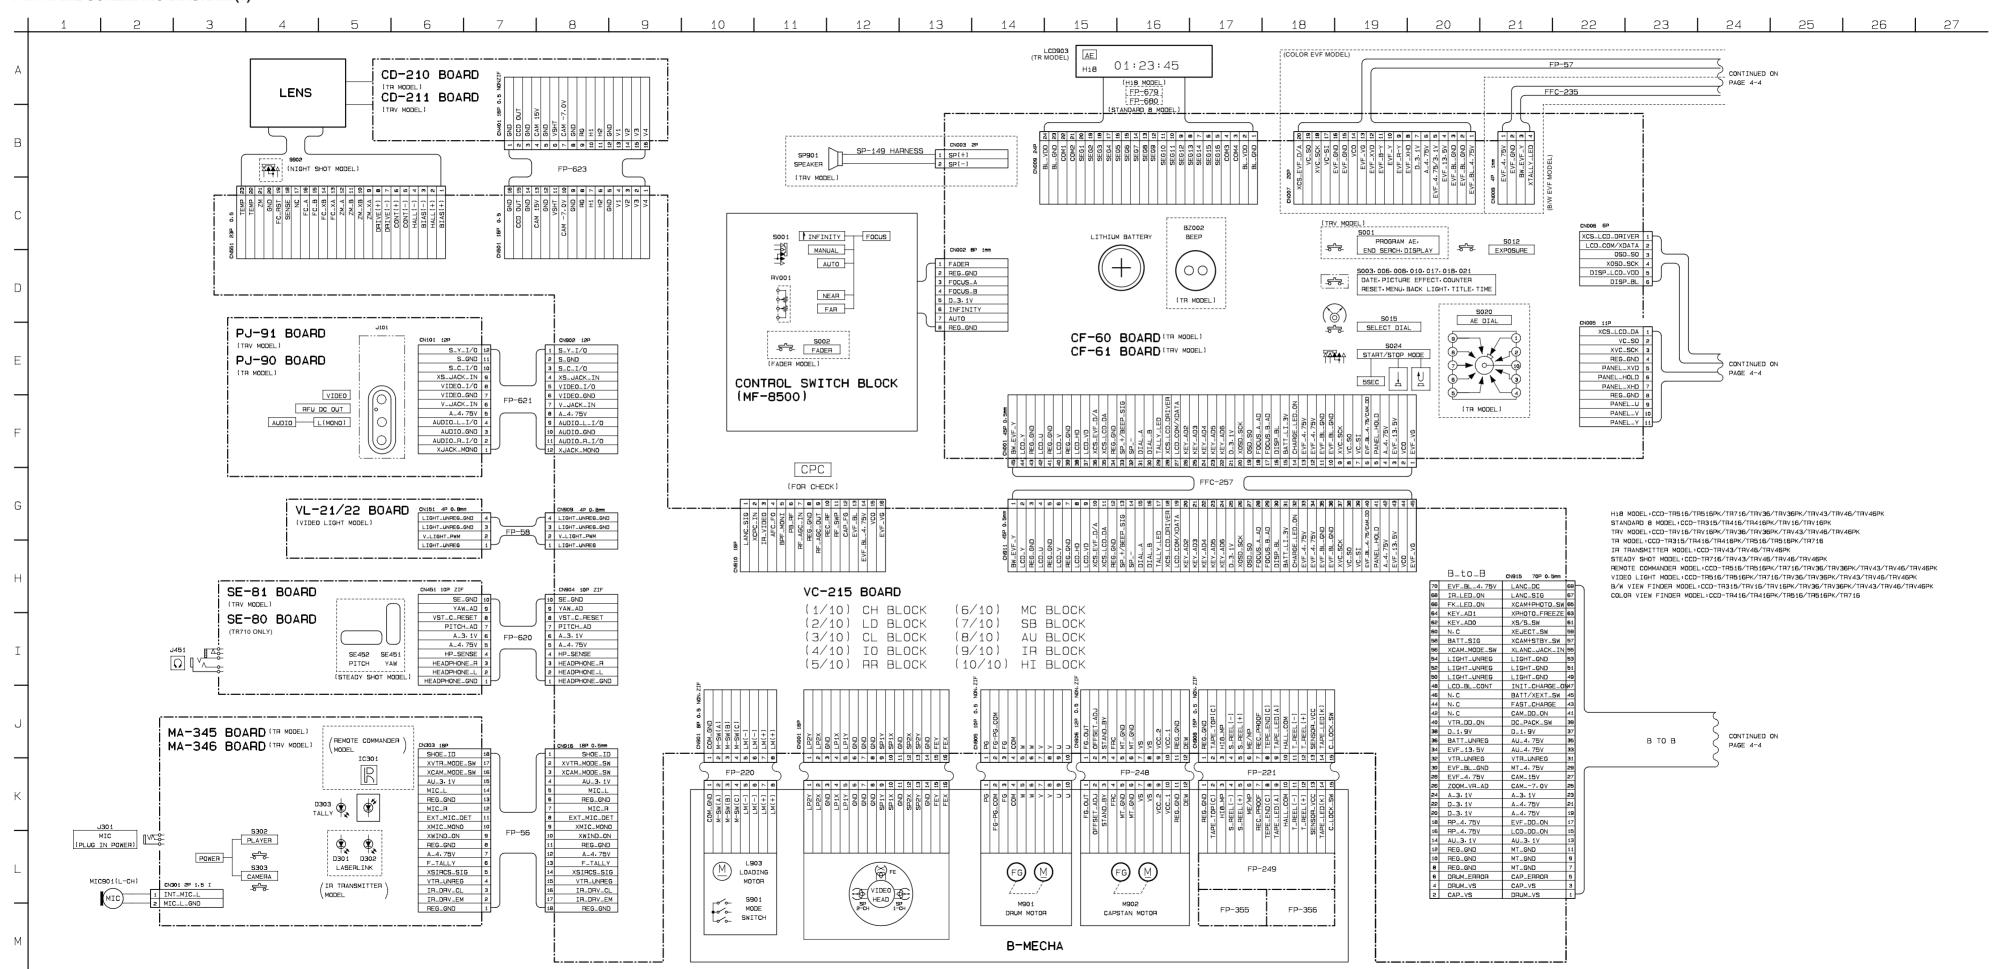


#### FRAME SCHEMATIC DIAGRAM (2)

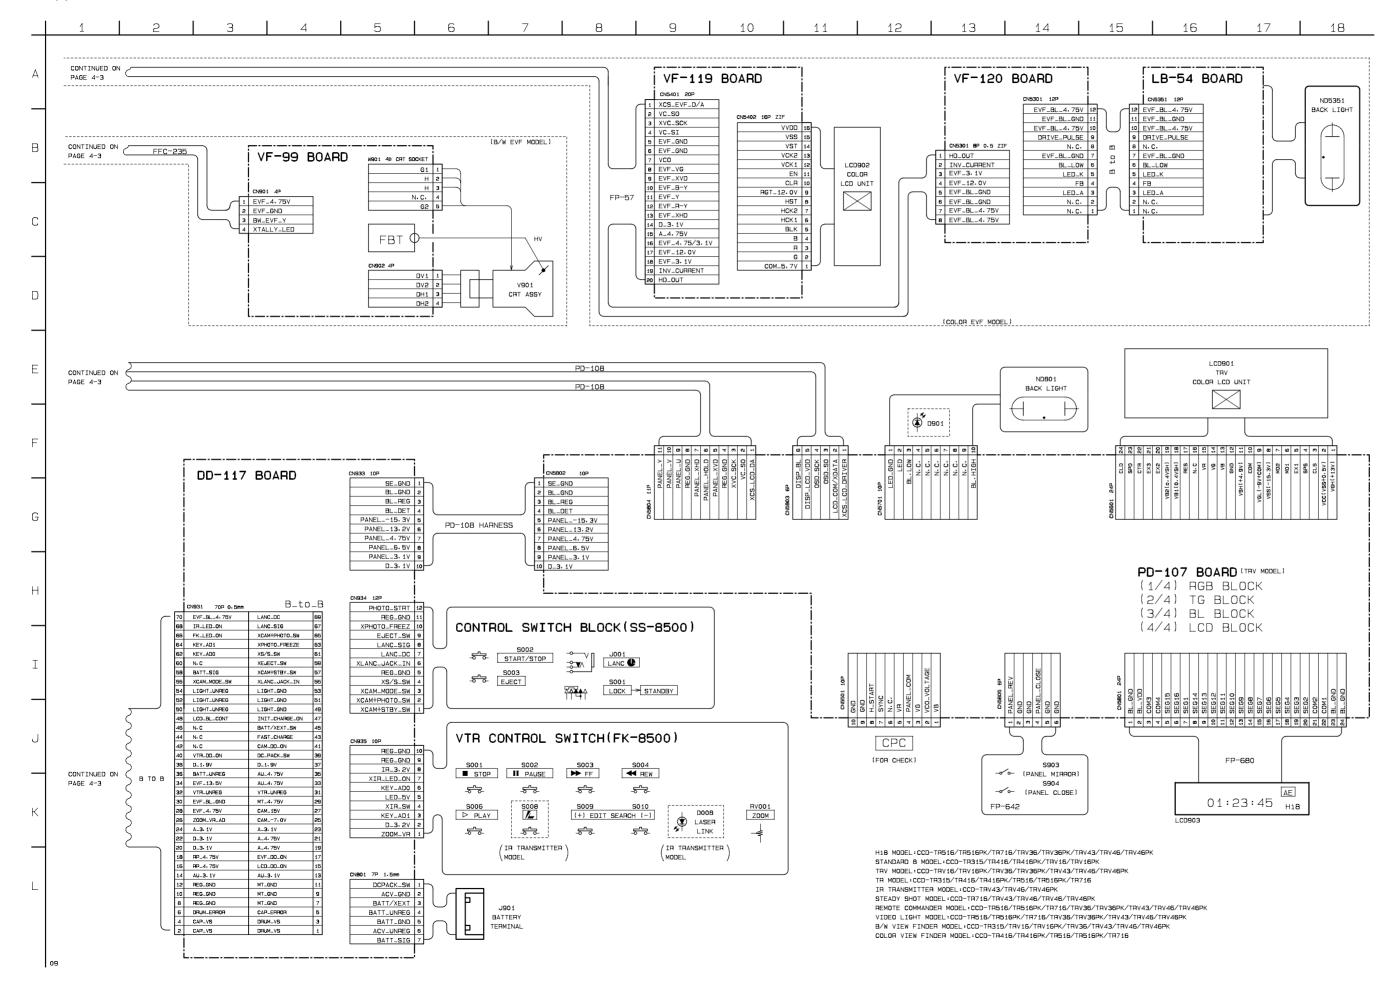

**FRAME** 

#### 4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

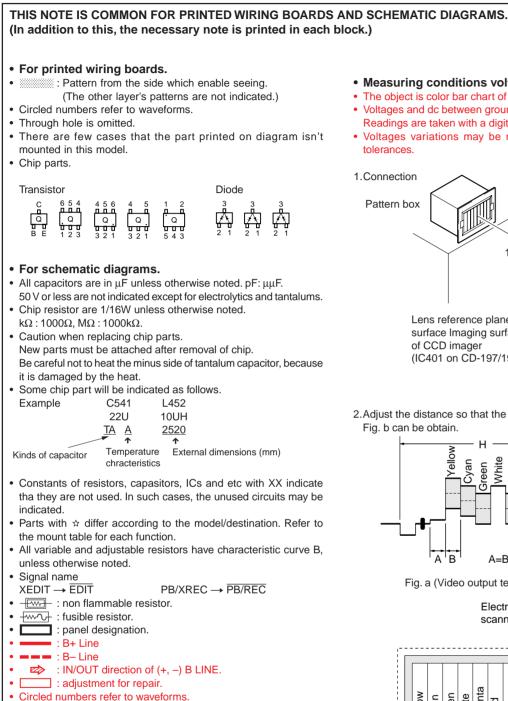

The components identified by Les composants identifiés par

When indicating parts by refer-

ence number, please include the

Refer to page 3 as for "Table for difference of functions" of models and classification.

specified.

board name.

mark ∆or dotted line with mark | une marque ∆ sont critiques |


Replace only with part number | Ne les remplacer que par une |

pour la sécurité

piéce portant le numéro spécifié.

#### • Measuring conditions voltage value and waveform.

- The object is color bar chart of pattern box.
- Voltages and dc between ground and measurement points. Readings are taken with a digital multimeter (DC  $10M\Omega$ ).
- Voltages variations may be noted due to normal production tolerances.

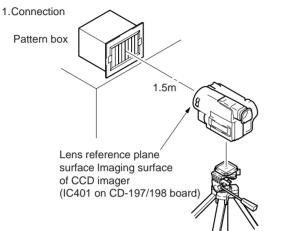

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.



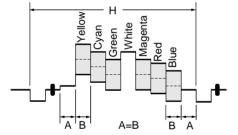


Fig. a (Video output terminal output waveform)

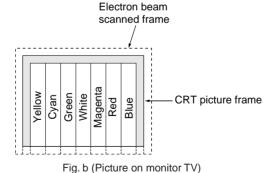

### CD-210/211 (CCD IMAGER) PRINTED WIRING BOARD

- Ref No. CD-210 BOARD: 4,000 series, CD-211 BOARD: 9,000 series -

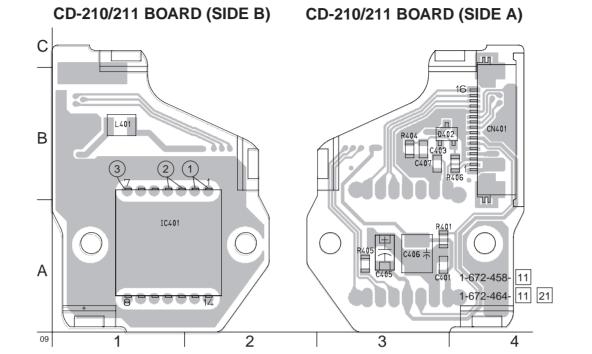


CD-210/ CD-211 BOARD					
C401 C403 C405 C406 C407 CN401	A-3 B-3 A-3 A-3 B-3 B-4				
IC401	A-1				
L401	B-1				
Q402	B-3				
R401 R404 R405 R406	A-3 B-3 A-3 B-4				





There are few cases that the part isn't mounted in this model is printed on this diagram.

Chip transistor



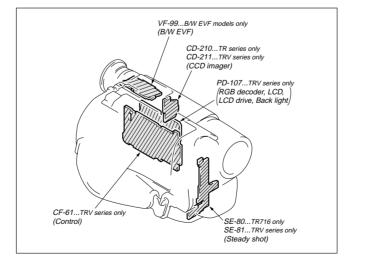

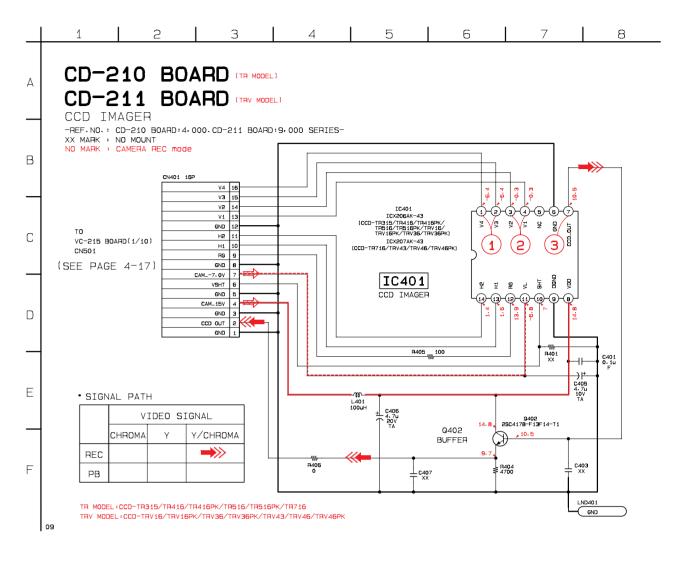

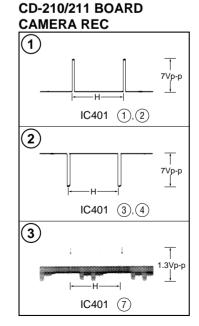

#### Note on the CCD imager replacement

- The CCD imager is not mounted for the already mounted CD-210/211 board supplied as the repair parts. When replacing the CD-210/211 board, remove the CCD imager from the old board and install on the new board.
- Perform all adjustments of the camera block when the CCD imager has been replaced.
- Handle the CCD imager with attention such as MOS IC as it may be broken by static electricity in the structure. Also, prevent the receiving light section from dust attached and strong light.

4-9 4-7

#### CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

VC-215 BOARD (SIDE B)

E-2 F-2 F-2 F-3 F-3 F-3 F-3 F-3 F-3 F-3 F-3 F-3 F-3
R645 R646 R647 R648 R649 R651 R652 R653 R654 R655 R663 R666 R667 R688 R686 R678 R689 R691 R692 R704 R716 R717 R718 R718 R719 R719 R719 R719 R719 R719 R719 R719
A-2 A-2 A-1 A-2 A-2 A-2 A-2 A-1 A-1 A-1 A-1 A-1 A-1 A-1 A-1 A-1 A-1
R471 R472 R473 R475 R477 R480 R481 R482 R483 R484 R485 R486 R510 R511 R512 R527 R537 R535 R536 R537 R537 R552 R537 R537 R552 R538 R548 R564 R564 R564 R564 R564 R564 R564 R564
0-344-64-44-4-99-9-9-9-9-9-8-8-9-8-8-8-8-7-8-8-8-8-2-3-2-2-2-2-2-2-2-2-2-2-2-2-3-3-3-3
R260 R261 R262 R263 R264 R265 R266 R267 R304 R306 R307 R312 R324 R327 R371 R374 R377 R378 R379 R382 R378 R378 R379 R388 R389 R404 R416 R417 R418 R427 R429 R433 R434 R435 R442 R433 R444 R442 R443 R445 R445 R445 R445 R445 R445 R445
8-6-6-6-6-6-6-6-6-6-5-5-5-5-5-5-5-5-5-6-6-6-4-4-7-8-8-8-8-8-7-7-8-7-8-7-8-3-4-3-3-3-5-5-5-5-5-4-3-3-4-4-3-5-5-5-5
R058 R066 R0667 R067 R0776 R0776 R0778 R078 R079 R080 R083 R084 R089 R090 R094 R109 R110 R112 R152 R154 R157 R178 R183 R184 R184 R185 R188 R189 R190 R110 R112 R152 R154 R157 R178 R180 R183 R184 R185 R186 R187 R187 R188 R189 R189 R190 R190 R190 R190 R190 R190 R190 R19
5.5.6.5.6.6.6.6.6.6.5.5.5.5.5.5.5.5.5.6.4.9.9.9.9.1.1.7.2.3.7.2
Q012 Q016 Q017 Q018 Q019 Q021 Q023 Q025 Q030 Q031 Q032 Q038 Q042 Q151 Q205 Q208 Q303 Q041 Q215 Q208 Q307 Q451 Q454 Q455 Q508 Q607 Q609 R010 R001 R002 R009 R011 R012 R013 R014 R015 R016 R017 R017 R017 R017 R017 R018 R018 R019 R019 R019 R019 R019 R019 R019 R019
A-9 D-1 C-433 E-F-12 E-E C-447 C-442 E-G E-F-18 B-B-466 C-C-C-C-B-B-B-B-B-B-B-B-B-B-B-B-B-B-B-B
CN904 CN910  D001 D201 D202 D371 D502 D604 D608 D609 D610 D611 D612  FB204 FB205 FB503 FB504  IC152 IC201 IC201 IC204 IC371 IC401 IC452 IC501 IC452 IC501 IC451 IC452 IC501 IC451 IC452 IC501 IC552 IC602 IC602 IC603 IC751
A-16676566556677667662221166778877788BBBBBBBBBBBAABBBAA8BBAA8BBBAAABBBAAABBBAAABBBBBB
C484 C485 C505 C506 C507 C508 C509 C510 C515 C553 C554 C556 C557 C568 C557 C568 C572 C600 C611 C613 C625 C626 C627 C630 C630 C634 C704 C714 C715 C755 C756 C756 C757 C756 C756 C757 C756 C756
D-5 5-5-3-5-5-3-3-4-4-4-3-9-9-7-8-8-7-7-7-8-8-8-8-8-8-8-3-3-3-4-4-4-3-4-3-4-4-4-3-8-8-8-8
C227 C229 C232 C233 C234 C235 C236 C239 C241 C244 C246 C247 C249 C252 C301 C302 C348 C371 C372 C378 C380 C381 C382 C384 C385 C386 C387 C386 C387 C386 C460 C467 C458 C456 C466 C467 C468 C469 C461 C462 C463 C464 C466 C467 C468 C469 C470 C471 C473 C474
A-A-A-B-B-B-B-B-B-B-B-B-B-B-B-B-B-B-B-B
002 003 008 0011 0112 0113 0114 0115 0116 0117 0119 0202 0225 0338 0402 042 042 043 048 050 060 067 066 067 066 067 070 070 077 077

#### • For Printed Wiring Boards.

 This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.


There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip transistor








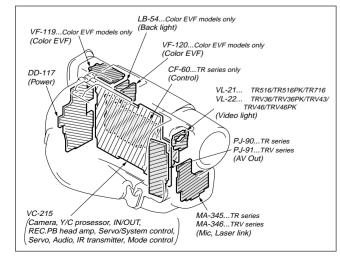



VC-215 (CAMERA, Y/C PROCESSOR, IN/OUT, REC/PB HEAD AMP, SERVO/SYSTEM CONTROL, SERVO, AUDIO, IR TRANSMITTER, MODE CONTROL) PRINTED WIRING BOARD

- Ref No. VC-215 BOARD: 1,000 series -

VC-215 BOARD (SIDE B)

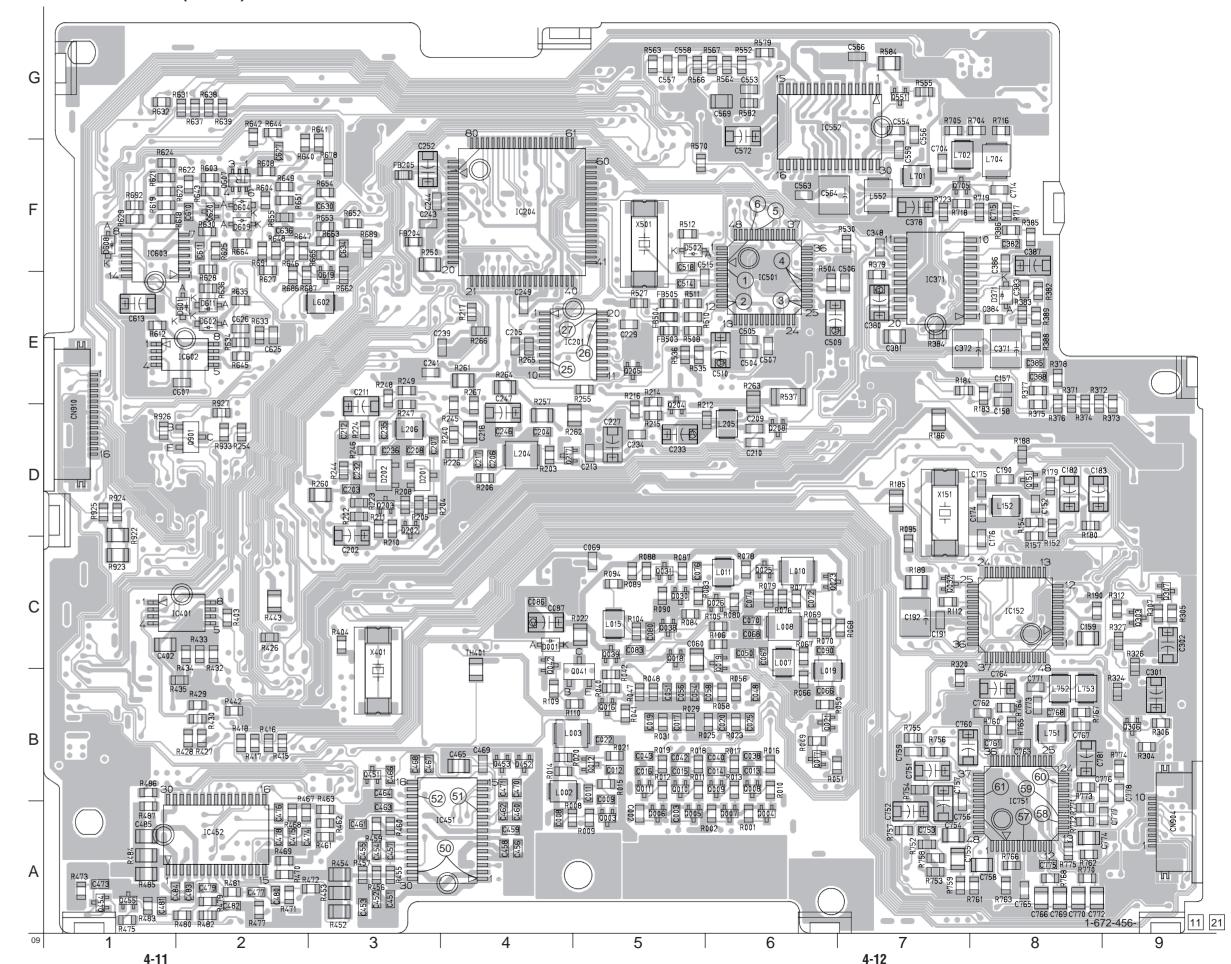

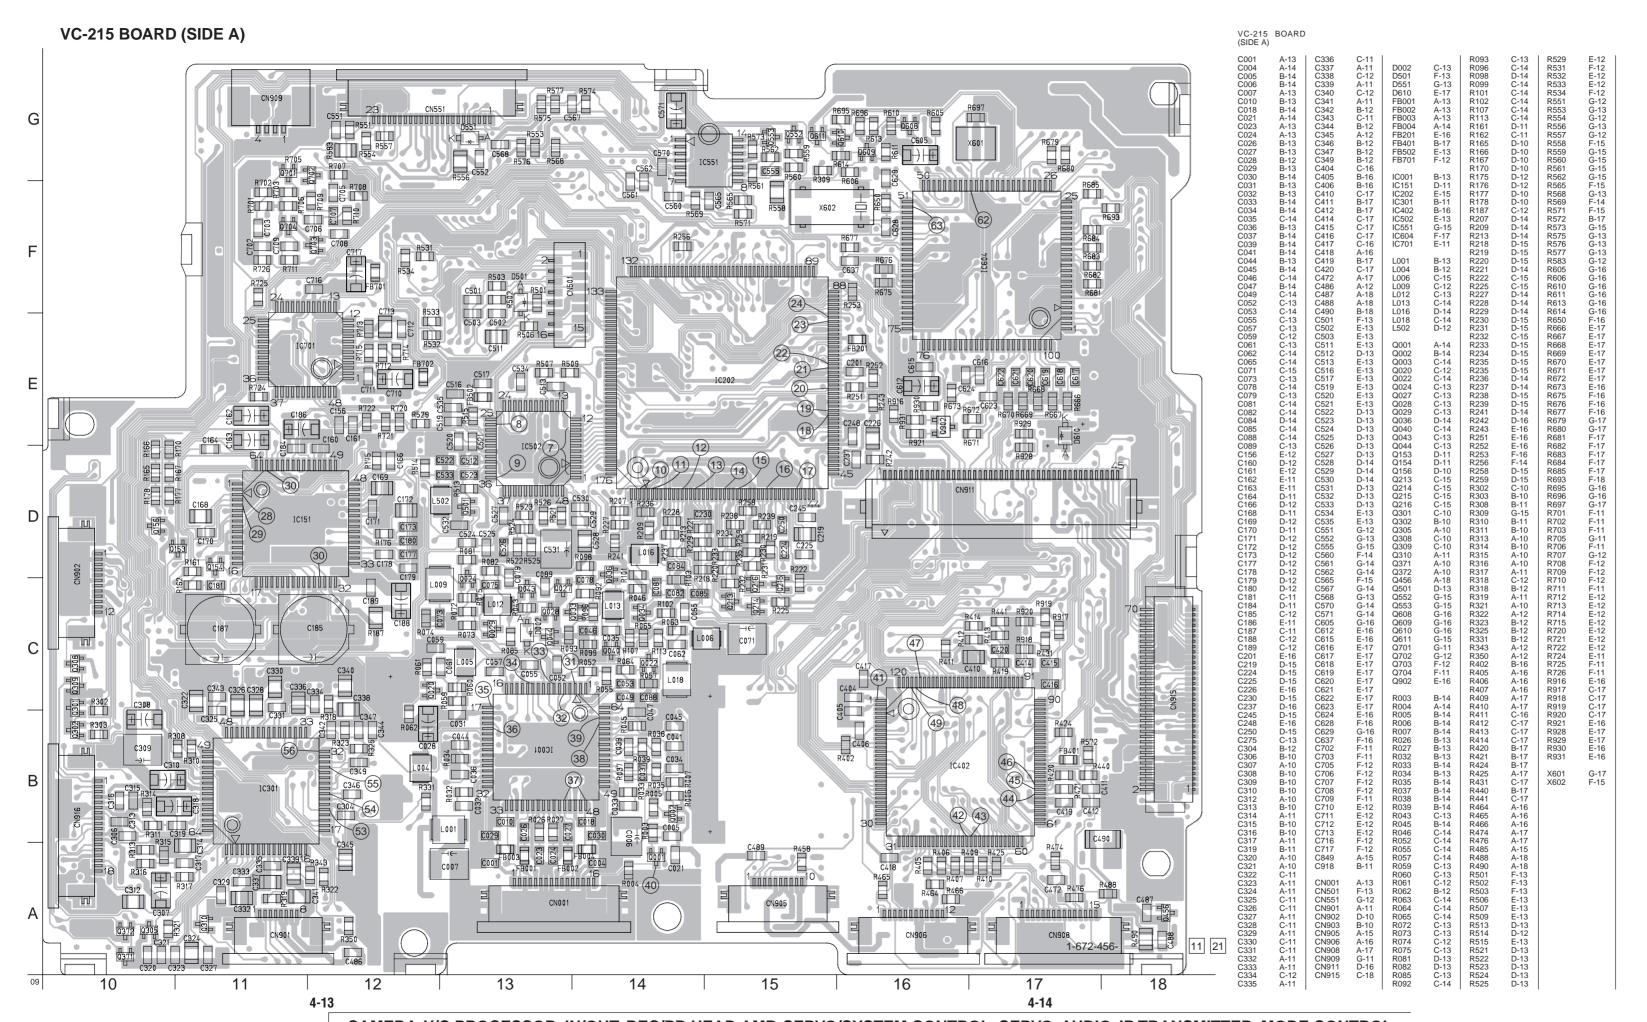


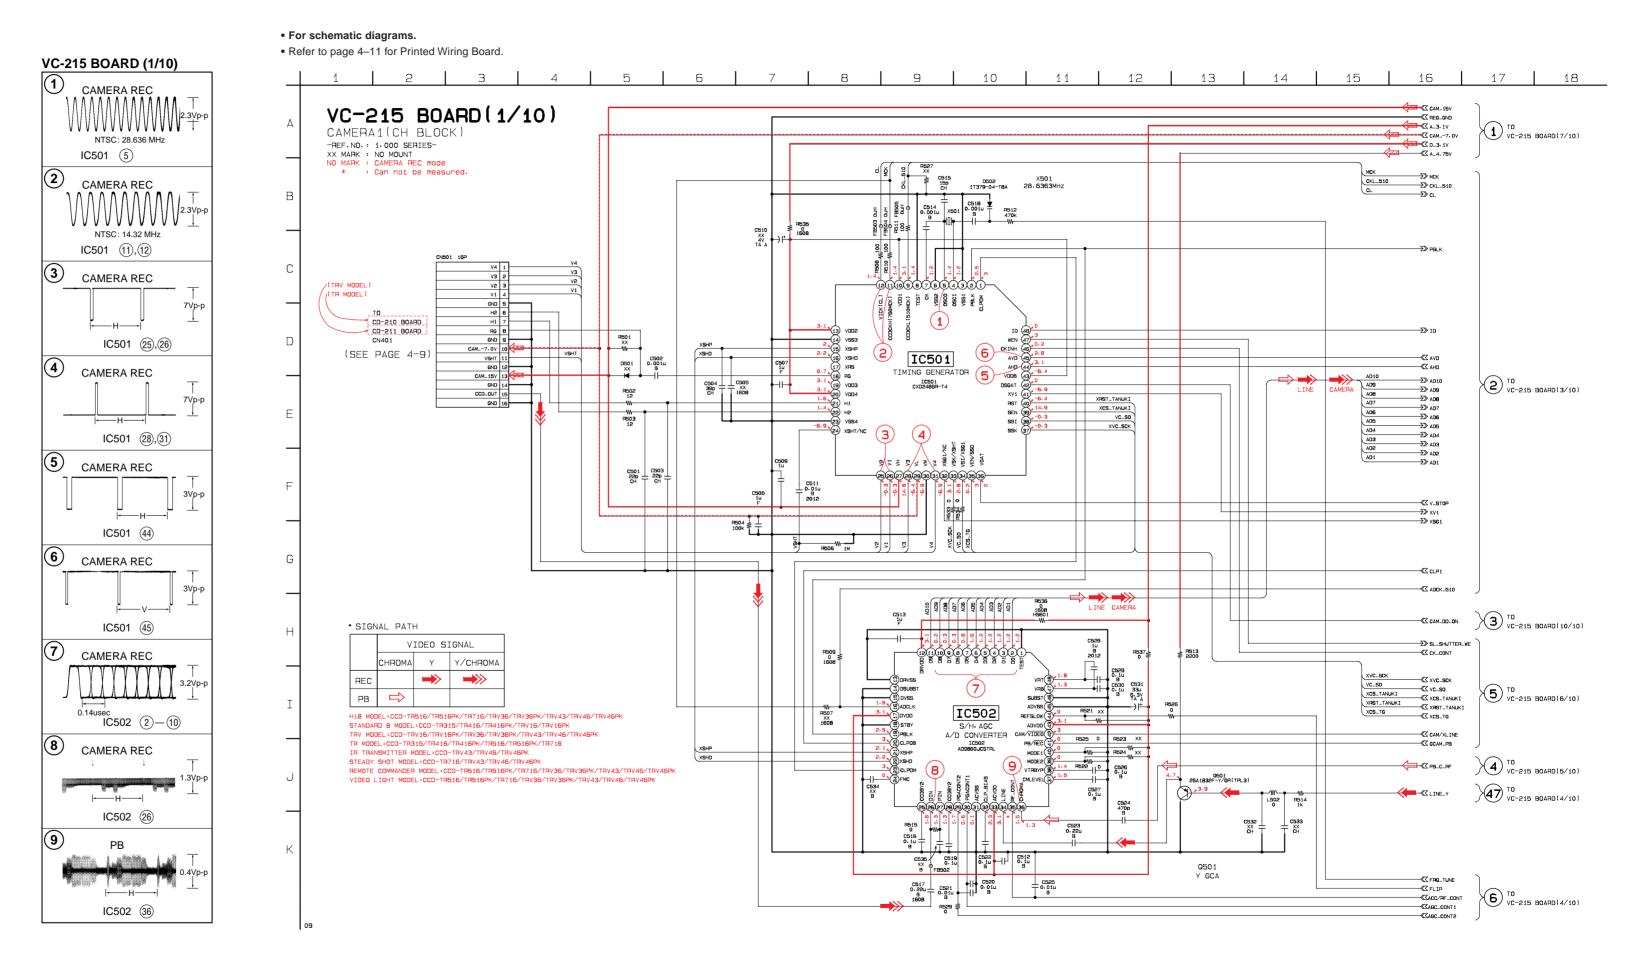


#### CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

#### For schematic diagrams.

• Refer to page 4–11 for Printed Wiring Board.

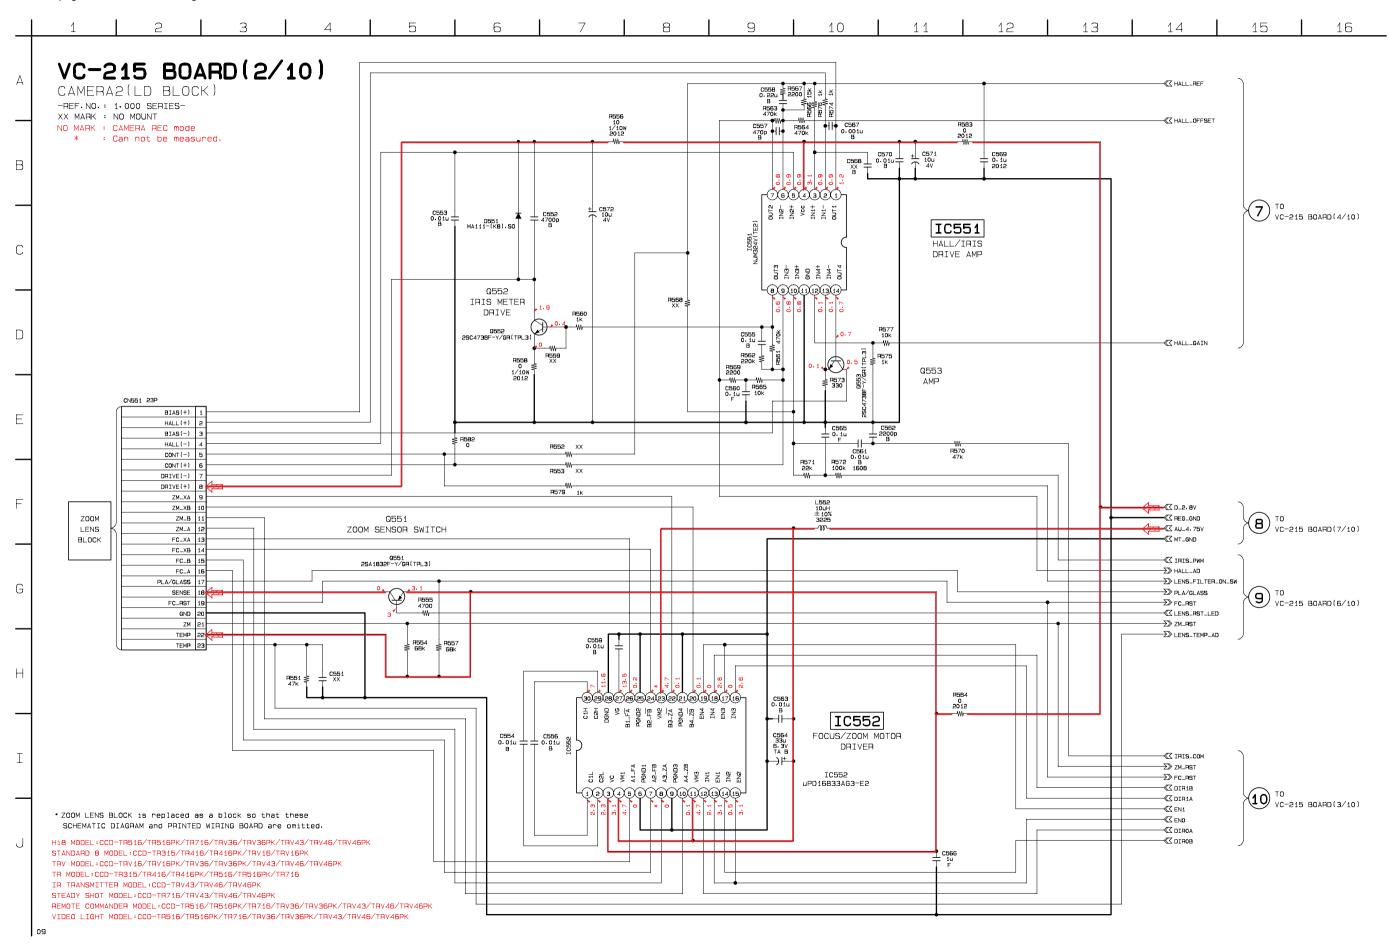


4-19 CAMERA (2)

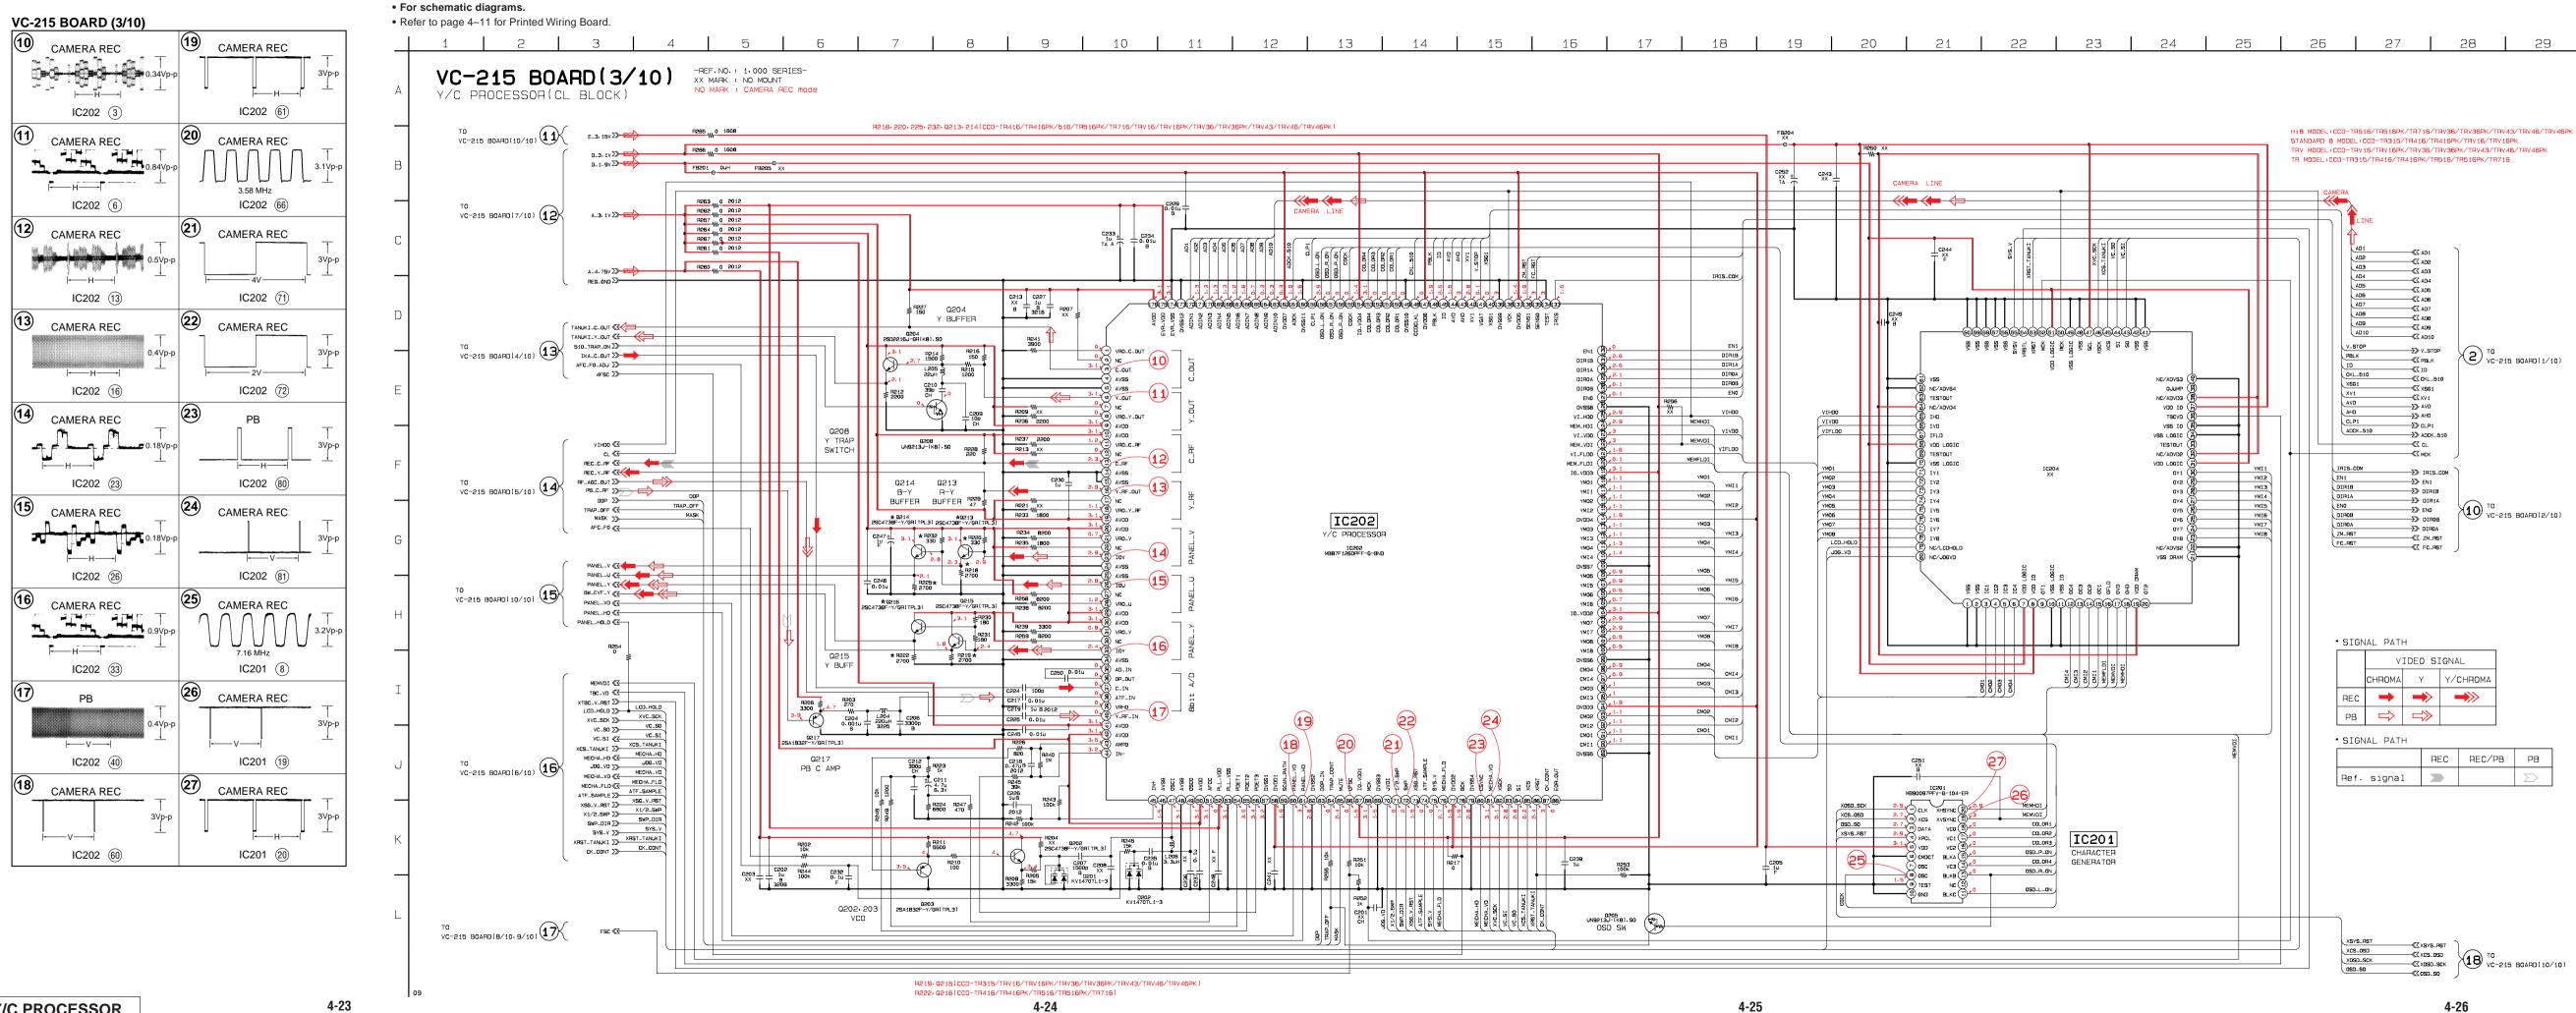


#### • For schematic diagrams.

• Refer to page 4–11 for Printed Wiring Board.

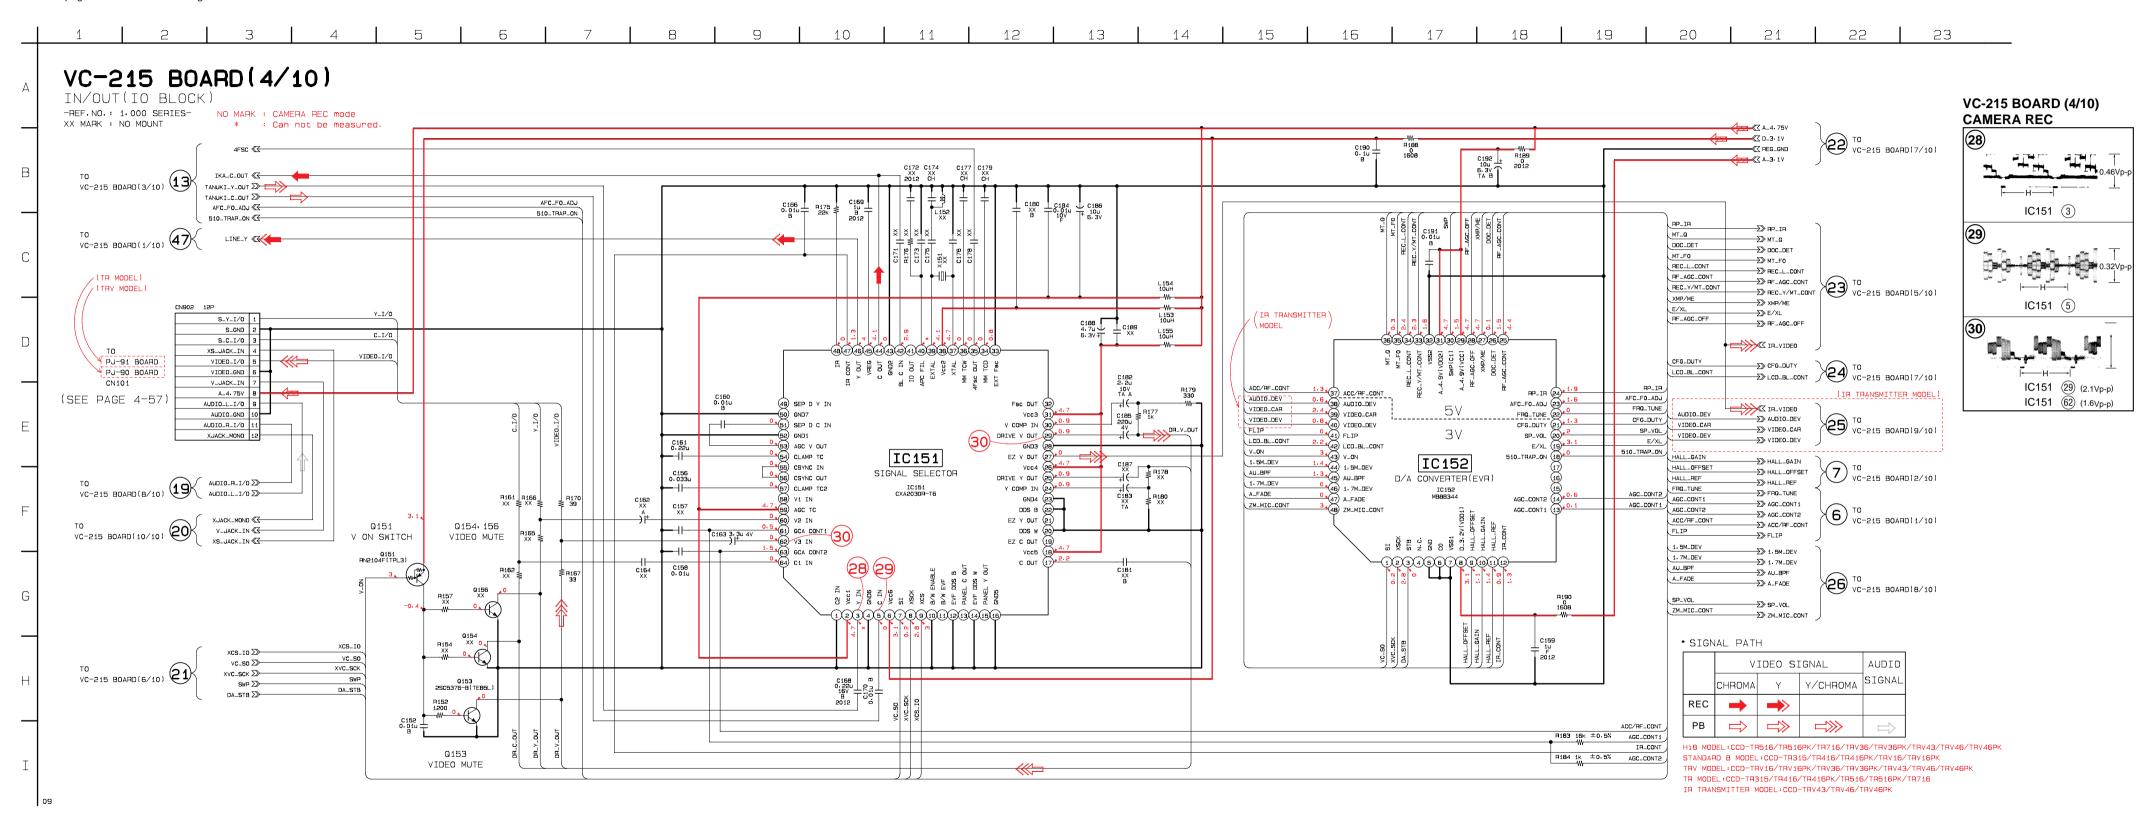



4-28

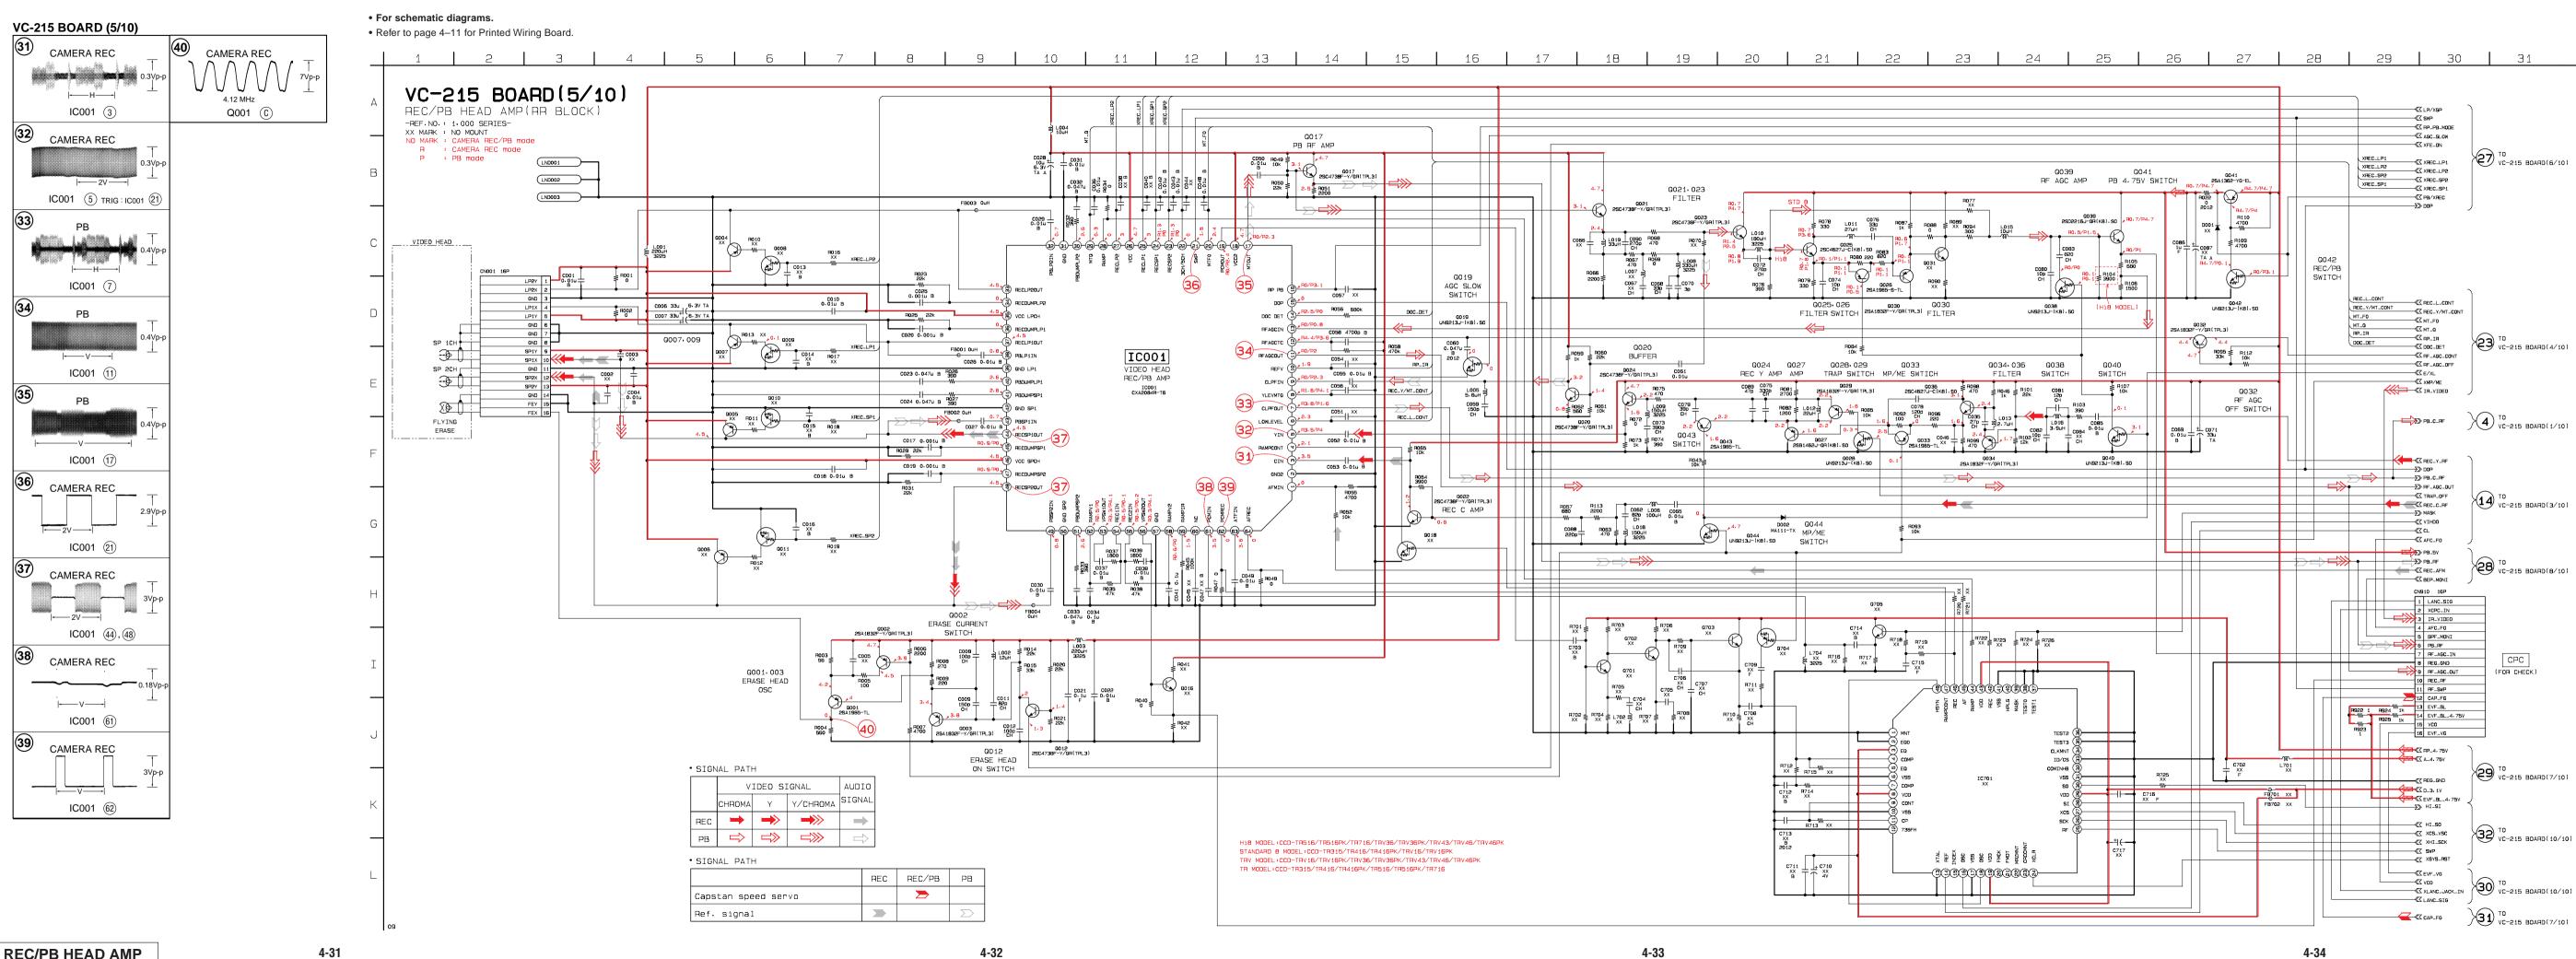

#### For schematic diagrams.


• Refer to page 4–11 for Printed Wiring Board.

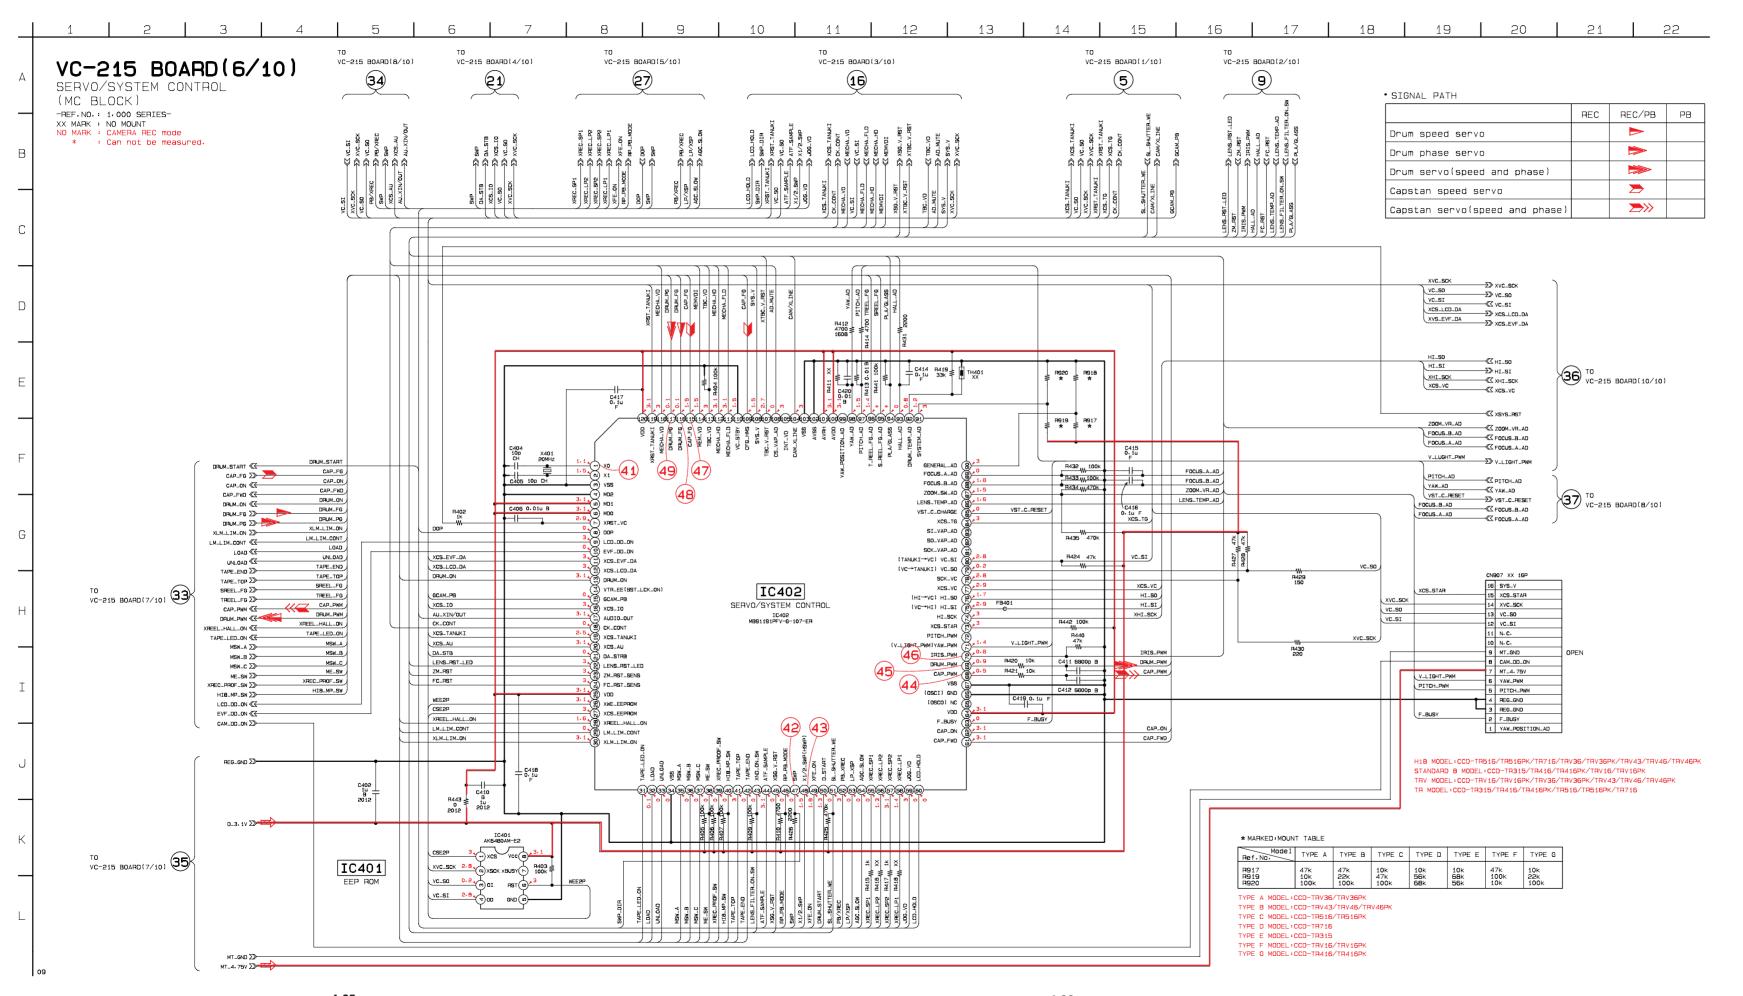

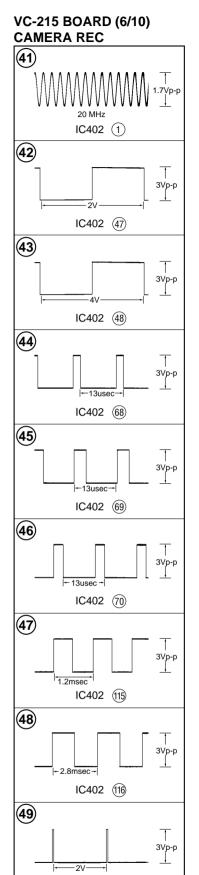

IC402 (117)


#### CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

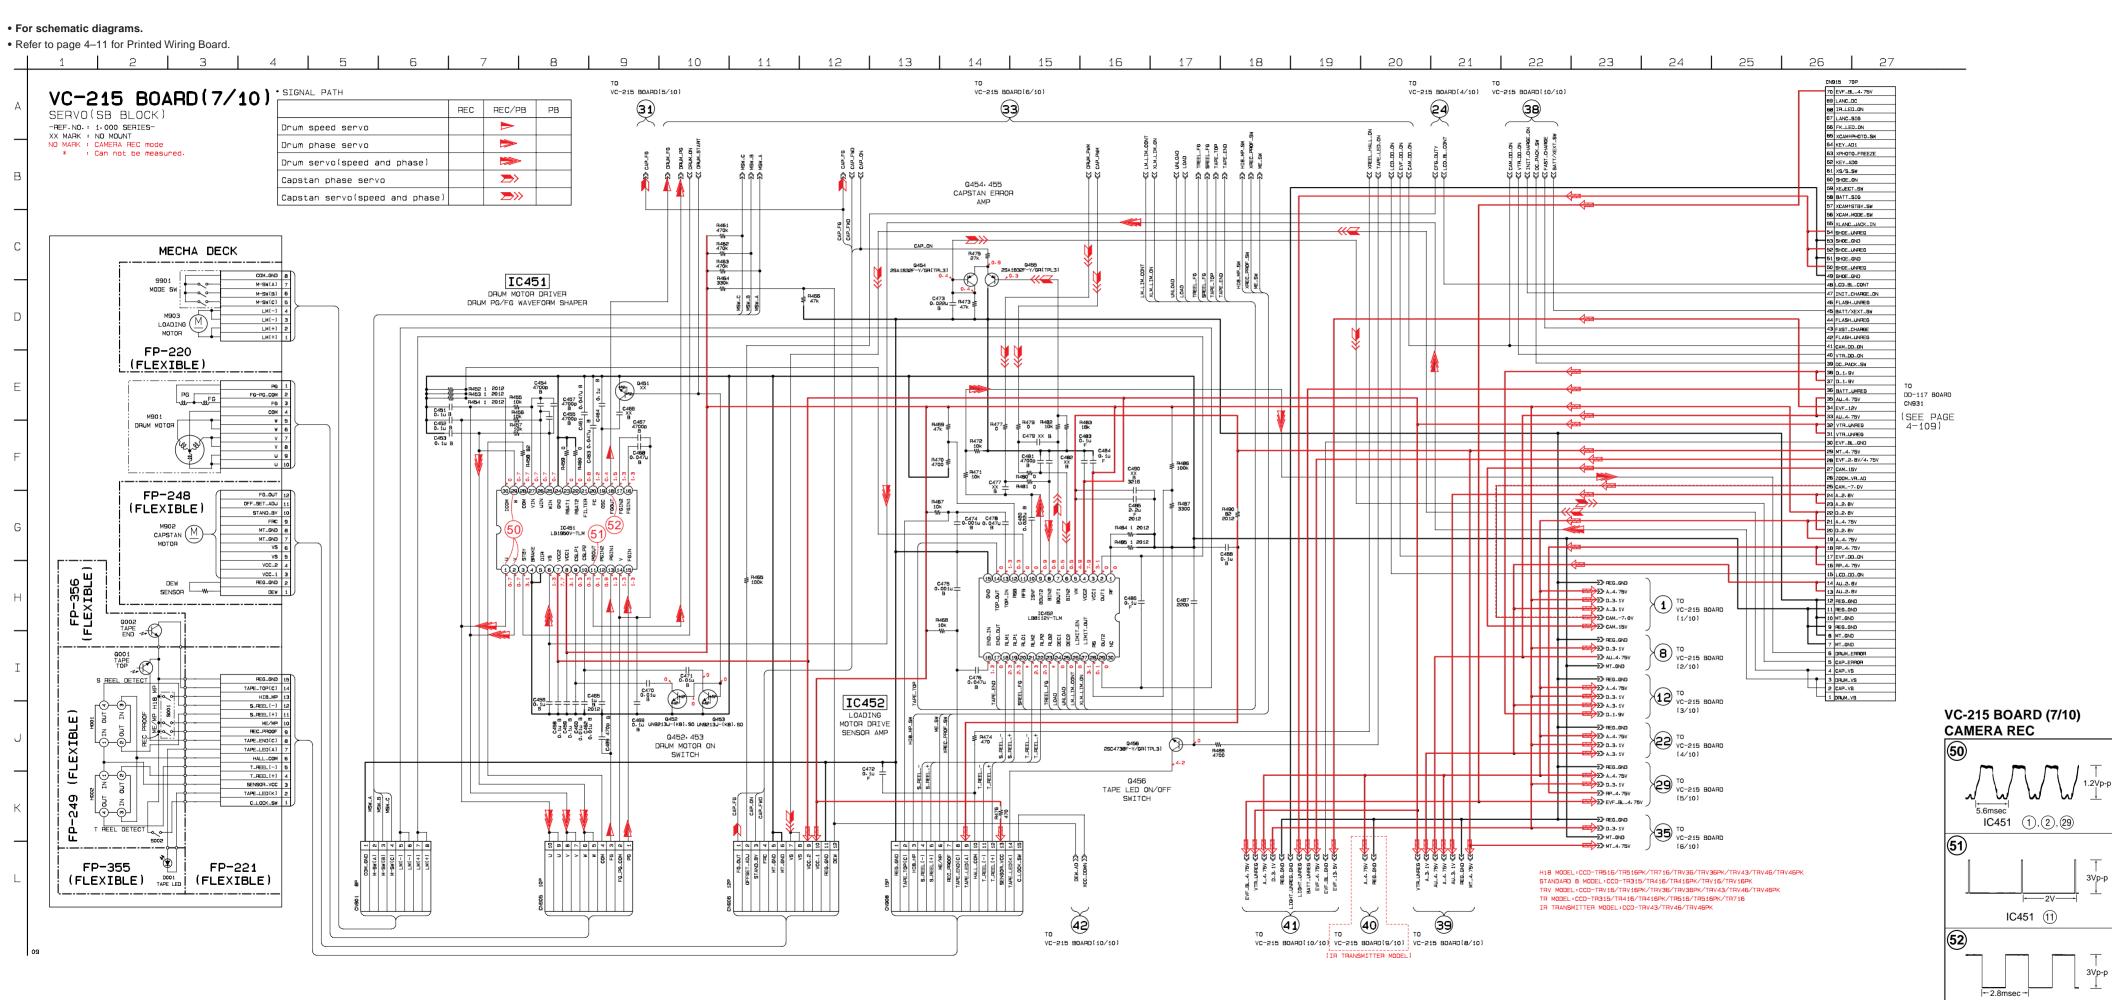


IC451 (18)

#### • For schematic diagrams.

• Refer to page 4–11 for Printed Wiring Board.

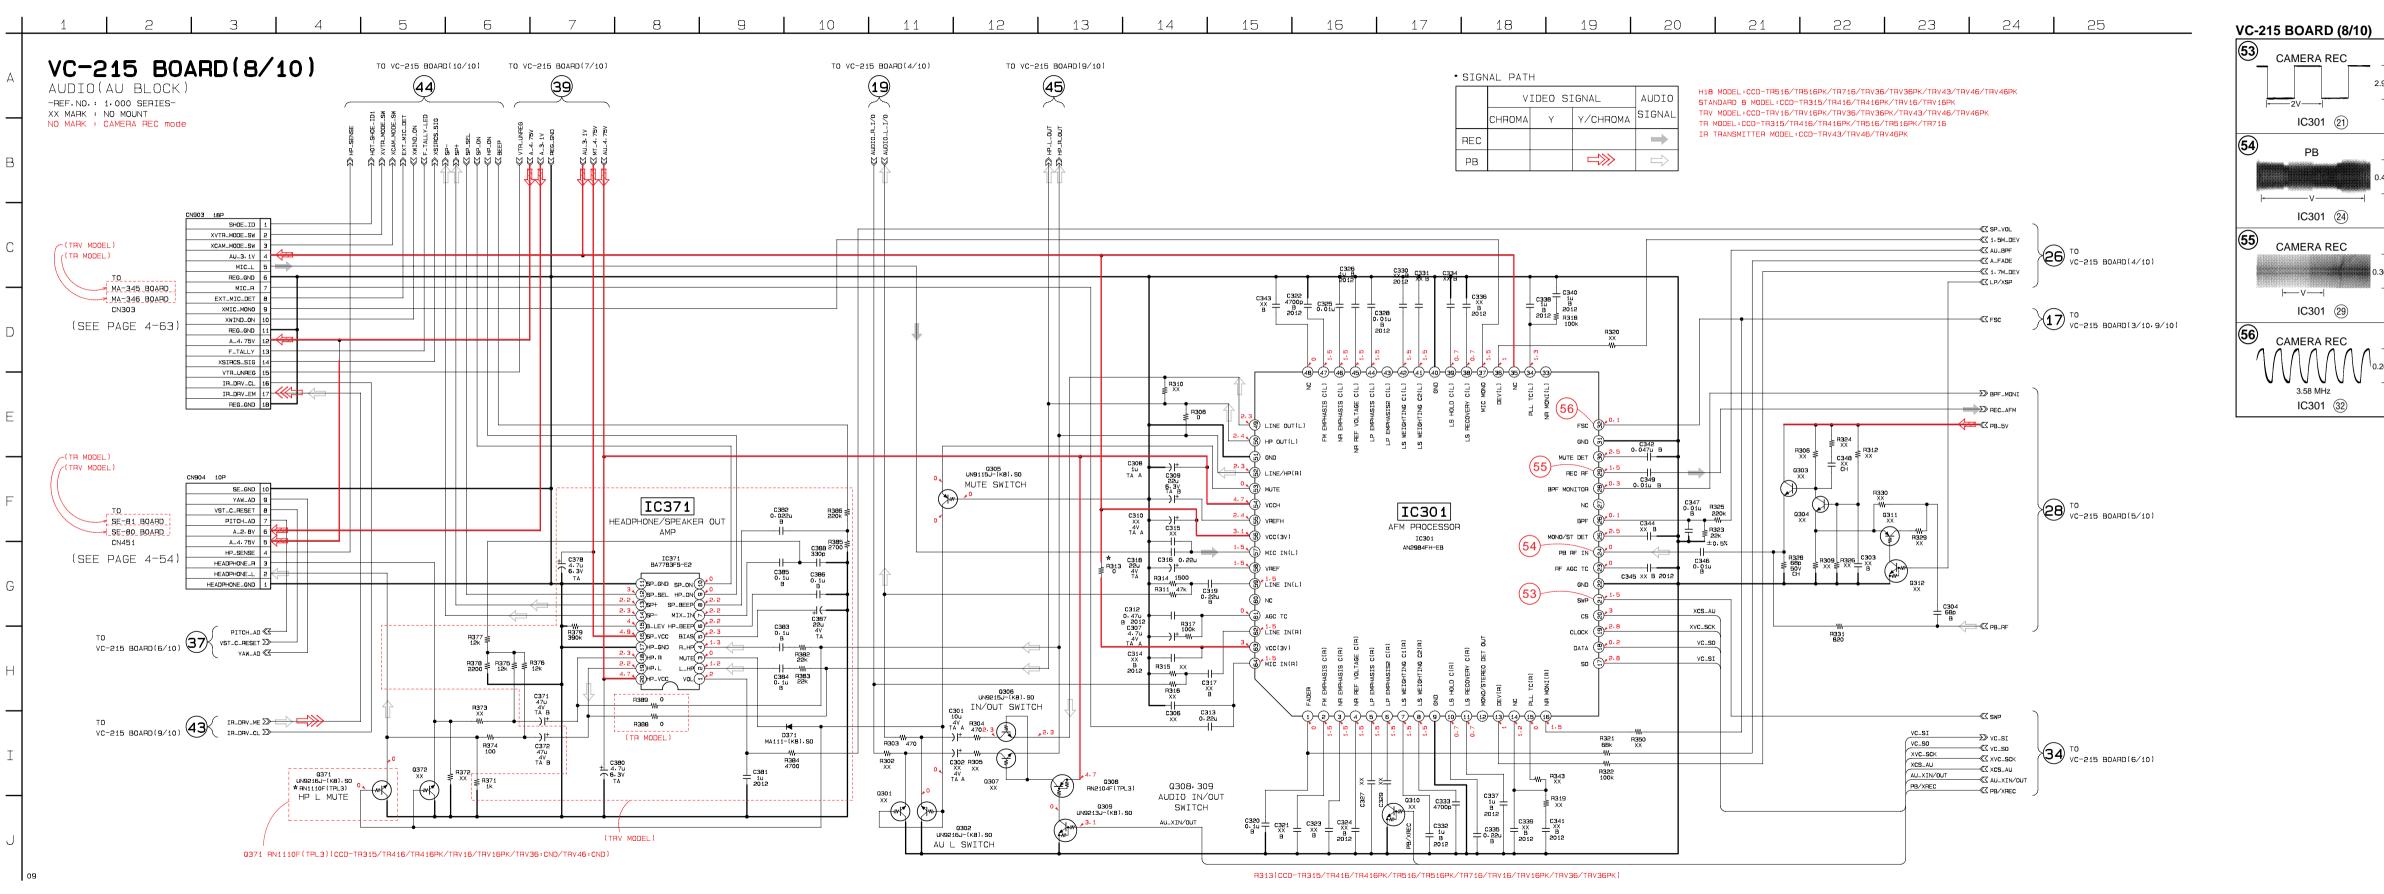

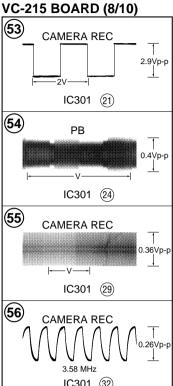



**AUDIO** 


#### VL-21/22 (VIDEO LIGHT (VIDEO LIGHT MODEL)) PRINTED WIRING BOARD

- Ref No. VL-21 BOARD: 1,000 series -

IR TRANSMITTER, VIDEO LIGHT

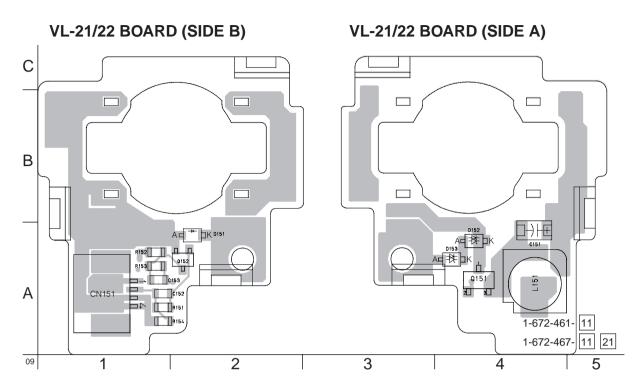

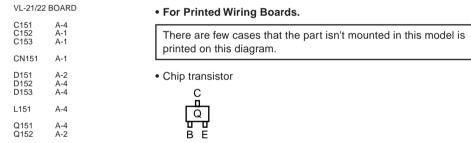

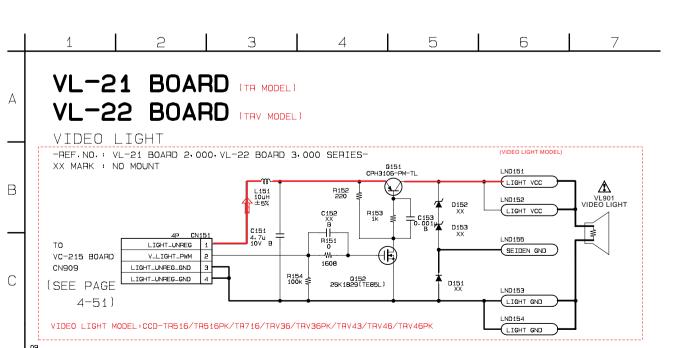


Note:
The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.
Replace only with part number specified.

Note:

Note: Les composants identifiés par une


marque A sont critiques pour la sécurité.

Ne les remplacer que par une piéce portant le numéro spécifié.

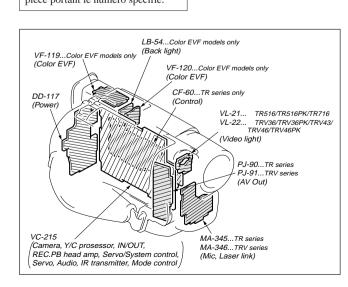


For schematic diagrams.


• Refer to page 4–11 for Printed Wiring Board.

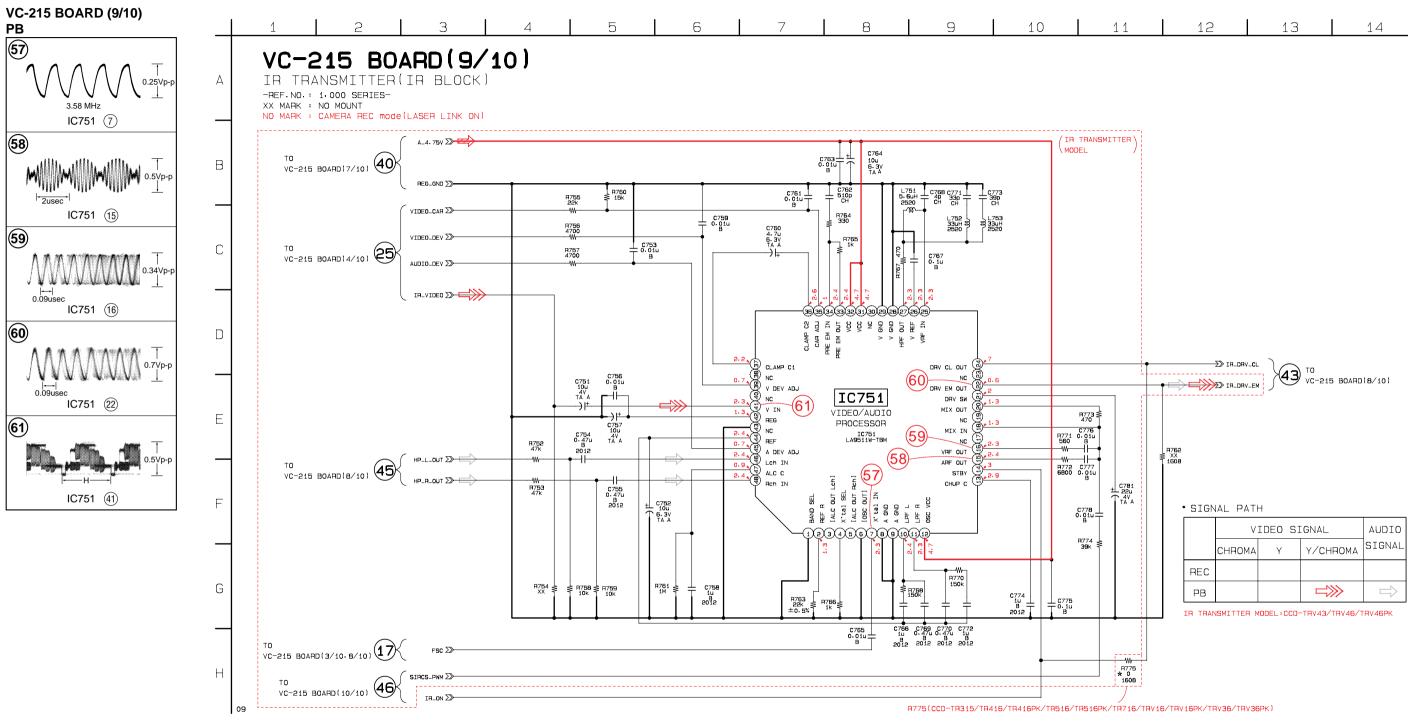

#### For schematic diagrams.

• Refer to page 4–11 for Printed Wiring Board.

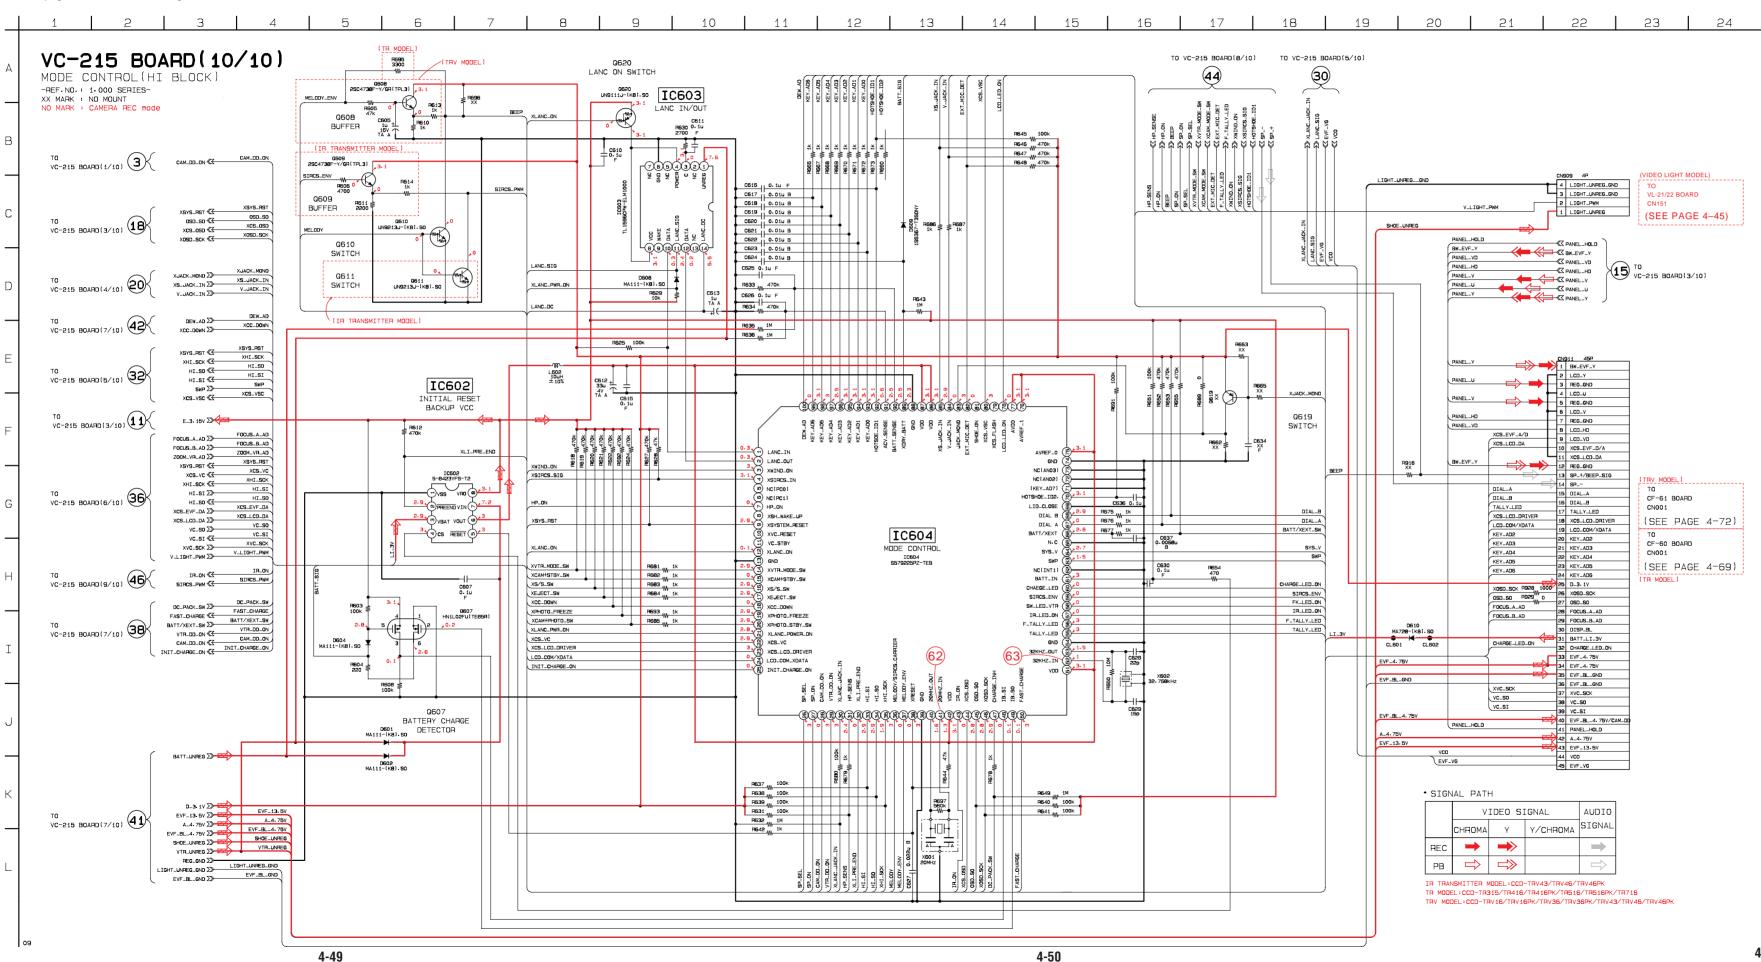


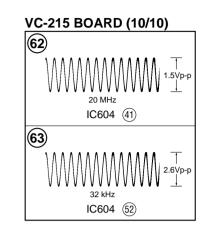

#### CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

#### SE-80/81 (STEADY SHOT (STEADY SHOT MODEL)) PRINTED WIRING BOARD

- Ref No. SE-80 BOARD: 4,000 series, SE-81 BOARD: 9,000 series -

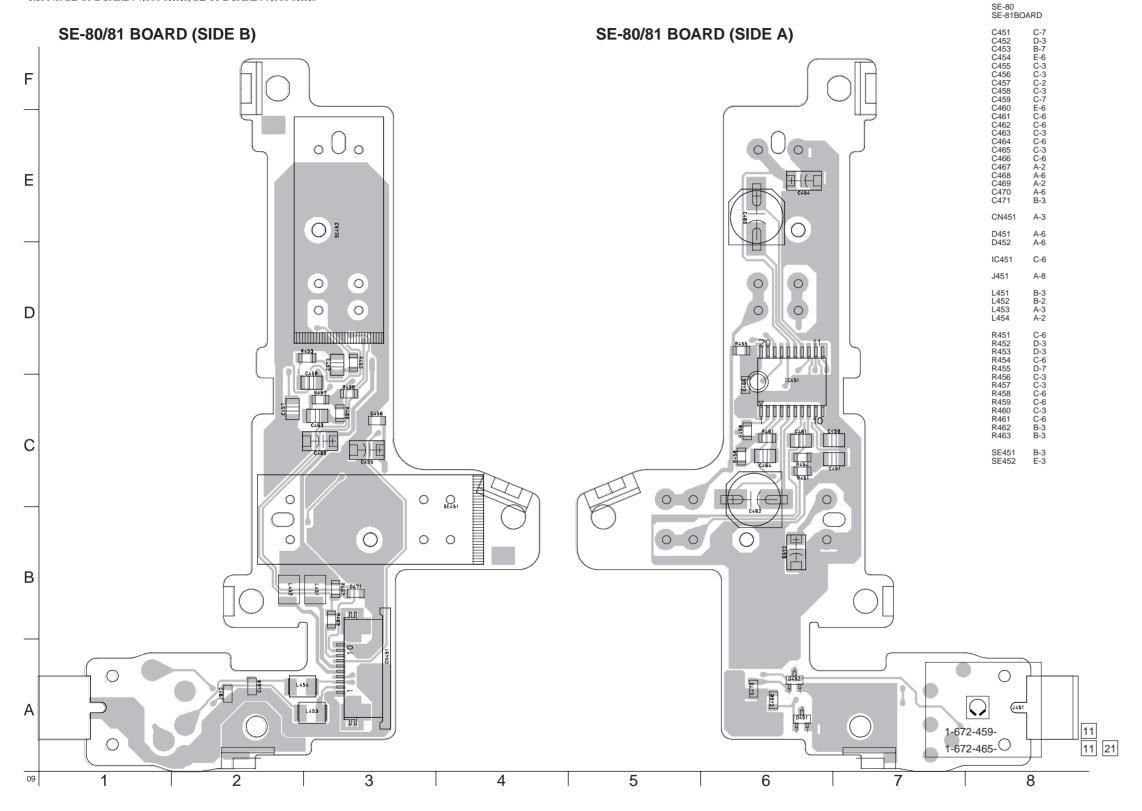



#### • For Printed Wiring Boards.

There are few cases that the part isn't mounted in this model is printed on this diagram.

Chip diode



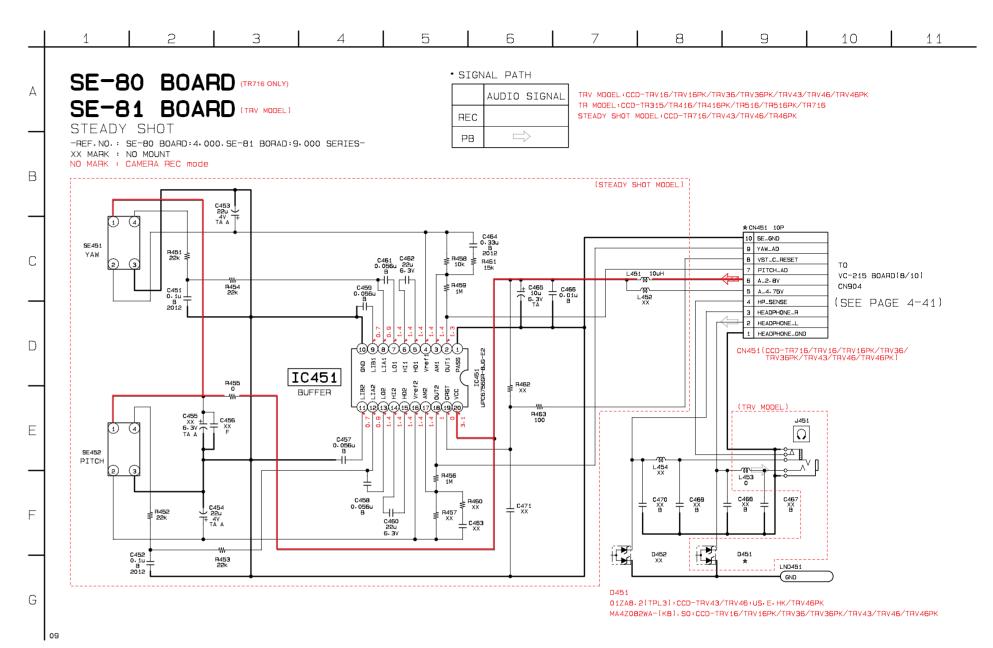


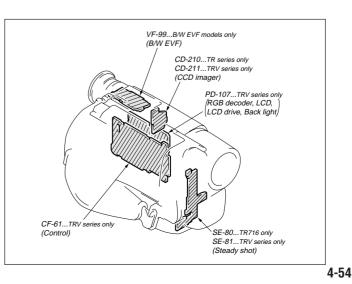

STEADY SHOT

#### PJ-90/91 (AV OUT) PRINTED WIRING BOARD

- Ref No. PJ-90 BOARD: 4,000 series, PJ-91 BOARD: 9,000 series -

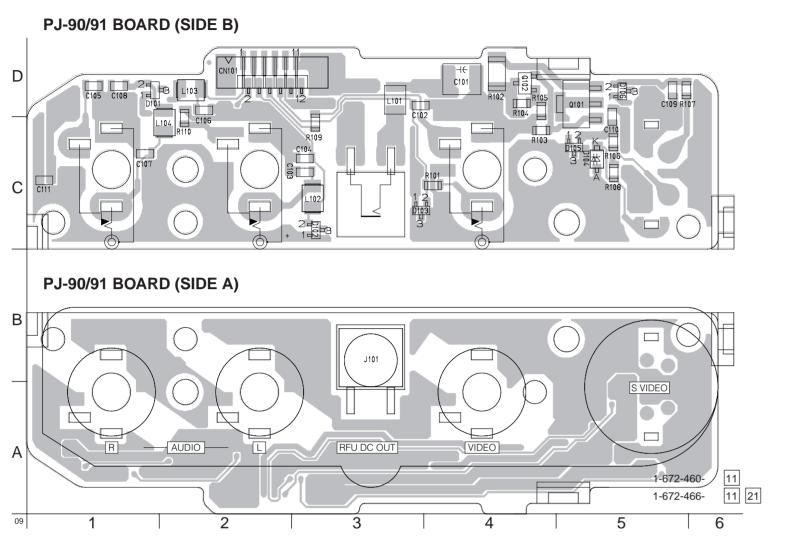



#### • For Printed Wiring Boards.

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip diode



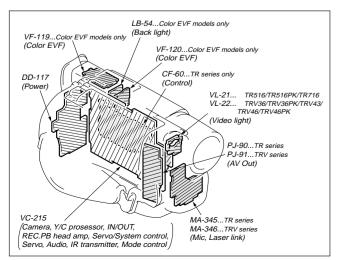

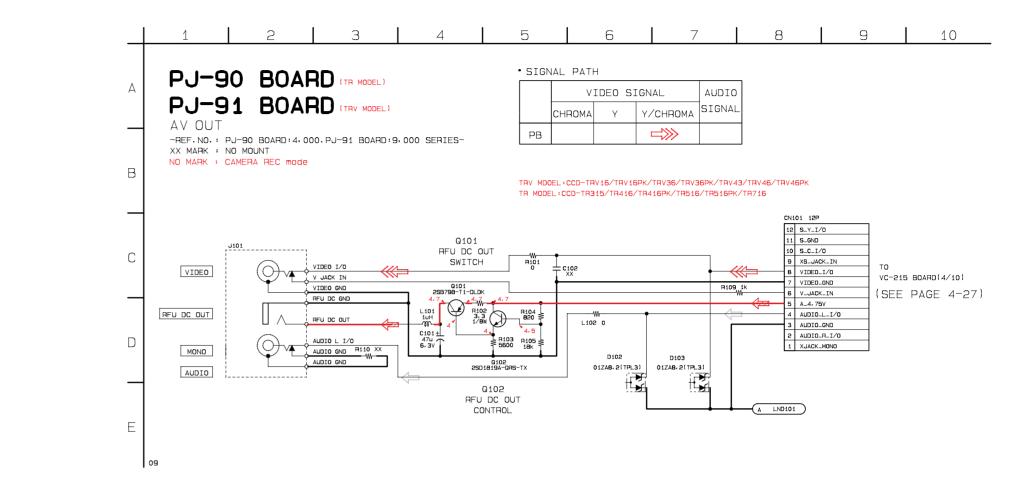

4-55

PJ-90/91 BOARD

D-2

D-1 C-3 C-3 C-5 C-5 D-5

B-3

D-3 C-3 D-2 C-2

C101 C102 C103 C104 C105 C106 C107 C108 C109 C110

CN101

D101 D102 D103 D104 D105 D106

J101


L101 L102 L103 L104

Q101 Q102

R101 R102 R103 R104 R105 R106 R107 R108 R109 R110

#### MA-345, 346 (MIC, LASER LINK) PRINTED WIRING BOARD

- Ref No. MA-345, 346 BOARD: 9,000 series -

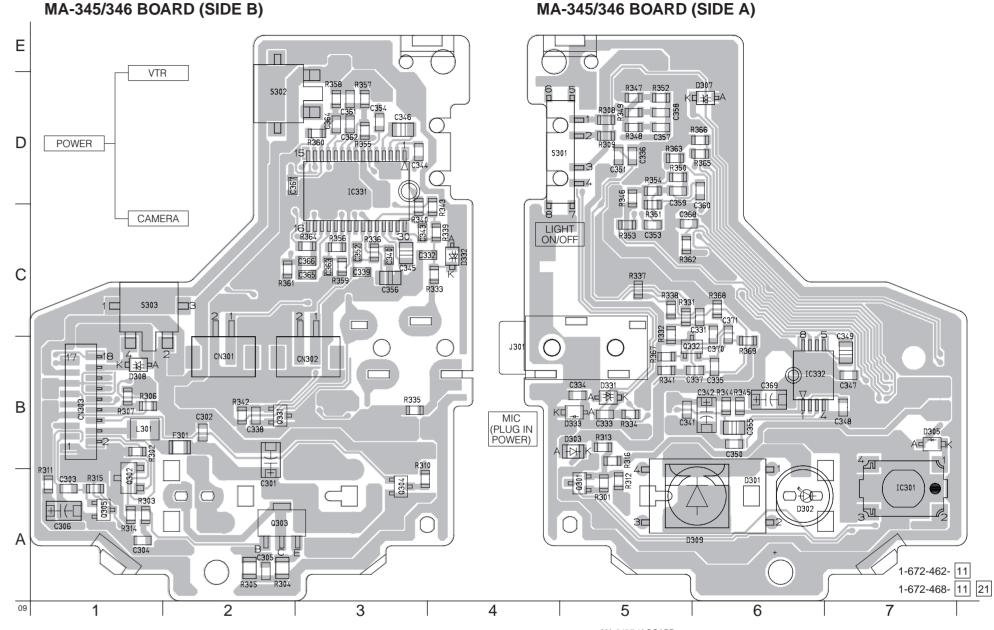


#### • For Printed Wiring Boards.


There are few cases that the part isn't mounted in this model is printed on this diagram.

Chip transistor



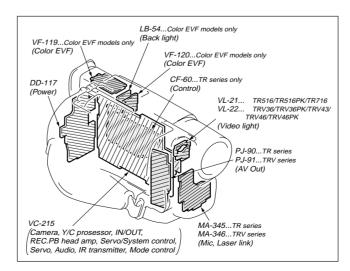



MA-345/	346 BOAF	RD							
C801	E-3	C354	D-3	D331	B-5	R309	D-5	R353	C-5
C301	B-2	C355	B-6	D332	C-4	R310	A-3	R354	D-5
C302	B-2	C356	C-3	D333	B-5	R311	A-1	R355	D-3
C303	A-1	C357	D-5			R312	A-5	R356	C-3
C304	A-1	C358	D-5	F301	B-2	R313	B-5	R357	D-3
C305	A-2	C359	D-5			R314	A-1	R358	D-3
C306	A-1	C360	D-6	IC301	A-7	R315	A-1	R359	C-3
C318	B-7	C361	D-3	IC331	D-3	R316	B-5	R360	D-3
C331	C-6	C362	D-3	IC332	B-6	R331	C-5	R361	C-2
C332	C-4	C363	C-3			R332	C-5	R362	C-5
C333	B-5	C364	D-3	J301	B-4	R333	C-4	R363	D-5
C334	B-5	C365	C-3			R334	B-5	R364	C-3
C335	B-6	C366	C-3	L301	B-1	R335	B-3	R365	D-6
C336	D-5	C367	D-2	0004	۸.	R336	C-3	R366	D-6
C337	B-6	C368	C-5	Q301	A-5	R337	C-5	R367	B-5
C338	B-2	C369	B-6	Q302	A-1	R338	C-5	R368	C-6
C339	C-3	C370	C-6	Q303 Q304	A-2 A-3	R339 R340	C-4 C-3	R369	B-6
C340 C341	C-3 B-5	C371	C-6	Q304 Q305	A-3 A-1	R340	B-5	S301	D-4
C342	B-6	CN301	B-2	Q303 Q331	B-2	R342	B-3 B-2	S301	D-4 D-2
C342	C-3	CN301	B-3	Q332	B-5	R343	C-4	S302	C-1
C344	D-3	CN302	B-3 B-1	Q332	D-3	R344	B-6	3303	0-1
C345	C-3	014303	D-1	R301	A-5	R345	B-6		
C346	D-3	D301	A-6	R302	B-1	R346	D-5		
C347	B-7	D302	A-6	R303	A-1	R347	D-5		
C349	B-7	D303	B-5	R304	A-2	R348	D-5		
C350	B-6	D305	B-7	R305	A-2	R349	D-5		
C351	D-5	D307	D-6	R306	B-1	R350	D-5		
C352	C-3	D308	B-1	R307	B-1	R351	C-5		
C353	C-5	D309	A-6	R308	D-5	R352	D-5	I	

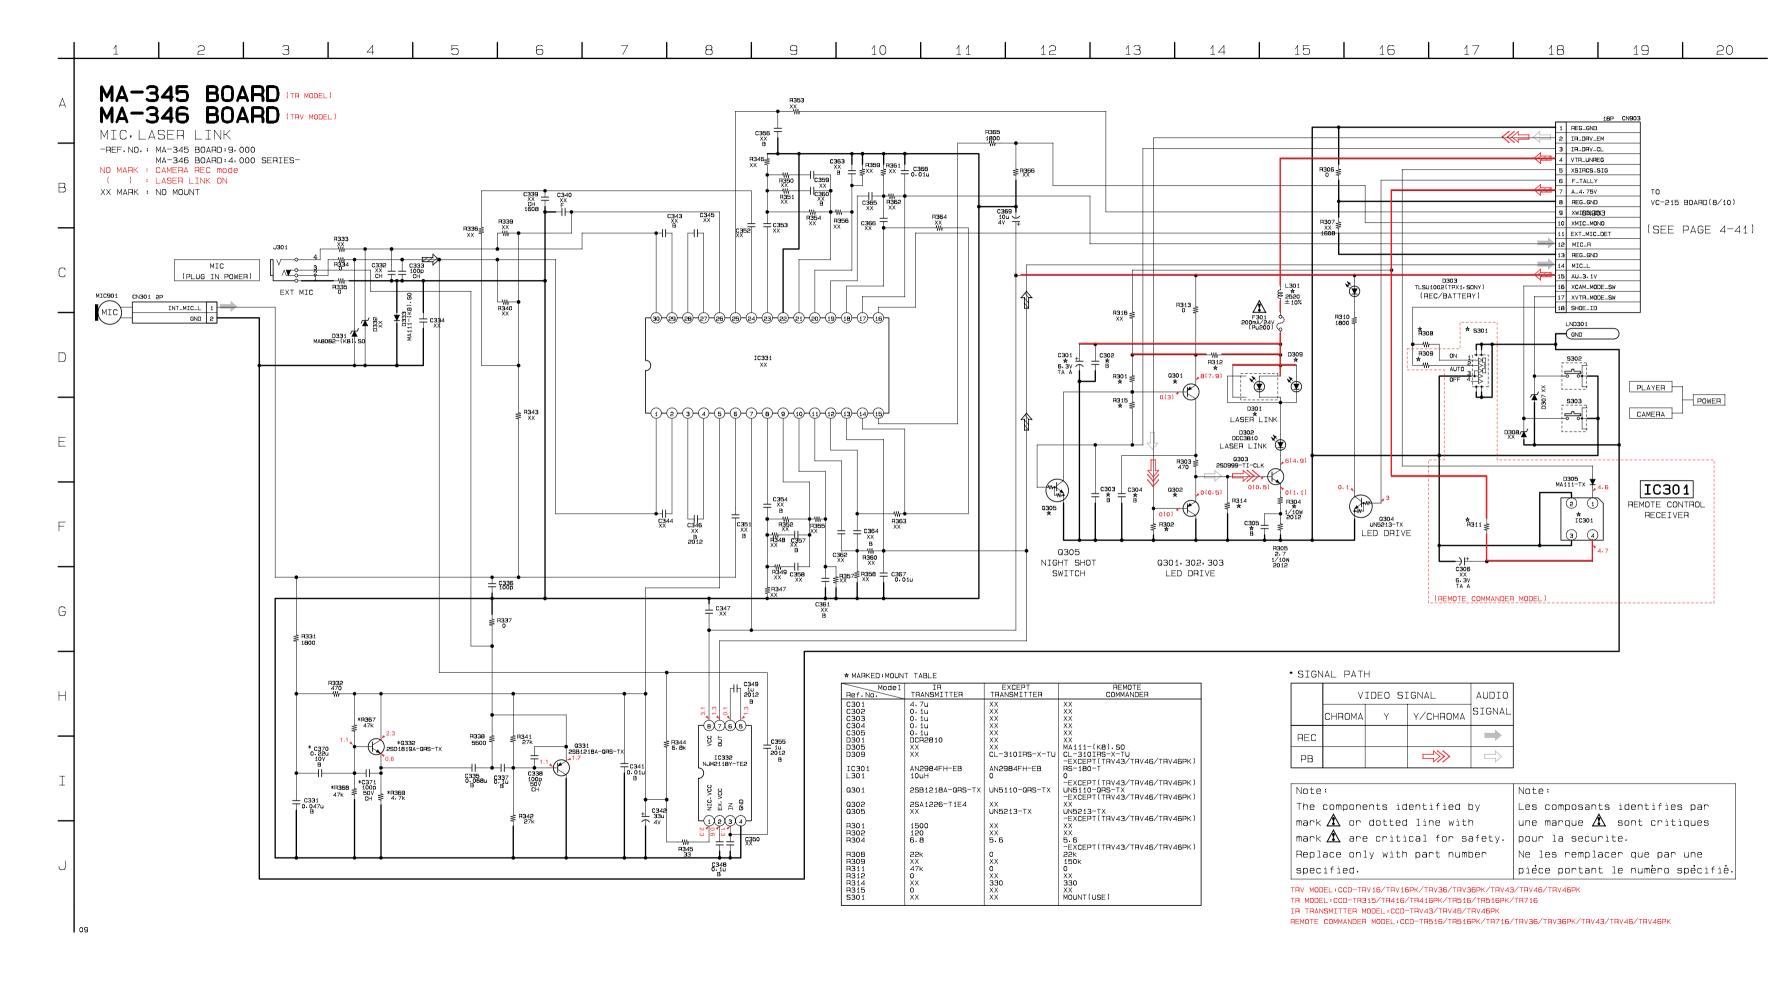

#### CF-60 (CONTROL (TR Series)) PRINTED WIRING BOARD

- Ref No. CF-60 BOARD: 4,000 series -

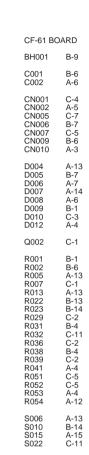

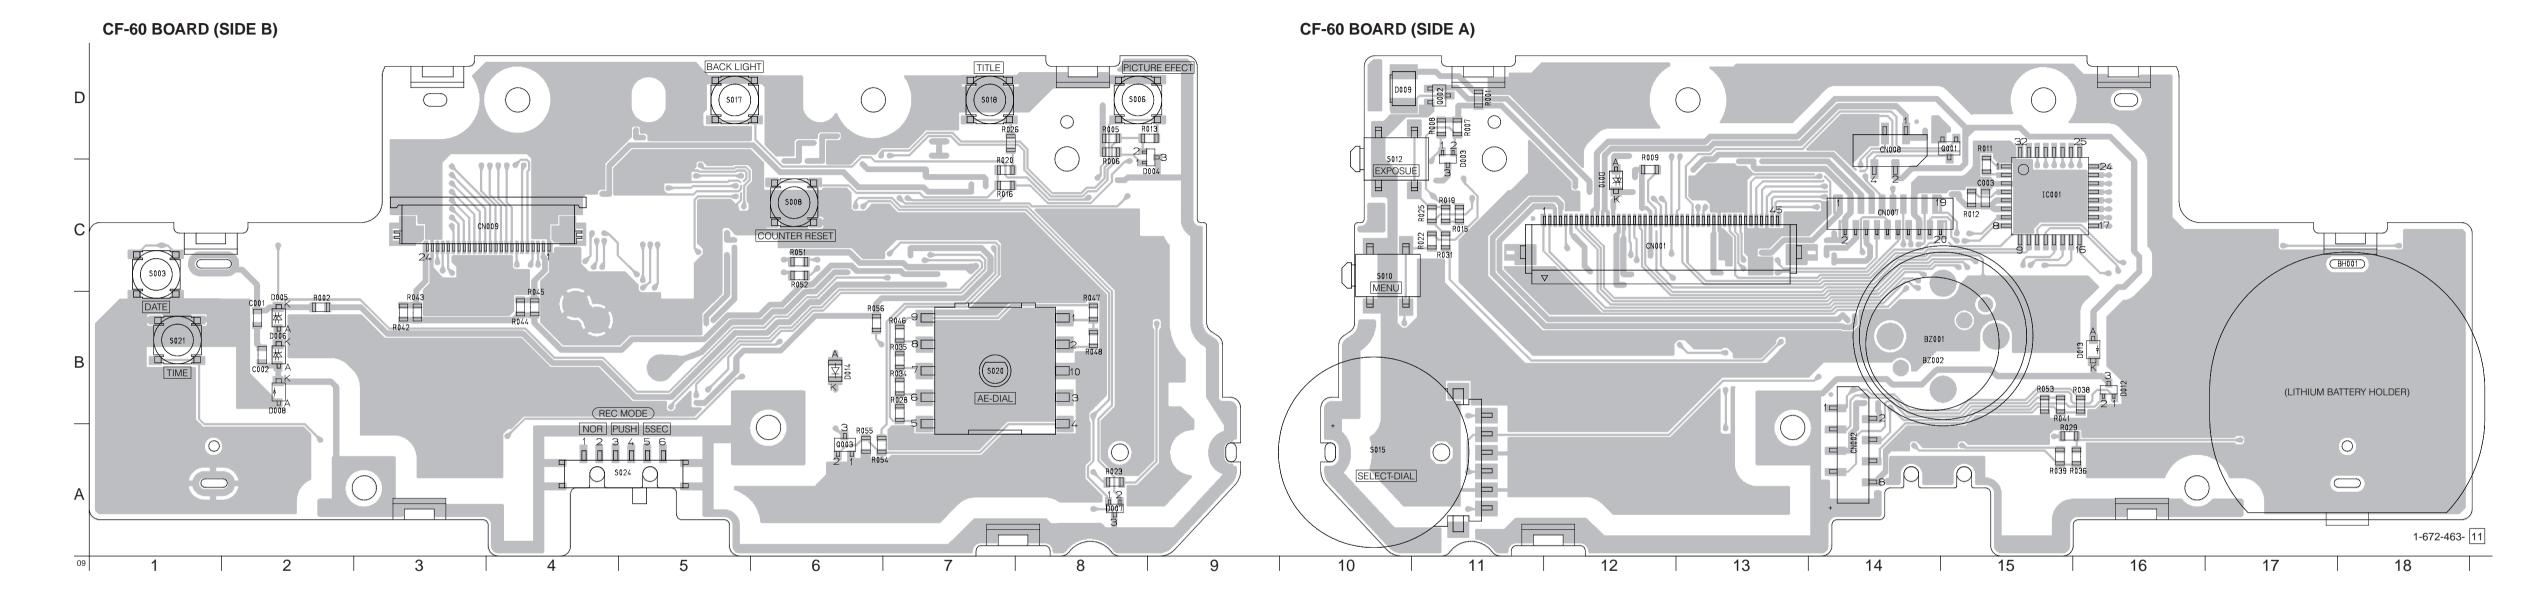

#### • For Printed Wiring Boards.

There are few cases that the part isn't mounted in this model is printed on this diagram.

Chip diode

2 1


Chip transistor


LB-54...Color EVF models only VC-215

(Camera, Y/C prosessor, IN/OUT,
REC.PB head amp, Servo/System control,
Servo, Audio, IR transmitter, Mode control)

(Mic, Laser link)


4-65 4-67

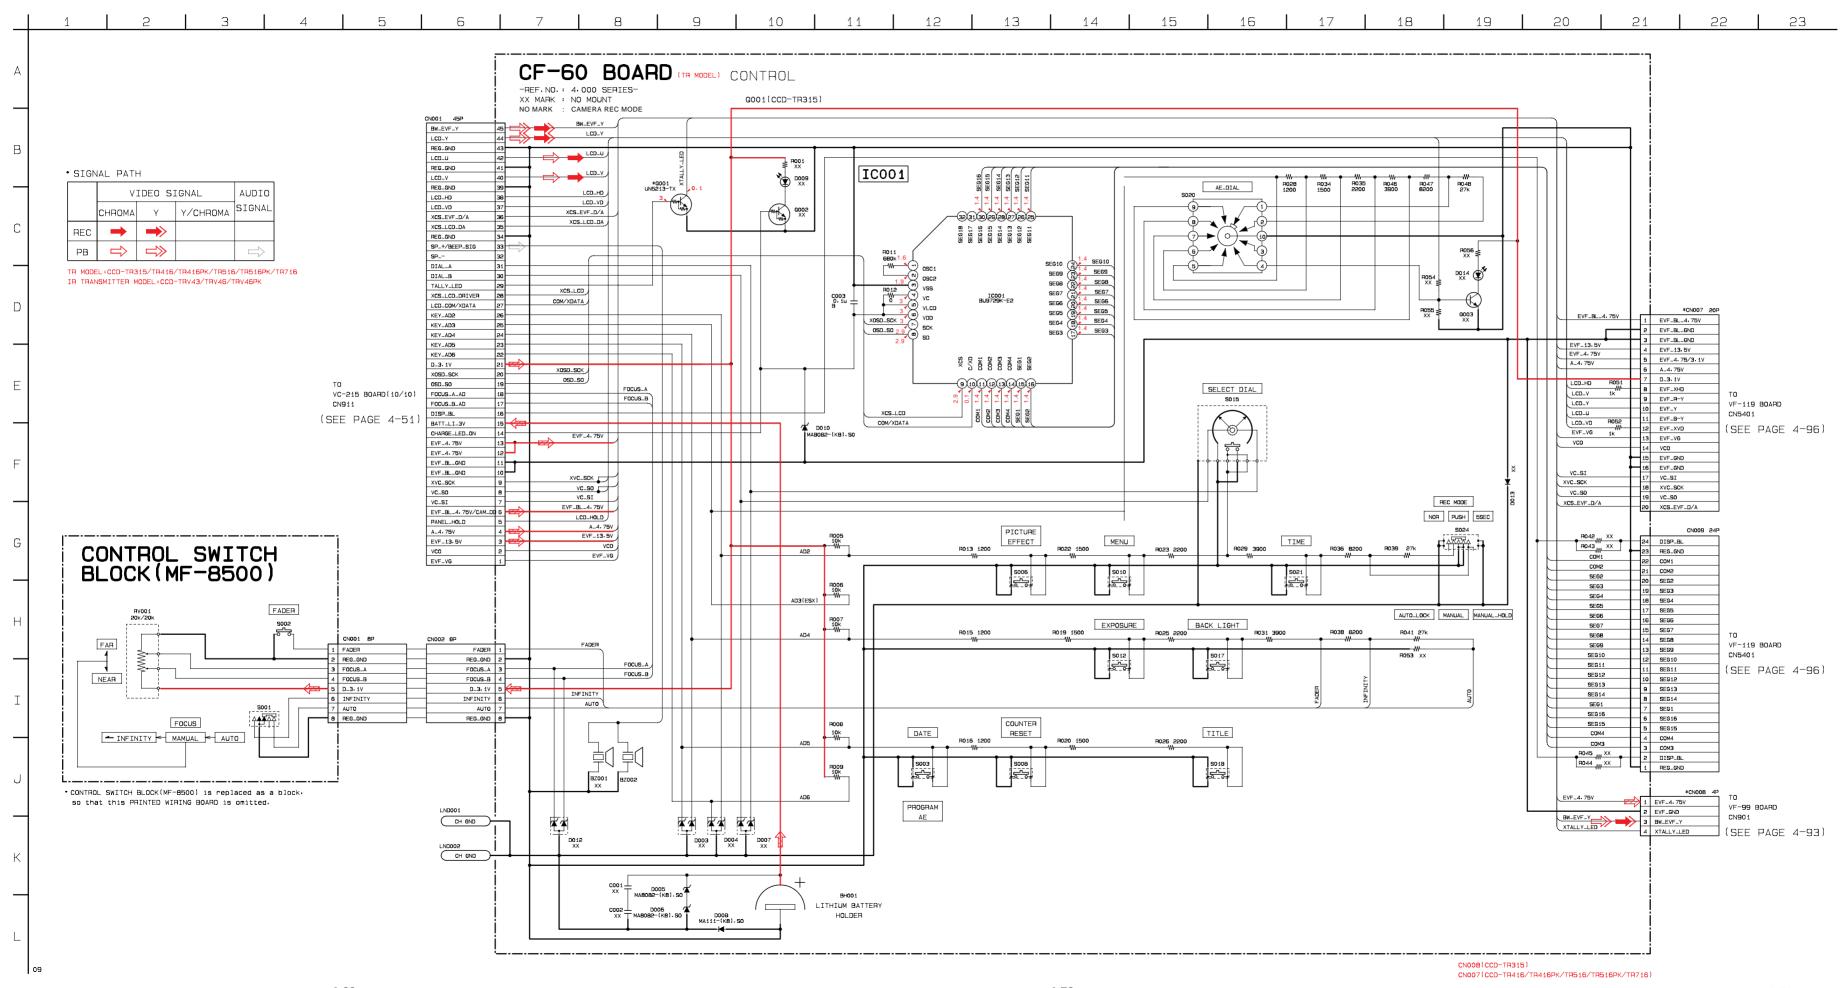


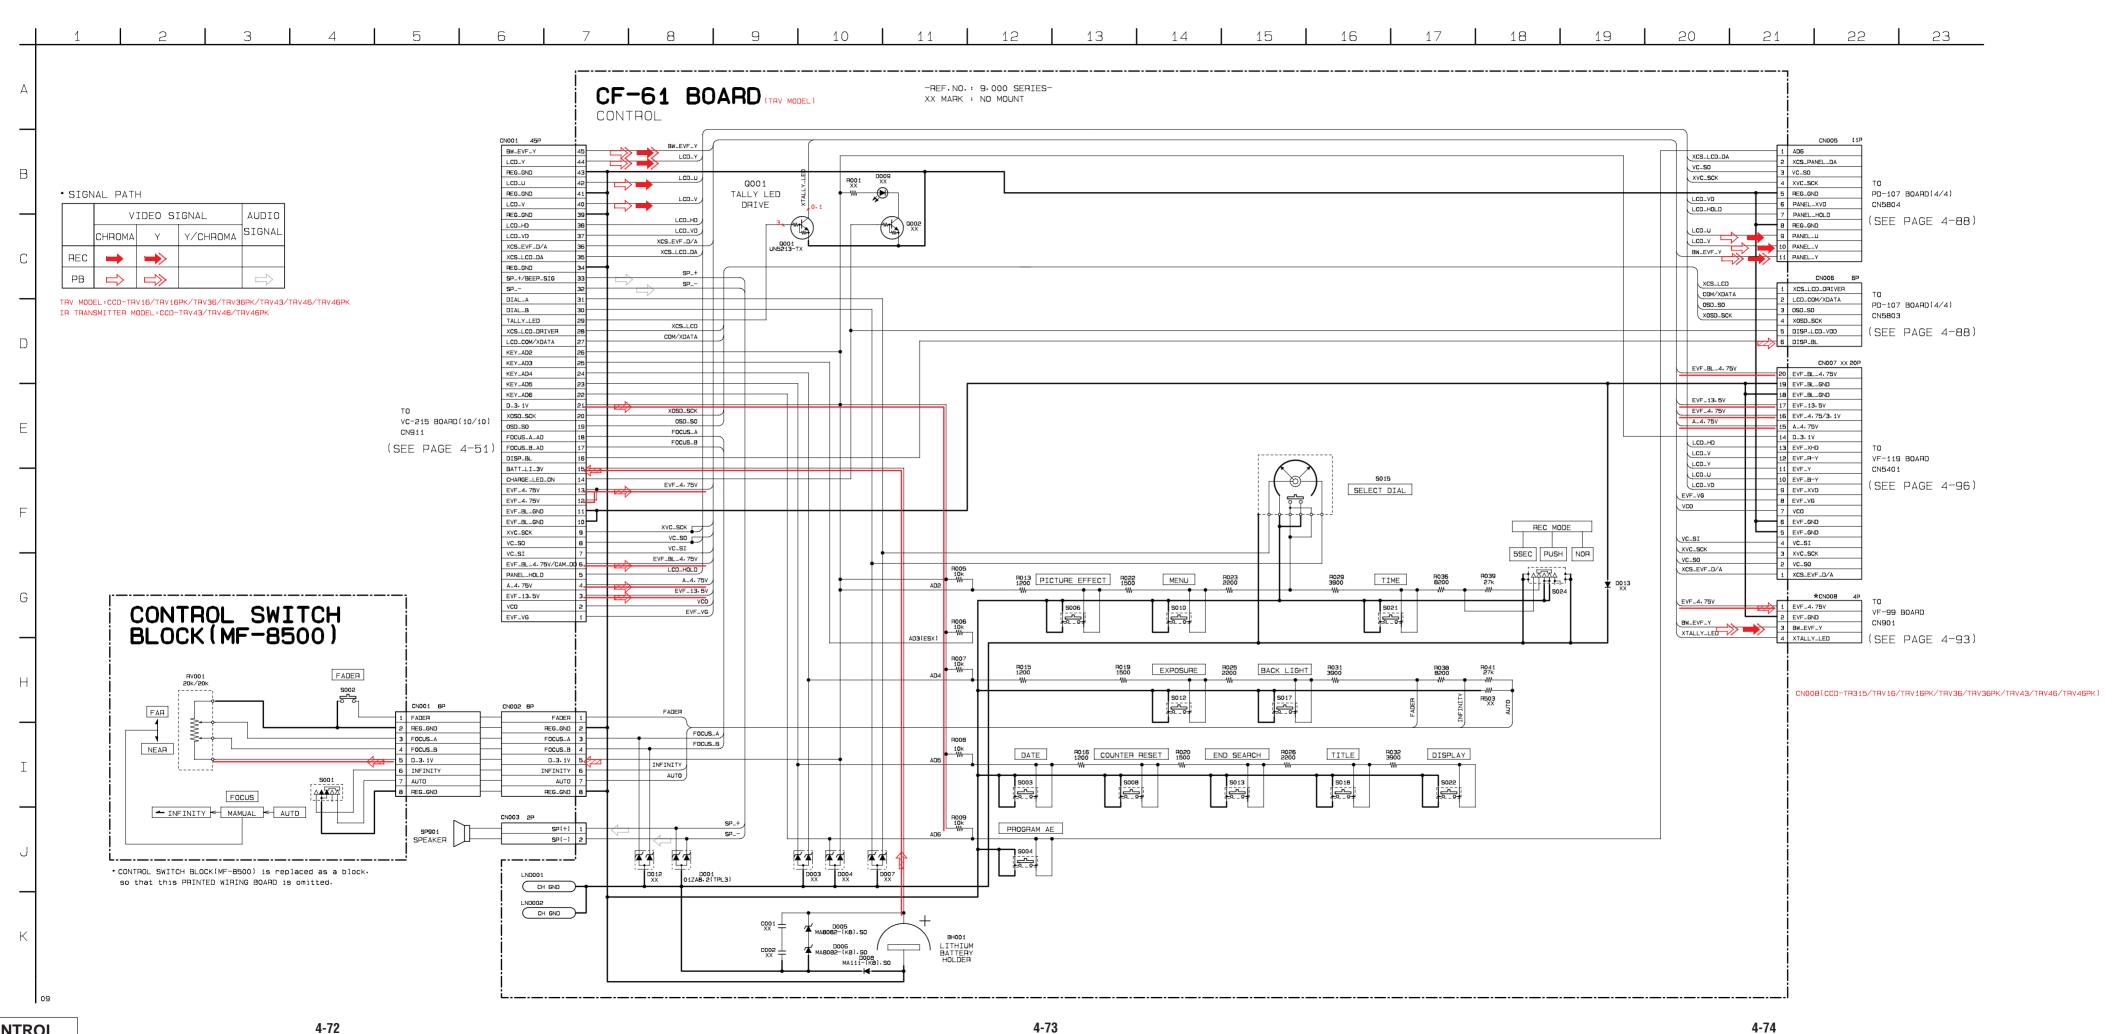

#### CF-61 (CONTROL (TRV Series) PRINTED WIRING BOARD

– Ref No. CF-61 BOARD: 9,000 series –

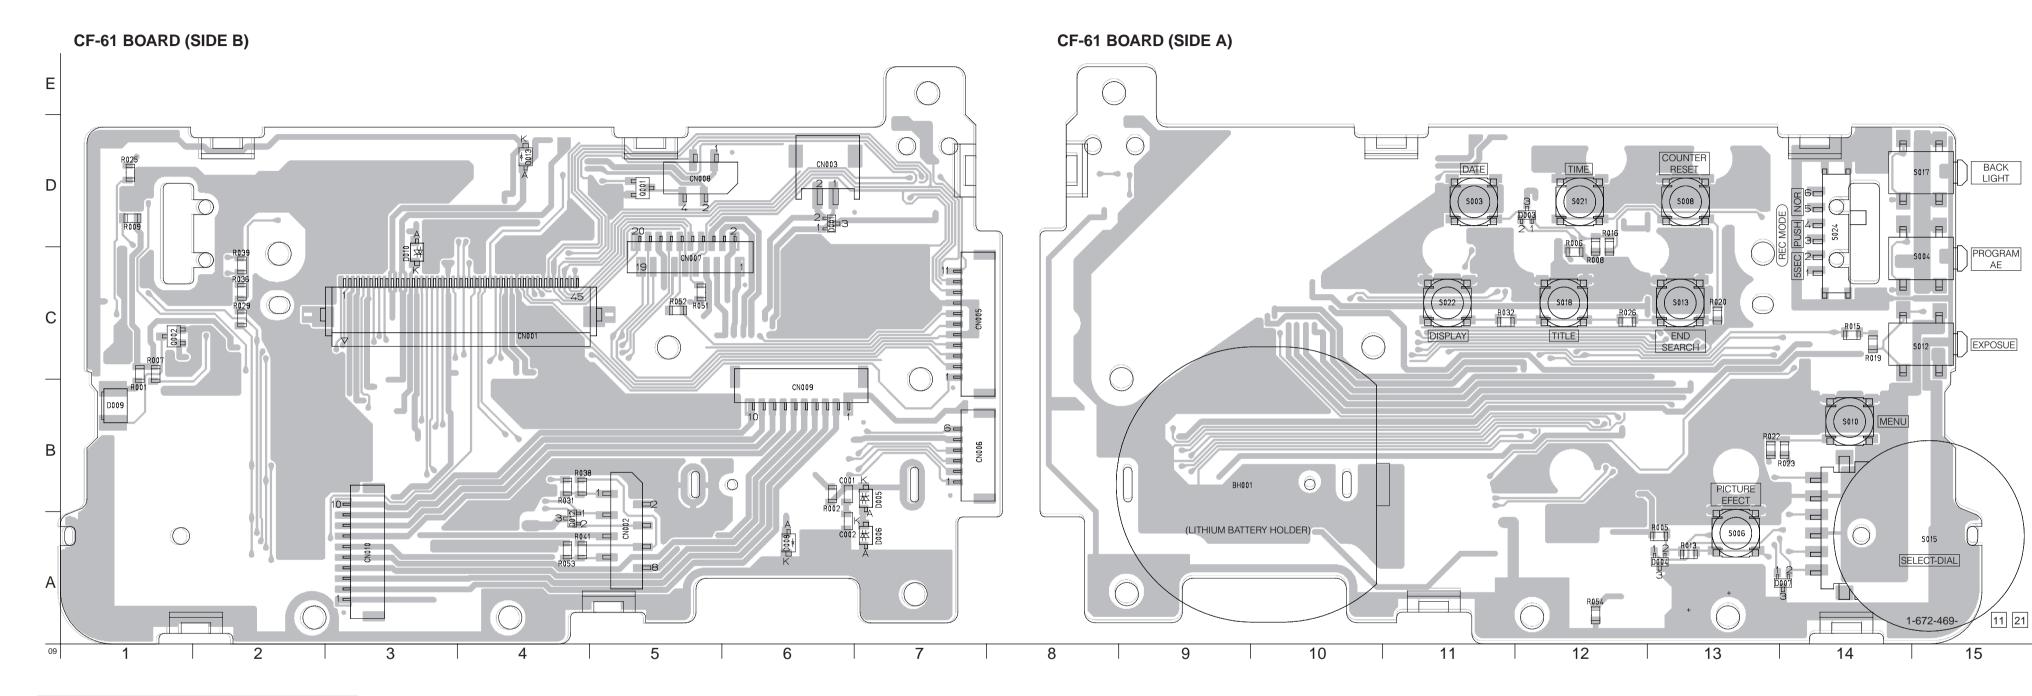

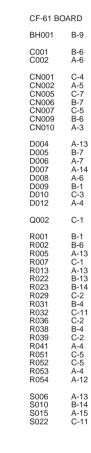

#### For Printed Wiring Boards.


There are few cases that the part isn't mounted in this model is printed on this diagram.


Chip diode

Chip transistor






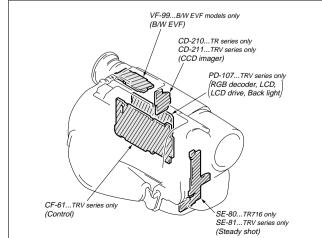


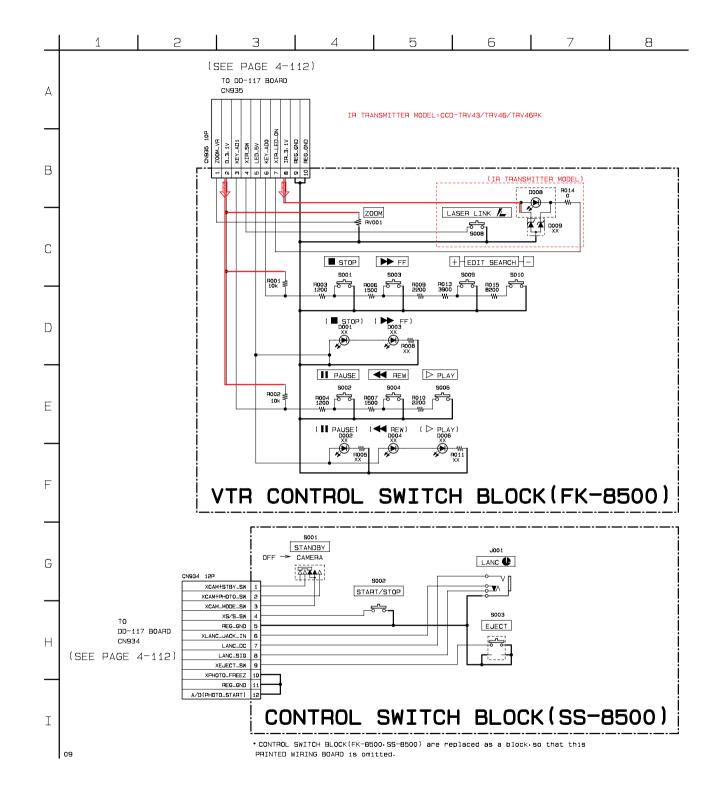


#### PD-107 (RGB DECODER, LCD DRIVE, BACK LIGHT, LCD (TRV Series)) PRINTED WIRING BOARD - Ref No. PD-107 BOARD: 10,000 series -


PD-107 BOARD R5608 R5610 R5612 R5613 R5615 R5616 R5617 R5621 R5622 R5622 R5623 R5624 R5625 R5626 R5627 R5628 R5627 R5630 R5631 R5640 R5641 R5643 R5644 R5646 R5647 R5648 R5652 R5630 R5641 R5641 R5646 R5641 R5647 R5648 R5647 R5648 R5647 R5648 R5657 R5660 R5660 R5660 R5661 R5660 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5661 R5660 R5661 R5660 R5661 R5660 R5661 R5661 R5660 R5661 R5660 R5661 R5662 R5661 R5662 R5662 R5663 R5663 R5663 R5663 R5664 R5663 R5664 R5665 R5666 R5695 R5695 R5697 R5698 R5701 R5702 R5703 R5704 R5705 R5707 R5708 R5707 R5708 R5800 R5501 R5502 R5503 R5504 R5505 R5506 R5507 R5508 R5509 R5511 R5512 R5513 R5516 R5517 R5518 R5519 R5521 R5522 R5521 R5522 R5521 R5522 R5521 R5522 R5521 R5522 R5532 D5601 D5603 D5604 D5605 D5701 D5702 D5703 D5704

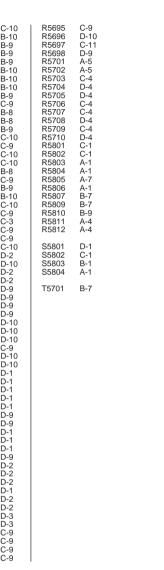

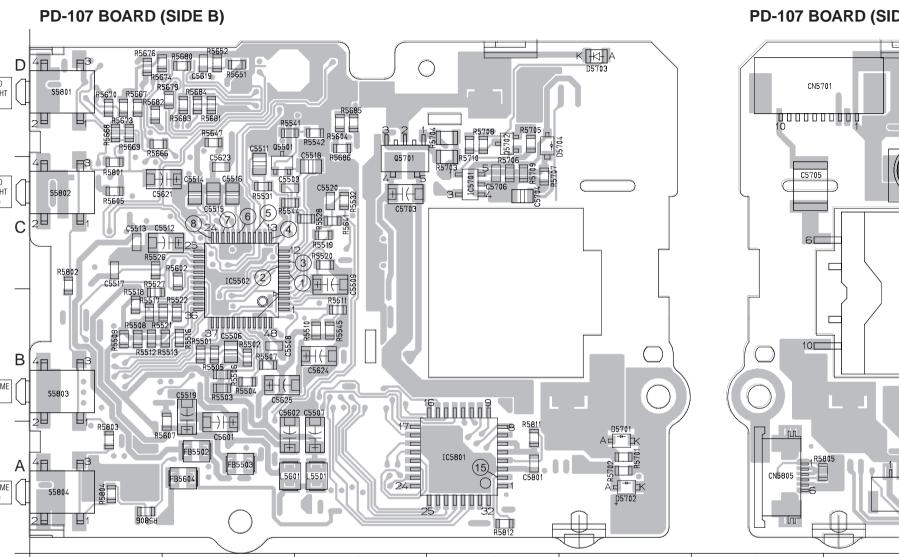



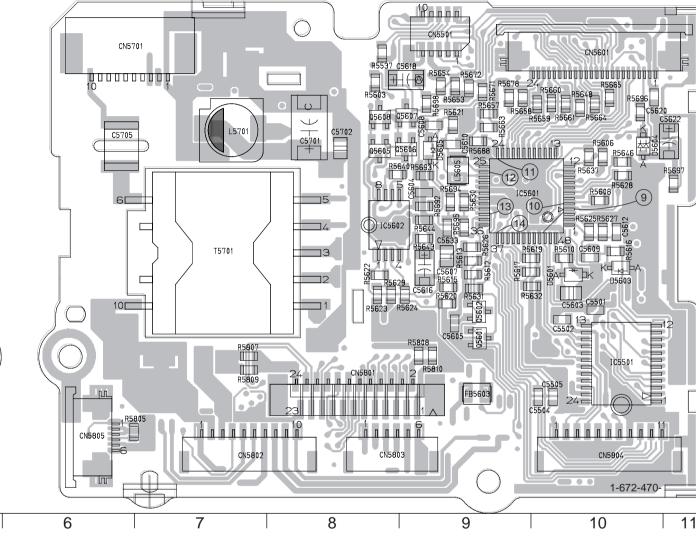

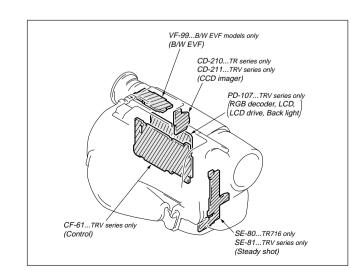


- For Printed Wiring Boards.
- This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.


There are few cases that the part isn't mounted in this model is printed on this diagram.


• Chip transistor




CONTROL SWITCH BLOCK, RGB DECODER, LCD DRIVE, BACK LIGHT, LCD

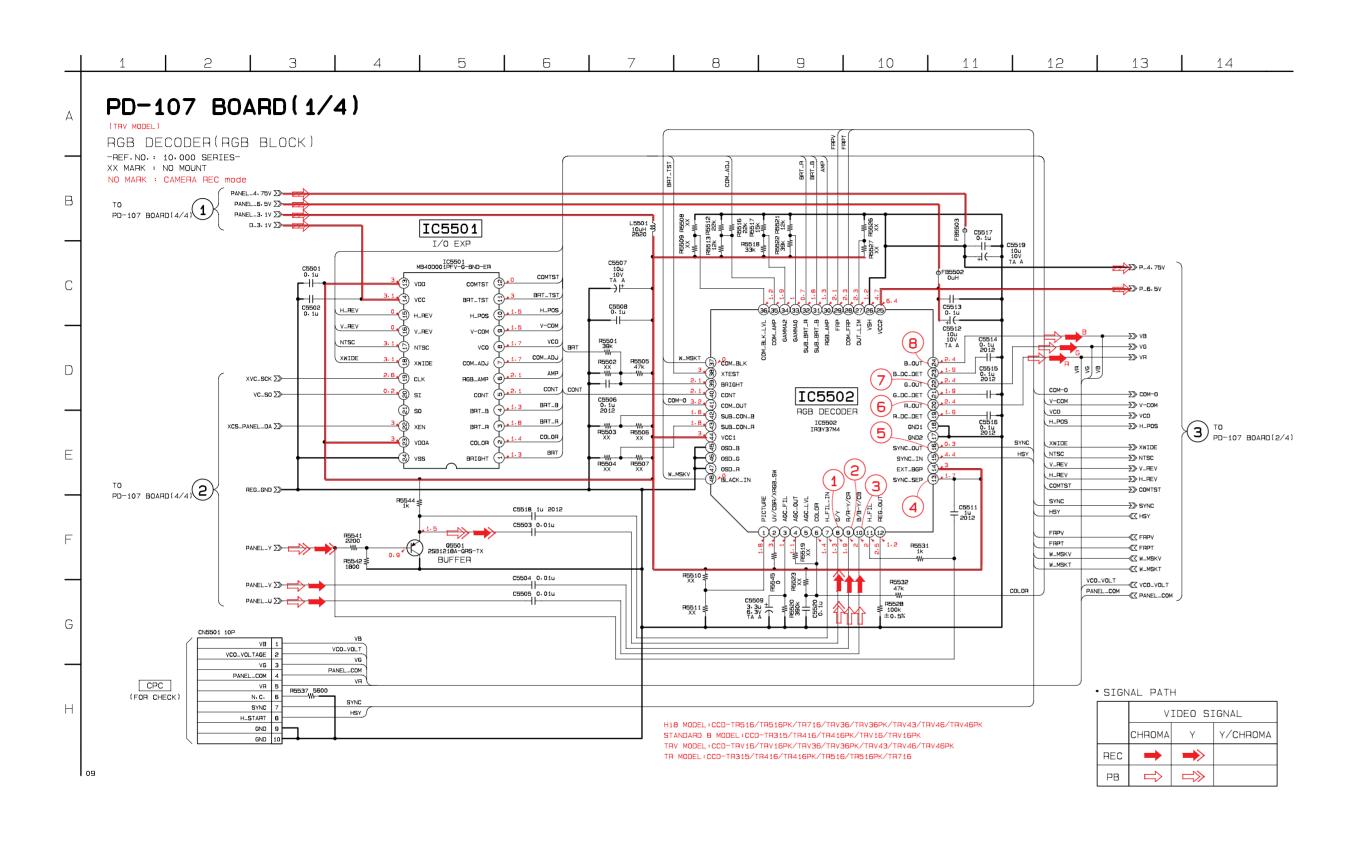

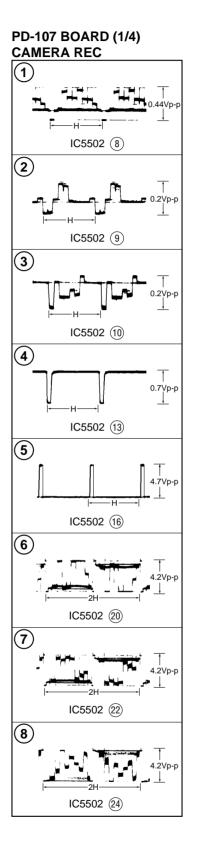


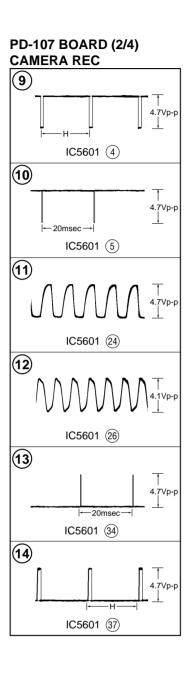


- For schematic diagrams.
- Refer to page 4-79 for Printed Wiring Board.

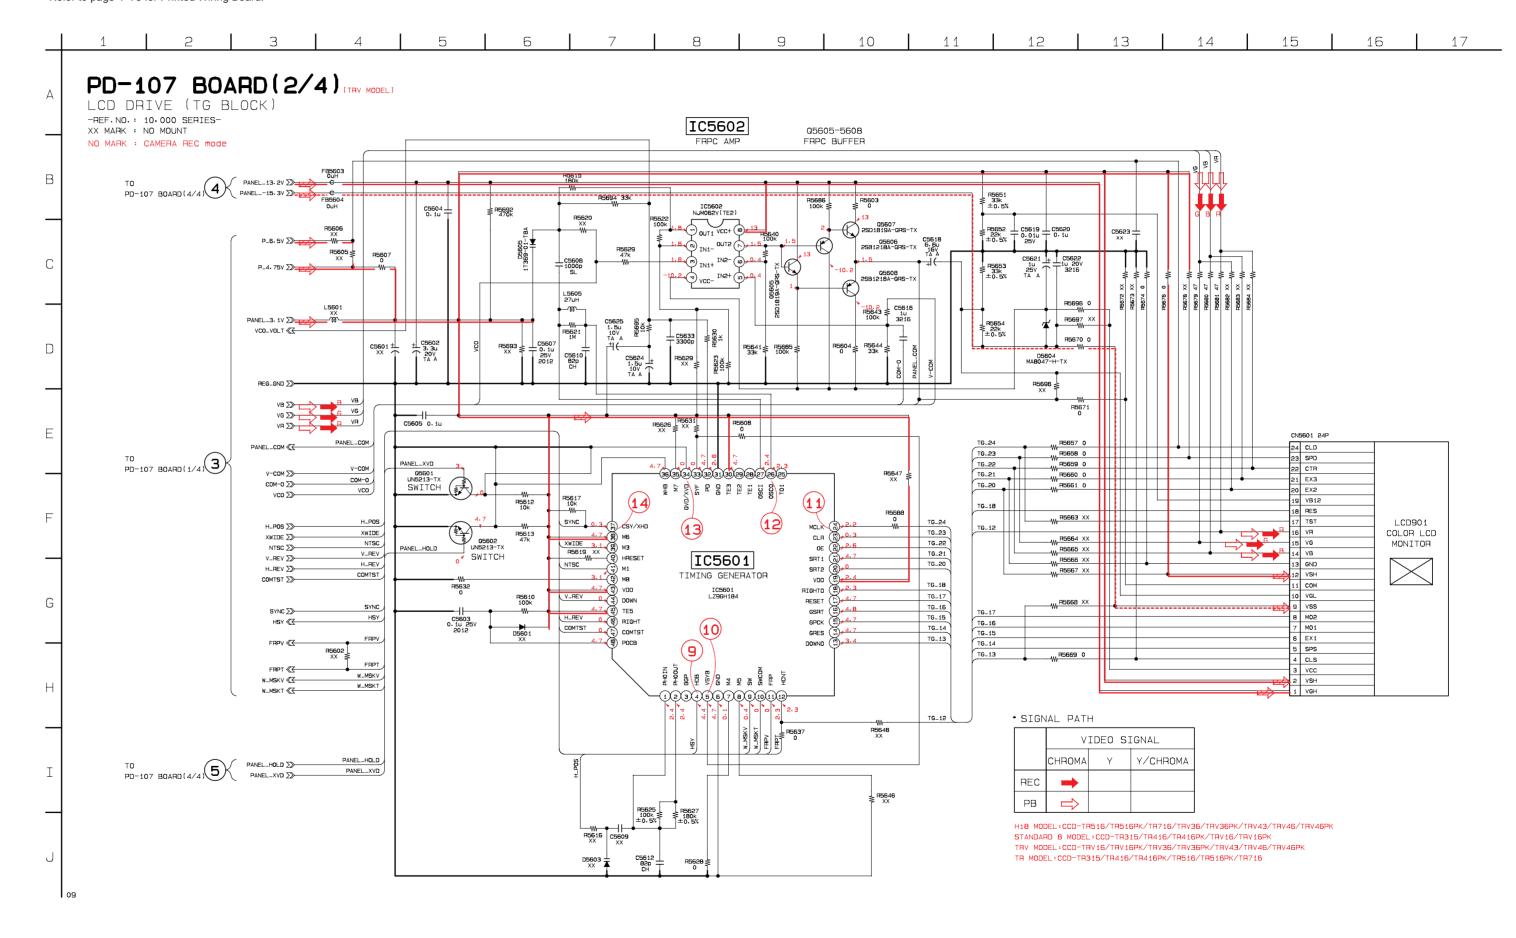

- For schematic diagrams.
- Refer to page 4–79 for Printed Wiring Board.

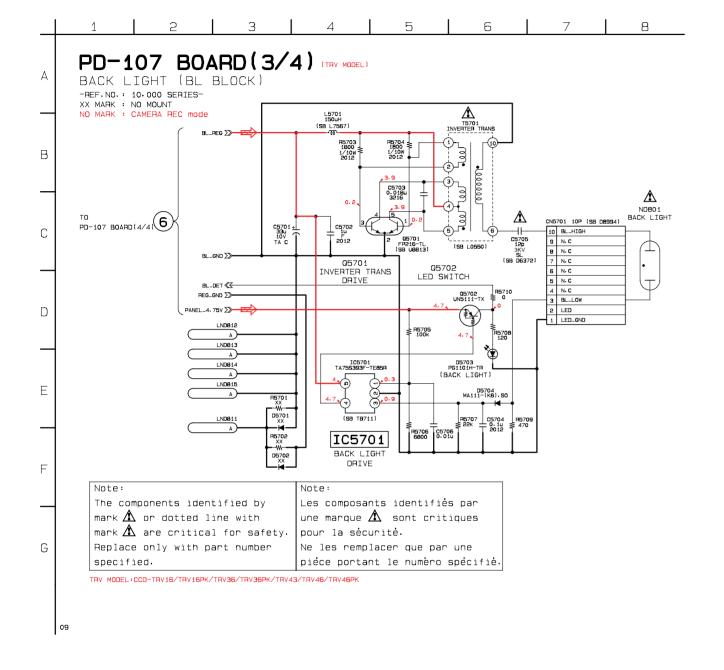


- For schematic diagrams.
- Refer to page 4-79 for Printed Wiring Board.

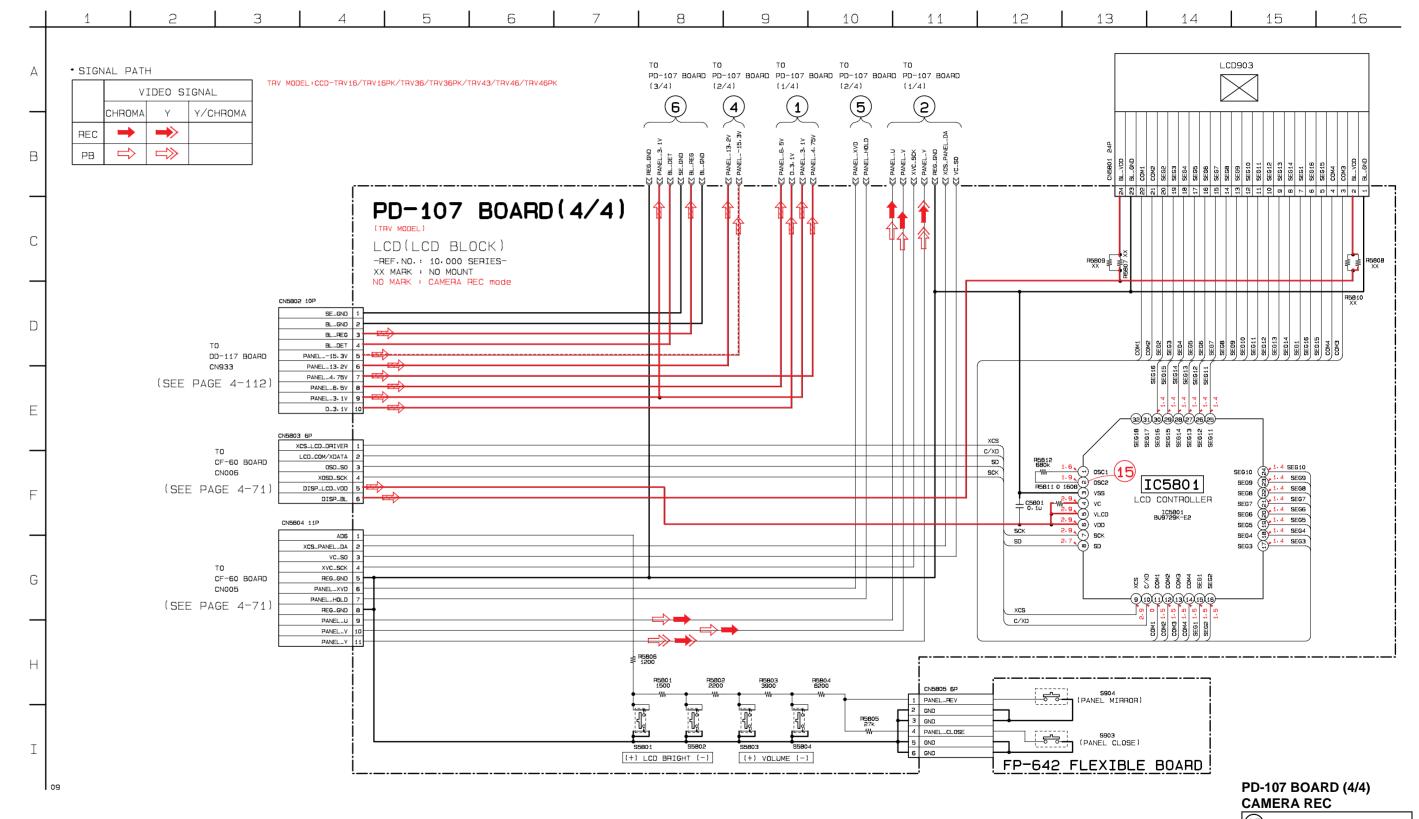

## CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

#### VF-99 (B/W EVF) PRINTED WIRING BOARD

- Ref No. VF-99 BOARD: 10,000 series -

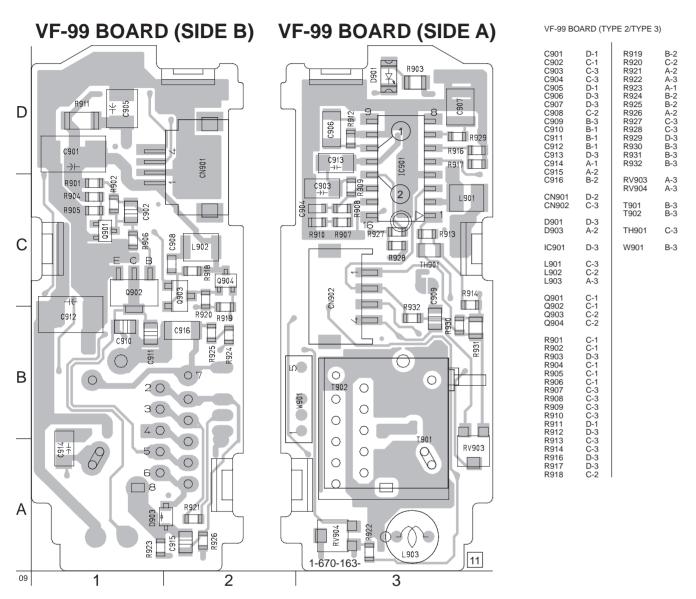


## For Printed Wiring Boards.


• This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

• Chip transistor




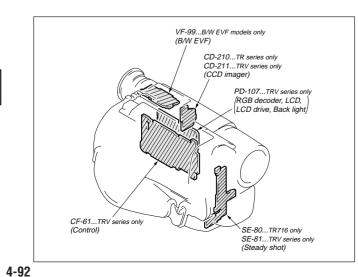

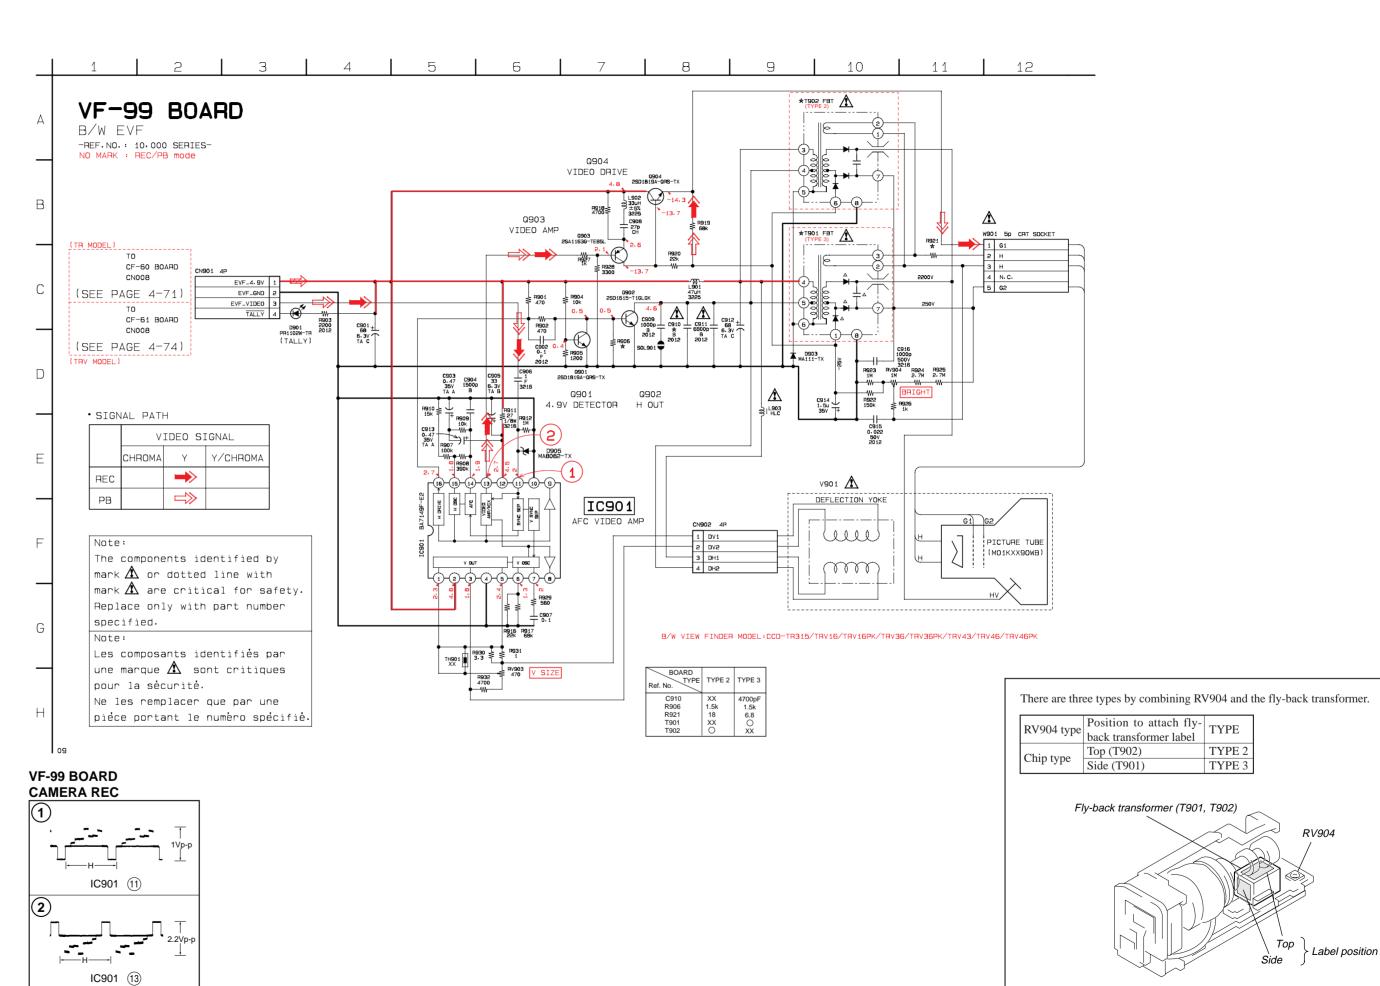

## VF-119 (COLOR EVF (COLOR EVF MODEL)) PRINTED WIRING BOARD

- Ref No. VF-119 BOARD: 10,000 series -

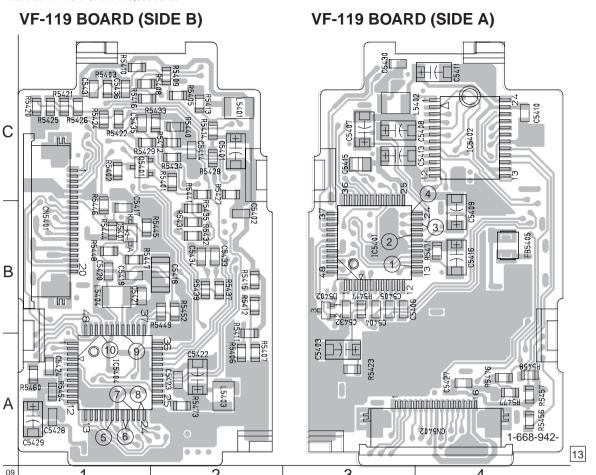


## • For Printed Wiring Boards.

• This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

#### Chip transistor




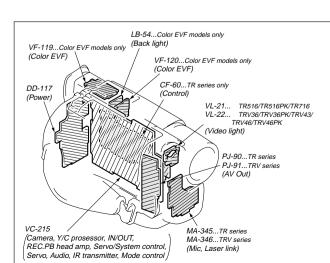



C5401 C5402 C5403 C5405 C5406 C5407 C5408 C5409 C5410 C5411 C5411 C5415 C5415 C5416 C5417 C5418 C5419 C5420 C5420 C5420 C5420 C5420 C5423 C5424 C5426 C5426 C5427 C5427 C5428 C5428 C5428 C5433 R5401
R5402
R5403
R5405
R5406
R5407
R5408
R5407
R5408
R5410
R5411
R5412
R5413
R5414
R5415
R5416
R5417
R5420
R5421
R5422
R5423
R5424
R5426
R5427
R5428
R5426
R5427
R5428
R5426
R5427
R5428
R5426
R5427
R5428
R5427
R5428
R5428
R5429
R5431
R5432
R5434
R5436
R5447
R5446
R5447
R5446
R5447
R5446
R5447
R5446
R5447
R5446
R5447
R5448
R5446
R5447
R5446
R5447 CN5401 B-1 CN5402 A-4 FB5405 B-4 IC5401 IC5402 IC5404

Q5401 C-1


VF-119 BOARD

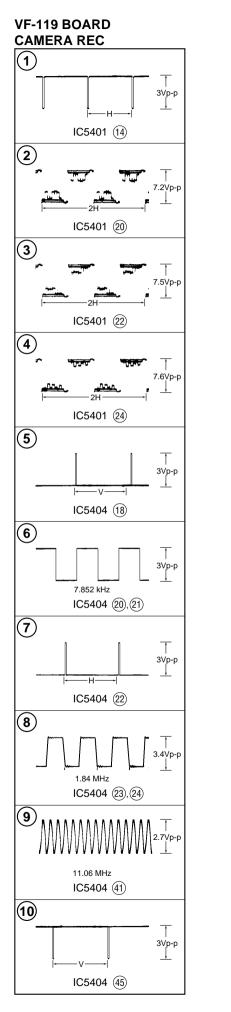

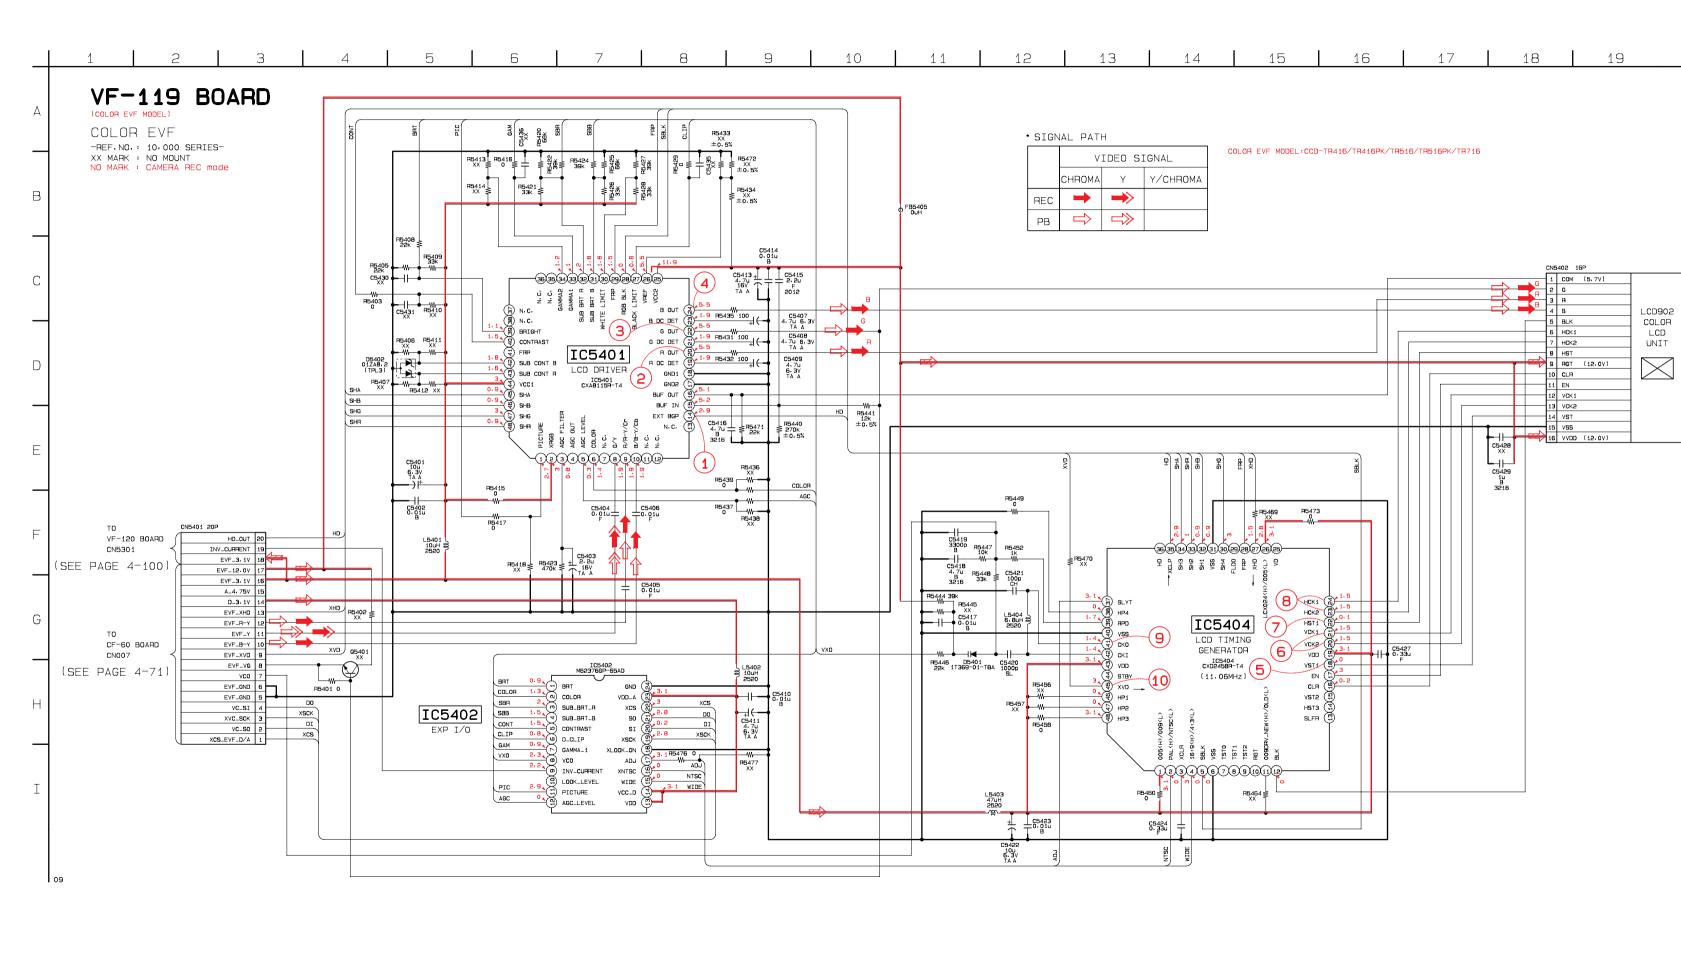

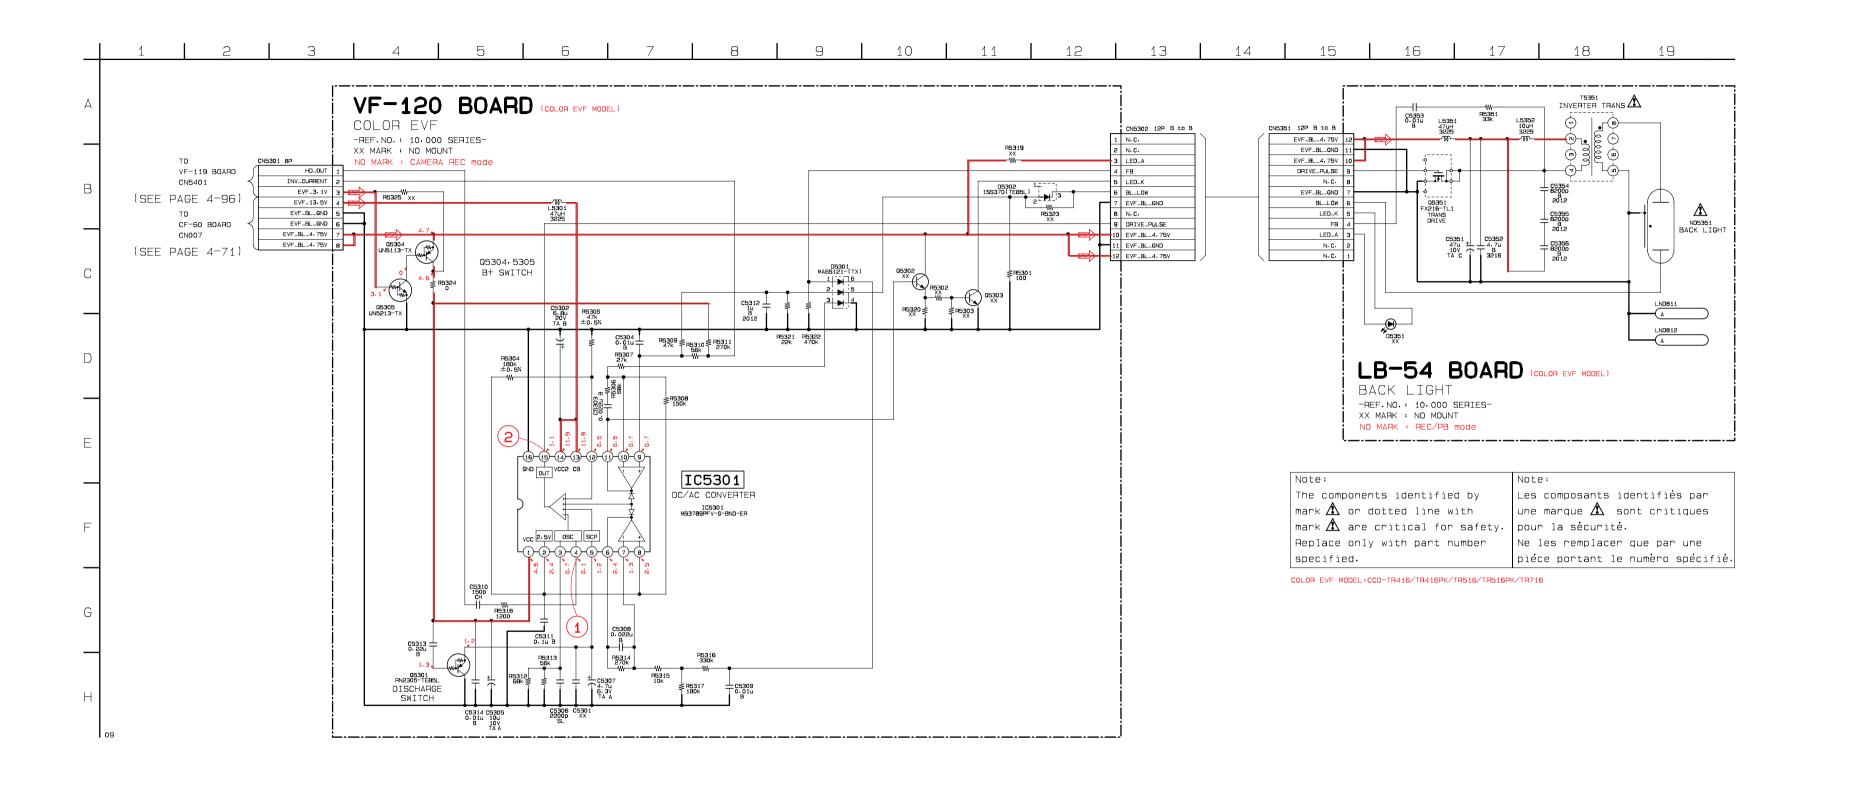


4-101

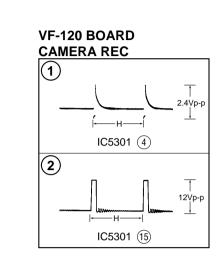

## VF-120 (COLOR EVF), LB-54 (BACK LIGHT) (COLOR EVF MODEL) PRINTED WIRING BOARDS

- Ref No. VF-120 BOARD: 10,000 series, LB-54 BOARD: 10,000 series -

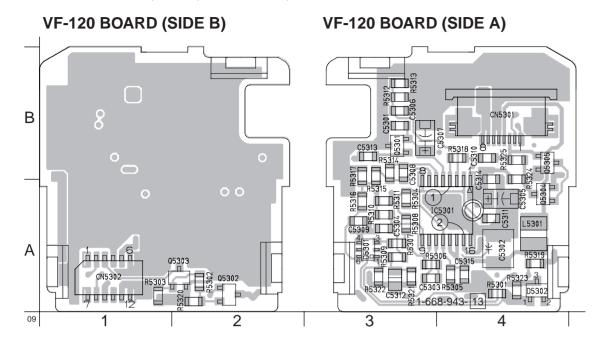

## • For Printed Wiring Boards.


• This board is four-layer print board. However, the patterns of layers 2 to 3 have not been included in the diagram.

There are few cases that the part isn't mounted in this model is printed on this diagram.

•	Chip	di

3	
A	
шш	
2 1	




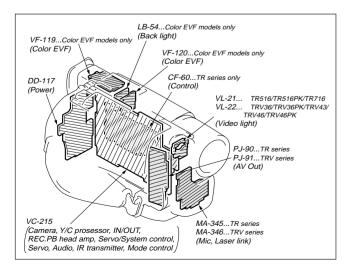



VF-120 B	OARD		
C5301 C5302 C5303 C5304 C5305 C5306 C5307 C5308 C5309 C5310 C5311 C5311 C5312 C5313 C5314	B-3 A-4 A-3 A-4 B-3 B-3 B-3 A-4 A-4 A-3 B-3 A-4 A-4	R5301 R5302 R5303 R5304 R5305 R5306 R5307 R5308 R5309 R5310 R5311 R5311 R5313 R5314 R5314 R5315	A-4 A-2 A-1 A-3 A-3 A-3 A-3 A-3 B-3 B-3 A-3
CN5301 CN5302	B-4 A-1	R5317 R5318 R5319	B-3 B-4 A-4
D5301 D5302	A-3 A-4	R5320 R5321 R5322	A-2 A-3 A-3
IC5301	A-4	R5323 R5324	A-4 A-4
L5301	A-4	R5325	B-4
Q5301 Q5302 Q5303 Q5304 Q5305	B-3 A-2 A-2 A-4 B-4		


LB-54 BOARD (SIDE B)	LB-54 BOARD (SIDE A)
В	05951
ND5351	C5356 C5355 C5356 C536 C53
A 1 2	1-668-944- 13
09 1 2	3 CN5351 CN5351 12 U U U U U U U U U U U U U U U U U U

LB-54 BO	ARD
C5351 C5352 C5353 C5354 C5355 C5356	A-3 B-3
CN5351	A-4
D5351	A-1
L5351 L5352	A-3 A-3
ND5351	B-1
Q5351	B-3
R5351	A-3
T5351	B-4

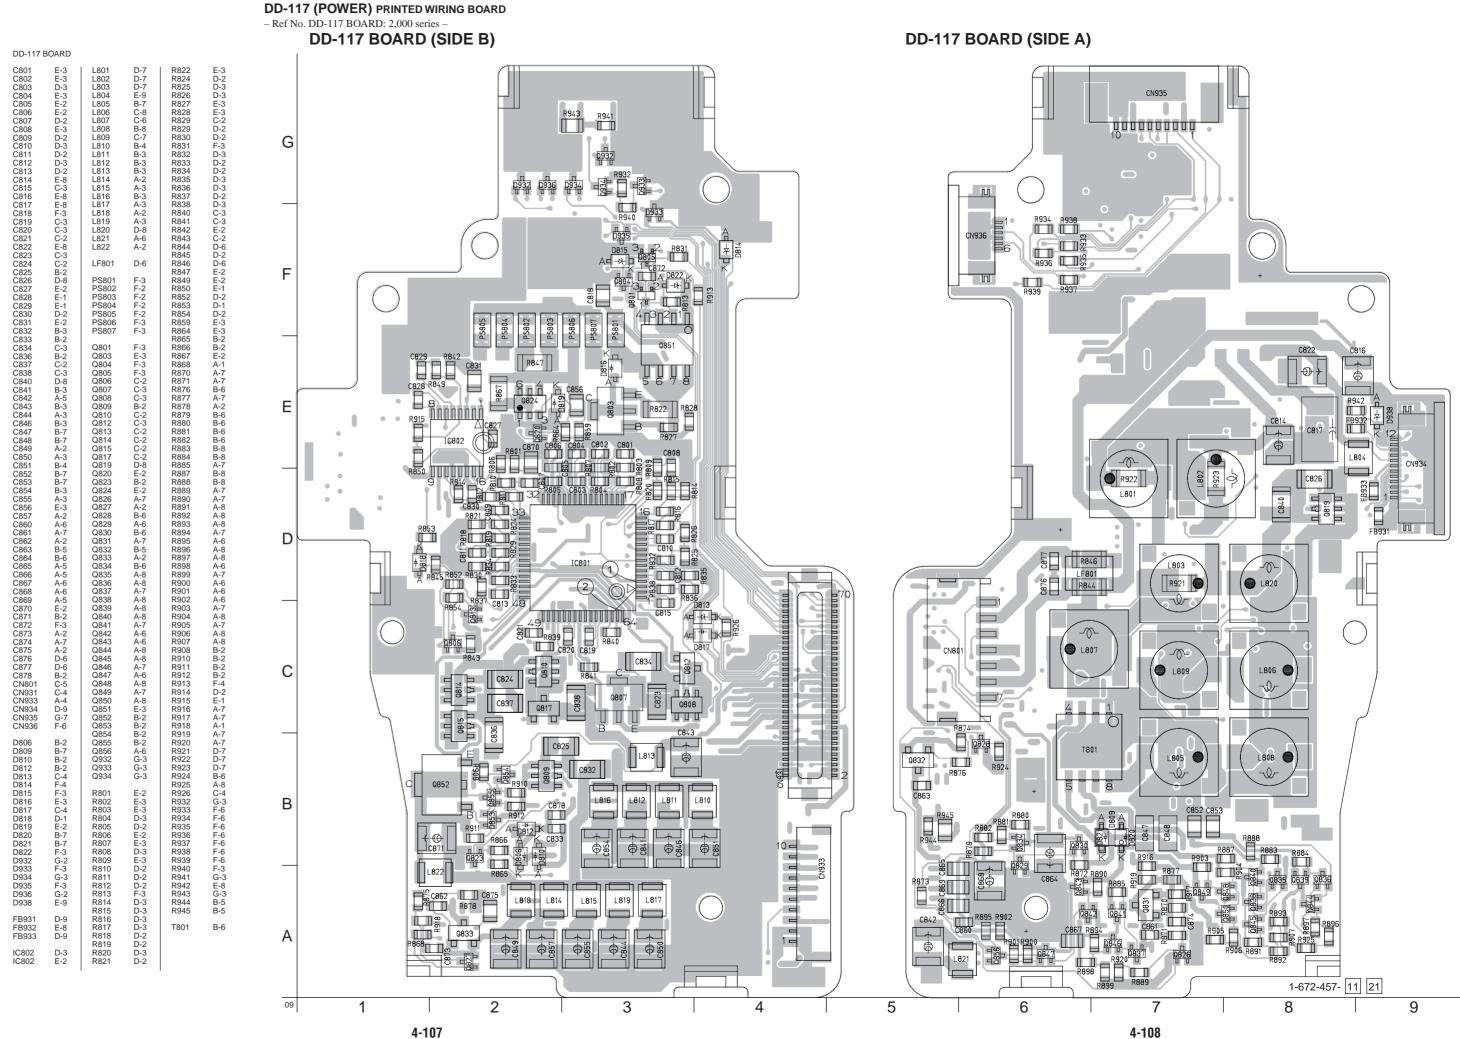

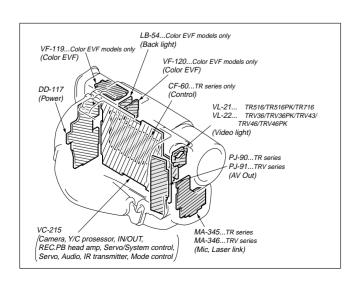

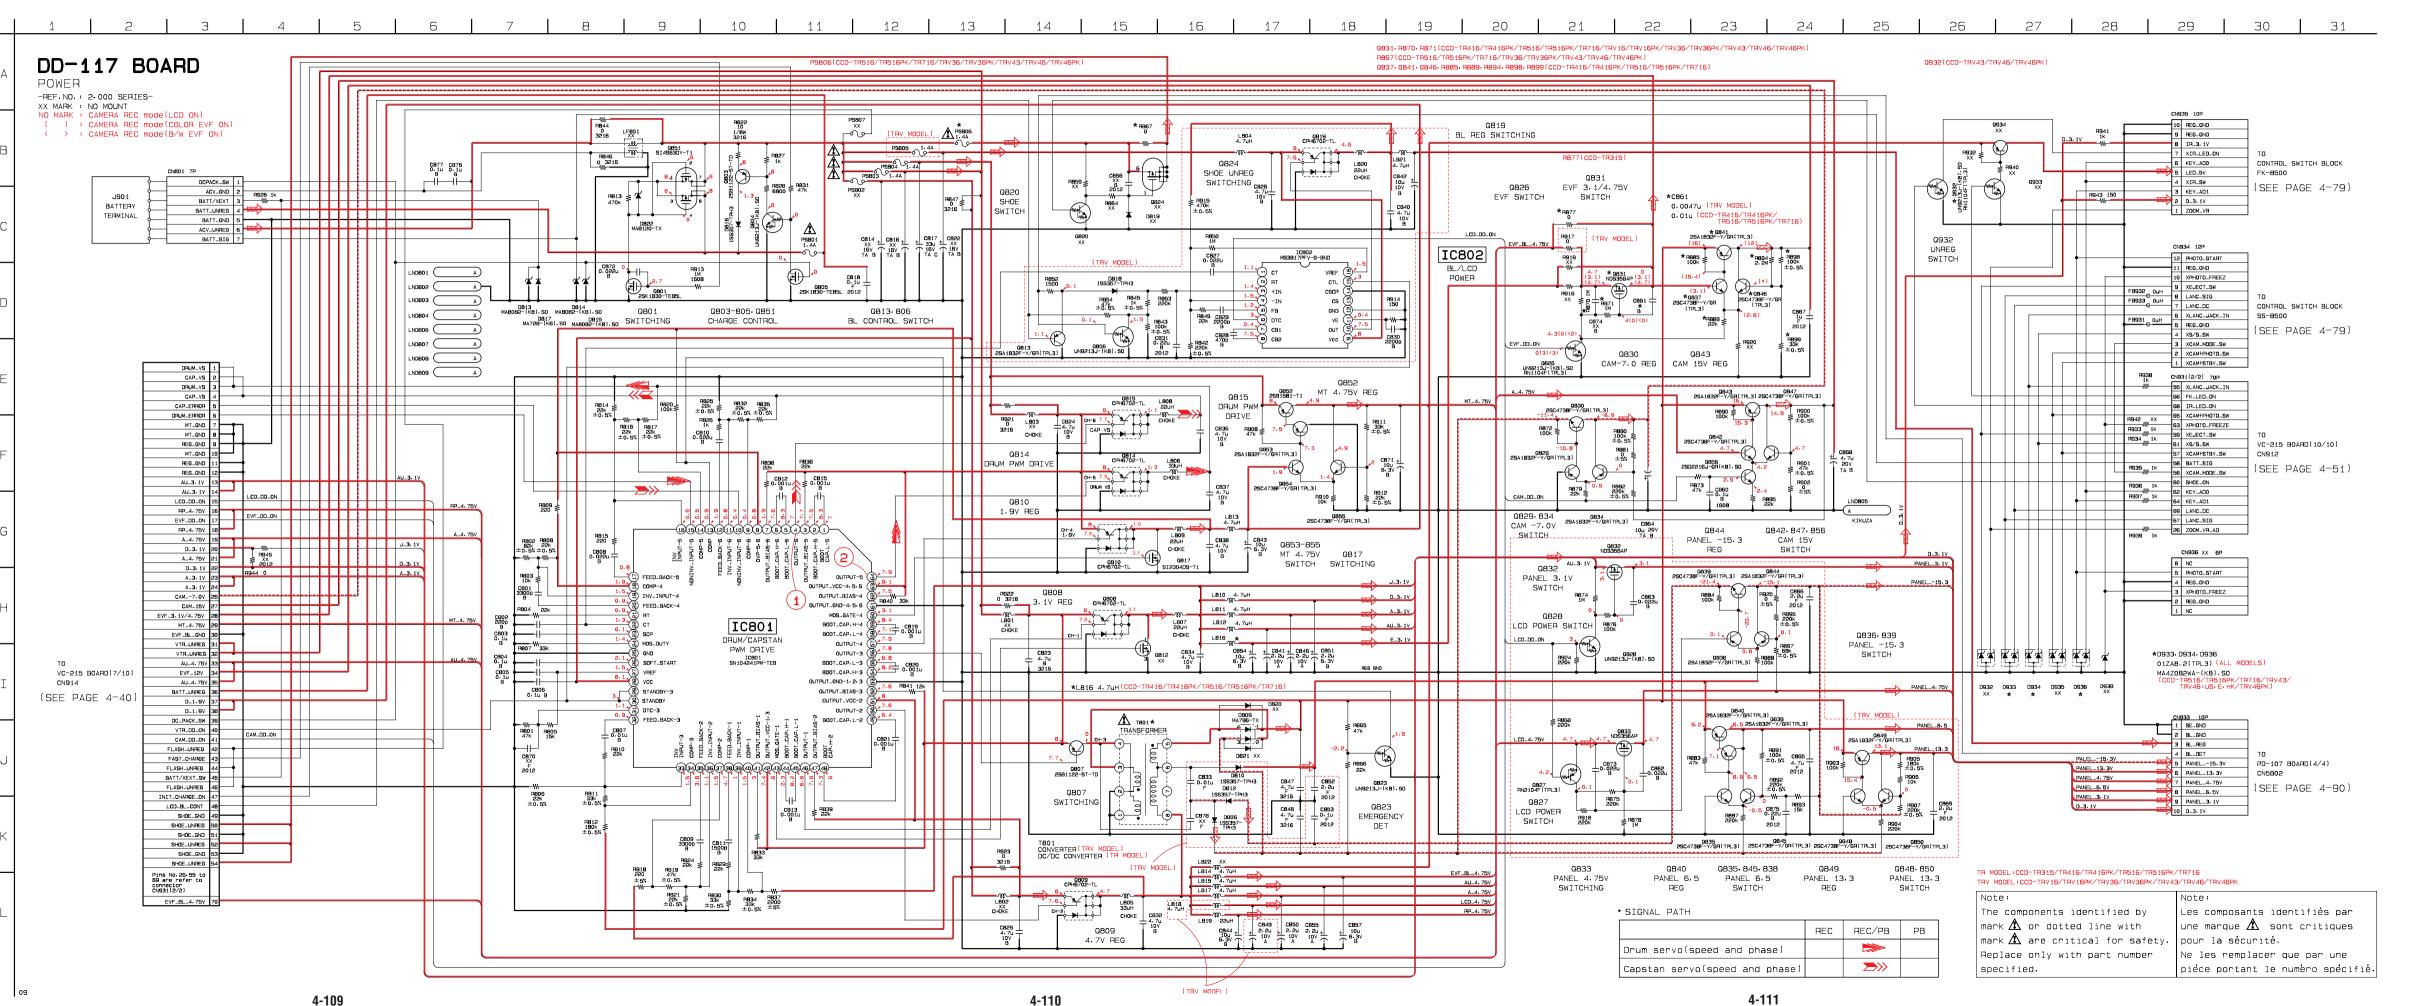

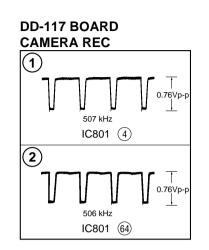

## CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

# SECTION 5 ADJUSTMENTS

Refer to page 3 as Table for distinction functions of models and classification

#### 5-1. CAMERA SECTION ADJUSTMENTS

## 1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

#### 1-1-1. List of Service Tools

- Oscilloscope
- Color monitor
- Vectorscope

- Adjusting driver
  - Regulated power supply
     Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction	J-6080-058-A	Auto white balance adjustment/check
	(C14)		White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.3	J-6080-818-A	White balance check
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color bar chart for pattern box	J-6020-250-A	
J-5	Adjusting remote commander	J-6082-053-B	
	(RM-95-remodeled partly) (Note 1)		
J-6	Siemens star	J-6080-875-A	For checking the flange back
J-7	Multi CPC jig	J-6082-311-A	For adjusting LCD block
J-8	CPC-7 jig	J-6082-382-A	For adjusting the video section and color viewfinder adjustment
J-9	Power code (Note 2)	J-6082-223-A	For connecting the battery terminal and DC power supply
J-10	AFM DEV jig	J-6082-312-A	For adjusting the deviation
J-11	Clear chart	J-6080-621-A	
J-12	Extension cable (16P, 0.5 mm)	J-6082-357-A	For extension between the CD-210/211 board (CN401) and
			VC-215 board (CN501)
J-13	IR receiver jig	J-6082-383-A	For adjusting the IR transmitter
J-14	Extension cable (70P, 0.8 mm)	J-6082-439-A	For extension between the DD-107 board (CN931) and
			VC-215 board (CN915)

**Note 1:** If the micro processor IC in the adjusting remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

**Note 2:** Connect the adjusting remote commander to the LANC jack, and set the HOLD switch to the "ADJ" side, or press the battery switch of the battery terminal using adhesive tape, etc.

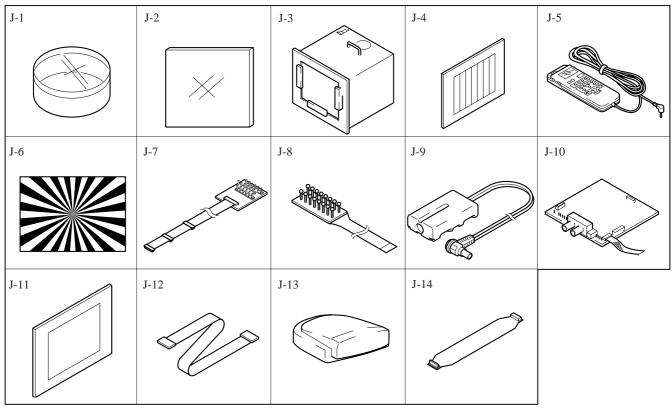


Fig. 5-1-1.

#### 1-1-2. Preparations

- **Note 1:** For details of how remove the cabinet and boards, refer to "2. DISASSEMBLY".
- **Note 2:** When performing only the adjustments, the lens block and boards need not be disassembled.
- 1) Connect the equipment for adjustments according to Fig. 5-1-3,
- 2) By setting the "Forced Camera Power ON mode", the camera power can be turned ON even if the front panel block (MA-345/ 346 board, power switch, microphone unit) has been removed. When removing the front panel block disconnect the following connector
  - 1. VC-215 board CN916 (18P 0.5mm)
- 3) The video light model need not be assembled. If removing it. disconnect the following connector.
  - 1. VC-215 board CN909 (4P 0.8mm)
- Note 3: As removing the cabinet (R) (removing the VC-215 board CN911) means removing the lithium 3V power supply (CF-60/61 board), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and data on the history use. (Refer to the "Service Mode" of "VIDEO SECTION ADJUSTMENT" for the data on the history use.)
- **Note 4:** Setting the "Forced Camera Power ON" Mode 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjusting remote commander. The above procedure will enable the camera power to be turned on with the front panel block removed. After completing adjustments, be sure to exit the "Forced Camera Power ON Mode".
- Note 5: Exiting the "Forced Camera Power ON" Mode
  - 1) Select page: 0, address: 01, and set data: 01.
  - 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjusting remote commander.
  - 3) Select page: 0, address: 01, and set data: 00.

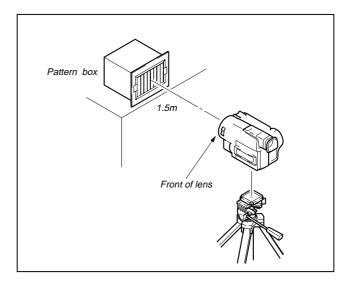


Fig. 5-1-2.

### TR MODEL

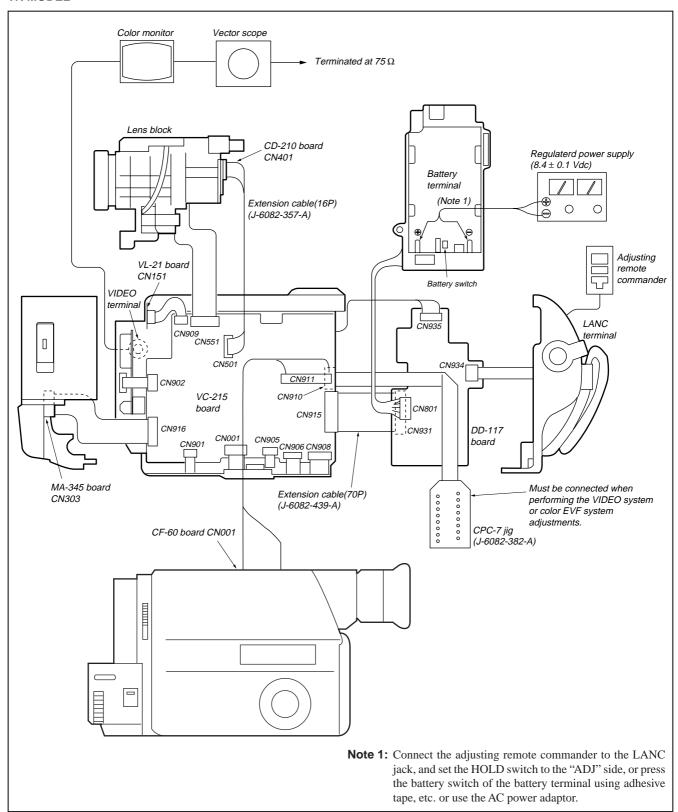


Fig. 5-1-3.

#### **TRV MODEL**

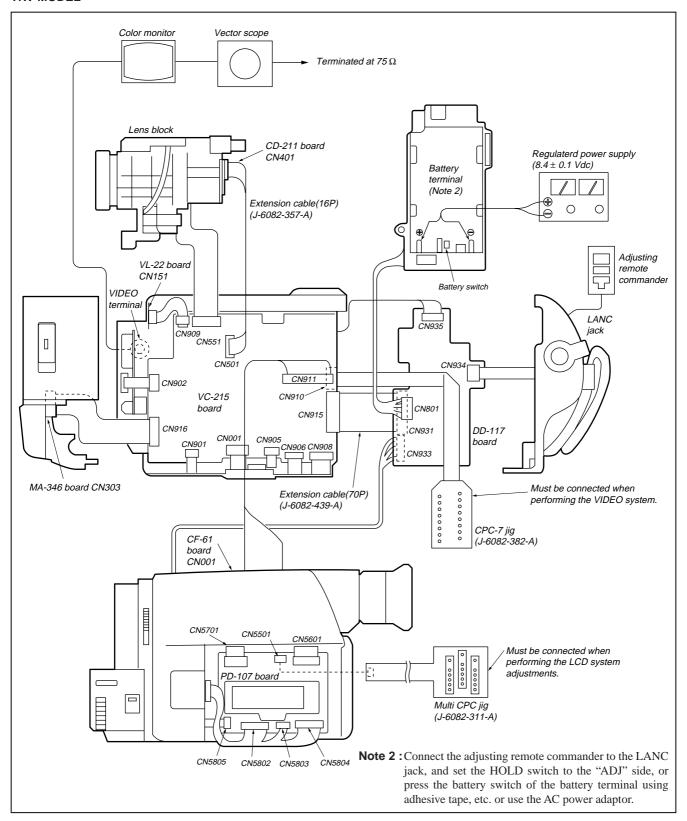


Fig. 5-1-4.

#### 1-1-3.Precaution

#### 1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

1.	POWER switch (MA-345/346 board)	CAMERA
2.	NIGHT SHOT switch (Lens Block)	OF
	(Night shot model)	
3.	DEMO MODE (Menu display)	OF
4.	DIGITAL ZOOM (Menu display)	OF
5.	STEADY SHOT (Menu display)	OF
6.	DISPLAY (Menu display)	V-OUT/LCI

7.	FOCUS switch (MF-8500)	MANUAL
	PROGRAM AE (CF-60/61 board)	
	BACK LIGHT (CF-60/61 board)	
	PICTURE EFECT (CF-60/61 board)	
	16: 9 WIDE (Menu display)	

#### 2. Adjusting Procedure

Adjust in the given order.

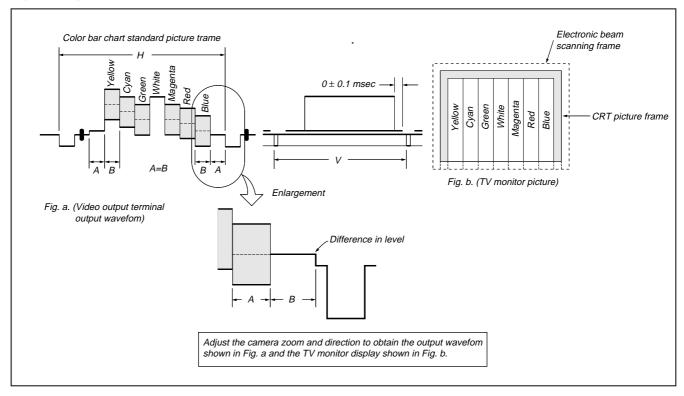


Fig. 5-1-5.

#### 3. Subject

- Color bar chart (Standard picture frame)
   Adjust the picture frame as shown in Fig. 5-1-5. if adjustments are performed using the color bar chart.
   (Standard picture frame)
- White pattern (Standard picture frame)
   Remove the color bar chart from the pattern box, and insert a
   clear chart in its place. (Do not perform zoom operations during
   this time.)
- 3) Chart for flange back adjustment Combine a white A0 size (1189 mm x 841 mm) paper to a black one, and make the chart shown in Fig. 5-1-6.

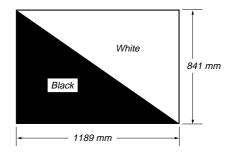


Fig. 5-1-6.

**Note:** Use the non-reflecting and non-glazing vellum paper whose size is more than A0, and make the boundary between white and black to be smoothly flat.

#### 1-1-4. Adjusting Remote Commander

The adjusting remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjusting remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the nonvolatile memory.

#### 1. Using the adjusting remote commander

- 1) Connect the adjusting remote commander to the LANC terminal.
- 2) Adjust the HOLD switch of the adjusting remote commander to "HOLD" (SERVICE position).

If it has been properly connected, the LCD on the adjusting remote commander will display as shown in Fig. 5-1-7.

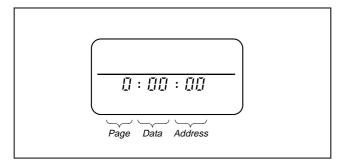


Fig. 5-1-7.

- 3) Operate the adjusting remote commander as follows.
  - · Changing the page

The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH– button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal	Λ	1	2	3	1	5	6	7	Q	0	۸	B	C	D	Е	F
notation	U	1		3	+	)	U	/	O	7	А	Ъ		ט	L	1.
LCD Display		1	2	3	Ч	5	5	7	8	9	Я	Ь	С	d	Ε	F
Decimal notation conversion value	_	1	2	2	4	_	_	7	0	_	10	11	12	12	1.4	1.5
conversion value	0	1	2	3	4	3	O	/	ð	9	10	11	12	13	14	13

Table 5-1-1.

- · Changing the address
  - The address increases when the FF (►►) button is pressed, and decreases when the REW (►►) button is pressed. There are altogether 256 addresses, from 00 to FF.
- Changing the data (Data setting)
   The data increases when the PLAY (►) button is pressed, and decreases when the STOP (■) button is pressed.
   There are altogether 256 data, from 00 to FF.
- Writing the adjustment data
   The PAUSE button must be pressed to write the adjustment data (D, E, F page) in the nonvolatile memory.
   (The new adjustment data will not be recorded in the nonvolatile
- 4) Select page: 0, address: 01, and set the data to 01, and enables Page D and E, F to be adjusted.
- 5) After completing all adjustments, set data: 00 to page: 0, address: 01 and turn off the main power supply (8.4V) once.

## 2. Precautions upon using the adjusting remote commander

memory if this step is not performed.)

Mishandling of the adjusting remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

#### 1-1-5. Data Processing

The calculation of the DDS display and the adjusting remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Table 5-1-2. indicates the hexadecimal notation-the decimal notation calculation table.

												<u> </u>					
The lower digits of the hexadecimal notation		1	2	3	4	5	6	7	8	9	Α	В	С	D	Е		
The upper digits of the hexadecimal notation											(A)	<b>(</b> b <b>)</b>	<b>(</b> c)	(ರ)	<b>(</b> E <b>)</b>	(	
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	1	
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30		
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46		
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62		
4	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78		
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94		
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	1	
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	1	
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	1	
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	1	
A (A)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	1	
В (ь)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	1	
C (=)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	2	
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	2	
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	2	
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	2	

**Note:** ( ) indicate the adjusting remote commander display.

**(Example)** In the case that the DDS display and the adjusting remote commander display are BD (bd). As the upper digit of the hexadecimal notation is B (b), and the lower digit is D (d), the intersection "189" of the ① and ② in the above table is the decimal notation to be calculated.

Table 5-1-2.

#### 1-2. INITIALIZATION OF D, E, F PAGE DATA

#### 1. Initializing the D,E,F Page Data

Note 1: If "Initializing the D, E, F Page Data" is performed, all data of the D page, E page and F page will be initialized. (It is impossible to initialize a single page.)

**Note 2:** If the D,E,F page data has been initialized, "Modification of D, E, F Page Data" and all adjustments need to be performed again.

Adjusting page	D
Adjusting Address	00 to 6F
Adjusting page	F
Adjusting Address	00 to FF
Adjusting page	Е
Adjusting Address	00 to FF

#### Initializing Method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 00, and set data: 55
- 3) Select page: 2, address: 01, set data: 55 and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 02, and check that the data is 01.
- 5) Select page: 3, address: 00, and set data: 29.
- 6) Select page: 3, address: 01, set data: 29, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 0, address: 01, and set data: 00.
- 8) Perform "Modification of D,E,F Page Data".

#### 2. Modification of D, E, F Page Data

If the D, E, F page data has been initialized, change the data of the "Fixed data-2" address shown in the following tables by manual input.

Modifying Method:

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.

**Note:** If copy the data built in the different model, the camcorder may not operate.

- 3) When changing the data, press the PAUSE button of the adjusting remote commander each time when setting new data to write the data in the non-volatile memory.
- 4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.
- After compleating "Modification of D, E, F Paga Data" select page: 0, address: 01, and set data: 00. Also perform all adjustments.

## 3. D Page Table

## Note1:

Fixed data-1: Initialized data.

(Refer to "1. Initializing the D,E,F Page Data".)

Fixed data-2: Modified data.

(Refer to "2. Modification of D, E, F Page Data").

		efer to "2. Modification of D, E, F Page Data").
Address	Initial	Remark
	Value	
00 to 0F		
10	00	Fixed data-1
11	00	
12	00	
13		Fixed data-2
14		(Modified data, copy the data
15		built in the same model.)
16		
17		
18		
19		
1A	-	
1B		
1C		
1D	-	
1E		
1F		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
2A	00	Fixed data-1
2B	00	1 1100 01111 1
2C	00	
2D	00	
2E	00	Fixed data-2
	61	Fixed data-2 Fixed data-1
2F	64	
30	88	Battery end adj.
31	8D	
32	A8	
33	BD	
34	C8	
35	05	Fixed data-1
36	02	
37	01	
38	05	
39		Fixed data-2
3A		(Modified data, copy the data
3B		built in the same model.)
3C		23-1,
3D	07	Fixed data-1
3E	3,	Fixed data-1
3F		(Modified data, copy the data
40		built in the same model.)
		built in the same moder.)
41	04	Eirad data 1
42	04	Fixed data-1
43	0.5	Fixed data-2
44	06	Fixed data-1
45	77	
46		Fixed data-2
47	8F	Fixed data-1
48	06	
49	05	
4A	03	
L		

4B 01 4C 00 4D 00 4E 00 4F 00 50 0E 51 2A 52 47 53 69 54 91 55 BF 56 FB 57 FF 58 E2 59 B2 5A 7F 5B 4D 5C 11 5D 00 5E 00 5F 00 60 2D 61 10 62 1E 63 19 64 00 65 00 66 00	Address	Initial	Remark
4C       00         4D       00         4E       00         4F       00         50       0E         51       2A         52       47         53       69         54       91         55       BF         56       FB         57       FF         58       E2         59       B2         5A       7F         5B       4D         5C       11         5D       00         5E       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00		Value	
4D         00           4E         00           4F         00           50         0E           51         2A           52         47           53         69           54         91           55         BF           56         FB           57         FF           58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00			Fixed data-1
4E       00         4F       00         50       0E         51       2A         52       47         53       69         54       91         55       BF         56       FB         57       FF         58       E2         59       B2         5A       7F         5B       4D         5C       11         5D       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00         6E       00			
4F       00         50       0E         51       2A         52       47         53       69         54       91         55       BF         56       FB         57       FF         58       E2         59       B2         5A       7F         5B       4D         5C       11         5D       00         5E       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6C       00         6D       00         6E       00			
50         0E           51         2A           52         47           53         69           54         91           55         BF           56         FB           57         FF           58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00			
51       2A         52       47         53       69         54       91         55       BF         56       FB         57       FF         58       E2         59       B2         5A       7F         5B       4D         5C       11         5D       00         5E       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00         6E       00			
52       47         53       69         54       91         55       BF         56       FB         57       FF         58       E2         59       B2         5A       7F         5B       4D         5C       11         5D       00         5E       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00			
53         69           54         91           55         BF           56         FB           57         FF           58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00			
54       91         55       BF         56       FB         57       FF         58       E2         59       B2         5A       7F         5B       4D         5C       11         5D       00         5E       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6E       00			
55         BF           56         FB           57         FF           58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00			
56         FB           57         FF           58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00			
57         FF           58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00			
58         E2           59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00			
59         B2           5A         7F           5B         4D           5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00			
5A       7F         5B       4D         5C       11         5D       00         5E       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00         6E       00		E2	
5B       4D         5C       11         5D       00         5E       00         5F       00         60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00         6E       00		B2	
5C         11           5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00	5A	7F	
5D         00           5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00	5B	4D	
5E         00           5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00	5C	11	
5F         00           60         2D           61         10           62         1E           63         19           64         00           65         00           66         00           67         00           68         00           69         00           6A         00           6B         00           6C         00           6D         00           6E         00		00	
60       2D         61       10         62       1E         63       19         64       00         65       00         66       00         67       00         68       00         69       00         6A       00         6B       00         6C       00         6D       00         6E       00	5E		
61 10 62 1E 63 19 64 00 65 00 66 00 67 00 68 00 69 00 6A 00 6B 00 6C 00 6D 00 6E 00			
62	60	2D	
63 19 64 00 65 00 66 00 67 00 68 00 69 00 6A 00 6B 00 6C 00 6D 00 6E 00	61	10	
64 00 65 00 66 00 67 00 68 00 69 00 6A 00 6B 00 6C 00 6D 00 6E 00	62	1E	
65 00 66 00 67 00 68 00 69 00 6A 00 6B 00 6C 00 6D 00 6E 00	63	19	
66     00       67     00       68     00       69     00       6A     00       6B     00       6C     00       6D     00       6E     00		00	
67 00 68 00 69 00 6A 00 6B 00 6C 00 6D 00 6E 00			
68 00 69 00 6A 00 6B 00 6C 00 6D 00 6E 00			
69 00 6A 00 6B 00 6C 00 6D 00 6E 00	67	00	
6A     00       6B     00       6C     00       6D     00       6E     00	68	00	
6B 00 6C 00 6D 00 6E 00	69	00	
6B 00 6C 00 6D 00 6E 00	6A	00	
6D 00 6E 00		00	
6E 00	6C		
	6D	00	
6F 00	6E	00	
<u> </u>	6F	00	

## 4. F Page table

## Note 1:

Fixed data-1: Initialized data.

(Refer to "1. Initializing the D,E,F Page Data".)

Fixed data-2: Modified data.

(Refer to "2. Modification of D, E, F Page Data").

**Note 2 :** There are three models classified by VTR formats as shown below, and the initial value of adjustment is different according to the model.

Hi8 model :CCD-TR516/TR516PK/TR716

CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK

Standard8 model : CCD-TR315/TR416/TR416PK CCD-TRV16/TRV16PK

Address	Initial Value	Remark
00 to 0F	value	
10	00	Emergency memory address
11	00	Emergency memory address
12	00	
13	00	
14	00	
15	00	
16	00	
17	00	
18	00	
19	00	
1A	00	
1B	00	
1C	_	Fixed data-2
1D		
1E		
1F		
20		Fixed data-1:CCD-TR516/TR516PK, TRV36/TRV36PK
		Fixed data-2:CCD-TR716, TRV43/TRV46/TRV46PK
21	[52]	G-CAM flip adj.
	<50>	<>: CCD-TR716, TRV43/TRV46/TRV46PK
		[]:CCD-TR516/TR516PK,TRV36/TRV36PK
22		Fixed data-2
23		
24		Fixed data-1
25		
26		Fixed data-2
27		Fixed data-1
28		
29		
2A		
2B		Fixed data-2
2C	A0	28MHz origin osc. adj.
2D		Fixed data-2
2E		Fixed data-1
2F	80	Hall adj.
30	80	·
31	18	Max gain adj.
32		Fixed data-2
33		Fixed data-1
34	1B	Color reproduction adj.
35	I.D	Fixed data-1
36	42	Color reproduction adj.
37	T2	Fixed data-1
38	1	11/00 (4014-1
39	1	
J7		

Address	Initial	Remark
	Value	
3A	89	Auto white balance adj.
3B	59	
3C	38	IRIS IN/OUT adj.
3D	41	
3E	25	Flange back adj.
3F	00	
40	19	
41	00	
42	35	
43	58	Angular velocity sensor sensitivity check
44	5E	Address 43, 44 and fixed data address. (CCD-TR716, TRV43/TRV46/TRV46PK)
45		Fixed data-1
46	8D	1.5MHz deviation adj.
47	7A	BPF f0 adj.
48		Fixed data-1
49	6B	Y OUT level adj.
4A	40	AFC f0 adj.
4B	9A	C OUT level adj.
4C	ļ .	Fixed data-1
4D	7B	Filter f0 adj.
4E	60	RP filter f0 adj.
4F		Fixed data-1
50		
51		
52		
53	40	RECY current adj.
54	40	(Addresses 57 to5A are fixed)
55	5F	data addresses.
56	5F	
57	9A/80	Note 2: Hi8 model/ Standard8 model
58	80/80	
59	9A/80	
5A	80/80	
5B	50	REC L level adj.
5C	50	(Addresses 63 to 64 are fixed)
5D	43	data addresses.
5E	43	
5F	66	
60	66	
61	67	
62	67	
63	7C/80	Note 2: Hi8 model/ Standard8 model
64	7C/80	
65	80	REC C current adj.
66	41	IR video deviation Adj.
67	33	IR audio deviation Adj.
68	C7	IR video carrier freq. Adj.
69	80	CAP FG offset adj.
6A		Fixed data-2
6B		Fixed data-1
6C		
6D	1	
6E	1	
6F	1	
70	3B	AWB standard data input adj.
71	FF	¥
72	56	
73	7D	
74		Fixed data-1
75	1	
76	1B	Flange back adj.
77	54	<u> </u>
78	25	
79	80	
7A	10	
7B	FF	

Address	Initial	Remark
	Value	
7C	0A	Switching position adj.
7D	00	
7E	_	Fixed data-1
7F		E: 11. 2
80	-	Fixed data-2
81		Fixed data-1
82	_	Fixed data-1
84		Fixed data-2
85		Fixed data-1:CCD-TR516/TR516PK, TRV36/TRV36PK
03		Fixed data-2:CCD-TR716, TRV43/TRV46/TRV46PK
86		Fixed data-2
87		Fixed data-1
88		
89		
8A		
8B		
8C		
8D		Fixed data-2
8E		
8F		Fixed data-1
90	-	
91		
92		
93		
94	-	Fixed data-2
95		T 11. 1
96	-	Fixed data-1
97 98		Fixed data-2
98		Fixed data-2 Fixed data-1
99 9A		Fixed data-1 Fixed data-2
9B		Fixed data-2 Fixed data-1
9C		Fixed data-1
9D		Fixed data-2
9E		Fixed data-2
9F		Fixed data-1
A0		Fixed data-2
A1	-	
A2	-	
A3		
A4		Fixed data-1
A5		
A6		Fixed data-2
A7		
A8		
A9		
AA	4	Fixed data-1
AB		F. 11. 2
AC		Fixed data-2
AD		Fixed data-1
AE		Fixed data-2
AF	-	Fixed data-1
B0 B1	-	
B1 B2	-	
B3	-	
B3 B4	-	
B5	-	
B6	1	
B7	1	
B8	1	
B9	1	
BA	1	
BB	1	
BC		
BD		

Address	Initial Remark
	Value
BE	Fixed data-2
BF	Fixed data-1
C0	
C1 C2	
C2	
C4	
C5	Fixed data-2
C6	Fixed data-2 Fixed data-1
C7	1 Tixeu data-1
C8	
C9	
CA	
СВ	
CC	
CD	
CE	
CF	
D0	
D1	
D2	
D3	
D4	
D5	
D6	
D7 D8	
D8	Fixed data-2
DA	Fixed data-1
DB	Fixed data-2
DC	1 Med data 2
DD	Fixed data-1
DE	
DF	
E0	
E1	
E2	
E3	Fixed data-2
E4	
E5	Fixed data-1
E6	Fixed data-2
E7	Fixed data-1
E8 E9	•
EA	
EB	Fixed data-2
EC	The Guille 2
ED	Fixed data-1
EE	
EF	
F0	
F1	
F2	Fixed data-2
F3	Fixed data-1
F4	
F5	FF Color reproduction adj.
F6	F6
F7	Fixed data-1
F8	
F9 FA	
FB FB	
FC	•
FD	
FE	
FF	

## 5. E Page Table

## Note 1:

Fixed data-1 : Initialized data.

( Refer to "1. Initializing the D,E,F Page Data".)

Fixed data-2: Modified data.

(Refer to "2. Modification of D, E, F Page Data").

Note 2: See "1-5. LCD SYSTEM ADJUSTMENT".

	J 1-J. L	CDSTSTEMA	DJUSTMENT".
Address	Initial Value		Remark
00		Fixed data-1	
01			
02			
03			
04			
05			
06			
07			
08			
09			
0A		Fixed data-2	
0B		1 IACG Gata-2	
0C		Fixed data-1	
0D		1 IXCG Gata-1	
0E			
0F			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
1A			
1B			
1C			
1D			
1E			
1F			
20		Fixed data-2	
21		Fixed data-1	
22			
23			
24			
25			
26			
27			
28			
29			
2A			
2B		Fixed data-2	
2C			
2D			
2E			
2F		Fixed data-1	
30			
31			
32			
33			
34			
35			
36			
37			

Address	Initial Value	Remark
38	value	Fixed data-1
39		
3A	1	
3B		Fixed data-2
3C		Fixed data-1
3D	1	
3E	1	
3F	1	
40	1	
41		
42		
43		
44		
45		
46		
47	-	
48	1	
49	-	
4A	4	
4B	1	
4C	-	
4D 4E	+	
4E 4F		Fixed data-2
50		Fixed data-2 Fixed data-1
51	-	rixed data-1
52	1	
53		Fixed data-2
54	-	1 ixed data-2
55		Fixed data-1
56	1	I Med data I
57	1	
58	1	
59		Fixed data-2
5A		
5B		Fixed data-1
5C		Fixed data-2
5D		Fixed data-1
5E		
5F		
60		Fixed data-2
61		
62		
63		Fixed data-1
64	-	Fixed data-2
65	-	
66		Pi 1 1-4 1
67	-	Fixed data-1
68	4	
69	-	
6A		Fixed data-2
6B 6C	-	TIACU Uata-2
6D		Fixed data-1
6E		Fixed data-1 Fixed data-2
6F	1	The dut 2
70		Fixed data-1
71		TR model:Fixed data-1/TRV model:Fixed data-2
72		Fixed data-1
73		Fixed data-2
74		Fixed data-1
75		Fixed data-2
76 to 99		Fixed data-1
	1	

Address	Initial Value	Remark
9A		Fixed data-2
9B		Fixed data-1
9C		Fixed data-2
9D		Fixed data-1
9E		
9F		
A0		Fixed data-2
A1		Fixed data-1
A2		TR model:Fixed data-1/TRV model:Fixed data-2
A3 A4		Fixed data-2 Fixed data-1
A5		Fixed data-1
A6		
A7		
A8		
A9		
AA		
AB		
AC		
AD		
AE		
AF		
B0		
B1		
B2		
B3		
B4		
B5		
B6 B7		
B8		
B9		
BA		Fixed data-2
BB		
BC		
BD		
BE		
BF		TR model: Fixed data-1
C0		TRV model : Fixed data-2
C1		
C2		VCO adj. (Color EVF)
C3		Bright adj. (Color EVF)
C4 C5		Contrast adj. (Color EVF)
C6		White balance adj. (Color EVF) White balance adj. (Color EVF)
C7		Fixed data-2 : Color EVF model
C8		Fixed data-1: B/W EVF model
C9		- III data I . S, II II III III III
CA		
СВ		
CC		Backlight consumption current adj. (Color EVF)
CD		Fixed data-1
CE		
CF	Note 2	Bright adj. (LCD)
D0	Note 2	Color adj. (LCD)
D1	Note 2	White balance adj. (LCD)
D2	Note 2	White balance adj. (LCD)
D3	Note 2	Contrast adj. (LCD)
D4	Note 2	D range adj. (LCD)
D5	Note 2	V-COM level adj. (LCD)
D6 D7	Note 2 Note 2	VCO adj. (LCD) V-COM adj. (LCD)
D8	Note 2	Fixed data-1
Do		1 IACU Uata-1

Address	Initial Value	Remark
D9	value	Fixed data-1
DA		rixed data-1
DB		TR model:Fixed data-1/TRV model:Fixed data-2
DC		Fixed data-1
		Fixed data-1
DD	-	
DE	-	
DF	_	
E0		
E1		
E2		
E3		
E4		
E5		
E6		
E7		
E8		
E9		
EA		Fixed data-2
EB		Fixed data-1
EC		
ED		
EE		
EF		Fixed data-2
F0		Fixed data-1
F1		
F2	-	
F3		Fixed data-2
F4		Fixed data-1
F5		
F6		
F7	-	
F8		
F9	1	
FA	1	
FB		
FC to FF		
10 10 11	1	

#### 1-3. CAMERA SYSTEM ADJUSTMENTS


Before perform the camera system adjustments, Check that the specified value of "28MHz Origin Oscillation Adjustment", "Y OUT level Adjustment" and "C OUT level Adjustment" of "VIDEO SYSTEM ADJUSTMENT" are satisfied.

#### 1. G-CAM flip Adjustment

Set the color reproduction conditions to optimum.

Subject	Color bar chart standard picture frame
Measurement Point	Display data of page 1 of the adjusting
	remote commander (Note 1)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	21

**Note 1.** Displayed data of page 1 of the adjusting remote commander.

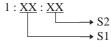

Note 2. [ ]: CCD-TR516/TR516PK CCD-TRV36/TRV36PK

<>: CCD-TRV30/TRV30/TRV40/TRV46PK
CCD-TRV43/TRV46/TRV46PK

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 0, address: 03, and set data: 16.
- 3) Select page 1 of the adjusting remote commander, and compare the higher 2 digits (S1) and lower 2 digits (S2) of the 4-degits display data.

When S1<S2

Perform steps 4) onwards.

When S1≧S2

Perform steps "Processing after Completing Adjustments".

4) Select page: F, address: 21, set data: when the read data is [52] or <50>, change to [D2] or <D0>, and the read data is [D2] or <D0>, change to [52] or <50>, (initial value is 52) and press the PAUSE button of the adjusting remote commander.

- 1) Select page: 0, address: 03, and set data: 00.
- 2) Select page: 0, address: 01, and set data: 00.

#### 2. HALL Adjustment

For detecting the position of the lens iris, adjust the hall AMP gain and offset.

Subject	Not required
Measurement Point	DDS display data of LCD or TV monitor
	(Note 3)
Measuring Instrument	
Adjustment Page	F
Adjustment Address	2F, 30
Specified Value	7E to 82 during IRIS OPEN (Note 1)
	13 to 17 during IRIS CLOSE (Note 2)

- **Note 1:** Select page: 2, address: 01, set data: 01, and press the PAUSE button of the adjusting remote commander.
- **Note 2:** Select page: 2, address: 01, set data: 03, and press the PAUSE button of the adjusting remote commander.
- Note 3: DDS display data of LCD or TV monitor.

00 00XX → Object data

Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 0, address: 03, and set data: 03.
- 3) Select page: D, address: 11, set data: 02, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 01, set data: 03, and press the PAUSE button.
- 5) Select page: F, address: 30, set data: 80, and press the PAUSE button.
- 6) Select page: F, address: 2F, set data: 40, and press the PAUSE button.
- Read the DDS display data (the bottom two digits of the display data at the bottom right of the LCD display or the TV monitor), and this data is named K2.
- 8) Select page: F, address: 2F, set data: 30, and press the PAUSE button.
- 9) Read the DDS display data, and this data is named  $K_1$ .
- 10) Select page: 2, address: 01, set data: 01, and press the PAUSE button
- 11) Read the DDS display data, and this data is named W<sub>1</sub>.
- 12)Select page: F, address: 2F, set data: 40, and press the PAUSE button.
- 13) Read the DDS display data, and this data is named W2.
- 14) Convert  $W_1$ ,  $W_2$ ,  $K_1$ ,  $K_2$ , to decimal notation, and obtain  $W_1$ ',  $W_2$ ',  $K_1$ ',  $K_2$ '. (Refer to Table 5-1-2. "Hexadecimal notation decimal notation conversion table".)
- 15)Calculate X<sub>1</sub>' using the following equations (decimal notation calculation).

 $\begin{array}{ll} A' = W_2' + K_1' - W_1' - K_2' & Equation \ 1 \\ B' = W_1' - K_1' & Equation \ 2 \\ X_1' = [1696 + (48 \ x \ A') - (16 \ x \ B')] \ / \ A' & Equation \ 3 \end{array}$ 

- 16)Convert X<sub>1</sub>' to hexadecimal notation, and obtain X<sub>1</sub>. (Round off to one decimal place)
- 17) Select page: F, address: 2F, set data: X<sub>1</sub>, and press the PAUSE button.
- 18) Select page: 2, address: 01, and set data: 01, and press the PAUSE button.
- 19) Select page: F, address: 30, change the data and adjust the DDS display data to "80".
- 20) Press the PAUSE button of the adjusting remote commander.
- 21) Select page: 2, address: 01, and set data: 03, and press the PAUSE button.

- 22) Read the DDS display data, and this data is named K<sub>0</sub>. If K<sub>0</sub> lies within the "13" to "17" range, perform "Processing after completing adjustments". If it is lies outside the range, perform the following adjustments.
- 23) Convert K<sub>0</sub> to decimal notation, and obtain K<sub>0</sub>'.
- 24) Calculate X2' using the following equations (decimal notation calculation).

 $C'= 128 - B' - K_0'$  Equation 4  $X_2'=[(106 - B') \times (X_1' - 48) + (48 \times C')] / C'$  Equation 5

(  $X_1$ ' and B' are values obtained from equations 2) and 3) )

25) Convert X2' to hexadecimal notation, and obtain X2. (Round off to one decimal place)

26) Select page: F, address: 2F, set data: X2, and press the PAUSE button.

- 27) Select page: 2, address: 01, set data: 03, and press the PAUSE
- 28) Select page: F, address: 30, change the data and adjust the DDS display data to "15".
- 29) Press the PAUSE button of the adjusting remote commander.
- 30) Select page: 2, address: 01, set data: 01, and press the PAUSE button
- 31) Check the DDS display data lies within the "7E" to "82" range.

- 1) Select page: D, address: 11, and set data: 00, and press the PAUSE button.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button.
- 4) Select page: 0, address: 03, and set data: 00.

#### 3. Flange Back Adjustment

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

### 3-1. Flange Back Adjustment(1)

Subject	Flange back adjustment chart
	(2.0 m from the front of the lens)
	(Luminance: $230 \pm 30 \text{ lux}$ )
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3E to 42, 76 to 7B

#### Switch setting:

1) NIGHT SHOT switch......OFF

#### Adjusting method:

- Check that at both the zoom lens TELE end and WIDE end, the center of the chart for the flange back adjustment and center of the exposure screen coincide.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Check that the data of page: F, address: 3E to 42, 76 to 7B is the initial value (See table below).

Address	Data	Address	Data
3E	25	77	54
3F	00	78	25
40	19	79	80
41	00	7A	10
42	35	7B	FF
76	1B		

- 4) Select page: 2, address: 02, and check that the data is "00".
- 5) Select page: 2, address: 01, set data: 13, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 2, address: 01, set data: 15, and press the PAUSE button of the adjusting remote commander. (The adjustment data will be automatically input to page: F, addresses: 3E to 42, 76 to 7B.)
- 7) Select page: 2, address: 02, and check that the data is "01".

### Processing after Completing Adjustments

- 1) Turn OFF the main power supply (8.4V).
- 2) Perform "Flange Adjustment (2)".

#### 3-2. Flange Back Adjustment (2)

Perform this adjustment after performing "Flange Back Adjustment (1)".

Subject	Subject more than 500m away	
	(Subjects with clear contrast such as	
	buildings, etc.)	
Measurement Point	Check operation on TV monitor	
Measuring Instrument		
Adjustment Page	F	
Adjustment Address	3E to 42, 76 to 7B	

#### Switch setting:

1) NIGHT SHOT switch...... OFF

#### Adjusting method:

- Set the zoom lens to the TELE end and expose a subject that is more than 500 m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500 m away should not be in the screen.)
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: 2, address: 02, and check that the data is "00".
- 4) Select page: 2, address: 01, set data: 13, and press the PAUSE button of the adjusting remote commander.
- 5) Place a ND filter on the lens so that the optimum image is obtain.
- 6) Select page: 2, address: 01, set data: 29, and press the PAUSE button of the adjusting remote commander.
  - (The adjustment data will be automatically input to page: F, addresses: 3E to 42, 76 to 7B.)
- 7) Select page: 2, address: 02, and check that the data is "01".

- 1) Select page: 0, address: 01, and set data: 00.
- 2) Turn OFF the main power supply (8.4V).
- 3) Perform "Flange Back Check".

#### 4. Flange Back Check

Subject	Siemens star chart	
	(2.0 m from the front of the lens)	
	(Luminance: approx. 200 lux)	
Measurement Point	Check operation on TV monitor	
Measuring Instrument		
Adjustment Page	F	
Adjustment Address	3E to 42, 76 to 7B	

#### Switch setting:

1) NIGHT SHOT switch ...... OFF

#### Checking method:

- 1) Place the Siemens star 2.0m from the front of the lens.
- 2) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appear on the image.
- 3) Select page: 2, address: 40, and set data: 02.
- 4) Select page: 2, address: 41, and set data: 01.
- 5) Shoot the Siemens star with the zoom TELE end.
- 6) Turn on the auto focus.
- 7) Check that the lens is focused (Note1).
- 8) Select page: 2, address: 21, and set data: 10.
- 9) Shoot the Siemens star with the zoom WIDE end.
- 10) Observe the TV monitor and check that the lens is focused.

**Note 1:** When the auto focus is ON, the lens can be checked if it is focused or not by observing the data on the page 1 of the adjusting remote commander.

- 1) Select page: 0, address: 03, and set data: 0F.
- 2) Page 1 shows the state of the focus.

1 : 00 : XX → Odd: Focused Even: Unfocused

Processing after Completing Adjustments

- 1) Select page: 2, address: 21, and set data: 00.
- 2) Select page: 0, address: 03, and set data: 00.
- 3) Select page: 2, address: 40, and set data: 00.
- 4) Select page: 2, address: 41, and set data: 00.


#### 5. Picture Frame Setting

Subject	Color bar chart standard picture frame	
	(1.5m from the front of the lens)	
Measurement Point	Video output terminal	
Measuring Instrument	Oscilloscope and TV monitor	
Specified Value	A=B, C=D, $t=0 \pm 0.1$ msec	

#### Setting method:

- Adjust the zoom and the camera direction, and set to the specified position.
- 2) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "Color bar chart standard picture frame".

#### 1. Horizontal period

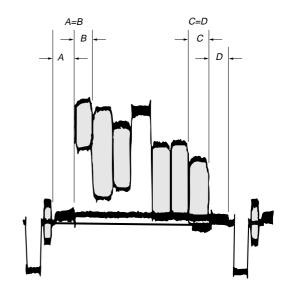

#### 2. Vertical period

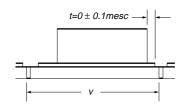


Fig. 5-1-8.

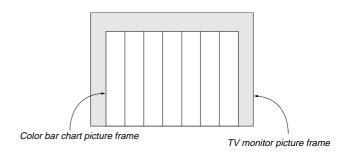


Fig. 5-1-9.

#### 6. Color Reproduction Adjustment

Adjust the color Separation matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	34, 36, F5, F6
Specified Value	All color luminance points should settle
	within each color reproduction frame.

#### Switch setting:

1) NIGHT SHOT switch...... OFF

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 01, set data: 3D, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: F, address: 25, set data: 3F, and press the PAUSE button of the adjusting remote commander.
- 4) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
- 5) Change the data of page: F, address: 34, 36, F5 and F6, and settle each color luminance point in each color reproduction frame.
- **Note 1:** Be sure to press the PAUSE button of the adjusting remote commander before changing the addresses. If not, the new data will not be written to the memory.
- 6) Press the PAUSE button of the adjusting remote commander.

- 1) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 2) Select page: 0, address: 01, and set data: 00.

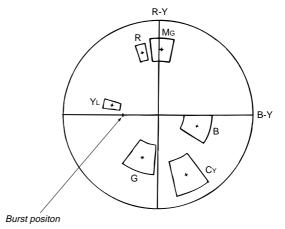


Fig. 5-1-10.


#### 7. IRIS IN/OUT Adjustment

For the unit to judge if the white balance is indoors or outdoors in auto white balance operations, measure the light level and write it in the EEPROM.

If the level is not correct, the white balance will not be accurate.

Subject	Clear chart
	(Color bar standard picture frame)
Measurement Point	DDS display of LCD or TV monitor
Measuring Instrument	(Note 1)
Adjustment Page	F
Adjustment Address	3C, 3D

**Note 1:** The right four digits of the display data at the right bottom side of the LCD and TV monitor is the LIGHT LEVEL data.

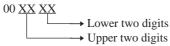

#### Switch setting:

- 1) STEADY SHOT (Menu display) ...... OFF
- 2) NIGHT SHOT switch ...... OFF

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 0, address: 03, and set data: 06.
- 3) Select page: D, address: 11, and set data: 02, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 40, and set data: 02.
- 5) Select page: 2, address: 01, set data: 0B, and press the PAUSE button of the adjusting remote commander.
- 6) Read the DDS display data (Note 1), and take the upper two digits as D<sub>1</sub> and the lower two as D<sub>2</sub>.
- Convert D<sub>1</sub> to decimal notation, and obtain D<sub>1</sub>'. (Refer to Table 5-1-2. "Hexadecimal notation - decimal notation conversion table" of "Service mode".)
- 8) Calculate D<sub>3</sub>' using the following equations. (Equations 1 and 2 are for decimal notation calculation).

When  $D_2 \ge D0$ 

 $\begin{array}{lll} D_3' = D_1' - 21 & ... & ... & ... \\ When & D_2 < D0 & ... & ... \\ D_3' = D_1' - 22 & ... & ... & ... \\ \end{array}$  Equation 2

- 9) Convert D<sub>3</sub>' to hexadecimal notation, and obtain D<sub>3</sub>.
- 10) Select page: F, address: 3C, set data: D<sub>3</sub>, and press the PAUSE button of the adjusting remote commander.
- 11) Select page: 2, address: 01, set data: 09, and press the PAUSE button of the adjusting remote commander.
- 12) Read the DDS display data (Note 1), and take the upper two digits as D<sub>4</sub> and the lower two as D<sub>5</sub>.
- 13) Convert D4 to decimal notation, and obtain D4'. (Refer to Table 5-1-2. "Hexadecimal notation decimal notation conversion table".)
- 14) Calculate D<sub>6</sub>' using the following equations. (Equations 3 and 4 are for decimal notation calculation).

When D<sub>5</sub> ≧F0

- 15) Convert D6' to hexadecimal notation, and obtain D6.
- 16) Select page: F, address: 3D, set data: D<sub>6</sub>, and press the PAUSE button of the adjusting remote commander.

#### Processing after Completing Adjustments

- 1) Select page: D, address: 11, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 40, and set data: 00.
- 5) Select page: 0, address: 03, and set data: 00.

#### 8. MAX GAIN Adjustment

Setting the minimum illumination.

If it is not consistent, the image level required for taking subjects in low illuminance will not be produced (dark).

Subject	Clear chart	
	(Color bar standard picture frame)	
Measurement Point	DDS display of LCD or TV monitor	
Measuring Instrument	(Note 1)	
Adjustment Page	F	
Adjustment Address	31	
Specified Value	C0 to FF	

**Note 1:** The right two digits of the display data at the right bottom side of the LCD and TV monitor is the object data.

 $00\ 00\ \underline{XX}$  Object data

#### Switch setting:

1) STEADY SHOT (Menu display) OFF
2) NIGHT SHOT switch OFF

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 11, and set data: 02, and press the PAUSE button of the adjusting remote commander.
- 3) Select of page: 0, address: 03, and set data: 01.
- 4) Select page: 2, address: 40, and set data: 02.
- 5) Select page: 2, address: 56, and set data: 40.
- Select page: 2, address: 01, set data: 19, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: F, address: 31, set data: 18, and press the PAUSE button of the adjusting remote commander.
- 8) Check that the DDS display data (Note 1) lies within the specified value.

- 1) Select page: D, address: 11, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 40, and set data: 00.
- 5) Select page: 2, address: 56, and set data: 00.
- 6) Select page: 0, address: 03, and set data: 00.

#### 9. Auto White Balance Standard Data Input

Subject	Clear chart
	(Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	70 to 73

- **Note 1:** Perform "Color Reproduction Adjustment" before this adjustment.
- **Note 2:** Check that the data of page: 2, address: 02 is data: 00. If not, turn the power of the unit OFF/ON.

#### Switch setting:

1) NIGHT SHOT switch...... OFF

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Wait for 2 seconds.
- 3) Select page: 2, address: 01, and set data: 11, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 01, and set data: 0D, and press the PAUSE button of the adjusting remote commander. (When the standard data is take in, the data will be automatically input to page: F, address: 70 to 73.)
- 5) Select page: 2, address: 02, and check that the data is "01".
- 6) Perform "Auto White Balance Adjustment".

#### Processing after Completing Adjustments

- 1) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 2) Select page: 0, address: 01, and set data: 00.

#### 10. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.

If it is not correct, auto white balance and color reproducibility will be poor.

Subject	Clear chart
	(Color bar standard picture frame)
Filter	Filter C14 for color temperature
	correction
Measurement Point	DDS display of LCD or TV monitor
Measuring Instrument	(Note 1)
Adjustment Page	F
Adjustment Address	3A, 3B
Specified Value	R ratio: 2B40 to 2BC0
	B ratio: 5E40 to 5EC0

**Note 1:** Perform "Auto White Balance Standard Data Input" before this adjustment.

**Note 2:** The right four digits of the display data at the right bottom side of the LCD and TV monitor is the object data.

00 <u>XXXX</u>	
	→ Object data
	- Object data

#### Switch setting:

1) NIGHT SHOT switch...... OFF

#### Adjusting method:

- 1) Place the C14 filter for color temperature correction on the lens.
- 2) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 11, and set data: 02, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 2, address: 01, and set data: 3F, and press the PAUSE button of the adjusting remote commander.
- 5) Select page: 0, address: 03, and set data: 04.
- 6) Select page: F, address: 3A, and change the data, and adjust the average value of the DDS display data(Note 2) to the R ratio specified value.
- 7) Press the PAUSE button of the adjusting remote commander.
- 8) Select page: 0, address: 03, and set data: 05.
- 9) Select page: F, address: 3B, and change the data, and adjust the average value of the DDS display data(Note 2) to the B ratio specified value.
- 10) Press the PAUSE button of the adjusting remote commander.

- 1) Select page: D, address: 11, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 0, address: 03, and set data: 00.

#### 11. White Balance Check

Subject	Clear chart	
	(Color bar standard picture frame)	
Filter	Filter C14 for color temperature	
	correction	
	ND filter 1.0 and 0.3	
Measurement Point	video output terminal	
Measuring Instrument	Vectorscope	
Specified Value	Fig. 5-1-11. A to C	

#### Switch setting:

1) NIGHT SHOT switch......OFF

#### Checking method:

- 1) Check that the lens is not covered with either filter.
- 2) Select page: 2, address: 01, set data: 0F, and press the PAUSE button of the adjusting remote commander.
- 3) Check that the center of the white luminance point is within the circle shown Fig. 5-1-11.A.
- 4) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 5) Select page: 2, address: 01, set data: 23, and press the PAUSE button of the adjusting remote commander.
- 6) Place the C14 filter on the lens.
- 7) Check that the center of the white luminance point settles in the circle shown Fig. 5-1-11.B.
- 8) Remove the C14 filter, and place the ND filter 1.3 (1.0 + 0.3) on the lens.
- 9) Check that the white luminance point stopped moving, and then remove the ND filter 1.3.
- 10) Check that the center of the white luminance point settles within the circle shown Fig. 5-1-11.C.

#### Processing after Completing Adjustments

1) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjusting remote commander.

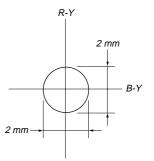


Fig.5-1-11. A

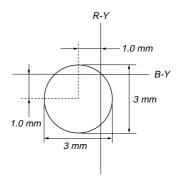


Fig.5-1-11. B

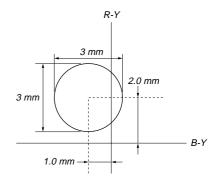


Fig.5-1-11. C

## 12. Angular Velocity Sensor Sensitivity Check (CCD-TR716/TRV43/TRV46/TRV46PK)

- This adjustment is performed only when replacing the angular velocity sensor.
  - Although this adjustment need not be performed when the circuit is damaged, etc., check the operations.
- Note down the sensitivity displayed on the angular velocity sensor
  of the repair parts. At this time, note down also to which board it
  was attached to.

Be sure to check because if attached incorrectly, the screen will vibrate up and down or left and right during hand-shake correction operations.

Precautions on the Parts Replacement

There are two types of repair parts.

Type A: ENC03EA or ENC 03JA Type B: ENC03EB or ENC 03JB

Replace the broken sensor with a same type sensor. If replace with other parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, re-adjust according to the adjusting method after replacement.

#### Precautions on Angular Velocity Sensor

The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.

Page	Address	Data
F	43	58
F	44	5E

**Note:** The sensor sensitivity of SE451 and SE452 of the SE-80/81 board is written only on the repair parts.

## 1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT

### (CCD-TR416/TR416PK/TR516/TR516PK/TR716)

**Note 1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

**Note 2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.

## [Adjusting connector]

Most of the measuring points for adjusting the viewfinder system are concentrated in CN910 of the VC-215 board.

Connect the measuring instruments via the CPC-7 jig (J-6082-382-A)

The following table shows the Pin No. and signal name of CN910.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

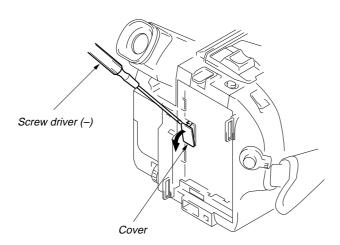


Fig.5-1-12

#### 1. EVF Initial Data Input

Mode	VTR stop
Signal	No signal
Adjustment Page	Е
Adjusting Address	C2 to CD

#### Adjusting method:

1) Select page: 0, address: 01, and set data: 01.

2) Select page: E, and input the data in the following table.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

3) Select page: 0, address: 01, and set data: 00.

		,
Address	Data	Remark
C2	В0	VCO adjustment
C3	80	Bright adjustment
C4	77	Contrast adjustment
C5	80	White balance adjustment
C6	80	White balance adjustment
C7	68	Fixed value
C8	50	Fixed value
C9	F8	Fixed value
CA	A8	Fixed value
СВ	3C	Fixed value
CC	В0	Backlight Consumption
		Current Adjustment
CD	70	Fixed value

#### 2. VCO Adjustment (VF-119 board)

Set the VCO free-run frequency. If deviated, the EVF screen will be blurred.

Mode	VTR stop
Signal	No signal
Measurement point	Pin (5) of CN910 (VCO) on VC-215
	board
Measuring instrument	Oscilloscope (DC range)
Adjustment page	Е
Adjustment address	C2
Specified value	$A = 1.8 \pm 0.1 \text{Vdc}$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Check the GND level of the oscilloscope.
- 5) Select page: E, address: C2, change the data and set the VCO output voltage (A) to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

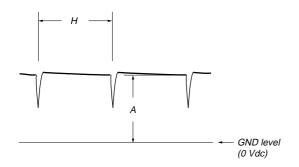


Fig. 5-1-13.

#### 3. Bright Adjustment (VF-119 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin 6 of CN910 (EVF VG) on VC-215
	board
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	C3
Specified value	$A = 7.2 \pm 0.1 \text{ V}$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: E, address: C3, change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

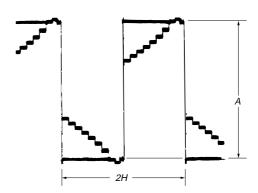


Fig. 5-1-14.

#### 4. Contrast Adjustment (VF-119 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin 6 of CN910 (EVF VG) on
	VC-215 board
Measuring Instrument	Oscilloscope
Adjustment Page	E
Adjustment Address	C4
Specified Value	$A = 2.1 \pm 0.1 V$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- Select page: E, address: C4, change the data and set the voltage
   (A) between the 7 step peak and the pedestal to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

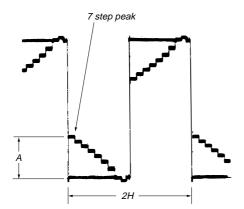


Fig. 5-1-15.

## 5. Backlight Consumption Current Adjustment (VF-120 board)

Set the backlight luminance and color temperature. If deviated, the image may become dark or bright.

Mode	VTR stop
Signal	No signal
Measurement Point + Probe: Pin (4) of CN910	
	(EVF BL 4.75V) on VC-215 board
	– Probe: Pin 13 of CN910 (EVF BL)
	on VC-215 board
Measuring Instrument	Digital voltmeter
Adjustment Page	Е
Adjustment Address	CC
Specified Value	$A = 21.0 \pm 1.0 \text{ mVdc}$

**Note:** Adjust 30 seconds after running on the power supply. Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: E, address: CC, change the data and set the voltage difference (A) between Pin (4) of CN910 (EVF BL 4.75V) and Pin (3) of CN910 (EVF BL) to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

#### 6. White Balance Adjustment (VF-119 board)

Correct the white balance.

If deviated, the reproduction of the EVF screen may degenerate.

Mode	VTR stop
Signal	No signal
Measurement Point	Check on EVF screen
Measuring Instrument	
Adjustment Page	E
Adjustment Address	C5, C6
Specified Value	The EVF screen should not be colored.

Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 51, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 03.
- 4) Select page: E, address: C5 and C6, set the data to the initial value.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

Address	C5	C6
Data	80	80

Check that the LCD screen is not colored. If colored, change the data of page: E, address: C5 and C6 so that the EVF screen is not colored.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

- 6) Select page: 2, address: 7D, and set data: 00.
- 7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

## 1-5. MONOCHROME ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENTS

Note: CCD-TR315

CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/


TRV46/TRV46PK

#### 1-5-1. Horizontal Slant Check

Mode	Playback
Signal	Alighment tape:
	For checking operations
	(WR5-5NSP)
	Monoscope section
Specified Value	± 1.5 °

#### Adjusting method:

- 1) Adjust RV904 (BRIGHT) (VF-99 board) so that the CRT can be seen easily and clearly.
- 2) Check that the difference between the horizontal line and the tilt of the black mask satisfies the specified value.

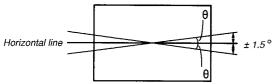

Specified value : The image should be within  $\pm$  1.5  $^{\circ}$  of the horizontal line.

Fig. 5-1-16.

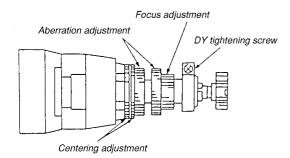


Fig. 5-1-17.


#### 1-5-2. Centering Adjustment

Mode	Playback
Signal	Alighment tape :
	For checking operations
	(WR5-5NSP)
	Monoscope section
Specified Value	± 4%

#### Adjusting method:

1) Use the centering adjustment ring and adjust so that the left, right, top, and bottom sides of the display are uniform. (Refer to Fig. 5-1-17.)

**Note:** As the centering position changes due to earth magnetism, rotate it 360° in the horizontal direction, and adjust with the center section of the modifying position.

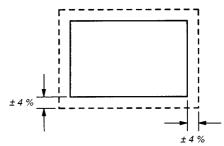

Adjustment value : ± 4 %

Fig. 5-1-18.


#### 1-5-3. Focus Adjustment

Mode	Playback	
Signal	Alighment tape:	
	For checking operations	
	(WR5-5NSP)	
	Monoscope section	

#### Adjusting method:

1) Adjust the focus ring to obtain the optimum focus. (Refer to Fig. 5-1-17.)

### VF-99 BOARD (SIDE A)

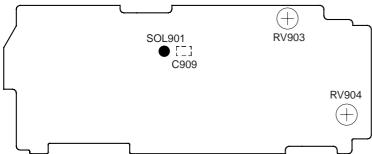

#### 1-5-4. Aberration Adjustment

Mode	VTR stop
Signal	Dot pattern
Specified Value	b1 ≤2 • a1
	b2≦0.8 • a2

#### Adjusting method:

- 1) Adjust the aberration adjustment ring so that the tracing of the dot satisfies the specified value.
- 2) If the centering becomes displaced here, perform the centering adjustment from the beginning again.



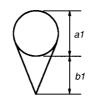



Fig. 5-1-19.

## 1-5-5. Horizontal Amplitude Adjustment (VF-99 board)

Mode	Playback	
Signal	Alighment tape :	
	For checking operations	
	(WR5-5NSP)	
	Monoscope section	
Adjusting Element	C909 (SOL901)	
Specified Value	± 1.5 °	

#### Adjusting method:

- 1) Rotate RV903, and adjust the top and bottom sides of the monoscope image to the top and bottom edges of the display.
- 2) Rotate RV904 so that the brightness is the normal level.
- 3) Solder or unsolder SOL901 pattern of the H size adjustment capacitor (C909) to "short" or "open", so that the horizontal direction over scan becomes  $14 \pm 6\%$  (Left and right totals).

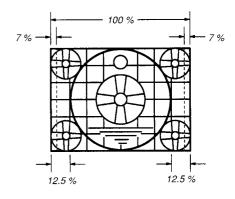

SOL901	Size H
Open	Small
Short	Big

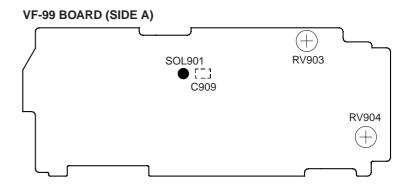


Fig. 5-1-20.

## 1-5-6. Vertical Amplitude Adjustment (VF-99 board)

Mode	Playback
Signal	Alighment tape :
	For checking operations
	(WR5-5NSP)
	Monoscope section
Adjusting Element	RV903
Specified Value	10 ± 3%

#### Adjusting method:

1) Adjust RV903 so that the vertical direction over scan becomes  $10 \pm 3\%$  (Top and bottom totals).

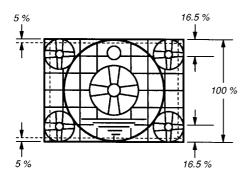


Fig. 5-1-21.

#### 1-5-7. Brightness Adjustments (VF-99 board)

Mode	Playback
Signal	Alighment tape:
	For checking operations
	(WR5-5NSP)
	Monoscope section
Specified Value	RV904


#### Adjusting method:

 Rotate RV904, and adjust so that the bright/dark sections of the gray scale are displayed correctly. (The bright section should be unsatisfactory till the cross hatch appears vague in the monoscope circle. The dark section should be unsatisfactory till the darkest section and the second darkest section of the gray scale cannot be differentiated.)

# 1-5-8. Horizontal Amplitude, Vertical Amplitude, Focus Check

"1-4-5. Horizontal Amplitude Adjustment" and "1-4-6. Vertical Amplitude Adjustment" should both satisfy the specified values. If not, perform the adjustments from the beginning again. In this case, perform "1-4-7. Brightness, Contrast Adjustments" again. Moreover, check the focus, and if it found to be vague, perform "1-4-3. Focus Adjustment" and "1-4-4. Aberration Adjustment".

#### VF-99 BOARD (SIDE A)

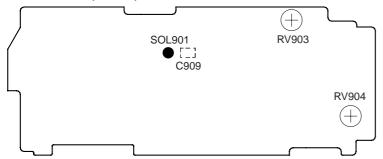

#### 1-6. LCD SYSTEM ADJUSTMENT (TRV series)

**Note1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

**Note2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.

**Note3:** Set the brightness to the center using the LCD BRIGHT

Note4: LCD model:

PD-107board, Ref. No.5000 series

Note5: LCD model:

CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

#### [Adjusting connector]

Most of the measuring points for adjusting the LCD display are concentrated in the following connector.

CN5501 of the PD-107 board (LCD model)

Connect the measuring instruments via the multi CPC jig (J-6082-311-A)

The following table shows the Pin No. and signal name of the connector.

Pin No.	Signal name	Pin No.	Signal name
1	VB	2	VCO VOLTAGE.
3	VG	4	PANEL COM
5	VR	6	N.C.
7	SYNC / HD	8	H START
9	GND	10	GND

## 1. LCD Initial Data Input

Mode	VTR stop
Signal	Arbitrary
Adjustment Page	Е
Adjustment Address	A5 to A7, B0 to B9, BF, C0, C1, CF,
	D0 to DD

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.

2) Select page: E, and input the data in the following table.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

3) Select page: 0, address: 01, and set data: 00.

Address	Data	Remark
A5	53	Fixed value
A6	96	Fixed value
A7	68	Fixed value
B0	3F	Fixed value
B1	C8	Fixed value
B2	1F	Fixed value
В3	1F	Fixed value
B4	00	Fixed value
B5	00	Fixed value
B6	В0	Fixed value
В7	4E	Fixed value
B8	08	Fixed value
B9	00	Fixed value
BF	80	Fixed value
C0	A4	Fixed value
C1	C9	Fixed value
CF	69	Bright adjustment
D0	7A	Color adjustment
D1	AA	White balance adjustment
D2	9C	White balance adjustment
D3	B1	Contrast adjustment
D4	B1	D range adjustment
D5	94	V-COM adjustment
D6	80	VCO adjustment
D7	80	V-COM level adjustment
D8	80	Fixed value
D9	00	Fixed value
DA	80	Fixed value
DB	52	Fixed value
DC	99	Fixed value
DD	99	Fixed value

#### 2. VCO Adjustment (PD-107 board)

Set the VCO freerun frequency. If deviated, the LCD screen will be blurred.

Mode	VTR stop
Signal	No signal
Measurement point	Pin ② of CN5501 (VCO VOLTAGE)
	of PD-107 board
Measuring instrument	Oscilloscope
Adjustment page	Е
Adjustment address	D6
Specified value	$A = 2.75 \pm 0.02V$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 00.
- Select page: E, address: D6, change the data and set the VCO VOLTAGE (A) to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 0, address: 01, and set data: 00.

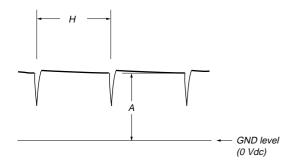


Fig. 5-1-22.

## 3. D range Adjustment (PD-107 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107
	board
	External trigger: Pin 4 of CN5501
	(PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D4
Specified value	$A = 3.62 \pm 0.05V$

**Note1 :** Press the DISPLAY button and erase the screen indictors on the LCD screen.

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 00.
- 4) Select page: E, address: D4, change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 0, address: 01, and set data: 00.

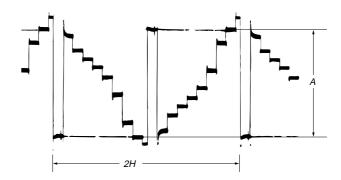


Fig. 5-1-23.

#### 4. Bright Adjustment (PD-107 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107
	board
	External trigger: Pin 4 of CN5501
	(PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	Е
Adjustment address	CF
Specified value	$A = 1.94 \pm 0.05V$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 40.
- 4) Select page: E, address: CF, change the data and set the voltage (A) between the pedestal and white to the specified value. (The data of address: CF should be "41" to "BF".)
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 2, address: 7D, and set data: 00.
- 8) Select page: 0, address: 01, and set data: 00.

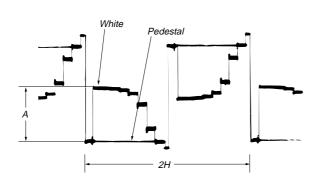


Fig. 5-1-24.

#### 5. Contrast Adjustment (PD-107 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107
	board
	External trigger: Pin 4 of CN5501
	(PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	Е
Adjustment address	D3
Specified value	$A = 3.52 \pm 0.07V$

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 00.
- Select page: E, address: D3, change the data and set the voltage (A) between the pedestal (0 IRE) and 100 IRE to the specified value
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 0, address: 01, and set data: 00.

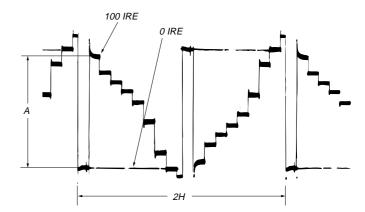


Fig. 5-1-25.

#### 6. V-COM Adjustment (PD-107 board)

Set the common electrode drive signal level of LCD to the specified value.

Mode	VTR stop
Signal	No signal
Measurement point	Pin <b>4</b> of CN5501
	(PANEL COM) of PD-107 board
Measuring instrument	Oscilloscope
Adjustment page	E
Adjustment address	D5
Specified value	$A = 6.50 \pm 0.05V$

**Note1 :** Perform "Bright Adjustment" and "Contrast Adjustment" before this adjustment.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 55, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 00.
- 4) Select page: E, address: D5, change the data and set the PANEL COM signal level (A) to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 0, address: 01, and set data: 00.

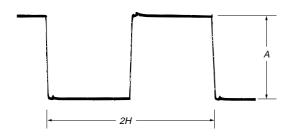


Fig. 5-1-26.

#### 7. Color Adjustment (PD-107 board)

Set the color saturation to the standard value. If deviated, the color will be to dark or light.

Mode	VTR stop
Signal	No signal
Measurement point	Pin ③ of CN5501 (VG) of PD-107
	board
	External trigger: Pin 4 of CN5501
	(PANEL COM)
Measuring instrument	Oscilloscope
Adjustment page	Е
Adjustment address	D0
Specified value	$A = 0.07 \pm 0.05V$

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 57, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 20.
- 4) Select page: E, address: D0, change the data and set the voltage (A) between the green and white to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 2, address: 7D, and set data: 00.
- 8) Select page: 0, address: 01, and set data: 00.

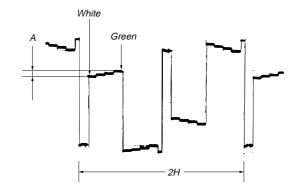


Fig. 5-1-27.

#### 8. V-COM Adjustment (PD-107 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.

If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

Mode	VTR stop
Signal	No signal
Measurement point	Check on LCD display
Measuring instrument	
Adjustment page	Е
Adjustment address	D7
Specified value	The brightness difference between the
	section (A) and section (B) is minimum.

**Note1 :** Perform "Bright Adjustment" and "Contrast Adjustment" before this adjustment.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 51, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 87.
- 4) Select page: E, address: D7, change the data so that the brightness of the section A and that of the section B is equal.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 2, address: 7D, and set data: 00.
- 8) Select page: 0, address: 01, and set data: 00.

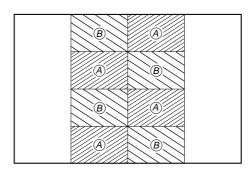


Fig. 5-1-28.

#### 9. White Balance Adjustment (PD-107 board)

Correct the white balance.

If deviated, the LCD screen color cannot be reproduced.

Mode	VTR stop
Signal	No signal
Measurement point	Check on LCD display
Measuring instrument	
Adjustment page	Е
Adjustment address	D1, D2
Specified value	The LCD screen should not be colored.

**Note1:** Check the white balance only when replacing the following parts. If necessary, adjust them.

- 1. LCD panel
- 2. Light induction plate
- 3. IC5502

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 51, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 7D, and set data: 02.
- 4) Select page: E, address: D1 and D2, and set the data to the initial value.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

Address	Data
D1	94
D2	70

 Check that the LCD screen is not colored. If colored, change the data of page: E, address: D1 and D2 so that the LCD screen is not colored.

**Note:** To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjusting remote commander each time to set the data.

- 6) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: 2, address: 7D, and set data: 00.
- 8) Select page: 0, address: 01, and set data: 00.

#### 5-2. MECHANICAL SECTION ADJUSTMENT

#### **Mechanism Parts Adjustments**

For details on the adjustments and checks of mechanical section and replacements of mechanism parts, refer to the separate volume-"8 mm Video Mechanism Adjustment Manual VII B Mechanism".

#### 2-1. OPERATING WITHOUT A CASSETTE

- Refer to "Section 2 DISASSEMBLY" and supply the power with the cabinet removed. (So that the mechanical deck can be operated.)
- 2) Connect the adjusting remote commander to the LANC terminal.
- 3) Turn on the HOLD switch of the adjusting remote commander.
- 4) Close the cassette compartment without loading a cassette and complete loading.
- 5) Select page: 0, address: 01, and set data: 01.
- 6) Select page: F, address: 2A, and set data: 01, and press the PAUSE button of the adjusting remote commander.
- 7) Select page: D, address: 10, and set data: 10, and press the PAUSE button of the adjusting remote commander.
- 8) Disconnect the power supply of the unit.
  - By carrying out the above procedure, the unit can be operated without loading a cassette.
  - Be sure to carry out "Processing after Operations" after checking the operations.
  - Set the data of page: D, address: 10 to the following if the sensor ineffective mode, forced PLAYER (VTR) power supply ON mode or forced camera power supply ON mode are to be used together.

Forced VTR power supply ON mode	12
Forced camera power supply ON mode	11

#### [Processing after Operations]

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: 2A, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: D, address: 10, and set data: 00, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: 0, address: 01, and set data: 00.
- 5) Disconnect the power supply of the unit.

# 2-2. TAPE PATH ADJUSTMENT

## 1. Preparations for adjustments

- 1) Clean the tape path face (tape guide, drum, capstan shaft, pinch roller).
- $2) \ \ Connect the adjusting remote commander to the LANC terminal.$
- 3) Turn on the HOLD switch of the adjusting remote commander.
- 4) Select page: 0, address: 01, and set data: 01.
- 5) Select page: F, address: 2A, and set data: 04 and press the PAUSE button of the adjusting remote commander.
  - Be sure to perform "Processing after operations" after completing adjustments.

- 6) Connect the oscilloscope.
  - Channel 1: Pin **(6)** of CN910 of VC-215 board External trigger: Pin **(1)** of CN910 of VC-215 board Connect the oscilloscope via the CPC-7 jig (J-6082-382-A).
- 7) Playback the alignment tape for tracking. (WR5-1NP)
- 8) Check that the RF waveform of the oscilloscope is flat at both the entrance and the exit.
  - If not flat, perform necessary adjustment according to the separate "8 mm Video Mechanical Adjustment Manual VII (B Mechanism)".
- 9) Perform "Processing after operations", after completing adjustments.

#### CN910 of VC-215 board

#### [Processing after operations]

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

- Connect the adjusting remote commander, and turn on the HOLD switch.
- 2) Select page: 0, address: 01, and set data: 01.
- 3) Select page: F, address: 2A, and set data: 00.
- 4) Press the PAUSE buttonA of the adjusting remote commander.
- 5) Select page: 0, address: 01, and set data: 00.
- 6) Remove the power supply from the unit.



Fig. 5-2-1.

#### 5-3. VIDEO SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 5-60.

#### 3-1. PREPARATIONS BEFORE ADJUSTMENT

The following adjusting instruments are used for adjusting the video section.

#### 3-1-1. Equipments to be Used

- 1) TV monitor
- Oscilloscope: 2 phenomena, band 30 MHz or wider, with delay mode. (Use a 10:1 probe unless specified otherwise.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuater
- 10) Regulated power supply
- 11) Alignment tape
  - For tracking adjustment (WR5-1NP)

Part Code: 8-967-995-02

• For video frequency characteristics adjustment

(WR5-7NE) Part Code: 8-967-995-13

• For checking Standard 8 mode operations

For LP (WR5-4NL)

Part Code: 8-967-995-51

For SP (WR5-5NSP)

Part Code: 8-967-995-42

**Note:** The following alignment tapes can also be used.

WR5-4NSP (8-967-995-41)

• For checking Hi8 mode operations

For SP (WR5-8NSE)

Part Code: 8-967-995-43

For LP (WR5-8NLE)

Part Code: 8-967-995-52

• For checking AFM stereo operations (WR5-9NS)

Part Code: 8-967-995-23

For checking BPF adjustment (WR5-11NS)

Part Code: 8-967-995-71

- 12) Remote commander for adjustment (J-6082-053-B)
- 13) CPC-7 jig Part Code: J-6082-382-A

Note: Connect the adjusting remote commander to the LANC jack, and set the HOLD switch to the "ADJ" side, or press the battery switch of the battery terminal using adhesive tape, etc.

- 14) Power code Part Code: J-6082-223-A
- 15) AFM DEV jig (J-6082-312-A)
- 16) IR Receiving jig (J-6082-383-A)
- 17) Extension cable (48P, 0.8mm) (J-6082-188-A)

#### 3-1-2. Precautions on Adjusting

 The adjustments of this unit are performed in the VTR mode or camera mode.

To set to the VTR mode, set the power switch to "VTR" or set the "Forced VTR Power ON mode" using the adjusting remote commander (Note 1).

To set to the Camera mode, set the power switch to "CAMERA" or set the "Forced Camera Power ON mode" using the adjusting remote commander (Note 2).

After completing adjustments, be sure to exit the "Forced VTR Power ON Mode" or "Forced Camera Power ON Mode". (Note 3)

- 2) By setting the "Forced VTR Power ON mode" or "Forced Camera Power ON mode", the video section can be operate even if even if the front panel block (MA-345/346 board, power switch, microphone unit) has been removed. When removing the front panel block disconnect the following connector.
  - 1. VC-215 board CN916 (18P 0.5mm)
- The lens block (CD-210/211 board) need not be connected except during battery end adjustment. To remove, disconnect the following connectors.
  - 1. VC-215 board CN501 (16P, 0.5mm)
  - 2. VC-215 board CN551 (23P, 0.5mm)
- 4) The video light model need not be assembled. If removing it. disconnect the following connect.
  - 1. VC-215 board CN909 (4P 0.8mm)
- 5) Cabinet (R) ( Camera function switch (CF-60/61board), LCD block, viewfinder) need not be connected. But removing the cabinet (R) (removing the VC-215 board CN911) means removing the lithium 3V power supply (CF-60/61 board), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and data on the history use. (Refer to the "Service Mode" for the data on the history use.) To remove the cabinet (R), disconnect the following connectors.
  - 1. VC-215 board CN911 (45P, 0.5mm)
  - 2. DD-117 board CN933 (10P, 1.0mm)

# Note 1: Setting the "Forced VTR Power ON" mode (VTR mode)

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjusting remote commander.

The above procedure will enable the VTR power to be turned on with the front panel block removed.

After completing adjustments, be sure to exit the "Forced VTR Power ON mode".

# **Note 2:** Setting the "Forced Camera Power ON" mode (Camera mode)

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjusting remote commander.

The above procedure will enable the camera power to be turned on with the front panel block removed. After completing adjustments, be sure to exit the "Forced Camera Power ON mode".

# **Note 3:** Exiting the "Forced Power ON" mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

#### 3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated at VC-215 board CN910. Connect the measuring instruments via the CPC-7 jig (J-6082-382-A). The following table lists the pin numbers and signal names of CN910.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

Table 5-3-1.

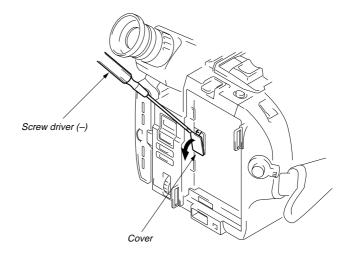


Fig. 5-3-1.

#### 3-1-4. Connecting the Equipments

Connect the measuring instruments as shown in Fig. 5-3-2 and perform the adjustments.

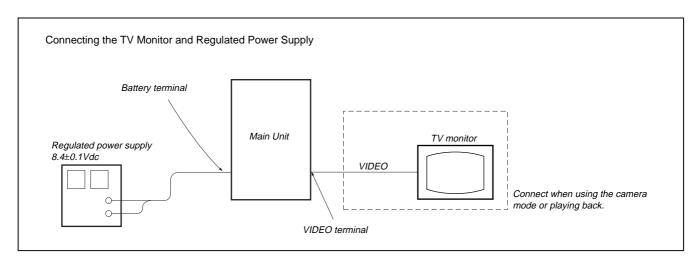


Fig. 5-3-2.

#### 3-1-5. Alignment Tape

The following table lists alignment tapes which are available. Use the tape specified in the signal column for each adjustment. If the type of tape to be used for checking operations is not specified, use whichever type.

Name	Record -ing mode	Tape type	Tape speed	Usage
Tracking WR5-1NP	Standard8	MP	SP	Tape path adjustment Switching position adjustment
Video frequency characteristics WR5-7NE	Hi8	ME	SP	Frequency characteristics adjustment
Operation check (SP mode) WR5-5NSP	Standard8	MP	SP	
Operation check (SP mode) WR5-8NSE	Hi8	ME	SP	
Operation check (LP mode) WR5-4NL	Standard8	MP	LP	Checking operations
Operation check (LP mode) WR5-8NLE	Hi8	ME	LP	
AFM stereo Operation check WR5-9NS	Standard8	MP	SP	AFM stereo Checking operations
BPF adjustment WR5-11NS	Standard8	MP	SP	BPF adjustment

Tape type

MP ..... Particle type metal tape
ME ..... Evaporated type metal tape

Table 5-3-2.

Fig. 5-3-3. shows the 75% color bar signals recorded on the alignment tape.

**Note:** Measure using the VIDEO terminal (Terminated at 75  $\Omega$ ).

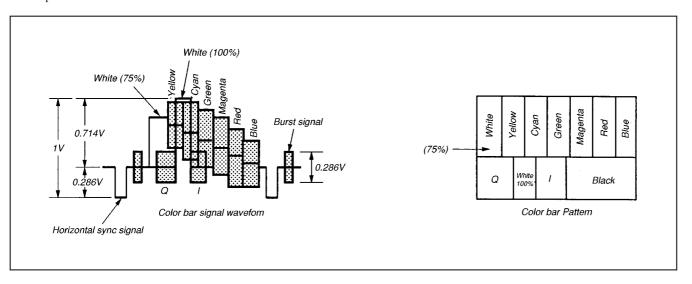


Fig. 5-3-3. Color Bar Signals of the Alignment Tape

#### 3-1-6. Output Level and Impedance

Video output

Phono jack, 1 Vp-p,  $75\Omega$ , unbalanced, sync negative

Audio output

Phono jack, –7.5 dBs, (at load impedance 47 k $\Omega$ ), impedance less than 2.2 k $\Omega$ 

# 3-1-7. Recording Mode (Standard 8/Hi8) switching (Hi8 model)

The record mode (Standard 8/Hi8) of this unit switches as shown in the following table. The playback mode (Standard 8/Hi8) switches automatically according to the recording mode of the tape played back.

Tape Used	Recording Mode	
ME	Hi8	
Hi8 MP	Пю	
MP	Standard 8	

#### 3-1-8. Service Mode

Additional note on adjustment

**Note:** After the completion of the all adjustments, cancell the service mode by either of the following ways.

- Unplug the main power supply and remove the lithium battery. (In this case, date and time and menu setting have been set by users are canceled. Perform resetting.)
- 2) After data on page: D and F is restored, select page: 0, address: 01, and return the data to 00. And when data on page: 3 is changed, return the data to the original condition.

#### 1. Test mode setting

Set/release each test mode. Select page: 0, address: 01, and set data: 01 before setting the data of page D and F.

D E	A 11 OA
Page F	Address 2A

Data	Function
00	Normal
	Test mode
	Various emergency prohibitions and releases
01	Drum emergency, capstan emergency, loading motor
	emergency, reel emergency, tape top and end, DEW
	detection

Page D	Address 10

Data	Function	
00	Normal	
01	Camera power ON	
02	VTR power ON	
03	Camera+VTR power ON	

- \* For page D and F, the data set will be recorded in the nonvolatile memory by pressing the PAUSE button on the adjusting remote commander. Take note that, in this case, the test mode will not be released even if the main power has been turned off (8.4 Vdc).
- \* Be sure to return this address data to 00 after completing adjustments/repairs and press the PAUSE button of the adjusting remote commander. And select page: 0, address: 01, and set data: 00.

## 2. Emergency Memory Address

Page F	Address 10 to 1B

Address	Contents
10	1st EMG code
	Upper: MSW code when the mechanism starts shifting
12	the 1st time
	Lower: MSW code when the 1st emergency occurs
13	Lower: Target MSW code of the 1st emergency occurs
14	2nd EMG code
	Upper: MSW code when the mechanism starts shifting
16	the 2nd time
	Lower: MSW code when the 2nd emergency occurs
17	Lower: Target MSW code of the 2nd emergency occurs
18	Last EMG code
	Upper: MSW code when the mechanism starts shifting
1A	the last time
	Lower: MSW code when the last emergency occurs
1B	Lower: Target MSW code of the last emergency occurs

When there are no emergency, data 00 will be written in the above addresses (10 to 1B). When the first emergency occurs, the data corresponding to the emergency will be written in the address (10 to 13) for this first emergency. In the same way, when the second emergency occurs, the data corresponding to the emergency will be written in the address (14 to 17) for this second emergency.

The data corresponding to the emergency occurring the last will be written in the address (18 to 1B) for this last emergency.

Therefore the data of addresses 18 to 1B are renewed each time an emergency occurs.

**Note 1:** Be sure to rewrite the data of addresses 10 to 1B to 00 after repairs/adjustments.

**Note 2:** When rewriting the data, be sure to press the PAUSE button of the remote commander after setting the data.


#### 2-1. EMG CODE (Emergency Code)

The codes shown in the following table which correspond to errors that occur are recorded in addresses 10, 14, and 18.

Code	Type of Emergency
00	No error
10	Loading motor time-out during load
11	Loading motor time-out during unload
20	T reel emergency (reel slack) during unloading
21	S reel emergency (reel slack) during unloading
22	T reel emergency
23	S reel emergency
30	FG emergency at the start up of the capstan
31	FG emergency during the normal rotation of the capstan
40	FG emergency at the start up of the drum
41	PG emergency at the start up of the drum
42	FG emergency during the normal rotation of the drum
43	PG emergency during the normal rotation of the drum
4.4	Phase emergency during the normal rotation of the
44	drum

#### 2-2. MSW Codes


- The lower parts of the data of addresses 12, 16 and 1A represent the MSW codes (mode switch, mechanism position) when errors occurs.
- The upper parts of the data of addresses 12, 16 and 1A represent, when the mechanism position is to be moved, the MSW codes at the start of movement (when moving the loading motor).
- The lower parts of the data of addresses 13, 17 and 1B represent the MSW codes of the desired movement when the mechanism position is to be moved.

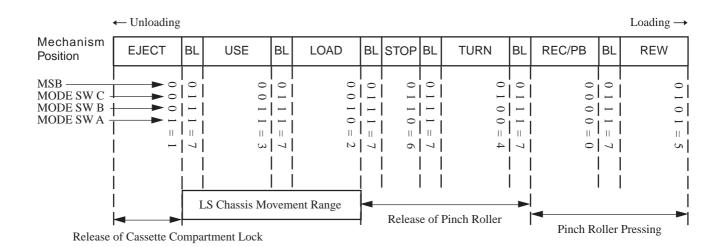

Mechanism	MSW	Contents	
Position	Code		
EJECT	1	Position at which the cassette compartment lock is released. The mechanism will not move any further in the	
EJECI	1	unloading direction.	
BL	7	BLANC code. Between two codes. The mechanism will not be stopped by this code while it is operating.	
USE	3	EJECT completion position. When the cassette is ejected, the mechanism will stop at this position.	
LOAD	2	2 Code during loading/unloading. Code that is used while the LS chassis is moving.	
STOP	6	Normal stop position. The pinch roller separates, the tension regulator returns, and the brakes of both reels	
3101		turn on.	
TURN	4	Position at which is used when the pendulum gear swings from S to T or from T to S.	
RECP/PB	/PB 0	PB, REC, CUE, REV, PAUSE, FF positions.	
KECP/PD		The pinch roller is pressed and tension regulator is on.	
REW	5	REW position. REW are carried at this position.	
KEW	3	The mechanism will not move any further in the loading direction.	

#### 3. Bit value discrimination

Bit values must be discriminated using the display data of the adjusting remote commander for the following items. Use the table below to discriminate if the bit value is "1" or "0".

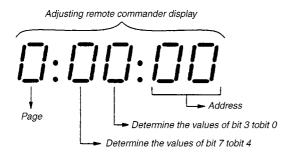

	Remote		Bit v	alue	
	controller	bit 3 or	bit 2 or	bit 1 or	bit 0 or
	display	bit 7	bit 6	bit 5	bit 4
	0	0	0	0	0
	1	0	0	0	1
	2	0	0	1	0
	3	0	0	1	1
	4	0	1	0	0
	5	0	1	0	1
	6	0	1	1	0
	7	0	1	1	1
<b>(A)</b> →	8	1	0	0	0
	9	1	0	0	1
	A (A)	1	0	1	0
	B (b)	1	0	1	1
	C(c)	1	1	0	0
	D (d)	1	1	0	1
<b>B</b> →	E ( <i>E</i> )	1	1	1	0
	F (F)	1	1	1	1

**(Example)** If the remote commander display data is "8E", bit values from bit7 to bit4 can be discriminated from column (a), and those from bit3 to bit0 from column (b).

#### 4. Switch check (1)

Page 3

Bit	Function	When bit value=1	When bit value=0
0	VTR MODE SW	OFF	ON
1	CAM MODE SW	OFF	ON
2	START/STOP SW	OFF	ON
3	EJECT SW	OFF	ON
4	CC DOWN SW	OFF	ON
5			
6			

Address 43

# Using method:

- 1) Select page: 3, address: 43.
- 2) By discriminating the bit value of display data, the state of the switches can be discriminated.

# 5. Switch check (2)

Using method:

- 1) Select page: 3, address: 60 to 66.
- 2) By discriminating the display data, the pressed key can be discriminated.

\ ddraaa	Data							
Address	00 to 0D	0E to 29	2A to 46	47 to 68	69 to 90	91 to BE	BF to EA	EB to FF
60 (AD0: IC604 <b>3</b> )	LASER LINK (FK-8500 S008)	STOP (FK-8500 S001)	FF (FK-8500 S003)		* *	EDIT SEARCH (-) (FK8500 S010)		No key input
61 (AD1: IC604 <b>9</b> )		PAUSE (FK-8500 S002)	REW (FK-8500 S004)	PLAY (FK-8500 S006)				No key input
62 (AD2: IC604 95)		PICTURE EFFECT (CF-60/61 S006)	MENU (CF-60/61 S010)	EXECUTE (CF-60/61 S015)	TIME (CF-60/61 S021)	5sec REC (CF-60/61 S024)	PUSHING REC (CF-60/61 S024)	
63 (AD3: IC604 <b>9</b> 6)	PROGRAM AE SPOT LIGHT (CF-60 S020)	PROGRAM AE PORTRAIT (CF-60 S020)	PROGRAM AE SPORT LESSON (CF-60 S020)	BEACH & SKI	SUNSET &	PROGRAM AE LANDSCAPE (CF-60 S020)		PROGRAM AE AUTO (CF-60 S020)
64 (AD4: IC604 ⑨)			EXPOSURE (CF-60/61 S012)		(MF-8500 S002)	FOCUS INFINITY (MF-8500 S001)	FOCUS AUTO (MF-8500 S001)	FOCUS MANUAL (MF-8500 S001)
65 (AD5: IC604 <b>®</b> )	DATE (CF-60/61 S003)	COUNTER RESET (CF-60/61 S008)	END SEARCH (CF-61 S013)	TITLE (CF-60/61 S018)	DISPLAY (CF-61 S022)			No key input
66 (AD6: IC604 (99)	PROGRAM AE (CF-61 S004)	BRIGHT(+) (PD-107 S5801)	BRIGHT(-) (PD-107 S5802)	VOLUME(+) (PD-107 S5803)	VOLUME(-) (PD-107 S5804)	PANEL REVERSE (FP-642)	PANEL CLOSE (FP-642)	PANEL NORMAL (FP-642)

# 6. Headphone jack check

Page 3	Address 45

Bit	Function	When bit value=1	When bit value=0
1	Headphone jack	Headphone jack is	
		used	

#### Using method:

- 1) Select page: 3, address: 45.
- 2) By discriminating the bit value of display data, the state of the headphone jack can be discriminated.

# 7. Input/output selection check

Bit	Function	When bit value=1	When bit value=0
1			
2			
3			
4	MIC jack		MIC jack is used
5	AUDIO terminal	Monaural	
6	VIDEO terminal	VIDEO terminal is	
		used	

Address 49

# Using method:

Page 3

- 1) Select page: 3, address: 49.
- 2) By discriminating the bit value of display data, the state of the input/output selection can be discriminated.

# 8. LED, LCD (display window) check

Page 3	Address 05	Bit5

# Using method:

- 1) Select page: 3, address: 05, and set the bit value of Bit5 to "1".
- 2) Check that all LED are lit and all segments of LCD (display window) are lit.
- 3) Select page: 3, address: 05, and set the bit value of Bit5 to "0".

#### 9. Record of Use Check

Page 3 Address A2 to AA	
-------------------------	--

Address	Function		Remarks	
			1000th place digit and	
A2		Hour (H)	100th place digit of	
A2	Drum rotation	110u1 (11)	counted time	
	counted time		(decimal digit)	
	(BCD code)		10th place digit and 1st	
A3	(BCD code)	Hour (I	Hour (L)	place digit of counted
			time (decimal digit)	
A4		Minute		
A5	User initial power	Year	After setting the clock, set	
A6	on date	Month	the date of power on next	
A7	(BCD code)	Day	the date of power on next	
A8	Final condensation	Year		
A9	occurrence date	Month		
AA	(BCD code)	Day		

# Using method:

1) The record of use data is displayed at page 3, addresses: A2 to AA.

**Note:** This data will be erased when the coin lithium battery is removed (reset).

#### 3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT

#### 1. Initialization of D, E, F Page Data

If the D, E, F page data is erased due to some reason, perform "1-2. INITIALIZATION OF D, E, F PAGE DATA", of "5-1. CAMERA SECTION ADJUSTMENT".

#### 2. Battery End Adjustment (VC-215 board)

Set the battery end voltage.

If the voltage is incorrect, the life of the battery will shorten. The image at the battery end will also be rough.

Mode	Camera recording
Subject	Arbitrary
Measurement Point	LCD display of the adjusting remote
Measuring Instrument	commander
Adjustment Page	D
Adjustment Address	30 to 34

Note 1: The lens block and cabinet (R) must be connected.

#### Switch setting

1)	AUTO FOCUS	OFF
2)	LCD screen	Closed
3)	NIGHT SHOT	OFF
4)	VIDEO LIGHT	OFF
	(VIDEO LIGHT model)	

#### Connection:

1) Connect the regulated power supply and the digital voltmeter to the battery terminal as shown in Fig. 5-3-4.

# Adjusting method:

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is  $6.1\pm0.1$ Vdc.
- Turn off the power supply.
- 3) Turn on the HOLD switch of the adjusting remote commander.
- 4) Turn on the power supply.
- 5) Load a cassette, and set to the camera recording mode.
- 6) Select page: 0, address: 01, and set data: 01.
- 7) Decrease the output voltage of the regulated power supply so that the digital voltmeter display is 5.30±0.01Vdc.
- 8) Select page: 0, address: FF, data: 00 (section 00)
- Select page: 3, address: 5D, read the data, and this data is named Dref.
- 10) Select page: D, address: 30, set data: Dref, and then press the PAUSE button of the adjusting remote commander.
- 11) Convert Dref to decimal notation, and obtain Dref '. (Refer to Table 5-1-2. "Hexadecimal-decimal conversion table")
- 12) Calculate D<sub>31</sub>', D<sub>32</sub>', D<sub>33</sub>' and D<sub>34</sub>' using following equations (decimal calculation), convert it to a hexadecimal number, and input each adjustment address.

Address: 31 D<sub>31</sub>' = Dref ' + 5 Address: 32 D<sub>32</sub>' = Dref ' + 20 Address: 33 D<sub>33</sub>' = Dref ' + 35 Address: 34 D<sub>34</sub>' = Dref ' + 40

**Note 3:** After setting each data, be sure to press the PAUSE button.

- 13) Select page: 3, address: FO, "read the data", and Select page: D, address: 5F, set data: "read data" and the press the PAUSE button of the adjusting remote commander.
- 14) Select page: 0, address: 01, and set data: 00.

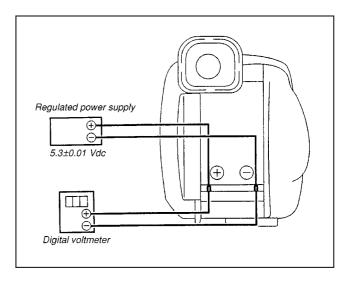


Fig. 5-3-4.

#### 3-3. SERVO SYSTEM ADJUSTMENTS

#### 1. CAP FG Offset Adjustment (VC-215 board)

Improve the capstan servo characteristic. If it is not correct, jitters will increase.

Mode	Camera recording (SP mode)
Subject	Arbitrary
Measurement Point	Pin ② of CN910 (CAP FG)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	69
Specified value	Duty = 50±0.5%

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: 2, address: 01, and set data: 81, and press the PAUSE button of the adjustment remote commander. (to start up automatic CAP FG offset adjustment.)
- 3) Select page: 2, address: 02, and check that the data is "01".
- 4) Check that Duty of CAP FG signal satisfies the specified value. If not, select page: 2, address: 01, set data: 00, and press the PAUSE button, and then, repeat steps 2) to 4).
- 5) Select page: 2, address: 01, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

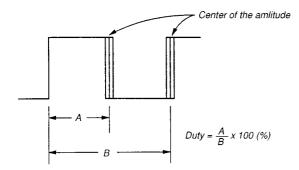


Fig. 5-3-5.

#### 2. RF Switching Position Adjustment (VC-215 Board)

If deviated in this case causes switching noise or jitter on the played back screen.

Mode	Playback
Signal	Alignment tape:
	For tracking adjustment
	WR5-1NP
Measurement Point	CH1: Pin ① of CN910 (RF SWP)
	CH2: Pin <b>(6)</b> of CN910 (PB RF)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	7C (upper digits), 7D (lower digits)
Specified Value	$t1 = 0 \pm 10 \mu sec$

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: 2A, and set data: 20, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: F, address: 7C, change the data and minimize "t1", and then press the PAUSE button of the adjustment remote commander. (Coarse adjustment)
- 4) Select page: F, address: 7D, change the data and adjust so that the switching position (t1) becomes the specified value. (Fine adjustment)
- 5) Press the PAUSE button of the adjustment remote commander.
- Select page: F, address: 2A, and set data: 00, and press the PAUSE button of the adjustment remote commander.
- 7) Select page: 0, address: 01, and set data: 00.

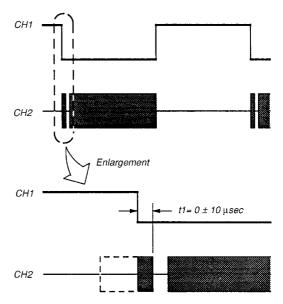


Fig. 5-3-6.

#### 3-4. VIDEO SYSTEM ADJUSTMENTS

Video system adjustments must be performed in the following order.

#### [Adjusting Order]

- 1. 28MHz origin oscillation adjustment
- 2. AFC f0 adjustment
- 3. Filter f0 adjustment
- 4. Y OUT level adjustment
- 5. C OUT level adjustment
- 6. RP filter f0 adjustment
- 7. Hi8 REC Y current adjustment
- 8. Standard RECY current adjustment
- 9. Hi8 REC L level adjustment
- 10. Standard8 REC L level adjustment
- 11. REC C current adjustment

#### 1. 28 MHz Origin Oscillation Adjustment (VC-215 board)

Set the frequency of the clock for synchronization.

If deviated, the synchronization will be disrupted and the color will become inconsistent.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin 66 of IC202 or pin 12 of IC501
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	2C
Specified Value	Pin 66 of IC202:
	f=3579545±17Hz
	Pin 12 of IC501 :
	f=14318181±68Hz

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 2, address: 61, and set data: 30.
- 3) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: F, address: 2C, change the data and set the clock frequency(f) to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 2, address: 61, and set data: 10.
- 7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

#### 2. AFC f0 Adjustment (VC-215 board)

Adjust the pull-in range of the A/D converted clock generator during playback.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin 4 of CN910 (AFC f0)
Measuring Instrument	Digital voltmeter
Adjustment Page	F
Adjustment Address	4A
Specified Value	$A = 2.10 \pm 0.05 \text{Vdc}$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 4D, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: F, address: 4A, change the data and set the DC voltage (A) to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

## 3. Filter f0 Adjustment (VC-215 board)

Minimize the chroma signal residual components during composite video signal input.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin 3 of CN910 (IR VIDEO)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	4D
Specified Value	Minimum residual chroma signal
	components ( $A = Bellow 35mV$ )

#### Switch setting:

LASER LINK ..... ON (Red LED is lit)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 4F, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: F, address: 4D, change the data and minimize the residual chroma signal components (A).
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

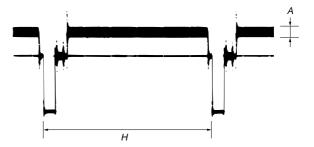


Fig. 5-3-7.

#### 4. Y OUT Level Adjustment (VC-215 board)

Set the Y signal output level.

Mode	VTR stop
Signal	No signal
Measurement Point	VIDEO terminal (75 $\Omega$ terminated )
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	49
Specified Value	$A = 286 \pm 5 \text{mV}$

#### Note 1: Hi8 model

CCD-TR516/TR516PK/TR716

CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK

: Standard8 model

CCD-TR315/TR416/TR416PK

CCD-TRV16/TRV16PK

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 61, and set data: 30, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: F, address: 49, change the data and set the SYNC level (A) to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 2, address: 61, and set data: 10.
- 7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### Hi8 model Standard 8 model

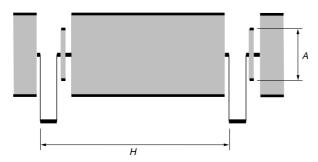


Fig. 5-3-8.

## 5. C OUT Level Adjustment (VC-215 board)

Set the chroma signal output level.

Mode	VTR stop
Signal	No signal
Measurement Point	VIDEO terminal (75 $\Omega$ terminated )
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	4B
Specified Value	$A = 286 \pm 5 \text{mV}$

#### Note 1: Hi8 model

CCD-TR516/TR516PK/TR716

CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK

: Standard8 model

CCD-TR315/TR416/TR416PK

CCD-TRV16/TRV16PK

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: 2, address: 61, and set data: 30, and press the PAUSE button of the adjusting remote commander.
- 4) Select page: F, address: 4B, change the data and set the burst level (A) to the specified value.
- 5) Press the PAUSE button of the adjusting remote commander.
- 6) Select page: 2, address: 61, and set data: 10.
- 7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

#### Hi8 model Standard 8 model

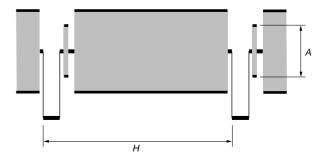


Fig. 5-3-9.


#### 6. RP Filter f0 Adjustment (VC-215 board)

Adjust the LPF of the playback RF amplifier.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	4E
Specified Value	A = Below 10mVp-p

#### Connection:

1) Input a 14.2MHz, 400mVp-p CW signal to Pin ⑦ of CN910 (RF AGC IN).

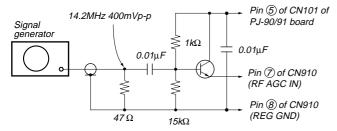

Transistor: General NPN transistor (2SC403. etc)

 $\begin{array}{lll} 47 \, \Omega \; resistor : & 1-249-401-11 \\ 1k \, \Omega \; resistor : & 1-249-417-11 \\ 15k \, \Omega \; resistor : & 1-249-431-11 \\ 0.01 \mu F \; capacitor : & 1-101-004-00 \\ \end{array}$ 

Fig. 5-3-10.

#### Adjusting method:

1) Select page: 0, address: 01, and set data: 01.

- 2) Select page: 3, address: 01, set data: 35, and press the PAUSE button of the adjusting remote commander.
- 3) Only for Standard8 model, select page: D, address: 15, after memorizing the data, set the bit value of bit0 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
- 4) Select page: F, address: 4E, change the data and minimize the 14.2 MHz signal level (A).
- 5) Press the PAUSE button of the adjusting remote commander.
- Select page: D, address: 15, and set the data memorized at step
   and press the PAUSE button of the adjusting remote commander..
- 7) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 8) Select page: 0, address: 01, and set data: 00.

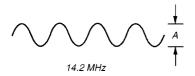


Fig. 5-3-11.

#### 7. Hi8 REC Y Current Adjustment (VC-215 board) CCD-TR516/TR516PK/TR716 CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK

Adjust the Y FM signal recording current.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin 10 of CN910 (REC RF)
Measuring Instrument	Oscilloscope
	(20 MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	53 to 5A
Specified Value	$A = 170 \pm 5 \text{mV}$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
- 3) Select page: D, address: 15, after memorizing the data, set the bit value of bit7 to "0".
- 4) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin 6 of CN935 of DD-117 board and GND with  $4.7k\Omega$  registor for a second.)

4.7kΩ registor : 1-249-425-11

- 5) Insert a tape, set to recording mode.
- 6) Select page: 0, address: 01, and set data: 01.
- Select page: F, address: 5C, after note down the data, set data: FF, and press the PAUSE button of the adjusting remote commander.
- Select page: F, address: 65, after note down the data, set data: 00, and press the PAUSE button of the adjusting remote commander.
- Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
- 10) Select page: F, address: 54, change the data and set the Y signal level (A) to the specified value.
- 11) Press the PAUSE button of the adjusting remote commander.
- 12) Select page: F, address: 54, and read the data (D54).
- 13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

**Note:** After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 57 to 5A.

Address	Data
57	9A
58	80
59	9A
5A	80

- 15) Select page: F, address: 5C, set the data noted down at step 3), press the PAUSE button of the adjusting remote commander.
- 16) Select page: F, address: 65, set the data noted down at step 4), press the PAUSE button of the adjusting remote commander.
- 17) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 18) Select page: 0, address: 01, and set data: 00.
- 19) Select page: 0, address: 01, and set data: 01.
- 20) Select page: D, address: 14, and set the data memorized at step2) of "Preparations only for the model without REC switch".
- 21) Press the PAUSE button of the adjusting remote commander.
- 22) Select page: D, address: 15, and set the data memorized.
- 23) Press the PAUSE button of the adjusting remote commander.
- 24) Select page: 0, address: 01, and set data: 00.

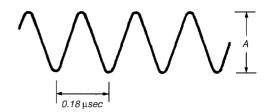


Fig. 5-3-12.

#### Standard8 REC Y Current Adjustment (VC-215 board) CCD-TR315/TR416/TR416PK CCD-TRV16/TRV16PK

Adjust the Y FM signal recording current.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin @ of CN910 (REC RF)
Measuring Instrument	Oscilloscope
	(20 MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	53 to 5A
Specified Value	$A = 170 \pm 5 \text{mV}$

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
- Select page: D, address: 15, after memorizing the data, set the bit value of bit7 to "0".
- 4) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin 6 of CN935 of DD-117 board and GND with  $4.7k\Omega$  registor for a second.)

 $4.7k\Omega$  registor : 1-249-425-11

- 5) Insert a tape, set to recording mode.
- 6) Select page: 0, address: 01, and set data: 01.
- Select page: F, address: 5C, after note down the data, set data: FF, and press the PAUSE button of the adjusting remote commander.
- Select page: F, address: 65, after note down the data, set data: 00, and press the PAUSE button of the adjusting remote commander.
- Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
- 10) Select page: F, address: 54, change the data and set the Y signal level (A) to the specified value.
- 11) Press the PAUSE button of the adjusting remote commander.
- 12) Select page: F, address: 54, and read the data (D54).
- 13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

Address: 53 D53 = D54 Address: 55 D55 = D54 Address: 56 D56 = D54

**Note:** After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 57 to 5A.

Address	Data
57	80
58	80
59	80
5A	80

- 15) Select page: F, address: 5C, set the data noted down at step 3), press the PAUSE button of the adjusting remote commander.
- 16) Select page: F, address: 65, set the data noted down at step 4), press the PAUSE button of the adjusting remote commander.
- 17) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 18) Select page: 0, address: 01, and set data: 00.
- 19) Select page: 0, address: 01, and set data: 01.
- 20) Select page: D, address: 14, and set the data memorized.
- 21) Press the PAUSE button of the adjusting remote commander.
- 22) Select page: D, address: 15, and set the data memorized.
- 23) Press the PAUSE button of the adjusting remote commander.
- 24) Select page: 0, address: 01, and set data: 00.

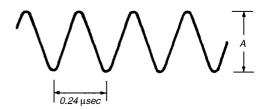


Fig. 5-3-13.

# Hi8 REC L Level Adjustment (VC-215 board) CCD-TR516/TR516PK/TR716 CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK

Set the recording levels of the REC AFM signal and REC ATF signal. If the level is too low, the audio S/N will deteriorated, tracking will not be stable, or SP/LP will not be discriminated properly. If too high, color beets will be produced on the self-recording/playback image.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin @ of CN910 (REC RF)
Measuring Instrument	Oscilloscope
	(20MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	5B to 64
Specified Value	$A = 10.1 \pm 0.6 \text{mV}$

#### Connection:

1) Remove C085 (0.01μF, Pin 66 of IC202).

**Note:** After completing "REC L Level Adjustment" and "REC C Current Adjustment", replace C085 with new parts (1-162-970-11 CERAMIC CHIP 0.01μF 10% 25V).

#### Adjusting method:

- 1) Insert Hi8 ME tape.
- 2) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
- 4) Select page: D, address: 15, after memorizing the data, set the bit value of bit7 to "0".
- 5) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin 6 of CN935 of DD-117 board and GND with  $4.7k\Omega$  registor for a second.)
  - $4.7k\Omega$  registor : 1-249-425-11
- 6) Insert Hi8 ME tape, set to recording mode.
- 7) Select page: 0, address: 01, and set data: 01.
- 8) Select page: F, address: 5B, set data: FF, and press the PAUSE button of the adjusting remote commander.
- 9) Select page: F, address: 65, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 10) Select page: F, address: 5C, change the data and set the REC AFM signal level (A) to the specified value.
- 11) Press the PAUSE button of the adjusting remote commander.
- 12) Select page: F, address: 5C, read the data (D5C).

13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

Address: 5B	$D_{5B} = D_{5C}$
Address: 5D	$D_{5D} = D_{5C}$
Address: 5E	$D_{5E} = D_{5C}$
Address: 5F	$D_{5F} = D_{5C} + 14$
Address: 60	$D_{60} = D_{5C} + 14$
Address: 61	$D_{61} = D_{5C} + 14$
Address: 62	$D_{62} = D_{5C} + 14$

**Note:** After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 63 to 64.

Address	Data
63	7C
64	7C

- 15) Select page: 0, address: 01, and set data: 00.
- 16) Perform "REC C Current Adjustment".
- 17) Select page: 0, address: 01, and set data: 01.
- 18) Select page: D, address: 14, and set the data memorized.
- 19) Press the PAUSE button of the adjusting remote commander.
- 20) Select page: D, address: 15, and set the data memorized at step 4) of "Preparations only for the model without REC switch".
- 21) Press the PAUSE button of the adjusting remote commander.
- 22) Select page: 0, address: 01, and set data: 00.

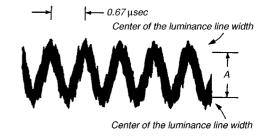


Fig. 5-3-14.

# 10. Standard8 REC L Level Adjustment (VC-215 board) CCD-TR315/TR416/TR416PK CCD-TRV16/TRV16PK

Set the recording levels of the REC AFM signal and REC AFF signal. If the level is too low, the audio S/N will deteriorated, tracking will not be stable, or SP/LP will not be discriminated properly. If too high, color beets will be produced on the self-recording/play-back image.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin @ of CN910 (REC RF)
Measuring Instrument	Oscilloscope
	(20MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	5B to 64
Specified Value	$A = 9.3 \pm 0.5 \text{mV}$

#### Connection:

1) Remove C085 (0.01μF, Pin 16 of IC202).

**Note:** After completing "REC L Level Adjustment" and "REC C Current Adjustment", replace C085 with new parts (1-162-970-11 CERAMIC CHIP 0.01μF 10% 25V).

#### Adjusting method:

- 1) Insert Srandrd8 MP tape.
- 2) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
- 4) Select page: D, address: 15, after memorizing the data, set the bit value of bit7 to "0".
- 5) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin 6 of CN935 of DD-117 board and GND with  $4.7k\Omega$  registor for a second.)

4.7kΩ registor : 1-249-425-11

- 6) Insert Srandrd8 MP tape, set to recording mode.
- 7) Select page: 0, address: 01, and set data: 01.
- 8) Select page: F, address: 5B, set data: FF, and press the PAUSE button of the adjusting remote commander.
- 9) Select page: F, address: 65, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 10) Select page: F, address: 5C, change the data and set the REC AFM signal level (A) to the specified value.
- 11) Press the PAUSE button of the adjusting remote commander.
- 12) Select page: F, address: 5C, read the data (D5C).
- 13) Calculate the adjustment data (hexadecimal) from the following equations (hexadecimal calculation), and input each adjustment address. (Refer to Table 5-1-2. Hexadecimal-Decimal conversion Table.)

**Note:** After setting each data, be sure to press the PAUSE button of the adjusting remote commander.

14) Write the following data in page: F, address: 63 to 64.

Address	Data
63	80
64	80

- 15) Select page: 0, address: 01, and set data: 00.
- 16) Perform "REC C Current Adjustment".
- 17) Select page: 0, address: 01, and set data: 01.
- 18) Select page: D, address: 14, and set the data memorized at step 3) of "Preparations only for the model without REC switch".
- 19) Press the PAUSE button of the adjusting remote commander.
- 20) Select page: D, address: 15, and set the data memorized.
- 21) Press the PAUSE button of the adjusting remote commander.
- 22) Select page: 0, address: 01, and set data: 00.

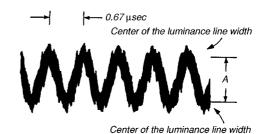


Fig. 5-3-15.

#### 11. REC C Current Adjustment (VC-215 board)

Set the recording current levels of the REC Chroma signal. If it is too low, chroma signal noise in played back picture will increased. If too high, Y signal noises will increase and white modulation noises will be produced.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin @ of CN910 (REC RF)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	65
Specified Value	Hi8 model :
	$A = 34.6 \pm 1.2 \text{mV}$
	Standard8 model:
	$A = 30.0 \pm 1.1 \text{mV}$

Note 1: Hi8 model: CCD-TR516/TR516PK/TR716

CCD-TRV36/TRV36PK/TRV43/TRV46/

TRV46PK

Standard8 model: CCD-TR315/TR416/TR416PK

CCD-TRV16/TRV16PK

#### Connection:

1) Remove C085 (0.01μF, Pin **16** of IC202).

Note: After completing "REC L Level Adjustment" and "REC C Current Adjustment", replace C085 with new parts (1-162-970-11 CERAMIC CHIP 0.01µF 10% 25V).

2) Connect Pin ① of IC001 and GND with a 0.01F capacitor.  $0.01\mu F$  capacitor: 1-101-004-00

- 1) Select page: 0, address: 01, and set data: 01.
- Select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "3. Bit value discrimination" of "3-1-8. Service mode").
- 3) Select page: D, address: 15, after memorizing the data, set the bit value of bit7 to "0".
- 4) Set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin (§) of CN935 of DD-117 board and GND with  $4.7k\Omega$  registor for a second.)  $4.7k\Omega$  registor: 1-249-425-11
- 5) Insert a tape, set to recording mode.
- 6) Select page: 0, address: 01, and set data: 01.
- 7) Select page: 3, address: 01, set data: 41, and press the PAUSE button of the adjusting remote commander.
- 8) Select page: 2, address: 61, and set data: 30.
- 9) Select page: F, address: 65, change the data and set the REC chroma signal level (A) to the specified value.
- 10) Press the PAUSE button of the adjusting remote commander.
- 11) Select page: 2, address: 61, and set data: 10.
- 12) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 13) Select page: 0, address: 01, and set data: 00.

- 14) Select page: 0, address: 01, and set data: 01.
- 15) Select page: D, address: 14, and set the data memorized at step2) of "Preparations only for the model without REC switch".
- 16) Press the PAUSE button of the adjusting remote commander.
- 17) Select page: D, address: 15, and set the data memorized.
- 18) Press the PAUSE button of the adjusting remote commander.
- 19) Select page: 0, address: 01, and set data: 00.

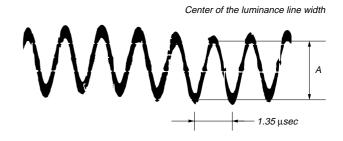


Fig. 5-3-16.

# 3-5. IR TRANSMITTER ADJUSTMENTS (CCD-TRV43/TRV46/TRV46PK)

Adjust using a IR receiver jig (J-6082-383-A).

Switch setting:

LASER LINK ..... (Red LED is lit)

#### 1. IR Video Carrier Frequency Adjustment (VC-215 board)

Mode	Camera standby
Subject	Arbitrary
Measurement Point	Pin 5 of CN003 of IR receiver jig (RF)
	( Or Pin 16 of IC751 of VC-215 board)
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	68
Specified Value	$f = 11.85 \pm 0.05 MHz$

#### Connection of Equipment

Connect the measuring device as shown in the following figure, and adjust.

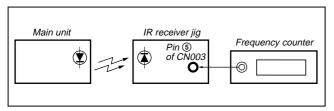


Fig. 5-3-17.

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 37, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: F, address: 68, change the data, and set the video carrier frequency (f) to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

#### 2. IR Video Deviation Adjustment (VC-215 board)

Mode	Camera standby
Subject	Arbitrary
Measurement Point	VIDEO OUT terminal of IR receiver jig
	(Terminated at $75\Omega$ )
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	66
Specified Value	$A = 0.87 \pm 0.04 V$

#### Connection of Equipment

Connect the measuring device as shown in the following figure, and adjust.

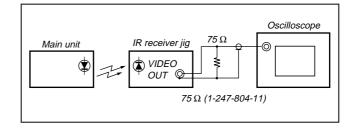


Fig. 5-3-18.

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 39, and press the PAUSE button of the adjusting remote commander.
- 3) Select page: F, address: 66, and change the data, set the video signal amplitude (A) to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjusting remote commander.
- 6) Select page: 0, address: 01, and set data: 00.

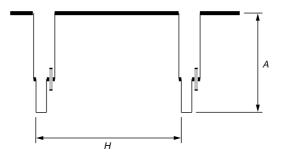


Fig. 5-3-19.

#### 3. IR Audio Deviation Adjustment (VC-215 board)

Mode	VTR recording
Signal	Audio signal :
	400Hz, –7.5dBs : AUDIO terminal
	Video signal:
	Color bar signal: VIDEO terminal
Measurement Point	AUDIO terminal of IR receiver jig
	( Terminated at 47kΩ)
Measuring Instrument	Audio level meter
Adjustment Page	F
Adjustment Address	67
Specified Value	Signal level: -7.5±2.0dBs

#### Connection of Equipment

Connect the measuring device as shown in the following figure, and adjust.

- 1) Select page: 0, address: 01, and set data: 01.
- Connect the audio level meter to the AUDIO terminal of the IR receiver jig.
- 3) Select page: F, address: 67, change the data and set the 400Hz audio signal level to the specified value.
- 4) Press the PAUSE button of the adjusting remote commander.
- 5) Select page: 0, address: 01, and set data: 00.

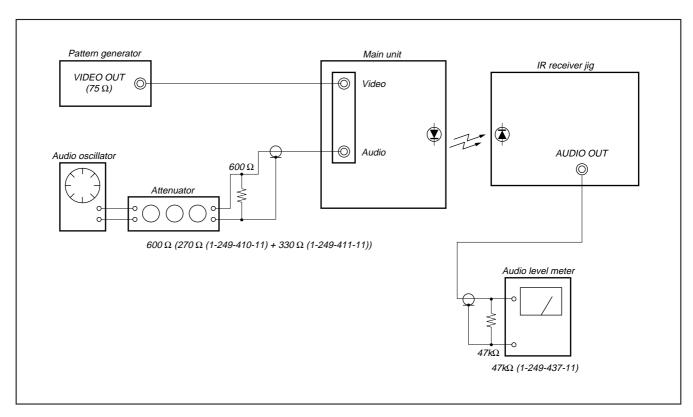


Fig. 5-3-20.

#### 3-6. AUDIO SYSTEM ADJUSTMENT

[Connecting the measuring instruments for the audio] Connect the audio system measuring instruments besides the video system measuring instruments as shown Fig. 5-3-25.

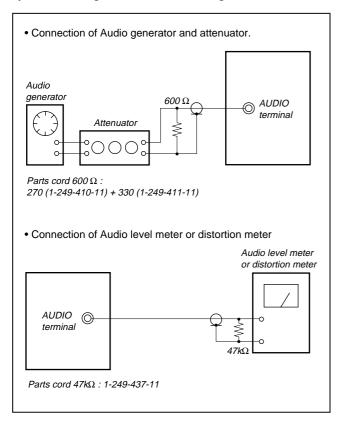


Fig. 5-3-21.

#### 1. 1.5 MHz Deviation Adjustment (VC-215 board)

Adjust to the optimum audio FM signal distortion.

If the adjustment is not correct, its playback level will differ from that of other units.

Mode	Playback				
Signal	Alignment tape:				
	For checking the operation				
	(WR5-5CSP)				
Measurement Point	Audio output terminal				
Measuring Instrument	Audio level meter				
Adjustment Page	F				
Adjustment Address	46				
Specified Value	-7.5±0.5dBs				

#### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: 46, change the data and set the 400Hz signal level to the specified value.
- 3) Press the PAUSE button of the adjusting remote commander.
- 4) Select page: 0, address: 01, and set data: 00.

#### 2. BPF Adjustment (VC-215 board)


Adjust to the optimum audio BPF characteristics of the IC. If the adjustment is not correct, the distortion rate and S/N ratio will worsen.

Mode	Playback				
Signal	Alignment tape:				
	For BPF adjustment				
	(WR5-11CS)				
Measurement Point	Audio output terminal				
Measuring Instrument	distortion meter				
Adjustment Page	F				
Adjustment Address	47				
Specified Value	The distortion rate should be and				
	minimum.				


- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: 47, change the data and minimize the distortion rate.
- 3) Press the PAUSE button of the adjusting remote commander.
- 4) Select page: 0, address: 01, and set data: 00.

# 3-7. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

# VC-215 BOARD (SIDE A)

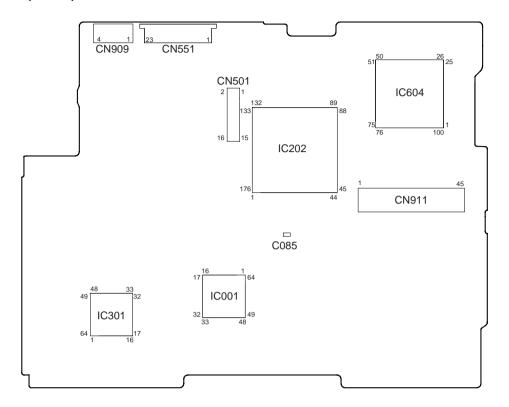

# VC-215 BOARD (SIDE B)

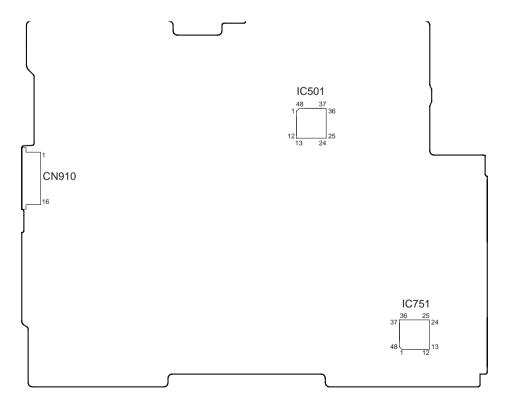

# CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

# SECTION 6 REPAIR PARTS LIST

#### 6-1. EXPLODED VIEWS

#### NOTE:

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
   Canadian model is abbreviated as CND.
   Brazilian model is abbreviated as BR.
   Hong Kong model is abbreviated as HK.
   Taiwan model is abbreviated as TW.

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.


Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

Ne les remplacer que par une piéce portant le numéro spécifié.


#### 6-1-1. REMOTE COMMANDER AND CASSETTE LID ASSEMBLY

Video light model	CCD-TR516/TR516PK/TR716
	CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK
No video light	CCD-TR315/TR416/TR416PK
model	CCD-TRV16/TRV16PK

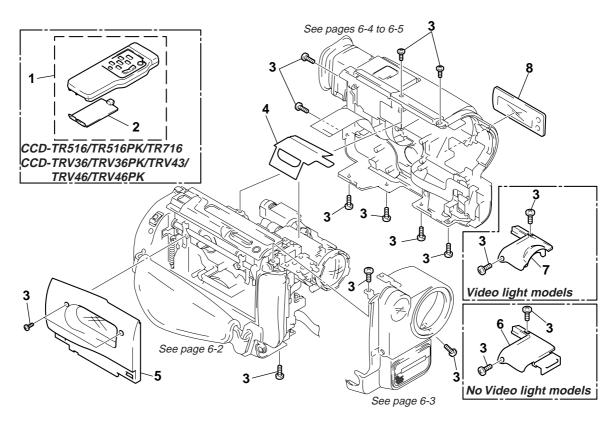

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	Description	<u>Remark</u>
1	1-467-574-21	REMOTE COMMANDER (RMT-708) (TR516/TR516PK/TR716/TRV36		6 7		CABINET (N) (for No video light mod CABINET (LT) (for Video light models	,
2	3-958-131-01	TRV43/TRV46 LID, BATTERY CASE (for RMT-708) (TR516/TR516PK/TR716/TRV36	/TRV36PK/	8	3-053-274-01 3-053-274-21	( //	,
3 * 4	3-962-826-01 3-053-276-01	TRV43/TRV46 SCREW (2 x 4) SHEET (M), LENS INSULATING	/TRV40PK)	8 8 8	3-053-274-91 3-053-275-01 3-053-275-21	WINDOW (910), LCD (TRV46/TRV46	SPK)
5		LID ASSY, CASSETTE 16:US,CND/TR516/TR716/TRV43/TRV4	6:US,CND)	8 8	3-053-275-71 3-053-275-81	WINDOW (910), LCD (TRV43) WINDOW (910), LCD	
5	X-3948-221-1	LID ASSY, CASSETTE (TRV16:US,CND,E,	HK/TRV36)	8	3-054-607-01	(TRV16:US,CND,E,BR,HI WINDOW (900), LCD (TR315)	K/TRV16PK)
5	X-3948-222-1	LID ASSY, CASSETTE (TR315:BR/TR516PK/TRV46:E,HK	/TRV46PK)	8	3-054-642-21	WINDOW (910), LCD (TRV16:TW)	
5		LID ASSY, CASSETTE 5:E/TR416:BR/TR416PK/TRV16:BR,TW	/TRV36PK)				


# 6-1-2. CABINET (L) AND BATTERY PANEL ASSEMBLY

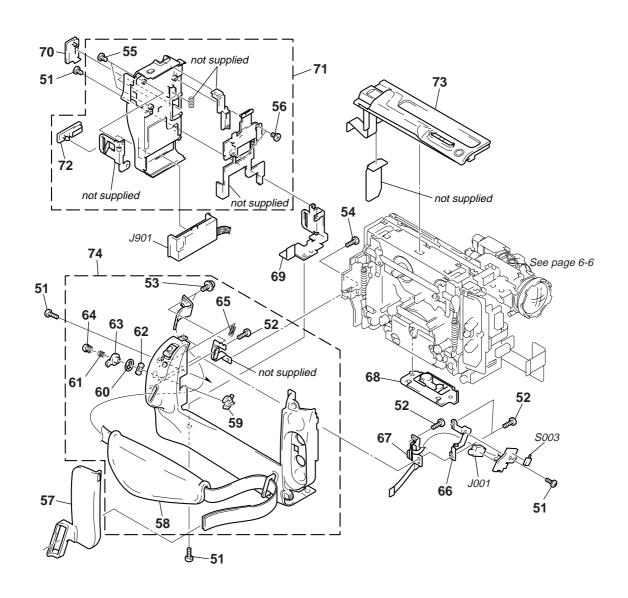

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
51	3-962-826-01	SCREW (2 x 4)		68	3-987-717-01	SCREW, TRIPOD	
52	3-948-339-61	TAPPING		69	3-987-679-01	SHEET METAL (LOWER), STRAP	
53	3-679-362-11	SCREW		70	3-975-752-01	LID (BT), CPC	
54	3-713-786-21	SCREW (M2 x 3)					
55	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2		71	X-3948-171-1	PANEL ASSY, BATTERY	
						(Except TR315:BR/TR416:E	BR/TRV16:BR)
56	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2		71	X-3948-461-1	PANEL ASSY, BATTERY	
57	3-975-522-11	COVER, JACK				(TR315:BR/TR416:E	BR/TRV16:BR)
58	3-052-815-01	BELT (ES), GRIP		72	3-987-656-01	LID, JACK	
59	3-949-192-01	HOLDER, STAND-BY KNOB		73	1-475-617-11	SWITCH BLOCK, CONTROL (FK-85	(00)
60	3-970-854-01	SPRING, STAND-BY				(TR series/TRV16/TRV16PK/TRV	36/TRV36PK)
				73	1-475-617-21	SWITCH BLOCK, CONTROL (FK-85	(00)
61	3-979-642-01	SPRING, COMPRESSION				(TRV43/TRV	46/TRV46PK)
62	3-975-966-01	SHEET METAL (2), SS					
63	3-969-081-01	KNOB, STAND-BY		74	X-3948-207-1	CABINET (L) ASSY (for TRV series	)
64	3-960-566-01	BUTTON, S/S		74	X-3948-208-1	CABINET (L) ASSY (for TR series)	
65	3-302-492-00	SPRING, COMPRESSION		J001	1-565-276-31	JACK, ULTRA SMALL 1P (LANC)	
				J901	1-694-384-11	TERMINAL BOARD, BATTERY	
* 66	3-975-532-01	HOLDER, EL		S003	1-572-688-11	SWITCH, PUSH (1 KEY) (EJECT)	
67	1-475-619-11	SWITCH BLOCK, CONTROL (SS-8500)	)				


# 6-1-3. FRONT PANEL BLOCK ASSEMBLY

Video light model	CCD-TR516/TR516PK/TR716
	CCD-TRV36/TRV36PK/TRV43/TRV46/TRV46PK
No video light	CCD-TR315/TR416/TR416PK
model	CCD-TRV16/TRV16PK

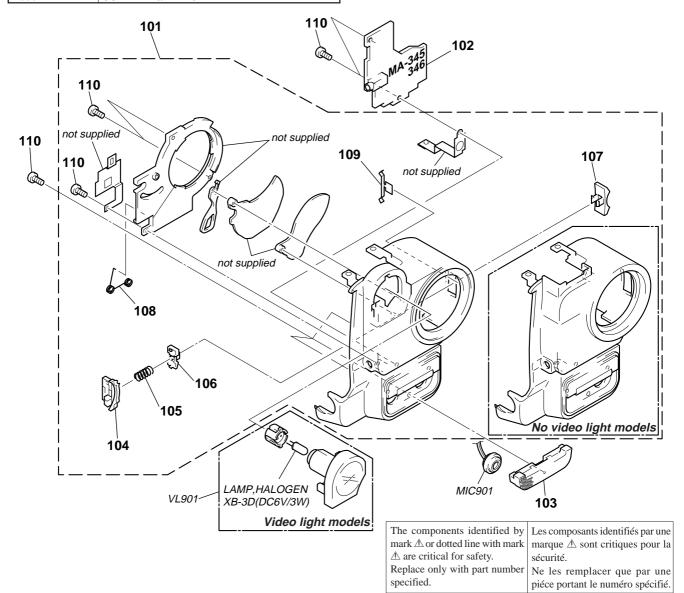


Ref. No.	Part No.	<u>Description</u>	Remark	Ref. No.	Part No.	Description	<u>Remark</u>
101 101		PANEL ASSY, FRONT (TR516/TR516P PANEL ASSY (V), FRONT	PK/TR716)	102	A-7073-823-A	MA-346 (VZB) BOARD, COMPLETE	36/TRV36PK)
101		(TRV43/TRV46/	,	102	A-7073-873-A	MA-346 (VZL) BOARD, COMPLETE	,
101	X-3949-454-1	PANEL ASSY (V), FRONT (TRV36/TRV	/36PK)			(TRV1	16/TRV16PK)
101	X-3949-503-1	PANEL ASSY, FRONT (TR315/TR416/	TR416PK)	* 103	X-3948-493-1	GRILLE ASSY (G), MICROPHONE	
101	X-3949-514-1	PANEL ASSY (V), FRONT					
		(TRV16:US,CND,E,BR,HK/	/TRV16PK)	104	3-987-632-01	HOLDER, P KNOB	
				105	3-973-619-01	SPRING, COMPRESSION	
101	X-3949-527-1	PANEL ASSY (V), FRONT (TRV16:TW)	)	106	3-987-633-01	BUTTON, LOCK	
102	A-7073-782-A	MA-345 (B) BOARD, COMPLETE		107	3-987-631-01	KNOB, P	
		(TR516/TR516	PK/TR716)	108	3-987-882-01	SPRING, TORSION	
102	A-7073-812-A	MA-346 (VIB) BOARD, COMPLETE					
		(TRV43/TRV46/	/TRV46PK)	109	3-987-642-01	SPRING, CLICK	
102	A-7073-820-A	MA-345 (SL) BOARD, COMPLETE	•	110	3-948-339-61	TAPPING	
		(TR315/TR416)	/TR416PK)	MIC901	1-542-312-11	MICROPHONE	
		·	,	<b>△</b> VL901	1-517-760-11	LIGHT, VIDEO (for Video light mode	els)

# 6-1-4. CABINET (R) BLOCK ASSEMBLY (TR series)

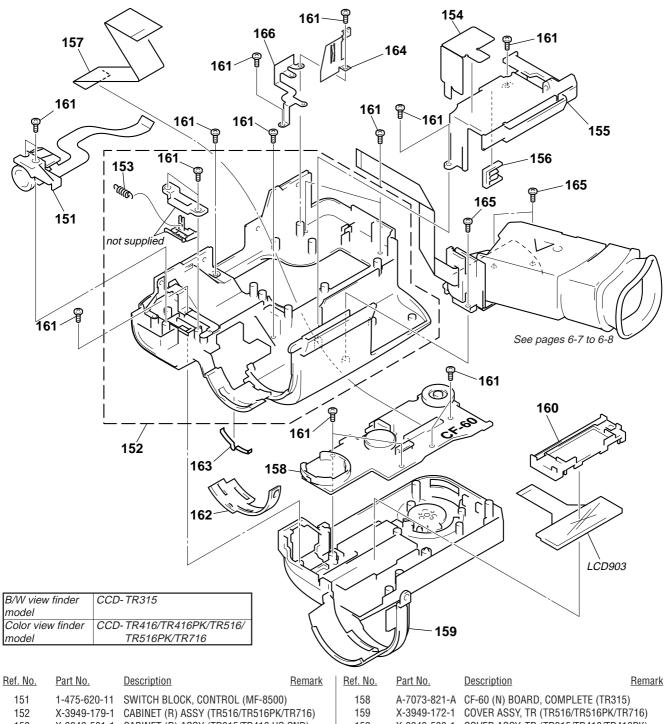

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500	)	158	A-7073-821-A	CF-60 (N) BOARD, COMPLE	ETE (TR315)
152	X-3949-179-1	CABINET (R) ASSY (TR516/TR516PK/	TR716)	159	X-3949-172-1	COVER ASSY, TR (TR516/T	R516PK/TR716)
152	X-3949-501-1	CABINET (R) ASSY (TR315/TR416:US	S,CND)	159	X-3949-500-1	COVER ASSY, TR (TR315/T	R416/TR416PK)
152	X-3949-518-1	CABINET (R) ASSY (TR416:BR/TR416	PK)	160	3-053-195-01	HOLDER, LCD	
153	3-989-121-01	SPRING, TENSION		161	3-948-339-61	TAPPING	
* 154	3-987-842-01	SHEET, VF FLEXIBLE RETAINER		162	3-987-744-01	KNOB, IR	
		(for B/W View find	er models)	163	3-987-739-01	SPRING, LINK PLATE	
155	X-3948-603-1	BASE ASSY, VF		164	9-987-742-01	PLATE (878), GROUND	
156	3-987-783-01	LOCK, TILT		165	3-948-339-01	SCREW, TAPPING	
157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)		* 166	3-053-202-01	SHEET METAL, ELECTROST	TATIC
158	A-7073-783-A	CF-60 (CN) BOARD, COMPLETE					
		(TR416/TR416PK/TR516/TR516	PK/TR716)	LCD903	A-7093-473-A	INDICATION LCD BLOCK AS	SSY

6-1-5. CABINET (R) BLOCK ASSEMBLY (TRV series)

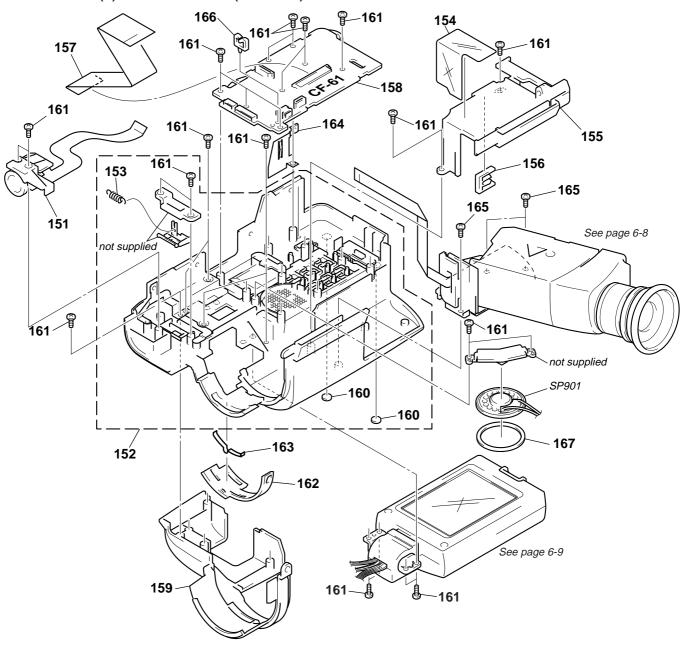


Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500)		159	X-3949-321-1	COVER ASSY, IR (TRV36/TRV36PK)	
152	X-3949-280-1	CABINET (R) ASSY		159	X-3949-404-1	COVER ASSY, IR (TRV16:TW)	
		(TRV36/TRV36PK/TRV43/TRV46/	TRV46PK)	159	X-3949-530-1	COVER ASSY, IR	
152	X-3949-522-1	CABINET (R) ASSY				(TRV16:US,CND,E,BR,Hk	(/TRV16PK)
		(TRV16:US,CND,E,BR,HK/	TRV16PK)	160	3-959-978-02	CUSHION, PANEL	
152	X-3949-528-1	CABINET (R) ASSY (TRV16:TW)	,				
153	3-989-121-01	SPRING, TENSION		161	3-948-339-61	TAPPING	
				162	3-987-744-01	KNOB, IR	
* 154	3-987-842-01	SHEET, VF FLEXIBLE RETAINER		163	3-987-739-01	SPRING, LINK PLATE	
155	X-3948-603-1	BASE ASSY, VF		164	9-987-742-01	PLATE (878), GROUND	
156	3-987-783-01	LOCK, TILT		165	3-948-339-01	SCREW, TAPPING	
157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)					
158	A-7073-811-A	CF-61 BOARD, COMPLETE		* 166	3-053-798-01	CLAMP, HARNESS	
				167	3-965-367-01	SPACER, SP	
159	X-3949-173-1	COVER ASSY, IR (TRV43/TRV46/TRV4	46PK)	SP901	1-504-753-41	SPEAKER (2.8 CM)	

### 6-1-6. MAIN BOARDS BLOCK ASSEMBLY

• • • • • • • • • • • • • • • • • • • •					
Video light model	CCD-TR516/TR516PK/TR716				
	CCD-TRV36/TRV36PK/TRV43/	TRV46/TRV46PK			
No video light	CCD-TR315/TR416/TR416PK				
model	CCD-TRV16/TRV16PK				
			See page	6-10	No video light models
			\ \	0 10	i
			214		_
			-;- \	214	<u></u> 214
not ounnlied		201	'	ه/ /	!
not supplied	204			\ a	215
$\backslash$		\ /	$\bigwedge$		
			214		\.\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
			214	(K) >~(B)	· / \\
a /	205				<u></u>
	00-1171 203		VC-215		
/ \		214	10.21	\-\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	//~ \f\
214		217	] "I"	Jan Strain	
<b>- 17</b> [,`			Į		
Ļ,		13.1 / C	7		
//			્ ાન	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	210
/1 L					
				< :	214 / 🐄
			\\(\tau\)		207
	E C	4 04/ 1/2/			214
			$\times$	/ YK]	
		Man Bar		211	Video light models
208			``_		
208					3 SE452
200				\\M	
		(\S\)	209		
(Y			<b>&gt;</b> \⊿		212
		~ ~ ~2	06		\`x/
	6-13		/ / 1		206
See pages 6-11 to	6-13		~//		
		202			
		202		110	214
		\ <b>\</b>		ľi ·	
		213		[I	
		•		-	
				CCD-TR716	& TRV series
				L	

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
201	A-7094-110-A	VC-215 (ZCB0) BOARD, COMPLETE (TR516	6/TR516PK)	204	A-7073-824-A	DD-117 (VZB0) BOARD, COM	IPLETE (TRV36/TRV36PK)
201	A-7094-111-A	VC-215 (MMCB0) BOARD, COMPLET	,	204	A-7073-858-A	DD-117 (ZLCO) BOARD, COM	'
201		VC-215 (ZSL0) BOARD, COMPLETE (	TR315)				(TR416/TR416PK)
201	A-7094-117-A	VC-215 (VZB0) BOARD, COMPLETE (TRV36	/TRV36PK)	204	A-7073-874-A	DD-117 (VZL0) BOARD, COM	PLETE (TRV16/TRV16PK)
201	A-7094-118-A	VC-215 (VMMIB0) BOARD, COMPLET	TE	205	3-987-711-11	FRAME (A), MD	,
		(TRV43/TRV46		206	3-987-675-01	FRAME (B), MD	
004	A 7004 470 A	VO 045 (71.00) DOADD 0044DLETE		007	A 7070 707 A	\( \text{\tinx}\\ \text{\tint{\text{\tinit}\\ \text{\te\tint{\texi}\tint{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\tint{\text{\tin}	
201	A-7094-179-A	VC-215 (ZLC0) BOARD, COMPLETE	6/TR416PK)	207	A-7073-787-A	VL-21 BOARD, COMPLETE	6/TR516PK/TR716)
201	A-7094-204-A	VC-215 (VZL0) BOARD, COMPLETE	// 111 <del>4</del> 101 10)	207	A-7073-808-A	VL-22 BOARD, COMPLETE	<i>y</i> /11(310) (/11( <i>1</i> 10)
		(TRV16	/TRV16PK)			(TRV36/TRV36PK/TRV43	3/TRV46/TRV46PK)
202	A-7073-788-A	PJ-90 BOARD, COMPLETE (for TR se	ries)	* 208	3-987-716-01	PROTECTOR, LS FLEXIBLE	,
202	A-7073-809-A	PJ-91 (V) BOARD, COMPLETE (for TI	RV series)	209	1-668-957-11	FP-621 FLEXIBLE BOARD	
203	A-7073-789-A	SE-80 (MM) BOARD, COMPLETE (TR	716)	210	1-672-454-11	FP-58 FLEXIBLE BOARD (for	Video light models)
000	A 7070 010 A	CE 04 (MANA) DOADD COMDLETE		211	1 070 450 11	ED EC EL EVIDI E DOADD	
203	A-7073-810-A	SE-81 (VMM) BOARD, COMPLETE	(TD)//CDI/)	211		FP-56 FLEXIBLE BOARD	71C/TD\/ 00rion\
203	A 7072 005 A	(TRV43/TRV46	/TKV46PK)	212	1-668-956-11 3-962-826-01	FP-620 FLEXIBLE BOARD (TF	(7 To/TRV Series)
203	A-7073-023-A	SE-81 (V) BOARD, COMPLETE	(TDV/26DI/)	213	3-713-786-21	SCREW (2 x 4) SCREW (M2 x 3)	
204	A 7072 705 A	(TRV16/TRV16PK/TRV36				/	a light madala)
204	A-7073-785-A	DD-117 (MMCB0) BOARD, COMPLET (TR516/TR516		215	3-987-719-01	BRACKET, SHOE (for No video	o light models)
204	A-7073-806-A	DD-117 (VMMIB0) BOARD, COMPLE		SE451	1-803-041-11	SENSOR, ANGULAR VELOCIT	
		(TRV43/TRV46	,			`	3/TRV46/TRV46PK)
204	A-7073-818-A	DD-117 (ZL0) BOARD, COMPLETE (T	R315)	SE452	1-803-041-21	SENSOR, ANGULAR VELOCIT (TR716/TRV43	TY (PITCH) B/TRV46/TRV46PK)

# 6-1-7. COLOR EVF BLOCK ASSEMBLY (Color View Finder models CCD-TR416/TR416PK/TR516/TR516PK/TR716)

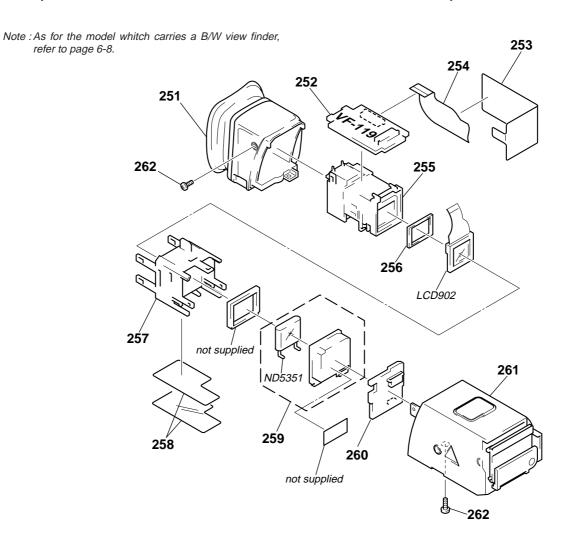

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.

Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
251	X-3948-237-1	CABINET (REAR) (SC) (N) ASSY, EVF		259	A-7073-439-A	LB-54 BOARD, COMPLETE	
252	A-7073-437-A	VF-119 BOARD, COMPLETE		260	A-7073-438-A	VF-120 BOARD, COMPLETE	
253	3-053-224-01	SHEET ,FLEXIBLE RETAINER					
254	1-672-455-11	FP-57 FLEXIBLE BOARD		261	X-3949-175-1	CABINET (FRONT) ASSY, EVF	
255	X-3948-229-1	LENS ASSY (860), VF				(TR516/TR516	SPK/TR716)
				261	X-3949-502-1	CABINET (FRONT) ASSY, EVF (TR416	6/TR416PK)
* 256	3-960-302-11	CUSHION (1), LCD		262	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2	
257	X-3949-174-1	HOLDER ASSY, BL		LCD902	8-753-023-37	LCX024AK-4/5 COMPLE	
258	3-050-905-01	SHEET, VF LIGHT INTERCEPTION		△ ND5351	1-517-315-21	LAMP, FLUORESCENT (0.55 INCH)	

# 6-1-8. B/W EVF BLOCK ASSEMBLY (B/W View Finder models CCD-TR315 and TRV series)

Note: As for the model whitch carries a color view finder, refer to page 6-7.

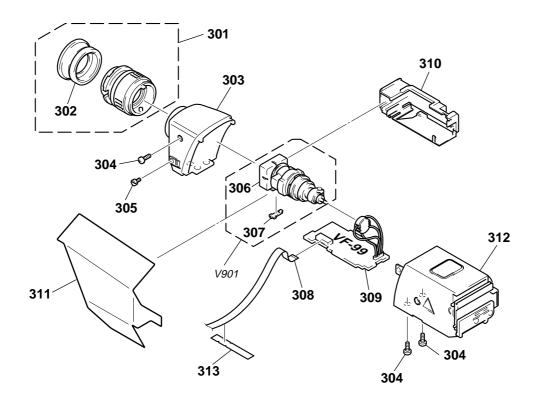

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.


Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
301	X-3949-273-1	FINDER ASSY		* 311	3-989-914-01	SHEET, VF (B/W) ELECTROSTATIC	
302	3-963-391-01	EYE CUP		312	X-3948-364-1	CABINET (FRONT) (845) B ASSY	
303	X-3948-278-1	CABINET (REAR) (878) B ASSY				(TR315/TRV16:US,CND,E,BR,HK	/TRV16PK)
304	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2		312	X-3949-176-1	CABINET (FRONT) ASSY, EVF	
305	3-975-898-01	SCREW (T), F LOCK				(TRV36/TRV36PK/TRV43/TRV46	/TRV46PK)
				312	X-3949-403-1	CABINET (FRONT) ASSY, EVF (TRV16	6:TW)
306	3-977-292-01	MASK, CRT		* 313	3-987-843-01	SHEET, VF FLEXIBLE LOCK	
307	3-725-130-01	COVER, HINGE VOLTAGE					
308	1-783-241-11	CABLE, FLEXIBLE FLAT (FFC-235)		<b> ∆</b> V901	1-452-673-61	CRT ASSY (M01KXX90WB)	
309	A-7066-792-A	VF-99 (VHL4) BOARD, COMPLETE					
310	X-3948-279-1	HOLDER (878) ASSY, CRT					

### 6-1-9. LCD BLOCK ASSEMBLY (TRV series)

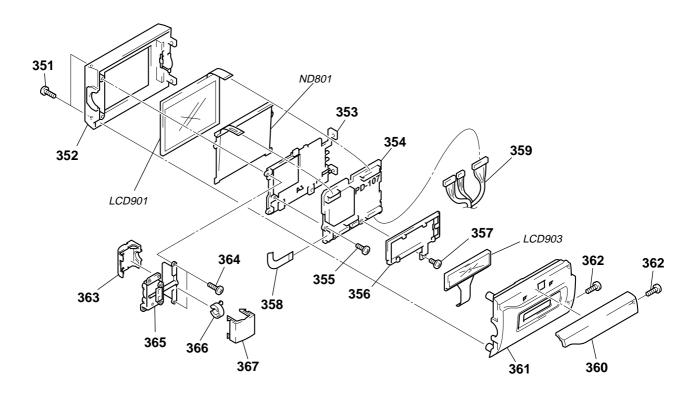

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

Replace only with part number specified.

Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	<u>Remark</u>
351	3-948-339-11	SCREW, TAPPING		361	3-053-203-01	CABINET (C), P (Except TRV16:TW)	
352	X-3948-162-1	CABINET (M) (870) ASSY, P		361	3-053-203-11	CABINET (C), P (TRV16:TW)	
353	3-053-206-01	FRAME (S), PANEL		362	3-962-826-01	SCREW (2 x 4)	
354	A-7073-813-A	PD-107 (S6N) BOARD, COMPLETE		363	3-987-625-01	COVER (M), HINGE	
355	3-713-786-21	SCREW (M2 x 3)					
				364	3-948-339-01	SCREW, TAPPING	
356	3-987-584-11	HOLDER (870), LCD		365	X-3948-169-7	HINGE ASSY	
357	4-981-286-01	SCREW (M1.7 x 2) (IB LOCK)		366	3-987-623-01	CLAMP, HARNESS	
358	1-668-963-21	FP-642 FLEXIBLE BOARD		367	3-503-204-01	COVER (C), HINGE (Except TRV16:TW	/)
359	1-959-271-11	HARNESS (PD-108)		367	3-503-204-11	COVER (C), HINGE (TRV16:TW)	,
360	3-053-205-01	CABINET (Ù), P (TRV16/TRV16PK)					
		, , , ,		LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	
360	3-053-205-11	CABINET (U), P		LCD901	1-803-355-21	MODULE, CRYSTAL INDICATION	
		(TRV36/TRV36PK/TRV43/TRV46/	TRV46PK)	<b>△</b> ND801	1-517-752-11	TUBE, FLUORESCENT, COLD CATHOD	E


### 6-1-10. ZOOM LENS BLOCK ASSEMBLY

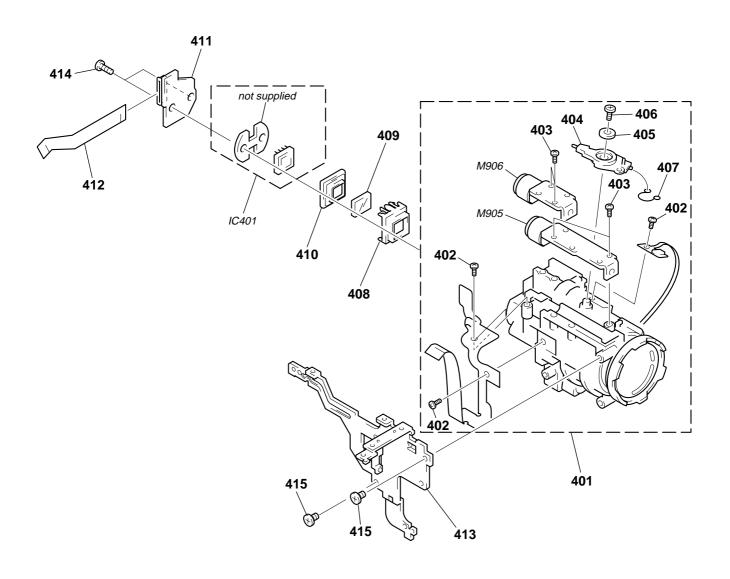

Be sure to read "Note on the CCD Imager replacement" on page 4–8 when changing the CCD imager.


Ref. No.	Part No.	Description	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
401	8-848-722-01	DEVICE, LENS (LSV-600A)		412	1-668-959-11	FP-623 FLEXIBLE BOARD	
402	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2		413	3-987-712-01	FRAME, LENS	
403	3-713-791-41	SCREW (M1.7 x 5), TAPPING PS					
404	3-979-029-01	LEVER, IR		414	3-318-203-11	SCREW (B1.7 x 6), TAPPING	
				415	3-948-339-61	TAPPING	
405	2-327-405-01	WASHER		IC401	A-7030-960-A	CCD BLOCK ASSY (206 Service)	
406	2-623-756-21	SCREW (B1.7 x 5), P				(TR315/TR416/TR416PK/TR516	6/TR516PK/
407	3-979-037-11	SPRING, RETURN				TRV16/TRV16PK/TRV36	S/TRV36PK)
408	3-978-981-11	ADAPTOR (FK), CCD FITTING		IC401	A-7030-961-A	CCD BLOCK ASSY (207 Service)	
409	1-758-133-21	FILTER BLOCK, OPTICAL				(TR716/TRV43/TRV46	6/TRV46PK)
				M905	1-763-047-11	MOTOR, FOCUS STEPPING	,
410	3-953-817-01	RUBBER (F), SEAL					
411	A-7073-786-A	CD-210 (NT) BOARD, COMPLETE (for	TR series)	M906	1-763-046-11	MOTOR, ZOOM STEPPING	
411	A-7073-807-A	CD-211 (NT) BOARD, COMPLETE (for T	RV series)				

### 6-1-11. CASSETTE COMPARTMENT ASSEMBLY

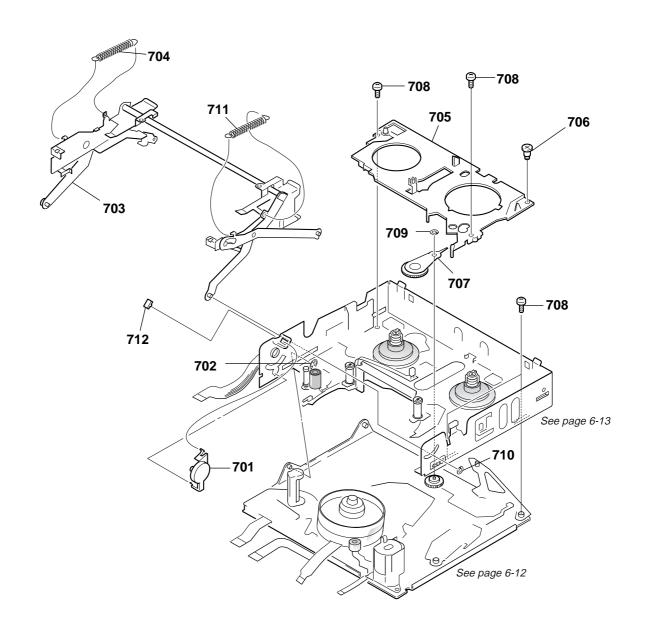


Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
701	A-7040-421-A	DAMPER ASSY		707	X-3945-399-1	GEAR ASSY, GOOSENECK	
702	7-624-102-04	STOP RING 1.5, TYPE -E		708	3-947-503-01	SCREW (M1.4X2.5)	
703	X-3949-153-2	CASSETTE COMPARTMENT ASSY		709	3-331-007-21	WASHER	
704	3-965-587-03	SPRING (POWER, TENSION), TENSIO	N	710	3-727-176-01	WASHER, STOPPER	
705	3-965-584-08	RETAINER, GOOSENECK					
				711	3-973-268-01	SPRING (POWER, TENSION), TENSIO	N
706	3-976-055-01	SCREW (M1.4X1)		712	3-971-076-01	FASTENER, D	

### 6-1-12. LS CHASSIS ASSEMBLY

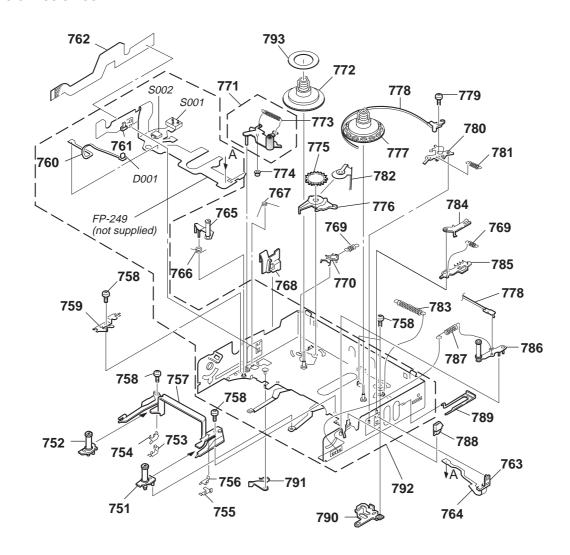

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
751		BASE (S) BLOCK ASSY, GUIDE		775	3-965-563-01	GEAR, T SOFT	
752		BASE (T) BLOCK ASSY, GUIDE					
753	3-965-559-01	( )		776		CLAW, T SOFT	
754		STOPPER (T), GB		777	X-3945-397-1	, , -	
755	3-965-558-01	STOPPER (S)		778	X-3945-396-1	,	
				779	3-945-756-01	SCREW (M1.4X3)	
756	3-965-556-01	STOPPER (S), GB		780	3-965-583-01	ARM, RVS	
757	3-965-553-01	RAIL, GUIDE					
758	3-947-503-01	SCREW (M1.4X2.5)		781	3-965-580-01	SPRING (ARM, RVS), TENSION	
759	3-965-573-01	RETAINER, TG4		782	3-966-384-01	SPRING, T SOFT	
760	1-658-213-11	FP-355 FLEXIBLE BOARD		783	3-965-578-01	SPRING, TENSION COIL	
				784	3-965-560-01	RATCHET, S	
761	3-965-552-01	HOLDER (T), SENSOR		785	3-965-561-01	PLATE, RELEASE, S RATCHET	
762	1-657-786-13	FP-221 FLEXIBLE BOARD					
763	3-965-551-01	HOLDER (S), SENSOR		786	X-3945-395-1	ARM ASSY, TG1	
764	1-658-214-11	FP-356 FLEXIBLE BOARD		787	3-965-576-01	SPRING (TG1), TENSION	
765	A-7040-417-A	ARM BLOCK ASSY, TG4		788	3-965-567-01	LID OPEN	
				789	3-965-566-01	COVER, LS GUIDE	
766	3-965-574-01	SPRING (RETURN, TG4), TORSION		* 790	3-965-577-01	PLATE, CAM, LS	
767	3-965-575-01						
768	3-965-568-01	GUIDE, LOCK		791	3-965-569-01	ARM, EJ	
769	3-965-562-01	SPRING (RATCHET), TENSION		792	A-7040-427-A	CHASSIS (S1) ASSY, LS	
770	3-965-581-03	,		* 793	3-972-838-01	, ,	
		•		D001	8-719-988-42	DIODE GL453	
771	X-3949-380-1	ARM ASSY (E), PINCH		S001	1-692-614-11	SWITCH, PUSH (3 KEY)	
772		DECK ASSY, REEL, T				(Hi8 MP, ME/MP, REC PROOF)	
773		SPRING (PINCH), TENSION				,,,,	
774	3-965-579-01			S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C. LOCK)	
	_ 500 0.0 01	,		0000	. 0.2 000 11		

### 6-1-13. MECHANISM CHASSIS ASSEMBLY

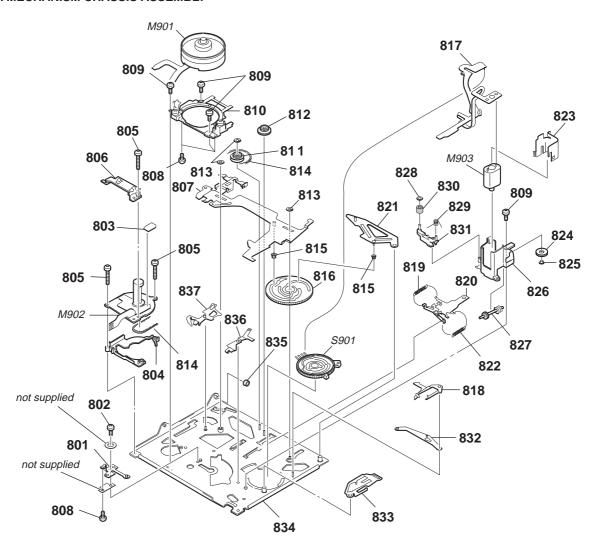

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	Description	<u>Remark</u>
801	X-3947-343-1	GROUND (IM) ASSY, SHAFT		822	3-965-535-01	SPRING (LIMITTER ARM S), COIL	
802		SCREW (M1.7X1.6)		823	3-965-542-01	,	
803		FP-248 FLEXIBLE BOARD (DEW SENSOR)		824	3-965-539-01		
804	3-965-545-01	,	,	825	3-965-538-01	· /	
805	3-965-549-01						
		,		826	3-965-540-01	HOLDER, MOTOR	
806	3-966-349-01	HOLDER, FLEXIBLE		827	3-965-541-01	SHAFT, WORM	
807	3-971-644-01	SLIDER (2), M		828	3-321-393-01	WASHER, STOPPER	
808	3-971-939-01	SCREW (M1.4)		829	3-965-724-01	SPRING (RETURN, HC), TORSION	
809	3-947-503-01	SCREW (M1.4X2.5)		830	A-7040-423-A	ROLLER BLOCK ASSY, HC	
810	A-7040-416-A	BASE BLOCK ASSY, DRUM					
				831	X-3945-407-1	ARM ASSY, HC ROLLER	
811	3-965-527-01	GEAR, CHANGE		832	3-965-531-01	ARM, GL	
812	3-965-544-01	GEAR, RELAY		833	3-965-530-01	PLATE (2), REGULATOR, TENSION	
813	3-331-007-21	WASHER		834	X-3947-915-2	CHASSIS ASSY, MECHANICAL	
814	3-965-546-01	BELT, TIMING		835	3-965-526-02	ROLLER, LS GUIDE	
815	3-965-533-01	ROLLER, LS					
				836	3-965-547-01	,	
816	3-965-528-01			837	3-965-534-01	* *	
817		FP-220 FLEXIBLE BOARD		M901		DRUM ASSY (DGH-0E3A-R)	
818		PLATE, REGULATOR, TENSION		M902		CAPSTAN ASSY	
819		SPRING (LIMITTER ARM T), COIL		M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
820	X-3945-388-1	SLIDER ASSY, GL					
				S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	
821	3-965-532-11	ARM, LS					

#### 6-2. ELECTRICAL PARTS LIST

Note:

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

Ne les remplacer que par une piéce portant le numéro spécifié.

When indicating parts by reference number, please include the board name

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS

All resistors are in ohms METAL: Metal-film resistor

METAL OXIDE: Metal Oxide-film resistor

F: nonflammable

- SEMICONDUCTORS
   In each case, u: μ , for example:
   uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
   uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS uF : μF
- COILS uH: µH
- Abbreviation
   Canadian model is abbreviated as CND.
   Brazilian model is abbreviated as BR.
   Hong Kong model is abbreviated as HK.

Taiwan model is abbreviated as TW.

name.						
Ref. No.	Part No.	Description				<u>Remark</u>
	A-7073-786-A	CD-210(NT				
				16PK/TR51	6/TR516	PK/TR716) 000 Series)
	A-7073-807-A	CD-211(NT	,	,		
	(TRV16/TRV	/16PK/TRV3		36PK/TRV4	3/TRV46	,
		(IC401 is	not in	cluding to		000 Series) nted board)
		< CAPACITO	OR >			
C401 C405	1-164-156-11 1-135-210-11	CERAMIC O		0.1uF 4.7uF	20%	25V 10V
C406	1-135-214-21	TANTAL CH		4.7uF 4.7uF	20%	20V
		< CONNECT	Γ0R >			
CN401	1-766-346-21	CONNECTO	R, FFC	FPC 16P		
		< IC >				
IC401 (T	A-7030-960-A R315/TR416/TR					
IC401	A-7030-961-A	CCD BLOCK		/ (207 Serv R716/TRV4		) IMAGER)
		< COIL >				
L401	1-414-757-11	INDUCTOR		100uH		
		< TRANSIS	TOR >			
Q402	8-729-117-73	TRANSISTO	OR 25	SC4178-F13	BF14-T1	
		< RESISTO	R >			
R404 R405	1-216-829-11 1-216-809-11	METAL CHI		4.7K 100	5% 5%	1/16W 1/16W
R406	1-216-864-11	METAL CHI		0	5%	1/16W

A-7073-783-A CF-60(CN) BOARD, COMPLETE

(TR416/TR416PK/TR516/TR516PK/TR716)

A-7073-821-A CF-60(N) BOARD, COMPLETE (TR315)

(Ref.No. 4,000 Series)

Ref. No.	Part No.	<u>Description</u> <u>Remark</u>
	A-7073-811-A	CF-61 BOARD, COMPLETE ***********************************
	(TRV16/TR\	V16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) (Ref.No. 9,000 Series)
		< BATTERY HOLDER >
BH001	1-550-104-11	HOLDER, BATTERY
		< BUZZER >
BZ002	1-529-104-21 (	BUZZER, PIEZOELECTRIC (TR315/TR416/TR416PK/TR516/TR516PK/TR716)
		< CAPACITOR >
C003	1-107-826-91 (	CERAMIC CHIP 0.1uF 10% 16V (TR315/TR416/TR416PK/TR516/TR516PK/TR716)
		< CONNECTOR >
CN001 CN002 * CN003		CONNECTOR, FFC/FPC (ZIF) 45P CONNECTOR, FFC/FPC 8P PIN, CONNECTOR 2P
CN005	1-778-509-21	V16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) PIN, CONNECTOR (PC BOARD) 11P
CN006	1-778-508-21	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) PIN, CONNECTOR (PC BOARD) 6P /16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)
CN007	1-779-334-11	CONNECTOR, FFC/FPC 20P (TR416/TR416PK/TR516/TR516PK/TR716)
* CN008	1-778-283-11	CONNECTOR, FFC/FPC 4P
(TF   CN009	R315/TRV16/TR\ 1-691-362-11	V16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) CONNECTOR, FFC/FPC (ZIF) 24P
	(	(TR315/TR416/TR416PK/TR516/TR516PK/TR716)
		< DIODE >
D001	8-719-062-16 (TRV16/TR\	DIODE 01ZA8.2(TPL3) V16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)
D005	8-719-073-03	DIODE MA8082-(K8).S0
D006 D008	8-719-073-03 8-719-073-01	DIODE MA8082-(K8).S0 DIODE MA111-(K8).S0
D010	8-719-073-03	DIODE MA8082-(K8).S0
		< IC >
10004	0.750.570.00	10 B1107001/ F0

IC001

8-759-573-02 IC BU9729K-E2

(TR315/TR416/TR416PK/TR516/TR516PK/TR716)

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
	<u> </u>	< TRANSISTOR	>		<u> </u>	S010	1-771-029-21		E (MENU)		
Q001	8-729-402-42	TRANSISTOR				S010		TR315/TR416/TR4 SWITCH, KEY BC	16PK/TR51		PK/TR716)
	(TR315/TRV16/TR\	/16PK/TRV36/TR	V36PK/TRV	43/TRV46	6/TRV46PK)	S012		/16PK/TRV36/TRV SWITCH, TACTIL			/TRV46PK)
		< RESISTOR >							`	,	
R002	1-216-864-11	METAL CHIP	0	5%	1/16W	S013		SWITCH, KEY BC 16PK/TRV36/TRV/			
R005	1-216-833-11	METAL CHIP	10K	5%	1/16W	S015	1-771-025-21	SWITCH, ROTAR	Y (SELECT [	DIAL)(EN	ICODER)
R006 R007	1-216-833-11 1-216-833-11	METAL CHIP METAL CHIP	10K 10K	5% 5%	1/16W 1/16W	S017 S017		SWITCH, KEY BC SWITCH, TACTIL	,	, ,	(TR315)
					.,		(TRV16/TRV	/16PK/TRV36/TRV	36PK/TRV4	3/TRV46	/TRV46PK)
R008 R009	1-216-833-11 1-216-833-11	METAL CHIP METAL CHIP	10K 10K	5% 5%	1/16W 1/16W	S017	1-771-138-61	SWITCH, KEY BC (TR416/TR4			PK/TR716)
R011	1-216-855-11	METAL CHIP	680K	5%	1/16W			`			,
D040	,	TR315/TR416/TF			,	S018		SWITCH, KEY BO			)
R012	1-216-864-11	METAL CHIP TR315/TR416/TF	0 8416PK/TR5	5% 316/TB516	1/16W SPK/TR716)	S018	1-7/1-138-61 (TR416/TR416PK/	SWITCH, KEY BC			PK/TRV36/
R013	1-216-822-11		1.2K	5%	1/16W		(111410/111410110		36PK/TRV4		
						S020		SWITCH, ROTAR			
R015	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	0001		TR315/TR416/TR4			
R016 R019	1-216-822-11 1-216-823-11	METAL CHIP METAL CHIP	1.2K 1.5K	5% 5%	1/16W 1/16W	S021 S021		SWITCH, KEY BO SWITCH, KEY BO			)
R020	1-216-823-11	METAL CHIP	1.5K	5%	1/16W		(TR416/TR416PK/				PK/TRV36/
R022	1-216-823-11	METAL CHIP	1.5K	5%	1/16W		,		36PK/TRV4		
R023	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	S022	1-771-138-61	SWITCH, KEY BC	ARD (DISPI	_AY)	
R025	1-216-825-11	METAL CHIP	2.2K	5%	1/16W			/16PK/TRV36/TRV			/TRV46PK)
R026	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	S024	1-762-648-21	SWITCH, SLIDE	START/STO	P MODE	)
R028	1-216-822-11		1.2K	5%	1/16W						
R029	1-216-828-11	TR315/TR416/TF	3.9K	5%	1/16W						
11020	1 210 020 11	WEINE OITH	0.010	0 / 0	1/1000		A-7073-785-A	DD-117(MMCB0)	BOARD, CO	MPLETI	E
R031	1-216-828-11		3.9K	5%	1/16W			********	*******	*****	
R032	1-216-828-11		3.9K	5%	1/16W				(TR51	6/TR516	PK/TR716)
R034	(TRV16/TRV 1-216-823-11	/16PK/TRV36/TR METAL CHIP	1.5K	43/TRV46 5%	1/16W		Δ-7073-806-Δ	DD-117(VMMIBO	) BOARD C	OMPLET	F
11004		TR315/TR416/TF					A 7070 000 A	******	, ,		
R035	1-216-825-11	METAL CHIP	2.2K	5%	1/16W				(TRV4	3/TRV46	/TRV46PK)
R036	1-216-832-11	TR315/TR416/TF	8.2K	5%	1/16W		A-7073-818-A	DD-117(ZL0) BO	ARD COMP	I FTF (TF	3315)
							7. 7. 0. 0 0. 0 7.	*******	,	,	,
R038 R039	1-216-832-11	METAL CHIP	8.2K 27K	5% 5%	1/16W 1/16W		A 7072 004 A	DD 117///700) D		DLETE	
R041	1-216-838-11 1-216-838-11	METAL CHIP	27K 27K	5% 5%	1/16W		A-7073-024-A	DD-117(VZB0) B			
R046	1-216-828-11		3.9K	5%	1/16W					(TRV36	/TRV36PK)
		TR315/TR416/TF		16/TR516	6PK/TR716)					`	,
R047	1-216-832-11		8.2K	5%	1/16W		A-7073-858-A	DD-117(ZLC0) B			
	(	TR315/TR416/TF	R416PK/TR5	16/TR516	6PK/TR716)			**********	*******		/TR416PK)
R048	1-216-838-11	METAL CHIP	27K	5%	1/16W					(1N410	/10410FK)
	,	TR315/TR416/TF	R416PK/TR5		,		A-7073-874-A	DD-117(VZL0) B			
R051	1-216-821-11 1-216-821-11		1K	5%	1/16W			**********	********		/TD\/4.CDI/\
R052	1-210-021-11	WETAL CHIP	1K	5%	1/16W				(Re		/TRV16PK) 000 Series)
		< SWITCH >							•		ŕ
S003	1-762-851-21	SWITCH, KEY B	OARD (DAT	E)(TR315	5)			< CAPACITOR >			
S003		SWITCH, KEY B			,						
	(TR416/TR416PK/					C801	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
S004	1 771 020 21	SWITCH, TACTI			6/TRV46PK)	C802 C803	1-162-960-11 1-107-826-91	CERAMIC CHIP CERAMIC CHIP	220PF 0.1uF	10% 10%	50V 16V
3004		/16PK/TRV36/TR			S/TRV/46PK)	C804	1-107-826-91	CERAMIC CHIP	0.1uF 0.1uF	10%	16V 16V
S006		SWITCH, KEY B				C805	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
S006	1-771-138-61	SWITCH, KEY B	OARD (PIC	TURE EFF	ECT)						
	(TR416/TR416PK/					C806	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		ſR	v3bPK/TRV	43/1KV46	S/TRV46PK)	C807 C808	1-162-970-11 1-164-227-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.022uF	10% 10%	25V 25V
S008	1-762-851-21	SWITCH, KEY BO	OARD (COLII	NTER RFS	SET)(TR315)	C809	1-162-967-11		0.022uF 0.0033uF	10%	25 V 50 V
S008		SWITCH, KEY B				C810		CERAMIC CHIP	0.022uF	10%	25V
	(TR416/TR416PK/	TR516/TR516PK/	/TR716/TRV	16/TRV16	6PK/TRV36/						
		TR	v36PK/TRV	43/TRV46	S/TRV46PK)						

# DD-117

Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
C811	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V	C864	1-113-985-11	TANTAL. CHIP	10uF	20%	20V
C812	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C865	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C813		CERAMIC CHIP	0.001uF	10%	50V		`	/16PK/TRV36/TRV3		TRV46/	TRV46PK)
C815		CERAMIC CHIP	0.001uF	10%	50V	C866			2.2uF		16V
C817	1-113-991-11	TANTAL. CHIP	33uF	20%	16V			16PK/TRV36/TRV3		TRV46/	,
0040	1 100 000 01	OFD ANALO OLUD	0.4 5		051/	C867	1-164-346-11		1uF	/TD = 4.0 F	16V
C818		CERAMIC CHIP	0.1uF	100/	25V	0000	1 105 014 01	(TR416/TR41			2K/TR/16) 20V
C819 C820		CERAMIC CHIP	0.001uF 0.001uF	10% 10%	50V 50V	C868	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C821		CERAMIC CHIP	0.001uF	10%	50V	C869	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C823		CERAMIC CHIP	4.7uF	10%	10V	0000		/16PK/TRV36/TRV3		TRV46/	
0020		02.0.000				C871	\	TANTALUM CHIP		20%	6.3V
C824	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C872	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C825	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	C873				10%	25V
C826		CERAMIC CHIP	4.7uF	10%	10V	_	`	16PK/TRV36/TRV3			,
		16PK/TRV36/TRV			,	C875				10%	16V
C827		CERAMIC CHIP	0.022uF	10%	25V		(IRV16/IRV	/16PK/TRV36/TRV3	6PK/TRV43/	TRV46/	TRV46PK)
C828	`	16PK/TRV36/TRV3 CERAMIC CHIP	36PK/TKV43 470PF	3/16V46/ 10%	50V	C876	1-107-826-91	CERAMIC CHIP	Λ 1E	100/	16V
U020		16PK/TRV36/TRV				C877		CERAMIC CHIP		10% 10%	16V
	(111010/1110	1011/11/11/00/11/1/	JUF IV 111V40	)/         V <del>4</del> U/	TITV40FK)	0077	1-107-020-91	CLIMINIC CITIF	U. Tul	10 /0	100
C829	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V			< CONNECTOR >			
		16PK/TRV36/TRV									
C830	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V ´	* CN801	1-580-756-21	PIN, CONNECTOR	7P		
	(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV43	3/TRV46/	TRV46PK)	CN931	1-774-597-41	CONNECTOR, BOA	ARD TO BOA	RD 70P	
C831		CERAMIC CHIP	0.22uF	10%	16V	CN933		PIN, CONNECTOR			
	•	16PK/TRV36/TRV			,			16PK/TRV36/TRV3		TRV46/	TRV46PK)
C832		CERAMIC CHIP	4.7uF	10%	10V	CN934		CONNECTOR, FFC			
C833		CERAMIC CHIP	0.01uF	/TDV/4C/	50V	CN935	1-764-709-11	CONNECTOR, FFC	/FPG (LIF) 10	JP	
	(10/10/10/	16PK/TRV36/TRV	30PN/INV43	)/ I N V 4 O/	INV40PK)			< DIODE >			
C834	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V			< DIODE >			
C836		CERAMIC CHIP	4.7uF	10%	10V	D806	8-719-027-76	DIODE 1SS357-T	PH3		
C837		CERAMIC CHIP	4.7uF	10%	10V			16PK/TRV36/TRV3		TRV46/	TRV46PK)
C838	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D809		DIODE MA796-TX			,
C840	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	D810		DIODE 1SS357-T			
	(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV43	3/TRV46/	TRV46PK)			16PK/TRV36/TRV3		TRV46/	TRV46PK)
0044	1 105 110 01	T441T41 1144 0111D	00 5	000/	40) (	D812		DIODE 1SS357-T		TD1/40/	TD1/40D10
C841		TANTALUM CHIP		20%	10V	D040		/16PK/TRV36/TRV3		TRV46/	TRV46PK)
C842		TANTALUM CHIP 16PK/TRV36/TRV3		20%	10V	D813	8-719-073-03	DIODE MA8082-	(K8).50		
C843	,	TANTALUM CHIP		20%	6.3V	D814	8-719-073-03	DIODE MA8082-	(K8) S0		
C844		TANTALUM CHIP		20%	6.3V	D815		DIODE MA8082-	( - /		
C846		TANTALUM CHIP		20%	10V	D816		DIODE 1SS357-T			
						D817	8-719-073-02	DIODE MA728-(H	(8).S0		
C847	1-164-506-11	CERAMIC CHIP	4.7uF		16V	D818	8-719-027-76	DIODE 1SS357-T	PH3		
C848		CERAMIC CHIP	4.7uF		16V		(TRV16/TRV	/16PK/TRV36/TRV3	6PK/TRV43/	TRV46/	TRV46PK)
C849		TANTALUM CHIP		20%	10V	Dago	0.740.050.00	DIODE MAGAGO	T./		
0050		16PK/TRV36/TRV3 TANTALUM CHIP			,	D822 D933		DIODE MA8120-7 DIODE MA4Z082			
C850 C851		TANTALUM CHIP		20% 20%	10V 6.3V	სმაა		TR516/TR516PK/TR			TRV/46PK)
0001	1 100 107 21	IANTALOW OTH	Tour	2070	0.0 V	D933	'	DIODE 01ZA8.2(		11117-10/	11114-0111()
C852	1-164-505-11	CERAMIC CHIP	2.2uF		16V	D934		DIODE MA4Z082			
		16PK/TRV36/TRV		3/TRV46/				TR516/TR516PK/TR			TRV46PK)
C853	1-165-319-11	CERAMIC CHIP	0.1uF		50V ´	D934	8-719-062-16	DIODE 01ZA8.2(	TPL3)		,
	(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV43	3/TRV46/	TRV46PK)						
C854	1-135-157-21	TANTALUM CHIP		20%	6.3V	D936		DIODE MA4Z082			
0055	1 105 110 01	(TR416/TR4			,	Door	,	rr516/tr516PK/tr		TRV46/	TRV46PK)
C855		TANTALUM CHIP		20%	10V	D936	8-719-062-16	DIODE 01ZA8.2(	TPL3)		
C857	1-135-157-21	TANTALUM CHIP	TOUF	20%	6.3V			< FERRITE BEAD >			
C860	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V			CILIMITE DEAD	,		
C861		CERAMIC CHIP	0.0047uF		50V	FB931	1-414-760-21	FERRITE OUH			
0001		16PK/TRV36/TRV				FB932	1-414-760-21				
C861	*	CERAMIC CHIP	0.01uF	10%	25V ′	FB933	1-414-760-21				
		(TR416/TR4									
C862		CERAMIC CHIP		10%	25V			< IC >			
	*	16PK/TRV36/TRV			,	,					
C863		CERAMIC CHIP		10%	25V	IC801		IC SN104241PM			
	(1RV16/1RV	16PK/TRV36/TRV	งงฯห/TKV43	s/ I KV46/	iKV4bPK)	IC802		IC MB3817PFV-G		TDUAGE	TDV//CDI/
							(IRVID/IRV	/16PK/TRV36/TRV3	UPN/16V43/	ınv46/	17140PK)

Ref. No.	Part No.	Description Ren	nark l	Ref. No.	Part No.	Description		Remark
1101. 110.	ratt No.		iui k			·	0D110700 TI	Homan
		< COIL >		Q815	8-729-046-98			
L804	1 /12 056 11	INDUCTOR CHIP 4.7uH		Q819	8-729-046-98			TRV46/TRV46PK)
L004		/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	EDK)		(10/10/10/	10 F K/ 1 N V 3 0/ 1	NV30FN/1NV43/	INV40/INV40FK)
L805	1-409-532-41		OFK)	Q823	8_720_037_7/	TRANSISTOR	UN9213J-(K8).	sn.
		TR716/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)	Q823			RN1104F(TPL3	
L805	1-424-675-51		01 10,	Q826			UN9213J-(K8).	
L806	1-409-532-41				(TR416/TR416PK/			
		TR716/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)		(111410/111410110			TRV46/TRV46PK)
L806	1-424-675-51		,	Q826	8-729-042-29		RN1104F(TPL3	,
2000		111201011			(TR416/TR416PK/			
L807	1-424-674-11	INDUCTOR 22uH			(			TRV46/TRV46PK)
		TR716/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)	Q827	8-729-037-61		RN2104F(TPL3	
`L807	1-424-674-51							TRV46/TRV46PK)
L808	1-424-674-11	INDUCTOR 22uH			`			,
(TR315/T	R516/TR516PK/	TR716/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)	Q828	8-729-037-74	TRANSISTOR	UN9213J-(K8).	S0
L808	1-424-674-51	INDUCTOR 22uH			(TRV16/TRV	16PK/TRV36/T	RV36PK/TRV43/	TRV46/TRV46PK)
L809	1-424-674-11	INDUCTOR 22uH		Q828	8-729-042-29	TRANSISTOR	RN1104F(TPL3	)
(TR315/T	R516/TR516PK/	TR716/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)		(TRV16/TRV	16PK/TRV36/T	RV36PK/TRV43/	TRV46/TRV46PK)
				Q829			2SA1832F-Y/GF	
L809	1-424-674-51			Q830			2SC4738F-Y/GF	R(TPL3)
L810	1-414-396-21			Q831	8-729-041-23			
L811	1-414-396-21				(TR416/TR416PK/			
L812	1-414-396-21					Т	TRV36PK/TRV43/	TRV46/TRV46PK)
L813	1-414-396-21	INDUCTOR 4.7uH						
1011		INDUSTOR A 7 II		Q832	8-729-041-23			TD1/40/TD1/40D10
L814	1-414-396-21			0000				TRV46/TRV46PK)
L815	1-414-396-21			Q833	8-729-041-23			TDV/4C/TDV/4CDV
L816	1-414-396-21		716)	0024				TRV46/TRV46PK)
L817	1-414-396-21	(TR416/TR416PK/TR516/TR516PK/TFINDUCTOR 4.7uH	1/10)	Q834 Q835			2SA1832F-Y/GF 2SC4738F-Y/GF	
L818	1-414-396-21			Qoss				TRV46/TRV46PK)
LOTO		/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	SPK)	Q836			2SA1832F-Y/GF	
	(111010/1111	7 101 10 110 100/ 110 001 10 110 40/ 110 40/ 110 4	01 10	QUUU				TRV46/TRV46PK)
L819	1-414-400-11	INDUCTOR 22uH			(111010/1110	101 10 111 100/1	1110011011111107	1111 10/1111 101 11/
L820	1-424-674-11	INDUCTOR 22uH		Q837	8-729-037-52	TRANSISTOR	2SC4738F-Y/GF	R(TPL3)
		(TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)					TR516PK/TR716)
L820	1-424-674-51	•	,	Q838	8-729-037-53		2SA1832F-Y/GF	
	(TRV16/TRV	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)					TRV46/TRV46PK)
L821		INDUCTOR CHIP 4.7uH		Q839			2SC4738F-Y/GF	
	(TRV16/TRV	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)		(TRV16/TRV	16PK/TRV36/T	RV36PK/TRV43/	TRV46/TRV46PK)
			<i>'</i>	Q840	8-729-037-53	TRANSISTOR	2SA1832F-Y/GF	R(TPL3)
		< IC LINK >			(TRV16/TRV	16PK/TRV36/T	RV36PK/TRV43/	TRV46/TRV46PK)
				Q841	8-729-037-53		2SA1832F-Y/GF	
		FUSE, MICRO (1.4A)				(TR416/	TR416PK/TR516/	TR516PK/TR716)
<b>△</b> PS803		FUSE, MICRO (1.4A)						
△ PS804		FUSE, MICRO (1.4A)		Q842			2SC4738F-Y/GF	
<b>⚠</b> PS805		FUSE, MICRO (1.4A)		Q843			2SA1832F-Y/GF	
A DOGGG	,	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)	Q844			2SA1832F-Y/GF	
⚠ PS806		FUSE, MICRO (1.4A)	ODIO)	0045				TRV46/TRV46PK)
(11	K516/1K516PK/	TR716/TRV36/TRV36PK/TRV43/TRV46/TRV4	bPK)	Q845			2SC4738F-Y/GF	, ,
		< TRANSISTOR >		Q846	,		2SC4738F-Y/GF	TRV46/TRV46PK)
		< ITANUOUTUIT >		Q040	0-128-031-32			TR516PK/TR716)
Q801	8-729-024-49	TRANSISTOR 2SK1830-TE85L				(111410/		
Q803		TRANSISTOR 2SB1122-ST-TD		Q847	8-729-037-52	TRANSISTOR	2SC4738F-Y/GF	R(TPL3)
Q804		TRANSISTOR UN9213J-(K8).SO		Q848			2SC4738F-Y/GF	'
Q804		TRANSISTOR RN1104F(TPL3)		ασ.σ				TRV46/TRV46PK)
Q805		TRANSISTOR 2SK1830-TE85L		Q849	,		2SA1832F-Y/GF	,
								TRV46/TRV46PK)
Q806	8-729-037-74	TRANSISTOR UN9213J-(K8).SO		Q850	,		2SC4738F-Y/GF	,
	(TRV16/TRV	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)					TRV46/TRV46PK)
Q806	,	TRANSISTOR RN1104F(TPL3)		Q851	8-729-046-77			,
	(TRV16/TRV	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	6PK)					
Q807		TRANSISTOR 2SB1122-ST-TD		Q852	8-729-017-61			
Q808	8-729-046-98	TRANSISTOR CPH6702-TL		Q853			2SA1832F-Y/GF	
Q809	8-729-046-98	TRANSISTOR CPH6702-TL		Q854			2SC4738F-Y/GF	, ,
_				Q855	8-729-037-52	TRANSISTOR	2SC4738F-Y/GF	R(TPL3)
Q810		TRANSISTOR CPH6702-TL		Г				
Q813		TRANSISTOR 2SA1832F-Y/GR(TPL3)	OD!		The components			identifiés par une
0044	*	/16PK/TRV36/TRV36PK/TRV43/TRV46/TRV4	юРК)		mark ∆ or dotted li			critiques pour la
Q814	8-729-046-98	TRANSISTOR CPH6702-TL			⚠ are critical for s		sécurité.	
			_		Replace only with specified.	part number		cer que par une numéro spécifié.
			6-1	1/	specificu.		piece portant le	numero specifie.

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
		<u> </u>	00047005 \	//OD/TDL 0				<u> </u>	4 51/	0.500/	
Q856	8-729-037-52	TRANSISTOR	2SC4/38F-1	//GR(TPL3	)	R852	1-218-851-11 (TRV16/TRV	RES,CHIP 16PK/TRV36/TRV	1.5K /36PK/TRV4	0.50% 3/TRV46/	1/16W TRV46PK)
Q932	8-729-037-74	TRANSISTOR				R853	1-216-849-11	METAL CHIP	220K	5%	1/16W
				43/TRV46/	TRV46PK)		(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV43	3/TRV46/	TRV46PK)
Q932	8-729-042-29	TRANSISTOR			TD\//CDI/\	D0E4	1 010 007 11	DEC CHID	171/	0.500/	1/16///
			(IKV	43/TRV46/	TRV40PK)	R854	1-218-887-11 (TRV16/TRV	RES,UNIP 16PK/TRV36/TRV	47K '36PK/TB\/ <i>A</i> '		1/16W TRV//6PK)
		< RESISTOR >				R865	1-216-841-11		47K	5%	1/16W
						R866	1-216-837-11		22K	5%	1/16W
R801	1-216-841-11	METAL CHIP	47K	5%	1/16W	R867	1-216-296-91	SHORT	0		
R802	1-218-893-11	RES,CHIP	82K	0.50%	1/16W		(TR516/TR516PK/T				,
R803	1-216-833-11	METAL CHIP	10K	5%	1/16W	R868	1-216-849-11		220K	5%	1/16W
R804 R805	1-216-837-11 1-216-835-11	METAL CHIP METAL CHIP	22K 15K	5% 5%	1/16W 1/16W		(18716/187	16PK/TRV36/TRV	36PK/TKV4	3/TKV46/	TRV46PK)
11000	1-210-033-11	WILTAL CITIF	IJK	J /0	1/1000	R870	1-216-857-11	METAL CHIP	1M	5%	1/16W
R806	1-218-879-11	RES,CHIP	22K	0.50%	1/16W		(TR416/TR416PK/				
R807	1-216-839-11	METAL CHIP	33K	5%	1/16W		,		36PK/TRV4		
R808	1-218-879-11	RES,CHIP	22K	0.50%	1/16W	R871	1-216-857-11		1M	5%	1/16W
R809	1-216-813-11	METAL CHIP	220	5%	1/16W		(TR416/TR416PK/				
R810	1-216-837-11	METAL CHIP	22K	5%	1/16W	D070	1 010 045 11		36PK/TRV4		,
R811	1-218-883-11	RES,CHIP	33K	0.50%	1/16W	R872 R873	1-216-845-11 1-216-841-11	METAL CHIP METAL CHIP	100K 47K	5% 5%	1/16W 1/16W
R812	1-218-901-11	RES.CHIP	180K	0.50%	1/16W	R874	1-216-857-11		47K 1M	5%	1/16W
R813	1-216-853-11	METAL CHIP	470K	5%	1/16W	11074		16PK/TRV36/TRV			
R814	1-218-879-11	RES,CHIP	22K	0.50%	1/16W		,				,
R815	1-216-813-11	METAL CHIP	220	5%	1/16W	R875	1-216-849-11		220K	5%	1/16W
							,	16PK/TRV36/TRV			,
R816	1-218-879-11	RES,CHIP	22K	0.50%	1/16W	R876	1-216-845-11		100K	5%	1/16W
R817	1-218-879-11	RES,CHIP METAL CHIP	22K 220	0.50% 5%	1/16W 1/16W	D077	*	16PK/TRV36/TRV	36PK/TRV43 0		1/16W
R818 R819	1-216-813-11 1-218-887-11	RES,CHIP	47K	0.50%	1/16W	R877	1-216-864-11	METAL CHIP	U	5%	(TR315)
R820	1-216-845-11	METAL CHIP	100K	5%	1/16W	R878	1-216-857-11	METAL CHIP	1M	5%	1/16W
				-,-	.,			16PK/TRV36/TRV			
R821	1-218-879-11	RES,CHIP	22K	0.50%	1/16W	R879	1-216-837-11	METAL CHIP	22K	5%	1/16W
R822	1-216-150-91	RES,CHIP	10	5%	1/8W						
R824	1-216-837-11	METAL CHIP	22K	5%	1/16W	R880	1-218-895-11	RES,CHIP	100K	0.50%	1/16W
R825	1-218-879-11	RES,CHIP	22K	0.50%	1/16W	R881	1-216-864-11	METAL CHIP	0	5%	1/16W
R826	1-216-821-11	METAL CHIP	1K	5%	1/16W	R882 R883	1-218-903-11 1-216-841-11	RES,CHIP	220K 47K	0.50% 5%	1/16W 1/16W
R827	1-216-821-11	METAL CHIP	1K	5%	1/16W	11000		16PK/TRV36/TRV			
R828	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R884	1-216-845-11		100K	5%	1/16W
R829	1-216-837-11	METAL CHIP	22K	5%	1/16W		(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV43	3/TRV46/	TRV46PK)
R830	1-218-883-11		33K	0.50%	1/16W						
R831	1-216-841-11	METAL CHIP	47K	5%	1/16W	R885	1-216-845-11		100K	5%	1/16W
R832	1-218-879-11	DEC CHID	22K	0.50%	1/16W	R887	1-216-849-11	,	116PK/TR51 220K	6/185161 5%	7K/TR/T6) 1/16W
R833	1-216-839-11		33K	5%	1/16W	n001		16PK/TRV36/TRV			
R834	1-218-883-11		33K	0.50%	1/16W	R888	1-216-845-11		100K	5%	1/16W
R835	1-218-879-11	RES,CHIP	22K	0.50%	1/16W		(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV4	3/TRV46/	TRV46PK)
R836	1-216-837-11	METAL CHIP	22K	5%	1/16W	R889	1-216-837-11		22K	5%	1/16W
D007	1 010 005 11	MATTAL OLUB	0.017	<b>5</b> 0/	4 /4 00 14	B000	1 010 015 11	,	116PK/TR51		,
R837	1-216-825-11 1-216-837-11		2.2K 22K	5% 5%	1/16W 1/16W	R890	1-216-845-11	METAL CHIP	100K	5%	1/16W
R838 R839	1-216-837-11		22K 22K	5% 5%	1/16W	R891	1-218-895-11	RES CHIP	100K	0.50%	1/16W
R840	1-216-839-11		33K	5%	1/16W	11031		16PK/TRV36/TRV			
R841	1-216-834-11	METAL CHIP	12K	5%	1/16W	R892	1-218-903-11		220K		1/16W
							(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV4	3/TRV46/	TRV46PK)
R842	1-218-903-11		220K		1/16W	R893	1-216-835-11		15K	5%	1/16W
D0.40	•	/16PK/TRV36/TI			,	B004	,	16PK/TRV36/TRV			,
R843	1-218-895-11		100K		1/16W	R894	1-216-861-11		2.2M	5% c/TD5161	1/16W
R844	1-216-296-91	/16PK/TRV36/TI	0	43/TRV40/	TRV40PK)	R895	1-216-837-11	,	116PK/TR51 22K	5%	1/16W
R845	1-218-847-11		1K	0.50%	1/16W	11033	1-210-007-11	WILIAL OITH	2211	J /0	1/1000
.10.10		/16PK/TRV36/TI				R896	1-218-903-11	RES,CHIP	220K	0.50%	1/16W
R846	1-216-296-91		0		,		(TRV16/TRV	16PK/TRV36/TRV	36PK/TRV43	3/TRV46/	TRV46PK)
						R897	1-218-891-11	RES,CHIP	68K	0.50%	1/16W
R847	1-216-296-91		0				,	16PK/TRV36/TRV			,
R849	1-216-837-11		22K	5%	1/16W	R898	1-218-895-11		100K		1/16W
R850	(TRV16/TRV 1-216-857-11	/16PK/TRV36/TI METAL CHIP	RV36PK/TRV 1M	43/TRV46/ 5%	1/16W	R899	1-218-883-11	*	116PK/TR51 33K		PK/TR/16) 1/16W
11000		/16PK/TRV36/TI				11000	1 210 000-11	,	116PK/TR51		
	,	. ,			,			,			

_	_		_
	Ъ-,	21	a
	٧	74	ч.

FP-355

LB-54

Ref. No.	Part No.	<u>Description</u>			Remark	Ref. No.	Part No.	<u>Description</u>			Remark
R900	1-218-895-11	RES,CHIP	100K	0.50%	1/16W			< HALL ELEMENT	- >		
		,									
R901	1-218-887-11	RES,CHIP	47K		1/16W	H001	8-719-033-37				
R902 R903	1-216-864-11 1-216-845-11	METAL CHIP	0 100K	5% 5%	1/16W 1/16W	H002	8-719-033-37	ELEMENT, HALL I	HW-105C		
11303		/16PK/TRV36/TRV						< TRANSISTOR >			
R904	1-216-849-11		220K	5%	1/16W						
	`	/16PK/TRV36/TRV			,	Q001	8-729-907-25	PHOTO TRANSIS			
R905	1-218-901-11		180K		1/16W	Q002	8-729-907-25	PHOTO TRANSIS	TOR PT485	0F	
	(10,10,10,	/16PK/TRV36/TRV	730FW 1NV4	3/ I N V 40/	INV40FK)			< SWITCH >			
R906	1-216-833-11	METAL CHIP	10K	5%	1/16W			(011110117			
	`	/16PK/TRV36/TRV			,	S001	1-692-614-11	SWITCH, PUSH (3	,		
R907	1-218-903-11	RES,CHIP /16PK/TRV36/TRV	220K		1/16W	S002	1-572-688-11	SWITCH, PUSH (1	(Hi8 MP, N		C PROOF)
R908	1-216-841-11		47K	5%	1/16W	3002	1-372-000-11	SWITCH, FUSIT	1 KL1) (0. (	J. LOUK)	
R910	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R911	1-218-883-11	RES,CHIP	33K	0.50%	1/16W						
D010	1 010 070 11	DEC CLUD	001/	0.50%	1/10/1/		1-658-213-11	FP-355 FLEXIBLE ********			
R912 R913	1-218-879-11 1-216-857-11	RES,CHIP METAL CHIP	22K 1M	0.50% 5%	1/16W 1/16W			*****		f No. 10 0	00 Series)
R914	1-216-811-11		150	5%	1/16W			< DIODE >	(110		00 001100)
	(	/16PK/TRV36/TRV	/36PK/TRV4		- /						
R915	1-218-911-11		470K		1/16W	D001	8-719-988-42	DIODE GL453			
R917	(18V16/18V 1-216-864-11	/16PK/TRV36/TRV	/36PK/TRV4 0	3/TKV46/ 5%	1/16W						
11317		/16PK/TRV36/TRV									
	`				,		A-7073-439-A	LB-54 BOARD, CO			
R918	1-216-849-11		220K	5%	1/16W			********		0/70540	N/TD740
R921	(TRV16/TRV 1-216-296-91	/16PK/TRV36/TRV	/36PK/TRV4 0	3/TRV46/	TRV46PK)			(TR416/TR4	16PK/TR51	6/TR516I	PK/TR/16)
R922	1-216-296-91	SHORT	0					< CAPACITOR >			
R923	1-216-296-91	SHORT	0					( 0/ 11 / 10 / 10 / 17			
R924	1-216-849-11		220K	5%	1/16W	C5351	1-113-642-11	TANTAL. CHIP	47uF	20%	10V
	(TRV16/TRV	/16PK/TRV36/TRV	/36PK/TRV4	3/TRV46/	TRV46PK)	C5352	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
R925	1-216-864-11	METAL CHIP	0	5%	1/16W	C5353 C5354	1-162-970-11 1-163-020-00	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.0082uF	10% 10%	25V 50V
11020		/16PK/TRV36/TRV				C5355	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
R926	1-216-821-11		1K	5%	1/16W						
R933	1-216-821-11		1K	5%	1/16W	C5356	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
R934 R935	1-216-821-11 1-216-821-11	METAL CHIP	1K 1K	5% 5%	1/16W 1/16W			< CONNECTOR >			
11000	1 210 021 11	WEINE OITH	110	0 70	1/1000			COUNTEDIONS			
R936	1-216-821-11	METAL CHIP	1K	5%	1/16W	CN5351	1-784-564-11	CONNECTOR, BO	ARD TO BO	ARD 12P	
R937	1-216-821-11	METAL CHIP	1K	5%	1/16W			2011			
R938 R939	1-216-821-11 1-216-821-11		1K 1K	5% 5%	1/16W 1/16W			< COIL >			
R941	1-216-821-11	METAL CHIP	1K	5%	1/16W	L5351	1-412-031-11	INDUCTOR CHIP	47uH		
						L5352	1-412-029-11	INDUCTOR CHIP	10uH		
R943		METAL CHIP	150	5%	1/10W						
R944	1-216-864-11	METAL CHIP	0	5%	1/16W			< FLUORESCENT	INDICATOR	<b>?</b> >	
		< TRANSFORME	R >			<b>△</b> ND5351	1-517-325-21	LAMP, FLUORESC	CENT (0.55	INCH)	
<b> ∆</b> T801	1-429-565-21	TRANSFORMER,	, CONVERTE	:R				< TRANSISTOR >			
	,	/16PK/TRV36/TRV			TRV46PK)						
<b>△</b> T801		TRANSFORMER, TR315/TR416/TR			DV/TD716\	Q5351	8-729-039-24	TRANSISTOR FX	(216-TL1		
	(	111010/111410/1114	+10FR/1113	10/1113101	rivitivi toj			< RESISTOR >			
						R5351	1-216-839-11	METAL CHIP	33K	5%	1/16W
		FP-249 FLEXIBLI	E BOARD								= . •
		******		. N				< TRANSFORMER	? >		
			(Re	t.No. 10,0	000 Series)	<b>△</b> T5351	1_//26_0//0 //1	TRANSFORMER,	INI\/EDTED		
	1_659_91/_11	ED-356 ELEVIRI I	E BUVBU			ZE 10001	1-420-049-41	INANOFUNIVIEN,	IIIVENIEK		

1-658-214-11 FP-356 FLEXIBLE BOARD 3-965-551-01 HOLDER (S), SENSOR 3-965-552-01 HOLDER (T), SENSOR

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

# MA-345/346

A-7073-782-A MA-345(B) BOARD, COMPLETE  #**********************************
A-7073-820-A MA-345(SL) BOARD, COMPLETE  **********************************
**************************************
(Ref.No. 9,000 Series)  A-7073-812-A MA-346(VIB) BOARD, COMPLETE  **********************************
A-7073-812-A MA-346(VIB) BOARD, COMPLETE  **********************************
**************************************
**************************************
(TRV36/TRV36PK)  A-7073-873-A MA-346(VZL) BOARD, COMPLETE  ************************  (TRV16/TRV16PK) (Ref.No. 4,000 Series)  (TR315/TR416/TR416PK/TR516PK/TR716/TRV16/TRV16PK/TRV36PK)  CAPACITOR >  J301 1-568-027-11 JACK, SMALL TYPE (MIC (PLUG IN POWER))  COIL >  (TR301 1-216-295-91 SHORT 0  (TR315/TR416/TR416PK/TR516PK/TR716/TRV16/TRV16/TRV16/TRV36/TRV36PK)  TRV36PK)
**************************************
(TRV16/TRV16PK) (Ref.No. 4,000 Series) (TR315/TR416/TR416PK/TR516/TR516PK/TR716/TRV16PK/TRV36/ (TR315/TR416/TR416PK/TR516PK/TR716/TRV16/TRV16PK/TRV36/ TRV36PK) (CAPACITOR > L301 1-414-754-11 INDUCTOR 10uH
< CAPACITOR > L301 1-414-754-11 INDUCTOR 10uH
(TRV43/TRV46/TRV46PK)
C301 1-107-686-11 TANTAL. CHIP 4.7uF 20% 16V
(TRV43/TRV46/TRV46PK) < TRANSISTOR > C302 1-107-826-91 CERAMIC CHIP 0.1uF 10% 16V
(TRV43/TRV46/TRV46PK) Q301 8-729-420-24 TRANSISTOR 2SB1218A-QRS-TX (TRV43/TRV46/TRV46PK) (TRV43/TRV46/TRV46PK)
(TRV43/TRV46/TRV46PK) Q301 8-729-422-51 TRANSISTOR UN5110-QRS-TX C304 1-107-826-91 CERAMIC CHIP 0.1uF 10% 16V (TR315/TR416/TR416PK/TR516/TR516PK/TR716/TRV16/TRV16/TRV16/TRV36/
(TRV43/TRV46/TRV46PK) TRV36PK)
(TRV43/TRV46/TRV46PK) (TRV43/TRV46/TRV46PK)
Q303 8-729-140-75 TRANSISTOR 2SD999-T1-CLCK Q301 1-165-176-11 CERAMIC CHIP 0.047uF 10% 16V Q304 8-729-402-42 TRANSISTOR UN5213-TX
C333 1-162-927-11 CERAMIC CHIP 100PF 5% 50V C335 1-110-563-11 CERAMIC CHIP 0.068uF 10% 16V Q305 8-729-402-42 TRANSISTOR UN5213-TX
C336 1-162-927-11 CERAMIC CHIP 100PF 5% 50V (TR315/TR416/TR416PK/TR516/TR516PK/TR716/TRV16/TRV16/TRV16/KTRV36/ C337 1-107-826-91 CERAMIC CHIP 0.1uF 10% 16V
Q331 8-729-420-24 TRANSISTOR 2SB1218A-QRS-TX C338 1-162-927-11 CERAMIC CHIP 100PF 5% 50V Q332 8-729-230-63 TRANSISTOR 2SD1819A-QRS-TX
C341 1-162-970-11 CERAMIC CHIP 0.01uF 10% 25V
C348 1-107-826-91 CERAMIC CHIP 0.1uF 10% 16V
C349 1-109-982-11 CERAMIC CHIP 1uF 10% 10V R301 1-216-823-11 METAL CHIP 1.5K 5% 1/16W (TRV43/TRV46/TRV46/FRV
C355 1-109-982-11 CERAMIC CHIP 1uF 10% 10V R302 1-216-810-11 METAL CHIP 120 5% 1/16W C367 1-162-970-11 CERAMIC CHIP 0.01uF 10% 25V (TRV43/TRV46/TRV46/FRV46/
C368 1-162-970-11 CERAMIC CHIP 0.01uF 10% 25V R303 1-216-817-11 METAL CHIP 470 5% 1/16W C369 1-135-201-11 TANTALUM CHIP 10uF 20% 4V R304 1-216-309-00 METAL CHIP 5.6 5% 1/10W
C370 1-115-467-11 CERAMIC CHIP 0.22uF 10% 10V (TR315/TR416/TR416PK/TR516/TR516PK/TR716/TRV16/TRV16PK/TRV36/
TRV36PK) C371 1-162-927-11 CERAMIC CHIP 100PF 5% 50V R304 1-216-311-00 METAL CHIP 6.8 5% 1/10W (TRV43/TRV46/TRV46PK)
< CONNECTOR > R305 1-216-302-00 METAL CHIP 2.7 5% 1/10W
* CN301 1-695-320-21 PIN, CONNECTOR (1.5MM)(SMD) 2P R306 1-216-864-11 METAL CHIP 0 5% 1/16W
CN303 1-764-526-11 CONNECTOR, FFC/FPC 18P R308 1-216-837-11 METAL CHIP 22K 5% 1/16W (TR516/TR516PK/TR716/TRV36/TRV46/TRV46/TRV46/TRV46PK)
< DIODE > R308 1-216-864-11 METAL CHIP 0 5% 1/16W P300 1-216-864-11 METAL CHIP 0 5% 1/16W
R309 1-216-847-11 METAL CHIP 150K 5% 1/16W D301 8-719-061-86 DIODE DCR2810 (TRV43/TRV46/TRV46PK) (TR516/TR516PK/TR716/TRV36/TRV36/TRV43/TRV46/TRV46PK)
D302 8-749-060-65 DIODE DCC3810 D303 8-719-061-82 DIODE TLSU1002(TPX1,SONY) R310 1-216-824-11 METAL CHIP 1.8K 5% 1/16W
D305 8-719-073-01 DIODE MA111-(K8).SO R311 1-216-841-11 METAL CHIP 47K 5% 1/16W
(TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) R311 1-216-864-11 METAL CHIP 0 5% 1/16W D309 8-719-067-44 DIODE CL-310IRS-X-TU (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)
(TR315/TR416/TR416PK/TR516PK/TR716/TRV16/TRV16PK/TRV36/
TRV36PK) The components identified by mark △ or dotted line with mark marque △ sont critiques pour la
D331 8-719-073-03 DIODE MA8082-(K8).S0
Replace only with part number specified.  Replace only with part number specified.  Ne les remplacer que par une piéce portant le numéro spécifié.

PD-107

Ne les remplacer que par une piéce portant le numéro spécifié.

sécurité.

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R312	1-216-864-11	METAL CHIP	0	5%	1/16W	C5616	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
11012	1-210-004-11	WILTAL OTTI			TRV46PK)	C5618	1-113-994-11		6.8uF	20%	16V
R313	1-216-864-11	METAL CHIP	0	5%	1/16W	C5619	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
			•	0,0	.,	000.0		02.11.11.10	0.0.0.	. 0 , 0	
R314	1-216-815-11	METAL CHIP	330	5%	1/16W	C5620	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		TR516/TR516PK/TF				C5621	1-135-177-21	TANTALUM CHII		20%	20V
(					TRV36PK)	C5622	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
R315	1-216-864-11	METAL CHIP	0	5%	1/16W	C5624	1-107-688-11	TANTAL. CHIP	1.5uF	20%	10V
			(TRV4	3/TRV46	TRV46PK)	C5625	1-107-688-11	TANTAL. CHIP	1.5uF	20%	10V
R331	1-216-824-11	METAL CHIP	1.8K	5%	1/16W						
R332	1-216-817-11	METAL CHIP	470	5%	1/16W	C5633	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
R334	1-216-864-11	METAL CHIP	0	5%	1/16W	C5701	1-104-911-11	TANTAL. CHIP	33uF	20%	10V
						C5702	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
R335	1-216-864-11	METAL CHIP	0	5%	1/16W	C5703	1-164-661-11	CERAMIC CHIP	0.018uF	10%	50V
R338	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	C5704	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
R341	1-216-838-11	METAL CHIP	27K	5%	1/16W						
R342	1-216-838-11	METAL CHIP	27K	5%	1/16W	<b>△</b> C5705	1-113-521-91	CERAMIC CHIP	12PF	10%	3KV
R344	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	C5706	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
D0.45	1 010 000 11	METAL OLUD	00	F0/	4 /4 C/M	C5801	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
R345	1-216-803-11	METAL CHIP METAL CHIP	33 47K	5% 5%	1/16W 1/16W			< CONNECTOR :			
R367 R368	1-216-841-11 1-216-841-11	METAL CHIP	47K 47K	5% 5%	1/16W			< CONNECTOR :	>		
R369	1-216-829-11	METAL CHIP	47K 4.7K	5% 5%	1/16W	* CN5501	1-573-984-11	CONNECTOR, B	04 DD TO DO	10D 10D	
N309	1-210-029-11	METAL CHIP	4./ N	370	1/1000		1-691-362-11	CONNECTOR, FR			
		< SWITCH >					1-764-709-11	CONNECTOR, FF			
		< SWITGIT >					1-750-360-21	CONNECTOR, FF			
S301	1-692-605-11	SWITCH, SLIDE (I	IGHT ON/	OFF)			1-785-627-21	PIN, CONNECTO			
		TR716/TRV36/TRV3		,	TRV46PK)	0110002	1 700 027 21	Till, COMMECTO	11 (1 0 00/111	<i>D)</i> 101	
S302 (1		SWITCH, PUSH (F			1111 101 11)	CN5803	1-778-508-21	PIN, CONNECTO	R (PC BOAR	D) 6P	
S303		SWITCH, PUSH (F					1-778-509-21	PIN, CONNECTO			
		, , , , , ,	- (-	//			1-766-336-21	CONNECTOR, FF		,	
								< DIODE >			
	A-7073-813-A	PD-107(S6N) BOA									
		**********				DECO4					
						D5604	8-719-976-96	DIODE MA8047			
	(TRV16/TR\	/16PK/TRV36/TRV3	36PK/TRV4	3/TRV46	,	D5605	8-713-102-80	DIODE 1T369-0	01-T8A		
	(TRV16/TR\		36PK/TRV4	3/TRV46	TRV46PK) 000 Series)	D5605 D5703	8-713-102-80 8-719-058-86	DIODE 1T369-0 DIODE PG1101	01-T8A H-TR		
	(TRV16/TR\	/16PK/TRV36/TRV3	36PK/TRV4	3/TRV46	,	D5605	8-713-102-80	DIODE 1T369-0 DIODE PG1101	01-T8A H-TR		
	(TRV16/TR\		36PK/TRV4	3/TRV46	,	D5605 D5703	8-713-102-80 8-719-058-86	DIODE 1T369-0 DIODE PG1101 DIODE MA111-	01-T8A H-TR -(K8).S0		
05501	·	/16PK/TRV36/TRV3 < CAPACITOR >	86PK/TRV4 (Re	3/TRV46, f.No. 10,0	000 Series)	D5605 D5703	8-713-102-80 8-719-058-86	DIODE 1T369-0 DIODE PG1101	01-T8A H-TR -(K8).S0		
C5501	1-107-826-91	/16PK/TRV36/TRV3  < CAPACITOR >  CERAMIC CHIP	86PK/TRV4 (Re 0.1uF	3/TRV46/ f.No. 10,0 10%	000 Series)	D5605 D5703 D5704	8-713-102-80 8-719-058-86 8-719-073-01	DIODE 1T369-0 DIODE PG1101 DIODE MA111-0 < FERRITE BEAL	01-T8A H-TR -(K8).S0		
C5502	1-107-826-91 1-107-826-91	/16PK/TRV36/TRV3  < CAPACITOR >  CERAMIC CHIP CERAMIC CHIP	36PK/TRV4 (Re 0.1uF 0.1uF	3/TRV46/ f.No. 10,0 10% 10%	16V 16V	D5605 D5703 D5704	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22	DIODE 1T369- DIODE PG1101 DIODE MA1111- < FERRITE BEAL FERRITE OUH	01-T8A H-TR -(K8).S0		
C5502 C5503	1-107-826-91 1-107-826-91 1-162-970-11	/16PK/TRV36/TRV3  < CAPACITOR >  CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF 0.01uF	10% 10% 10%	16V 16V 25V	D5605 D5703 D5704 FB5502 FB5503	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22	DIODE 1T369- DIODE PG1101 DIODE MA1111- < FERRITE BEAD FERRITE OUH FERRITE OUH	01-T8A H-TR -(K8).S0		
C5502 C5503 C5504	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11	<pre>&lt; CAPACITOR &gt;  CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP</pre>	0.1uF 0.01uF 0.01uF 0.01uF	13/TRV46/ f.No. 10,0 10% 10% 10% 10%	16V 16V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANY CONTROL PG1101 COMPANY CONTROL PG1101 CONTROL PG1101 COMPANY CONTRO	01-T8A H-TR -(K8).S0		
C5502 C5503	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11	/16PK/TRV36/TRV3  < CAPACITOR >  CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF 0.01uF	10% 10% 10%	16V 16V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANY CONTROL PG1101 COMPANY CONTROL PG1101 CONTROL PG1101 COMPANY CONTRO	01-T8A H-TR -(K8).S0		
C5502 C5503 C5504 C5505	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11	CAPACITOR > CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF	10% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANY COMPANY	01-T8A H-TR -(K8).S0		
C5502 C5503 C5504 C5505	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11	CAPACITOR >  CERAMIC CHIP	0.1uF 0.01uF 0.01uF 0.01uF	10% 10% 10% 10% 10% 10% 10%	16V 16V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANY CONTROL PG1101 COMPANY CONTROL PG1101 CONTROL PG1101 COMPANY CONTRO	01-T8A H-TR -(K8).S0		
C5502 C5503 C5504 C5505 C5506 C5507	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF	10% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANY COMPANY	01-T8A H-TR -(K8).S0	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF	10% 10% 10% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANIE PERRITE OUH FERRITE OUH FERRITE OUH  C IC >  C MB40D001F	01-T8A H-TR -(K8).S0	R	
C5502 C5503 C5504 C5505 C5506 C5507	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANIE PERRITE OUH FERRITE OUH FERRITE OUH  C IC >  C MB40D001F	01-T8A H-TR -(K8).S0	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21	CAPACITOR > CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP TANTALUM CHIP TANTALUM CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.1uF 10uF 0.1uF 3.3uF	10% 10% 10% 10% 10% 10% 10% 10% 20% 10% 20%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27	DIODE 1T369-CDIODE PG1101 DIODE MA1111-COMPANIE PG1101  FERRITE OUH COMPANIE PG1101  COMPANI	D1-T8A H-TR -(K8).S0 D >	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21	CAPACITOR > CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP TANTALUM CHIP TANTALUM CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.1uF 10uF 0.1uF 3.3uF	10% 10% 10% 10% 10% 10% 10% 10% 20% 10% 20%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184	D1-T8A H-TR -(K8).S0 D >	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11	CAPACITOR > CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP TANTALUM CHIP TANTALUM CHIP CERAMIC CHIP TANTALUM CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 1.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-104-851-11 1-107-826-91 1-115-339-11	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP TANTALUM CHIP TANTALUM CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 10uF 10uF 10uF 10uF 10uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-104-851-11 1-107-826-91 1-115-339-11 1-115-339-11	CAPACITOR > CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP TANTALUM CHIP TANTALUM CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 10uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-104-851-11 1-107-826-91 1-115-339-11	CAPACITOR > CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP TANTALUM CHIP TANTALUM CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 10uF 10uF 10uF 10uF 10uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTALUM CHIP TANTALUM CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701 IC5801	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70 8-759-573-02	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-107-826-91	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTALUM CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701 IC5801	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70 8-759-573-02	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R 2	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-107-826-91 1-109-982-11	CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTALUM CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701 IC5801 L5501 L5605	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-39-27 8-759-495-00 8-759-327-01 8-759-573-02	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R 2 10uH 27uH	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-107-826-91 1-109-982-11 1-109-982-11 1-104-851-11	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTALUM CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 10V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701 IC5801	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-539-27 8-759-495-00 8-759-327-01 8-759-075-70 8-759-573-02	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR	D1-T8A H-TR -(K8).S0 D > PFV-G-BND-E E2) TE85R 2	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5517 C5518 C5519 C5520	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-107-826-91 1-109-982-11 1-107-826-91 1-109-982-11 1-104-851-11 1-107-826-91	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701 IC5801 L5501 L5605	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-39-27 8-759-495-00 8-759-327-01 8-759-573-02	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH CIC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F- IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-107-826-91 1-109-982-11 1-109-982-11 1-104-851-11	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTALUM CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 10V	D5605 D5703 D5704 FB5502 FB5503 FB5604 IC5501 IC5502 IC5601 IC5602 IC5701 IC5801 L5501 L5605	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-39-27 8-759-495-00 8-759-327-01 8-759-573-02	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH	R	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5520 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-109-982-11 1-109-982-11 1-104-851-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91	CAPACITOR >  CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP	0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 20% 10% 20% 10% 20% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 16V 10V 16V 20V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5501 L5605 L5701	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-339-27 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR INDUCTOR  < TRANSISTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E  E2) TE85R 2  10uH 27uH 150uH >		
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5520 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-109-982-11 1-104-851-11 1-107-826-91 1-109-982-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-687-11	CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5501 L5605 L5701	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-530-19 8-759-339-27 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR TRANSISTOR  TRANSISTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH > 2SB1218A-Qi		
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5520 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-109-982-11 1-104-851-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91	CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5501 L5605 L5701	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-392-70 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR TRANSISTOR  TRANSISTOR TRANSISTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH > 2SB1218A-Qi JN5213-TX		
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5502 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-104-851-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91	CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5605 L5701 Q5501 Q5601 Q5601 Q5602	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-392-70 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21 8-729-420-24 8-729-402-42 8-729-402-42	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F- IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH > 2SB1218A-QF JN5213-TX JN5213-TX	RS-TX	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5502 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-104-851-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91	CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 10% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5501 L5605 L5701	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-392-70 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21 8-729-420-24 8-729-402-42 8-729-402-42	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F-IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR TRANSISTOR  TRANSISTOR TRANSISTOR	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH > 2SB1218A-QF JN5213-TX JN5213-TX	RS-TX	
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5502 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-104-851-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91	CERAMIC CHIP TANTAL. CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5501 L5605 L5701 Q5601 Q5601 Q5602 Q5605	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-392-70 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21 8-729-402-42 8-729-402-42 8-729-402-42 8-729-230-63	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAU FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F- IC BU9729K-E2  < COIL >  INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR TRANSISTOR	D1-T8A H-TR -(K8).S0 D > D > D > D > D > D > D > D > D > D >	RS-TX RS-TX	és par une
C5502 C5503 C5504 C5505 C5506 C5507 C5508 C5509 C5511 C5512 C5513 C5514 C5515 C5516 C5516 C5517 C5518 C5519 C5502 C5602	1-107-826-91 1-107-826-91 1-162-970-11 1-162-970-11 1-162-970-11 1-164-004-11 1-104-851-11 1-107-826-91 1-135-180-21 1-109-982-11 1-107-826-91 1-115-339-11 1-115-339-11 1-115-339-11 1-104-851-11 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91 1-107-826-91	CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.1uF 0.1uF 0.1uF 0.01uF 0.01uF 0.01uF 0.01uF 0.01uF 10uF 0.1uF 10uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF 0.1uF	10% 10% 10% 10% 10% 10% 20% 10% 20% 10% 20% 10% 10% 10% 10% 10% 10% 10%	16V 16V 25V 25V 25V 25V 10V 16V 6.3V 10V 16V 50V 50V 50V 25V 25V	D5605 D5703 D5704 FB5502 FB5503 FB5603 FB5604 IC5501 IC5602 IC5701 IC5801 L5501 L5605 L5701 Q5601 Q5601 Q5602 Q5605	8-713-102-80 8-719-058-86 8-719-073-01 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 1-500-238-22 8-759-539-27 8-759-392-70 8-759-327-01 8-759-075-70 8-759-573-02 1-414-754-11 1-412-956-21 1-416-919-21 8-729-420-24 8-729-402-42 8-729-402-42	DIODE 1T369-CDIODE PG1101 DIODE MA1111-  < FERRITE BEAD FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH FERRITE OUH  < IC >  IC MB40D001F IC IR3Y37A4 IC LZ9GH184 IC NJM062V(T IC TA75S393F- IC BU9729K-E2  < COIL >  INDUCTOR INDUC	D1-T8A H-TR -(K8).S0 D >  PFV-G-BND-E E2) TE85R 2  10uH 27uH 150uH > 2SB1218A-QF JN5213-TX JN5213-TX	RS-TX RS-TX	

⚠ are critical for safety.

Replace only with part number specified.

5%

C5612 1-162-926-11 CERAMIC CHIP 82PF

50V

# PD-107

Ref. No.	Part No.	Description			Remark	Ref. No	<u>. Part No.</u>	Description			Remark
Q5606	8-729-420-24	TRANSISTOR	2SB1218A-QF	RS-TX		R567		METAL CHIP	0	5%	1/16W
05007	0.700.000.00	TDANIOIOTOD	00040404 01	00 TV		R567	6 1-216-864-11	METAL CHIP	0	5%	1/16W
Q5607 Q5608	8-729-230-63 8-729-420-24	TRANSISTOR TRANSISTOR				R567	9 1-216-805-11	METAL CHIP	47	5%	1/16W
Q5701		TRANSISTOR				R568		METAL CHIP	47	5%	1/16W
Q5702	8-729-015-74	TRANSISTOR	UN5111-TX			R568			47	5%	1/16W
						R568			100K	5%	1/16W
		< RESISTOR >				R568	6 1-216-845-11	METAL CHIP	100K	5%	1/16W
R5501	1-216-840-11	METAL CHIP	39K	5%	1/16W	R568	8 1-216-864-11	METAL CHIP	0	5%	1/16W
R5505	1-216-841-11	METAL CHIP	47K	5%	1/16W	R569		METAL CHIP	470K	5%	1/16W
R5512	1-216-837-11		22K	5%	1/16W	R569			33K	5%	1/16W
R5513			12K	5%	1/16W	R569			10K	5%	1/16W
R5516	1-216-837-11	METAL CHIP	22K	5%	1/16W	R569	6 1-216-864-11	METAL CHIP	0	5%	1/16W
R5517	1-216-835-11	METAL CHIP	15K	5%	1/16W	R570	3 1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5518	1-216-839-11	METAL CHIP	33K	5%	1/16W	R570		METAL CHIP	1.8K	5%	1/10W
R5520	1-216-852-11		390K	5%	1/16W	R570			100K	5%	1/16W
R5521	1-216-834-11	METAL CHIP	12K	5%	1/16W	R570			6.8K	5%	1/16W
R5522	1-216-840-11	METAL CHIP	39K	5%	1/16W	R570	7 1-216-837-11	METAL CHIP	22K	5%	1/16W
R5528	1-218-895-11	RES,CHIP	100K	0.50%	1/16W	R570	8 1-216-810-11	METAL CHIP	120	5%	1/16W
R5531	1-216-821-11	METAL CHIP	1K	5%	1/16W	R570		METAL CHIP	470	5%	1/16W
R5532	1-216-841-11	METAL CHIP	47K	5%	1/16W	R571			0	5%	1/16W
R5537	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	R580		METAL CHIP	1.5K	5%	1/16W
R5541	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R580	2 1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R5542	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	R580	3 1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R5544	1-216-821-11	METAL CHIP	1K	5%	1/16W	R580		METAL CHIP	8.2K	5%	1/16W
R5545	1-216-864-11	METAL CHIP	0	5%	1/16W	R580	5 1-216-838-11	METAL CHIP	27K	5%	1/16W
R5603	1-216-864-11	METAL CHIP	0	5%	1/16W	R580	6 1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R5604	1-216-864-11	METAL CHIP	0	5%	1/16W	R581	1 1-216-864-11	METAL CHIP	0	5%	1/16W
R5607	1-216-864-11	METAL CHIP	0	5%	1/16W	R581	2 1-216-855-11	METAL CHIP	680K	5%	1/16W
R5608	1-216-864-11	METAL CHIP	0	5%	1/16W						.,
R5610	1-216-845-11	METAL CHIP	100K	5%	1/16W			< SWITCH >			
R5612	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R5613	1-216-841-11	METAL CHIP	47K	5%	1/16W	S580			TILE (LCD BRI		
DE045	1 010 010 11	METAL OLUB	1001/	<b>5</b> 0/	4 (4 0) 4 (	S580		SWITCH, TAC			
R5615	1-216-848-11	METAL CHIP	180K	5%	1/16W	S580			TILE (VOLUME	,	
R5617 R5621	1-216-833-11 1-216-857-11	METAL CHIP	10K 1M	5% 5%	1/16W 1/16W	S580	4 1-692-088-41	SWITCH, TAC	TILE (VOLUME	: -)	
	1-216-845-11		100K	5%	1/16W			< TRANSFOR	MFR \		
R5623	1-216-845-11		100K	5%	1/16W			\ 110 (10) O10	IVILITY		
						<b>△</b> T570	1 1-433-452-11	TRANSFORM	er, inverter		
R5624	1-216-841-11	METAL CHIP	47K	5%	1/16W						
R5625	1-218-895-11	RES,CHIP	100K	0.50%	1/16W						
R5627 R5628	1-218-901-11 1-216-864-11	METAL CHIP	180K 0	0.50% 5%	1/16W 1/16W		Δ_7073_788_Δ	PJ-90 BOARD	COMPLETE		
R5630	1-216-821-11	METAL CHIP	1K	5%	1/16W		A-7073-700-A	*******	*		
110000	1 210 021 11	WEINE OIII	***	0 70	171011		(	(TR315/TR416/	TR416PK/TR5	16/TR516	PK/TR716)
R5632	1-216-864-11	METAL CHIP	0	5%	1/16W				(R	lef.No. 4,	000 Series)
R5637	1-216-864-11	METAL CHIP	0	5%	1/16W		A 7070 000 :	D10400 BC:	DD 00145155	-	
R5640 R5641	1-216-845-11	METAL CHIP	100K	5%	1/16W		A-7073-809-A	PJ-91(V) BOA	\KD, COMPLET *******		
R5643	1-216-839-11 1-216-845-11	METAL CHIP METAL CHIP	33K 100K	5% 5%	1/16W 1/16W		(TR\/16/TR\	/16PK/TRV36/1			/TR\//6PK\
113043	1-210-040-11	WILTAL OTTI	TOOK	J /0	1/1000		(1110/10/111	V 101 IV/111V30/1			000 Series)
R5644	1-216-839-11	METAL CHIP	33K	5%	1/16W				,		,
R5651	1-218-883-11	RES,CHIP	33K	0.50%	1/16W			< CAPACITOR	l >		
R5652	1-218-879-11		22K	0.50%	1/16W	0404	1 110 500 11	TANITAL OLUF	. 47 5	000/	0.01/
R5653	1-218-883-11		33K	0.50%	1/16W	C101	1-110-569-11	TANTAL. CHIF	P 47uF	20%	6.3V
R5654	1-218-879-11	RES,CHIP	22K	0.50%	1/16W			< CONNECTO	R >		
R5657	1-216-864-11	METAL CHIP	0	5%	1/16W						
R5658	1-216-864-11	METAL CHIP	0	5%	1/16W	* CN10	1-764-521-11	CONNECTOR,	FFC/FPC (ZIF)	12P	
R5659	1-216-864-11	METAL CHIP	0	5%	1/16W						
R5660	1-216-864-11	METAL CHIP	0	5%	1/16W						
R5661	1-216-864-11	METAL CHIP	0	5%	1/16W						
R5669	1-216-864-11	METAL CHIP	0	5%	1/16W		The components	identified by	Les composar	nts identif	iés par une
R5670	1-216-864-11	METAL CHIP	0	5%	1/16W		mark ∆ or dotted l		marque ∆ so		
R5671	1-216-864-11	METAL CHIP	0	5%	1/16W		$\triangle$ are critical for	safety.	sécurité.	1	
							Replace only with	n part number	Ne les remp		
					6-2	22	specified.		piéce portant	le numér	o spécifié.

PJ-90	SE-80/81	VC-215

Ref. No.	Part No.	Description < DIODE >	<u>Remark</u>	Ref. No. C466	Part No. 1-162-970-11	Description CERAMIC CHI	
D102 D103		DIODE 01ZA8.2(TPL3) DIODE 01ZA8.2(TPL3)				< CONNECTOR	(TR716/TRV43/TRV46/TRV46PK) R >
		< JACK >		CN451	1-766-646-21 R716/TRV16/TRV	,	FFC/FPC 10P RV36PK/TRV43/TRV46/TRV46PK)
J101	1-537-747-41	TERMINAL BOARD (VIDEO/AUDIO)		(1)		< DIODE >	,
		< COIL >		D451	8-719-045-87		Z082WA-(K8).S0
L101 L102	1-414-072-11 1-216-295-91	INDUCTOR 1uH SHORT 0		D451	8-719-062-16 (TRV16/TRV	DIODE 01ZA	(TRV43/TRV46:US,E,HK/TRV46PK) 8.2(TPL3) TRV36PK/TRV43/TRV46/TRV46PK)
		< TRANSISTOR >			(	< IC >	,
Q101 Q102	8-729-101-07 8-729-230-63	TRANSISTOR 2SB798-T1-DLDK TRANSISTOR 2SD1819A-QRS-TX		IC451	8-759-489-19		GR-8JG-E2 (TR716/TRV43/TRV46/TRV46PK)
		< RESISTOR >				< JACK >	(1117 10/111743/111740/111740117)
R101 R102 R103 R104	1-216-864-11 1-216-138-00 1-216-830-11 1-216-820-11	METAL CHIP         0         5%           METAL CHIP         3.3         5%           METAL CHIP         5.6K         5%           METAL CHIP         820         5%	1/16W 1/8W 1/16W 1/16W	J451		JACK (SMALL /16PK/TRV36/T	. TYPE) 1P (HEADPHONE) RV36PK/TRV43/TRV46/TRV46PK)
R105	1-216-836-11	METAL CHIP 18K 5%	1/16W			< COIL >	
R109	1-216-821-11	METAL CHIP 1K 5%	1/16W	L451	1-414-754-11	INDUCTOR	10uH (TR716/TRV43/TRV46/TRV46PK)
	4 7070 700 4	05 00 MM DOADD 00 MD 575 (TD	740)	L453	1-216-295-91 (TRV16/TRV		0 TRV36PK/TRV43/TRV46/TRV46PK)
	A-7073-789-A	SE-80(MM) BOARD, COMPLETE (TR	1/16)			< RESISTOR >	>
	A-7073-810-A	SE-81(VMM) BOARD, COMPLETE ***********		R451	1-216-837-11	METAL CHIP	22K 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
		(TRV43/TRV46	6/TRV46PK)	R452	1-216-837-11	METAL CHIP	22K 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
	A-7073-825-A	SE-81(V) BOARD, COMPLETE ***********************************		R453	1-216-837-11	METAL CHIP	22K 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
		(TRV16/TRV16PK/TRV36	6/TRV36PK) ,000 Series)	R454	1-216-837-11	METAL CHIP	22K 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
		< CAPACITOR >	,000 001103)	R455	1-216-864-11	METAL CHIP	0 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
C451	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V	R456	1-216-857-11	METAL CHIP	1M 5% 1/16W
C452	1-164-004-11	(TR716/TRV43/TRV46 CERAMIC CHIP 0.1uF 10% (TR716/TRV43/TRV46	25V	R458	1-216-833-11	METAL CHIP	(TR716/TRV43/TRV46/TRV46PK) 10K 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
C453	1-104-847-11	TANTAL. CHIP 22uF 20% (TR716/TRV43/TRV46	4V ′	R459	1-216-857-11	METAL CHIP	1M 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
C454	1-104-847-11	TANTAL. CHIP 22uF 20% (TR716/TRV43/TRV46	4V	R461	1-216-835-11	METAL CHIP	15K 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
C457	1-164-343-11	CERAMIC CHIP 0.056uF 10% (TR716/TRV43/TRV46	25V	R463	1-216-809-11	METAL CHIP	100 5% 1/16W (TR716/TRV43/TRV46/TRV46PK)
C458	1-164-343-11	CERAMIC CHIP 0.056uF 10%	25V			< SENSOR >	
C459	1-164-343-11		25V	SE451	1-803-041-11	SENSOR, ANG	GULAR VELOCITY (PITCH)
C460	1-110-666-11		6.3V	SE452	1-803-041-21	SENSOR, ANG	(TR716/TRV43/TRV46/TRV46PK) GULAR VELOCITY (YAW)
C461	1-164-343-11	(TR716/TRV43/TRV46/ CERAMIC CHIP 0.056uF 10%	25V				(TR716/TRV43/TRV46/TRV46PK)
C462	1-110-666-11	(TR716/TRV43/TRV46/ ELECT CHIP 22uF 20% (TR716/TRV43/TRV46/	6.3V		A-7094-110-A		) BOARD, COMPLETE
C464	1-110-501-11	CERAMIC CHIP 0.33uF 10%	16V			******	**************************************

A-7094-111-A VC-215(MMCB0) BOARD, COMPLETE (TR716)

(TR716/TRV43/TRV46/TRV46PK) 1-135-259-11 TANTAL CHIP 10uF 20% 6.3V

(TR716/TRV43/TRV46/TRV46PK)

C465

D ( N	D					l	D	<b>.</b>			
Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
	A-7094-112-A	VC-215(ZSL0) BC		,	R315)	C062	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
		*********	*****	****		C065 C068	1-162-970-11 1-162-921-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 33PF	10% 5%	25V 50V
	A-7094-117-A	VC-215(VZB0) B0	DARD, COM	PLETE		0000	1-102-321-11	OLITAWIO OTIII	0011	<b>J</b> /0	30 V
		*******				C069	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
				(TRV36/	TRV36PK)	C070	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
						C071	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
	A-7094-118-A	VC-215(VMMIB0				C072	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
		**********				C073	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
			(IRV4)	3/ I K V 40/	TRV46PK)	C074	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
	A-7094-179-A	VC-215(ZLCO) B(	OARD. COM	PLETE		C075	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
		******				C076	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
				(TR416	TR416PK)	C078	1-162-928-11	CERAMIC CHIP	120PF	5%	50V
	. 7004 004 4	110 045 (171 0) 0	0.100.001.1	D. ETE		C079	1-162-922-11	CERAMIC CHIP	39PF	5%	50V
	A-7094-204-A	VC-215(VZLO) BO				C080	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
					TRV16PK)	C080	1-162-916-11	CERAMIC CHIP	12PF	5%	50V 50V
			(Re	`	000 Series)	C082	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
			,	, -	,	C083	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
		< CAPACITOR >				C085	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
0004	4 400 070 44	OEDANAIO OLUB	0.04 5	400/	051/	0000	4 445 450 44	OED ANALO OLUB	4 -		401/
C001 C004	1-162-970-11 1-162-970-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	25V 25V	C086 C088	1-115-156-11 1-162-957-11	CERAMIC CHIP CERAMIC CHIP	1uF 220PF	5%	10V 50V
C004	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V	C089	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C007	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V	C090	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C008	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C152	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C009	1-164-217-11	CERAMIC CHIP	150PF	5%	50V	C156	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C010 C011	1-162-970-11 1-162-926-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 82PF	10% 5%	25V 50V	C158 C159	1-162-970-11 1-164-346-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 1uF	10%	25V 16V
C012	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C160	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C017	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C161	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C018	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C163	1-135-180-21	TANTALUM CHIP		20%	6.3V
C019	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C166	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C021 C022	1-164-156-11 1-162-970-11	CERAMIC CHIP CERAMIC CHIP	0.1uF 0.01uF	10%	25V 25V	C168 C169	1-164-489-11 1-109-982-11	CERAMIC CHIP CERAMIC CHIP	0.22uF 1uF	10% 10%	16V 10V
C023	1-165-176-11		0.047uF	10%	16V	C170	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C024	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	C182	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C026		CERAMIC CHIP	0.01uF	10%	25V	C184		CERAMIC CHIP	0.01uF	10%	25V
C027		CERAMIC CHIP	0.01uF	10%	25V	C185	1-126-246-11		220uF	20%	4V
C028 C029	1-135-259-11	CERAMIC CHIP	10uF 0.01uF	20% 10%	6.3V 25V	C186 C188	1-135-259-11 1-135-181-21		10uF 4 7uF	20% 20%	6.3V 6.3V
0020	1 102 070 11	OLI II MINIO OTTI	0.0141	10 /0	201	0100	1 100 101 21	TANK TALONI OTTI	1.7 01	2070	0.0 V
C030	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C190	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C031		CERAMIC CHIP	0.01uF	10%	25V	C191	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C032		CERAMIC CHIP	0.047uF	10%	16V	C192	1-135-157-21	TANTALUM CHIP		20%	6.3V
C033 C034	1-165-176-11	CERAMIC CHIP CERAMIC CHIP	0.047uF 0.1uF	10% 10%	16V 16V	C202 C204	1-107-682-11 1-162-964-11	CERAMIC CHIP CERAMIC CHIP	1uF 0.001uF	10% 10%	16V 50V
0001	1 107 020 01	OLI II MINIO OTTI	0.141	10 /0	100	0201	1 102 001 11	OLITAWIIO OIIII	0.00141	1070	001
C035	1-162-920-11	CERAMIC CHIP	27PF	5%	50V	C205	1-115-156-11	CERAMIC CHIP	1uF		10V
C036	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C206	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C037	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C207	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C039 C041	1-162-970-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.1uF	10% 10%	25V 16V	C209 C210	1-162-915-11 1-162-922-11	CERAMIC CHIP CERAMIC CHIP	10PF 39PF	0.5PF 5%	50V 50V
0041	1-107-020-91	CENAIMIC CITIF	O. Tui	10 /0	100	0210	1-102-922-11	CENAIVIIC CITIF	3311	J /0	30 V
C042	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C211	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C043	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C212	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
C048	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C217	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C049	1-162-970-11		0.01uF	10%	25V 25V	C218	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C050	1-102-9/0-11	CERAMIC CHIP	0.01uF	10%	201	C219	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C052	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C224	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C053	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C225	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C055	1-162-970-11		0.01uF	10%	25V	C226	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C058	1-162-968-11		0.0047uF	10%	50V	C227	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C059	1-164-217-11	CERAMIC CHIP	150PF	5%	50V	C229	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C060	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	C230	1-115-156-11	CERAMIC CHIP	1uF		10V
C061		CERAMIC CHIP	0.01uF	10%	25V	C232	1-164-156-11		0.1uF		25V
						I					

D ( N	B . N	5			5 .	L D ( N	D N	5			5 .
Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
C233	1-162-638-11	CERAMIC CHIP	1uF	100/	16V	C412	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C234 C235	1-162-970-11 1-162-970-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	25V 25V	C414	1-164-156-11	CERAMIC CHIP	0.1uF		25V
0200	1-102-370-11	OLITAWIO OTIII	0.0101	10 /0	201	C415	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C237	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C416	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C239	1-115-156-11	CERAMIC CHIP	1uF		10V	C417	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C245	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C418	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C246 C247	1-162-970-11 1-162-638-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 1uF	10%	25V 16V	C419	1-164-156-11	CERAMIC CHIP	0.1uF		25V
0241	1-102-030-11	CENAINIO OTIIF	Tui		100	C420	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C250	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C451	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C301	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C452	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C304	1-162-925-11	CERAMIC CHIP	68PF	5%	50V	C453	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C307 C308	1-135-151-21 1-162-638-11	TANTALUM CHIP CERAMIC CHIP	4.7uF 1uF	20%	4V 16V	C454	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
0000	1-102-030-11	OLITAWIO OTIII	Tui		100	C455	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C309	1-135-202-21	TANTAL. CHIP	22uF	20%	4V	C456	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C312	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C457	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C316	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C458	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C318 C319	1-135-201-11 1-115-467-11	TANTALUM CHIP CERAMIC CHIP	10uF 0.22uF	20% 10%	4V 10V	C459	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
0313	1-113-407-11	CENAIMIC CITIF	0.2241	10 /0	100	C460	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C320	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C461	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C322	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	C462	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C325	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C463	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C326 C328	1-109-982-11 1-163-021-91	CERAMIC CHIP CERAMIC CHIP	1uF 0.01uF	10% 10%	10V 50V	C464	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
0320	1-103-021-91	CENAINIC CITIF	0.0101	10 /0	30 V	C465	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C332	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C467	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C333	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	C468	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C335	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C469	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C337 C338	1-109-982-11 1-109-982-11	CERAMIC CHIP CERAMIC CHIP	1uF 1uF	10% 10%	10V 10V	C470	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
0330	1-109-902-11	CENAIMIC CITIF	Tui	10 /0	100	C471	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C340	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C472	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C342	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	C473	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C346	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C474	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C347 C349	1-162-970-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	25V 25V	C475	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
0040	1-102-370-11	OLITAWIO OTIII	0.0101	10 /0	201	C476	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C371	1-104-908-11	TANTAL. CHIP	47uF	20%	4V	C478	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
		/16PK/TRV36/TRV3			,	C480		CERAMIC CHIP	0.022uF	10%	25V
C372		TANTAL. CHIP TANTALUM CHIP		20%	4V	C483		CERAMIC CHIP	0.1uF		25V
C378		14NTALUM CHIP 16PK/TRV36/TRV3		20% 3/TRV46/	6.3V /TRV46PK)	C484	1-104-130-11	CERAMIC CHIP	0.1uF		25V
C380		TANTALUM CHIP		20%	6.3V	C485	1-164-505-11	CERAMIC CHIP	2.2uF		16V
		/16PK/TRV36/TRV3		3/TRV46	TRV46PK)	C486	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C381		CERAMIC CHIP			16V	C487	1-162-957-11		220PF	5%	50V
	(TRV16/TRV	/16PK/TRV36/TRV3	36PK/TRV43	3/TRV46/	(TRV46PK)	C488 C489	1-107-826-91 1-162-962-11		0.1uF 470PF	10% 10%	16V 50V
C382	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	0409	1-102-902-11	GENAIVIIG GHIF	4/0//	10 /0	30 V
		/16PK/TRV36/TRV3				C501	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C383			0.1uF	10%	16V	C502	1-162-964-11		0.001uF	10%	50V
0004	`	/16PK/TRV36/TRV3			,	C503	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C384		CERAMIC CHIP /16PK/TRV36/TRV3	0.1uF 36PK/TRV/4°	10% 3/TBV/46	16V (TRV/46PK)	C504 C506	1-162-922-11 1-115-156-11	CERAMIC CHIP CERAMIC CHIP	39PF 1uF	5%	50V 10V
C385		CERAMIC CHIP		10%	16V	0300	1 110 100 11	OLITAWIO OTIII	Tui		100
		/16PK/TRV36/TRV3		3/TRV46/	TRV46PK)	C507	1-115-156-11	CERAMIC CHIP	1uF		10V
C386		CERAMIC CHIP		10%	16V	C509	1-107-682-11		1uF	10%	16V
	(TRV16/TRV	/16PK/TRV36/TRV3	36PK/TRV43	3/TRV46	TRV46PK)	C511	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C387	1-104-847-11	ΤΔΝΤΔΙ CHIP	22uF	20%	4V	C512 C513	1-107-826-91 1-115-156-11	CERAMIC CHIP CERAMIC CHIP	0.1uF 1uF	10%	16V 10V
0307		/16PK/TRV36/TRV3				0313	1-113-130-11	OLIMINIO OIIII	Tui		100
C388	1-162-961-11	CERAMIC CHIP	330PF	10%	50V ´	C514	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
		/16PK/TRV36/TRV3			,	C515	1-162-917-11		15PF	5%	50V
C402		CERAMIC CHIP	1uF	10%	10V	C516	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C404 C405		CERAMIC CHIP CERAMIC CHIP	10PF 10PF	0.5PF 0.5PF	50V 50V	C517 C518	1-115-467-11 1-162-964-11	CERAMIC CHIP CERAMIC CHIP	0.22uF 0.001uF	10% 10%	10V 50V
J-100	1 102 U10-11	OLI II MINIO OTTI	1011	0.011	00 V	0010	1 102 007-11	OLI II MINO OTHE	0.00 iui	10/0	00 V
C406		CERAMIC CHIP	0.01uF	10%	25V	C519	1-107-826-91		0.1uF	10%	16V
C410		CERAMIC CHIP	1uF	10%	10V	C520	1-162-970-11		0.01uF	10%	25V
C411	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V	C521	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

D.C.N.	D. I.N.	December 1			D 1	L D. C.N.	D. I.N.	December 1	D I
Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
C522 C523	1-107-826-91 1-115-467-11	CERAMIC CHIP CERAMIC CHIP	0.1uF 0.22uF	10% 10%	16V 10V	C754	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V (TRV43/TRV46/TRV46PK)
C524	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	C755	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V (TRV43/TRV46/TRV46PK)
C525	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C756	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C526 C527	1-107-826-91 1-107-826-91	CERAMIC CHIP CERAMIC CHIP	0.1uF 0.1uF	10% 10%	16V 16V	C757	1-135-201-11	TANTALUM CHIP	(TRV43/TRV46/TRV46PK) 10uF 20% 4V
C528	1-109-982-11	CERAMIC CHIP	1uF	10%	10V				(TRV43/TRV46/TRV46PK)
C529	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	C758	1-109-982-11	CERAMIC CHIP	1uF 10% 10V (TRV43/TRV46/TRV46PK)
C530	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V				,
C531 C552	1-104-752-11 1-162-968-11	TANTAL. CHIP CERAMIC CHIP	33uF 0.0047uF	20% 10%	6.3V 50V	C759	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V (TRV43/TRV46/TRV46PK)
C553	1-162-970-11	CERAMIC CHIP	0.0047ui 0.01uF	10%	25V	C760	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C554	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C761	1-162-970-11	CERAMIC CHIP	(TRV43/TRV46/TRV46PK) 0.01uF 10% 25V
C555	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V				(TRV43/TRV46/TRV46PK)
C556 C557	1-162-970-11 1-162-962-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 470PF	10% 10%	25V 50V	C762	1-164-668-11	CERAMIC CHIP	510PF 5% 50V (TRV43/TRV46/TRV46PK)
C558	1-102-902-11	CERAMIC CHIP	0.22uF	10%	10V	C763	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
	1 100 070 11	OFD ANALO OLUB	0.04 5	100/	05)/				(TRV43/TRV46/TRV46PK)
C559 C560	1-162-970-11 1-164-156-11	CERAMIC CHIP CERAMIC CHIP	0.01uF 0.1uF	10%	25V 25V	C764	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C561	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	0704	1 100 101 21	IAMIALOW OF	(TRV43/TRV46/TRV46PK)
C562	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	C765	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C563	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C766	1-109-982-11	CERAMIC CHIP	(TRV43/TRV46/TRV46PK) 1uF 10% 10V
C564	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V				(TRV43/TRV46/TRV46PK)
C565	1-164-156-11	CERAMIC CHIP	0.1uF		25V 10V	C767	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V
C566 C567	1-115-156-11 1-162-964-11	CERAMIC CHIP CERAMIC CHIP	1uF 0.001uF	10%	50V	C768	1-162-909-11	CERAMIC CHIP	(TRV43/TRV46/TRV46PK) 4PF 0.25PF 50V
C569	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V				(TRV43/TRV46/TRV46PK)
C570	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C769	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V
C571	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	_			(TRV43/TRV46/TRV46PK)
C572 C605	1-135-201-11	TANTALUM CHIP		20% 20%	4V 20V	C770	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V (TRV43/TRV46/TRV46PK)
0000		/16PK/TRV36/TRV3				C771	1-162-921-11	CERAMIC CHIP	33PF 5% 50V
C607	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C772	1-109-982-11	CERAMIC CHIP	(TRV43/TRV46/TRV46PK) 1uF 10% 10V
C610	1-164-156-11	CERAMIC CHIP	0.1uF		25V	0112	1-109-902-11	CENAIVIIC CHIP	(TRV43/TRV46/TRV46PK)
C611		CERAMIC CHIP	0.1uF		25V	C773	1-162-922-11	CERAMIC CHIP	39PF 5% 50V
C612	1-119-749-11	TANTAL. CHIP CERAMIC CHIP	33uF	20%	4V				(TRV43/TRV46/TRV46PK)
C613 C615	1-164-156-11	CERAMIC CHIP	1uF 0.1uF		16V 25V	C774	1-109-982-11	CERAMIC CHIP	1uF 10% 10V
									(TRV43/TRV46/TRV46PK)
C616 C617	1-164-156-11 1-162-970-11		0.1uF 0.01uF	10%	25V 25V	C775	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V (TRV43/TRV46/TRV46PK)
C618		CERAMIC CHIP	0.01uF	10%	25V	C776	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C619 C620		CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	25V 25V	C777	1 160 070 11	CERAMIC CHIP	(TRV43/TRV46/TRV46PK) 0.01uF 10% 25V
0020	1-102-370-11	OLIMINIO OTIIF	0.01ui	10 /0	250	0777	1-102-370-11	OLIVAIVIIO OTIIF	(TRV43/TRV46/TRV46PK)
C621		CERAMIC CHIP	0.01uF	10%	25V	C778	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C622 C623		CERAMIC CHIP CERAMIC CHIP	0.01uF 0.01uF	10% 10%	25V 25V				(TRV43/TRV46/TRV46PK)
C624		CERAMIC CHIP	0.01uF	10%	25V	C781	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C625	1-164-156-11	CERAMIC CHIP	0.1uF		25V				(TRV43/TRV46/TRV46PK)
C626	1-164-156-11	CERAMIC CHIP	0.1uF		25V			< CONNECTOR >	
C627		CERAMIC CHIP	0.022uF	10%	25V	011004	1 700 040 01	OONNEOTOD FEO	VEDO 40D
C628 C629		CERAMIC CHIP CERAMIC CHIP	22PF 15PF	5% 5%	50V 50V	CN001 CN501		CONNECTOR, FFC	
C630		CERAMIC CHIP	0.1uF	370	25V	CN551		CONNECTOR, FFC	
						CN551		CONNECTOR, FFC	` ,
C636		CERAMIC CHIP	0.1uF	100/	25V	CN901	1-766-644-21	CONNECTOR, FFC	G/FPC 8P
C637	1-162-969-11		0.0068uF	10%	25V	CNICOO	1 766 040 04	CONNECTOR FFO	Y/EDC 10D
C751	1-135-201-11	TANTALUM CHIP		20% R/TRV46/	4V TRV46PK)	CN902 CN904		CONNECTOR, FFC	
C752	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V				36PK/TRV43/TRV46/TRV46PK)
				3/TRV46/	TRV46PK)	CN905		CONNECTOR, FFC	
C753	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	CN906		CONNECTOR, FFC	
			(18743	)/ I K V 46/	TRV46PK)	CN908	1-700-345-21	CONNECTOR, FFC	//TU 13P

Ref. No.	Part No.	<u>Description</u>		Remark	Ref. No.	Part No.	Description		Remark
CN908		CONNECTOR, FFC	/FPC 15P	<u> </u>	L003	1-414-406-11		220uH	1101110111
		CONNECTOR, FFC			L004	1-414-754-11		10uH	
			6PK/TRV43/TRV46	/TRV46PK)	L005	1-412-948-11		5.6uH	
		CONNECTOR, FFC							
		CONNECTOR, FFC			L006	1-412-963-11		100uH	
CN915	1-774-600-41	CONNECTOR, BOA	ARD TO BOARD 70P	)	L008	1-412-280-31		330uH	
CN916	1 766 240 01	CONNECTOR, FFC	/EDC 10D		L009 L010		INDUCTOR CHI		
CN910	1-700-340-21	CONNECTOR, FFC	/		L010	1-410-657-21		27uH	
		< DIODE >			Lott	1 112 000 21	HVDOOTOIT	27 011	
					L012	1-412-955-11	INDUCTOR	22uH	
D002		DIODE MA111-(I			L013	1-412-944-11		2.7uH	
D201		DIODE KV1470T			L015	1-412-951-11		10uH	
D202 D371		DIODE KV1470T			L016 L018	1-412-946-11		3.9uH	
ווטט		DIODE MA111-(I 16PK/TBV36/TBV3	36PK/TRV43/TRV46	/TRV/46PK)	LUIO	1-410-050-11	INDUCTOR CHI	r 150un	
D502		DIODE 1T379-01		/ 11 (V + O1 1K)	L019	1-412-957-11	INDUCTOR	33uH	
					L204		INDUCTOR CHI		
D551		DIODE MA111-(I			L205	1-412-955-11	INDUCTOR	22uH	
D601		DIODE MA728-(I			L206	1-412-945-11		3.3uH	
D602		DIODE MA728-(I	,		L502	1-216-295-91	SHORT	0	
D604 D608		DIODE MA111-(I			L552	1-414-398-11	INDUCTOR	10uH	
D000	0-719-073-01	DIODE MATTI-(I	10).50		L602	1-414-754-11		10uH	
D609	8-719-049-09	DIODE 1SS367-7	T3SONY		L751	1-412-948-11		5.6uH	
D610		DIODE MA728-(I							TRV46/TRV46PK
					L752	1-412-957-11	INDUCTOR	33uH	
		< FERRITE BEAD :	>					,	TRV46/TRV46PK
ED004	1 010 004 11	METAL CUID 1/1C	14/		L753	1-412-957-11	INDUCTOR	33uH	FDV/4C/TDV/4CDI/
FB001 FB002		METAL CHIP 1/16 INDUCTOR CHIP						(18743/1	TRV46/TRV46PK
FB003		METAL CHIP 1/16					< TRANSISTOR	>	
FB004		INDUCTOR CHIP							
FB201	1-414-228-11	INDUCTOR CHIP	0UH		Q001		TRANSISTOR		
					Q002		TRANSISTOR		
FB401		INDUCTOR CHIP			Q003		TRANSISTOR		
FB502		METAL CHIP 1/16 INDUCTOR CHIP			Q012 Q017		TRANSISTOR TRANSISTOR		
FB503 FB504		INDUCTOR CHIP			QU17	0-729-037-32	TRANSISTUR	2304/30F-1/GF	N(IPLS)
FB505		INDUCTOR CHIP			Q019	8-729-037-74	TRANSISTOR	UN9213J-(K8).9	30
					Q019		TRANSISTOR		
		< IC >			Q020		TRANSISTOR		
					Q021		TRANSISTOR		
IC001 IC151		IC CXA2084R-T6			Q022	8-729-037-52	TRANSISTOR	2SC4/38F-Y/GF	R(TPL3)
IC151		IC MB88344BPF			Q023	8-729-037-52	TRANSISTOR	2SC4738F-V/GE	R/TPI 3)
IC152		IC M62371GP-60			Q024		TRANSISTOR		
IC201		IC MB90097PFV			Q025		TRANSISTOR		
					Q026		TRANSISTOR		
IC202		IC MB87F126DP			Q027	8-729-037-53	TRANSISTOR	2SA1832F-Y/GF	R(TPL3)
IC301 IC371		IC AN2984FH-EE IC BA7783FS-E2			Q028	0 700 007 74	TDANGICTOD	I INIO010 I (I/O) (	20
16371			6PK/TRV43/TRV46	/TR\//6PK\	Q028		TRANSISTOR TRANSISTOR		
IC401		IC AK6480AM-E2		/ 11(V <del>1</del> 01 (K)	Q029		TRANSISTOR		
IC402		IC MB91191PFF			Q030		TRANSISTOR		
					Q032	8-729-037-53	TRANSISTOR	2SA1832F-Y/GF	R(TPL3)
IC451		IC LB1950V-TLN							
IC452		IC LB8112V-TLN			Q033		TRANSISTOR		\/TDL0\
IC501 IC502		IC CXD2486R-T4 IC AD9800JDSTI			Q034 Q036		TRANSISTOR TRANSISTOR		
IC551		IC NJM324V(TE2			Q038		TRANSISTOR		
	0.00 0.		-/		Q038		TRANSISTOR		
IC552		IC uPD16833AG						, ,	
IC602		IC S-8423YFS-T2			Q039		TRANSISTOR		
IC603		IC TL1596CPWR			Q040		TRANSISTOR		
IC604		IC S579225PZ-T		DV/46DIV	Q040		TRANSISTOR		
IC751	0-109-498-52	IO FAADIIM-IRI	M (TRV43/TRV46/T	1 V40PK)	Q041 Q042		TRANSISTOR TRANSISTOR		
		< COIL >			QU42	0-125-031-14	HIVIOIOIOU	UNUZ 1003(NO).	J-0
					Q042		TRANSISTOR		)
L001	1-414-406-11		220uH		Q043	8-729-047-19	TRANSISTOR	2SA1965-S-TL	
L002	1-412-952-11	INDUCTOR	12uH		Q044	8-729-037-74	TRANSISTOR	UN9213J-(K8).	30

Ref. No.	Part No.	<u>Description</u>			Remark	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
Q044	8-729-042-29	TRANSISTOR	RN1104F(T	PL3)		R006	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
Q151		TRANSISTOR				R007	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
Q.0.	0 720 007 01	110 00001011	111121011(1	. 20)		R008	1-216-814-11	METAL CHIP	270	5%	1/16W
Q153	8-729-040-77	TRANSISTOR	2SC5376-B	(TE85L)		R009	1-216-813-11	METAL CHIP	220	5%	1/16W
Q202		TRANSISTOR		( /	1	R014	1-216-837-11	METAL CHIP	22K	5%	1/16W
				`	,	NU14	1-210-037-11	WE TAL CHIP	ZZN	370	1/1000
Q203		TRANSISTOR				D045	4 040 000 44	MAETAL OLUB	2014	<b>5</b> 0/	4 (4 0) 4 (
Q204		TRANSISTOR			)	R015	1-216-839-11	METAL CHIP	33K	5%	1/16W
Q205	8-729-037-74	TRANSISTOR	UN9213J-(I	K8).S0		R020	1-216-837-11	METAL CHIP	22K	5%	1/16W
						R021	1-216-837-11	METAL CHIP	22K	5%	1/16W
Q205	8-729-042-29	TRANSISTOR	RN1104F(T	PL3)		R022	1-216-295-91	SHORT	0		
Q208	8-729-037-74	TRANSISTOR	UN9213J-(	K8).S0		R023	1-216-837-11	METAL CHIP	22K	5%	1/16W
Q208		TRANSISTOR									
Q213		TRANSISTOR			)	R025	1-216-837-11	METAL CHIP	22K	5%	1/16W
	TR416/TR416PK/					R026	1-216-816-11	METAL CHIP	390	5%	1/16W
( '	111410/111410110		RV36PK/TRV			R027	1-216-816-11	METAL CHIP	390	5%	1/16W
0014	0.700.007.50				,						1/16W
Q214		TRANSISTOR				R029	1-216-837-11	METAL CHIP	22K	5%	
(1	ΓR416/TR416PK/					R031	1-216-837-11	METAL CHIP	22K	5%	1/16W
		T	RV36PK/TR\	/43/TRV46/	TRV46PK)						
						R032	1-216-816-11	METAL CHIP	390	5%	1/16W
Q215	8-729-037-52	TRANSISTOR	2SC4738F-	Y/GR(TPL3	)	R033	1-216-816-11	METAL CHIP	390	5%	1/16W
(T	R315/TRV16/TR\	/16PK/TRV36/T	RV36PK/TRV	/43/TRV46/	TRV46PK)	R034	1-216-864-11	METAL CHIP	0	5%	1/16W
Q216	8-729-037-52	TRANSISTOR	2SC4738F-	Y/GR(TPL3	)	R035	1-216-841-11	METAL CHIP	47K	5%	1/16W
			R416PK/TR			R037	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
Q217	8-720-037-53	TRANSISTOR			,	11007	1 210 021 11	WEINE OIIII	1.010	0 70	17 1000
Q302		TRANSISTOR			)	R038	1-216-841-11	METAL CHIP	47K	5%	1/16W
Q302		TRANSISTOR			00/750/40	R039	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
	(TR315/	TR416/TR416Pk	(/TRV16/TRV	/16PK/TRV:	36/TRV46)	R040	1-216-864-11	METAL CHIP	0	5%	1/16W
						R043	1-216-833-11	METAL CHIP	10K	5%	1/16W
Q305	8-729-037-63	TRANSISTOR	UN9115J-(I	K8).S0		R045	1-216-845-11	METAL CHIP	100K	5%	1/16W
Q306	8-729-037-76	TRANSISTOR	UN9215J-(I	K8).S0							
Q308		TRANSISTOR				R046	1-216-821-11	METAL CHIP	1K	5%	1/16W
Q309		TRANSISTOR				R047	1-216-864-11	METAL CHIP	0	5%	1/16W
Q309		TRANSISTOR				R048	1-216-864-11	METAL CHIP	0	5%	1/16W
Q000	0 723 042 23	THANOIOTOR	1111110-11(1	1 20)		R049	1-216-833-11	METAL CHIP	10K	5%	1/16W
0074	0.700.040.74	TDANGICTOD	LINIOO4C L /I	K0) 00							
Q371		TRANSISTOR	,	,		R050	1-216-837-11	METAL CHIP	22K	5%	1/16W
Q371		TRANSISTOR									
	(TR315/	TR416/TR416Ph	K/TRV16/TRV	/16PK/TRV:	36/TRV46)	R051	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
Q452	8-729-037-74	TRANSISTOR	UN9213J-(I	K8).S0		R052	1-216-833-11	METAL CHIP	10K	5%	1/16W
Q452	8-729-042-29	TRANSISTOR	RN1104F(T	PL3)		R055	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
Q453	8-729-037-74	TRANSISTOR	UN9213J-(	K8).S0		R056	1-216-855-11	METAL CHIP	680K	5%	1/16W
				-,		R057	1-216-819-11	METAL CHIP	680	5%	1/16W
Q453	8-729-042-29	TRANSISTOR	RN1104F/T	PI 3)		11007			000	0 / 0	.,
Q454		TRANSISTOR	•	,	)	R058	1-216-853-11	METAL CHIP	470K	5%	1/16W
											1/16W
Q455		TRANSISTOR				R059	1-216-821-11	METAL CHIP	1K	5%	
Q456		TRANSISTOR				R060	1-216-837-11	METAL CHIP	22K	5%	1/16W
Q501	8-729-037-53	TRANSISTOR	2SA1832F-	Y/GR(TPL3	)	R061	1-216-833-11	METAL CHIP	10K	5%	1/16W
						R062	1-216-818-11	METAL CHIP	560	5%	1/16W
Q551	8-729-037-53	TRANSISTOR	2SA1832F-	Y/GR(TPL3	)						
Q552	8-729-037-52	TRANSISTOR	2SC4738F-	Y/GR(TPL3	)	R063	1-216-817-11	METAL CHIP	470	5%	1/16W
Q553	8-729-037-52	TRANSISTOR	2SC4738F-	Y/GR(TPL3	)	R064	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
Q607		TRANSISTOR			,	R065	1-216-833-11	METAL CHIP	10K	5%	1/16W
Q608		TRANSISTOR			)	R066	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
0000		/16PK/TRV36/T		,	,	R067	1-216-817-11	METAL CHIP	470	5%	1/16W
	(1110/10/1111	/ 10	INVOOR IV IIIV	143/111140/	111V40FK)	11007	1-210-017-11	WIL TAL OTTE	470	J /0	1/1000
0000	0 700 007 50	TDANICICTOR	00047005	V/CD/TDL 0	\	DOCO	1 010 017 11	METAL CLUB	470	EO/	4/4014
Q609	δ-729-037-52	TRANSISTOR				R068	1-216-817-11	METAL CHIP	470	5%	1/16W
				/43/TRV46/	TRV46PK)	R069	1-216-864-11	METAL CHIP	0	5%	1/16W
Q610	8-729-037-74	TRANSISTOR	UN9213J-(I	K8).SO		R072	1-216-864-11	METAL CHIP	0	5%	1/16W
Q610	8-729-042-29	TRANSISTOR	RN1104F(T	PL3)		R073	1-216-821-11	METAL CHIP	1K	5%	1/16W
Q611	8-729-037-74	TRANSISTOR	UN9213J-(I	K8).SO		R074	1-216-816-11	METAL CHIP	390	5%	1/16W
			,	/43/TRV46/	TRV46PK)						
Q611	8-729-042-29	TRANSISTOR			,	R075	1-216-817-11	METAL CHIP	470	5%	1/16W
~~!!			,	/43/TRV46/	TRV/46PK)	R076	1-216-816-11	METAL CHIP	390	5%	1/16W
			(1111)	10,111170/	TITE TOT IN	R078	1-216-815-11	METAL CHIP	330	5%	1/16W
0000	0.700.040.50	TDANGICTOD	LINIO444 L /I	K0) 00							
Q620	8-729-042-38	TRANSISTOR	01/1911113-(1	No).50		R079	1-216-815-11	METAL CHIP	330	5%	1/16W
						R080	1-216-813-11	METAL CHIP	220	5%	1/16W
		< RESISTOR >							_		
						R081	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R001	1-216-864-11	METAL CHIP	0	5%	1/16W	R082	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R002	1-216-864-11	METAL CHIP	0	5%	1/16W	R083	1-216-820-11	METAL CHIP	820	5%	1/16W
R003	1-216-806-11	RES,CHIP	56	5%	1/16W	R084	1-216-833-11	METAL CHIP	10K	5%	1/16W
R004	1-216-818-11	METAL CHIP	560	5%	1/16W	R085	1-216-833-11	METAL CHIP	10K	5%	1/16W
R005	1-216-809-11	METAL CHIP	100	5%	1/16W			01111		5,0	.,
.1000	0 000 11		100	3,0	.,	I					

Ref. No.	Part No.	<u>Description</u>			Remark	Ref. No.	Part No.	<u>Description</u>			Remark
R087	1-216-821-11	METAL CHIP	1K	5%	1/16W	R227	1-216-811-11	METAL CHIP	150	5%	1/16W
R088	1-216-864-11	METAL CHIP	0	5%	1/16W						
R092	1-216-809-11	METAL CHIP	100	5%	1/16W	R228	1-216-813-11	METAL CHIP	220	5%	1/16W
R093	1-216-833-11	METAL CHIP	10K	5%	1/16W	R229	1-216-805-11	METAL CHIP	47	5%	1/16W
R094	1-216-815-11	METAL CHIP	330	5%	1/16W	R230	1-216-812-11	METAL CHIP	180	5%	1/16W
						R231	1-216-812-11	METAL CHIP	180	5%	1/16W
R095	1-216-839-11	METAL CHIP	33K	5%	1/16W	R232	1-216-815-11	METAL CHIP	330	5%	1/16W
R096	1-216-813-11	METAL CHIP	220	5%	1/16W	(	TR416/TR416PK/	TR516/TR516PK/	TR716/TRV	/16/TRV16	PK/TRV36/
R098	1-216-817-11	METAL CHIP	470	5%	1/16W	`			V36PK/TRV		
R099	1-216-817-11	METAL CHIP	470	5%	1/16W						,
R101	1-216-837-11	METAL CHIP	22K	5%	1/16W	R233	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
	. 2.0 00			0 / 0	.,	R234	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R102	1-216-834-11	METAL CHIP	12K	5%	1/16W	R235	1-216-824-11		1.8K	5%	1/16W
R103	1-216-816-11	METAL CHIP	390	5%	1/16W	R236	1-216-825-11		2.2K	5%	1/16W
R104	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	R237	1-216-825-11		2.2K	5%	1/16W
R105	1-216-819-11	METAL CHIP	680	5%	1/16W	11207	1-210-025-11	WIL TAL OTHE	2.21\	J /0	1/1000
						Door	1 010 000 11	METAL OLUD	0.01/	F0/	4/4/01/1
R106	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	R238	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
				==.		R239	1-216-827-11		3.3K	5%	1/16W
R107	1-216-833-11	METAL CHIP	10K	5%	1/16W	R240	1-216-857-11	METAL CHIP	1M	5%	1/16W
R109	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R241	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R110	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R242	1-216-845-11	METAL CHIP	100K	5%	1/16W
R112	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R113	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R243	1-216-845-11	METAL CHIP	100K	5%	1/16W
						R244	1-216-845-11	METAL CHIP	100K	5%	1/16W
R152	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R245	1-216-840-11	METAL CHIP	39K	5%	1/16W
R167	1-216-803-11	METAL CHIP	33	5%	1/16W	R246	1-216-835-11	METAL CHIP	15K	5%	1/16W
R170	1-216-804-11	METAL CHIP	39	5%	1/16W	R247	1-216-817-11	METAL CHIP	470	5%	1/16W
R175	1-216-837-11	METAL CHIP	22K	5%	1/16W						
R177	1-216-821-11	METAL CHIP	1K	5%	1/16W	R248	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
11111	1 210 021 11	WEINE OIT	110	0 / 0	1/1011	R249	1-216-833-11		10K	5%	1/16W
R179	1-216-815-11	METAL CHIP	330	5%	1/16W	R251	1-216-833-11	METAL CHIP	10K	5%	1/16W
R183	1-218-876-11	RES,CHIP	16K	0.50%	1/16W	R252	1-216-821-11	METAL CHIP	1K	5%	1/16W
R184	1-218-847-11	RES,CHIP	1K	0.50%	1/16W	R253	1-216-845-11	METAL CHIP	100K	5%	1/16W
R185	1-216-295-91	SHORT	0						_	=	
R186	1-216-295-91	SHORT	0			R254	1-216-864-11	METAL CHIP	0	5%	1/16W
						R255	1-216-833-11	METAL CHIP	10K	5%	1/16W
R187	1-216-295-91	SHORT	0			R257	1-216-295-91		0		
R188	1-216-864-11	METAL CHIP	0	5%	1/16W	R258	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R189	1-216-295-91	SHORT	0			R259	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R190	1-216-864-11	METAL CHIP	0	5%	1/16W						
R202	1-216-833-11	METAL CHIP	10K	5%	1/16W	R260	1-216-295-91	SHORT	0		
						R261	1-216-295-91	SHORT	0		
R203	1-216-814-11	METAL CHIP	270	5%	1/16W	R262	1-216-295-91	SHORT	0		
R205	1-216-835-11	METAL CHIP	15K	5%	1/16W	R263	1-216-295-91		0		
R206	1-216-827-11		3.3K	5%	1/16W	R264	1-216-295-91		0		
R208	1-216-827-11		3.3K	5%	1/16W		. 2.0 200 0.	0	ŭ		
R210	1-216-809-11	METAL CHIP	100	5%	1/16W	R265	1-216-864-11	METAL CHIP	0	5%	1/16W
11210	1 210 003 11	WEIZE OITH	100	<b>3</b> /0	1/1000	R266	1-216-864-11		0	5%	1/16W
R211	1 216 020 11	METAL CHID	5 GV	E0/	1/16W					5%	1/16W
	1-216-830-11		5.6K 2.2K	5%		R267	1-216-864-11		0 470	5% 5%	
R212	1-216-825-11	METAL CHIP		5%	1/16W	R303	1-216-817-11		470 470		1/16W
R214	1-216-823-11		1.5K	5%	1/16W	R304	1-216-817-11	IVIE IAL UNIP	470	5%	1/16W
R215	1-216-822-11		1.2K	5%	1/16W	D040	1 010 001 11	METAL OUT	0	F0/	4/4014
R216	1-216-811-11	METAL CHIP	150	5%	1/16W	R313	1-216-864-11		0	5%	1/16W
				==.		(TR315/	TR416/TR416PK/	TR516/TR516PK/	TR/16/TRV		
R217	1-216-864-11		0	5%	1/16W						TRV36PK)
R218	1-216-826-11		2.7K	5%	1/16W	R314	1-216-823-11		1.5K	5%	1/16W
	(TR416/TR416PK/	TR516/TR516PK/	/TR716/TR\	/16/TRV16I	PK/TRV36/	R317	1-216-845-11	METAL CHIP	100K	5%	1/16W
		TR	V36PK/TRV	43/TRV46/	TRV46PK)	R318	1-216-845-11	METAL CHIP	100K	5%	1/16W
R219	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	R321	1-216-843-11	METAL CHIP	68K	5%	1/16W
(	TR315/TRV16/TR\	/16PK/TRV36/TR	V36PK/TRV	43/TRV46/	TRV46PK)						
R220 `	1-216-815-11		330	5%	1/16W	R322	1-216-845-11	METAL CHIP	100K	5%	1/16W
	(TR416/TR416PK/					R323	1-218-879-11		22K	0.50%	1/16W
	, ,		V36PK/TRV			R325	1-218-903-11	*	220K	0.50%	1/16W
R222	1-216-826-11		2.7K	5%	1/16W	R331	1-216-820-11	,	820 820	5%	1/16W
11444	1-210-020 <b>-</b> 11					R371			020 1K	5% 5%	
		(10410/15	R416PK/TR	וטוכחועטוע	n/1n/10)	no/I	1-216-821-11				1/16W
Door	4 040 004 44	METAL OUR	417	F0/	4/4014		(1KV16/1K)	/16PK/TRV36/TR	v304K/1KV	43/TKV46/	TKV46PK)
R223	1-216-821-11		1K	5%	1/16W	D0=:	4 040 055 11	MATTAL OUT	400	F0/	4 /4 014 :
R224	1-216-831-11		6.8K	5%	1/16W	R374	1-216-809-11		100	5%	1/16W
R225	1-216-826-11		2.7K	5%	1/16W	R375	1-216-834-11		12K	5%	1/16W
	(TR416/TR416PK/						•	/16PK/TRV36/TR			TRV46PK)
			V36PK/TRV		,	R376	1-216-834-11		12K	5%	1/16W
R226	1-216-820-11	METAL CHIP	820	5%	1/16W		(TRV16/TRV	/16PK/TRV36/TR	V36PK/TRV	/43/TRV46/	TRV46PK)
						I					

Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
R377	1-216-834-11 (TRV16/TRV		12K TRV36PK/TRV43	5% 8/TRV46/1	1/16W FRV46PK)	R461	1-216-853-11	METAL CHIP	470K	5%	1/16W
R378	1-216-825-11		2.2K	5%	1/16W	R462	1-216-853-11	METAL CHIP	470K	5%	1/16W
			TRV36PK/TRV43	3/TRV46/	TRV46PK)	R463	1-216-853-11	METAL CHIP	470K	5%	1/16W
	(			,		R464	1-216-851-11	METAL CHIP	330K	5%	1/16W
R379	1-216-852-11	METAL CHIP	390K	5%	1/16W	R465	1-216-845-11	METAL CHIP	100K	5%	1/16W
11070			TRV36PK/TRV43			R466	1-216-841-11		47K	5%	1/16W
R382	1-216-837-11	METAL CHIP	22K	5%	1/16W						
	•		TRV36PK/TRV43		,	R467	1-216-833-11	METAL CHIP	10K	5%	1/16W
R383	1-216-837-11		22K	5%	1/16W	R468	1-216-833-11	METAL CHIP	10K	5%	1/16W
			TRV36PK/TRV43		,	R469	1-216-841-11	METAL CHIP	47K	5%	1/16W
R384	1-216-829-11		4.7K	5%	1/16W	R470	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
	`		TRV36PK/TRV43		TRV46PK)	R471	1-216-833-11	METAL CHIP	10K	5%	1/16W
R385	1-216-826-11	METAL CHIP	2.7K	5%	1/16W						
	(TRV16/TRV	/16PK/TRV36/	TRV36PK/TRV43	3/TRV46/	TRV46PK)	R472	1-216-833-11	METAL CHIP	10K	5%	1/16W
						R473	1-216-841-11	METAL CHIP	47K	5%	1/16W
R386	1-216-849-11	METAL CHIP	220K	5%	1/16W	R474	1-216-817-11	METAL CHIP	470	5%	1/16W
	(TRV16/TRV	/16PK/TRV36/	TRV36PK/TRV43	3/TRV46/	TRV46PK)	R475	1-216-838-11	METAL CHIP	27K	5%	1/16W
R388	1-216-864-11		0	5%	1/16W	R476	1-216-817-11	METAL CHIP	470	5%	1/16W
			TR416PK/TR516								
R389	1-216-864-11		0	5%	1/16W	R477	1-216-864-11	METAL CHIP	0	5%	1/16W
11000			TR416PK/TR516			R479	1-216-864-11	METAL CHIP	0	5%	1/16W
R402	1-216-821-11		1K	5%	1/16W	R480	1-216-864-11	METAL CHIP	0	5%	1/16W
R403	1-216-845-11	METAL CHIP	100K	5%	1/16W	R481	1-216-864-11	METAL CHIP	0	5%	1/16W
						R482	1-216-833-11	METAL CHIP	10K	5%	1/16W
R404	1-216-845-11		100K	5%	1/16W						
R405	1-216-845-11	METAL CHIP	100K	5%	1/16W	R483	1-216-836-11	METAL CHIP	18K	5%	1/16W
R406	1-216-845-11	METAL CHIP	100K	5%	1/16W	R484	1-217-671-11	METAL CHIP	1	5%	1/10W
R407	1-216-845-11	METAL CHIP	100K	5%	1/16W	R485	1-217-671-11	METAL CHIP	1	5%	1/10W
R409	1-216-845-11	METAL CHIP	100K	5%	1/16W	R486	1-216-845-11	METAL CHIP	100K	5%	1/16W
						R487	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R410	1-216-829-11	METAL CHIP	4.7K	5%	1/16W						
R412	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R488	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R414	1-216-864-11	METAL CHIP	0	5%	1/16W	R490	1-216-023-00	METAL CHIP	82	5%	1/10W
R415	1-216-821-11	METAL CHIP	1K	5%	1/16W	R502	1-216-798-11	RES,CHIP	12	5%	1/16W
R417	1-216-821-11	METAL CHIP	1K	5%	1/16W	R503	1-216-798-11	RES,CHIP	12	5%	1/16W
11411	1-210-021-11	WIL TAL OTTE	IIX	J /0	1/1000	R504	1-216-845-11	METAL CHIP	100K	5%	1/16W
D/110	1 016 020 11	METAL CHID	33K	E0/	1/16W	h304	1-210-045-11	WEIAL CHIP	TOUR	J /0	1/1000
R419	1-216-839-11	METAL CHIP		5%		DEOG	1 016 057 11	METAL CHID	4 1 1 1	E0/	1/1CM
R420	1-216-833-11	METAL CHIP	10K	5%	1/16W	R506	1-216-857-11	METAL CHIP	1M	5%	1/16W
R421	1-216-833-11	METAL CHIP	10K	5%	1/16W	R508	1-216-809-11	METAL CHIP	100	5%	1/16W
R424	1-216-841-11	METAL CHIP	47K	5%	1/16W	R509	1-216-864-11	METAL CHIP	0	5%	1/16W
R425	1-216-853-11	METAL CHIP	470K	5%	1/16W	R510	1-216-809-11	METAL CHIP	100	5%	1/16W
						R511	1-216-809-11	METAL CHIP	100	5%	1/16W
R426	1-216-825-11		2.2K	5%	1/16W						
R427	1-216-841-11	METAL CHIP	47K	5%	1/16W	R512	1-216-853-11	METAL CHIP	470K	5%	1/16W
R428	1-216-841-11	METAL CHIP	47K	5%	1/16W	R513	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R429	1-216-811-11	METAL CHIP	150	5%	1/16W	R514	1-216-821-11	METAL CHIP	1K	5%	1/16W
R430	1-216-813-11	METAL CHIP	220	5%	1/16W	R515	1-216-864-11	METAL CHIP	0	5%	1/16W
						R522	1-216-864-11	METAL CHIP	0	5%	1/16W
R431	1-216-825-11	METAL CHIP	2.2K	5%	1/16W				-	- / -	.,
R432	1-216-845-11	METAL CHIP	100K	5%	1/16W	R525	1-216-864-11	METAL CHIP	0	5%	1/16W
R433	1-216-845-11	METAL CHIP	100K	5%	1/16W	R526	1-216-864-11	METAL CHIP	0	5%	1/16W
	1-216-853-11	METAL CHIP	470K		1/16W		1-216-864-11				1/16W
R434				5%		R529		METAL CHIP	0	5%	
R435	1-216-853-11	METAL CHIP	470K	5%	1/16W	R533	1-216-864-11	METAL CHIP	0	5%	1/16W
				=		R534	1-216-864-11	METAL CHIP	0	5%	1/16W
R440	1-216-841-11	METAL CHIP	47K	5%	1/16W				_		
R441	1-216-845-11	METAL CHIP	100K	5%	1/16W	R535	1-216-864-11	METAL CHIP	0	5%	1/16W
R442	1-216-845-11	METAL CHIP	100K	5%	1/16W	R536	1-216-864-11	METAL CHIP	0	5%	1/16W
R443	1-216-295-91	SHORT	0			R537	1-216-296-91	SHORT	0		
R452	1-217-671-11	METAL CHIP	1	5%	1/10W	R551	1-216-841-11	METAL CHIP	47K	5%	1/16W
						R554	1-216-843-11	METAL CHIP	68K	5%	1/16W
R453	1-217-671-11	METAL CHIP	1	5%	1/10W						
R454	1-217-671-11	METAL CHIP	1	5%	1/10W	R555	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R455	1-216-833-11	METAL CHIP	10K	5%	1/16W	R556	1-216-001-00	METAL CHIP	10	5%	1/10W
R456	1-216-833-11	METAL CHIP	10K	5%	1/16W	R557	1-216-843-11	METAL CHIP	68K	5%	1/16W
										J /0	1/1044
R457	1-216-833-11	METAL CHIP	10K	5%	1/16W	R558	1-216-295-91	SHORT	0	E0/	1/1C\M
D457	1 010 000 11	METAL OUID	101/	E0/	1/10/1/	R560	1-216-821-11	METAL CHIP	1K	5%	1/16W
R457	1-216-833-11	METAL CHIP	10K	5%	1/16W	DE04	4 040 050 41	NACTAL OLUB	47017	F0'	4 (4 () 14
D 450	4 040 000 11	BACTAL COUR	(TR716/TRV43			R561	1-216-853-11	METAL CHIP	470K	5%	1/16W
R458	1-216-808-11	METAL CHIP	82	5%	1/16W	R562	1-216-849-11	METAL CHIP	220K	5%	1/16W
R459	1-216-864-11	METAL CHIP	0	5%	1/16W	R563	1-216-853-11	METAL CHIP	470K	5%	1/16W
R460	1-216-864-11	METAL CHIP	0	5%	1/16W	R564	1-216-853-11	METAL CHIP	470K	5%	1/16W

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			<u>Remark</u>
R565	1-216-833-11	METAL CHIP	10K	5%	1/16W	R649	1-216-857-11	METAL CHIP	1M	5%	1/16W
R566	1-216-835-11	METAL CHIP	15K	5%	1/16W	R650	1-219-570-11	RES.CHIP	10M	5%	1/16W
R567	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R651	1-216-845-11		100K	5%	1/16W
R569	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R652	1-216-853-11		470K	5%	1/16W
	1-216-841-11						1-216-853-11		470K 470K		
R570		METAL CHIP	47K	5%	1/16W	R653				5%	1/16W
R571	1-216-837-11	METAL CHIP	22K	5%	1/16W	R654	1-216-817-11	METAL CHIP	470	5%	1/16W
R572	1-216-845-11	METAL CHIP	100K	5%	1/16W	R655	1-216-853-11		470K	5%	1/16W
R573	1-216-815-11	METAL CHIP	330	5%	1/16W	R666	1-216-821-11	METAL CHIP	1K	5%	1/16W
R574	1-216-821-11	METAL CHIP	1K	5%	1/16W	R667	1-216-821-11	METAL CHIP	1K	5%	1/16W
R575	1-216-821-11	METAL CHIP	1K	5%	1/16W	R668	1-216-821-11	METAL CHIP	1K	5%	1/16W
R576	1-216-821-11	METAL CHIP	1K	5%	1/16W	R669	1-216-821-11	METAL CHIP	1K	5%	1/16W
R577	1-216-833-11	METAL CHIP	10K	5%	1/16W	R670	1-216-821-11	METAL CHIP	1K	5%	1/16W
R579	1-216-821-11	METAL CHIP	1K	5%	1/16W	R671	1-216-821-11		1K	5%	1/16W
R582	1-216-864-11		0	5%	1/16W	R672	1-216-821-11		1K	5%	1/16W
R583	1-216-295-91		0	<b>J</b> /0	1/1000	R673	1-216-821-11		1K	5%	1/16W
R584	1-216-295-91	SHORT	0			R675	1-216-821-11	MIETAL CHIP	1K	5%	1/16W
R603	1-216-845-11	METAL CHIP	100K	5%	1/16W	R676	1-216-821-11		1K	5%	1/16W
R604	1-216-813-11	METAL CHIP	220	5%	1/16W	R677	1-216-821-11	METAL CHIP	1K	5%	1/16W
R605	1-216-841-11		47K	5%	1/16W	R678	1-216-821-11	METAL CHIP	1K	5%	1/16W
	(TRV16/TRV	/16PK/TRV36/TF	RV36PK/TRV	43/TRV46	/TRV46PK)	R679	1-216-821-11	METAL CHIP	1K	5%	1/16W
R606	1-216-829-11		4.7K	5%	1/16W	R680	1-216-845-11	METAL CHIP	100K	5%	1/16W
Doon	1 010 015 11	METAL OLUB			/TRV46PK)	Dood	1 010 001 11	METAL OLUB	417	F0/	4 (4 0) 14
R608	1-216-845-11	METAL CHIP	100K	5%	1/16W	R681	1-216-821-11		1K	5%	1/16W
				=		R682	1-216-821-11		1K	5%	1/16W
R610	1-216-821-11		1K	5%	1/16W	R683	1-216-821-11		1K	5%	1/16W
		/16PK/TRV36/TF				R684	1-216-821-11		1K	5%	1/16W
R611	1-216-825-11	METAL CHIP	2.2K (TR)/	5% //3/TBV//6	1/16W 5/TRV46PK)	R685	1-216-821-11	METAL CHIP	1K	5%	1/16W
R612	1-216-853-11	METAL CHIP	470K	5%	1/16W	R686	1-216-821-11	METAL CHIP	1K	5%	1/16W
R613	1-216-821-11		1K	5%	1/16W	R687	1-216-821-11		1K	5%	1/16W
nuis											
D04.4	`	/16PK/TRV36/TF			,	R689	1-216-864-11		0	5%	1/16W
R614	1-216-821-11	METAL CHIP	1K (TR)/	5% //3/TBV//6	1/16W 5/TRV46PK)	R691 R692	1-216-845-11 1-216-853-11		100K 470K	5% 5%	1/16W 1/16W
			(1111)	40/111740	// ITTV <del>1</del> 01 IX)	11032	1-210-033-11	WILIAL OITH	47010	J /0	1/1000
R618	1-216-853-11	METAL CHIP	470K	5%	1/16W	R693	1-216-821-11	METAL CHIP	1K	5%	1/16W
R619	1-216-853-11	METAL CHIP	470K	5%	1/16W	R695	1-216-827-11		3.3K	5%	1/16W
R620	1-216-853-11	METAL CHIP	470K	5%	1/16W	11000		TR315/TR416/TF			
R621	1-216-853-11	METAL CHIP	470K	5%	1/16W	R697	1-216-854-11		560K	5%	1/16W
R622	1-216-853-11		470K	5%	1/16W	R726	1-216-864-11		0	5%	1/16W
NUZZ	1-210-055-11	WETAL CHIP	47 UK	J /0	1/1000						
DGOA	1 016 050 11	METAL CHID	470K	E0/	1/16W	R752	1-216-841-11	WE TAL CHIP	47K	5%	1/16W
R624	1-216-853-11		470K	5%					(INV	43/11/40	S/TRV46PK)
R625	1-216-845-11		100K	5%	1/16W						
R627	1-216-853-11	METAL CHIP	470K	5%	1/16W	R753	1-216-841-11	METAL CHIP	47K	5%	1/16W
R628	1-216-841-11	METAL CHIP	47K	5%	1/16W						S/TRV46PK)
R629	1-216-833-11	METAL CHIP	10K	5%	1/16W	R755	1-216-837-11	METAL CHIP	22K (TRV	5% 43/TBV/46	1/16W 6/TRV46PK)
R630	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	R756	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R631	1-216-845-11		100K	5%	1/16W	11750	1 210 025 11	WILLIAL OTT			6/TRV46PK)
						DZEZ	1 010 000 11	METAL CLUD			,
R632	1-216-857-11		1M	5%	1/16W	R757	1-216-829-11	WETAL CHIP	4.7K	5%	1/16W
R633	1-216-853-11	METAL CHIP	470K	5%	1/16W	5750	4 040 000 44	MAETAL OLUB			S/TRV46PK)
R634	1-216-853-11	METAL CHIP	470K	5%	1/16W	R758	1-216-833-11	METAL CHIP	10K (TRV	5% 43/TBV46	1/16W 6/TRV46PK)
R635	1-216-857-11	METAL CHIP	1M	5%	1/16W				(1110	. 5, 111 0 10	.,
R636	1-216-857-11		1M	5%	1/16W	R759	1-216-833-11	METAL CHIP	10K	5%	1/16W
R637	1-216-845-11	METAL CHIP	100K	5%	1/16W	11755	1 210 000 11	WILLIAL OTT			6/TRV46PK)
						D760	1 016 005 11	METAL CHID	15K		,
R638	1-216-845-11	METAL CHIP	100K	5%	1/16W	R760	1-216-835-11	WE TAL UTIL		5%	1/16W
R639	1-216-845-11	METAL CHIP	100K	5%	1/16W	R761	1-216-857-11	METAL CHIP	1M	43/16V40 5%	3/TRV46PK) 1/16W
R640	1-216-845-11	METAL CHIP	100K	5%	1/16W	11701	1 210 007 11	WEIAL OITH			6/TRV46PK)
R641	1-216-845-11		100K	5%	1/16W	R763	1-218-879-11	RES CHIP	22K		1/16W
R642				5% 5%		11700	1-210-0/3-11	TILO,UTIII			
	1-216-821-11		1K		1/16W	D7C4	1 010 045 44	METAL OUID	`		S/TRV46PK)
R643	1-216-857-11	METAL CHIP	1M	5%	1/16W	R764	1-216-815-11	IVIETAL CHIP	330	5%	1/16W
R644	1-216-841-11	METAL CHIP	47K	5%	1/16W				(IRV	43/TKV46	S/TRV46PK)
R645	1-216-845-11	METAL CHIP	100K	5%	1/16W	R765	1-216-821-11	METAL CHIP	1K	5%	1/16W
R646	1-216-853-11		470K	5%	1/16W	55	0 021 11				6/TRV46PK)
R647	1-216-853-11		470K	5%	1/16W	R767	1-216-817-11	METAL CHIP	470	5%	1/16W
R648	1-216-853-11		470K	5%	1/16W	"""	017 11				6/TRV46PK)
110-70	1 = 10 000-11	WEIZE VIIII	77 010	<b>J</b> /0	1, 1000	I			(1110	.0, 1111	, 111V TOLIK)

#### VC-215 VF-99

Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
R768	1-216-847-11	METAL CHIP	150K	5%	1/16W		A-7066-792-A	VF-99 (YM)(YS)			
			•		S/TRV46PK)			******			
R770	1-216-847-11	METAL CHIP	150K	5%	1/16W	'	TR315/TRV16/TRV	/16PK/TRV36/TR\			,
D774	1 010 010 11	METAL CLUD	`		5/TRV46PK)				(Re	t.No. 10,	000 Series)
R771	1-216-818-11	METAL CHIP	560	5%	1/16W 6/TRV46PK)			< CAPACITOR >			
			(INV	43/10/40	)/INV40FK)			< GAFAGITUR >			
R772	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	C901	1-107-854-11	TANTAL. CHIP	68uF	20%	6.3V
	1 210 001 11	ME IAE OI III			3/TRV46PK)	C902	1-163-038-91	CERAMIC CHIP	0.1uF	2070	25V
R773	1-216-817-11	METAL CHIP	470 <sup>`</sup>	5%	1/16W	C903	1-135-145-11	TANTALUM CHI	0.47uF	10%	35V
			(TRV		/TRV46PK)	C904	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
R774	1-216-840-11	METAL CHIP	39K	5%	1/16W	C905	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
D===	1 010 001 11	MATTAL OLUB	•		S/TRV46PK)	0000	4 400 000 44	0554440 01115			4017
R775	1-216-864-11 /TR416/TR416PK/		0 TD716/TDV	5%	1/16W	C906 C907	1-162-638-11 1-104-563-11	CERAMIC CHIP FILM CHIP	1uF 0.1uF	5%	16V 16V
(10313/	/ I N4 I 0/ I N4 I 0 F N/	10/10/10/10/10/	In/ 10/ Inv	10/16/16	TRV36PK)	C907	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
R916	1-216-864-11	METAL CHIP	0	5%	1/16W	C909	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
		TR315/TR416/TR				△ C910	1-163-017-91	CERAMIC CHIP	4700PF	5%	50V
	`				,						
R916	1-216-864-11		0	5%	1/16W	△ C911	1-163-019-91	CERAMIC CHIP	6800PF	10%	50V
					SPK/TR716)	C912	1-107-854-11	TANTAL. CHIP	68uF	20%	6.3V
R917	1-216-833-11	METAL CHIP	10K	5%	1/16W	C913		TANTALUM CHI		10%	35V
D017		TR315/TR416/TR			,	C914	1-113-984-11	TANTAL. CHIP	1.5uF	20%	35V
R917	1-216-841-11 (TRV16/TRV	METAL CHIP /16PK/TRV36/TR	47K V36PK/TRV	5% /43/TBV46	1/16W 3/TRV46PK)	C915	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
R918	1-216-845-11		100K	5%	1/16W	C916	1-164-611-11	CERAMIC CHIP	0.001uF	10%	500V
R919	1-216-833-11		10K	5%	1/16W	0010	1 101 011 11	OLIVANIO OIIII	0.00141	1070	0001
				(TRV36	S/TRV36PK)			< CONNECTOR >	>		
R919	1-216-837-11	METAL CHIP	22K	5%	1/16W	CN90	1 1-573-506-41	CONNECTOR, FF	OC /NIONI 71E)	4D	
פופח	1-210-037-11	(TR416/TR				* CN90		PIN, CONNECTO	` ,	41	
R919	1-216-841-11	METAL CHIP	47K	5%	1/16W	011302	2 1-300-037-11	T IIV, CONNECTO	11.41		
11010	1 210 011 11	ME IAE OI III	1710		6/TR516PK)			< DIODE >			
R919	1-216-842-11	METAL CHIP	56K	5%	1/16W						
					(TR716)	D901	8-719-951-21	DIODE PR1102	:W-TR		
R919	1-216-843-11		68K	5%	1/16W	D903		DIODE MA111-			
	TR315/TRV16/TR\				,	D905	8-719-073-03	DIODE MA8082	2-TX		
R919	1-216-845-11	METAL CHIP	100K	5%	1/16W 5/TRV16PK)			< IC >			
				(INVIO	/INVIORK)	IC901	8-750-106-1/	C IC > IC BA7149F-E2			
R920	1-216-833-11	METAL CHIP	10K	5%	1/16W	10001	0 700 100 11	10 0/1/1101 22			
				(TRV16	/TRV16PK)			< COIL >			
R920	1-216-842-11	METAL CHIP	56K	5%	1/16W						
					(TR315)	L901	1-412-031-11	INDUCTOR CHIP			
R920	1-216-843-11	METAL CHIP	68K	5%	1/16W	L902	1-410-387-11	INDUCTOR CHIE			
R920	1-216-845-11	METAL CHID	100K	5%	(TR716) 1/16W	<b></b> ∆L903	1-411-697-11	COIL, FERRITE (	HLC)		
	T-210-645-11 (TR416/TR416PK/							< TRANSISTOR	,		
'	(111110/111110111)	111010/11101011	111100/1111	001101111	TRV46PK)			< 110 th to 10 10 11			
R921	1-216-800-11	RES,CHIP	18	5%	1/16W	Q901	8-729-230-63	TRANSISTOR 2	SD1819A-Q	RS-TX	
		(TRV36/TR	V36PK/TRV	43/TRV46	/TRV46PK)	Q902	8-729-106-68	TRANSISTOR 2			
						Q903	8-729-216-31	TRANSISTOR 2			
R922	1-217-671-11	METAL CHIP	1	5%	1/10W	Q904	8-729-230-63	TRANSISTOR 2	2SD1819A-Q	RS-TX	
R923	1-217-671-11	METAL CHIP	1 1k	5% 5%	1/10W			> DECICTOR :			
R924 R925	1-216-821-11 1-216-821-11	METAL CHIP METAL CHIP	1K 1K	5% 5%	1/16W 1/16W			< RESISTOR >			
R928	1-216-821-11	METAL CHIP	1K	5%	1/16W	R901	1-216-817-11	METAL CHIP	470	5%	1/16W
11020	. 210 021 11	Offil	111	3 /0	., 10 **	R902	1-216-817-11	METAL CHIP	470	5%	1/16W
R929	1-216-864-11	METAL CHIP	0	5%	1/16W	R903	1-216-057-00		2.2K	5%	1/10W
						R904	1-216-833-11	METAL CHIP	10K	5%	1/16W
		< TRANSFORME	ER >			R905	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
T902	1-431-915-11	TRANSFORMER	ASSY FIV	BACK (M)		R906	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
1002	1 101 010 11			٠,	(TRV46PK)	11000		RV16/TRV16PK/			
		,				R906	1-216-813-11		220	5%	1/16W
		< VIBRATOR >					(TR315/T	RV16/TRV16PK/	TRV36/TRV4	3/TRV46	/TRV46PK)
						R907	1-216-845-11		100K	5%	1/16W
X401	1-760-655-41	VIBRATOR, CRY	,	,		R908	1-216-852-11		390K	5%	1/16W
X501	1-760-320-11	VIBRATOR, CRY				R909	1-216-833-11	METAL CHIP	10K	5%	1/16W
X601	1-760-458-21		,	,			The components		es composai		
X602	1-700-400-21	VIBRATOR, CRY	JIAL (32./	υσκΠΖ)			mark \( \Delta \) or dotted \( \Delta \)		narque ∆ so écurité.	ont critiq	ues pour la
								-	ecurite. Ve les remp	lacer o	le nar lina
					6-	32	specified.		iéce portant		
					0-	<b>U</b> L	<b>1</b>	F	r - realit		- I

Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
R910	1-216-835-11		15K	5%	1/16W	C5421	1-162-927-11	CERAMIC CHIE	100PF	5%	50V
R911	1-216-160-00		27	5%	1/8W						
R912	1-216-857-11		1M	5%	1/16W	C5422		TANTAL. CHIP	10uF	20%	6.3V
R916	1-218-879-11		22K		1/16W	C5423		CERAMIC CHI		10%	25V
R917	1-218-891-11	RES,UHIP	68K	0.50%	1/16W	C5424 C5427		CERAMIC CHIE			16V 16V
R918	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	C5429		CERAMIC CHI		10%	16V
R919	1-216-843-11		68K	5%	1/16W	00.20		02.0.000		.070	
R920	1-216-837-11	METAL CHIP	22K	5%	1/16W			< CONNECTOR	>		
R921	1-216-800-11	,	18	5%	1/16W						
Dood		RV16/TRV16PK/TF					01 1-766-350-21				
R921	1-216-795-11	RES,CHIP TRV16/TRV16PK/TF	6.8	5% 2/TDV/46/	1/16W	UN540	02 1-691-380-21	CONNECTOR,	FFU/FPU 16P		
	(10313/1	NVIO/INVIOPN/IF	1030/11104	D/ I N V 4 O/	INV40PK)			< DIODE >			
R922	1-216-847-11	METAL CHIP	150K	5%	1/16W			< DIODE >			
R923	1-216-857-11	METAL CHIP	1M	5%	1/16W	D5401	8-713-102-80	DIODE 1T369	-01-T8A		
R924	1-216-862-11		2.7M	5%	1/16W	D5402	8-719-062-16	DIODE 01ZA8	3.2(TPL3)		
R925	1-216-862-11		2.7M	5%	1/16W						
R926	1-216-821-11	METAL CHIP	1K	5%	1/16W			< FERRITE BEA	AD >		
R927	1-216-821-11	METAL CHID	1K	5%	1/16W	EB540	5 1-500-238-22	EEDDITE OI ILI			
R928	1-216-827-11		3.3K	5%	1/16W	1 0040	1-300-230-22	TEINITE OOH			
R929	1-216-818-11		560	5%	1/16W			< IC >			
R930	1-216-791-11		3.3	5%	1/16W						
R931	1-217-671-11	METAL CHIP	1	5%	1/10W	IC540	1 8-759-498-53				
						IC540		IC M62376GF			
R932	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	IC540	4 8-752-392-33	IC CXD2458A	R-T4		
		< VARIABLE RESI	CTUD ✓					< COIL >			
		VANIABLE NESI	31011 >					< GOIL >			
RV903	1-238-852-11	RES, ADJ, CERME	ET 470			L5401	1-414-754-11	INDUCTOR	10uH		
RV904		RES, ADJ, CERME				L5402	1-414-754-11	INDUCTOR	10uH		
						L5403			47uH		
		< TRANSFORMER	<b>?</b> >			L5404	1-412-949-21	INDUCTOR	6.8uH		
<b> ∆</b> T901	1_452_124_12	TRANSFORMER A	VGGA ELAB	NCK (TVD	E 3)			< RESISTOR >			
△ T901 △ T902		TRANSFORMER A						< ILDIDION >			
2.3 TOOL	1 101 010 11	THU WOT OTWICE TO	1001, 1 21 21	(111)	(111 = 2)	R5401	1-216-864-11	METAL CHIP	0	5%	1/16W
		< FLEXIBLE BOAF	RD >			R5403			0	5%	1/16W
						R5405			22K	5%	1/16W
<b>△</b> W901	1-540-019-42	SOCKET ASSY, CF	RT			R5408			22K	5%	1/16W
						R5409	9 1-216-839-11	METAL CHIP	33K	5%	1/16W
						R5415	5 1-216-864-11	METAL CHIP	0	5%	1/16W
	A-7073-437-A	VF-119 BOARD, C	OMPLETE			R5416		METAL CHIP	0	5%	1/16W
		******	******			R5417	7 1-216-864-11	METAL CHIP	0	5%	1/16W
		(TR416/TR4	16PK/TR51	6/TR516F	PK/TR716)	R5420			68K	5%	1/16W
		OADAOITOD				R5421	1-216-839-11	METAL CHIP	33K	5%	1/16W
		< CAPACITOR >				R5422	2 1-216-840-11	METAL CHIP	39K	5%	1/16W
C5401	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	R5423		METAL CHIP	39K 470K	5% 5%	1/16W
C5402	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R5424		METAL CHIP	39K	5%	1/16W
C5403	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V	R5425			68K	5%	1/16W
C5404	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	R5426	1-216-839-11	METAL CHIP	33K	5%	1/16W
C5405	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	DE 40-	7 4 040 040 44	METAL CLUB	001/	E0/	4/4014
C5406	1_160 070 11	CERAMIC CHIP	0.01.iE	10%	25V	R5427 R5428		METAL CHIP METAL CHIP	39K 33K	5% 5%	1/16W 1/16W
C5406 C5407	1-162-970-11 1-135-181-21	TANTALUM CHIP	0.01uF 4.7uF	20%	6.3V	R5428			33K 0	5% 5%	1/16W 1/16W
C5408	1-135-181-21	TANTALUM CHIP		20%	6.3V	R5431			100	5%	1/16W
C5409	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	R5432		METAL CHIP	100	5%	1/16W
C5410	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
	1 10= 15: -	TABLE	4	0.557	0.017	R5435			100	5%	1/16W
C5411	1-135-181-21	TANTAL CHIP	4.7uF	20%	6.3V	R5437		METAL CHIP	0	5%	1/16W
C5413 C5414	1-107-686-11 1-162-970-11	TANTAL. CHIP CERAMIC CHIP	4.7uF 0.01uF	20% 10%	16V 25V	R5439 R5440		METAL CHIP RES,CHIP	0 270K	5% 0.50%	1/16W 1/16W
C5414 C5415	1-162-970-11	CERAMIC CHIP	0.01uF 2.2uF	IU /0	25V 16V	R5440			270K 12K	0.50%	1/16W
C5416	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V 10V	11344		1120,01111	1411	0.00/0	17 10 00
				,,,		R5444	1 1-216-840-11	METAL CHIP	39K	5%	1/16W
C5417	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	-					
C5418	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V		The components		Les composai		
C5419	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V		mark \( \Delta \) or dotted	I	marque $\triangle$ so	nt critiqu	es pour la
C5420	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V				sécurité. Ne les remp	lacer ou	ngr una
					•	22	specified.	a pair number	piéce portant		
					Ď-	<b>33</b>	-recinion.		Piece Portant	.c manner	o specific.

# VF-119 VF-120 VL-21/22

Ref. No. R5446 R5447 R5448 R5449	Part No. 1-216-837-11 1-216-833-11 1-216-839-11 1-216-864-11	Description METAL CHIP METAL CHIP METAL CHIP METAL CHIP	22K 10K 33K 0	5% 5% 5% 5%	Remark 1/16W 1/16W 1/16W 1/16W
R5452 R5458 R5460 R5471 R5473	1-216-821-11 1-216-864-11 1-216-864-11 1-216-837-11 1-216-864-11	METAL CHIP METAL CHIP METAL CHIP METAL CHIP METAL CHIP	1K 0 0 22K 0	5% 5% 5% 5% 5%	1/16W 1/16W 1/16W 1/16W 1/16W
R5476	1-216-864-11	METAL CHIP	0	5%	1/16W
	A-7073-438-A	VF-120 BOARD ************************************		I6/TR516	PK/TR716)
		< CAPACITOR >	•		
C5302 C5303 C5304 C5305 C5306	1-104-916-11 1-164-227-11 1-162-970-11 1-104-851-11 1-164-676-11	TANTAL. CHIP CERAMIC CHIP CERAMIC CHIP TANTAL. CHIP CERAMIC CHIP	0.01uF 10uF	20% 10% 10% 20% 5%	20V 25V 25V 10V 16V
C5307 C5308 C5309 C5310 C5311	1-135-181-21 1-164-227-11 1-162-970-11 1-164-217-11 1-107-826-91	TANTALUM CHI CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.022uF 0.01uF 150PF	20% 10% 10% 5% 10%	6.3V 25V 25V 50V 16V
C5312 C5313 C5314	1-109-982-11 1-115-467-11 1-162-970-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.22uF	10% 10% 10%	10V 10V 25V
		< CONNECTOR	>		
CN5301 CN5302		CONNECTOR, F CONNECTOR, B	` ,		)
		< DIODE >			
D5301 D5302	8-719-043-70 8-719-056-49		21-(TX) 0(TE85L)		
		< IC >			
IC5301	8-759-097-75	IC MB3789PF	/-G-BND-ER		
		< COIL >			
L5301	1-412-031-11	INDUCTOR CHI	P 47uH		
		< TRANSISTOR			
Q5301 Q5304 Q5305		TRANSISTOR	UN5113-TX	5L	
		< RESISTOR >			
R5301 R5304 R5305 R5306 R5307	1-216-809-11 1-218-901-11 1-218-887-11 1-216-843-11 1-216-838-11	RES,CHIP RES,CHIP METAL CHIP	100 180K 47K 68K 27K	5% 0.50% 0.50% 5% 5%	
R5308	1-216-847-11	METAL CHIP	150K	5%	1/16W

R5309 1-216-841-11 METAL CHIP

47K

5%

Ref. No.	Part No.	<u>Description</u>			<u>Remark</u>
R5310	1-216-842-11	METAL CHIP	56K	5%	1/16W
R5311	1-216-850-11	METAL CHIP	270K	5%	1/16W
R5312	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5313	1-216-842-11	METAL CHIP	56K	5%	1/16W
	. =				.,
R5314	1-216-850-11	METAL CHIP	270K	5%	1/16W
R5315	1-216-833-11	METAL CHIP	10K	5%	1/16W
R5316	1-216-851-11	METAL CHIP	330K	5%	1/16W
R5317	1-216-848-11	METAL CHIP	180K	5%	1/16W
R5318	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R5321	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5322	1-216-853-11	METAL CHIP	470K	5%	1/16W
R5324	1-216-864-11	METAL CHIP	0	5%	1/16W

## A-7073-787-A VL-21 BOARD, COMPLETE

\*\*\*\*\*\*\*

(TR516/TR516PK/TR716) (Ref.No. 2,000 Series)

#### 

(TRV36/TRV36PK/TRV43/TRV46/TRV46PK) (Ref.No. 3,000 Series)

#### < CAPACITOR >

C151 1-115-566-11 CERAMIC CHIP 4.7uF 10% 10V (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) C153 1-162-964-11 CERAMIC CHIP 0.001uF 10% 50V (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)

#### < CONNECTOR >

CN151 1-764-703-11 CONNECTOR, FFC/FPC (LIF) 4P (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)

### < COIL >

L151 1-416-344-11 INDUCTOR 10uH (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)

#### < TRANSISTOR >

Q151 8-729-043-94 TRANSISTOR CPH3106-PM-TL (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) Q152 8-729-028-26 TRANSISTOR 2SK1829(TE85L) (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)

#### < RESISTOR >


1-216-864-11 METAL CHIP 0 R151 5% 1/16W (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) R152 1-216-813-11 METAL CHIP 220 5% 1/16W (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) R153 1-216-821-11 METAL CHIP 1K 5% (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK) R154 1-216-845-11 METAL CHIP 100K 5% 1/16W (TR516/TR516PK/TR716/TRV36/TRV36PK/TRV43/TRV46/TRV46PK)

1/16W

Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>	Ref. No.	Part No.	<u>Description</u>	<u>Remark</u>
		MISCELLANEOUS *********				ACCESSORIE	· <del>-</del>
67 73	1-475-619-11	SWITCH BLOCK, CONTROL (SS-850 SWITCH BLOCK, CONTROL (FK-8500					MMANDER (RMT-708) TRV36PK/TRV43/TRV46/TRV46PK)
73		(TR series/TRV16/TRV16PK/TRV36 SWITCH BLOCK, CONTROL (FK-8500	5/TRV36PK)	<u>^</u>	1-475-599-11	ADAPTOR, A	,
151	1-475-620-11	(TRV43/TRV40 SWITCH BLOCK, CONTROL (MF-850					6PK/TRV16:E,BR,HK,TW/TRV16PK/ TRV36PK/TRV46:E,HK/TRV46PK)
157		CABLE, FLEXIBLE FLAT (FFC-257F)	,		1-696-862-21	CORD, CONN	
209 210		FP-621 FLEXIBLE BOARD FP-58 FLEXIBLE BOARD (for Video li	aht models)	<u>↑</u> (TB315		CORD, POWE	
211 212	1-672-453-11	FP-56 FLEXIBLE BOARD FP-620 FLEXIBLE BOARD (TR716/TF	·	`			TRV46:E/TRV46PK)
254		FP-57 FLEXIBLE BOARD	, i	<u> </u>	1-783-374-11	CORD, POWE	R (TRV16:HK/TRV36:HK/TRV46:HK)
		(for Color view fin	der models)	$\triangle$		CORD, POWE	ER 716/TRV16:US,CND/TRV36/TRV43/
308	1-783-241-11	CABLE, FLEXIBLE FLAT (FFC-235)	dar madala)				TRV46:US,CND)
358	1-668-963-21	(for B/W view fin FP-642 FLEXIBLE BOARD (for TRV s				VIDEO, HOW 16:US/TR716:U	TO TAKE S/TRV16:US/TRV36:US/TRV46:US)
359 401		HARNESS (PD-108) (for TRV series) DEVICE, LENS (LSV-600A) (SOC)					STRUCTION (English)
409		FILTER BLOCK, OPTICAL			3-865-332-21	MANUAL, INS	(TR416:US,CND/TR516/TR716) STRUCTION (French)
412	1-668-959-11	FP-623 FLEXIBLE BOARD				(TF	R416:CND/TR516:CND/TR716:CND)
760 762	1-658-213-11	FP-355 FLEXIBLE BOARD FP-221 FLEXIBLE BOARD			3-865-332-31	MANUAL, INS	STRUCTION (Spanish, Portuguese)
764	1-658-214-11	FP-356 FLEXIBLE BOARD			3-865-332-41	MANUAL, INS	(TR315:E/TR416PK/TR516PK) STRUCTION (Chinese)
803	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SEN	ISOR)		3-865-332-51	ΜΔΝΙΙΔΙ ΙΝΙ	(TR315:E/TR416PK/TR516PK) STRUCTION (Korean)
817		FP-220 FLEXIBLE BOARD					(TR315:E/TR416PK/TR516PK)
D001 IC401	8-719-988-42 A-7030-960-A	CCD BLOCK ASSY (206 Service)			3-865-332-61	MANUAL, INS	STRUCTION (English) (TR315:E/TR416PK/TR516PK)
(TR315/TR4 IC401		R516/TR516PK/TRV16/TRV16PK/TRV3 CCD BLOCK ASSY (207 Service)	6/TRV36PK)		3-865-333-11		STRUCTION (English) ND/TRV36/TRV43/TRV46:US,CND)
J001		(TR716/TRV43/TRV46 JACK, ULTRA SMALL 1P (LANC)	6/TRV46PK)		2 065 222 01	•	,
		, ,			(	TRV16:CND/TR	STRUCTION (French) V36:CND/TRV43:CND/TRV46:CND)
J901 LCD901		TERMINAL BOARD, BATTERY MODULE, CRYSTAL INDICATION					STRUCTION (Spanish,Portuguese) K/TRV36PK/TRV46:E,HK/TRV46PK)
LCD902	8-753-023-37	LCX024AK-4/5 COMPLE (for Color view fine	der models)		3-865-333-41	MANUAL, INS	STRUCTION (Chinese)
LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	doi modolo)		3-865-333-51	MANUAL, INS	K/TRV36PK/TRV46:E,HK/TRV46PK) STRUCTION (Korean)
M901		DRUM ASSY (DGH-0E3A-R)			,	*	K/TRV36PK/TRV46:E,HK/TRV46PK) STRUCTION (English)
M902 M903		CAPSTAN ASSY MOTOR ASSY, DC (LOADING)			(TRV16:E,H	IK,TW/TRV16PI	K/TRV36PK/TRV46:E,HK/TRV46PK)
M905 M906	1-763-047-11 1-763-046-11	MOTOR, FOCUS STEPPING MOTOR, ZOOM STEPPING				BELT (S), SH	
						BAG (8500), R416PK/TR516	GPK/TRV16PK/TRV36PK/TRV46PK)
MIC901 ▲ ND801	1-542-312-11 1-517-752-11	MICROPHONE TUBE, FLUORESCENT, COLD CATHO	DE				TERY PACK (US,CND) TERY PACK (Except US,CND)
<b>△</b> ND5351	1-517-325-21	(for LAMP, FLUORESCENT (0.55 INCH)	TRV series)				(2.10)
S001	1-692-614-11	(for Color view fin SWITCH, PUSH (3 KEY)	der models)				
S002	1-572-688-11	(Hi8 MP, ME/MP, F SWITCH, PUSH (1 KEY)(C.C. LOCK)	REC PROOF)				
S003	1-572-688-11	SWITCH, PUSH (1 KEY) (EJECT)					
S901	1-762-436-15	SWITCH, ROTARY (ENCODER)					
SE451	1-803-041-11	SENSOR, ANGULAR VELOCITY (YAW (TR716/TRV43/TRV46					
SE452	1-803-041-21	SENSOR, ANGULAR VELOCITY (PITO (TR716/TRV43/TRV40	CH) ´				
SP901	1-504-753-41	SPEAKER (2.8 CM) (for TRV series)	.				
<b>∆</b> VL901	1-517-760-11	LIGHT, VIDEO (for Video light models	s)				
<b>∆</b> V901	1-452-6/3-61	CRT ASSY (M01KXX90WB) (for B/W view fin	der models)		The components mark ♠ or dotted ♠ are critical for	line with mark	Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité.

Replace only with part number specified. Ne les remplacer que par une piéce portant le numéro spécifié.


### FOR CAMERA COLOR REPRODUCTION ADJUSTMENT

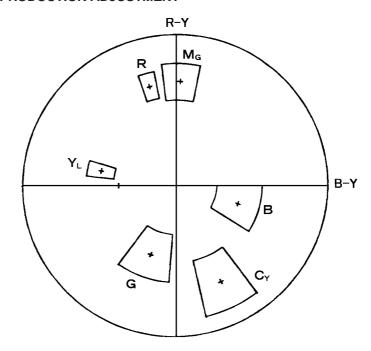

CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

#### < PARTS REFERENCE SHEET >

You can find the parts position of mount locations applying to boards of a set.

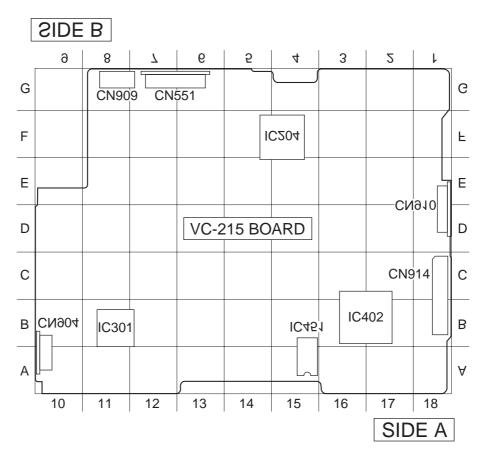

CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK

## CCD-TR315/TR416/TR416PK/TR516/TR516PK/TR716 CCD-TRV16/TRV16PK/TRV36/TRV36PK/TRV43/TRV46/TRV46PK