


SHARP SERVICE MANUAL

No. S73B9LC80LE64

LCD COLOR TELEVISION

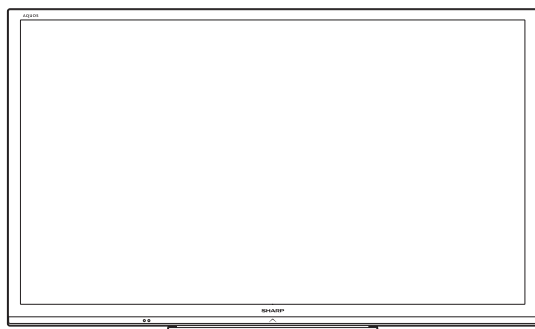

MODEL LC-80LE642U

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

SAFETY PRECAUTION

IMPORTANT SERVICE SAFETY PRE-CAUTION	i
PRECAUTIONS A PRENDRE LORS DE LA REPARATION	ii
PRECAUTIONS FOR USING LEAD-FREE SOLDER	iii

OUTLINE

MAJOR SERVICE PARTS	iv
---------------------------	----

CHAPTER 1. SPECIFICATIONS

[1] SPECIFICATIONS	1-1
--------------------------	-----

CHAPTER 2. OPERATION MANUAL

[1] OPERATION MANUAL	2-1
----------------------------	-----

CHAPTER 3. DIMENSIONS

[1] DIMENSIONS	3-1
----------------------	-----

CHAPTER 4. REMOVING OF MAJOR PARTS

[1] REMOVING OF MAJOR PARTS	4-1
[2] The location putting on the heat measure sheet	4-9
[3] Precautions for assembly	4-10

CHAPTER 5. ADJUSTMENT

[1] ADJUSTMENT PROCEDURE	5-1
[2] PUBLIC MODE SETTING PROCEDURE	5-15

CHAPTER 6. TROUBLESHOOTING TABLE

[1] Failure diagnosis by LED in front of cabinet	6-1
[2] LED flashing specification at the time of an error (Center icon LED used)	6-1
[3] TROUBLESHOOTING TABLE	6-4

CHAPTER 7. MAJOR IC INFORMATIONS

[1] MAJOR IC INFORMATIONS	7-1
---------------------------------	-----

CHAPTER 8. OVERALL WIRING/SYSTEM BLOCK DIAGRAM

[1] OVERALL WIRING DIAGRAM	8-1
[2] SYSTEM BLOCK DIAGRAM	8-2

Parts Guide

Parts marked with "⚠" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SAFETY PRECAUTION

IMPORTANT SERVICE SAFETY PRECAUTION

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

■WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.

CAUTION: FOR CONTINUED PROTECTION AGAINST A RISK OF FIRE REPLACE ONLY WITH SAME TYPE FUSE.

F7003 (250V 6.3A)

■BEFORE RETURNING THE RECEIVER (Fire & Shock Hazard)


Before returning the receiver to the user, perform the following safety checks:

3. Inspect all lead dress to make certain that leads are not pinched, and check that hardware is not lodged between the chassis and other metal parts in the receiver.
4. Inspect all protective devices such as non-metallic control knobs, insulation materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacitor networks, mechanical insulators, etc.
5. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - Plug the AC cord directly into a 120 volt AC outlet.

- Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to an earth ground.
- Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity or measure the AC voltage drop across the resistor.
- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC cord plug connection reversed. (If necessary, a nonpolarized adaptor plug must be used only for the purpose of completing these checks.)

Any reading of 0.75 Vrms (this corresponds to 0.5 mA rms AC.) or more is excessive and indicates a potential shock hazard which must be corrected before returning the monitor to the owner.

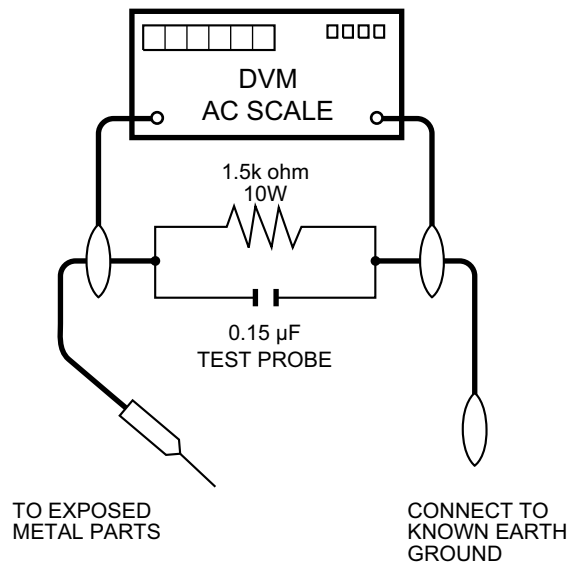

SAFETY NOTICE

Many electrical and mechanical parts in LCD color television have special safety-related characteristics.

These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" and shaded areas in the Replacement Parts List and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit.

The use of a substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

■ Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.

■ AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.

PRECAUTION: POUR LA PROTECTION CONTINUE CONTRE LES RISQUES D'INCENDIE, REMPLACER LE FUSIBLE


F7003 (250V 6.3A)

- A l'aide de deux fils à pinces, brancher une résistance de 1.5 k Ω 10 watts en parallèle avec un condensateur de 0.15 μ F en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
- Utiliser un voltmètre CA d'une sensibilité d'au moins 5000 Ω /V pour mesurer la chute de tension en travers de la résistance.
- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adpatation non polarisée peut être utilisée dans le but de terminer ces vérifications.)
La tension de pointe mesurée ne doit pas dépasser 0.75V (correspondante au courant CA de pointe de 0.5mA). Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

■ VERIFICATIONS CONTRE L'INCEN-DIE ET LE CHOC ELECTRIQUE

Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

3. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
4. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistancecapacité, les isolateurs mécaniques, etc.
5. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la façon suivante:
 - Brancher le cordon d'alimentation directement à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).

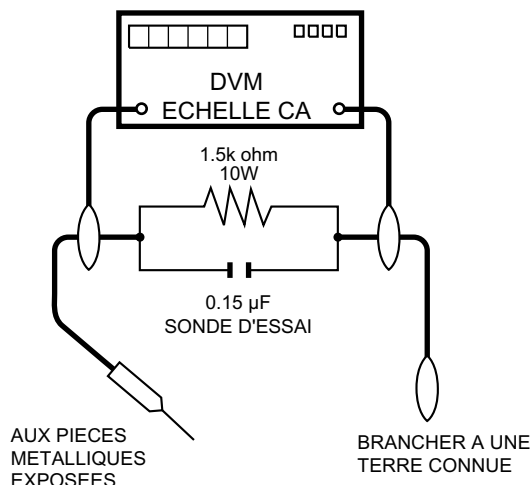

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseur ACL présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.

Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont identifiées par la marque "⚡" et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.

Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

PRECAUTIONS FOR USING LEAD-FREE SOLDER**■Employing lead-free solder**

- “PWBs” of this model employs lead-free solder. The LF symbol indicates lead-free solder, and is attached on the PWBs and service manuals. The alphabetical character following LF shows the type of lead-free solder.

Example:



Sn-Ag-Cu

Indicates lead-free solder of tin, silver and copper.



Sn-Ag-Cu

Indicates lead-free solder of tin, silver and copper.

■Using lead-free wire solder

- When fixing the PWB soldered with the lead-free solder, apply lead-free wire solder. Repairing with conventional lead wire solder may cause damage or accident due to cracks.

As the melting point of lead-free solder (Sn-Ag-Cu) is higher than the lead wire solder by 40 °C, we recommend you to use a dedicated soldering bit, if you are not familiar with how to obtain lead-free wire solder or soldering bit, contact our service station or service branch in your area.

■Soldering

- As the melting point of lead-free solder (Sn-Ag-Cu) is about 220 °C which is higher than the conventional lead solder by 40 °C, and as it has poor solder wettability, you may be apt to keep the soldering bit in contact with the PWB for extended period of time. However, Since the land may be peeled off or the maximum heat-resistance temperature of parts may be exceeded, remove the bit from the PWB as soon as you confirm the steady soldering condition.

Lead-free solder contains more tin, and the end of the soldering bit may be easily corroded. Make sure to turn on and off the power of the bit as required.

If a different type of solder stays on the tip of the soldering bit, it is alloyed with lead-free solder. Clean the bit after every use of it.

When the tip of the soldering bit is blackened during use, file it with steel wool or fine sandpaper.

- Be careful when replacing parts with polarity indication on the PWB silk.

Lead-free wire solder for servicing

PARTS CODE	PRICE RANK	PART DELIVERY	DESCRIPTION
ZHNDai123250E	BL	J	φ0.3mm 250g (1roll)
ZHNDai126500E	BK	J	φ0.6mm 500g (1roll)
ZHNDai12801KE	BM	J	φ1.0mm 1kg (1roll)

OUTLINE

MAJOR SERVICE PARTS

■PWB Unit

Ref NO.	PARTS CODE	DESCRIPTION
N	DKEYMF953FM06	MAIN Unit
N	DUNTKF975FM18	LCD CONTROL Unit
N	DUNTKF494FM01	R/C OPC Unit
N	DUNTKF770FM02	ICON Unit
N	DUNTKF800FM53	KEY Unit
N	RUNTKA936WJQZ	Wi-Fi Unit
N	RUNTKB096WJQZ	POWER/DRIVE Unit

NOTE: *1 Replace MAIN PWB Unit (DKEYMF953FM06) in case of IC3103 and IC3104 failure.

*2 Replace LCD CONTROL PWB Units (DUNTKF975FM18) in case of IC5803(Flash) failure.

■OTHER Unit

Ref NO.	PARTS CODE	DESCRIPTION
N	R1LK800D3GW10Z	80" LCD Panel Module Unit (LK800D3GW10Z)

■IC For Exclusive Use Of The Service

Ref No.	Parts No.	Description	Q'ty
IC2004	RH-iXD515WJN7Q	IC (Monitor Microprocessor)	1

■Service Jigs

Ref No.	PARTS CODE	DESCRIPTION	N
N	QCNW-C222WJQZ	Connecting Cord L=1000mm 80pins, LCD Control Unit to LCD Panel Unit, x2	2
N	QCNW-N560WJPZ	CoConnecting Cord L=650mm 41pins, Main to LCD Control Unit (LW)	1
N	QCNW-M539WJQZ	Connecting Cord L=1200mm 24pins, Power Unit Main Unit (PD)	1

CHAPTER 1. SPECIFICATIONS

[1] SPECIFICATIONS

Specifications

TV

Item			Model: LC-80LE642U
LCD panel	Size		80" Class (80" Diagonal)
	Resolution		2,073,600 pixels (1,920 × 1,080)
TV Function	TV-standard (CCIR)		American TV Standard ATSC/NTSC System
	Receiving Channel	VHF/UHF	VHF 2-13ch, UHF 14-69ch
		CATV	1-135ch (non-scrambled channel only)
		Digital Terrestrial Broadcast (8VSB)	2-69ch
		Digital cable*1 (64/256 QAM)	1-135ch (non-scrambled channel only)
	Audio multiplex		BTSC System
Audio out			10W × 2
Terminals	Back panel vertical inputs	HDMI 1	HDMI in with HDCP, ARC
		HDMI 2	HDMI in with HDCP, Audio in (Ø 3.5 mm stereo jack)
		HDMI 3	HDMI in with HDCP
		HDMI 4	HDMI in with HDCP, MHL
		AUDIO OUT	Audio out (Ø 3.5 mm stereo jack)
		USB 1*2	Photo/Music/Video mode, Software update, USB keyboard/mouse, Wallpaper Picture
	Back panel surface inputs	COMPONENT	COMPONENT in
		VIDEO 1	AV in
		VIDEO 2	AV in
		PC IN	ANALOG RGB (PC) in (15-pin mini D-sub female connector), Audio in (Ø 3.5 mm stereo jack)
	Back panel horizontal inputs	RS-232C	9-pin D-sub male connector
		ANT/CABLE	75 Ω Unbalance, F Type × 1 for Analog (VHF/UHF/CATV) and Digital (AIR/CABLE)
		AUDIO IN	Audio in (Ø 3.5 mm stereo jack)
		DIGITAL AUDIO OUT	Optical Digital audio out × 1 (PCM/Dolby Digital/DTS)
		ETHERNET	Network connector
		USB 2*2	Photo/Music/Video mode, Software update, USB keyboard/mouse, Wallpaper Picture
OSD language			English/French/Spanish
Power Requirement			AC 120 V, 60 Hz
On Mode Power			111 W
Power Consumption			307 W (0.1 W Standby with AC 120 V)
Weight	TV + stand		123.5 lbs. / 56.0kg
	TV only		114.6 lbs. / 52.0kg
Dimensions*3 (W × H × D) (inch)	TV + stand		73 ⁵ / ₁₆ × 45 ³ / ₃₂ × 17 ³ / ₃₂
	TV only		73 ⁵ / ₁₆ × 43 ²⁵ / ₃₂ × 3 ²⁹ / ₃₂
Operating temperature			+ 32°F to + 104°F (0°C to + 40°C)

*1 Emergency alert messages via Cable are unreceivable.

*2 Skype™ is available for the USB terminal. See page 9 for details.

*3 The dimensional drawings are shown on the inside back cover.


- As part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.
- On Mode Power Consumption is measured according to Energy Star program requirements for televisions.

CHAPTER 2. OPERATION MANUAL

[1] OPERATION MANUAL


Part Names

TV (Front)

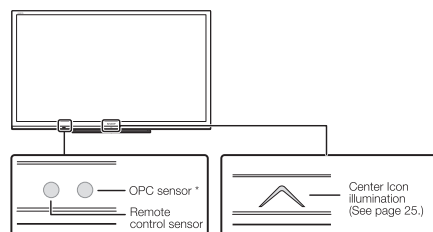

* OPC: Optical Picture Control






TV (Side)

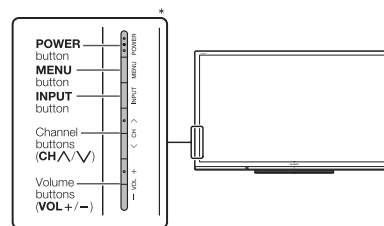

* Button operations.

TV (Rear)

AC INPUT terminal

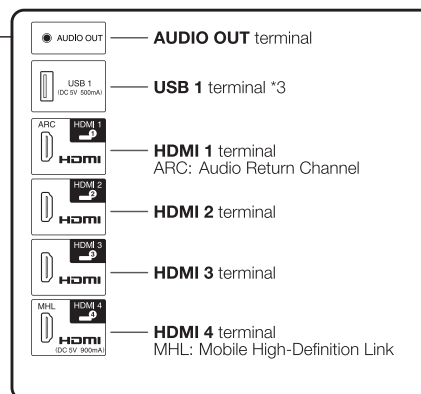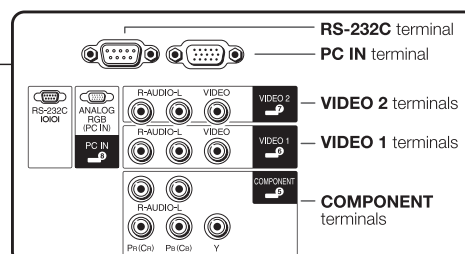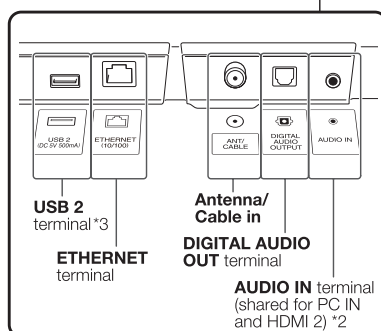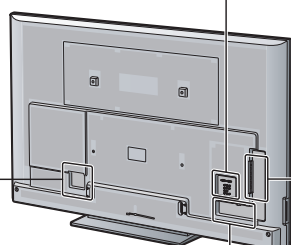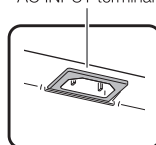

*1 External equipment connection.


*2 Details on the Audio Select function.

*3 Skype™ is available for the USB terminal. For details, refer to the following:

- For the operation manual:
<http://www.sharppusa.com> (USA)
<http://www.sharp.ca> (Canada)
<http://www.sharp.com.mx> (Mexico)
- For information on the communication camera:
<http://freetalk.me/product/sharp/>
- For details on Skype:
<http://www.skype.com>

Part Names

Remote Control Unit

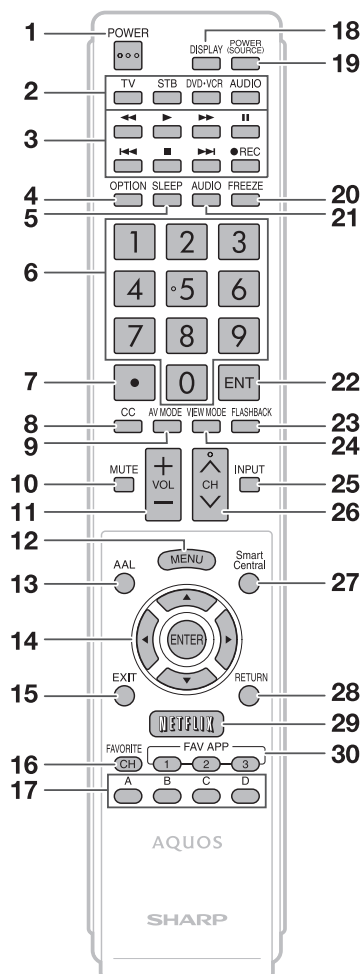

NOTE

- When using the remote control unit, point it at the TV.

1 POWER: Switch the TV power on or enter standby.

2 TV, STB, DVD-VCR, AUDIO: Switches the remote control for TV, STB, BD, DVD, VCR and AUDIO operation.

* To enter the code registration mode, you need to press an appropriate button (**STB**, **DVD-VCR** or **AUDIO**) and **DISPLAY** at the same time.

3 External equipment operational buttons: Operate the external equipment.

4 OPTION: Display the Link Operation Menu screen. This button will function only when AQUOS LINK is used.

5 SLEEP: Set the sleep timer.

6 0-9: Set the channel.

7 • (DOT):

8 CC: Display captions from a closed-caption source.

9 AV MODE: Select an audio or video setting.

10 MUTE: Mute the sound.

11 VOL + / - : Set the volume.

12 MENU: Display the menu screen.

13 AAL: Display AQUOS Advantage Live Services.

14 ▲/▼/◀/▶, ENTER: Select a desired item on the screen.

15 EXIT: Turn off the menu screen.

16 FAVORITE CH: Set the favorite channels.

17 A, B, C, D: Select 4 preset favorite channels in 4 different categories.

While watching, you can toggle the selected channels by pressing **A**, **B**, **C** and **D**.

18 DISPLAY: Display the channel information.

19 POWER (SOURCE): Turns the power of the external equipment on and off.

20 FREEZE: Set the still image. Press again to return to normal screen.

21AUDIO: Selects the MTS/SAP or the audio mode during multichannel audio broadcasts.

22 ENT: Jumps to a channel after selecting with the **0-9** buttons.

23 FLASHBACK: Return to the previous channel or external input mode.

24 VIEW MODE: Select the screen size.

25 INPUT: Select a TV input source. (TV, HDMI1, HDMI2, HDMI3, HDMI4, COMPONENT, VIDEO1, VIDEO2, PC IN, Home Network (DLNA), USB)

26 CH / V: Select the channel.

27 SmartCentral: Display the application window.

28 RETURN: Return to the previous menu screen.

29 NETFLIX: Display the Netflix screen.

30 FAV APP 1, 2, 3: You can assign your favorite applications to these buttons.


QUICK REFERENCE

Attaching the Stand


Building the Work Table

Before attaching the stand to the TV, build a work table on which to rest the TV.


- To build the table, use the cushioning materials used in the packaging.
- Of the cushioning materials used, TOP-C is also used during stand unit assembly. Be sure to assemble the stand unit before building the work table.

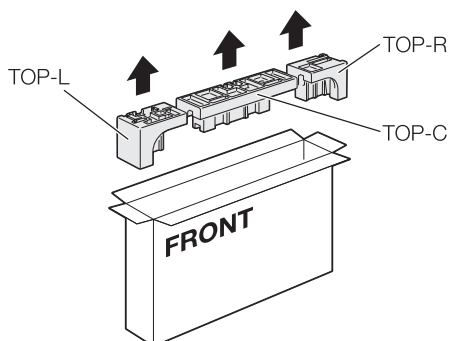


- 1 Insert each of the cushioning materials in the respective directions shown in the figure.
 - Insert TOP-L and TOP-R into the left and right sides of the case respectively.
 - Insert TOP-C to fit between the lines on the other side of the case.

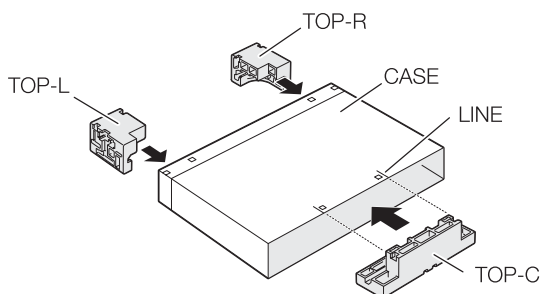

- 2 The case is equipped with push-in tabs to hold the cushioning materials in place. Push in the tabs (2 for each location) to secure the cushioning materials in the case.

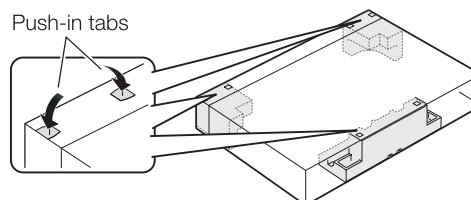


- 3 After you have built the work table, spread a blanket or similar soft cloth over the table and then lay the TV display down on the covered table before attaching the stand to the TV.
 - Do not use a small table for this.
 - Refer to the operation manual for information on attaching the stand.

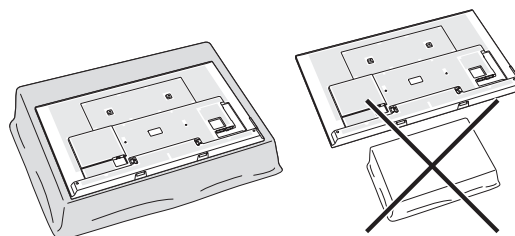

- In the installation procedure, be careful not to catch your fingers between the TV set and the floor.

- **Do not remove the stand from the TV unless using an optional wall mount bracket to mount it.**
- **After attaching the stand to the TV, do not hold the stand when you put up, set up, move or lay down the TV.**

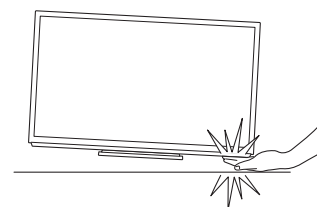


- Before attaching (or detaching) the stand, unplug the AC cord.
- Before performing work spread cushioning over the base area to lay the TV on. This will prevent it from being damaged.


CAUTION

- **Be sure to follow the instructions. Incorrect installation of the stand may result in the TV falling over.**

- 1 Confirm that there are 12 screws (8 long screws and 4 short screws) supplied with the stand unit.
- 2
 - ① Set the post for the stand unit onto the polystyrene foam.
 - ② Attach the base to the post.
 - ③ Insert and tighten the 8 screws into the 8 holes on the bottom of the base.
 - Hold the stand unit securely with one hand, and then tighten the screws.

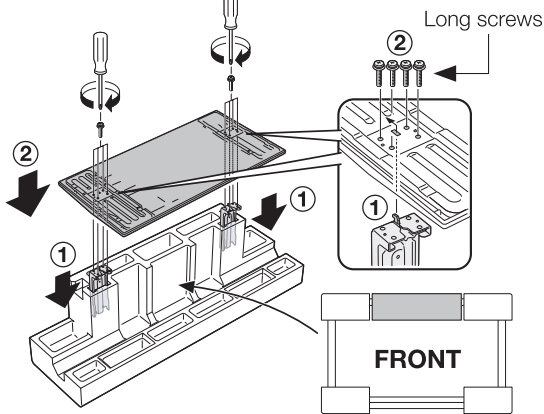


- 3 Build the work table.
- 4 Insert the stand into the openings on the rear of the TV.
 - Make sure that the stand is firmly inserted into the TV. Improper installation may result in tilting of the TV set.

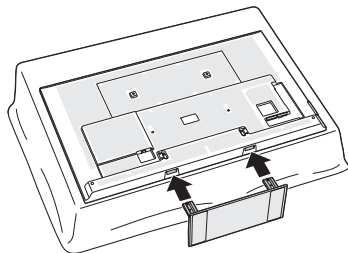

- 5 Insert and tighten the 4 screws into the 4 holes on the rear of the stand unit.


Short screws

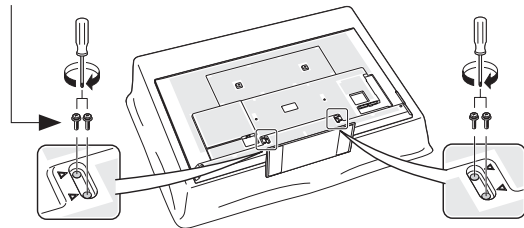

CHAPTER 3. DIMENSIONS

[1] DIMENSIONS

Dimensional Drawings

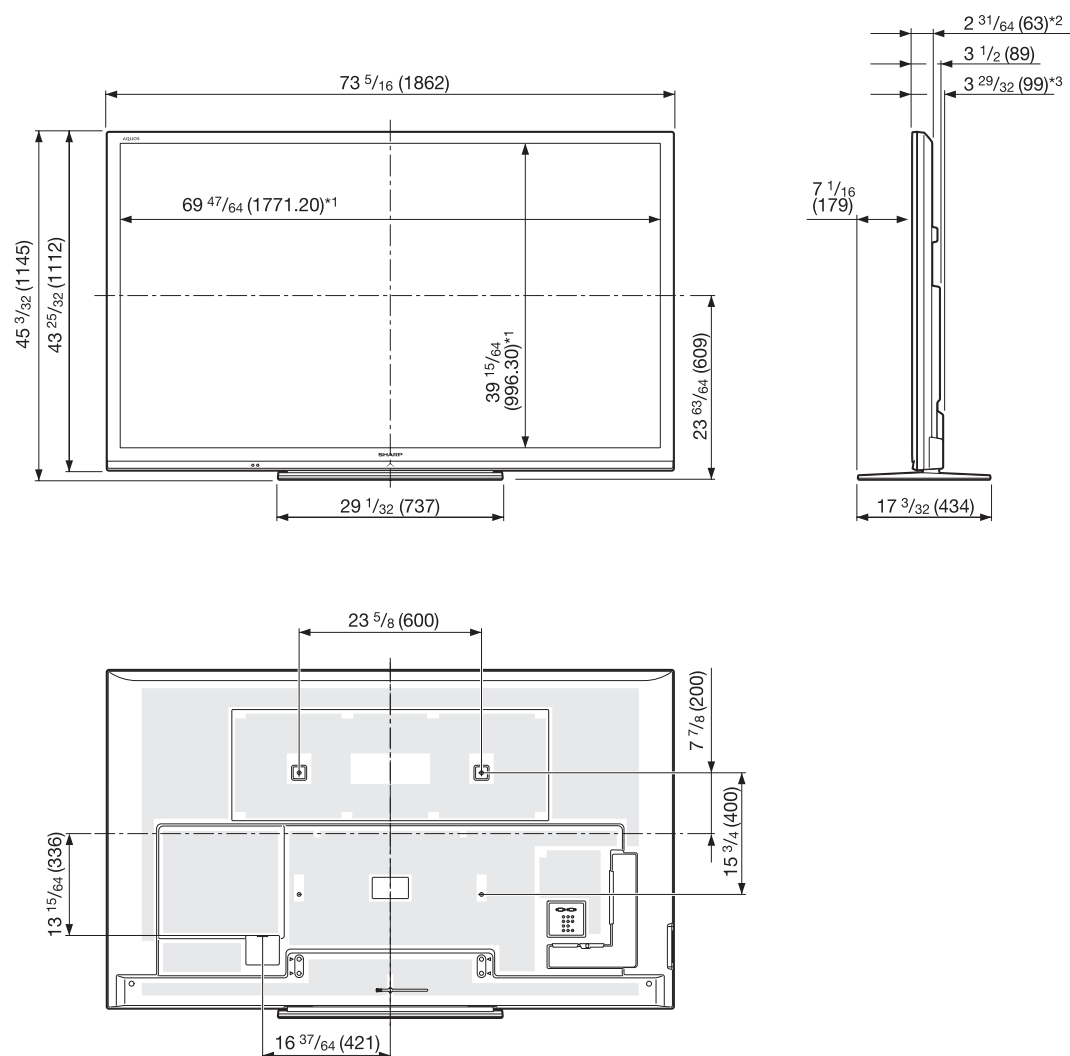

*1 Active area/Área activa/Zona active

*2 Thinnest part/Parte más delgada/Partie la plus mince

*3 Including projecting parts/Incluyendo partes salientes/Parties saillantes incluses


Unit: inch (mm)
Unité: pouce (mm)
Unidad: pulgada (mm)

CHAPTER 4. REMOVING OF MAJOR PARTS

[1] REMOVING OF MAJOR PARTS

1. Removing of Stand Unit and Rear Cabinet Assy.


1. Remove the 4 lock screws ① and detach the Stand Unit ②.
2. Disconnect AC wire and detach the AC cord.
3. Remove the 10 lock screws ③ and 26 lock screws ④ and detach the Rear Cabinet Assy ⑤.

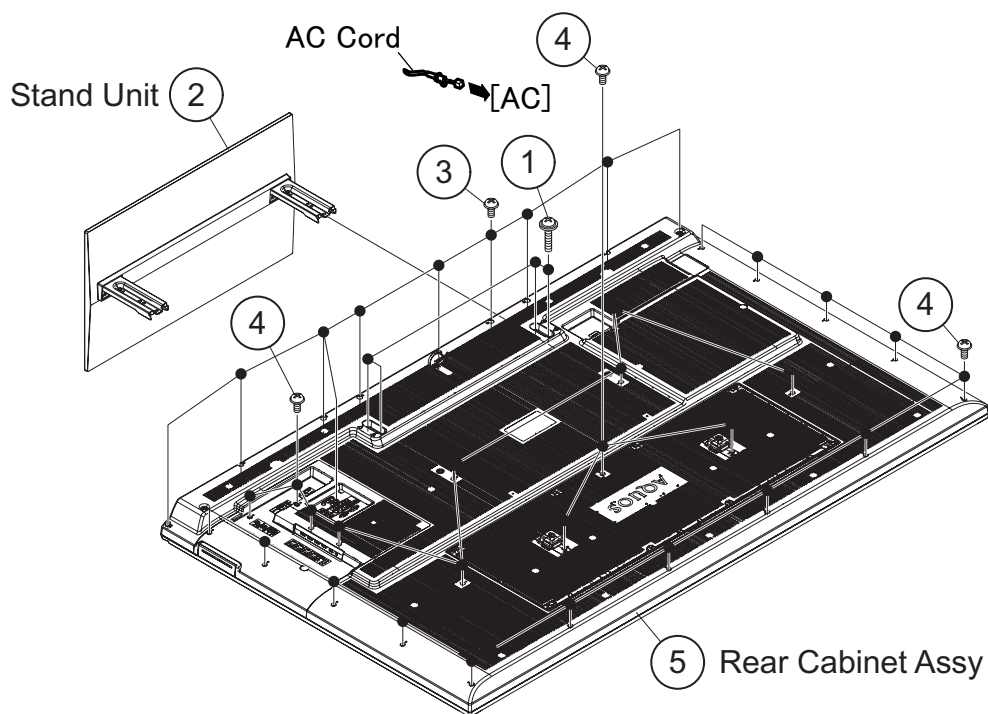


[Precautions when mounting and removing the rear cabinet]

If the rear cabinet is removed with the set upright, the speakers may fall; it results in connector disconnection. Therefore, never remove the rear cabinet with the set upright.


Be sure to remove the rear cabinet with the screen side down.

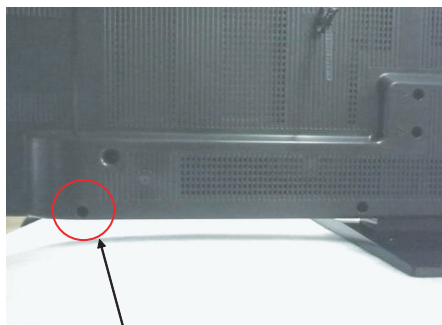

Tighten together with the Rear Cabinet Assy.

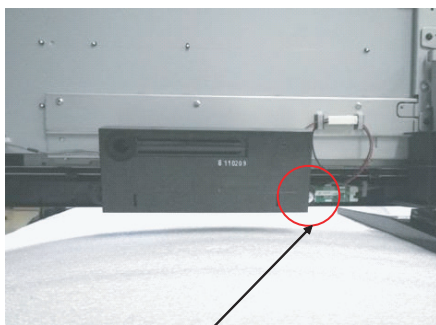

Fix with the 80" LCD Panel Module Unit.

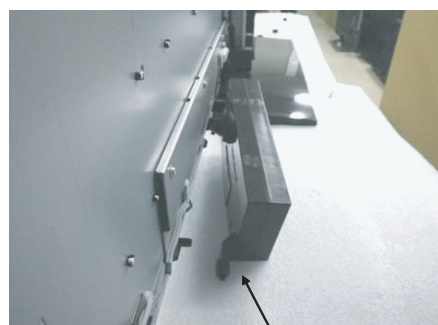


Only one side (outer) can come off.


[How to remove Rear Cabinet Assy]

* Please do following works by 2 persons



Do following works as ① → ② → ③ → ④

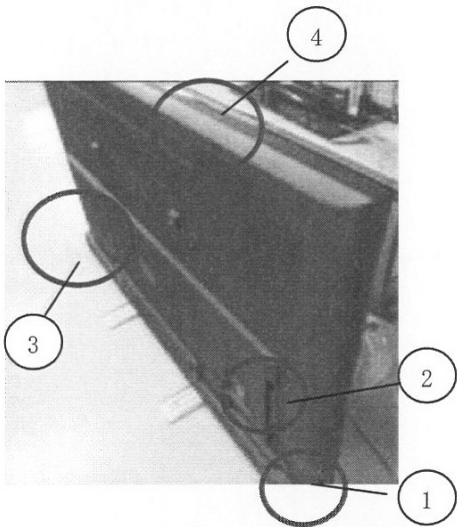

- 1) Please grasp the swelling of a speaker and pull back with pushing down.
Remove one hook under an operation.

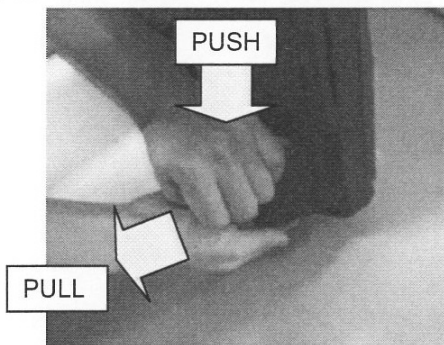

- 2) Put a hand in terminal area and pull it back, and the other hand holds top side of TV set.
Remove all-right hand side hook.

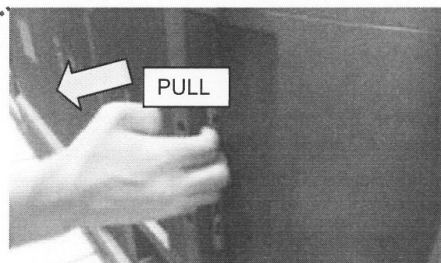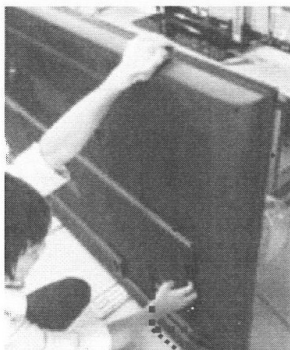


Put a hand between terminal angle and Rear Cabinet Assy and pull them back.

LC-80LE642U

- 3) Hold left side of TV set by one hand, and put the other hand between bottom cover and Rear Cabinet Assy.



And pull Rear Cabinet Assy.

Remove all-left hand side hook.

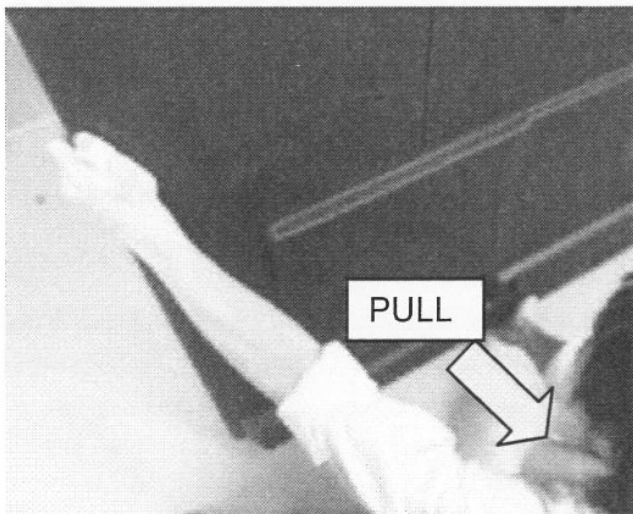


- 4) Two persons stand on the both sides of TV SET, and have a Front Cabinet Assy and a Rear Cabinet Assy by each hand.


Two persons pull a Rear Cabinet Assy horizontally back, simultaneously and remove it.

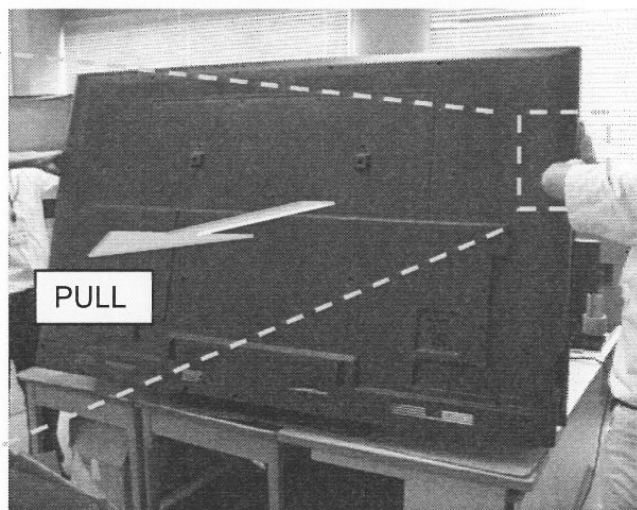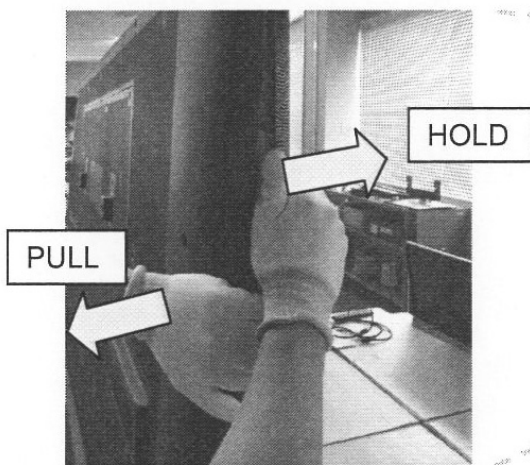

[Precautions for assembly]

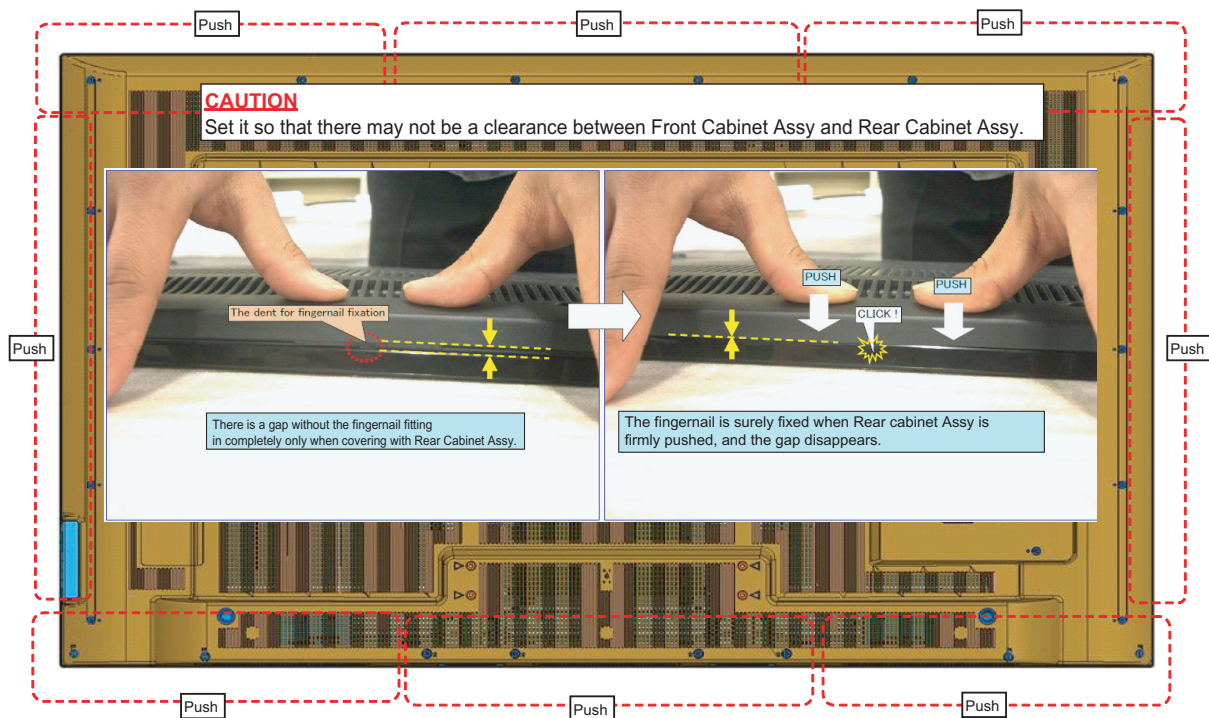


(Front Cabinet Assy/Rear Cabinet Assy fingernail fixation place)

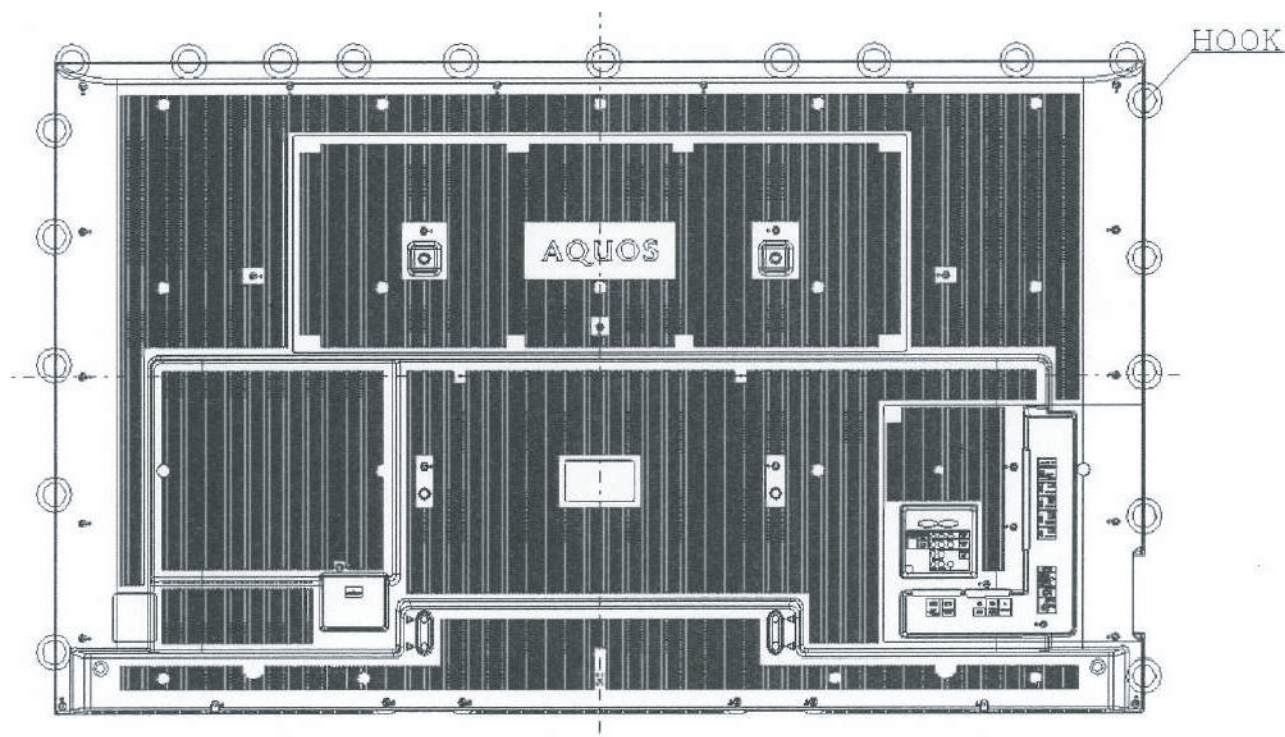



2. Removing of Speaker (L/R) and KEY Unit.

1. Disconnect the SP wire.
2. Remove the 2 lock screws ① and detach the Speaker (L) ②, Speaker (R) ③.
3. Disconnect the RC wire.
4. Detach the KEY Unit Assy ④.
5. Disconnect the KM wire.
6. Remove the 2 lock screws ⑤ and detach the Key Button ⑥ from Key Button Cover ⑧.
7. Detach the KEY Unit ⑦ from Key Button ⑥.

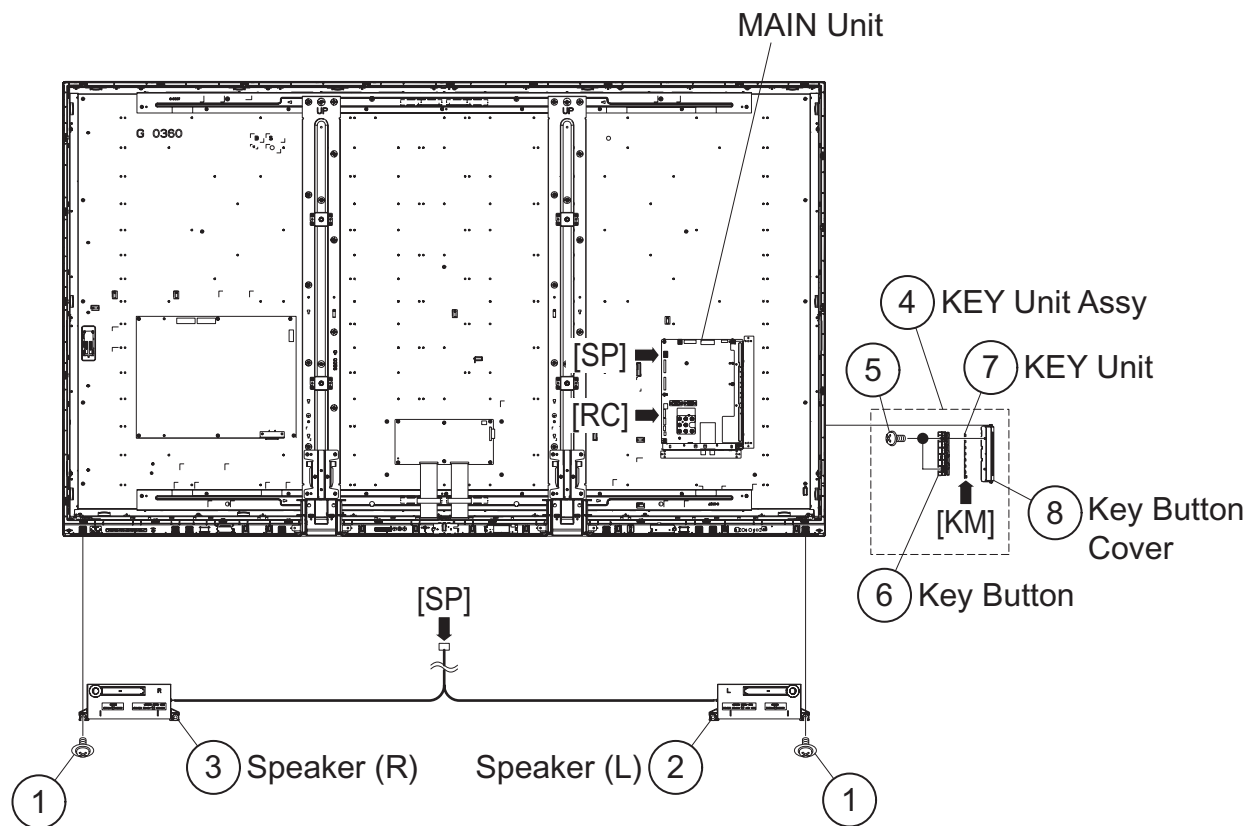


[How to remove KEY Unit Assy]

- 1) When you remove KEY Unit Assy, please be sure to remove harness from WH, and to hold the bottom of KEY Unit Assy.

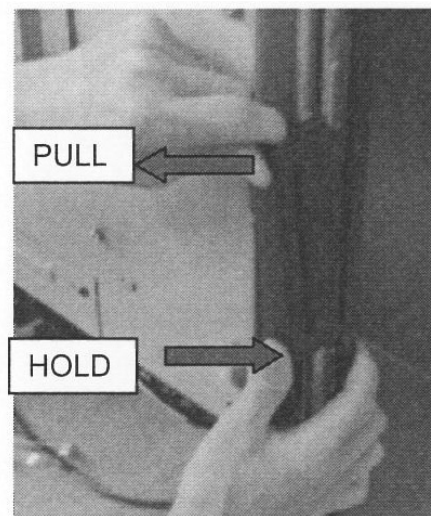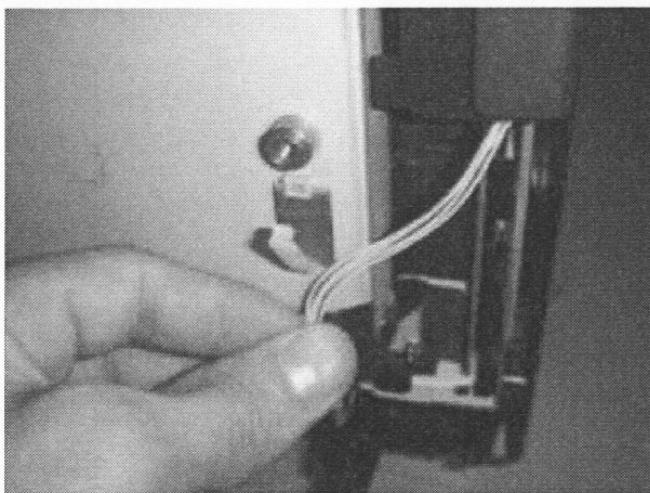


3. Removing of Connectors, 80" LCD Panel Module Unit Assy.

1. Disconnect the following connectors from the MAIN Unit. (LV, PD, UB)
2. Disconnect the following connectors from the POWER/DRIVE Unit. (L1, L2, PD)
3. Disconnect the following connectors from the LCD Control Unit. (PL, LW)
4. Remove the 27 Hooks and detach the 80" LCD Panel Module Unit Assy①.
5. Detach the 2 Bottom cover ②.

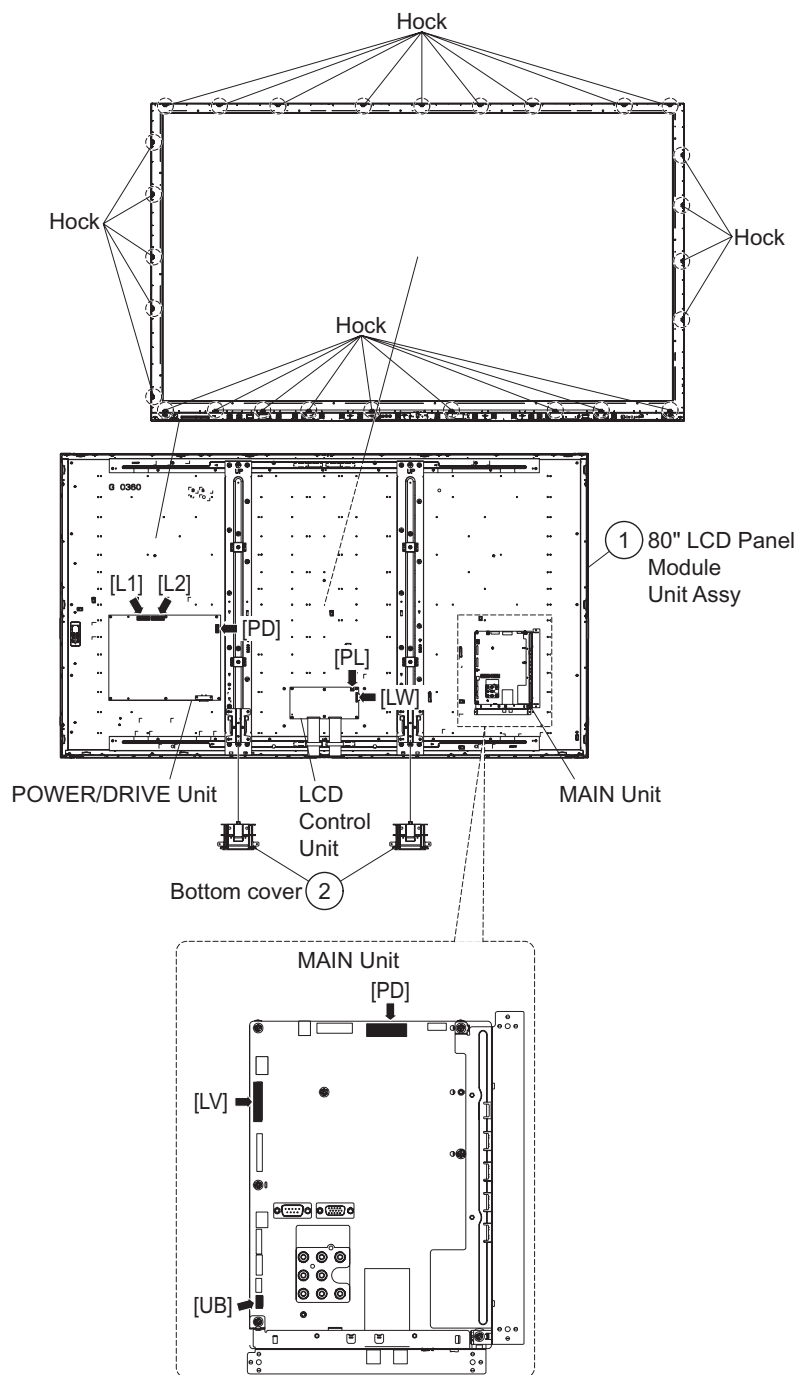


4. Removing of LCD CONTROL Unit, MAIN Unit, POWER/DRIVE Unit.

1. Remove the 2 Connecting Cords ①, 2 Ferrite Cores ②, 6 lock screws ③ and detach the LCD CONTROL Unit ④.
2. Remove the 2 lock screws ⑤ and detach the Terminal Angle (Side) ⑥.
3. Remove the 6 lock screws ⑦ and detach the MAIN Unit ⑧ and Terminal Angle (Bottom) ⑨.
4. Remove the 6 lock screws ⑩ and detach the POWER/DRIVE Unit ⑪.
5. Remove the 12 lock screws ⑫ and detach the 2 Stand Angles ⑬.
6. Remove the 16 lock screws ⑭ and detach the 4 VESA Angle Assys ⑮.

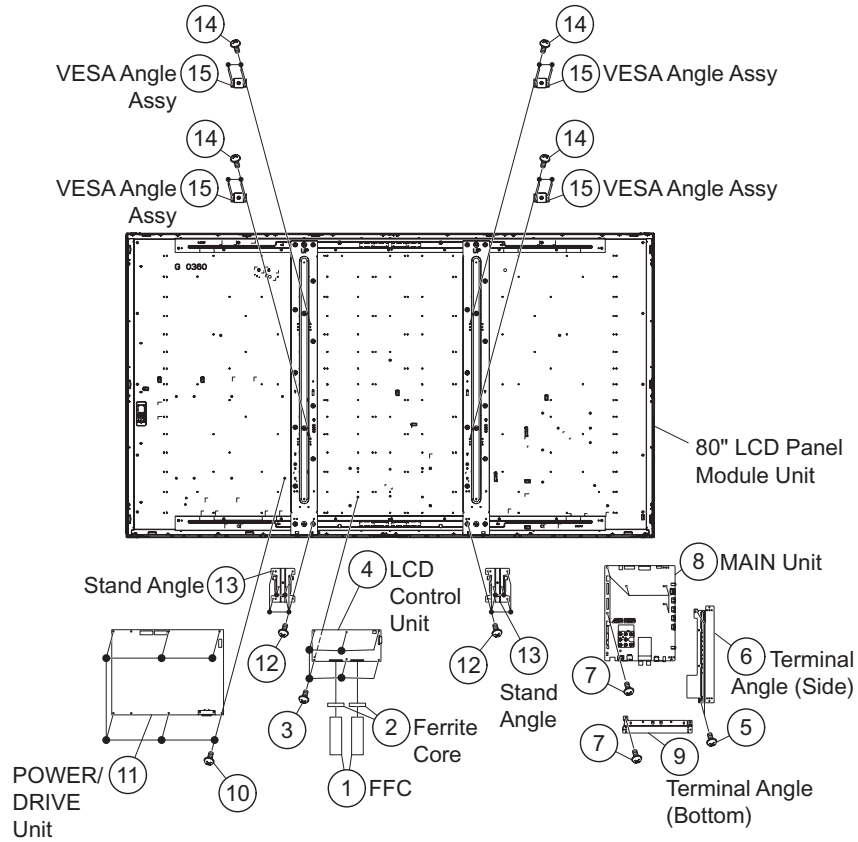


5. Removing of R/C OPC Unit, ICON Unit, Wi-Fi Unit.

1. Detach the R/C OPC Unit ①.
2. Disconnect the RC wire.
3. Detach the ICON Unit ③.
4. Disconnect the CI wire.
5. Detach the Wi-Fi Unit ②.
6. Disconnect the UB wire.
7. Detach the Wi-Fi Attachment ④.

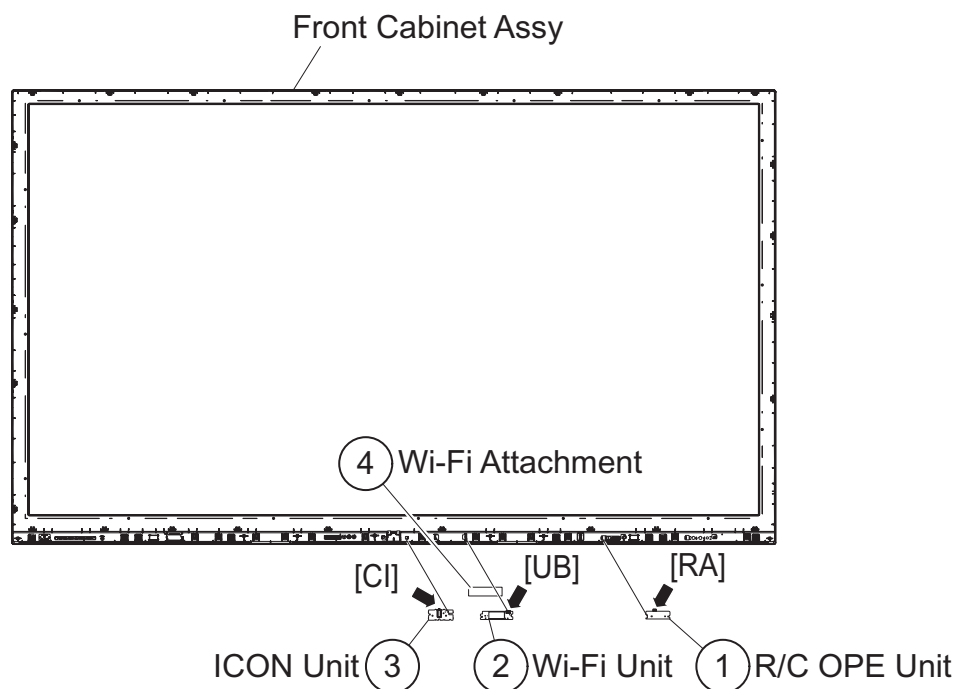

[2] The location putting on the heat measure sheet

1. MAIN PWB Unit

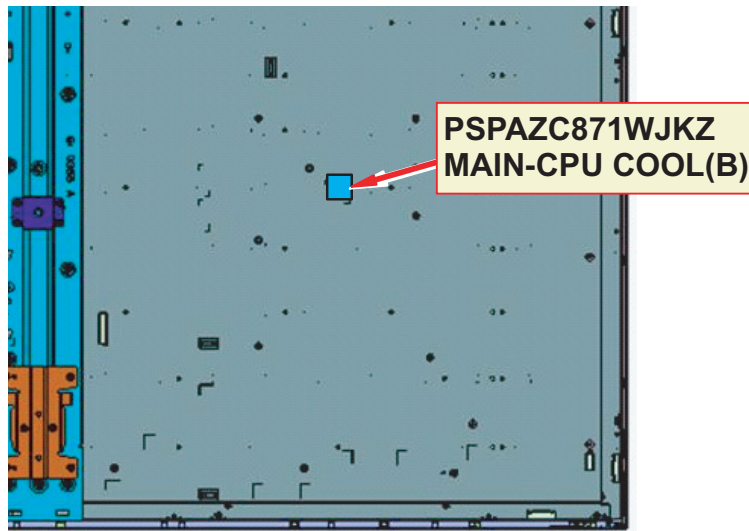


[3] Precautions for assembly

1. Points to be checked and precautions when servicing the unit

Mount the main PWB Assy on the backlight chassis and check that the EMI-prevention parts are not peeled and twisted from the access holes. (The EMI-prevention parts, conductive nonwoven fabric gaskets, must be seen from the access holes.)


[Countermeasure]

Attach the conductive nonwoven fabric gaskets on the shielded case on the main PWB.

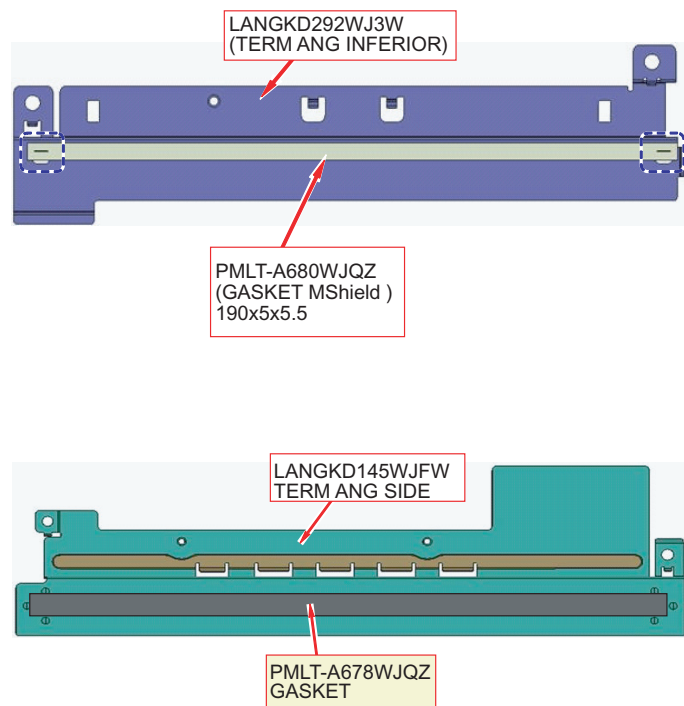

LC-80LE642U

The following is a drawing mounting the main PWB Assy on the backlight chassis. (The parts indicated by -> are the access holes for confirmation.)
(Main PWB Assy => State where the shielded case and RF terminal angle are mounted on the main PWB)

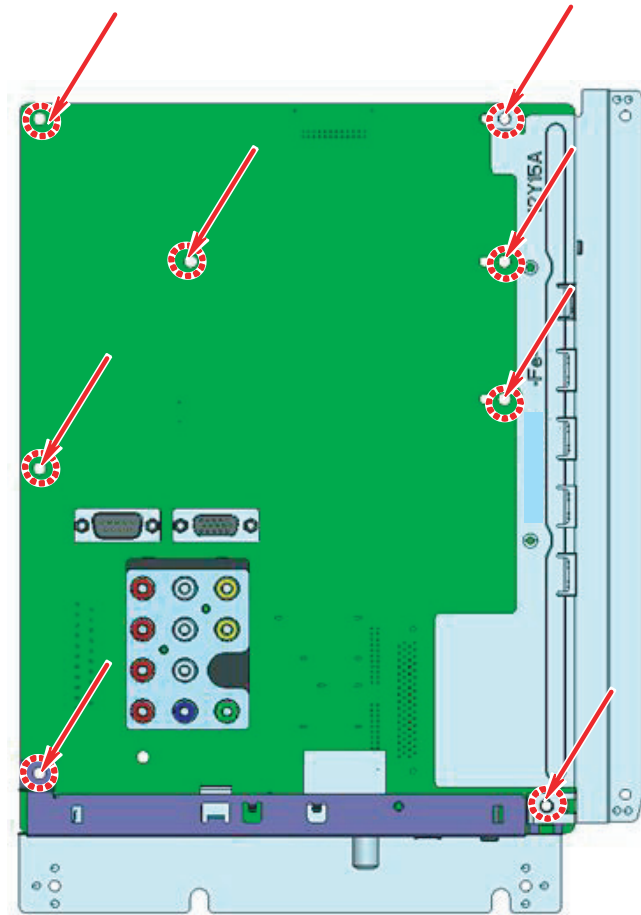

CHAPTER 5. ADJUSTMENT

[1] ADJUSTMENT PROCEDURE

The adjustment values are set to the optimum conditions at the factory before shipping. If a value should become improper or an adjustment is required due to part replacement, make an adjustment according to the following procedure.

1. After replacement of any PWB unit and/or IC for repair, please note the following.

- When replacing the following units, make sure to prepare the new units loaded with updated software.

MAIN Unit: DKEYMF953FM06

- When replacing the LCD control PWB, perform the VCOM adjustment.

2. Upgrading of each microprocessor software

CAUTION: Never "POWER OFF" the unit when software upgrade is ongoing.

Otherwise the system may be damaged beyond recovery.

2.1. Software version upgrade

The model employs the following software.

- Main software (please use a software version after OKLA_LE857_xxx.USB).
- Monitor microprocessor software (please use a software version after OKLAMxxx.SMB.)

The main software, monitor microprocessor software can be upgraded by using a general-purpose USB Memory.

The followings are the procedures for upgrading, explained separately for the main software, monitor microprocessor software.

2.2. Main software version upgrade

2.2.1 Get ready before you start

- USB Memory of 128MB or higher capacity.
- PC running on Windows 98/98SE/ME/2000/XP operating system.
- USB Memory reader/writer or PC with a USB port.
- The file system of a USB memory is FAT. (FAT32 supports)
- Use the USB memory without other functions. (lock and memory reader...etc)

2.2.2 Preparations

To upgrade the main software, it is necessary to get ready the USB Memory for version upgrade before you start.

Follow the steps below and create the USB Memory for version upgrade.

1. Copy the file OKLA_LE857_xxx.USB for version upgrade to the root directory (folder) of the USB Memory.


NOTE: In the USB Memory drive, do not store other folders or unrelated files, or more than one file for version upgrade.

Now the USB Memory for version upgrade is ready.


LC-80LE642U

2.2.3 How to upgrade the software

1. Unplug the AC cord.
2. Insert the USB Memory for version upgrade into the service socket.
3. Plug in the AC cord with power button pressed down.
4. After 5 seconds, unpress the power button.
5. After the unit startup, the system upgrade screen as shown below within 20-40 seconds.

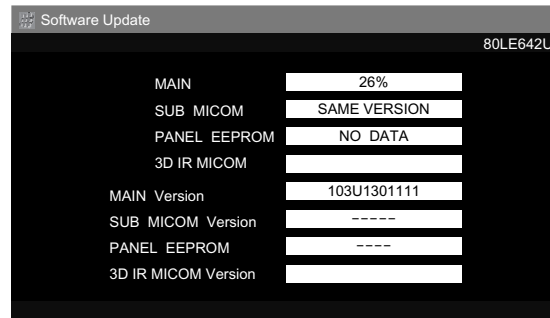


6. Even a single failure in the process will trigger the upgrade failure screen.

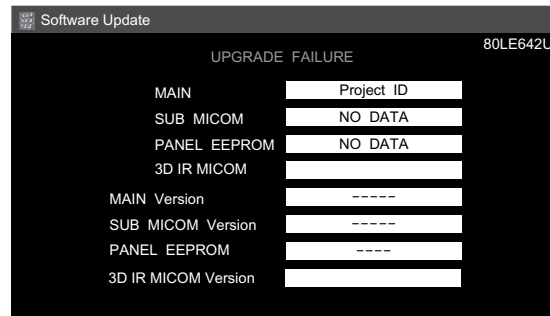

NOTE: In the event of a failure, repeat the upgrade process. If the process repeatedly fails, it is likely that the hardware need fixing.

7. Upon completion of the whole process, the upgrade success screen as shown below appears. You can check the new software version on this screen. The version information appears after the upgrade is complete.

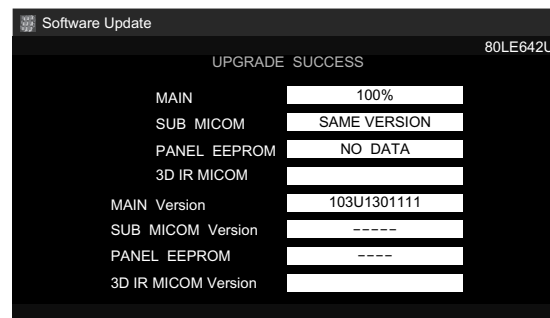

8. Unplug the AC cord and remove the USB Memory for version upgrade.
9. Now the software version upgrade is complete.

NOTE: When you are done with the software version upgrade, start the set, go to the top page of the adjustment process screen and check the main software version information.

2.3. Monitor microprocessor software version upgrade

Create the USB memory for monitor microprocessor software version upgrade in the same manner as explained in the "Main software version upgrade".

Copy the file OKLA_LE857_xxx.USB and OKLAMxxx.SMB. (named temporarily) for monitor microprocessor software version upgrade to the USB memory.


2.3.1 How to upgrade the software

1. Unplug the AC cord.
2. Insert the USB Memory for version upgrade into the service socket.
3. Plug in the AC cord with power button pressed down.
4. After 5 seconds, unpress the power button.


CAUTION: • The moment this operation is done, the upgrading of the monitor microprocessor software starts. While the upgrade is ongoing, never power off the unit. Otherwise the upgrade will fail and the system may be serious damaged beyond recovery (inability to start).

- After the monitor microprocessor software is upgraded, also perform the 'Industry Init'.

5. After the unit startup, the upgrade starts. The power led will blink continuously. Also, an upgrade screen will be shown during a minor upgrade.

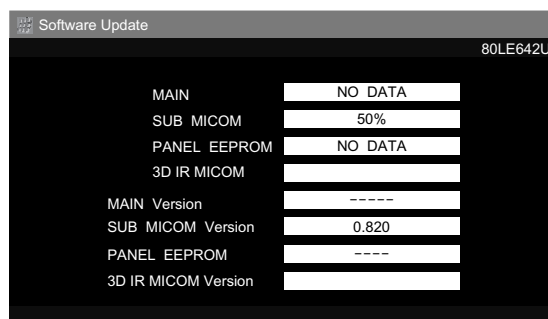


6. If the upgrade fails, power led will stop blinking. Also, the upgrade failure screen will be shown if upgrade screen was shown at 5.

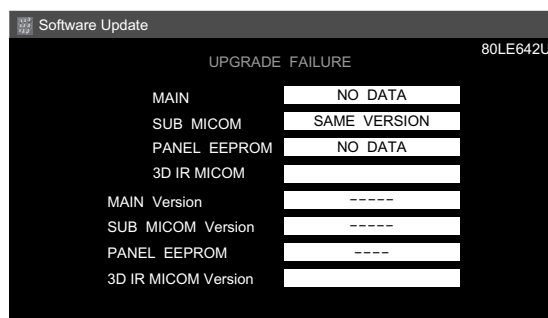

NOTE: In the event of a transient failure, upgrade will be automatically retried up to three times. If the process repeatedly fails, hardware may be the cause.

7. The upgrade success screen will be shown if upgrade screen was shown at 5.

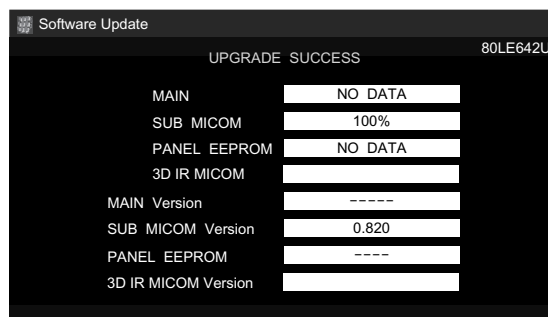



8. Unplug the AC cord and remove the USB Memory for version upgrade.
9. Now the software version upgrade is complete.

NOTE: When you are done with the software version upgrade, start the set, go to the top page of the adjustment process screen and check the monitor microprocessor software version information and panel size information.

3. Entering and exiting the adjustment process mode

- 1) Before entering the adjustment process mode, the AV position RESET in the video adjustment menu.
- 2) While holding down the "VOL (-)" and "INPUT" keys at a time, plug in the AC cord of the main unit to turn on the power.
The letter "<K>" appears on the screen.

- 3) Next, hold down the "VOL (-)" and "CH ()" keys at a time.

(The "VOL (-)" and "CH ()" keys should be pressed and held until the display appears.)

Multiple lines of blue characters appearing on the display indicate that the unit is now in the adjustment process mode.





When you fail to enter the adjustment process mode (the display is the same as normal startup), retry the procedure.

- 4) To exit the adjustment process mode after the adjustment is done, unplug the AC cord from the outlet to make a forced shutdown. (When the power was turned off with the remote controller, once unplug the AC cord and plug it again. In this case, wait 10 seconds or so before plugging.)

CAUTION: Use due care in handling the information described here lest your users should know how to enter the adjustment process mode. If the settings are tampered in this mode, unrecoverable system damage may result.


4. Remote controller key operation and description of display in adjustment process mode

- 1) Key operation

Remote controller key	Main unit key	Function
CH ( / )	CH ( / )	Moving an item (line) by one (UP/DOWN)
VOL (+/-)	VOL (+/-)	Changing a selected item setting (+1/-1)
Cursor (UP/DOWN)	_____	Turing a page (PREVIOUS/NEXT)
Cursor (LEFT/RIGHT)	_____	Changing a selected line setting (+10/-10)
INPUT	_____	Input switching (toggle switching)
ENTER	_____	Executing a function

*Input mode is switched automatically when relevant adjustment is started so far as the necessary input signal is available.

- 2) Description of display

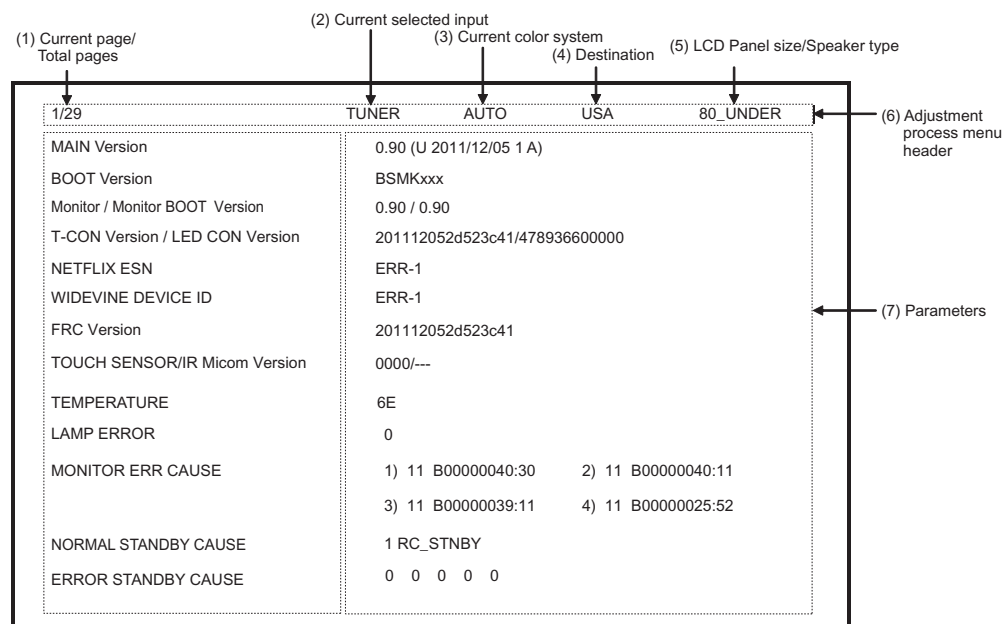

5. List of adjustment process mode menu

The character string in brackets [] will appear as a page title in the adjustment process menu header.

Page	Line	Item	Description	Remarks (adjustment detail, etc.)
1	1	MAIN Version	Main software version	Refer to *1 under the list for details Refer to *2 under the list for details
	2	BOOT Version		
	3	Monitor / Monitor BOOT Version	Monitor and monitor boot software version	
	4	T-CON Version / LED CON Version	LCD controller software version	
	5	NETFLIX ESN		
	6	WIDEVINE DEVICE ID		
	7	FRC Version		
	8	TOUCH SENSOR/IR Micom Version		
	9	TEMPERATURE	Panel temperature	
	10	LAMP ERROR	Number of termination due to lamp error	
	11	MONITOR ERR CAUSE		
	12	NORMAL STANDBY CAUSE		
	13	ERROR STANDBY CAUSE		
2	1	INDUSTRY INIT	Initialization to factory settings	Level appears in green on the upper right
	2	INDUSTRY INIT(-Public)		
	3	PUBLIC MODE	Public mode	
	4	Center Acutime	Accumulated main operation time	
	5	RESET	Reset	
	6	Backlight Acutime	Accumulated monitor operation time	
	7	RESET	Reset	
	8	LAMP ERROR RESET	Reset LAMP ERROR	
	9	VIC XPOS	X-coordinate setting for VIC READ	
	10	VIC YPOS	Y-coordinate setting for VIC READ	
	11	VIC COLOR	Collected color data setting for VIC READ	
	12	VIC SIGNAL TYPE	Signal type setting for VIC READ	
	13	VIC READ	Picture level acquisition function	
3	1	N358 ALL ADJ(INPUT2)	CVBS and TUNER signal level adjustment	
	2	N358 MAIN ADJ(INPUT2)	CVBS signal level adjustment	
	3	TUNER DAC ADJ	TUNER signal level adjustment	
	4	N358 CONTRAST A_GAIN		
	5	N358 CONTRAST D_GAIN		
	6	N358 CONTRAST OFFSET		
	7	TUNER CONTRAST A_GAIN		
	8	TUNER CONTRAST D_GAIN		
	9	TUNER CONTRAST OFFSET		
4	1	TUNER VCHIP TEST(69ch)	Tuning test and VCHIP test (69ch)	
	2	TUNER VCHIP TEST(7ch)	Tuning test and VCHIP test (7ch)	
	3	TUNER VCHIP TEST(10ch)	Tuning test and VCHIP test (10ch)	
	4	TUNER VCHIP TEST(15ch)	Tuning test and VCHIP test (15ch)	
	5	INSPECT USB TERM		
	6	HDMI EDID WRITE		
	7	HDMI CEC TEST		
5	1	COMP15K ADJ(INPUT1)	Component 15K picture level adjustment (main)	
	2	COMP15K Y A_GAIN		
	3	COMP15K Cb A_GAIN		
	4	COMP15K Cr A_GAIN		
	5	COMP15K Y OFFSET		
	6	COMP15K Cb OFFSET		
	7	COMP15K Cr OFFSET		
	8	COMP15K A_CLAMP		
6	1	COMP33K ADJ(INPUT1)	Component 33K picture level adjustment (main)	
	2	COMP33K Y A_GAIN		
	3	COMP33K Cb A_GAIN		
	4	COMP33K Cr A_GAIN		
	5	COMP33K Y OFFSET		
	6	COMP33K Cb OFFSET		
	7	COMP33K Cr OFFSET		
	8	COMP33K A_CLAMP		

Page	Line	Item	Description	Remarks (adjustment detail, etc.)
7	1	ANALOG RGB ADJ	Analog RGB picture level adjustment	
	2	R A_GAIN		
	3	G A_GAIN		
	4	B A_GAIN		
	5	R OFFSET		
	6	G OFFSET		
	7	B OFFSET		
	8	RGB_A_CLAMP		
8	1	VCOM ADJ	VCOM adjustment value	
9	1	LEV1	Standard value 1	Adjustment gradation setting.
	2	LEV2	Standard value 2	
	3	LEV3	Standard value 3	
	4	LEV4	Standard value 4	
	5	LEV5	Standard value 5	
	6	LEV6	Standard value 6	
10	1	MG1R	WB adjustment Point 1, R adjustment value	Parameter for six-point adjustment Quattron panel Only Quattron panel Only Quattron panel Only
	2	MG1G	WB adjustment Point 1, G adjustment value	
	3	MG1B	WB adjustment Point 1, B adjustment value	
	4	MG1Y	WB adjustment Point 1, Y adjustment value	
	5	MG2R	WB adjustment Point 2, R adjustment value	
	6	MG2G	WB adjustment Point 2, G adjustment value	
	7	MG2B	WB adjustment Point 2, B adjustment value	
	8	MG2Y	WB adjustment Point 2, Y adjustment value	
	9	MG3R	WB adjustment Point 3, R adjustment value	
	10	MG3G	WB adjustment Point 3, G adjustment value	
	11	MG3B	WB adjustment Point 3, B adjustment value	
	12	MG3Y	WB adjustment Point 3, Y adjustment value	
11	1	MG4R	WB adjustment Point 4, R adjustment value	Parameter for six-point adjustment Quattron panel Only Quattron panel Only Quattron panel Only
	2	MG4G	WB adjustment Point 4, G adjustment value	
	3	MG4B	WB adjustment Point 4, B adjustment value	
	4	MG4Y	WB adjustment Point 4, Y adjustment value	
	5	MG5R	WB adjustment Point 5, R adjustment value	
	6	MG5G	WB adjustment Point 5, G adjustment value	
	7	MG5B	WB adjustment Point 5, B adjustment value	
	8	MG5Y	WB adjustment Point 5, Y adjustment value	
	9	MG6R	WB adjustment Point 6, R adjustment value	
	10	MG6G	WB adjustment Point 6, G adjustment value	
	11	MG6B	WB adjustment Point 6, B adjustment value	
	12	MG6Y	WB adjustment Point 6, Y adjustment value	
12	1	LO R 1		
	2	LO G 1		
	3	LO B 1		
	4	LO Y 1		
	5	LO R 2		
	6	LO G 2		
	7	LO B 2		
	8	LO Y 2		
	9	LO R 3		
	10	LO G 3		
	11	LO B 3		
	12	LO Y 3		
13	1	LO R 4		
	2	LO G 4		
	3	LO B 4		
	4	LO Y 4		
	5	LO R 5		
	6	LO G 5		
	7	LO B 5		
	8	LO Y 5		
	9	LO R 6		
	10	LO G 6		
	11	LO B 6		
	12	LO Y 6		
	13	CTEMP SELECT		

Page	Line	Item	Description	Remarks (adjustment detail, etc.)
14	1	MODE SELECT		
	2	POS SELECT		
	3	POS MIN		
	4	POS MID1		
	5	POS MID2		
	6	POS MID3		
	7	POS MID4		
	8	POS MID5		
	9	POS MID6		
	10	POS MAX		
15	1	CD MIN		
	2	CD MID1		
	3	CD MID2		
	4	CD MID3		
	5	CD MID4		
	6	CD MID5		
	7	CD MID6		
	8	CD MAX		
16	1	CALC		
	2	RESET		
	3	VAL1		
	4	VAL2		
	5	VAL3		
	6	VAL4		
	7	VAL5		
	8	VAL6		
	9	GAMMA ADJ TEMP		
17	1	MONITOR TIME OUT		
	2	MONITOR MAX TEMP		
	3	MONITOR ERROR CAUSE RESET		
18	1	LCD TEST PATTERN		
	2	LCD TEST PATTERN1		
	3	LCD TEST PATTERN2		
	4	LCD TEST PATTERN3		
	5	LCD TEST PATTERN4		
	6	TV TEST PATTERN 1		
	7	TV TEST PATTERN 2		
19	1	T-CON VERSION EXT.1	PRIMROSE 2D Version	
	2	T-CON VERSION EXT.2	PRIMROSE 3D Version	
	3	T-CON VERSION EXT.3	Blank (Not Use)	
	4	T-CON VERSION EXT.4	Blank (Not Use)	
20	1	3D HDMI FPGA Version		
	2	2D→3D FPGA Version		
	3	3D IR EMITTER CONTROL		
21	1	READ/WRITE		
	2	SLAVE ADDRESS		
	3	RESISTER ADDRESS UPPER		
	4	RESISTER ADDRESS LOWER		
	5	WRITE DATA UPPER		
	6	WRITE DATA LOWER		
	7	READ DATA UPPER		
	8	READ DATA LOWER		
22	1	POWER LED BRIGHTNESS		
	2	MENU LED BRIGHTNESS		
	3	INPUT LED BRIGHTNESS		
	4	CH UP LED BRIGHTNESS		
	5	CH DOWN LED BRIGHTNESS		
	6	VOL UP LED BRIGHTNESS		
	7	VOL DOWN LED BRIGHTNESS		
	8	LOGO LED BRIGHTNESS		
	9	ICON LED BRIGHTNESS		
	10	ICON LED BRIGHTNESS (STANDBY)		
	11	3D LED BRIGHTNESS		

Page	Line	Item	Description	Remarks (adjustment detail, etc.)
23	1	POWER KEY SENSITIVITY		
	2	MENU KEY SENSITIVITY		
	3	INPUT KEY SENSITIVITY		
	4	CH UP KEY SENSITIVITY		
	5	CH DOWN KEY SENSITIVITY		
	6	VOL UP KEY SENSITIVITY		
	7	VOL DOWN KEY SENSITIVITY		
24	1	KEY STRENGTH GET MODE		
	2	POWER KEY STRENGTH		
	3	MENU KEY STRENGTH		
	4	INPUT KEY STRENGTH		
	5	CH UP KEY STRENGTH		
	6	CH DOWN KEY STRENGTH		
	7	VOL UP KEY STRENGTH		
	8	VOL DOWN KEY STRENGTH		
25	1	CROSSTALK ADJ MODE		
	2	CROSSTALK TH1		
	3	CROSSTALK TH2		
	4	CROSSTALK TH3		
	5	CROSSTALK TH4		
	6	CROSSTALK GAIN1		
	7	CROSSTALK GAIN2		
	8	CROSSTALK GAIN3		
26	1	WIFI SSID 2.4GHz	Set AP SSID	
	2	WIFI SSID 5GHz	Set AP SSID	
	3	WIFI RSSI 2.4GHz	Set RSSI threshold	
	4	WIFI RSSI 5GHz	Set RSSI threshold	
	5	WIFI TIME 2.4GHz	Set Time Out	
	6	WIFI TIME 5GHz	Set Time Out	
	7	WIFI RSSI TEST	Execute test	
	8	WIFI RSSI RESULT	Display test result	
27	1	KEY LOCK (1217)		
	2	KOUTEI AREA ALL CLEAR		
	3	A MODE AREA CLEAR		
	4	BACKUP AREA CLEAR		
	5	B MODE AREA CLEAR		
	6	EXECUTION		
28	1	ERROR STANDBY CAUSE1		
	2	ERROR STANDBY CAUSE2		
	3	ERROR STANDBY CAUSE3		
	4	ERROR STANDBY CAUSE4		
	5	ERROR STANDBY CAUSE5		
	6	ERROR STANDBY CAUSE RESET		
29	1	EEP SAVE	Writing setting values to EEPROM	
	2	EEP RECOVER	Reading setting values from EEPROM	
	3	MODEL NAME		
	4	PANEL SIZE		
	5	SETTING FOR ADJ		
	6	VERUP FLAG ENABLE		
	7	SHARP RC ENABLE		
	8	PANEL LIMIT		
	9	PANEL RANGE LIMIT		
	10	SHORT CHECK MODE		
	11	SHORT CHECK CURRENT		
	12	CURRENT SW		
	13	TEST NETWORK UPDATE		

***1 Details of P1.12 (NORMAL STANDBY CAUSE)**

When TV set is powered off due to normal use or product specification, the last cause will be recorded.

The code, character string and description for the standby cause are below.

If you power off by remote, the cause will not be recorded.

Code	Character string	Description
2	NO_OPERT	No operation off
3	NO_SIGNA	No signal off
6	SLEEP_TM	Off timer
8	OFF_232C	Command from RS232C

***2 Details of P1.13 (ERROR STANDBY CAUSE)**

When TV set is powered off due to any anomaly detection, the past 5 causes will be recorded.

You can confirm the time those causes occurred and character string in the adjustment process mode menu. (Page 28/29)

The time is accumulated total after TV set is powered on, and the value corresponds to "Center Acutime" in the adjustment process mode menu.

The code, character string and description for the standby cause are below.

If no error has occurred, the code is 0 and the character string is "NO RECORD".

Code	Character string	Description
1A	E_MONITR	Monitor trouble detected
1C	E_CVICBT	Driver boot error
22	E_TCNERR	Software abnormality of LCD controller
48	E_MRESET	Failure of resetting menu settings (Initial Setup - Reset)
50	E_TCNF_S	T-CON FPGA status error
54	E_TCON_E	T-CON hung-up

Monitor ERR STBY table

Outline: Communication/Power failure detected by the monitor microprocessor is stored in EEPROM, and last 4 abnormal can be confirmed in the Process mode A.

Location: Page 1 of the process mode A: MONITOR ERR CAUSE. "0" if there is no error. It is cleared to 0 on the last page of the process mode A.

Display	Error description	
02	Initial communication from the main CPU is not received.	Check UART bus between main CPU and sub CPU.
03	Only the initial communication is received.	
04	Until panel information request reception	
05	Until initialization completion reception	
06	Until version notification transmission	
07	Until start-up information notification transmission	
08	Until start-up information response reception	
09	Until time-out setting reception	
0A	Request time-out	
0B	Restart time-out during the beginning of time acquisition start-up	
0C	Ending sequence time-out	
0D	Preset start-up time-out during completion	
0E	Download, start-up time-out	
0F	Time acquisition time-out	
11	Regular communication time-out	
16	Backlight error	See p.6-5
1A	Monitor temperature failure	- Check TV setting environment - Check the other monitor (ref No.)
1E	DET_13V failure	Check 13V power line.
1F	DET_D3V3 failure	Check D3V3 power line.
21	DET_PNLxxV failure	Check T-CON power line
23	Error standby request from the main CPU	Check ERROR STANDBY CAUSE (p.5-8)

6. Special features

* STANDBY CAUSE (Page 1/29)

Display of a cause (code) of the last standby

The cause of the last standby is recorded in EEPROM whenever possible.

Checking this code will be useful in finding a problem when you repair the troubled set.

* EEP SAVE (Page 29/29)

Storage of EEP adjustment value

* EEP RECOVER (Page 29/29)

Retrieval of EEP adjustment value from storage area

7. Data Writing of Microprocessor Software

7.1. Main/Monitor Software Writing

(Main Unit: DKEYMF953FM06)

	Adjustment item	Adjustment conditions	Adjustment procedure
1	Main / Monitor Software Writing <to Main Unit>	Checker process Confirm the file version Confirm the USB memory	1) Connect Writing JIG to SC3101 (TL3114~3128) by Checker. 2) Connect USB Memory to J9502 (TL9524~9527) by Checker. 3) Add power to Unit, then Start BOOT by JIG. 4) Send software writing command via RS232C. 5) Send writing confirmation command and confirm the OK reply, then Power turn off. CAUTION: Data does not write without USB memory or reading error happen.

8. Signal adjustment

8.1. LCD section adjustment [LCD module adjustment]

	Adjustment item	Adjustment conditions	Adjustment procedure
1	COMB-BIAS Adjustment (LCD module adjustment item)	Adjustment at Center Position of Module	1) Shift to Adjustment mode by Special R/C code after set assemble. 2) Select [VCOM ADJ] by \uparrow/\downarrow button on R/C-Gun. 3) Press Enter button on R/C-Gun and confirm to display adjustment pattern. 4) Adjust flicker condition on display center position to minimize by Vol +/- button on R/C Gun. 5) When the flicker condition become to be the best, press Enter button on R/C-Gun for Picture off. CAUTION: * Adjust without ANT no signal (Avoid the luminance change by active-back light) [Adjustment position]

8.2. Image adjustment

8.2.1 Device check

■ Confirm Device is set for SHARP LCD US, before start the Adjustment.



■ Confirm Signal Generator setting (Set to regulation level)

- Composite signal: 0.714Vp-p \pm 0.02Vp-p (Pedestal to white)
- 33K component signal: Y level: 0.7Vp-p \pm 0.02Vp-p (Pedestal to white)
PB/PR level: 0.7Vp-p \pm 0.02Vp-p
- Analog RGB: RGB level: 0.7Vp-p \pm 0.02Vp-p (Pedestal to white)


8.2.2 Factory Mode

Adjustment point	Adjustment conditions	Adjustment procedure
Factory Mode		Shift to Adjustment mode by Special R/C code.


8.2.3 Composite N358 signal/tuner adjustment

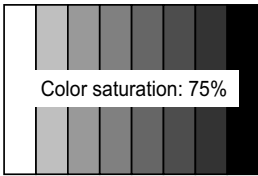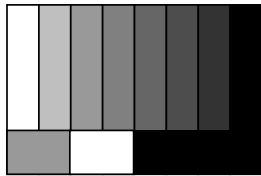Adjustment point	Adjustment conditions	Adjustment procedure
1 Setting	N358 signal US-10ch	<ul style="list-style-type: none"> Input N358 color bar (color saturation 75%) signal to composite input. Input In-house broadcasting signal (10ch) to tuner. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>[Video input signal]</p>  <p>↑ 100% white ↑ 0% black</p> </div> <div style="text-align: center;"> <p>[In-house US-10ch]</p>  <p>↑ 100% white</p> </div> </div>
2 Running Auto-Adjustment Program		Select [■N358 ALL ADJ(INPUT2)] then press ENTER. Adjust is finish at display [■N358 ALL ADJ (INPUT2) OK].

8.2.4 Component 33K signal adjustment

Adjustment point	Adjustment conditions	Adjustment procedure
1 Setting	1080i signal	<ul style="list-style-type: none"> Input 100% color bar signal to Component input. <div style="text-align: center;">  <p>↑ 100% white ↑ 0% black</p> </div>
2 Running Auto-Adjustment Program		Select [■COMP33k ADJ(INPUT1)] then press ENTER. Adjust is finish at display [■COMP33k ADJ(INPUT1) OK]. Component 15K adjustment will be done automatically by set itself. (AUTO CLAMP 1, parameter will be copy from 33K data)

8.2.5 Analog RGB signal adjustment

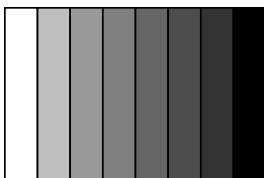
Adjustment point	Adjustment conditions	Adjustment procedure
1 Setting	Signal: XGA (1024x768) 60Hz SYNC: HV separate	<ul style="list-style-type: none"> Input 100% color bar to PC input. <div style="text-align: center;">  <p>↑ 100% white ↑ 0% black</p> </div>
2 Running Auto-Adjustment Program		Select [■ANALOG RGB ADJ] then press ENTER. Adjust is finish at display [■ANALOG RGB ADJ OK].

8.2.6 Tuner/V-CHIP adjustment

Adjustment point	Adjustment conditions	Adjustment procedure
1 Setting	NTSC RF signal US-7(AIR)ch	<ul style="list-style-type: none"> Input NTSC signal to RF Antenna.
2 Running Auto-Adjustment Program		Select [■VCHIP TEST(*07ch)] then press ENTER. (*Select In-house broadcasting signal channel) Adjust is OK at display [■VM-OK]. (Adjust is NG at display VM-NG)

9. White balance adjustment

9.1. White balance adjustment (For details about the adjustment procedure, refer to “Kameyama Model Integrated Monitor WB Adjustment Specification V1.92”.)

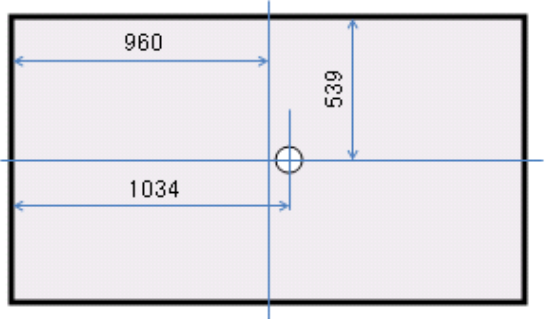	Adjustment point	Adjustment conditions	Adjustment procedure
1	Setting		<p>1) Change set condition as the below. AV MODE: [DYNAMIC] Backlight: +16 Active Backlight: OFF Aging Time: Min. 60 minutes 2) Connect White Balance Adjustment equipment to set. NOTE: Screen adjustment point x=1034pt and y=539pt.</p>  <p>NOTE: In case of WB adjustment, mura set is off by RC232C command. Then do teaching and adjust WB.</p>
2	Running Auto-Adjustment Program	<p>[Command] ADJ mode KRSW0001 KKT10037</p> <p>Setting KY0F0000 OSDS0001 SBSL0016</p> <p>Multi-point ADJ mode MREN0000 MSET0001</p> <p>Point 6 LEV60229 MG6G**** MG6B**** MG6R****</p> <p>Point 5 LEV50173 MG5G**** MG5B**** MG5R****</p> <p>Point 4 LEV40133 MG4G**** MG4B**** MG4R****</p>	<p>[Adjustment procedure] 1) Send Adjustment mode code by R/C-Gun. 2) Set 6th point to indicated section, fix most strongest color then adjust White balance by remain color. 3) Set 5th point to indicated section, set G value to 804xG value of 6th point/928. Then adjust White Balance by RB. 4) Set 4th point to indicated section, set G value to 600xG value of 6th point/928. Then adjust White Balance by RB. 5) Set 3rd point to indicated section, set G value to 448xG value of 6th point/928. Then adjust White Balance by RB. 6) Set 2nd point to indicated section, set G value to 296xG value of 6th point/928. Then adjust White Balance by RB. 7) Set 1st point to indicated section, set G value to 164xG value of 6th point/928. Then adjust White Balance by RB. 8) Recording Adjustment value by MSET0003command, then turn off of AC power. * RGB initial value of 6th point : Setting value 928 * RGB initial value of 1~5point : same as G adjustment value for each section. (The rest value of RGB adjusted value/4 for each section become to be same)</p> <p>[Adjustment value] * White Balance must be matched with Standard set which is provide from ENG. [LC80LE632U] Teaching Set Do teaching under mura set off Mura set off command: MREN0000</p> <p>[Adjustment standard value] Measurement by Minolta CA-210</p>

	Adjustment point	Adjustment conditions	Adjustment procedure				
		Point 3		Level	Reference value	Adjustment spec	Inspection spec
		LEV30116	Point 6	928	X=0.272 y=0.277	±0.0010	±0.0020
		MG3G****	Point 5	804	X=0.272 y=0.277	±0.0010	±0.0020
		MG3B****	Point 4	600	X=0.272 y=0.277	±0.0015	±0.0030
		MG3R****	Point 3	448	X=0.272 y=0.277	±0.0020	±0.0040
		Point 2	Point 2	296	X=0.272 y=0.277	±0.0030	±0.0060
		LEV20074	Point 1	164	X=0.272 y=0.277	±0.004	±0.0080
		MG2G****	Remarks		Setting conditions for inspection		
		MG2B****			AV MODE: [DYNAMIC] (Reset)		
		MG2R****			Monochro: ON		
		Point 1			Active Backlight: OFF		
		LEV10045			Aging Time: Min. 60 minutes		
		MG1G****					
		MG1B****					
MG1R****							
Writing							
MSET0003							
After White Balance Adjustment Luminance Spec. LC-80LE642U:Min 280cd/m2							

10. Date Writing of KEY

10.1. EDID data (HDMI analog RGB)(Main Unit: DKEYMF953FM06)

Adjustment point	Adjustment conditions	Adjustment procedure
1 EDID data (HDMI analog RGB)	Adjustment Mode Check Model Identification	1. Shift to Adjustment Mode. 2. Select [HDMI EDID WRITE] then press ENTER. Adjust is OK at display [OK]. (HDMI, Analog RGB data is written at same time) [Caution] Data writing must do after setting model identification. System write the data to EEPROM which is based on model identification data.

10.2. MAC key writing (Main Unit: DKEYMF953FM06)

1. Write the NETFLIX/WMDRM key data on IC3103 mounted on the main PWB.

2. Carry out thorough data management to avoid redundant writing of data.

If the IC where data is written is damaged, replace the PWB since only the IC cannot be changed.

10.3. NETFLIX/WMDRM key writing (Main Unit: DKEYMF953FM06)

1. Write the wide vine key data on IC3103 mounted on the main PWB.

2. Carry out thorough data management to avoid redundant writing of data.

If the IC where data is written is damaged, replace the PWB since only the IC cannot be changed.

NOTE: For EDID of the analog RGB (DSUB 15pin), write the data on the process menu just like HDMI.

11. Factory setting

For finish the Initialize process, needed to pull out AC cord, After Factory Initialize.

CAUTION: After Factory Initialize, Do not turn on again. When you turn on TV, please do Factory Initialize again.

	Adjustment point	Adjustment conditions	Adjustment procedure
1	Factory setting	Need to pull out AC cord for process complete.	<ul style="list-style-type: none"> Select [INDUSTRY INIT(+Cause)], Set to [ON] by [+], [-] of [VOL] Button [+], [-], then press [ENT] key. Display change to green and show the version. Process complete at display show [SUCCESS]. (At error, picture become to RED with [ERROR] OSD) Turn off the AC power.
			Below items initialize by Factory Initialize. 1) User set value 2) Channel data 3) Password 4) Operating time 5) Standby Cause 6) Auto installation flag 7) V-CHIP block setting

12. Software version

1. Main microprocessor

OKLA_LE857_xxx.USB
 OKLA_LE857_xxx.DAT
 OKLA_LE857_xxx_CHK.USB
 OKLA_LE857_xxxxxxx.PCC

2. Monitor microprocessor

OKLAMxxx.SMB

3. T-CON ROM

CLOVERxxxxxxxxxxxxxxxxxxxxxx.ROM

13. Writing the inch and model name onto EEPROM




1. Enter the adjustment process mode.
2. Point the cursor to [MODEL NAME] (Page 29/29).
3. Select "LE642U", and press [Enter] key.
4. "OK" is displayed.
5. Point the cursor to [PANEL SIZE] (Page 29/29).
6. Select "80" and press [Enter] key.
7. Moments later image is displayed.
8. Turn off power
9. Turn on power

[2] PUBLIC MODE SETTING PROCEDURE

1. How to start Public Mode

- There are the following two ways to get the public mode setup screen displayed.

- ① In the adjustment process mode, turn on "PUBLIC MODE". Also press the "CH (^)" and "VOL (+)" keys on the set at once and turn on the power.
- ② 1) Press the "INPUT" and "VOL (+)" keys on the set at once and turn on the power.
2) Get the password input screen displayed.

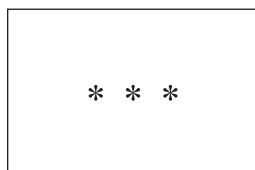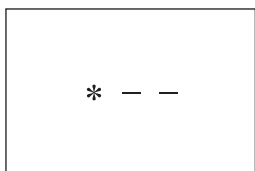

Procedure

- The input starts with the leftmost digit.
- Use the numeric keys [1] thru [9] and [0] keys on the remote controller.
The other keys are not acceptable.
- With a numeric-key input, "-" will change to "*".
The input position will move one digit to the right.
- With all the 3 digits entered, the password will be verified.

- 3) The 3-digit password is now verified.

The password [0] [2] [7] provides for the public mode screen. (This screen comes on with whatever adjustment process settings.)

With any other passwords, the screen changes to the normal mode.

2. How to exit Public Mode

There are the following ways to quit the public mode setup screen.

- Turn off "PUBLIC MODE" in the adjustment process mode. (☆) ← This way alone is not for quitting the setup screen, but for quitting the mode itself.
- Turn off the power with the "POWER" key. (★)
- Select "EXECUTE". (★)
- ★ ... "PUBLIC MODE" stays on in the adjustment process mode.
- ☆ ... The settings will be back to the factory ones.



3. Public Mode Setting Values

- With the factory settings made, the public mode settings get initialized. (The adjustment process remains intact.)

4. Public Mode Menu

The guidance is not displayed on screen.

Setup procedure

- To move the cursor up and down, use the “cursor UP/DOWN” key (remote controller) and “CH ()/()” key (remote controller and set).
- To change the settings, use the “cursor RIGHT/LEFT” key (remote controller) and “VOL (+)/(-)” key (remote controller and set).
- To save new settings, keep the cursor at “EXECUTE” and use “ENTER” key (remote controller and set).

PUBLIC MODE	
POWER ON FIXED	[VARIABLE]
MAXIMUM VOLUME	[60]
VOLUME FIXED	[VARIABLE]
VOLUME FIXED LEVEL	[20]
RC BUTTON	[RESPOND]
PANEL BUTTON	[RESPOND]
MENU BUTTON	[RESPOND]
AV POSITION FIXED	[VARIABLE]
ON SCREEN DISPLAY	[YES]
INPUT MODE START	[NORMAL]
INPUT MODE FIXED	[VARIABLE]
LOUD SPEAKER	[ON]
RC_PATH_THROUGH	[OFF]
232C POWON	[DISABLE]
PUBLIC MODE	[OFF]
RESET	
EXECUTE	
COPY MODE	

[How to use USB clone]

This is the function that copying the one TV's user setting to other TVs or copying previous user setting to itself.(Only same series.)

1. Insert the USB memory to TV.
2. Insert AC code of TV with pushing the "INPUT" and "Vol+" keys which are on the tact key.
3. Enter the password by using R/C. The password is "027".
4. Select "COPY MODE".
5. The follow guide is displayed. Then select the "TV→USB [Start]".



6. Follow guide is displayed when it is finished , then select "Reset" . TV will restart.



7. Insert the USB which has the data from TV to another TV or itself.
8. Insert AC code of the TV with pushing the "INPUT" and "Vol+" keys which are on the tact key.
9. Select "COPY MODE".

LC-80LE642U

10. The following guide is displayed. Then select the "USB→TV [Start]".



11. Follow guide is displayed when it is finished , then select "Reset" . TV will restart.



12. Confirm the user setting is copied.

5. On Setting Items

* "EZ-SETUP" discussed below indicates "EZ-SETUP after the first power-on".

1) POWER ON FIXED

Selection	Selection between "Variable" and "Fixed" (loop provided)
Default	– (Variable)
Explanation	In "Fixed" setting, the power-off by the power key of the unit is invalidated and the image is kept being received. The power can be turned off by stopping the power supply from AC.
Limit in Setting	Refer to the "Power-On Fixed" sheet.
Exception	None
Remarks	• In "Variable" setting, the power operation is in wait for 1 sec. and then turned off when the main power switch is off.

2) MAXIMUM VOLUME

Selection	Adjustment from 0 to 60 (no loop)
Default	60
Explanation	Sound volume can not be adjusted higher than the preset value.
Limit in Setting	<ul style="list-style-type: none"> When the sound volume is set lower than 59, only figures are displayed and the sound volume bar is not displayed. The maximum sound volume for ON-timer (Wake up timer) is limited also to the preset value.
Exception	
Remarks	• When the sound volume is set higher than the MAX setting by the adjusting process, the sound volume control operation is prohibited for turn-up and the sound volume should be turned down to MAX in this state.

3) VOLUME FIXED

Selection	Selection between "Variable", "Fixed", "ACON (AC CTRL)" and "AC/RCON (AC/RC CTRL)" (loop provided)
Default	Variable
Explanation	<ul style="list-style-type: none"> FIXED: Fixed at the level adjusted for a fixed volume. AC CTRL: Start-up at the level specified for a fixed volume at ACON. AC/RC CTRL: Start-up at the level specified for a fixed volume at start.
Limit in Setting	<ul style="list-style-type: none"> The sound volume for the ON-timer (Wake up timer) is fixed also without display of menu. Besides, the setting is made impossible. (Basically, the menu is not displayed.) The following keys become invalid: <ul style="list-style-type: none"> Sound volume Up/Down (VOL +/-) [for both remote control and the unit] Mute (MUTE)
Exception	• In the item "VOLUME" of adjustment process, the sound volume can be set freely irrespective of this setting.
Remarks	<ul style="list-style-type: none"> As for sound volume fixing and sound volume MAX level, the sound volume fixing has priority. Once the sound volume has been changed by adjustment process, it should be set back to the sound volume preset by sound volume fixing level when the adjustment process ends.

4) VOLUME FIXED LEVEL

Selection	Adjustment from 1 to 60 (no loop)
Default	20
Explanation	The sound volume to be fixed by "Volume fixed" is determined.
Limit in Setting	None
Exception	None
Remarks	Setting is valid only when "Volume fixed" is selected for "fixed".

5) RC BUTTON

Selection	Selection between "Respond", "No Respond" and "Limited" (loop provided)
Default	Respond
Explanation	<p>Making the remote controller settings.</p> <ul style="list-style-type: none"> At the "No Respond" setting, the remote controller keys are disabled. Its power key (reception/standby key) is disabled too. At the "Limited" setting, some channel-related keys alone are operative. All the other remote controller keys (power, volume ▲/▼, channel ▲/▼, light control (brightness sensor), broadcast select) are inoperative.
Limit in Setting	① In "No respond" setting, all the keys (including the power key) are not accepted.
Exception	<ul style="list-style-type: none"> Adjustment process, inspection process and hotel only keys are valid irrespective of setting. All the keys can be used in adjustment process, inspection mode and hotel menu irrespective of setting.
Remarks	

6) PANEL BUTTON

Selection	Selection between “Respond” and “No respond” (loop provided)
Default	Respond
Explanation	All the operations by keys (except the power key) of the unit can be invalidated.
Limit in Setting	
Exception	<ul style="list-style-type: none"> • Adjustment process, inspection mode and hotel menu mode can be started irrespective of setting. • All the keys can be used in adjustment process, inspection mode and hotel menu irrespective of setting.
Remarks	

7) MENU BUTTON

Selection	Selection between “Respond” and “No respond” (loop provided)
Default	Respond
Explanation	In “No respond” setting, the menu operation by the menu key of the remote control and the menu key of the unit are invalidated.
Limit in Setting	
Exception	<ul style="list-style-type: none"> • Adjustment process, inspection mode and hotel menu mode can be started irrespective of setting. • All the keys can be used in adjustment process, inspection mode and hotel menu irrespective of setting.
Remarks	

8) ON SCREEN DISPLAY

Selection	Selection between “Yes”, “No” (loop provided)
Default	Yes
Explanation	<ul style="list-style-type: none"> • At the “No” setting, the following items are not displayed on screen: register, setting, adjustment menu, channel call and volume bar. On the wide-screen models, an input selection is immediately made because the menu is not displayed. • At the “Limited” setting, some items cannot be displayed on screen. On the Japan-destined models, the channel call “Message” alone cannot be displayed. (This is because the channel call message may be confused with a message being sent from the hotel.) On the North America-destined models, the OSD works the same as at the “No” setting.
Limit in Setting	<ul style="list-style-type: none"> • Keys falling under any of the following items become invalid. <p>① Appearance of screen changes and the sound changes.</p> <p>② Personal functions which are hard to restore. Screen display, menu, OFF-timer, ON-timer, AV MODE, screen size switching, clock setting, treble emphasis, AUDIO ONLY, sound changeover, LANGUAGE, CLOSED CAPTION</p>
Others	<ul style="list-style-type: none"> • Simple input switching is generated. Those which are restored soon after leaving as they are and may be requested for change by customer are not prohibited. Brightness sensor (BACKLIGHT) and PIC. FLIP
Exception	<ul style="list-style-type: none"> • Such a caution which is displayed independently is displayed as it is. Non-responding signal caution
Remarks	<ul style="list-style-type: none"> • When CC has already been ON, CLOSED CAPTION is displayed.

9) INPUT MODE START

Selection	Selection between “Normal”, “Air (✳)”, “INPUT 1/2/3”, “PC”, “HDMI 1/2/3/4/5”, “DVI” (loop provided)
Default	Normal
Explanation	In power-ON, the input source to be started or channel can be set. (In standard mode, the operation follows the last memory.)
About options	<ul style="list-style-type: none"> • All the input sources in the model are made selectable. • In TV mode, the channel to be set follows the last memory and the content of the last memory is included in the notation by options. Ex.) Air (2), Cable (98.1) etc.
Limit in Setting	<ul style="list-style-type: none"> • The display of channel setting menu and the channel setting operation are prohibited.
Exception	
Remarks	<ul style="list-style-type: none"> • In setting at “Normal”, the setting of “Input mode fixed” is changed to “Variable” and selection should be prohibited.

10) INPUT MODE FIXED

Selection	Selection between "Variable", "Fixed", "ACON (AC CTRL)" and "AC/RCON (AC/RC CTRL)" (loop provided)
Default	– (Variable)
Explanation	<ul style="list-style-type: none"> At the "Fixed" setting, the TV set gets started with the settings of "Input mode start", and then any other channels and inputs are not accepted. At the "ACON (AC CTRL)" setting, the TV set gets started with the settings of "Input mode start" under AC control. At the "AC/RCON (AC/RC CTRL)" setting, the TV set gets started with the settings of "Input mode start" under either control.
Limit in Setting	<ul style="list-style-type: none"> With the execution of hotel mode, the input source is forced to change to that set by "Input mode start" and the channel switching and input switching are prohibited thereafter. ON-timer's (Wake-up timer) channel items are not displayed or the operation is prohibited. (Basically, they are not displayed.) The following keys are invalidated. CH ▲ / ▼, direct tuning button, FLASHBACK, input *However, the keys (input switching and CH ▲ / ▼ keys) of the unit for menu operation remain valid.
Exception	None
Remarks	<ul style="list-style-type: none"> In the following case, setting is cancelled and mode is changed to "Variable". ① When the setting of "Input mode start" is set to "Normal".

11) RC_PATH_THROUGH

Selection	Selection between "OFF", "ON: TV RCE" and "ON: TV RCD" (loop provided)
Default	OFF
Explanation	Function to feed the remote controller-received signal to Pin 9 (open) on the RS232C.
Limit in Setting	None
Exception	None
Remarks	None

12) AV POSITION FIXED

Selection	Selection between "Variable" and "Fixed" (loop provided)
Default	Variable
Explanation	In case of "Fixed" setting, – Menu "Picture" and "Audio" setting can't be changed like "Dynamic (Fixed)". – When "AV Mode" key is pressed, TV just displays current AV Mode (cannot be changed.).
Limit in Setting	None
Exception	None
Remarks	<ul style="list-style-type: none"> When receiving with AV Position key, OPC, Dolby key and other direct audio select keys, the current display stays on and no setting can be changed. Even by initializing personal information, the hotel-mode settings are kept intact. In this way, the AV positions, video and audio adjustment settings are not initialized.

13) LOUD SPEAKER (ON/OFF)

Selection	Selection between "ON" and "OFF" (loop provided)
Default	ON
Explanation	If "OFF" is selected, TV stops Speaker output even without Headphone connected.
Limit in Setting	None
Exception	None
Remarks	<ul style="list-style-type: none"> Press the volume UP/DOWN key, and the mute icon appears for 4 seconds. The mute key and audio-related keys are displayed with caution. Usually, the headphones and monitor audio outputs can be adjustable.

14) 232C POWON

Selection	Selection between "Disable" and "Enable" (loop provided)
Default	Disable
Explanation	In the standby mode, the power-on by the 232C command is enabled or disabled.
Limit in Setting	None
Exception	None
Remarks	None


LC-80LE642U

15)PUBLIC MODE (ON/OFF)

Selection	Selection between “ON” and “OFF” (loop provided)
Default	OFF
Explanation	In case of “ON”, public mode settings are effected.
Limit in Setting	None
Exception	None
Remarks	The public-mode settings are operable only when this item is set at ON.

CHAPTER 6. TROUBLESHOOTING TABLE

[1] Failure diagnosis by LED in front of cabinet

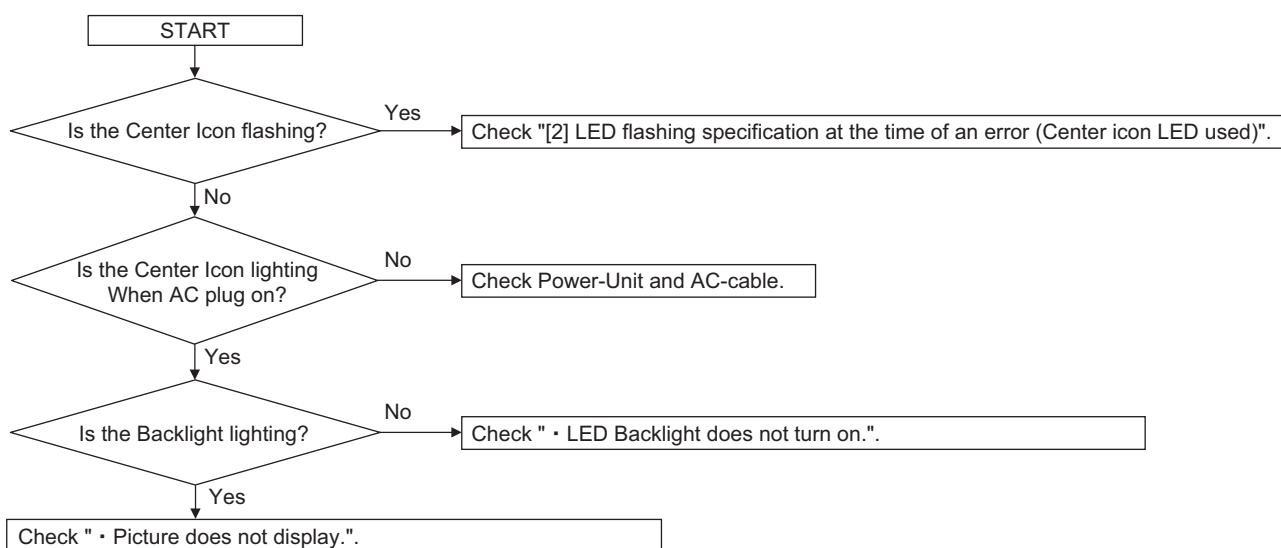

[2] LED flashing specification at the time of an error (Center icon LED used)

1. Display method

- Since only the center icon LED can be used, slow flashing and fast flashing are combined.
- After recovering from an error, if the same error cannot be generated again, refer to MONITOR ERR CAUSE on the adjustment process mode.

2. LED flashing method

Error flashing

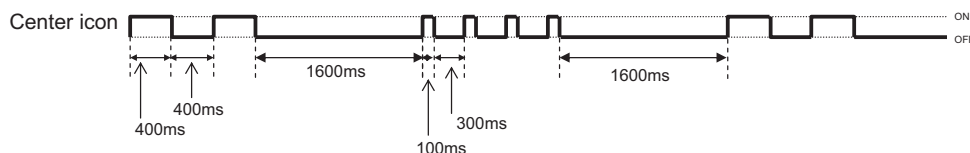


Table 1. Concrete flashing pattern

Item	Detail display		Cause
	Slow flashing	Fast flashing	
Inverter/Lamp system failure	Flashes once	Flashes once	Lamp error
Power PWB failure (Power failure, etc.)	Flashes twice	Flash once	Power supply error 2 (*2) AC_DET error
		Flash twice	Power supply error 2 (*2) UR+13V error
		Flash 3 times	Power supply error 2 (*2) D+3.3V error
		Flash 5 times	Panel power supply error
Main PWB failure (Communication failure, etc.)	Flashes 3 times	Flashes once	Initial communication error
		Flashes twice	Start-up confirmation communication error
		Flashes 3 times	Regular communication error
		Flashes 5 times	Other communication error
Others	Flashes 4 times	Flashes once	Temperature error
		Flashes 3 times	Notification from the main microprocessor (*3)

*2: They depend on the system. Power supply error is defined from product to product.

*3: For details, refer to ERROR STANDBY CAUSE on the adjustment process mode.


3. New method

LED flashing timing chart at the time of an error







1) Inverter/Lamp failure details (Flashes slowly once and flashes fast)

Note

Error type	Center icon LED operation	Pins are monitor microcomputer pins unless otherwise specified.
Lamp failure Flashes fast once	H: On  L: Off	ERR_PNL: failure(H). Inverter/Lamp error is detected. Note that after five detection counts, the lamp cannot be activated except in the adjustment process mode. Accumulated counts are cleared to 0 by the setting in the LAMP ERROR RESET on the adjustment process mode.





2) Power failure details (Flashes slowly twice and flashes fast)

Note

Error type	Center icon LED operation	Pins are monitor microcomputer pins unless otherwise specified.
PS_ON AC_DET failure Flashes fast once	H: On  L: Off	AC_DET failure (L).
SM_POW Main 13V failure Flashes fast twice	H: On  L: Off	DET_13V failure (L). Main 13V is not applied.
D_POW Digital 3.3V failure Flashes fast 3 times	H: On  L: Off	DET_D3V3 failure (L). Digital 3.3V is not applied.
PANEL_POW Panel 12V failure Flashes fast 5 times	H: On  L: Off	DET_PNL12V failure (L). Panel power is not applied.



3) Communication failure details (Flashes slowly 3 times and flashes fast)

Note

Error type	Center icon LED operation	Basically, debug print logs are analyzed or communication logs are analyzed by a bus monitor.
Initial communication reception failure Flashes fast once	H: On  L: Off	Initial communication from the main CPU is not received. (Request for the monitor model No. is not received.) → Communication line failure or main CPU start-up failure
Start-up confirmation reception failure Flashes fast twice	H: On  L: Off	Start-up reason confirmation from the main CPU cannot be received. (Start-up communication until start-up reason notification command is not received.) → Main CPU start-up failure or monitor microcomputer reception failure
Regular communication failure Flashes fast 3 times	H: On  L: Off	Regular communication that is performed at 1 second intervals in the normal operation is interrupted. → Main CPU operation failure or monitor microcomputer reception failure
Other communication failure Flashes fast 5 times	H: On  L: Off	When a request (PM_REQ=H) is sent from the main microcomputer, the request command is not output from the main CPU, etc. → Main CPU operation failure or monitor microcomputer reception failure

4) Other failure details (Flashes slowly 4 times and flashes fast)

Note

Error type	Center icon LED operation	Pins are monitor microcomputer pins unless otherwise specified.
Monitor temperature failure Flashes fast once	H: On  L: Off	If the panel temperature is 60°C or more for 15 seconds or more in a row, CAUTION appears on the OSD (flashes in red in the lower right screen). If the panel temperature is 60°C or more for 25 seconds or more in a row, error standby is activated.
Main failure Flashes fast 3 times	H: On  L: Off	Main microcomputer detection error (CPU temperature error, etc.) The details are displayed on page 1 of the adjustment process mode.

[3] TROUBLESHOOTING TABLE**• LED Backlight does not turn on.**

**If it is not an error of power supply/LED driver,
It is start-up in the lamp error disregard mode.**

↓
Do you start?

↓ YES

When main unit is replaced, does it start normally?

↓ YES

Replace main unit.

↓ NO

When LCD control unit is replaced, does it start normally?

↓ YES

Replace LCD control unit.

↓ NO

When the parts in the panel can be replaced. →Replace all LED-bars in the panel module.
When the parts in the panel cannot be replaced. →Replace panel module.

**If it is not an error of power supply/LED driver,
It is start-up in the lamp error disregard mode.**

↓
Do you start?

↓ NO

When power supply unit is replaced, does it start normally?

↓ YES

Replace power supply unit.

↓ NO

When main unit is replaced, does it start normally?

↓ YES

Replace main unit.

↓ NO


When LCD control unit is replaced, does it start normally?

↓ YES

Replace LCD control unit.


↓ NO


When the parts in the panel can be replaced. →Replace all LED-bars in the panel module.
When the parts in the panel cannot be replaced. →Replace panel module.

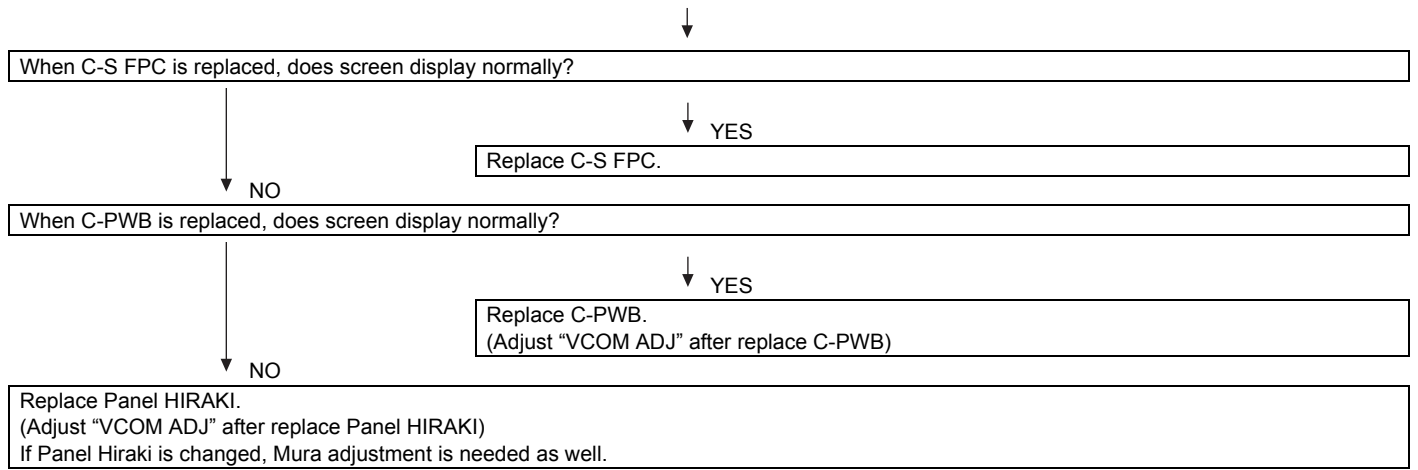
Trouble Shooting Panel Module


• Picture does not display.


Trouble Shooting LCD controller board(C-PWB)

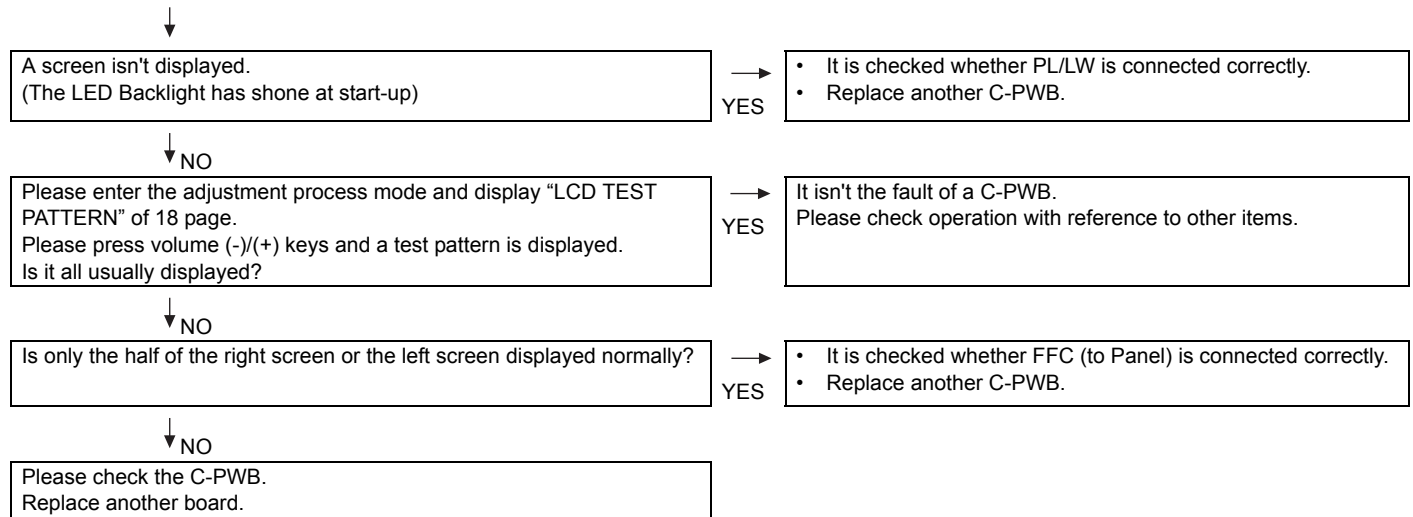


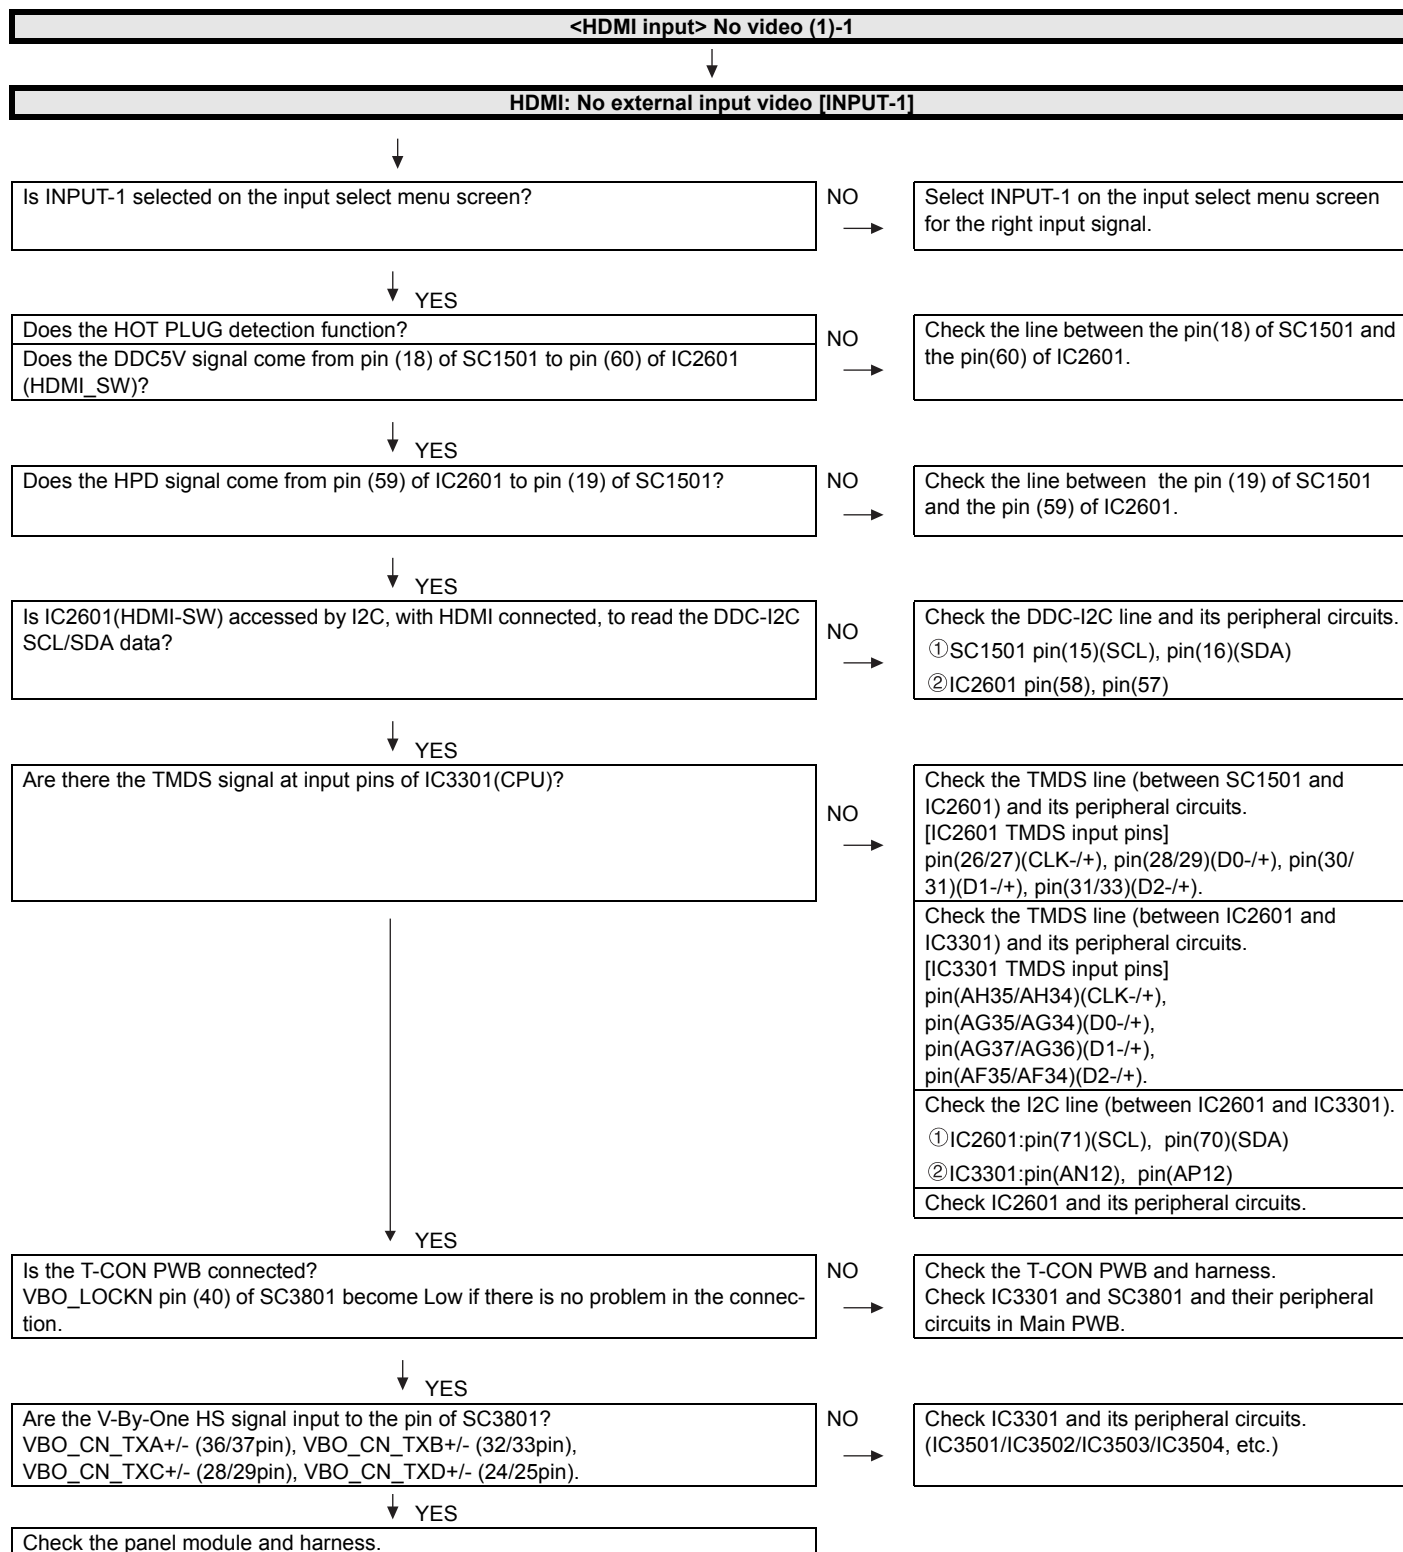


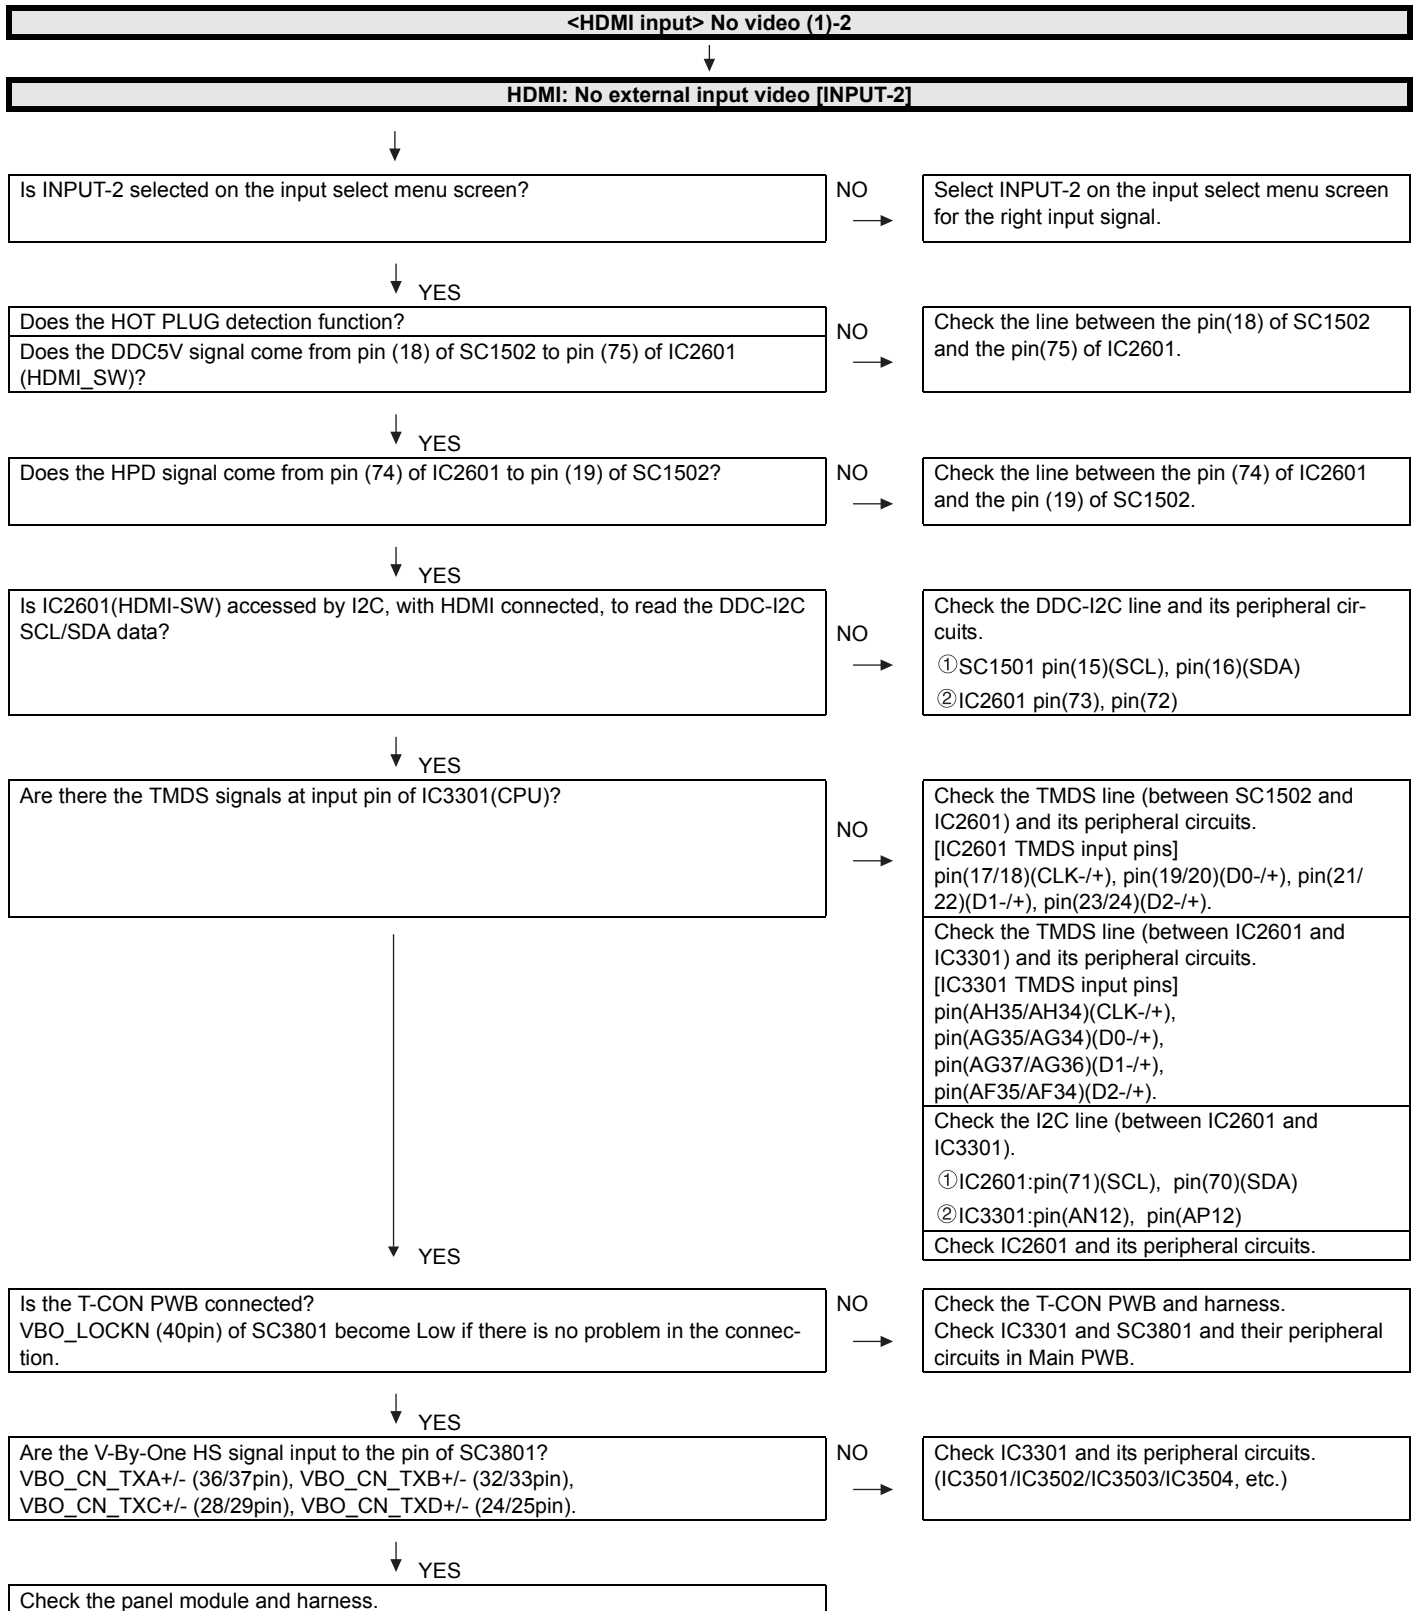


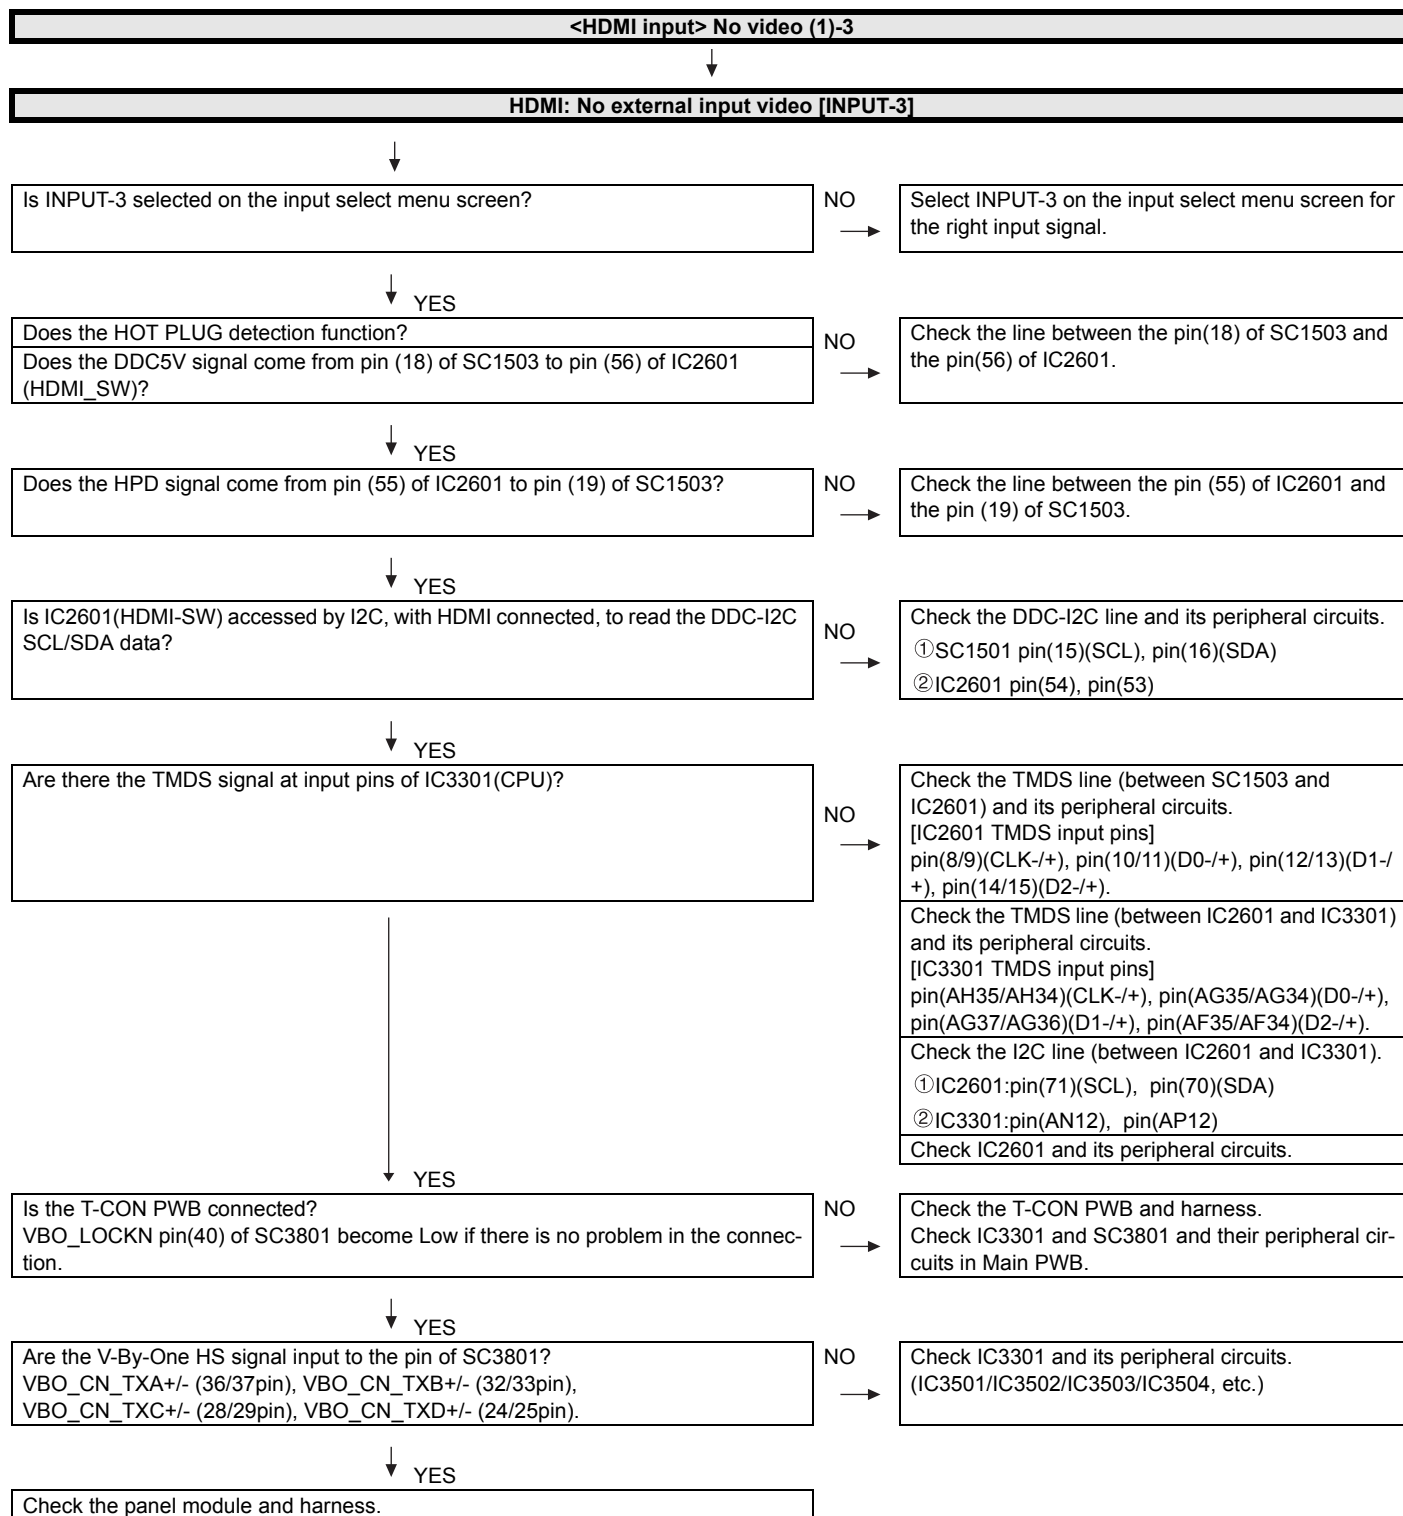


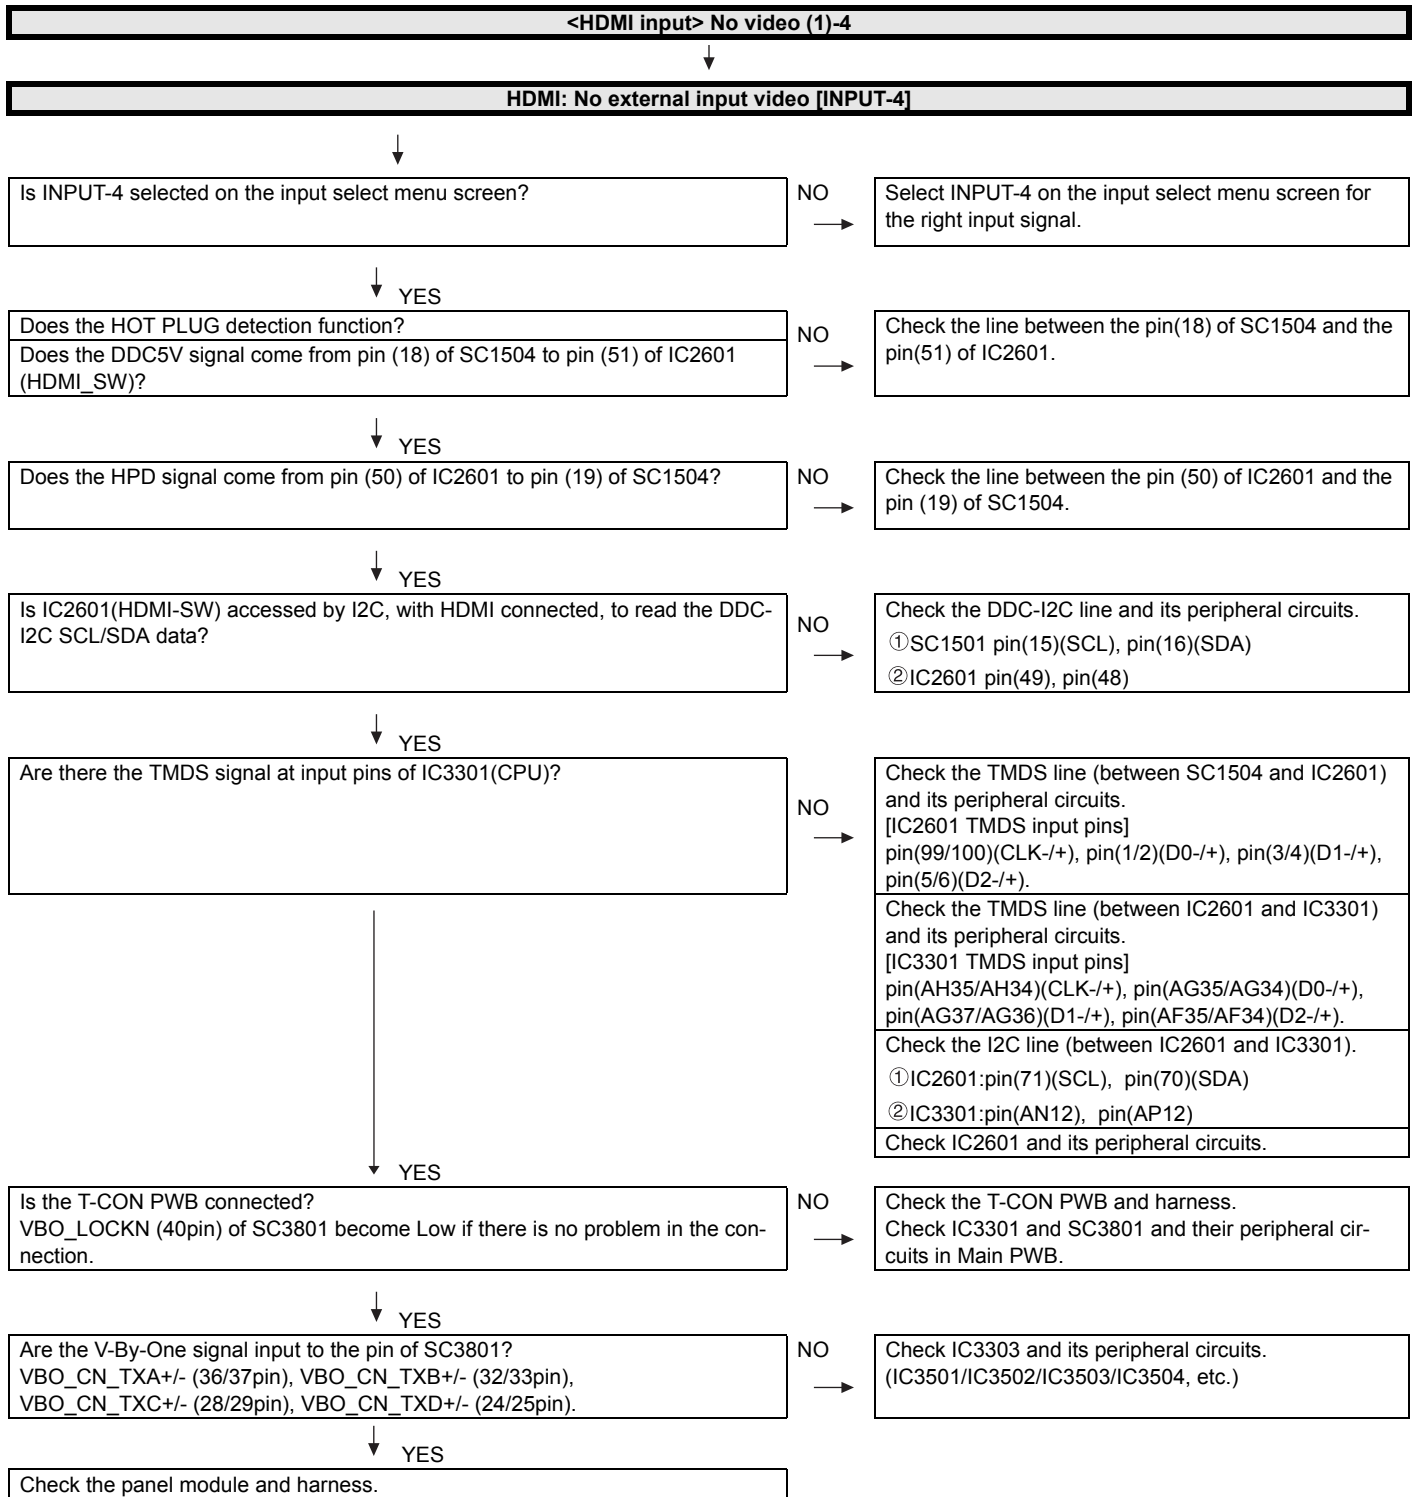


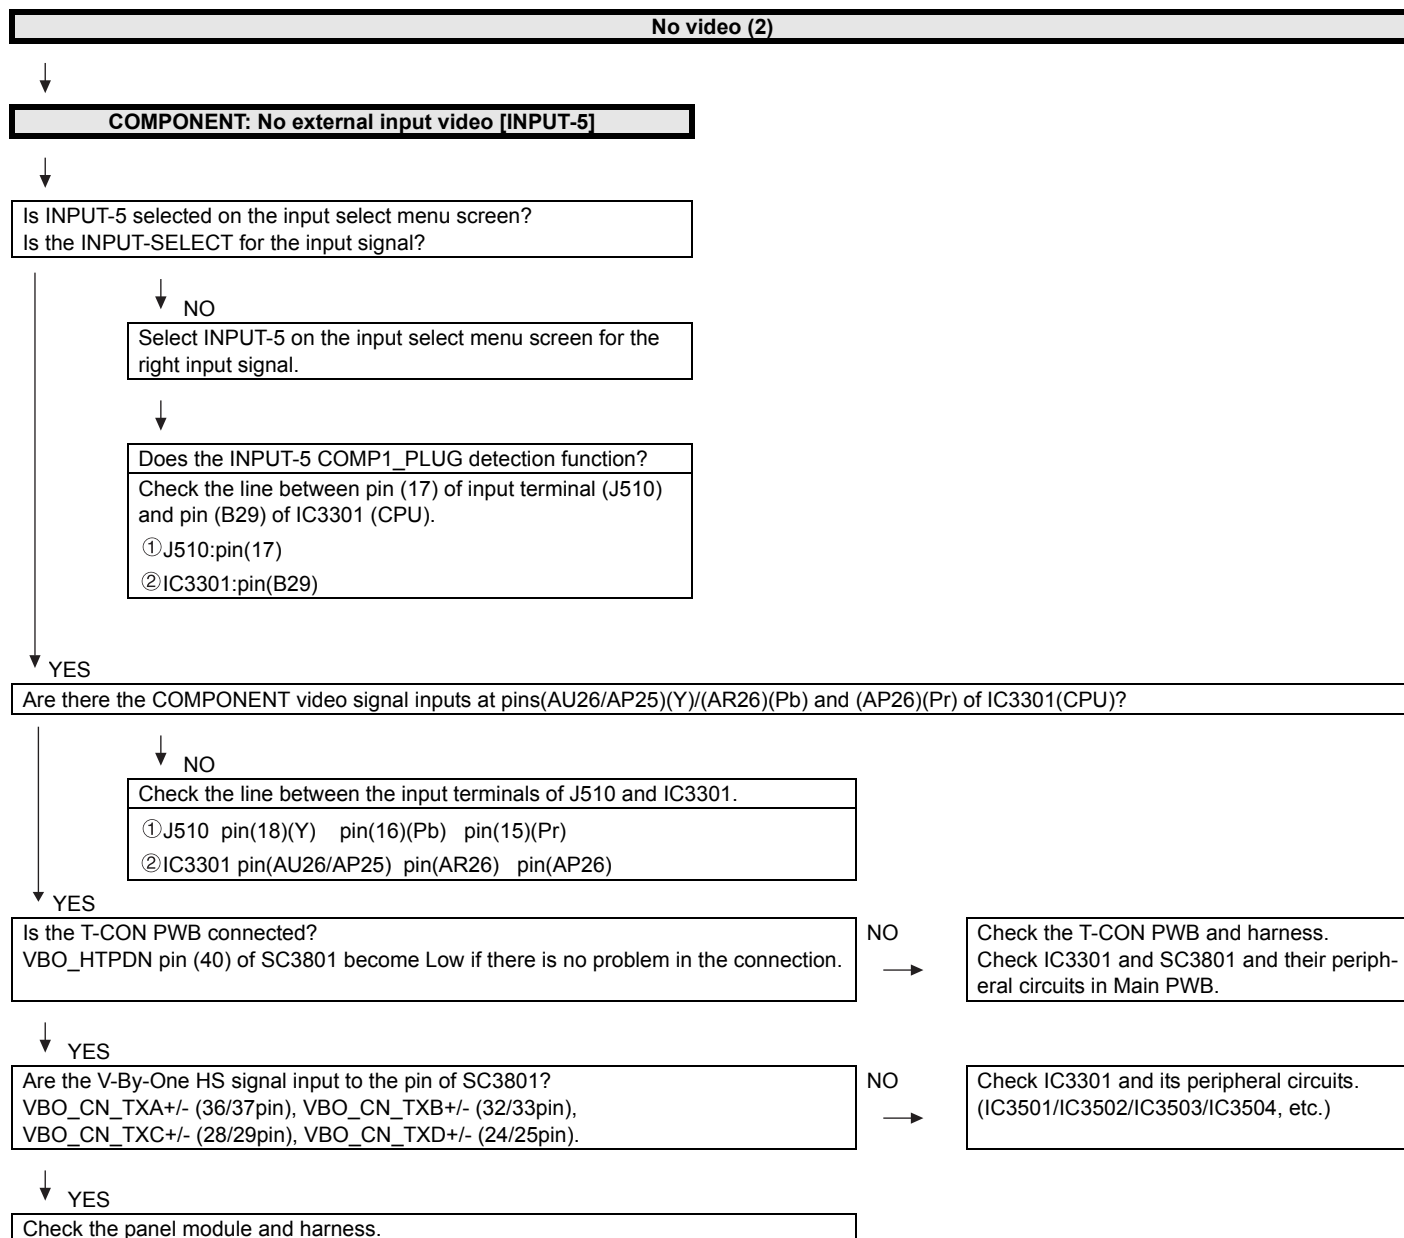

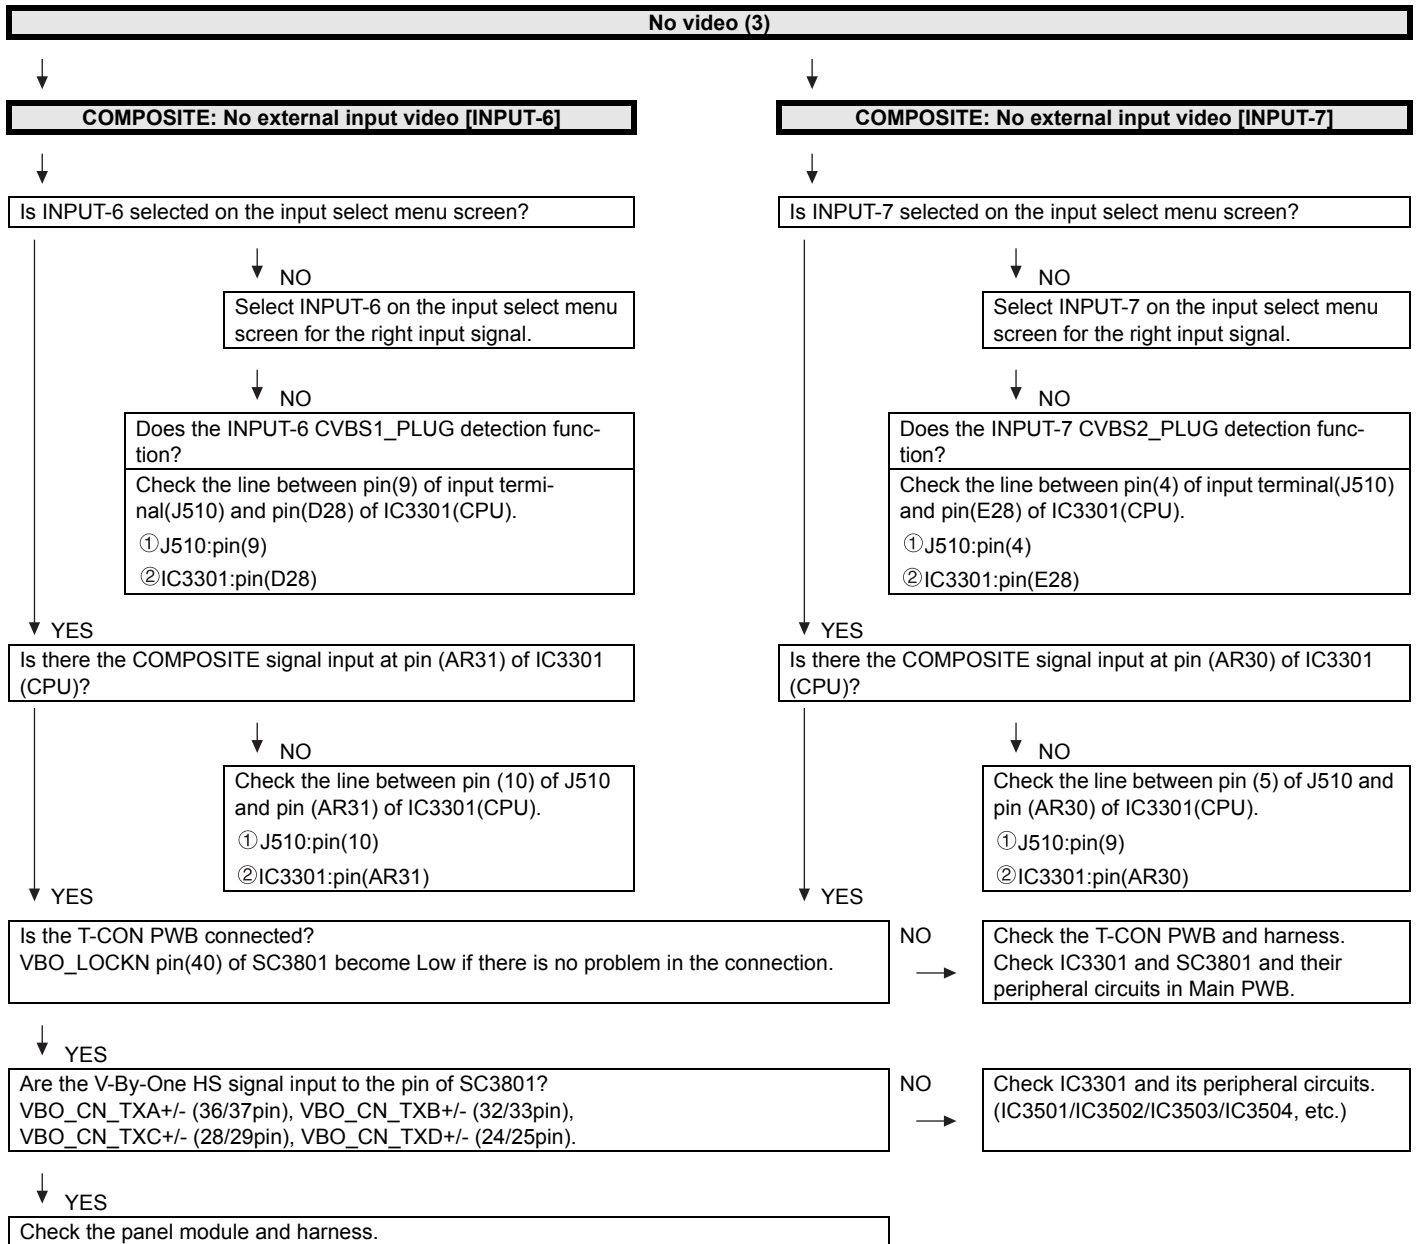


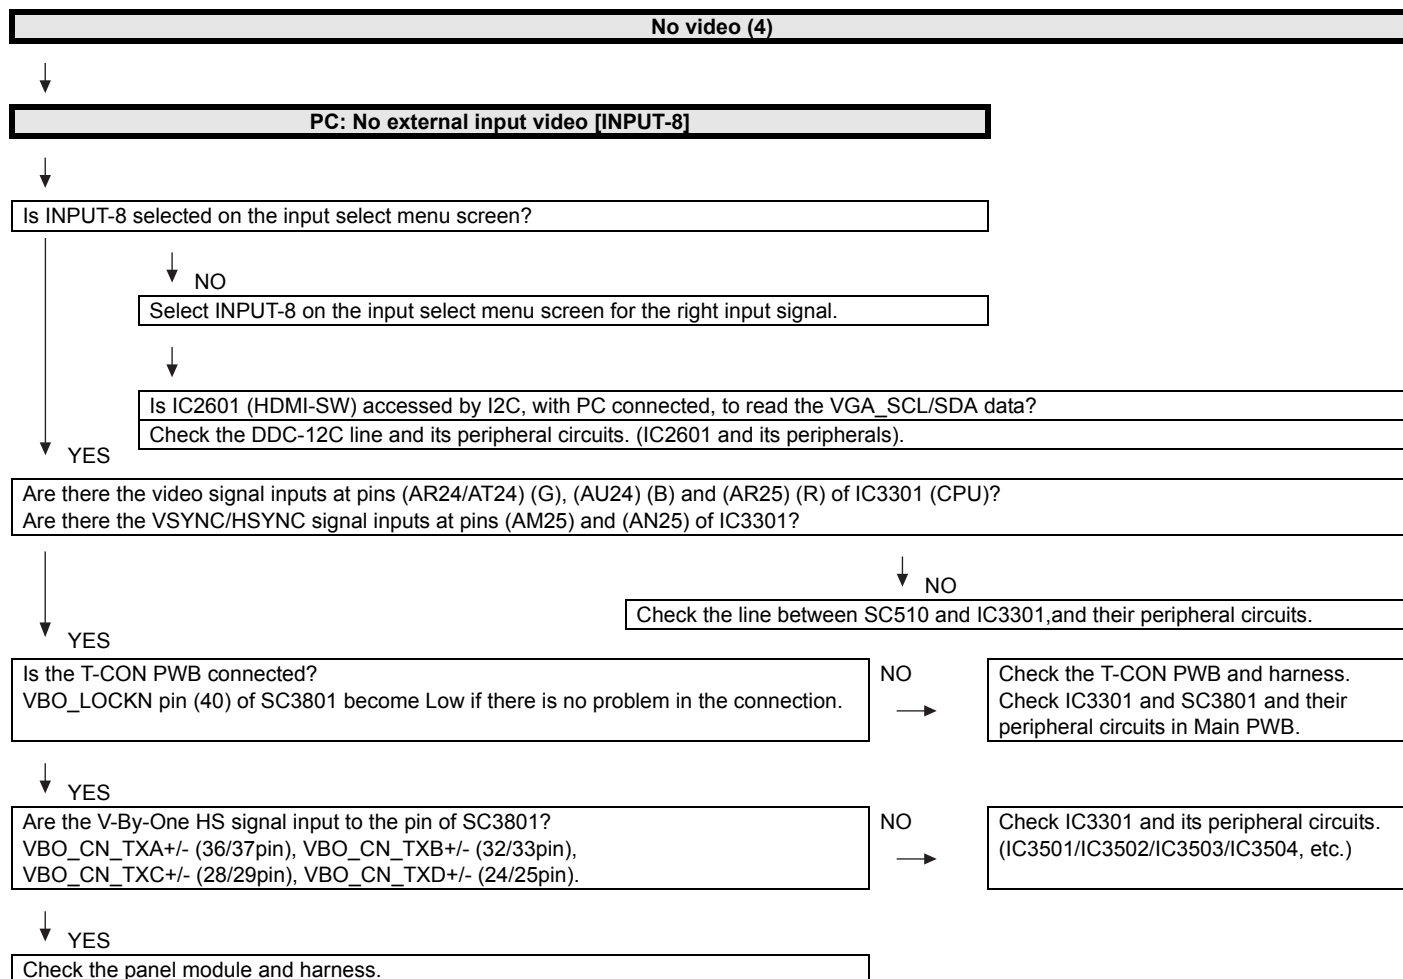


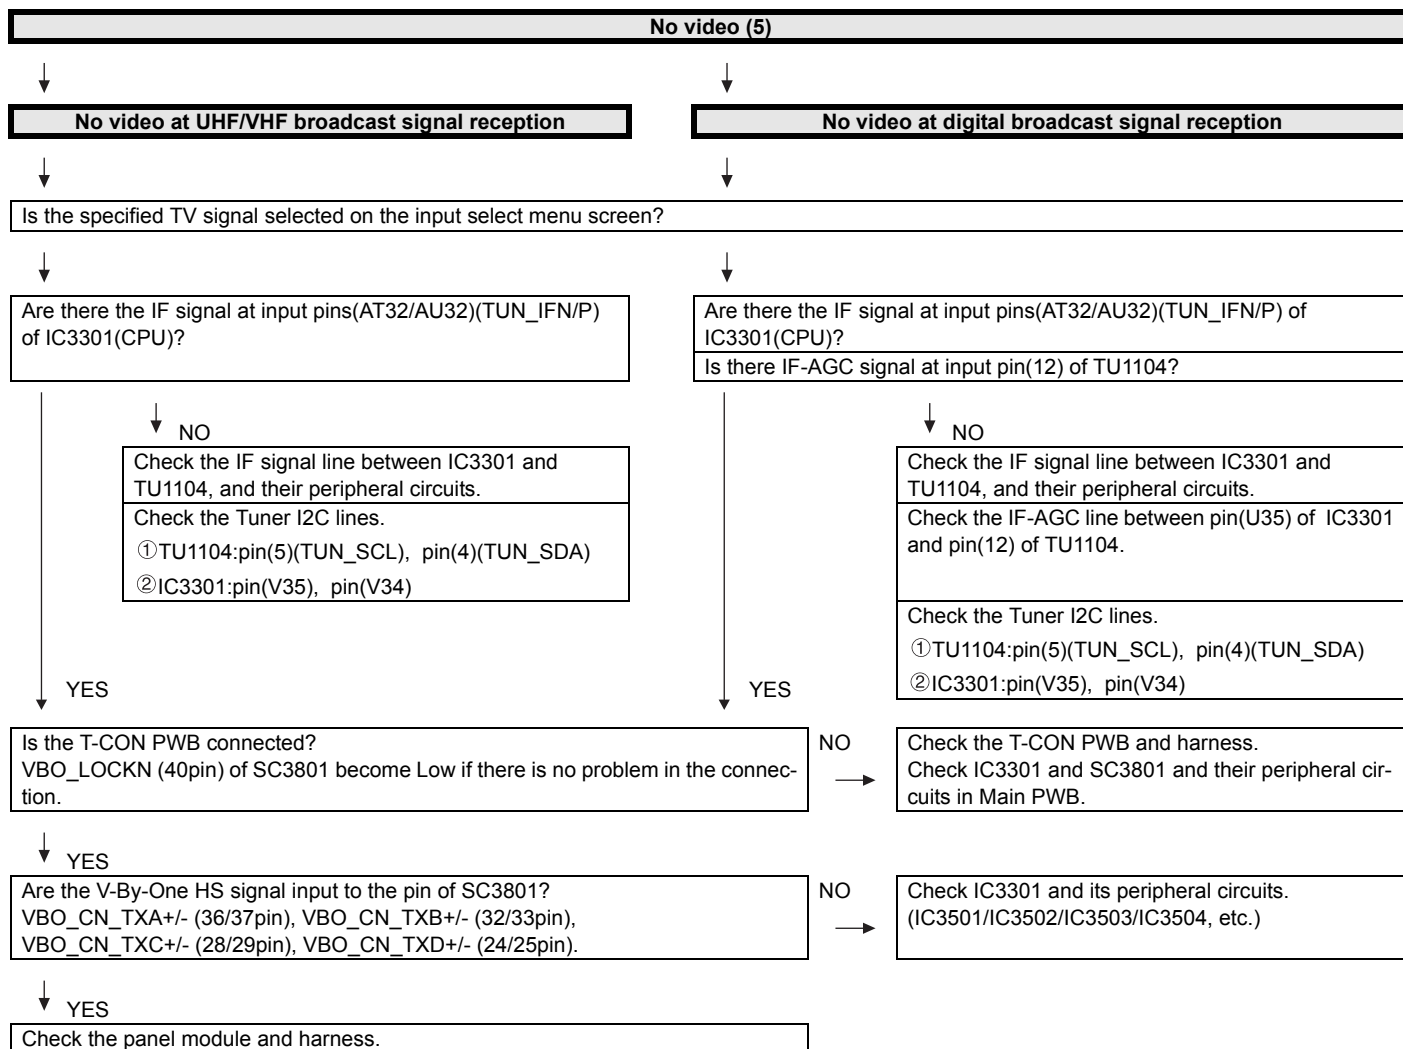


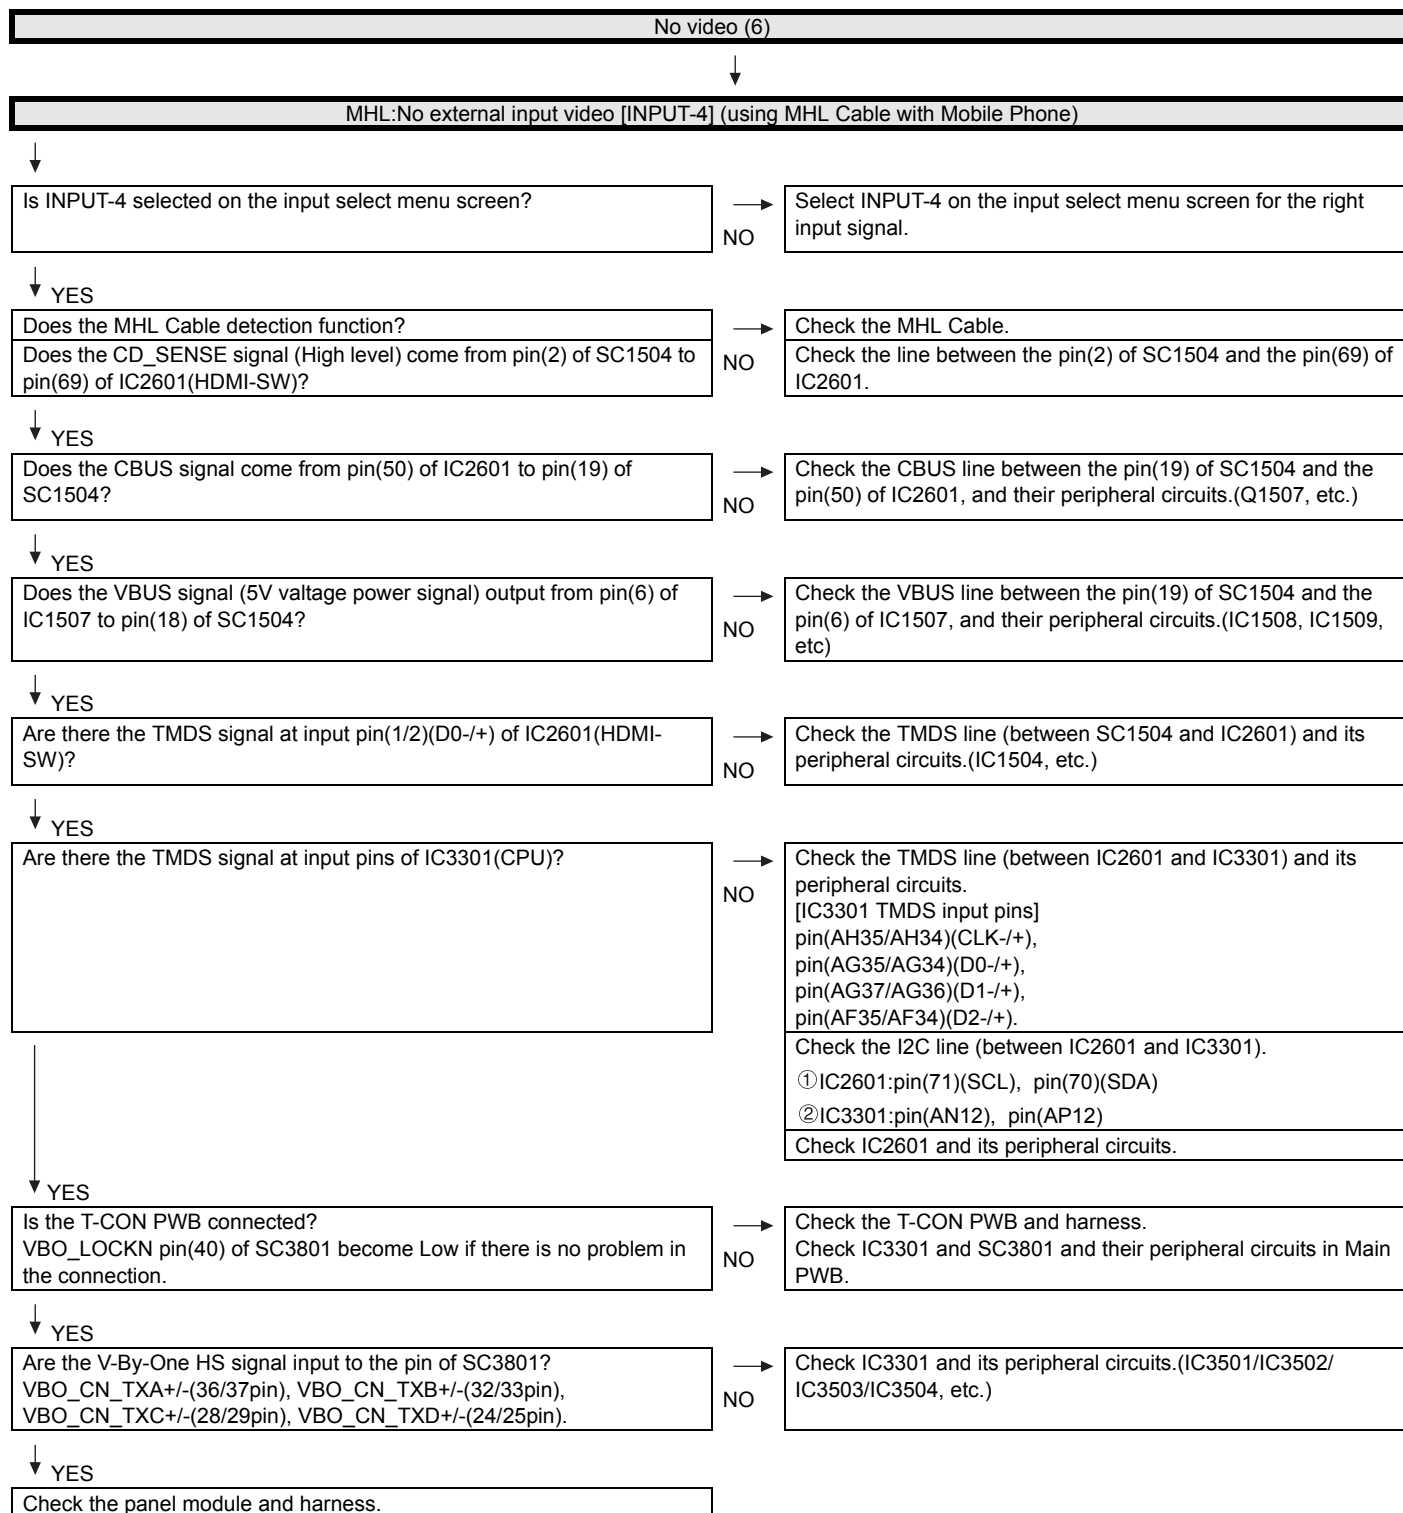



• Does not sound.

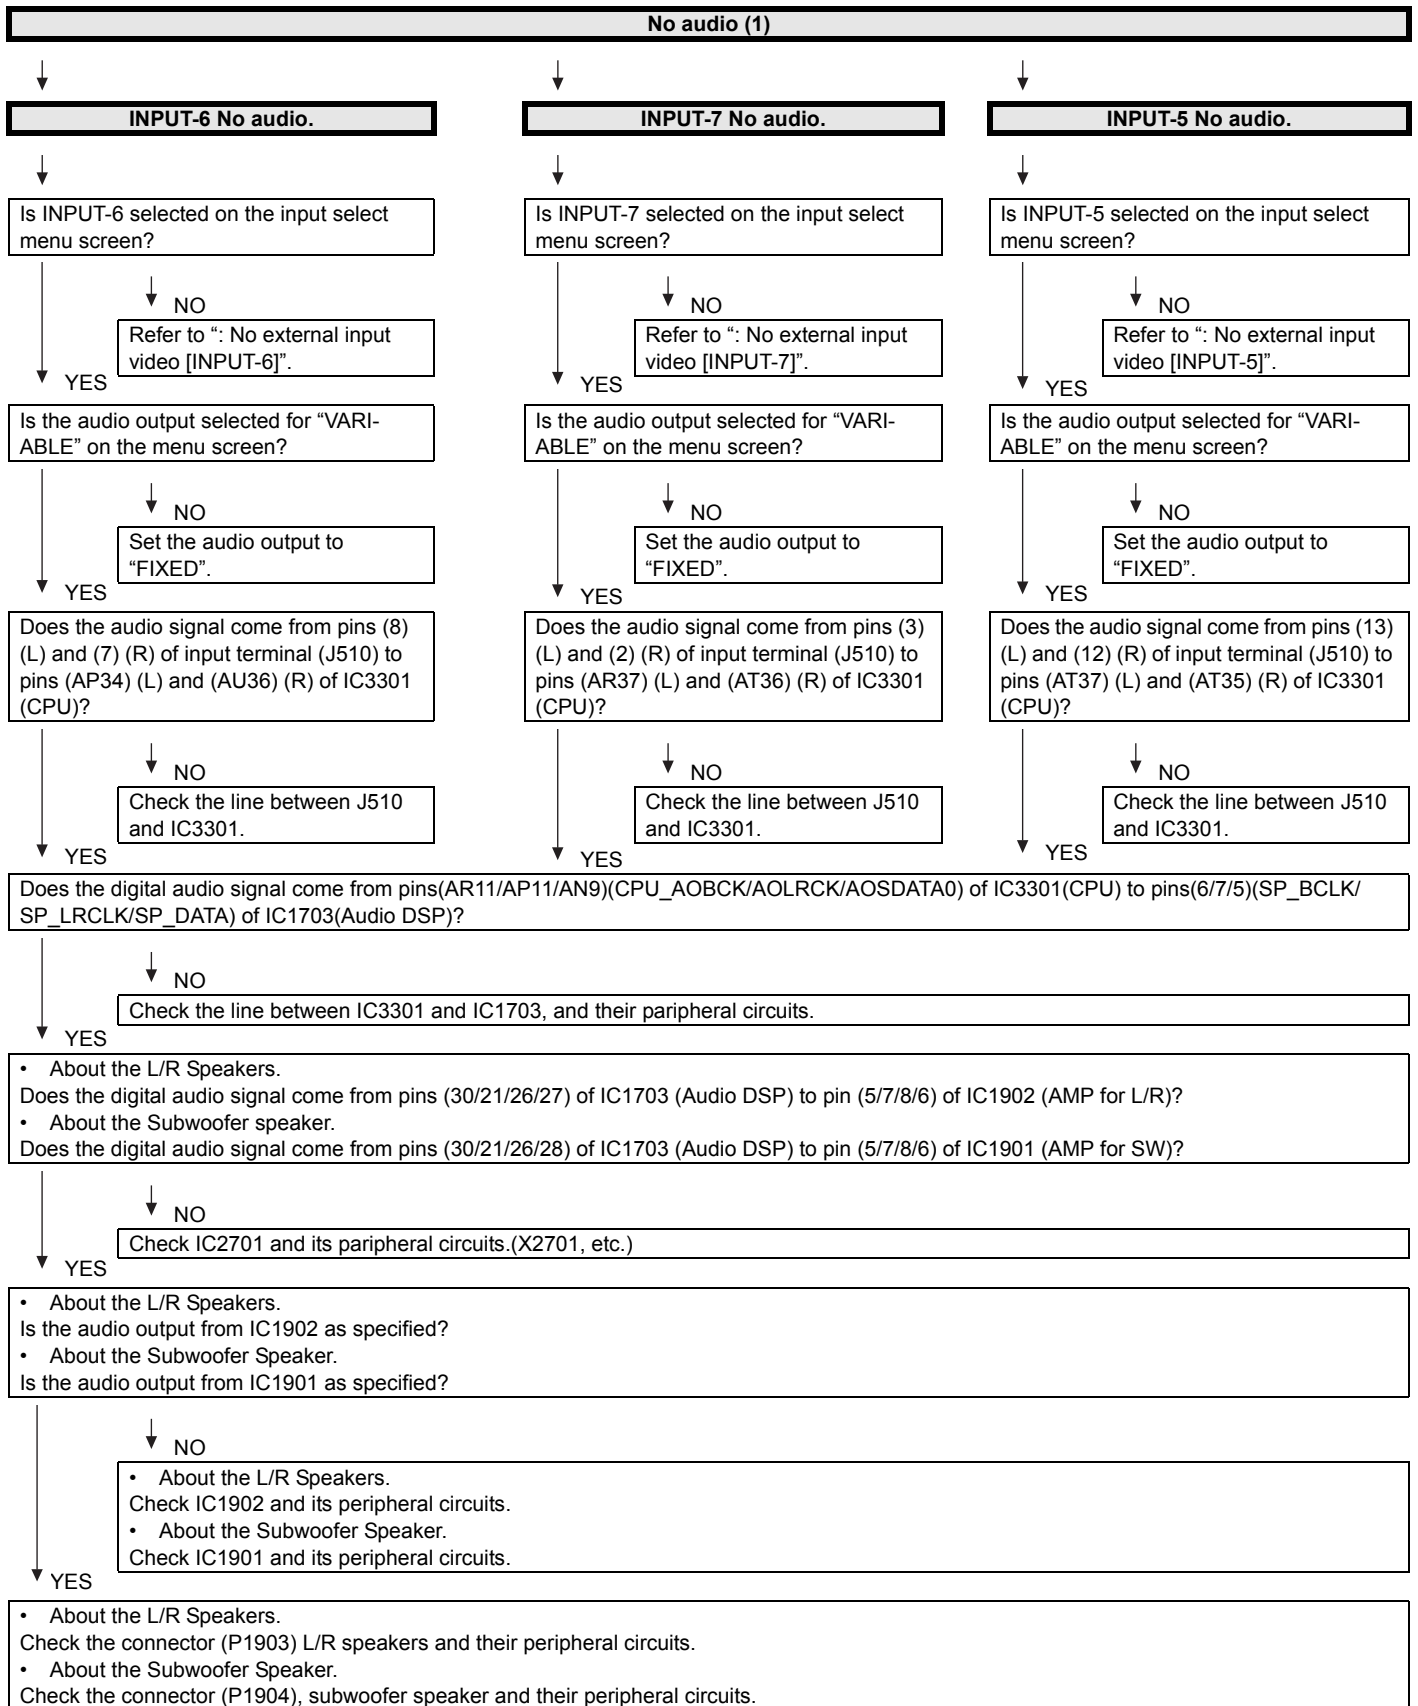

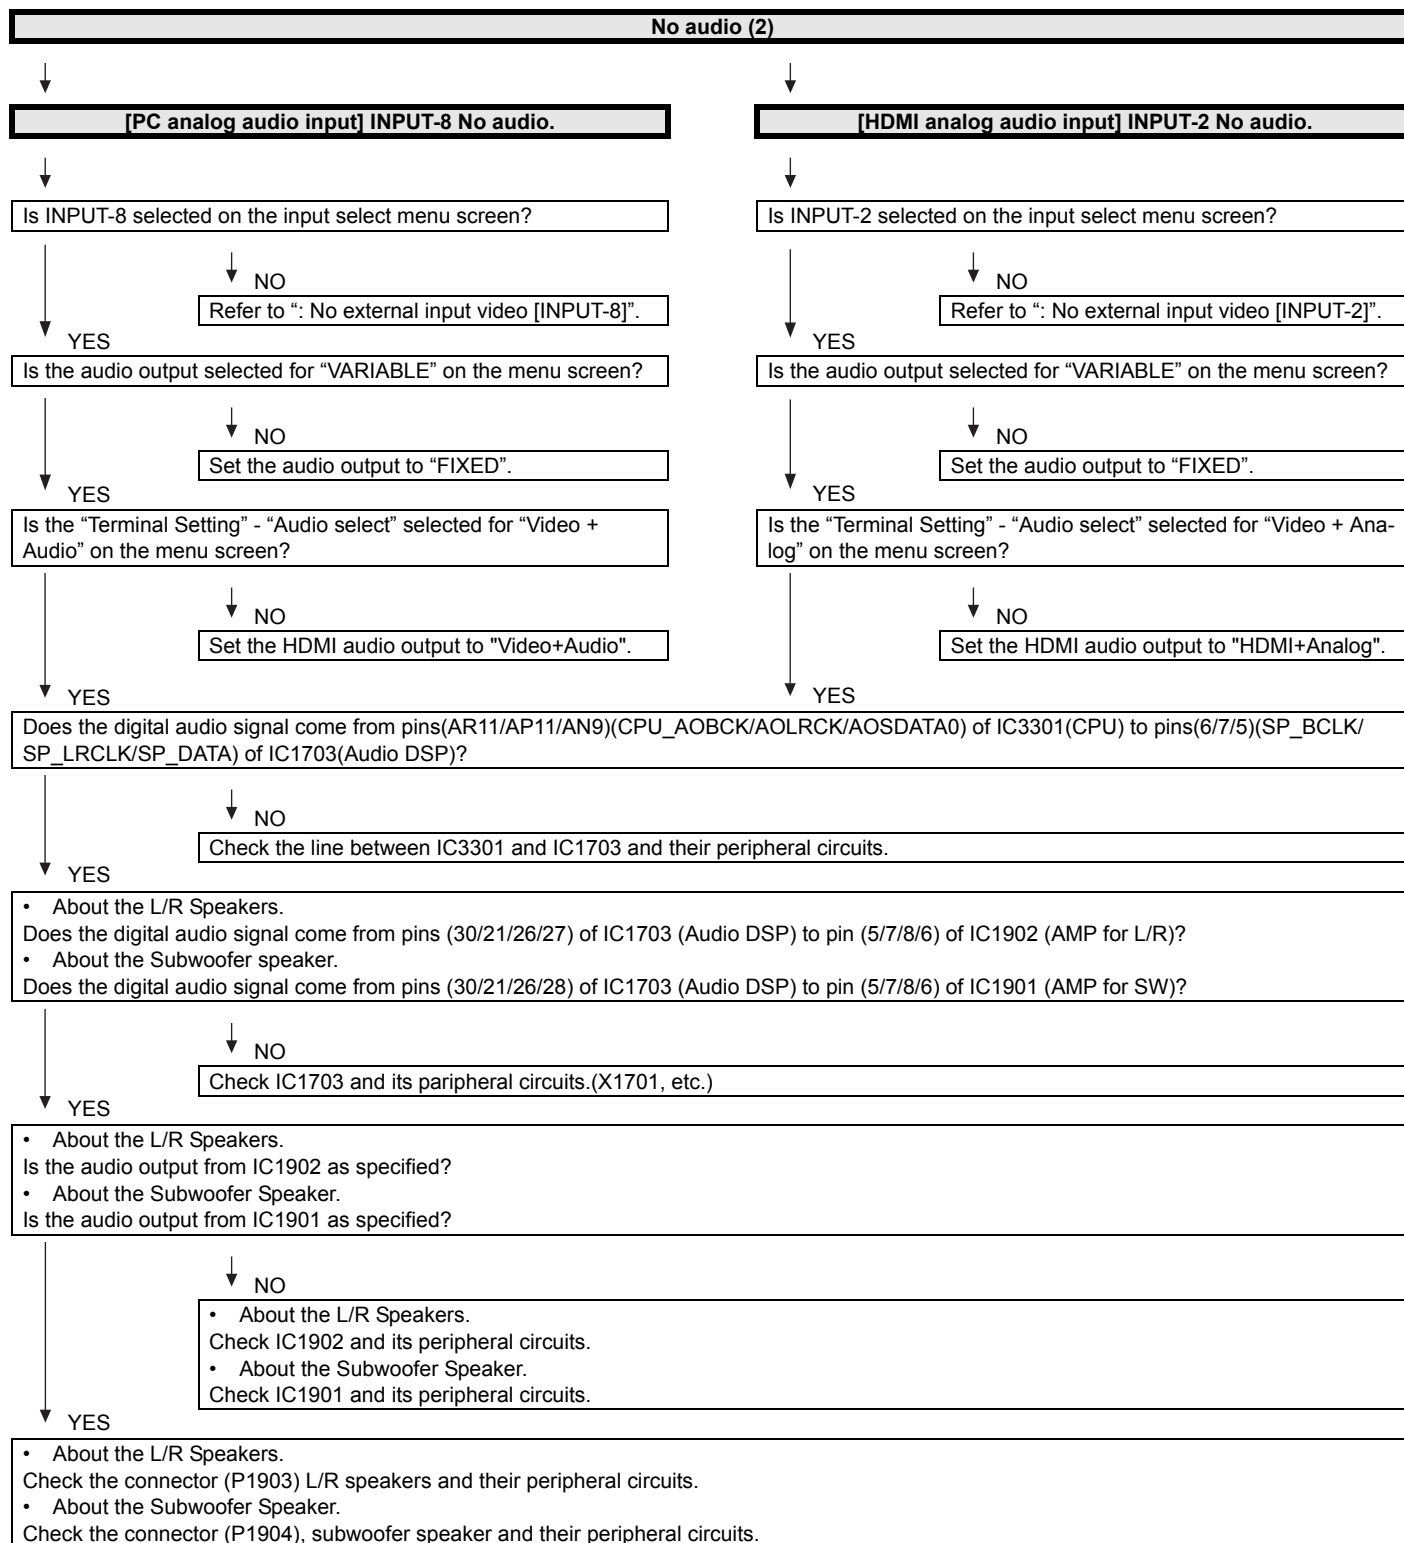

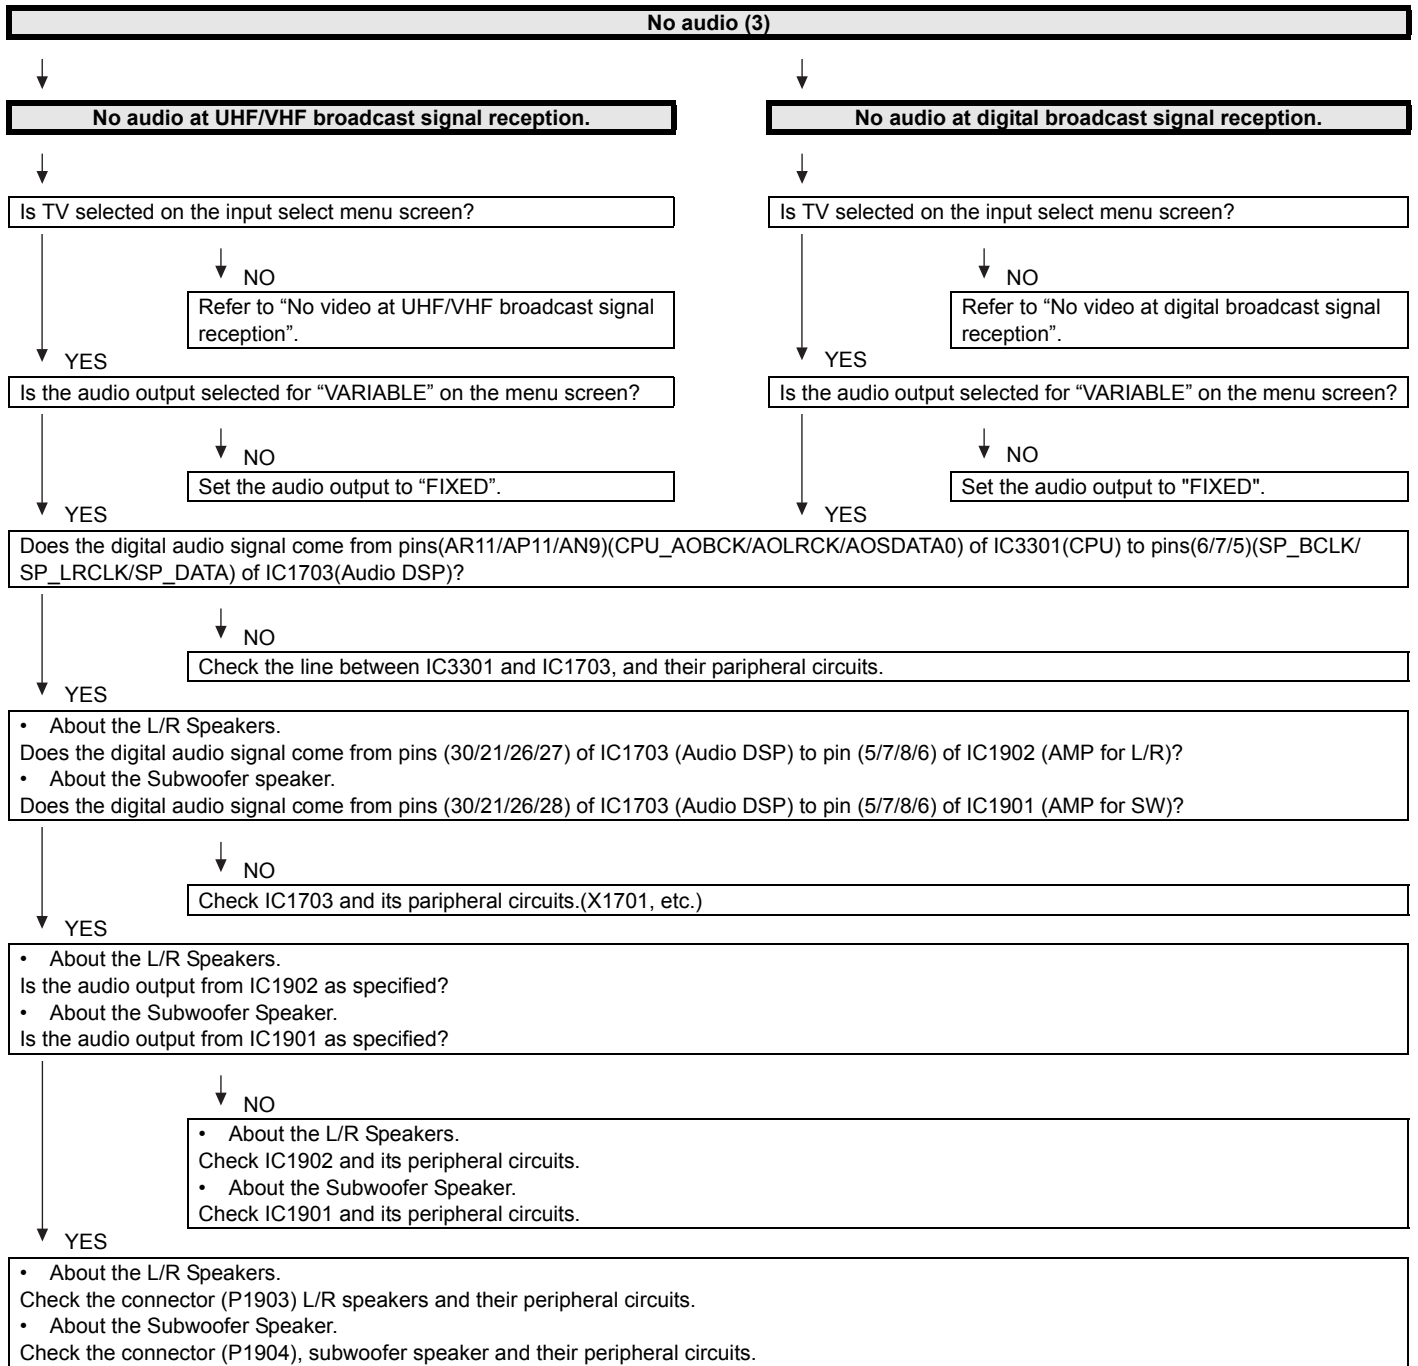

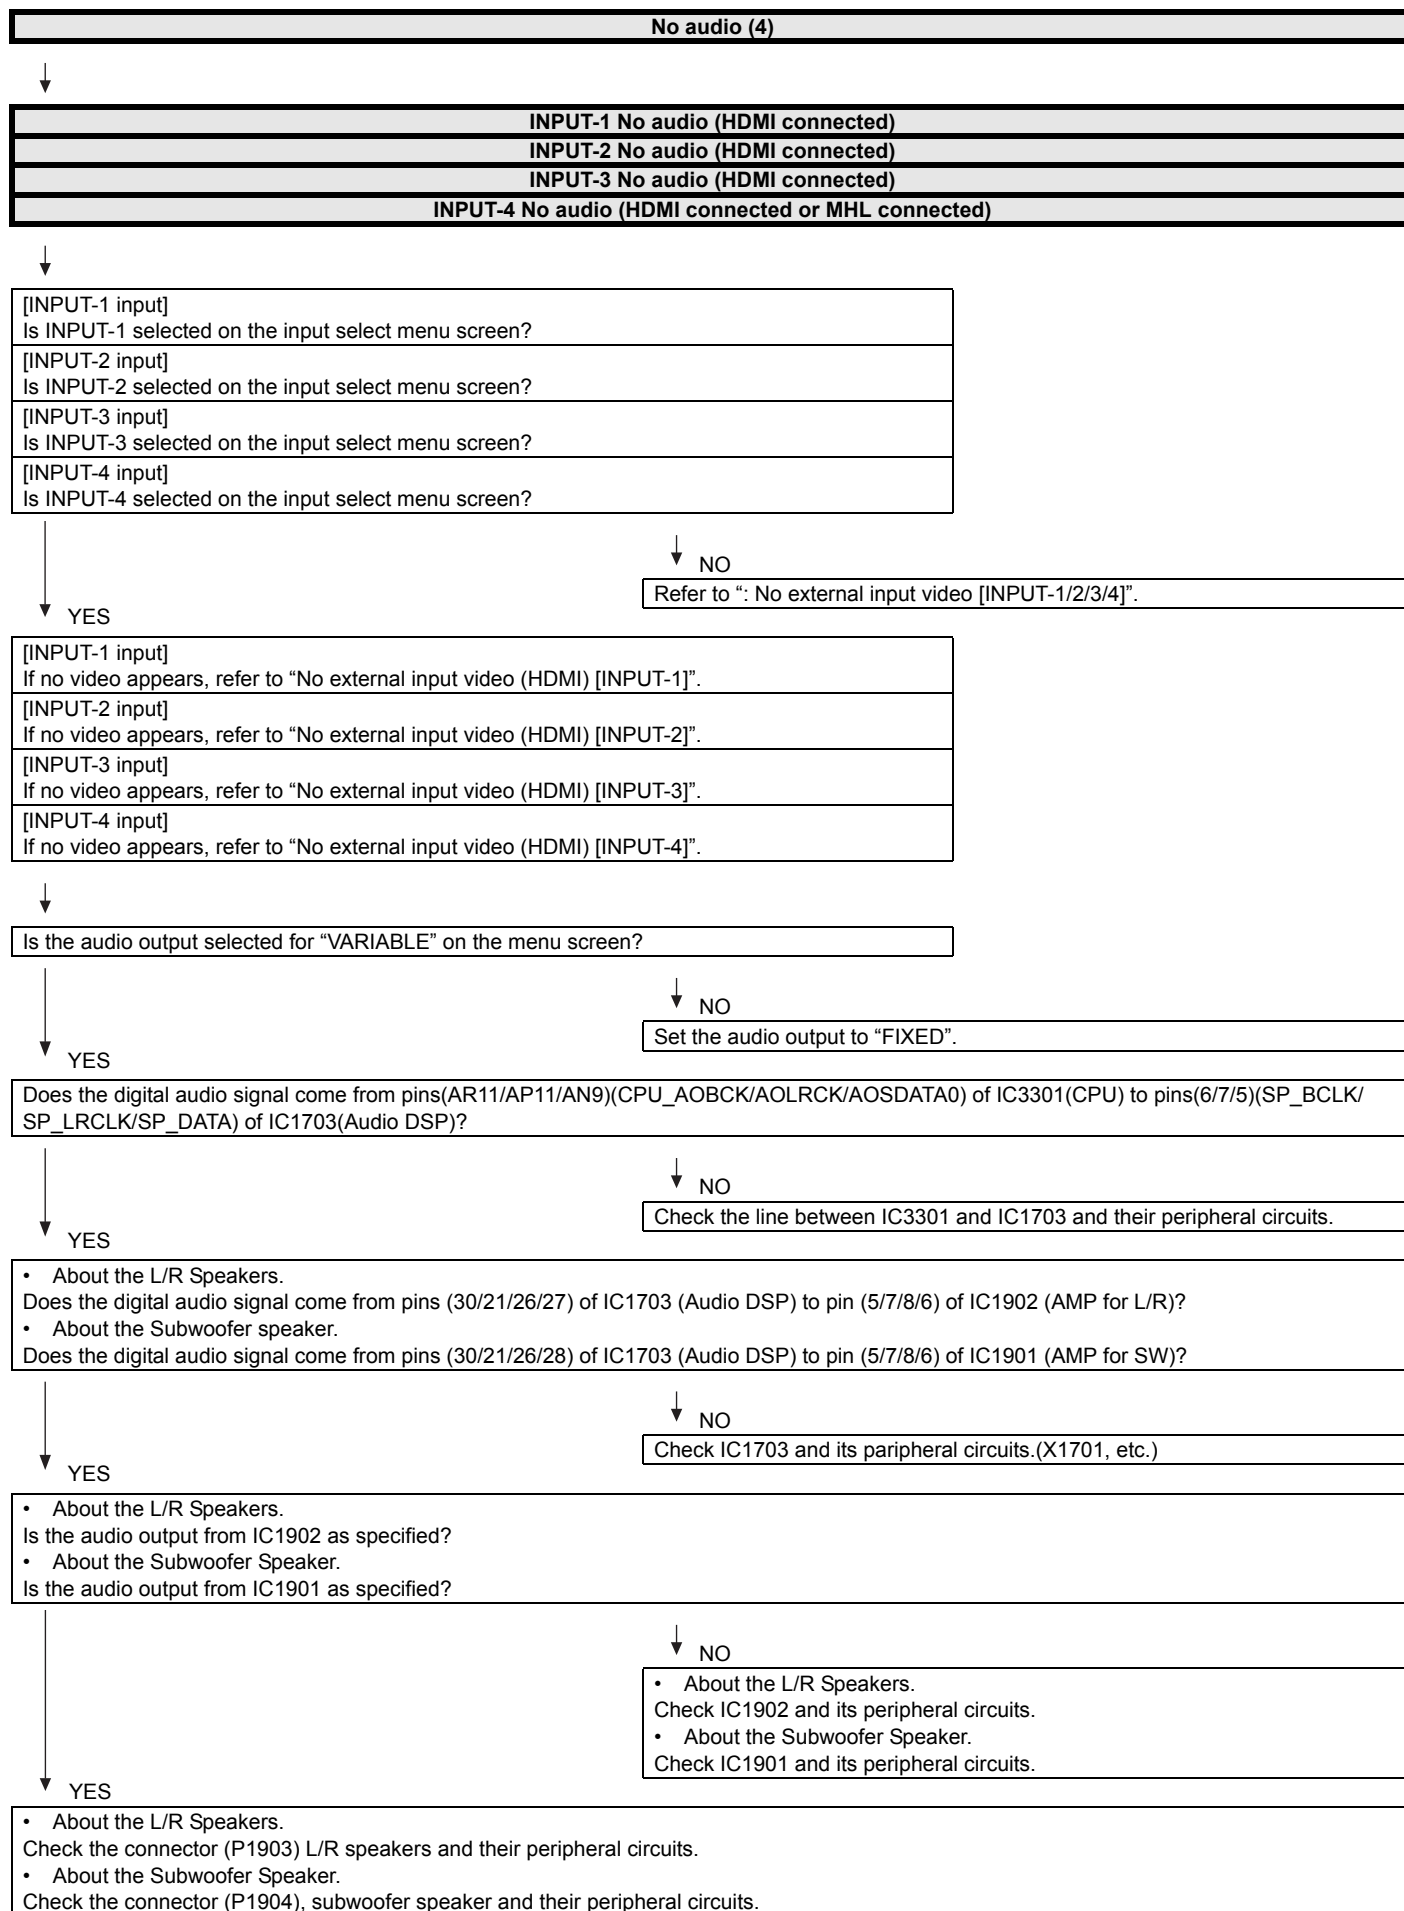

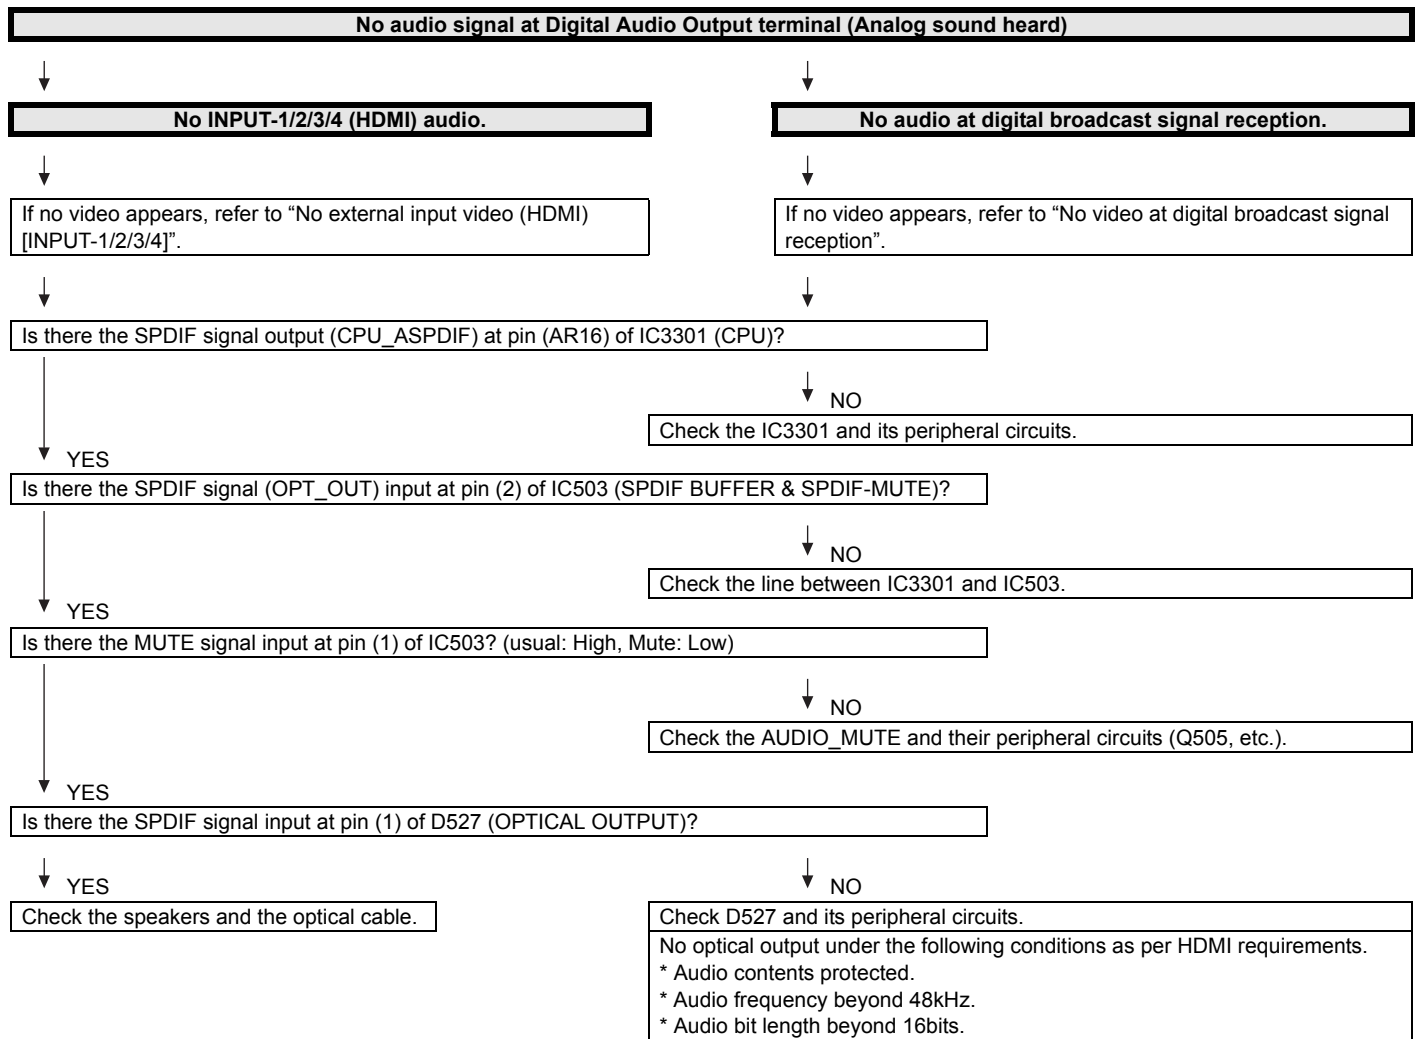

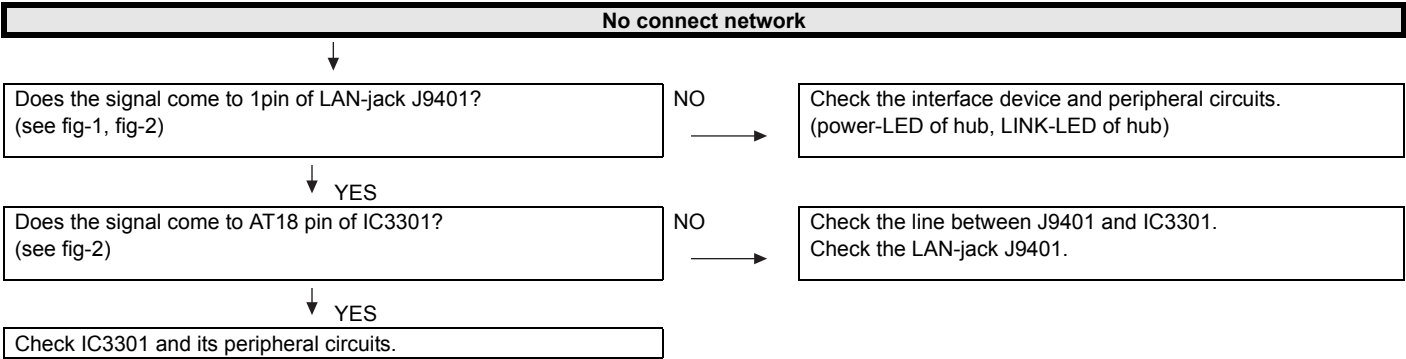
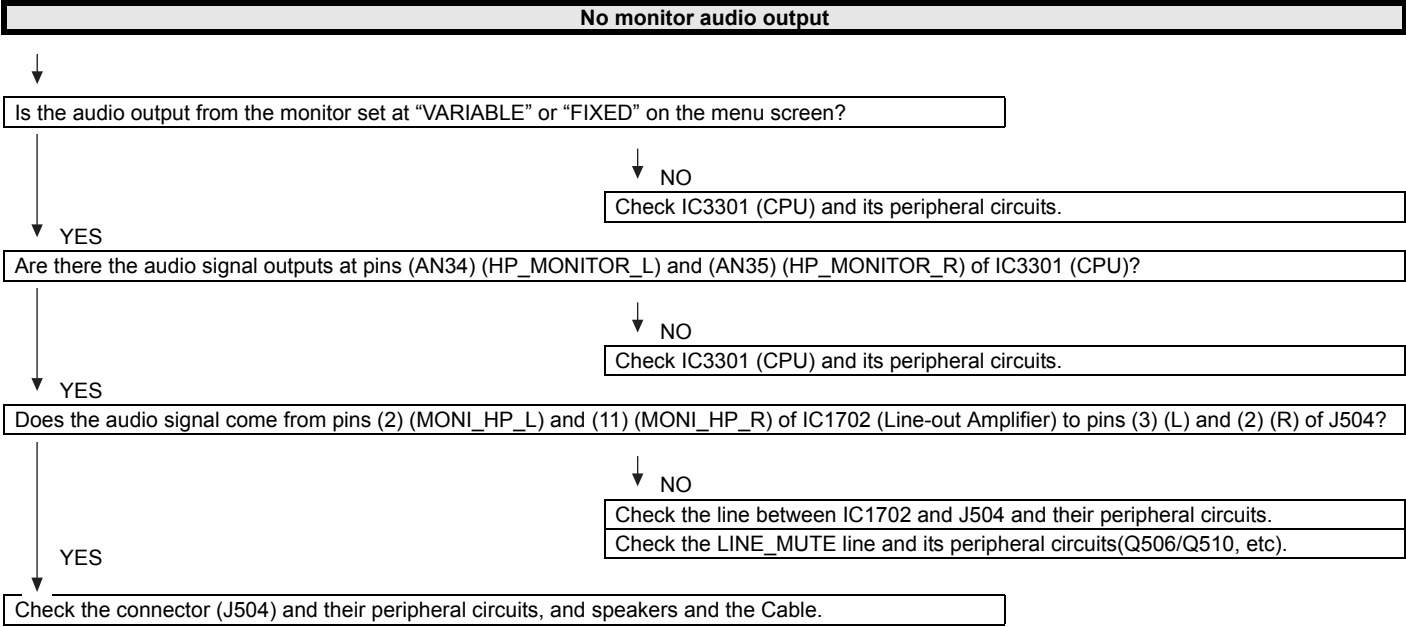


fig-1 LAN-jack J9501


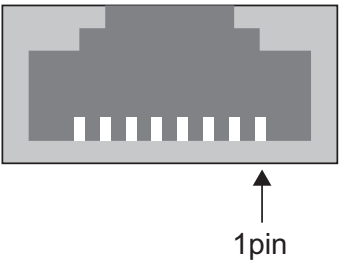


fig-2

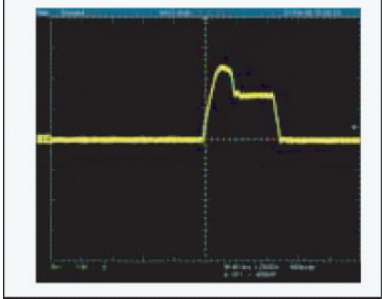

CHAPTER 7. MAJOR IC INFORMATIONS

[1] MAJOR IC INFORMATIONS

1. MAJOR IC INFORMATIONS

1.1. IC2601 (VHiSii9387A-1Q)

This IC is 5 input and 1 output HDMI port processor.

The TMDS cores run at 2.25Gbps. (Supports video resolutions up to 1080p, 60Hz, 12bit.)

The adaptive equalizer provides long cable support.

This IC has been pre-programmed with HDCP keys.

EDID and DDC support for 5 HDMI/DVI ports and 1 VGA port. (This IC includes 512-byte NVRAM and 256-byte SRAM for 5 HDMI ports and 128-byte SRAM for VGA port.)

This IC supports the mandatory and several optional 3D formats described in the HDMI 1.4 Specification.

“Audio Return Channel” and “HDMI Ethernet Channel” support for one receiver port.

“MHL” support for resolutions up to 1080i@60Hz can be assigned to any one input port.

When changing this IC, please write EDID (how to write EDID is shown in Chapter 5 and section 10.1).

1.2. IC2004 (RH-iXD515WJN7Q)

The monitor microprocessor is intended to communicate with the main microprocessor and to operate the system.

It also controls power of the entire system.

1.3. IC1901, IC1902 (VHiYDA164EZ-1Y)

The Class-D type digital audio power amplifier YDA164EZ gives maximum continuous output of 10 W/ch or woofer output 15W.

1.4. IC3301 (RH-iXD414WJN1Q)

This LSI is FULL HIGH-DEFINITION 1080P DIGITAL TV SYSTEM-ON-A-CHIP.

It combines a transport de-multiplexer, a high definition video decoder, an AC3 audio decoder, a four-link LVDS transmitter, a V-by-One transmitter, and an NTSC/PAL/SECAM TV decoder with a 3D comb filter (NTSC/PAL).

It supports Full-HD MPEG1/2/4/H.264/DiviX/VC1/RM/AVS/VP6/VP8 video decoder standards, and JPEG.

Audio support includes a BTSC and a Dolby AC3/MPEG-2 Layer 1, 2, audio decoder.

Two SPDIF output and a pair of analog outputs (L-R) are provided.

The LSI incorporates a complete ARM Cortex-A9 dual core based microprocessor subsystem including caches with bridging to memory and a local bus, where external peripherals can be attached.

Integrated peripherals include four USB 2.0, three UARTs, counter/timers and GPIO controllers.

It supports ATSC/DVB-T/DVB-C demodulators.

1.5. IC3501, IC3502 (RH-iXD555WJQZQ)

These are 2G-bit (128M x 16bit) DDR3-1600 synchronous DRAM.

1.6. IC3503, IC3504 (RH-iXD555WJQZQ)

These are 2G-bit (128M x 16bit) DDR3-1600 synchronous DRAM.

1.7. IC3103 (RH-iXD584WJQZQ)

The 4G-bit NAND flash memory device stores the main CPU program.

1.8. IC3104 (VHiRV2464Ai-1Y)

This is 64k-bit EEPROM device including the user setting.

1.9. IC2007 (VHiRV2402Ai-1Y)

This is 2k-bit EEPROM device stores the monitor microprocessor setting.

1.10. IC506 (VHiM3221EiP-1Y)

This IC is a high speed, single-channel RS-232 transceiver interface device that operates from a single 3.3V power supply.

The device provides the electrical interface between an asynchronous communication controller and the serial-port connector.

This device operate at data signaling rates up to 460kbit/s.

All RS-232 (Tout and Rin) and CMOS (Tin and Rout) inputs and outputs are protected against electrostatic discharge (up to +/- 15kV ESD protection).

1.11. IC1702 (VHiAK4201EU-1Y)

This IC is audio amplifier for line-out/head-phone.

1.12. IC1703 (VHiYSS952QZ-1Y)


Audio DSP (YSS952QZ) has digital audio adjustment function (for example, PEQ, bass/treble, balance, bass enhancer, etc.) and adjusts TVs audio quality.

LC-80LE642U

- MEMO -


CHAPTER 8. OVERALL WIRING/SYSTEM BLOCK DIAGRAM

[1] OVERALL WIRING DIAGRAM

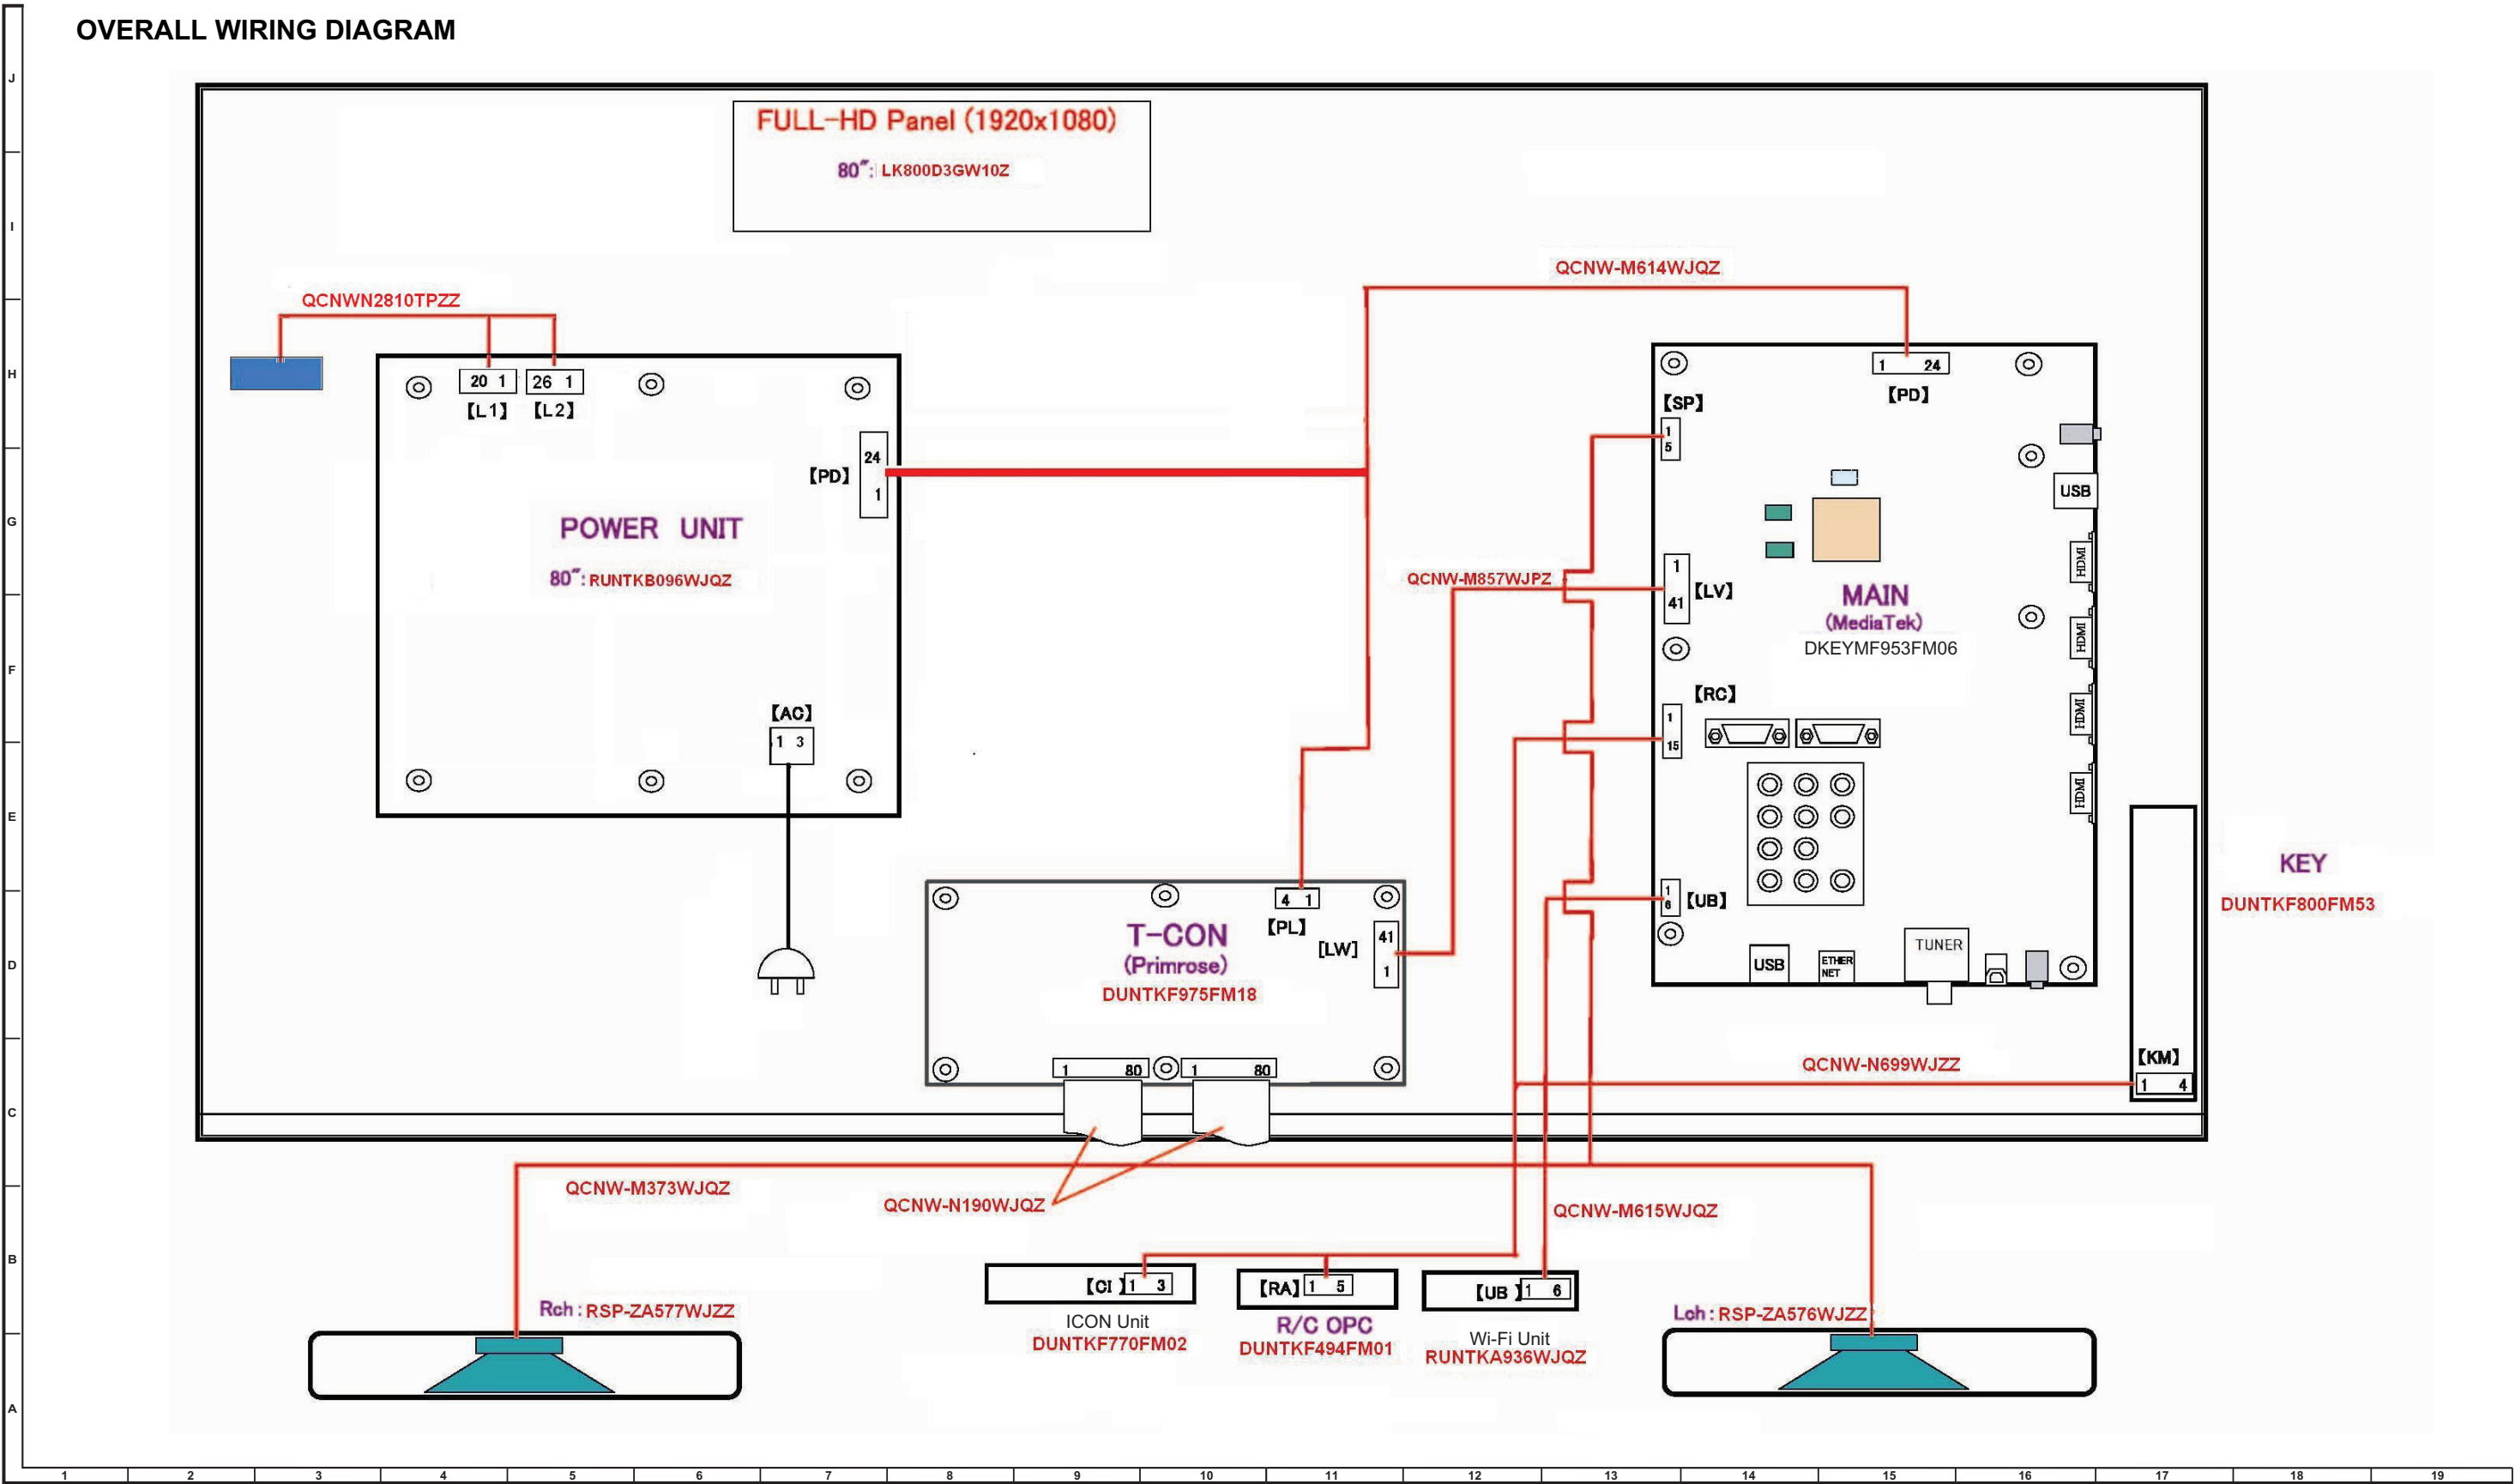

SHARP PARTS GUIDE

No. S73B9LC80LE64

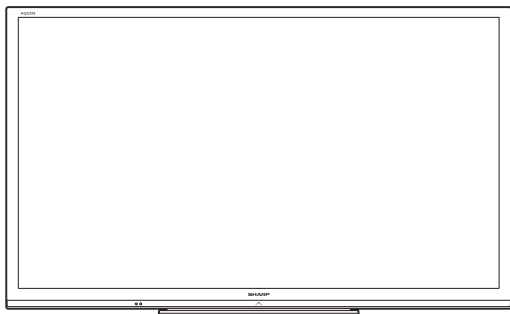LCD COLOR TELEVISION**MODEL LC-80LE642U**


CONTENTS

- | | |
|-------------------------------------|--|
| [1] PRINTED WIRING BOARD ASSEMBLIES | [4] SUPPLIED ACCESSORIES/
PACKING PARTS |
| [2] LCD PANEL MODULE UNIT | [5] SERVICE JIG
(USE FOR SERVICING) |
| [3] CABINET AND MECHANICAL PARTS | |

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.



NO.	PARTS CODE	PRICE RANK	NEW MARK	PART DELIVERY	DESCRIPTION
[1] PRINTED WIRING BOARD ASSEMBLIES					
N	DKEYMF953FM06	BU		X	MAIN Unit
N	DUNTKF975FM18	BL		X	LCD CONTROL Unit
N	DUNTKF494FM01	AG		X	R/C OPC Unit
N	DUNTKF770FM02	AE		X	ICON Unit
N	DUNTKF800FM53	AE		X	KEY Unit
N	RUNTKA936WJQZ	AX		X	Wi-Fi Unit
N	RUNTKB096WJQZ			X	POWER/DRIVE Unit
[2] LCD PANEL MODULE UNIT					
N	R1LK800D3GW10Z	FK		X	80" LCD PANEL Unit (LK800D3GW10M)

[3] CABINET AND MECHANICAL PARTS

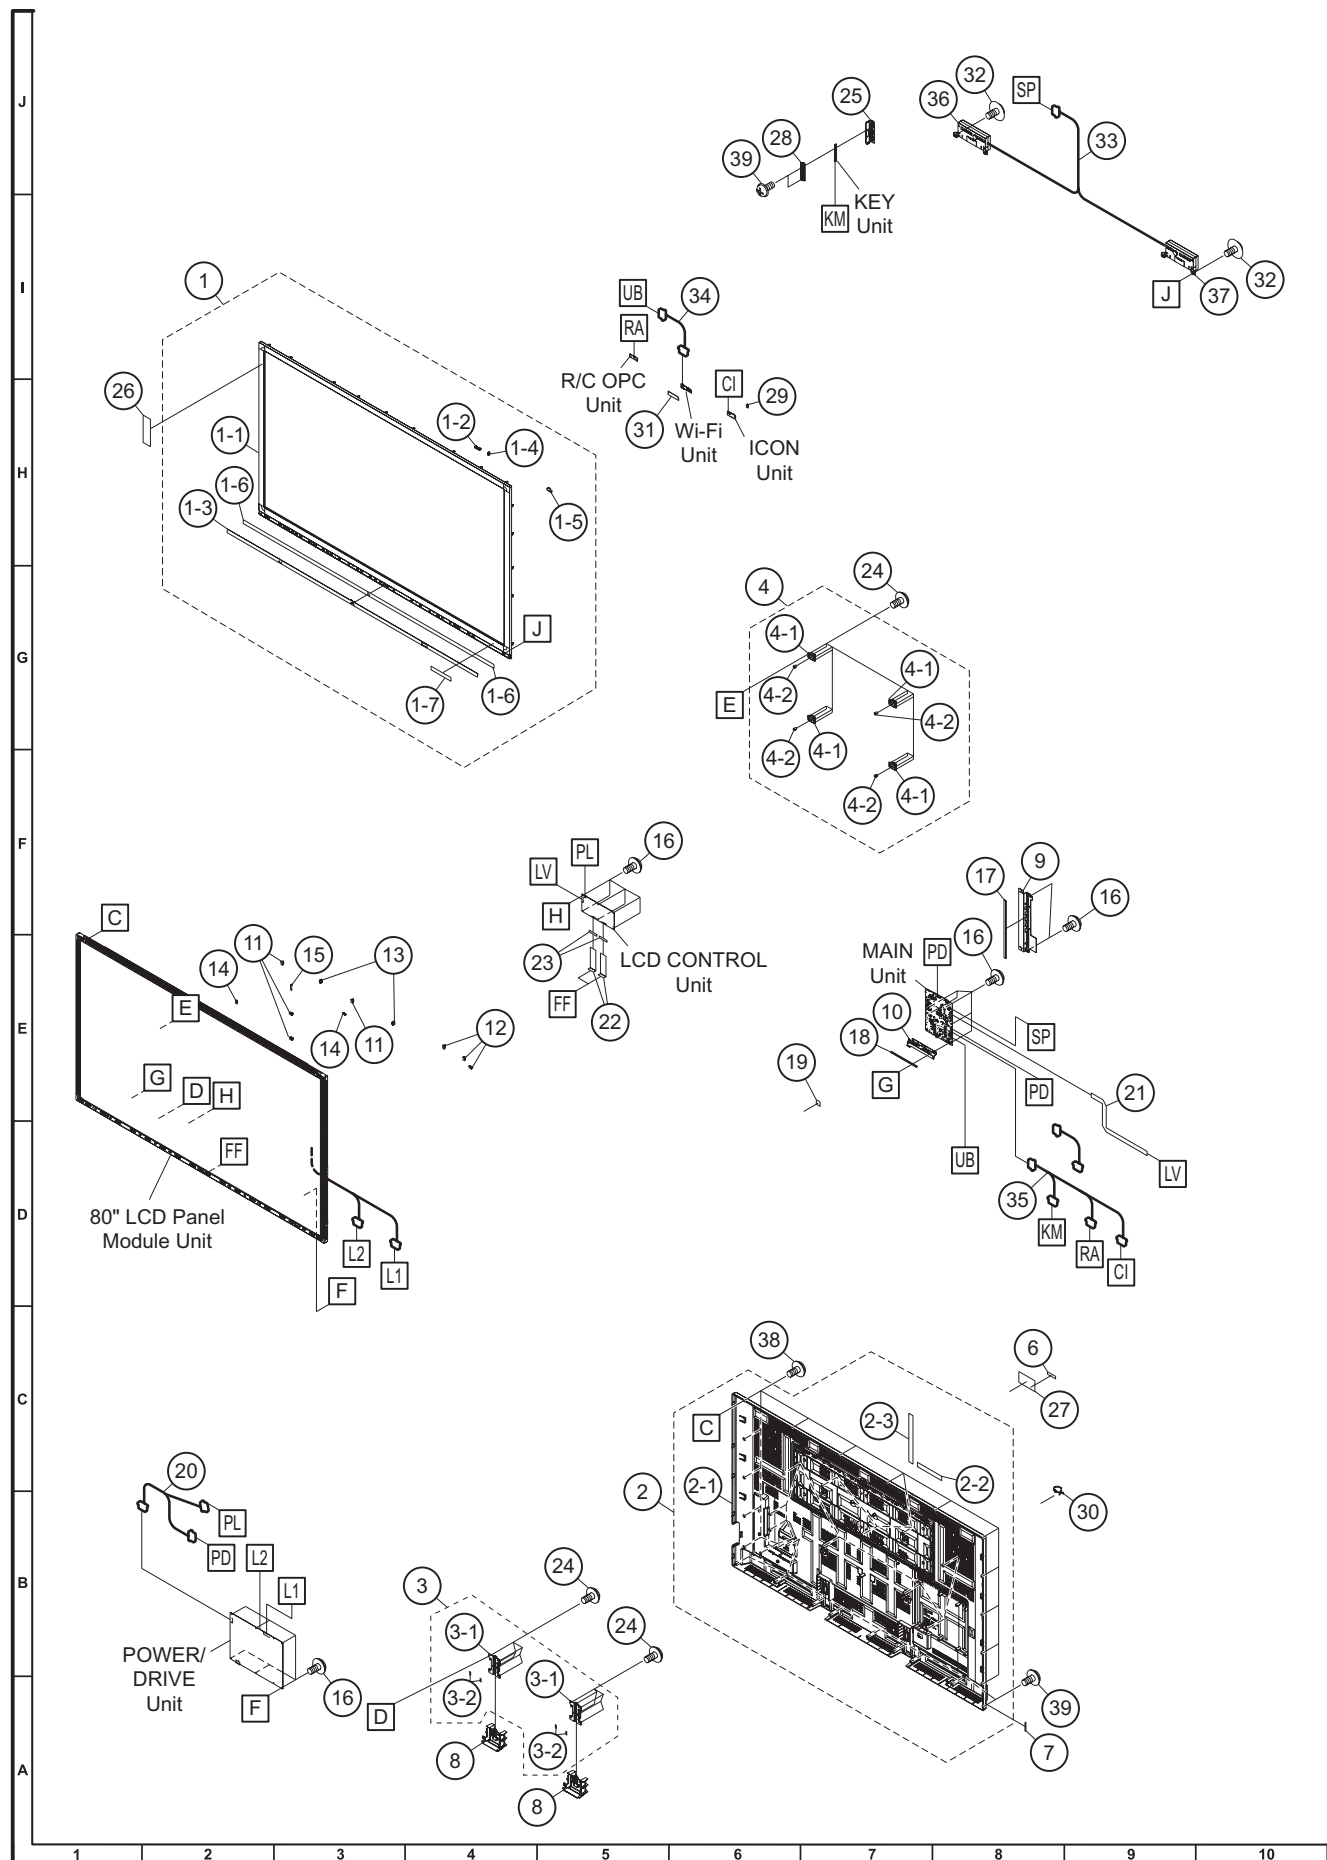

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART DELIVERY	DESCRIPTION
[3] CABINET AND MECHANICAL PARTS					
1	CCABAC818WJ39	BN	N	X	Front Cabinet Assy
1-1	Not Available	-		-	Front Cabinet
1-2	Not Available	-		-	R/C OPC Cover
1-3	HDECQB669WJ3A	AZ		X	Front Decoration
1-4	LHLDWA289WJKZ	AC		J	Wire Holder
1-5	Not Available	-		-	Diffusion Sheet
1-6	PSPAHC173WJZZ	AC		X	Himeron, x2
1-7	TLABZD496WJZZ	AA		X	License Label
2	CCABBC043WJ35	BS	N	X	Rear Cabinet Assy
2-1	Not Available	-		-	Rear Cabinet
2-2	Not Available	-		-	Terminal Indicator (Bottom)
2-3	HINDPE980WJSA	AF	N	X	Terminal Indicator (Side)
3	CANGKD290WJ31	AF		X	Stand Angle Assy, x2
3-1	LANGKD290WJ3W	AF		X	Stand Angle
3-2	PSPAHC502WJZZ	AB		J	Himeron, x2
4	CANGKD398WJ31	AF		X	VESA Angle Assy, x4
4-1	Not Available	-		-	VESA Angle
4-2	Not Available	-		-	VESA Shaft
6	TLABNB037WJZZ	AB		X	Serial Label (Back)
7	Not Available	-		-	Serial Label (Side)
8	GCOVAE164WJ3A	AX		J	Bottom Cover, x2
9	LANGKD145WJFW	AD		X	Terminal Angle (Side)
10	LANGKD292WJ3W	AD		X	Terminal Angle (Bottom)
11	LHLDWA124WJKZ	AC		J	Wire Holder, x4
12	LHLDWA138WJKZ	AC		J	Wire Holder, x3
13	LHLDWA162WJKZ	AC		J	Wire Holder, x2
14	LHLDWA175WJUJ	AC		J	Wire Holder, x2
15	LHLDWA176WJUJ	AC		J	Wire Holder
16	LX-BZA207WJF7	AA		J	Screw, x20
17	PMLT-A678WJQZ	AL		J	Gasket (Side)
18	PMLT-A680WJQZ	AD		X	Gasket (Bottom)
19	PSPAHC871WJKZ	AM		J	Cooler (MAIN)
20	QCNW-M614WJQZ	AR		X	Connecting Cord (PD)
21	QCNW-M857WJPZ	BE		J	Connecting Cord (LV)
22	QCNW-N190WJQZ	AF		X	Connecting Cord (FFC), x2
23	RCORFA061WJZZ	AG		J	Ferrite Core, x2
24	XBPS830P06WS0	AA		J	Screw, x28
25	GCOVAE251WJ3A	AG		X	Key Button Cover
26	HINDPE965WJZZ	AC	N	X	Energy Guide Label
27	HINDPE966WJSA	AC	N	X	Model Label
28	JBTN-A937WJ3A	AZ		J	Key Button
29	LHLDWA175WJUJ	AC		J	Wire Holder
30	LHLDWA318WJKZ	AD		J	Cable Clamp
31	LHLDZB909WJ3A	AC		X	Wi-Fi Attachment
32	LX-EZA069WJF7	AB		J	Screw, x2
33	QCNW-M373WJQZ	AG		X	Connecting Cord (SP)
34	QCNW-M615WJQZ	AF		X	Connecting Cord (UB)
35	QCNW-N699WJZZ	AK	N	X	Connecting Cord (RC)
36	RSP-ZA576WJZZ	AT	N	J	Speaker Unit (L)
37	RSP-ZA577WJZZ	AT	N	J	Speaker Unit (R)
38	XBPS830P06WS0	AA		J	Screw, x26
39	XEBS830P12000	AA		J	Screw, x12

[4] SUPPLIED ACCESSORIES/PACKING PARTS

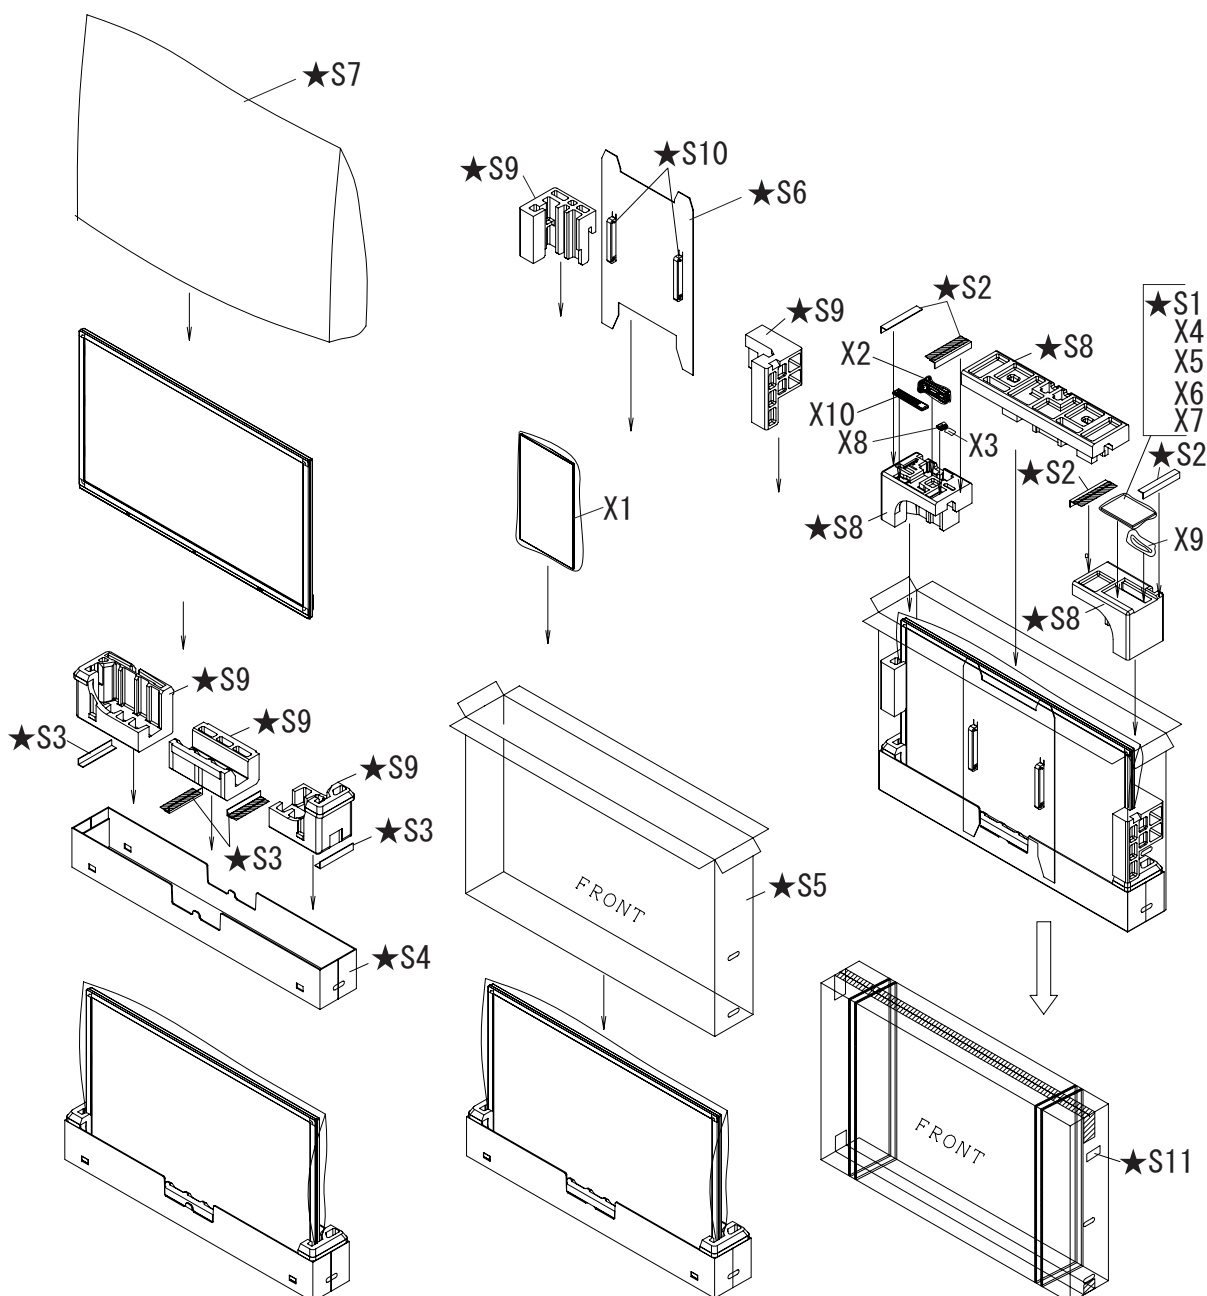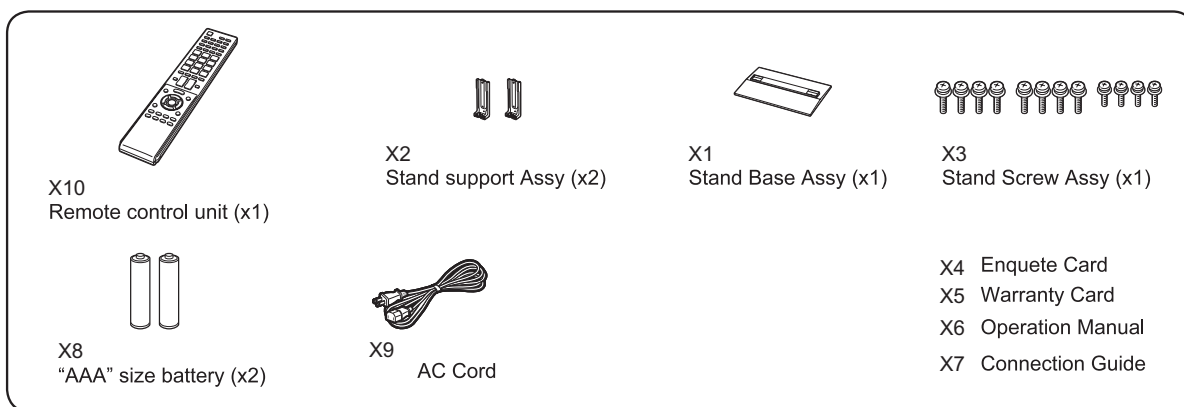

★ Not Replacement item

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART DELIVERY	DESCRIPTION
[4] SUPPLIED ACCESSORIES/PACKING PARTS					
X1	CDAi-A806WJ36	BD		X	Stand Base Assy
X2	CANGKD276WJ04	AN		X	Support Assy, x2
X3	CSAKKA011WJ01	AF		X	Stand Screw Assy
X4	TCADAE290WJZZ	AA		X	Enquete Card
X5	Not Available	-		-	Warranty Card
X6	TINS-F954WJZZ	AG	N	X	Operation Manual
X7	TMAN-A050WJN1	AB		X	Connection Guide
X8	Not Available	-		-	AAA size Battery, x2
X9	QACCD A073WJPZ	AK		X	AC Cord
X10	RRMCG B004WJSA	AN		X	Remote Control
S1	SSAKA0101GJZZ	-		-	Polyethylene Bag (NOT REPLACEMENT ITEM)
S2	SPAKAA694WJZZ	-		-	Edge Board (Top), x4 (NOT REPLACEMENT ITEM)
S3	SPAKAA695WJZZ	-		-	Edge Board (Bottom), x4 (NOT REPLACEMENT ITEM)
S4	SPAKCG509WJZZ	-		-	Packing Case (Bottom) (NOT REPLACEMENT ITEM)
S5	SPAKCH333WJZZ	-	N	-	Packing Case (Main) (NOT REPLACEMENT ITEM)
S6	SPAKFC163WJZZ	-		-	Front Pad (Base) (NOT REPLACEMENT ITEM)
S7	SPAKPB788WJZZ	-		-	Polyethylene Bag (NOT REPLACEMENT ITEM)
S8	SPAKXD498WJZZ	-		-	Packing Form (Top) (NOT REPLACEMENT ITEM)
S9	SPAKXD499WJZZ	-		-	Packing Form (Bottom) (NOT REPLACEMENT ITEM)
S10	SPAKXD500WJZZ	-		-	Front Pad, x2 (NOT REPLACEMENT ITEM)
S11	TLABKA009WJZZ	-		-	Case No. Label (NOT REPLACEMENT ITEM)
[5] SERVICE JIG (USE FOR SERVICING)					
N	QCNW-C222WJQZ	AW		J	Connecting Cord L=1000mm 80pins, LCD Control Unit to LCD Panel Unit, x2
N	QCNW-N560WJPZ	AW		J	Connecting Cord L=650mm 41pins, Main to LCD Control Unit (LW)
N	QCNW-M539WJQZ	BC		J	Connecting Cord L=1200mm 24pins, Power Unit Main Unit (PD)

SHARP

COPYRIGHT © 2013 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No Part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.