

INSTRUCTION MANUAL
R. F. POWER and VSWR METER
Coupler Unit Model 261-261.1
Indicator Unit Model 262

THE  CORPORATION

M. C. JONES ELECTRONICS CO., INC., SUBSIDIARY - BRISTOL, CONN.

INSTRUCTION MANUAL
R. F. POWER and VSWR METER
Coupler Unit Model 261-261.1
Indicator Unit Model 262

CAUTION

The MicroMatch Model 260 Series is rated at 1000 watts with Unity VSWR.

With other than Unity VSWR, the 260 Series Coupler is rated as follows:

<u>VSWR</u>	<u>Maximum Rating in watts</u>
1.5	667
2.0	500
3.0	333
4.0	250

When operating near the maximum power ratings, it is recommended that the coupler unit be inspected from time to time so that overheating may be avoided.

INSTRUCTION MANUAL FOR R. F. POWER AND VSWR METERCoupler Unit Model 261-261.1Indicator Unit Model 262DESCRIPTION

Your new MicroMatch 260 Series Instrument is a compact, versatile, multi-scale, yet accurate device for measuring R. F. Power and VSWR of coaxial transmission lines. This instrument represents the utmost in ease of installation, compact design, and freedom from interference with the equipment being monitored.

Readings of forward or incident power and reflected power may be made directly on the indicator for either of three calibrated scales. The VSWR (Voltage Standing Wave Ratio) may then be determined from the ratio of reflected to incident power.

These instructions are based on a complete instrument consisting of the above coupler and indicator. However, in the interest of economy it is possible to construct a usable indicator out of parts normally found around the laboratory or the "Ham Shack"; and in that case, it is only necessary to purchase the coupler unit.

SPECIFICATIONS

Frequency Range:	0.5 to 225 mcs.
Impedance:	52 ohms
*Wattmeter Scale (Relative):	0-10; 100; and 1000
Maximum Power-Handling Capacity:	1000 Watts at Unity VSWR
Power loss thru Coupler:	Less than 0.1 db
R. F. Connectors:	Type UHF (Amphenol Type 83-1R)

<u>Model No.</u>	<u>Size</u>	<u>Weight</u>
261, 261.1	3 x 3 x 4-3/4	8 ozs.
262	4-1/4 x 4-1/4 x 4-9/16	1 lb. 9 ozs.

*This is a RELATIVE POWER indicating instrument only. No attempt to read power accurately in watts should be made with this particular model.

USES

The design, installation and maintenance of modern transmitter and antenna equipment requires an R. F. Wattmeter that can be inserted into the transmission line to measure both incident and reflected R. F. power.

This instrument was designed to monitor both transmitter and antenna characteristics in the frequency range from 0.5 to 225 mcs. while the equipment under test is in use. It measures the R. F. power from the transmitter and VSWR of the load.

R. F. Power and VSWR Monitor. This instrument is particularly useful during the installation and operation of transmitting stations, specifically when several types of antennae are included where the possibility exists for a mismatch on the R. F. Transmission line. With your new 260 Series instrument, trouble can be detected; and its cause isolated to the transmitter, transmission line, antenna tuner, or antenna. Proper interpretation of the data read on this instrument will usually indicate the corrective measures which should be taken. During normal operation, the operator has complete assurance of proper functioning of his entire transmitter and antenna system.

Laboratory Uses. The MicroMatch 260 Series is an excellent laboratory instrument that may be used to measure the performance of transmitter, antennae, R. F. loads, and inter-stage coupling networks. With a load resistor, it may be used to measure transmitter power output under various conditions of load impedance. In the design and adjustment of antenna tuners and antenna systems, it may be used to continuously measure the VSWR produced on the transmission line by the antenna.

Absorption Type Wattmeter. When used with a load resistor in the 630 Series, this instrument makes an excellent absorption type R. F. Wattmeter. This combination provides a means for measuring the performance of the transmitter into a perfect resistive load, and then into the actual load or antenna available. It will also measure the characteristics of the actual load.

Matching Circuits. This instrument can be used to match the input and output circuits used for inter-stage coupling in a transmitter by inserting the instrument in the coaxial line. It is then possible to adjust the grid circuit of the driven stage so that no reflected power is present, and to adjust the plate circuit of the driving stage until the desired amount of driving power is supplied to the subsequent stage.

INSTALLATION and OPERATION

1. INSTALL the coupler unit in the transmission line as close to the transmitter as possible. The input and output connectors are plainly labeled on the name plate, "Transmitter" and "Load" respectively. For permanent installation, it is recommended that the instrument be bracketed to the side of the transmitter, or to a convenient wall.
2. Read the FORWARD or INCIDENT POWER in the following manner:

(Caution: Do not operate unit continuously at more than 1000 watts RF power with Unity VSWR.)

 - (a.) Throw the toggle switch on top of the indicator unit to the forward position.
 - (b.) Set the potentiometer on the front of the indicator to either of three small dots around the circular scale; one is labeled 10; the other 100; and the third 1000. These represent the APPROXIMATE setting of the potentiometer to produce a full scale sensitivity on the indicator of 10, 100, or 1000 watts, respectively. If in doubt, set at 1000.
 - (c.) Turn on the transmitter, and bring up the power gradually, if possible. If the transmitter is equipped with "Tune" and "Operate" positions of the high voltage, it is advisable to place in "Tune" first, and then advance to "Operate" position.
 - (d.) Read the forward or incident power directly on the meter scale in watts. It should be remembered that this will produce an APPROXIMATE reading of R. F. power, since the indicator was only set to an approximate calibration point.
3. Read the REFLECTED POWER by throwing the toggle switch on top of the indicator to the reflected power position, and then obtaining a reading of the power scale exactly as described above.
4. The NET POWER traveling toward the antenna or load is equal to the difference between the forward and the reflected power.
5. Determine VSWR by first calculating the percent reflected power. This is equal to the reflected power divided by the incident power, times 100. Then refer to the curve of VSWR versus percent reflected power. For example, if the percent reflected power is 10, the VSWR from the curve will be approximately 1.9.

CORRECTION for FREQUENCY

All readings taken with this instrument are fundamentally independent of frequency; however, the detector used in the coupler unit loses efficiency in the high frequency region so that the power readings require a correction factor.

To obtain the correct power reading, multiply the meter reading of both incident and reflected power by the following factors corresponding to the frequency used:

Frequency in MCS.	10 Watt Scale	100 and 1000 Watt Scale
3 to 20	1.0	1.0
30	1.07	1.05
50	1.15	1.1
70	1.23	1.14
100	1.31	1.2
140	1.41	1.23
162	1.46	1.25
225	1.60	1.35

Figure 1. Table of Power Correction factors versus Frequency.

Multiply meter readings by the above numbers.

INTERPRETING RESULTS

Effect of Inserting MicroMatch in Line. The 260 Series coupler can be connected permanently into a matched transmission line without affecting the transmitter performance in any way. Connecting the instrument into an unmatched line will change the impedance seen by the transmitter.

This change is not due to reflections set up by the instrument; it occurs because the coupler unit is electrically equivalent to a 4" length of transmission line. To compensate for this, a length of line can be added between the transmitter and the instrument, such that the added length of line, plus the directional coupler equals one-half wave length.

The table below shows the proper length of coax line to be added:

Transmitter Frequency mcs.	Transmitter Wave Length in.	Cable Length in.
25	470	160
100	117.6	37
200	58.8	19

Note: The added length of cable should be removed from the line together with the 260 Series coupler, and connected into the line whenever the 260 Series coupler is used, if it is desired to create no change in the loading of the transmitter by the insertion of the coupler.

The above figures are based on RG-9A/U cable which has a propagation constant of 0.7. For other types of coaxial cable, the following formula can be used.

$$\text{Length of Cable (inches)} = \frac{LK}{2} - 4$$

where K represents the propagation constant of the cable and L represents the wave length in inches at which the transmitter operates.

Equal Reading of Incident and Reflected Power. When the forward and reflected power readings are approximately equal, the R. F. transmission line is usually open, or shorted. In general, the transmitter should not be operated for any appreciable length of time under this condition.

Abnormally Low Incident and Reflected Power Reading. This would indicate that the transmission line may be properly matched, but that some fault exists in the transmitter, causing its output to be low.

Abnormally High Reflected Power Readings. This indicates a mismatch of the transmission line system. In general, this may be caused by faults in the transmission line joints, improper adjustment of the antenna, or the antenna tuner or connection of the transmitter to an antenna designed for some other frequency. This type of trouble should be thoroughly investigated, and the appropriate adjustment made to reduce the reflected power to as near a zero value as possible.

This may be done by adjusting the antenna tuning apparatus which may be in the transmission line between the antenna and the transmitter, and by adjusting the antenna elements themselves. After each adjustment, a check should be made to determine whether the reflected power has increased or decreased, and the adjustment continued or reversed, depending upon the results. Efforts should be made to reduce the reflected power to zero, or to produce a Unity VSWR.

Advantages of minimized Standing Wave Ratio. There are several advantages of flat transmission lines which will make it worth while to use the MicroMatch to obtain the best possible impedance match. Some of these advantages are:

1. The transmission line losses are minimized. This means that more of the power generated by your transmitter actually reaches your antenna.
2. Voltage on the transmission line is reduced, reducing the danger of voltage breakdown, and increasing the power-handling capacity of the line.
3. The antenna system or load may be operated over a much wider band of frequencies without retuning.
4. The transmitter is much easier to load properly, and less detuning of the final tank circuits results.
5. Harmonic radiation of the transmitter is reduced and any harmonic filters will generally operate with much improved efficiency.

CONSTRUCTION OF MODEL 262 INDICATOR

While it is recommended that this indicator be purchased with the Model 261.1 Coupler, it is possible to construct this indicator either in the small sloping panel meter box shown, or on a rack panel for mounting directly in the transmitter cabinet.

The list of parts and the schematic diagram of the Indicator are shown in this Instruction Manual. No special wiring precautions need be taken, since all of the currents and voltages are low-level, direct current. It is necessary that a shielded wire be used between the coupler and the indicator unit to avoid RF pick-up on this lead.

REPLACEMENT PARTSCOUPLER UNIT - MODEL 261.1Model 261

<u>Symbol</u>	<u>Description</u>	<u>Part No.</u>
C2, C6	Capacitor, Variable 0.3 - 3.0 mmfd Corning 683038	
J1, J2	Connectors, Amphenol #83-1R	
J3	Jack, open circuit, 3-contact Switchcraft #12B	
L2, L4, L5	RF Choke, 1.7 Mh., 10 ma., 4 sect.	1712
21	Coupler assembly (consisting of R1, C1, C3, C5, C7, L1, L3, X1, and X2)	2233

Indicator Unit - Model 262


Cable, 2-conductor #22 wire,
shielded and plastic jacket, mic.
cable 4 ft., Belden #8422

Case, 4-3/16 w. x 1-1/2 h. x
4-1/4 d. slope front

3186

Knob, Harry Davies #2300, Black

M1	Meter, 0-200 microamps, 750 ohms Internal Resistance. 0-10; 0-100; 0-1000 watt scales.	1462
P1	Plug - 3-conductor - Switchcraft #267	
R1	Potentiometer, carbon, 10,000 ohms 1 watt	1068-1
S1	Switch, S. P. D. T. bathandle A-H-H #80515 - BC	

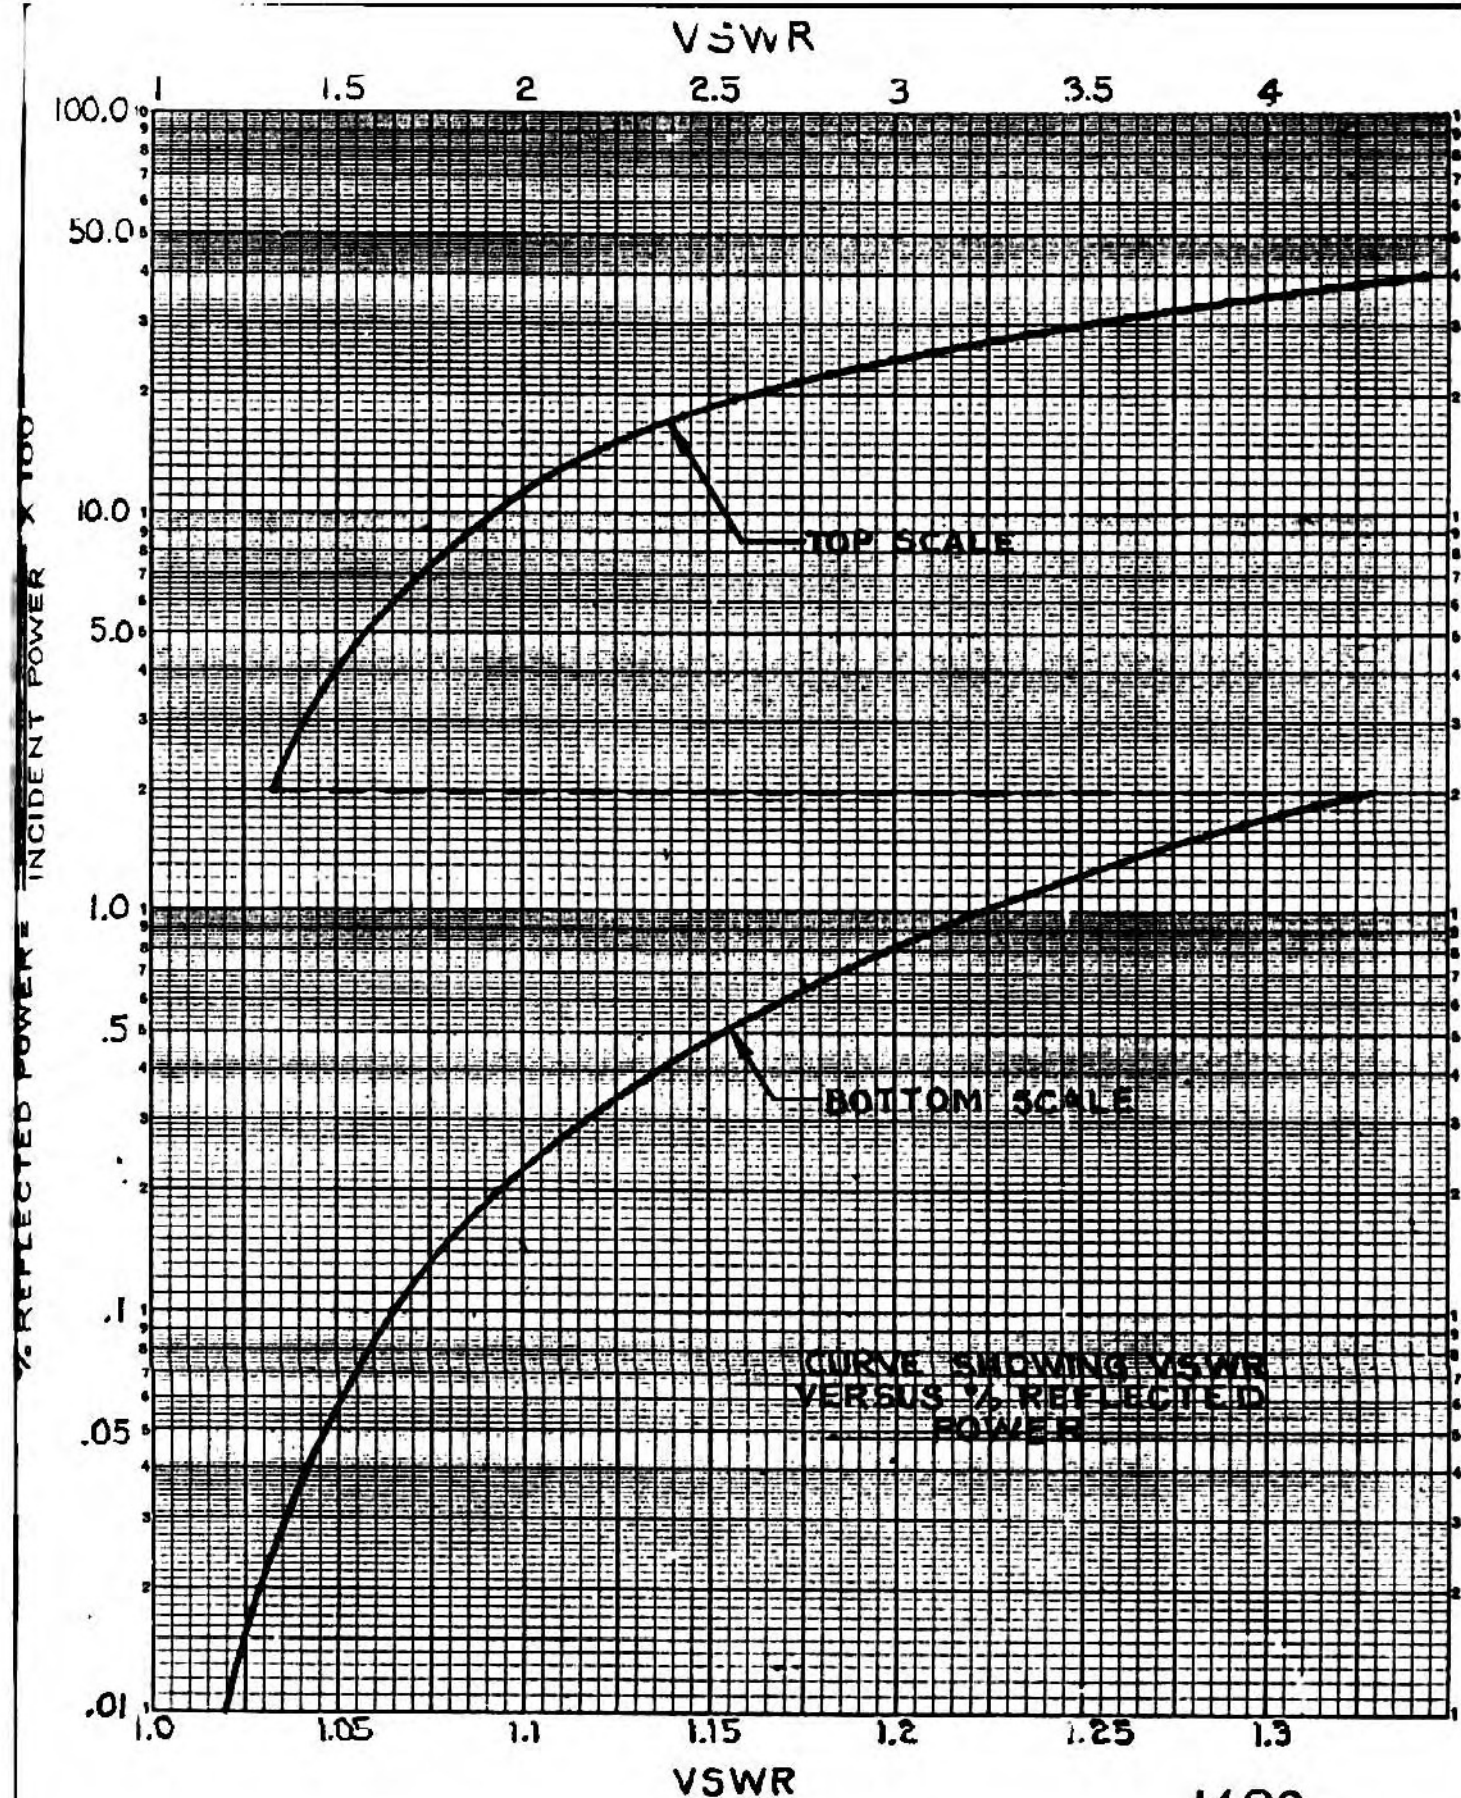

1490

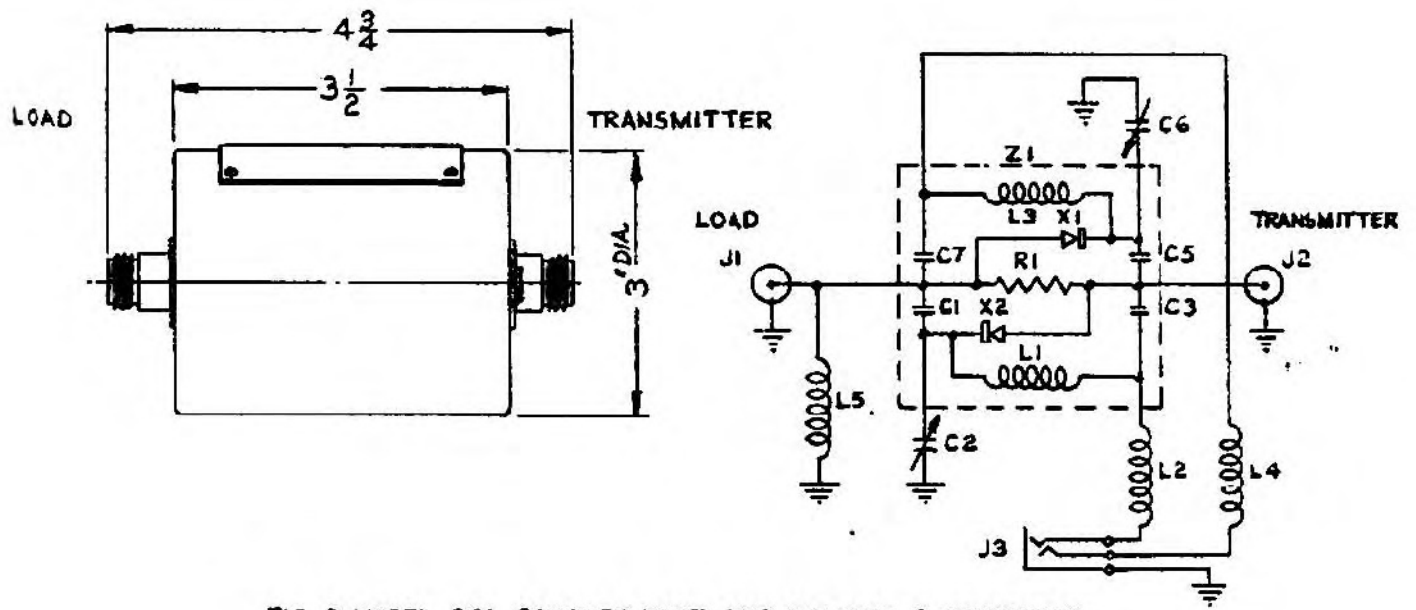


FIG. 2 MODEL 261 COUPLER UNIT OUTLINE DWG. & SCHEMATIC.

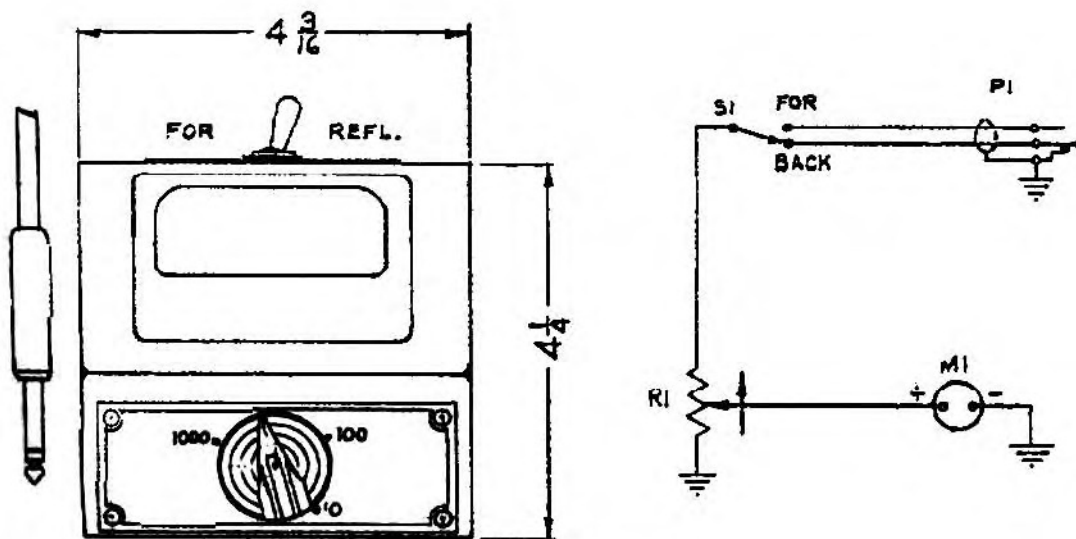


FIG. 3 MODEL 262 INDICATOR UNIT OUTLINE DWG. & SCHEMATIC.