

Service Manual

Dishwasher integratable ADG 953/S

Model Version		Page
	ADG 953/S 8542 953 38010	
	Technical data	2 - 3
	Spare part list	4 - 5
	Exploded view	6 - 7
	Circuit diagram	8
	Program diagram	9
	Text/Legend	10 - 18
	Family	A5

Technical data

Dimension

Height	82.0-87.0	cm
Width	59.7	cm
Depth	57.0	cm
Weight	~ 55	kg

Wooden door (for 22 mm thickness)

Thickness min..	16	mm
Thickness max.	20	mm
Width min.	592	mm
Width max.	595	mm
Height min.	620	mm
Height max.	718	mm
Weight min.	2.5	kg
Weight max.	6.5	kg
Max. stick out over lower edge of appliance door	90	mm
Height of plinth min.	93	mm

Electronic boards

Service boards	see spare part list
Serial boards:	
UB	4619 720 66621
CB	4619 720 35211

Program information

Start indicator

Alarms

Refill salt

Volume (normal program)

Water	Volume	Level
Regeneration	0.3 l	15 mm
Back rinse 3x	1.0 l	68 mm
Prewash	5.0 l	122 mm
Main wash	5.0 l	121 mm
Intermediate rinse 1	4.5 l	120 mm
Intermediate rinse 2	4.5 l	120 mm
Clear rinse	4.5 l	120 mm
Safety / overflow	8.5 l	141 mm

Measuring the level

Remove the coarse sieve, put in a measuring meter into the sump, measure the height of the water level.

Detergent max.

Pre-wash	10	cm ³
Main-wash	45	cm ³
Rinse aid	125	cm ³
6 Dosage steps	1 - 6	ml

Water softener

Saltcontainer	2	kg
Resin container	900	cm ³
Regeneration dosage	300	cm ³

Water pressure

Inlet pressure	0.3 - 10	bar
Spray pump pressure	0.4	bar

Rotations

Spray pump motor	2800	RPM
Drain pump motor	3000	RPM
Spray arm lower	20 - 40	RPM
Spray arm upper	25 - 35	RPM
Ceiling rotor	45 - 65	RPM

Flow rates / Inlet volume

Flow meter (at 0.3 bar = quantity 1.1 l/min)	208	lmp/l
Spray pump	~ 70	l/min
Drain pump	16	l/min
Pump height max.	1.1	m
Inlet valve	4.5	l/min
Spray arm lower	33	l/min
Sprayarm upper	30	l/min
Ceiling rotor	8	l/min

Technical data

Electrical data

Base data

Voltage	230	V
Frequency	50	Hz
Total power	~ 2.5	kW
Fuse	13	A

Motor

Spray pump motor

Voltage	220/230	V
Power consumption	190	W
HI	69	Ω
HA	36.2	Ω
Capacitor	4	μF

Drain pump motor

Voltage	220/ 240	V
Power consumption	30	W
Resistance	146	Ω

Heating

1 Element system

Voltage	220	V
Power consumption	2.35	kW
Resistance	18.66	Ω
Heating speed	~ 2.5	$^{\circ}C/min$
Temperature on surface	~ 115	$^{\circ}C$
Safety thermostat self reset	85	$^{\circ}C$

Water valves

Single valve at inlet hose

Voltage	220/240	V
Frequency	50/60	Hz
Resistance	3.76	k Ω

Regenerating valve

Voltage	220/240	V
Frequency	50/60	Hz
Resistance	3.13	k Ω

Coil of dispenser

Voltage	220/240	V
Frequency	50/60	Hz
Resistance	1.5	k Ω

Reedcontact

flow meter	
salt control	

NTC

20 $^{\circ}C$	58.1	k Ω
25 $^{\circ}C$	47.1	k Ω
30 $^{\circ}C$	38.2	k Ω
40 $^{\circ}C$	25.4	k Ω
50 $^{\circ}C$	17.2	k Ω
60 $^{\circ}C$	11.8	k Ω
70 $^{\circ}C$	8.3	k Ω
80 $^{\circ}C$	6	k Ω
85 $^{\circ}C$	4	k Ω

Regeneration

Volume	300	cm ³
after wash cycles	10-60	
water hardness	0-60	$^{\circ}dh$
	0-10.7	mmol/l
	0-107	$^{\circ}Fh$

Salt consumption for regeneration	77	g
-----------------------------------	----	---

Number of cycles with 2 kg salt	26
---------------------------------	----

Accessory

If you need spare parts apart from the spare part list have a look in the Service Bulletin 4812 728 40084.

Spare part list

Model
Service No.
Version

ADG 953/S
854295338010
854295338010

Pos. No.	12NC Code	Description
003 0	4812 440 19382	Traverse
004 0	4812 440 18952	Drip tray assy
004 1	4812 401 18402	Holder
011 0	4812 505 18369	Foot long
011 1	4812 528 98002	Shaft flexible
011 2	4812 528 78032	Slide disc f.foot
011 3	4812 535 98048	Gear
011 4	4812 528 98001	Roll f.foot
022 0	4812 440 19398	Side panel left
022 1	4812 440 19397	Side panel right
022 2	4812 440 18953	Spacer
024 0	4812 440 18948	Panel, rear to 96/41
024 0	4812 440 19401	Panel, rear from 96/41
040 1	4812 417 18774	Hinge left
040 2	4812 417 18773	Hinge right
044 0	4812 492 38362	Spring f.door
047 0	4812 404 48591	Brake f.door
047 1	4812 401 18397	Band,brake
047 2	4812 404 68023	Hook
053 0	4812 440 88106	Plinth to 96/30
053 0	4812 440 88875	Plinth from 96/30
103 0	4812 440 18986	Door outer
105 0	4812 404 48611	Fastener door
105 2	4812 505 68004	Clip
105 3	4812 404 48633	Fastener
120 0	4812 440 18961	Door,inner
120 1	4812 440 18955	Batten
130 0	4812 417 58361	Tilt lock
131 0	4812 401 18416	Hook lock
175 3	4812 466 68532	Batten
191 0	4812 466 68534	Gasket door
192 0	4812 466 68467	Gasket, door lower
200 0	4812 418 18183	Container cpl.
241 0	4812 458 18273	Basket upper straight
241 1	4812 458 18324	Holder cups right white
241 3	4812 528 88068	Wheel,basket upper (set)
241 8	4812 466 68482	Spacer cap set
241 9	4812 528 88075	Wheel,basket basket upper
242 0	4812 458 18271	Basket lower cpl.
242 1	4812 528 88069	Wheel,basket lower
243 0	4812 458 18272	Basket cutlery
261 0	4819 462 38271	Rail telescope, inner
261 1	4819 404 48819	Cap rail
261 2	4812 462 78995	Cap rail ahead
263 0	4819 520 18013	Ball cage cpl.
263 1	4812 520 48001	Ball Niro 8 D
301 0	4812 453 79762	Control panel WH
322 0	4812 453 79771	Insert panel
332 5	4812 410 28556	Cap f.beater
400 0	4812 259 28654	Motor with spray pump cpl.
405 0	4812 360 18358	Spray pump
405 1	4819 515 28158	Gasket
420 0	4812 121 18132	Capacitor
421 0	4812 121 18156	Interf.filter from 96/41
430 0	4812 360 18357	Pump,draining


Pos. No.	12NC Code	Description
430 1	4812 466 68506	Shaft seal
450 0	4812 259 28655	Heating element
480 0	4812 321 28364	Cable harness set
480 1	4812 321 28371	Cable
490 0	4812 321 18026	Cable,mains 3m to 96/41
490 0	4819 321 18136	Cable,mains 2m from 96/41
490 1	4812 321 28367	Strain relief from 96/41
521 0	4812 214 78165	Control board (CB) kit
571 0	4812 281 28365	Valve inlet
575 0	4812 281 28361	Regen.valve
583 0	4812 271 28355	Switch diaphragm
612 0	4812 280 58025	Relay heating
616 0	4812 281 18047	Contact,reed salt
620 0	4812 218 38032	User board (UCB)
623 0	4812 271 38356	Microswitch
633 0	4812 271 38355	Microswitch door
680 0	4812 418 68135	Combidosage
680 1	4812 466 68495	Gasket
681 1	4812 466 68497	Gasket
681 2	4812 440 18975	Flap
682 0	4812 466 68496	Gasket
691 0	4812 282 68012	Feeler NTC
701 0	4812 530 28081	Hose, inlet 3/8Z cpl. 5m
701 0	4812 530 28082	Hose, inlet 3/8Z cpl. 3m
701 0	4819 530 28283	Hose, inlet 2m
701 1	4812 310 18302	Yoke
701 2	4822 480 50159	Sieve inlet
710 0	4812 418 68128	Monoblock
710 2	4819 310 38536	Nut threaded ring set
710 3	4819 466 69562	Gasket set
714 0	4812 462 79643	Threaded cap
714 2	4812 440 18963	Cabinet non-return flap
716 0	4812 418 68146	Reg.dosage
716 1	4812 466 68475	Gasket
716 2	4812 462 78994	Cover
721 0	4812 360 68051	Hub lower cpl.
721 1	4812 360 68047	Spray arm lower cpl.
721 2	4812 466 68491	Gasket 25x2,3B
721 3	4812 466 68489	Gasket 76x2,5
721 4	4812 440 18977	Flange
722 0	4812 360 68044	Spray arm upper
722 2	4812 360 68048	Hub upper straight cpl.
723 0	4812 360 68049	Spray arm ceiling
723 1	4812 466 68483	Gasket
723 2	4812 404 48597	Clip,fix spray arm
723 3	4812 505 18362	Screwed joint
726 0	4812 530 28786	Tube
726 1	4812 530 28787	Tube
726 2	4812 505 18358	Nut
726 3	4812 466 68512	Gasket
743 1	4812 530 28102	Hose, inlet
751 0	4812 418 18169	Water collector
751 1	4812 418 18171	Water guide
751 2	4812 440 18954	Fastener frame
751 3	4812 462 78997	Threaded cap

Spare part list

Model **ADG 953/S**
 Service No. **854295338010**
 Version **854295338010**

Pos. No.	12NC Code	Description
755 0	4812 530 28785	Bend
755 2	4812 530 48148	Tray,leak
756 0	4812 360 58099	Floater
761 0	4812 480 58061	Sieve fine
762 0	4812 480 58062	Microfilter
763 0	4812 480 58057	Sieve coarse
781 0	4812 530 28737	Hose,draining
781 1	4819 530 28286	Sleeve hose
781 2	4819 492 68405	Clip f.non-return valve
781 3	4812 281 28364	Flap non-return
783 4	4812 530 28793	Hose 10x3x230
783 5	4812 530 78027	Distributor
783 6	4812 530 28796	Hose 10x3x180+10
791 0	4812 532 68067	Gasket
791 2	4812 530 58093	Gasket
791 4	4812 466 68503	Gasket
791 5	4812 466 68504	Gasket
794 1	4819 530 58032	Gasket 20x2,5
901 0	4812 401 18191	Strap 017,8
901 1	4812 401 18396	Strap
901 2	4812 401 18401	Strap
901 5	4812 401 18406	Strap 028,6-708Z
901 6	4812 401 18408	Strap 038,1-708Z
901 8	4812 401 18393	Strap 20-32/9
902 0	4812 401 18418	Protector f.wiring
902 1	4812 466 78361	Fastener f.built-in models
902 2	4812 404 78239	Holder
904 0	4812 462 78998	Threaded cap
904 2	4812 462 79635	Cover WH 3,5x5
904 4	4812 462 79648	Threaded cap
910 1	4812 502 18019	Screw
910 2	4812 502 18363	Screw 4,0x12-H
910 3	4812 502 18364	Screw 5x20-TORX
910 4	4812 502 18365	Screw 3,5x5,5-TORX
910 5	4812 502 18367	Screw 3,5x8-TORX T15
910 6	4812 502 18369	Screw A2F M4x6
910 7	4812 502 38132	Screw DIN 965
964 1	4812 466 68511	Gasket housing upper
993 1	4812 466 78018	Foil protection
993 2	4812 404 48609	Socket wrencg foot

Exploded view

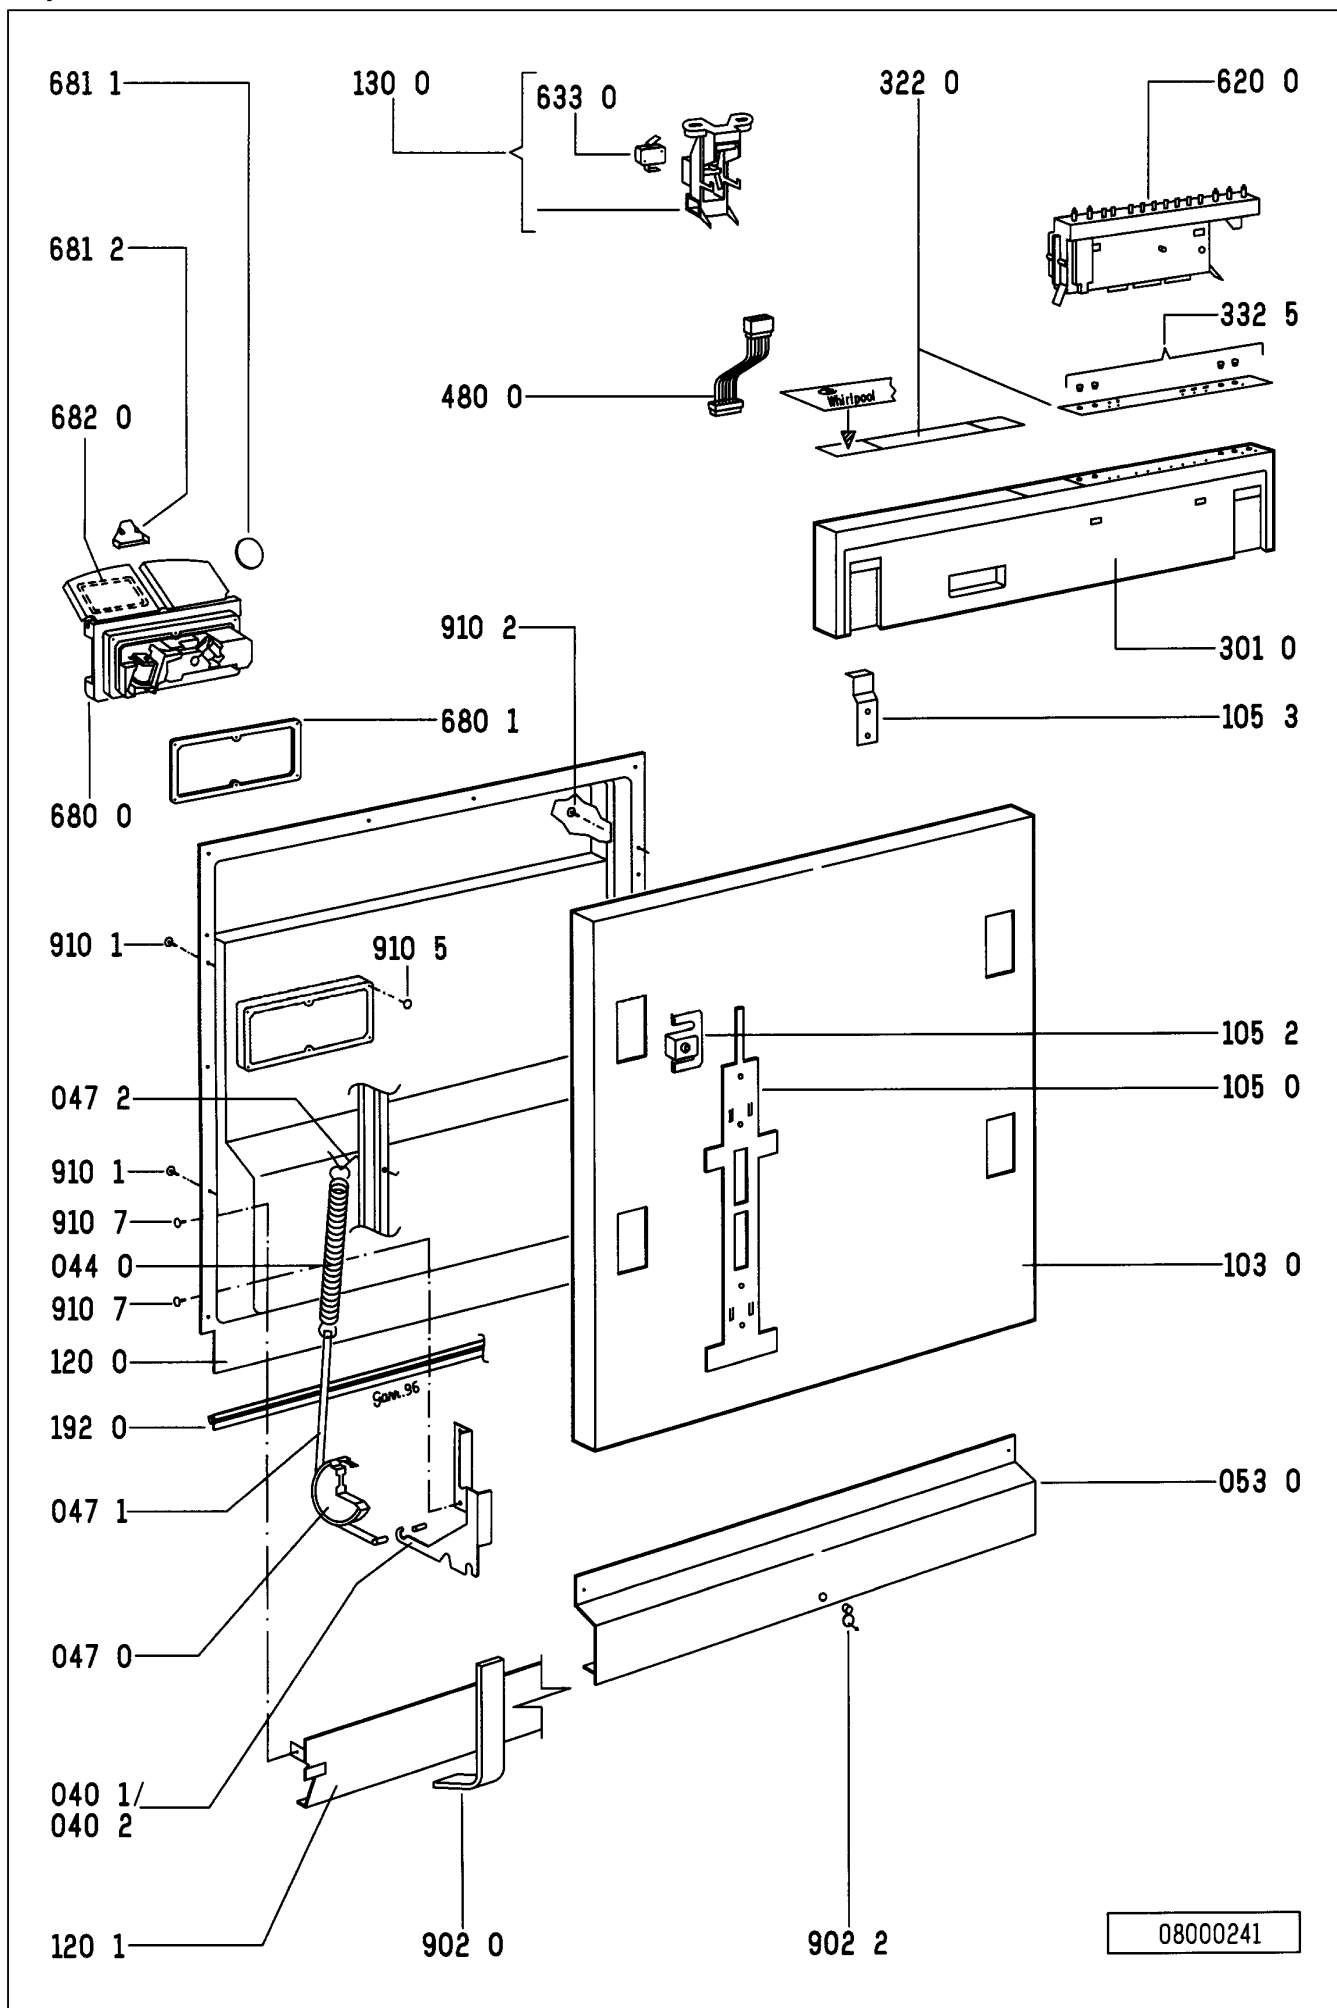

08000241

022 0
701 0
701 2

200 0 993 1 904 0 241 0 241 9 241 3 241 1


964 1 904 4 902 1 904 2 726 3 910 4 263 0 131 0 263 1 261 1 261 2 261 0 175 3 716 2 716 0 781 0 781 1 901 8 024 0 701 1 571 0 714 0 710 2 710 3 791 2 616 0 710 0 901 0 783 4 575 0 011 0 022 2 755 2 743 1 490 0 763 0 011 3 011 4 420 0 902 2 405 1 405 0 723 0 726 1 723 2 723 1 723 3 721 1 721 2 721 0 242 0 242 1 243 0 783 5 901 6 726 0 901 5 756 0 480 1 623 0 004 1 004 0 521 0

716 0 781 0 904 4 902 1 904 2 726 3 910 4 263 0 131 0 263 1 261 1 261 2 261 0 175 3 716 2 716 0 781 0 781 1 901 8 024 0 701 1 571 0 714 0 710 2 710 3 791 2 616 0 710 0 901 0 783 4 575 0 011 0 022 2 755 2 743 1 490 0 763 0 011 3 011 4 420 0 902 2 405 1 405 0 723 0 726 1 723 2 723 1 723 3 721 1 721 2 721 0 242 0 242 1 243 0 783 5 901 6 726 0 901 5 756 0 480 1 623 0 004 1 004 0 521 0

751 2 791 0 751 0 783 6 714 2 781 2 781 3 794 1 430 0 721 3 721 4 751 1 791 4 901 2 583 0 450 0 901 2 755 0 901 1 791 5 691 0 751 3

08000272

Circuit diagram

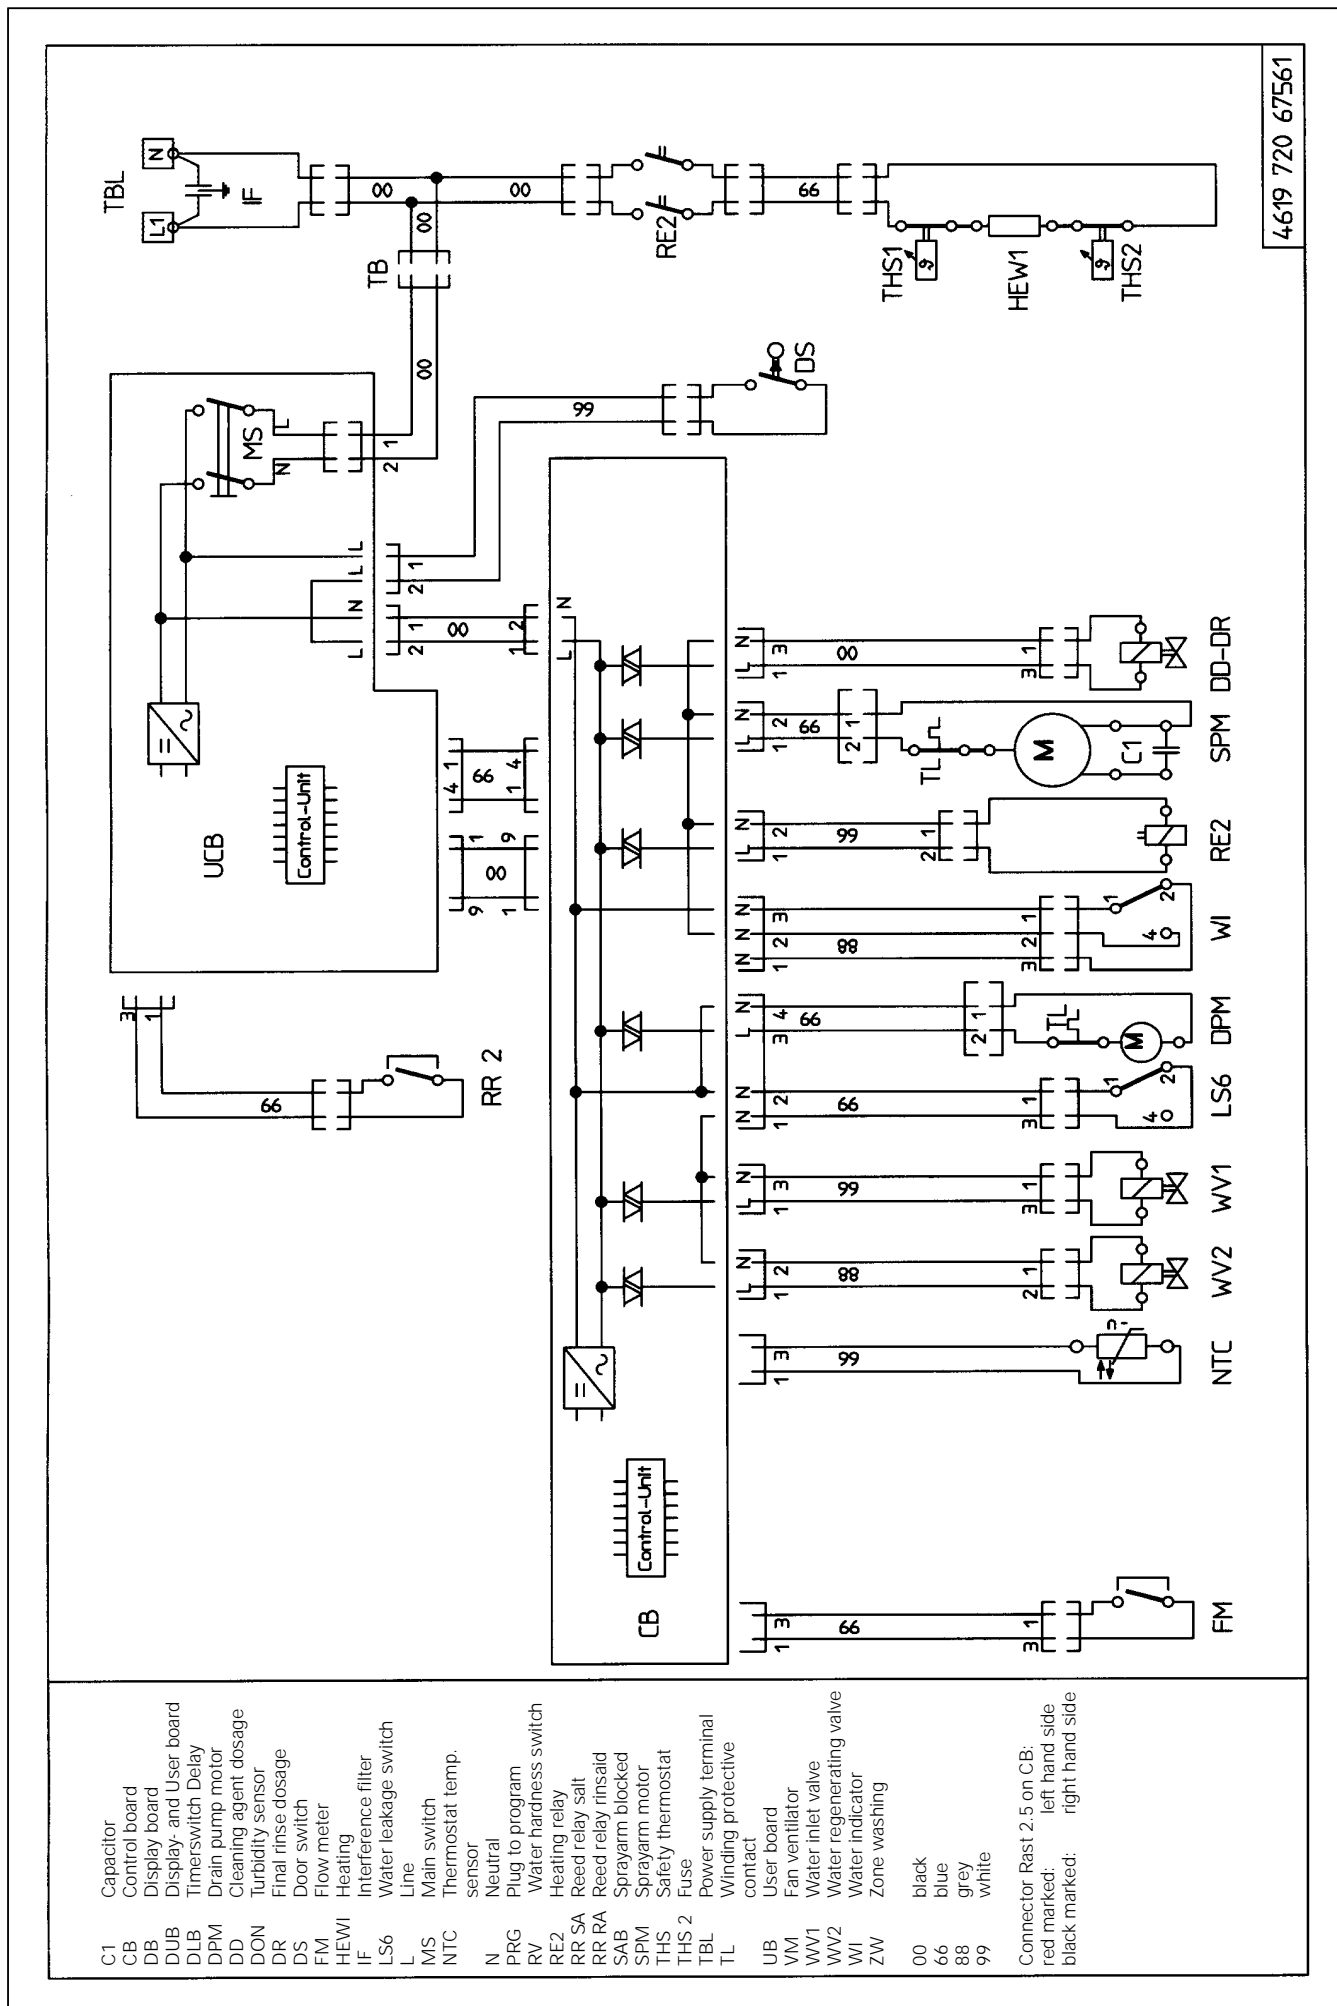

Text/Legend

Test procedure for SERVICE-TEST-PROGRAM DOLPHIN full-door dishwashers

If there is a failure on the appliance, the customer will note it by open the door and the rapidly flashing start LED.

1. Open the door. When the start LED flashes rapidly, a failure is indicated. Then finish the program by pushing the start button until the start LED goes off.

If no more failure is indicated, start service test program.
Watch the function in accordance with the functional diagram.

2. Check the component.
Unplug the indicated component from the control board and check it by using an Ohm-measure equipment.
If the ohms are not correct, check the cables to the component and check the component itself.
3. Only if there is no reaction when pushing a push button, then test with the test points.
4. At the end of the repair start the test program again to see that the failure is solved.

More details: see chapter test program for service.

Attention:

First unplug the appliance, then set the connection clamps of the volt measurement on the test points.

Danger for short circuit.

More details see chapter test point.

Short circuits on components can damage the control board.

If electronic boards are wet, do not switch the appliance on.

The failures F1 NTC break
 F2 water leakage
 F9 continuous water inlet

are checked and indicated immediately after start of the program.

Therefore these failures have to be solved before starting the test program.

When these failures are not solved, the test program does not run.

The electrical components get their voltage via triac from the control board. For testing the volume of voltage the volt meter must be parallel to the component (the component must be plugged on). If the component is plugged off, then on the plug the measured voltage is reduced.

Handling of failures

F1. NTC break

- temperature out of the normal value (-10 degr. till +85 degr. C)

Possible failures

- heating higher than +85 degr. C
- NTC defective
- dishwasher is frozen, less than -10 degr. C

Text/Legend**F2. water leakage**

- water is in the drip tray
- floater (LS6) switches off the WV1 and the electronic switches on the DPM till WI reports empty

F3. heating system defective

- too less heating speed (lower 1,5 degr. in 3 min.)
- heating (HEW) defective
- relais (RE2) defective

F4. draining failure

- drain pump starts and after 4 min. the WI detects not empty
- drain pump (DPM) defective
 - syphon closed
 - control board (CB) defective
 - water indicator (WI) defective (is switched on)

F5. spray arm blocked (leads not to stop the appliance)

- SAB sensor sends less than 10 impulses/min.
- spray arm blocked or not fixed well
 - selfcleaning microfilter blocked
 - spray pump (SPM) does not work well
 - SAB sensor defective

F6. water tap closed

- water valve (WV1) is switched on but flow meter (FM) sends no impulses (less than 10 imp. in 10 sec.) and the water indicator (WI) is at low level
- water tap closed
 - water inlet hose blocked
 - water inlet valve (WV1) defective
 - flow meter (FM) defective (leads to FM failure)

F7. flow meter failure

- water inlet valve is switched on and the water indicator (WI) is switched on high level
- flow meter (FM) sends to less impulses (less than 10 imp. in 10 sec.)
 - water tap closed
 - water inlet hose blocked
 - water inlet valve (WV1) defective
 - flow meter (FM) defective
 - water indicator (WI) is defective

Text/Legend

F8. water level failure

failure monitored during spray pump is on and the water indicator switches back more than 10 times in 2 min.

- water indicator defective
- sieve blocked
- water strongly foams
- pot has turned off and is filled with spray water
- no stable spray pump (SPM) working

F9. continuous water inlet

water inlet valve (WV1) is switched off, water indicator (WI) on,
flow meter (FM) sends impulses more than 10 imp. in 10 sec.

- water inlet valve (WV1) mechanically not closed
- triac (CB) for WV1 is closed


reaction: interval 30 sec. draining / 20 sec. tracing

For salt, rinse aid, zone wash valve, sieve valve failure see active test program.

Text/Legend

Indication of failures and alarms on appliances produced until September 1996

failure	failure no.	indication	indication within test program
NTC - break	F1	start LED flashes	start LED flashes
water leakage failure	F2	start LED flashes	start LED flashes
heating system failure	F3	start LED flashes	start LED flashes
draining failure	F4	start LED flashes	"beep" in one sec. rythm (only with door closed)
water tap closed inlet valve defect	F6	start LED flashes till tap will be opened	"beep" in one sec. rythm (only with door closed)
flow meter failure	F7	start LED flashes	"beep" in one sec. rythm (only with door closed)
water level failure	F8	start LED flashes	start LED flashes
water inlet continuously on	F9	start LED flashes	start LED flashes
salt		alarm LED on	alarm LED on
rinse agent		alarm LED on	alarm LED on

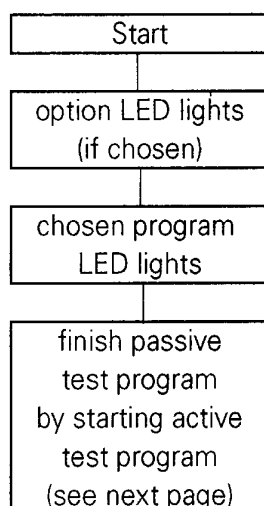Passive test program

The failures are indicated by fast flashing start LED or "beep".

Start procedure:

1. If a program is running, finish it by pushing the start button (door is opened) until the start LED goes off (more than 3 sec.).
2. Close the door, so that the program can finish. (beep!)
3. Open the door again, choose program Bio Eco 50 °C (d).
4. Switch the appliance off.
5. Push start button and hold it pushed.
6. Switch the appliance on.
7. Release the start button when start LED flashes (after approx. 5 sec.) (the start LED flashes in a slow rythm - 1,5 sec. on/0,5 sec. off). If the start LED flashes immediately in a fast rythm - 0,5 sec. on/ 0,5 sec. off, then mostly one of the failures F1, F2 or F9 occur. These failures always have to be solved before test program can be started.
8. Passive test program is ready to start: Check the LEDs by pushing the buttons.

Remark:

If a wrong program is switched on when starting the test program, this will be indicated by a twice short acoustic signal. Then start again as before.

Text/Legend


Indication of failures and alarms on appliances produced from October 1996 on

failure	failure no.	indication	indication within test program	indication within test program by using the display board
NTC - break	F1	start LED flashes	one long "beep"3 sec.	PS 1 flashes
water leakage failure	F2	start LED flashes	one long "beep"3 sec.	PS 2 flashes
heating system failure	F3	start LED flashes	one long "beep"3 sec.	PS 3 flashes
draining failure	F4	start LED flashes	"beep" in one sec. rythm (only with door closed)	PS 4 flashes
water tap closed inlet valve defect	F6	start LED flashes till tap will be opened	"beep" in one sec. rythm (only with door closed)	PS 2+PS 4 flashes
flow meter failure	F7	start LED flashes	"beep" in one sec. rythm (only with door closed)	PS 3+PS 4 flashes
water level failure	F8	start LED flashes	one long "beep"3 sec.	PS 2+PS 3 flashes
water inlet continuously on	F9	start LED flashes	one long "beep"3 sec.	PS 1+PS 3 flashes
salt		alarm LED on	alarm LED on	alarm LED on
rinse agent		alarm LED on	alarm LED on	alarm LED on

The failures are indicated by acoustic signal "beep" or program sequence LED .

Passive test program

Start procedure:

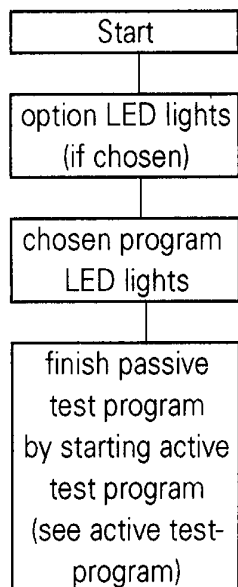

1. If a program is running, finish it by pushing the start button (door is opened) until the start LED goes off (more than 3 sec.).
2. Close the door, so that the program can finish. (beep!)
3. Open the door again, choose program Bio Eco 50 °C (d).
4. Switch the appliance off.
5. Push start button and hold it pushed.
6. Switch the appliance on.
7. Release the start button when start LED flashes (after approx. 5 sec.) (the start LED flashes in a slow rhythm - 1,5 sec. on/0,5 sec. off). If the start LED flashes immediately in a fast rhythm - 0,5 sec. on/0,5 sec. off, then mostly one of the failures F1, F2 or F9 occur. These failures always have to be solved before test program can be started.
8. Passive test program is ready to start: Check the LEDs by pushing the buttons.

**Clearer failure indication in the test program by using of a display board in addition
(see next page)**

Text/Legend

Clearer failure indication in the test program by using of a display board in addition

- A Start passive and active test program as usual.
- B When failure indication occurs (beep in 1 sec.rythm or one long beep 3 sec.):
- unplug the appliance
 - open the door
 - open the control panel and disconnect the 9-poles cable from the electronics
 - connect the 9-poles cable to the display board
 - plug in the appliance
 - close the door with opened control panel (door switch must be switched on)
- C The failure is indicated by the program sequence LEDs of the display board

Attention. The display board is not included the appliance.It can be ordered by the Spare Part Centres and used to help the Service.If there is no display board valid then the failure has to be found by following the program chart of the test program.


Display boards to use Generally can be used all kind of display boards.

as a Service help: Some order numbers: 4812 276 58036
4812 276 58037

Remark: **If a wrong program is switched on when starting the test program, this will be indicated by a twice short acoustic signal.
Then start again as before.**

Text/Legend

Active test program

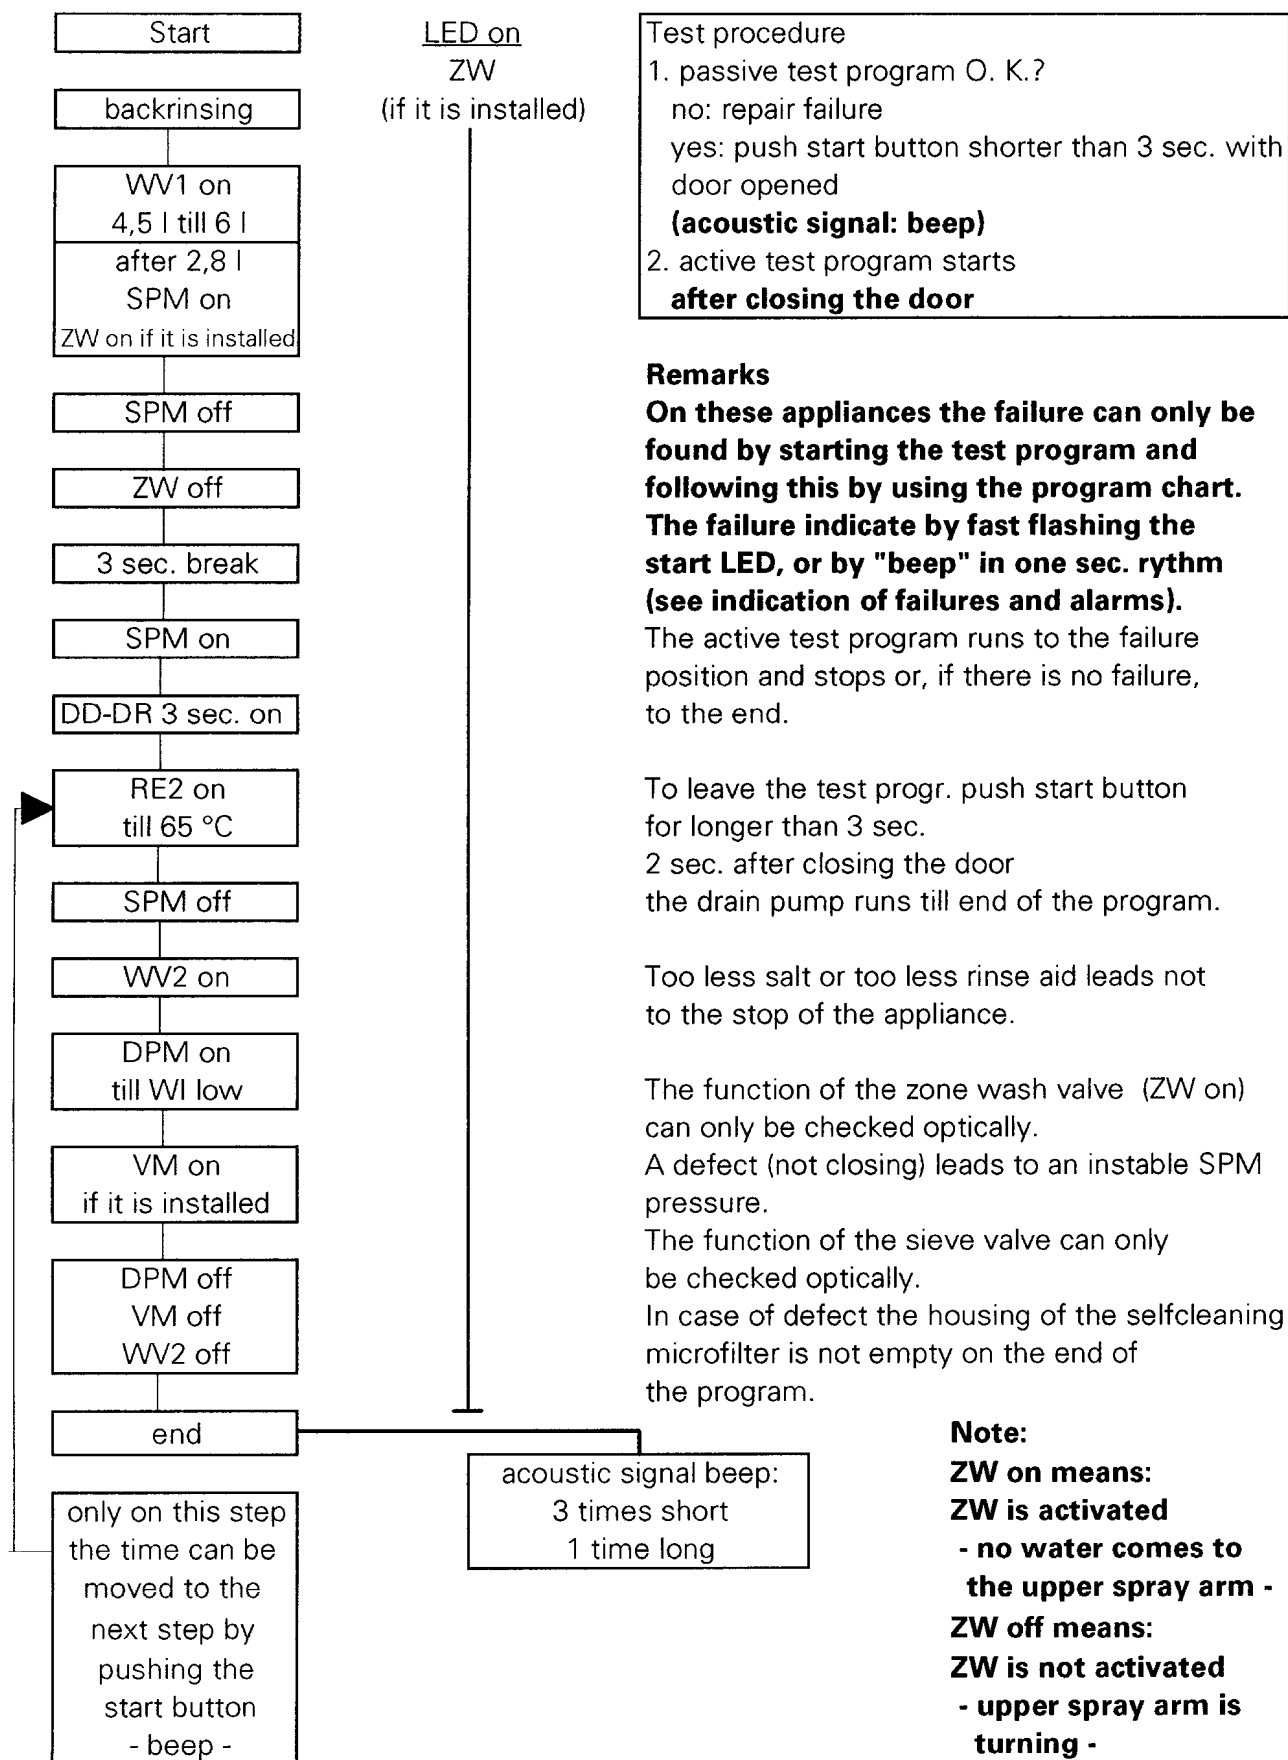

Text/Legend

			Programs						
BK	IG	WP	a	b	c	d	e	f	g
	A3	A3	X			X		X	
		A5	X			X	X	X	X
B5			X			X	X	X	X
B7			X	X	X	X	X	X	X

- a** prewash cold
- b** glass 40 degr.
- c** rapid 50 degr.
- d** bio eco 50 degr. (with prewash)
- e** daily 65 degr. (without prewash)
- f** normal 65 degr. (with prewash cold)
- g** intensive 70 degr. (with prewash 40 degr.)

After having started a program this program is locked. That means that neither by unplugging/switching off the appliance nor by setting an other program, the first program set can be changed. Changing the program is only possible by pushing the start button again for longer than 3 sec.

The last program used is always stored. That means if the customer wants to use the same program again, the on-button and the start button have to be pressed.


Text/Legend

Test points on the control board

With these test points the function of the buttons can be checked.
The test points are in the service window on the control board.
For the test fine clamps, cables and volt meter with high input resistance are necessary.

Before setting the clamps on the test points, switch off the appliance.

Test points: T0 = common line T2 = analogue value
T1 = analogue value T3 = digital signal

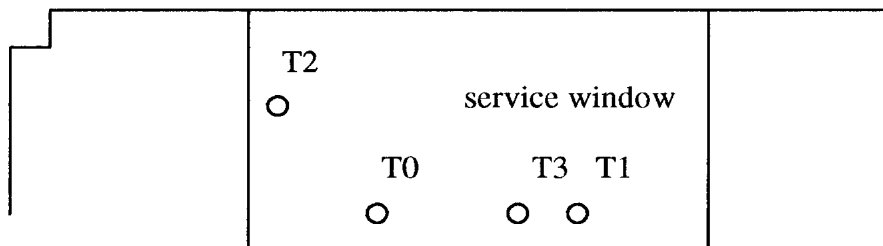

control board

When the door is opened and the appliance is switched on, then the connection between user control board and control board is interrupted and in all following tests the measured value is zero voltage.

Check: test point T0 to T1

After closing the door, the voltage is always -6 V.
It doesn't matter which button is pushed or not.
This value is also valid after program start.

Check: test point T0 to T2

	voltage	from	to
progr. a	appr. -1,54 V (DC)	user control board	control board
progr. b	appr. -2,06 V (DC)	user control board	control board
progr. c	appr. -2,57 V (DC)	user control board	control board
progr. d	appr. -3,42 V (DC)	user control board	control board
progr. e	appr. -3,96 V (DC)	user control board	control board
progr. f	appr. -4,47 V (DC)	user control board	control board
progr. g	appr. -5,00 V (DC)	user control board	control board

Test the start button

Choose a program and push the start button (start LED goes on).
Close the door:
value like the chosen program see list before.
Short time after closing the door the value decreases to 0 V (start signal) for 3 sec.
and then goes back to the voltage value before.

Check: test point T0 to T3

Communication between User-Control board and Controlboard
multiplexing appr. -3,18 V (DC)
How exact the data are depends on the measure equipment.