

# STR-K870P

## SERVICE MANUAL

Ver. 1.0 2005.02



*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model*

- STR-K870P is the tuner and the amplifier section in HT-DDW870.

Manufactured under license from Dolby Laboratories.  
“Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories.  
“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

### SPECIFICATIONS

#### AUDIO POWER SPECIFICATIONS

##### POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

(Models of area code US only)

With 6 ohm loads, both channels driven, from 120 – 20,000 Hz; rated 60 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milliwatts to rated output.

##### Amplifier section

###### Power Output<sup>1)</sup>

Models of area code US, CND

(6 ohms 1 kHz, THD 0.7%)

FRONT <sup>2)</sup> :	60 W/ch
CENTER <sup>2)</sup> :	60 W
SURR <sup>2)</sup> :	60 W/ch
SURR BACK <sup>2)</sup> :	60 W

(6 ohms 1 kHz, THD 10%)

FRONT <sup>2)</sup> :	100 W/ch
CENTER <sup>2)</sup> :	100 W
SURR <sup>2)</sup> :	100 W/ch
SURR BACK <sup>2)</sup> :	100 W

Models of area code AEP, UK, SP, E51, MX

(6 ohms 1 kHz, THD 0.7%)

FRONT <sup>2)</sup> :	60 W/ch
CENTER <sup>2)</sup> :	60 W
SURR <sup>2)</sup> :	60 W/ch
SURR BACK <sup>2)</sup> :	60 W

(6 ohms 1 kHz, THD 10%)

FRONT <sup>2)</sup> :	100 W/ch
CENTER <sup>2)</sup> :	100 W
SURR <sup>2)</sup> :	100 W/ch
SURR BACK <sup>2)</sup> :	100 W

Models of area code AUS

(6 ohms 120 Hz – 20 kHz, THD 0.09%)

FRONT <sup>2)</sup> :	50 W/ch
CENTER <sup>2)</sup> :	50 W
SURR <sup>2)</sup> :	50 W/ch
SURR BACK <sup>2)</sup> :	50 W

(6 ohms 1 kHz, THD 0.7%)

FRONT <sup>2)</sup> :	60 W/ch
CENTER <sup>2)</sup> :	60 W
SURR <sup>2)</sup> :	60 W/ch
SURR BACK <sup>2)</sup> :	60 W

(6 ohms 1 kHz, THD 10%)

FRONT <sup>2)</sup> :	100 W/ch
CENTER <sup>2)</sup> :	100 W
SURR <sup>2)</sup> :	100 W/ch
SURR BACK <sup>2)</sup> :	100 W

– Continued on next page –

## FM STEREO FM-AM RECEIVER

1) Measured under the following conditions:

Area code	Power requirements
US, CND	120 V AC, 60 Hz
MX	127 V AC, 60 Hz
AEP, UK, SP	230 V AC, 50 Hz
AUS, E51	240 V AC, 50 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

#### Inputs (Analog)

SA-CD/CD, MD/TAPE, DVD, VIDEO 1, 2, 3	Sensitivity: 800 mV Impedance: 50 k ohms
---------------------------------------	---

#### Inputs (Digital)

DVD (Coaxial)	Sensitivity: – Impedance: 75 ohms
---------------	--------------------------------------

VIDEO 2, SA-CD/CD (Optical)	Sensitivity: – Impedance: –
-----------------------------	--------------------------------

#### Outputs (Analog)

MD/TAPE (OUT), VIDEO 1 (AUDIO OUT)	Voltage: 800 mV Impedance: 10 k ohms
SUB WOOFER	Voltage: 2 V Impedance: 1 k ohm

#### Reproduction frequency range:

28 – 20,000 Hz

#### Tone

Gain levels	±6 dB, 1 dB step
-------------	------------------

#### FM tuner section

Tuning range	87.5 - 108.0 MHz
Antenna	FM wire antenna
Antenna terminals	75 ohms, unbalanced
Intermediate frequency	10.7 MHz

#### AM tuner section

##### Tuning range

Models of area code US, CND

With 10-kHz tuning scale: 530 - 1,710 kHz<sup>3)</sup>

With 9-kHz tuning scale: 531 - 1,710 kHz<sup>3)</sup>

Models of area code AEP, UK, SP, AUS

With 9-kHz tuning scale: 531 – 1,602 kHz

Models of area code E51

With 10-kHz tuning scale: 530 - 1,610 kHz<sup>3)</sup>

With 9-kHz tuning scale: 531 - 1,602 kHz<sup>3)</sup>

Models of area code MX

With 10-kHz tuning scale: 530 - 1,610 kHz

Antenna Loop antenna

Intermediate frequency 450 kHz

3) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down PRESET TUNING + or TUNING +, press I/⏪. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

#### Video section

##### Inputs/Outputs

Video: 1 Vp-p, 75 ohms

#### General

##### Power requirements

Area code	Power requirements
US, CND	120 V AC, 60 Hz
MX	127 V AC, 60 Hz
AEP, UK	230 V AC, 50/60 Hz
AUS	240 V AC, 50 Hz
SP	220 – 230 V AC, 50/60 Hz
E51	120/220/240 V AC, 50/60 Hz

##### Power consumption

Area code	Power consumption
US	170 W
CND	230 VA
AEP, UK, AUS, SP, MX, E51	190 W

##### Power consumption (during standby mode)

0.2 W

##### Dimensions (w/h/d) (Approx.)

430 × 157.5 × 310 mm  
(17 × 6 1/4 × 12 1/4 inches)  
including projecting parts  
and controls

##### Mass (Approx.)

8.0 kg (17 lb 11 oz)

#### • Abbreviation

- AUS : Australian model
- CND : Canadian model
- E51 : Chilean and Peruvian models
- MX : Mexican model
- SP : Singapore model

Design and specifications are subject to change without notice

### SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:


Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage.

Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

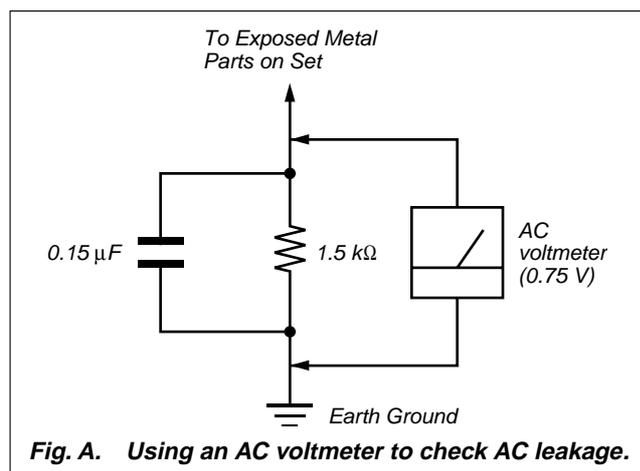

### Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

### UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)

### **LF**: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.  
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time. Soldering irons using a temperature regulator should be set to about 350 °C.  
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity  
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder  
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COM- POSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

**TABLE OF CONTENTS**

**1. GENERAL** ..... 5

**2. TEST MODE** ..... 11

**3. DIAGRAMS**

3-1. Block Diagram – MAIN Section – ..... 14

3-2. Block Diagram – DISPLAY/POWER Section – ..... 15

3-3. Printed Wiring Board – DIGITAL Board (Side A) – ..... 16

3-4. Printed Wiring Board – DIGITAL Board (Side B) – ..... 17

3-5. Schematic Diagram – DIGITAL Board (1/4) – ..... 18

3-6. Schematic Diagram – DIGITAL Board (2/4) – ..... 19

3-7. Schematic Diagram – DIGITAL Board (3/4) – ..... 20

3-8. Schematic Diagram – DIGITAL Board (4/4) – ..... 21

3-9. Printed Wiring Board – MAIN Board – ..... 22

3-10. Schematic Diagram – MAIN Board (1/3) – ..... 23

3-11. Schematic Diagram – MAIN Board (2/3) – ..... 24

3-12. Schematic Diagram – MAIN Board (3/3) – ..... 25

3-13. Printed Wiring Board – STANDBY Section – ..... 26

3-14. Printed Wiring Board – DISPLAY Section – ..... 27

3-15. Schematic Diagram – DISPLAY Section – ..... 28

3-16. Printed Wiring Board  
– SPEAKER/HEADPHONE Section – ..... 29

3-17. Schematic Diagram  
– SPEAKER/HEADPHONE Section – ..... 30

3-18. Printed Wiring Board – VIDEO IN/OUT Section – ..... 31

3-19. Schematic Diagram – VIDEO IN/OUT Section – ..... 32

**4. EXPLODED VIEWS**


4-1. Front Cabinet Section ..... 41

4-2. Chassis Section-1 ..... 42

4-3. Chassis Section-2 ..... 43

**5. ELECTRICAL PARTS LIST** ..... 44

**MODEL IDENTIFICATION  
– BACK PANEL –**

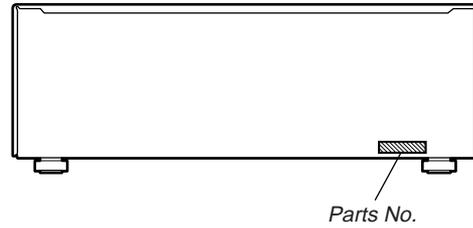

<b>Model</b>	<b>Part No.</b>
US model	2-548-259-0□
CND model	2-548-259-1□
AEP, UK models	2-548-259-3□
E51 model	2-548-259-4□
SP model	2-548-259-5□
AUS model	2-548-259-6□
MX model	2-548-259-7□

- Abbreviation
- AUS : Australian model
- CND : Canadian model
- E51 : Chilean and Peruvian models
- MX : Mexican model
- SP : Singapore model

## SECTION 1 GENERAL

This section is extracted from instruction manual.

### Main unit

#### ALPHABETICAL ORDER

##### A - H

A.F.D. (button/indicator) **12** (31, 33)  
 AM **22** (22, 23, 24, 39)  
 DIMMER **6** (27)  
 DISPLAY **5** (25, 27, 53)  
 Display **8** (28)  
 DVD **26** (22)  
 ENTER **16** (18, 39, 53)  
 FM **23** (22, 23, 24, 39)  
 FM MODE **3** (23)

##### I - O

Input buttons **21** (22, 35, 38, 39, 53)

INPUT MODE **18** (35)  
 IR (receptor) **7** (42, 53)  
 MAIN MENU **9** (18, 35, 37, 39)  
 MASTER VOLUME  $\pm$  **17** (18, 21, 22, 52)  
 MD/TAPE **25** (22)  
 MEMORY **2** (24)  
 MOVIE (button/indicator) **13** (32, 33, 52)  
 MUSIC (button/indicator) **14** (32, 33, 52)


##### P - Z

PHONES (jack) **33** (22, 52)  
 PRESET TUNING  $\pm$  **30** (24)  
 SA-CD/CD **24** (22)

SLEEP **10** (40)  
 SPEAKERS (OFF/A/B/A+B) **4** (15, 40, 52)  
 SURR BACK DECODING **15** (33)  
 TUNING  $\pm$  **31** (23)  
 VIDEO 1 **29** (22)  
 VIDEO 2 **28** (22)  
 VIDEO 3 **27** (22)  
 VIDEO 3 IN/PORTABLE AV IN (jacks) **32** (11)

#### NUMBERS AND SYMBOLS


2CH (button/indicator) **11** (30, 33, 36)  
 I/⏻ (power) **1** (18, 24, 36, 53)  
 </> **20** (18, 35, 37, 39)  
 $\pm$  **19** (18, 35, 37, 39)

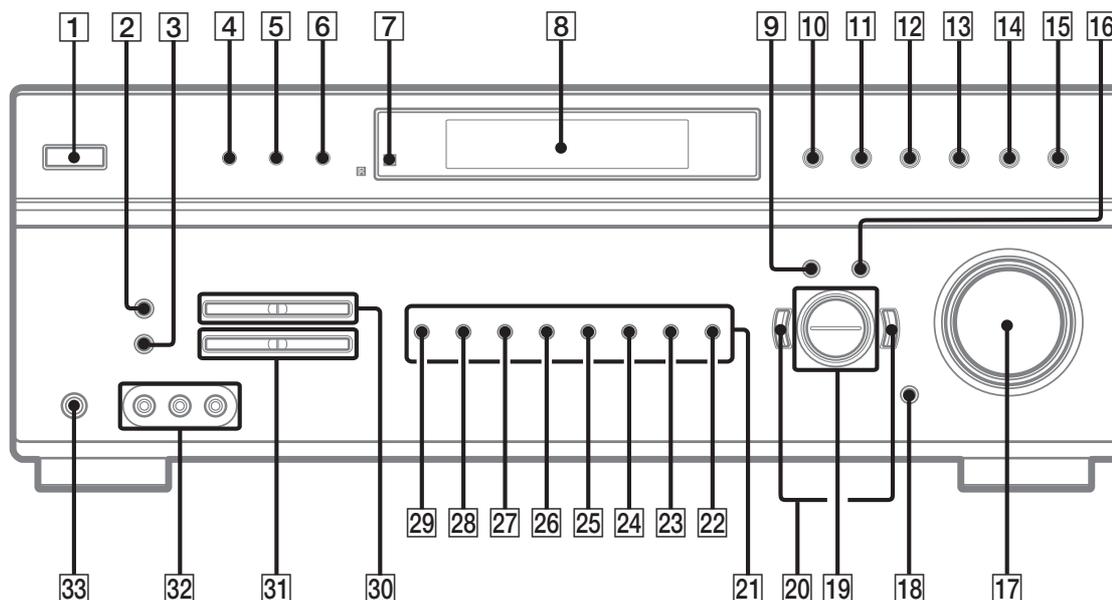

## Before you use your remote

### Inserting batteries into the remote

Insert R6 (size-AA) batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor  on the receiver.

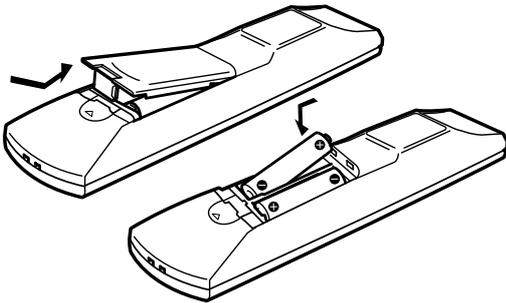


#### Tip

Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all batteries with new ones.

#### Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

## Remote button description

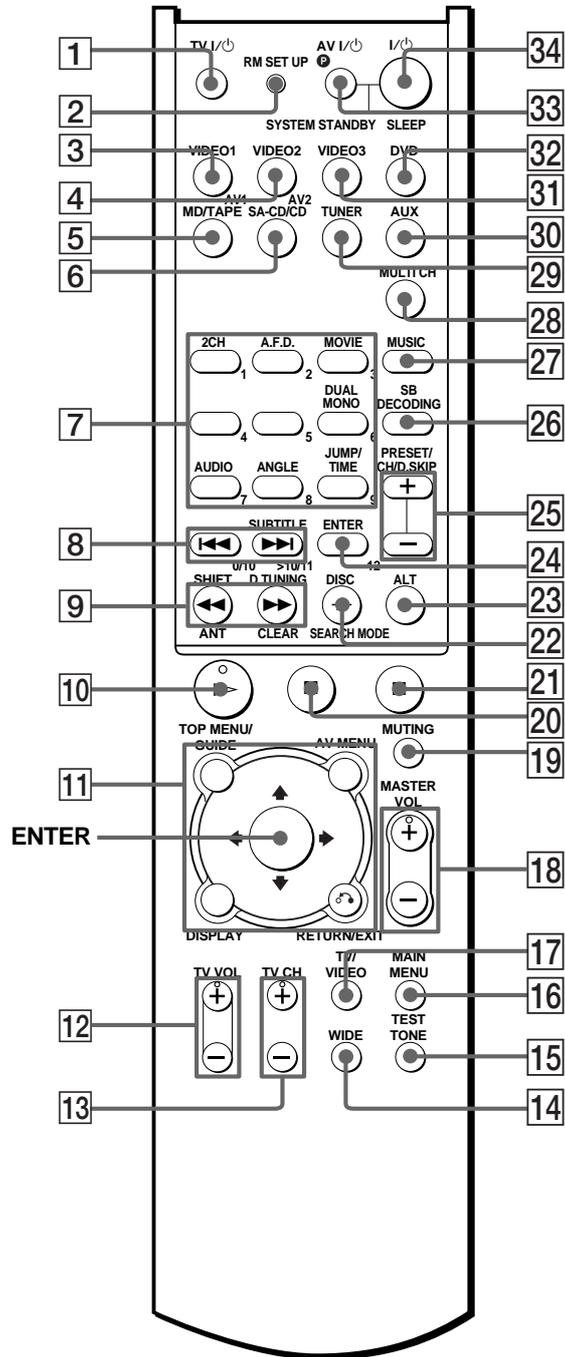

The tables below show the settings of each button.

Remote Button	Operations	Function
A.F.D. <b>7</b>	Receiver	Selects the decoding mode for audio sound.
ALT <b>23</b>	Remote	When ALT button lights up, it changes the remote key function to activate those buttons with orange printing.
ANGLE <b>7</b>	DVD player/ Blu-ray disc recorder	Selects viewing angle or changes the angles.
ANT <b>9</b>	VCR/ Satellite tuner	Selects output signal from the antenna terminal: TV signal or VCR program.
AUDIO <b>7</b>	TV/VCR/ DVD player/ Satellite tuner/ Blu-ray disc recorder/ Hard disc recorder/ PSX	Changes the sound to Multiplex, Bilingual or Multi channel TV Sound.
AUX <b>30</b>	Receiver	To listen to an audio equipment.
AV MENU <b>11</b>	VCR/ Satellite tuner/ DVD player/ Blu-ray disc recorder/ Hard disc recorder/ PSX	Displays menu.
AV1 <b>3</b> and AV2 <b>4</b>	Remote	Selects the command mode of the remote.
AV I/⏻ <b>33</b>	TV/VCR/ CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck/ Blu-ray disc recorder/ Hard disc recorder/ PSX/Satellite tuner	Turns the audio and video components on or off.

Remote Button	Operations	Function
CLEAR <b>9</b>	CD player/ DVD player/ Blu-ray disc recorder/ PSX/ Satellite tuner	Clears a mistake when you press the incorrect numeric buttons or returns to continuous playback etc.
DISC <b>22</b>	CD player/ VCD player	Selects a disc directly (multi-disc changer only).
DISPLAY <b>11</b>	TV/VCR/ VCD player/ LD player/ DVD player/ Receiver/ CD player/ MD deck/ Blu-ray disc recorder/ Hard disc recorder/ PSX/Satellite tuner	Selects information displayed on the TV screen.
D.TUNING <b>9</b>	Receiver	Enters direct tuning mode.
DUAL MONO <b>7</b>	Receiver	Selects the language you want during digital broadcast.
DVD <b>32</b>	Receiver	To watch DVD.
ENTER <b>24</b>	TV/VCR/ Satellite tuner/ LD player/ MD deck/ DAT deck/ Tape deck/ Blu-ray disc recorder/ Hard disc recorder/ PSX	After selecting a channel, disc or track using the numeric buttons, press to enter the value.
ENTER <b>11</b>	Receiver/ VCR/ Satellite tuner/ DVD player	Enters the selection.
JUMP/TIME <b>7</b>	Satellite tuner/ TV/ Blu-ray disc recorder	Toggles between the previous and the current channels.
	CD player/ MD deck/ VCD player/ DVD player	Shows the time or displays the playing time of disc, etc.
MAIN MENU <b>16</b>	Receiver	Selects the menu of the receiver.

Remote Button	Operations	Function
MASTER VOL +/- <b>18</b>	Receiver	Adjusts the master volume of the receiver.
MD/TAPE <b>5</b>	Receiver	To listen to Minidisc or audio tape.
MOVIE <b>7</b>	Receiver	Selects the pre-programmed sound fields for movie.
MULTI CH <b>28</b>	Receiver	Selects MULTI CH IN source.
MUSIC <b>27</b>	Receiver	Selects the pre-programmed sound fields for music.
MUTING <b>19</b>	Receiver	Mutes the sound from the receiver.
PRESET/CH/	Receiver	Selects preset stations.
D.SKIP +/- <b>25</b>	TV/VCR/ Satellite tuner/ Blu-ray disc recorder/Hard disc recorder	Selects preset channels.
	CD player/ VCD player/ DVD player/ MD deck/ LD player	Skips discs (multi-disc changer only).
RETURN/EXIT <b>11</b>	VCD player/ LD player/ DVD player	Returns to the previous menu.
	Satellite tuner	Exits the menu.
RM SET UP <b>2</b>	Remote	To set up the remote.
SA-CD/CD <b>6</b>	Receiver	To listen to Super Audio CD or compact disc.
SB DECODING <b>26</b>	Receiver	Selects the surround back decoding modes.
SEARCH MODE <b>22</b>	DVD player	Selects searching mode. Press to select the unit for search (track, index, etc.)
SHIFT <b>9</b>	Receiver	Selects a memory page for presetting radio stations or tuning to preset stations.

Remote Button	Operations	Function
SLEEP <b>34</b>	Receiver	Activates the sleep function and the duration which the receiver turns off automatically.
SUBTITLE <b>8</b>	DVD player	Changes the subtitles.
SYSTEM STANDBY (Press AV I/⏻ <b>33</b> and I/⏻ <b>34</b> at the same time)	Receiver/ TV/VCR/ Satellite tuner/ CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck	Turns off the receiver and other Sony audio/video components.
TEST TONE <b>15</b>	Receiver	Outputs test tone.
TOP MENU/	DVD player	Displays DVD title.
GUIDE <b>11</b>	Satellite tuner/ Blu-ray disc recorder/Hard disc recorder/ PSX	Displays guide menu.
TUNER <b>29</b>	Receiver	To listen to radio programs.
TV CH +/- <b>13</b>	TV	Selects preset TV channels.
TV/VIDEO <b>17</b>	TV	Selects input signal: TV input or video input.
TV VOL +/- <b>12</b>	TV	Adjusts the volume of the TV.
TV I/⏻ <b>1</b>	TV	Turns the TV on or off.
VIDEO1 <b>3</b>	Receiver	To watch VCR. (VTR mode 3)
VIDEO2 <b>4</b>	Receiver	To watch VCR. (VTR mode 1)
VIDEO3 <b>31</b>	Receiver	To watch VCR. (VTR mode 2)
WIDE <b>14</b>	TV	Selects the wide picture mode.

Remote Button	Operations	Function
1-9  and 0/10 	Receiver	Use with SHIFT to preset radio station or tuning to preset stations and with D.TUNING for direct tuning.
	CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck/ Tape deck	Selects track numbers. 0/10 selects track 10.
	TV/VCR/ Satellite tuner/ Blu-ray disc recorder/Hard disc recorder/ PSX	Selects channel numbers.
2CH 	Receiver	Selects 2CH STEREO mode.
>10/11 	CD player/ VCD player/ LD player/ MD deck/ Tape deck/ TV/VCR/ Blu-ray disc recorder/Hard disc recorder/ PSX/Satellite tuner	Selects track numbers over 10.
-/-- 	TV/ Blu-ray disc recorder/Hard disc recorder/ PSX/Satellite tuner	Selects the channel entry mode, either one or two digit.
I/⏻ 	Receiver	Turns the receiver on or off.
 	VCR/ CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck/ Tape deck/ Blu-ray disc recorder/Hard disc recorder/ PSX	Skips tracks.

Remote Button	Operations	Function
 	CD player/ VCD player/ DVD player/ LD player/ MD deck/ Blu-ray disc recorder/Hard disc recorder/ PSX	Searches tracks in the forward or backward direction.
 	VCR/ CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck/ Tape deck/ Blu-ray disc recorder/Hard disc recorder/ PSX	Fastforwards or rewinds. Starts playback.
 	VCR/ CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck/ Tape deck/ Blu-ray disc recorder/Hard disc recorder/ PSX	Pauses playback or recording. (Also starts recording with components in recording standby.)
 	VCR/ CD player/ VCD player/ LD player/ DVD player/ MD deck/ DAT deck/ Tape deck/ Blu-ray disc recorder/Hard disc recorder/ PSX	Stops playback.

Remote Button	Operations	Function
 11	VCD player/ LD player/ DVD player/ Blu-ray disc recorder/ Hard disc recorder/ PSX/Satellite tuner	Returns to the previous menu or exits the menu.
 11	Receiver	Selects a menu item.
 11	Receiver	Adjusts or changes the setting.
 11	VCR/ DVD player/ Blu-ray disc recorder/ Hard disc recorder/ PSX/Satellite tuner	Selects a menu item.

**Notes**

- The AUX, MULTI CH and 12 buttons on the remote are not available for receiver operation.
- Some functions explained in this section may not work depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the component the above operation may not be possible or may operate differently than described.
- When you press input buttons (VIDEO1, VIDEO2, VIDEO3 or DVD), the input mode of the TV might not switch to the corresponding input mode that you want. In this case, press TV/VIDEO button to switch the input mode of the TV.
- To activate the buttons with orange printing, press ALT first before pressing the buttons.

## Selecting the command mode of the remote

Set the remote command mode using the RM SET UP button and the remote command mode buttons.

### Selecting the command mode

You can switch the command mode (AV1 and AV2) of the remote. If the command mode of the receiver and the remote is different, you cannot use the remote to operate the receiver. To change the command mode of the receiver, see page 53.

#### Press AV1 (or AV2) while holding down RM SET UP.

The indicator flashes once (twice for AV2), then the command mode switches.

### To check the command mode of the remote

Press RM SET UP. You can check the remote by the indicator.

Mode	Indicator flashes
AV1	once
AV2	twice

### To reset the remote to factory settings

#### Press I/⏻, AV I/⏻ and MASTER VOL – at the same time.

The indicator flashes 3 times, then goes off.

## SECTION 2 TEST MODE

### FACTORY PRESET MODE

- All preset contents are reset to the default setting.
- Procedure:  
While depressing the **FM MODE** and the **DISPLAY** buttons simultaneously, press the power **I/⏻** button to turn on the main power. The message "FACTORY" appears and switch off the set.  
While depressing the **FM MODE** and the **DISPLAY** buttons simultaneously, press the power **I/⏻** button again. The message "FACTORY" appears and the present contents are reset to the default values.

### AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE


- Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
- Procedure:  
Set the FUNCTION to AM. Turn off the main power.  
While depressing the **TUNING+** button or the **PRESET TUNING+** button, press the power **I/⏻** button to turn on the main power. Either the message "9 k STEP" or "10 k STEP" appears. Select the desired step.  
This mode is only for US, Canadian, Australian and E models.

### FLUORESCENT INDICATOR TUBE TEST MODE


- All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.
  - Procedure:  
While depressing the **TUNING-** and the **SPEAKERS (OFF/A/B/A+B)** buttons simultaneously, press the power **I/⏻** button to turn on the main power.
- All segments turn on.



- Press the **VIDEO 1** button, confirm display.

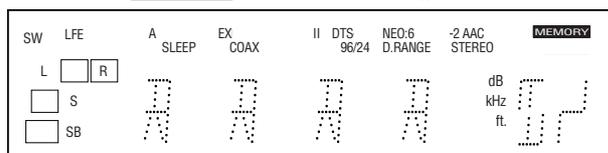

- Press the **VIDEO 1** button, confirm display

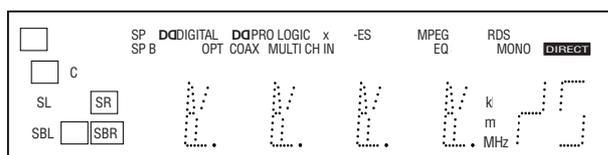

- Press the **VIDEO 1** button, All segments turn off.
- Every pressing of the **VIDEO 1** button turns on each segment one after another in the same order.  
(Not only the **VIDEO 1** button, but also the other buttons such as **VIDEO 2**, **VIDEO 3**, **DVD**, **MD/TAPE**, **SA-CD/CD**, **FM** and **AM** can be used.)

### SOUND FIELD CLEAR MODE

- The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.
- Procedure:  
While depressing the **2CH** button, press the power **I/⏻** button to turn on the main power.  
The message "SF. CLR." appears and initialization is performed.

### SOFTWARE VERSION DISPLAY MODE

- The software version is displayed.
- Procedure:  
While depressing the **TUNING-** and the **DISPLAY** buttons simultaneously, press the power **I/⏻** button to turn on the main power. The model name, destination and the software version are displayed.

### KEY CHECK MODE

- Button check
- Procedure:  
While depressing the **TUNING-** and the **MAIN MENU** buttons simultaneously, press the power **I/⏻** button to turn on the main power.  
"REST 30" appears.  
Every pressing of any button other than **I/⏻** counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed "REST 00" appears.  
When **MASTER VOLUME** is rotated in clockwise direction, "VOL MIN", "VOL 1" to "VOL 69", "VOL MAX" appear.

### AUTO BETICAL MODE

- This mode is installed in the Europe models only. When this mode is used, the receiver scans the broadcasts that can be received by the tuner, and sets up the broadcasts. Be sure to start scanning after connecting the antenna.
- Procedure:  
1. Check that the antenna is connected.  
2. Press the **I/⏻** button to turn on the power while pressing the **MEMORY** button.

### CHANGE COMMON MODE


- This mode is command mode changed to AV 1 or AV2.
- Procedure:  
While depressing the **ENTER** button, press the power **I/⏻** button to turn on the main power.  
Either the message "C.MODE.AV 1" or "C.MODE.AV 2" appears.

### SHIPMENT MODE

- All preset contents are reset to the default setting.
- Procedure:  
While depressing the **SPEAKERS (OFF/A/B/A+B)** and the **FM** buttons simultaneously, press the power **I/⏻** button to turn on the main power.  
"CLEARED" appears.

### SECTION 3 DIAGRAMS

• Circuit Boards Location

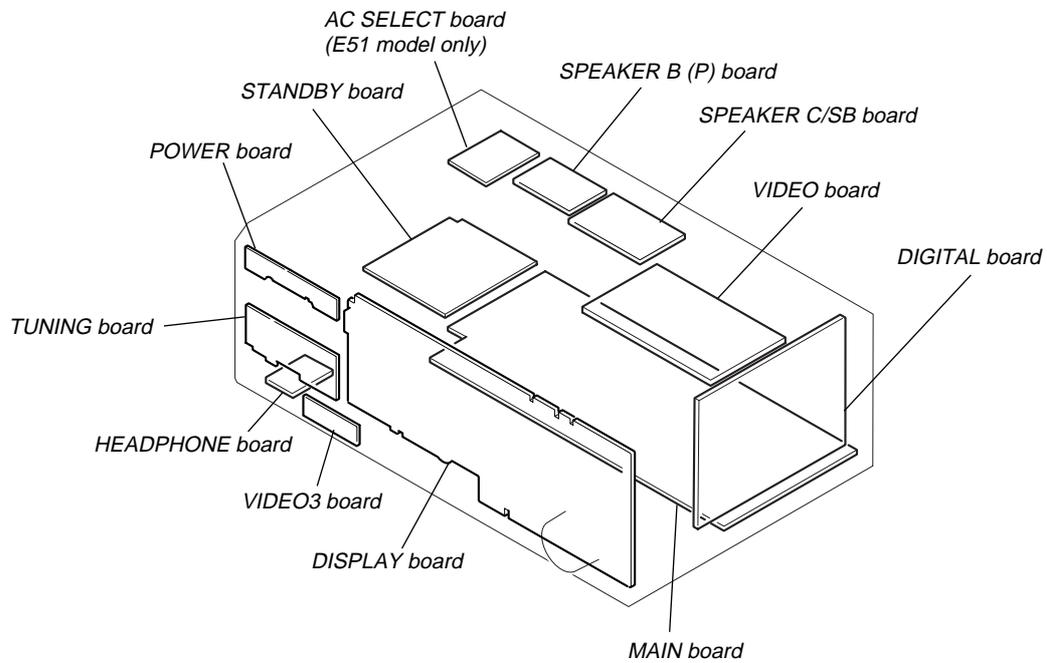

# MEMO

**THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.**  
**(In addition to this, the necessary note is printed in each block.)**

**For Schematic Diagrams.**

**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. (p: pF)  
50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $\frac{1}{4} \text{ W}$  or less unless otherwise specified.
- % : indicates tolerance.
- $\Delta$  : internal component.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.

**Note:**  
 The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
 Replace only with part number specified.


**Note:**  
 Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
 Ne les remplacer que par une pièce portant le numéro spécifié.

-  : B+ Line.
-  : B+ Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.  
No mark : FM
- Voltages are taken with a VOM (Input impedance 10 M $\Omega$ ).  
Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
  -  : FM
  -  : ANALOG
  -  : DIGITAL
  -  : VIDEO
- Abbreviation
  - AUS : Australian model
  - CND : Canadian model
  - E51 : Chilean and Peruvian models
  - MX : Mexican model
  - SP : Singapore models

**For Printed Wiring Boards.**

**Note:**




-  : parts extracted from the component side.
  -  : Through hole.
  - $\Delta$  : internal component.
  -  : Pattern from the side which enables seeing.
- Indication of transistor.

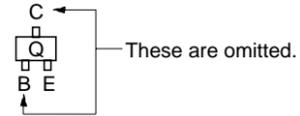


**Caution:**  
 Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.  
 Parts face side: Parts on the parts face side seen from the parts face are indicated.

• **Waveforms**


– **DIGITAL Board** –

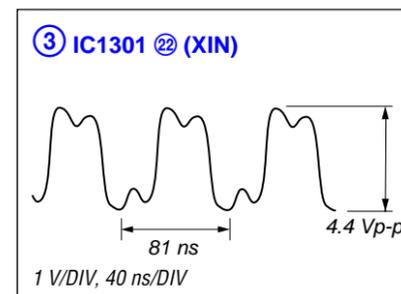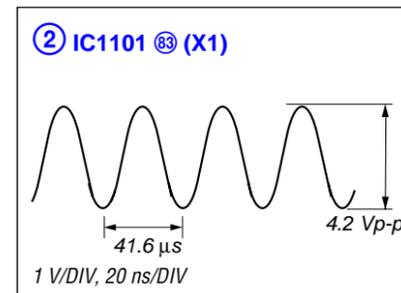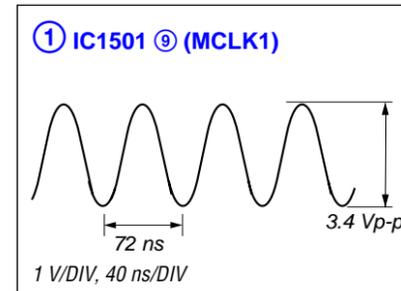

3-1. BLOCK DIAGRAM – MAIN SECTION –

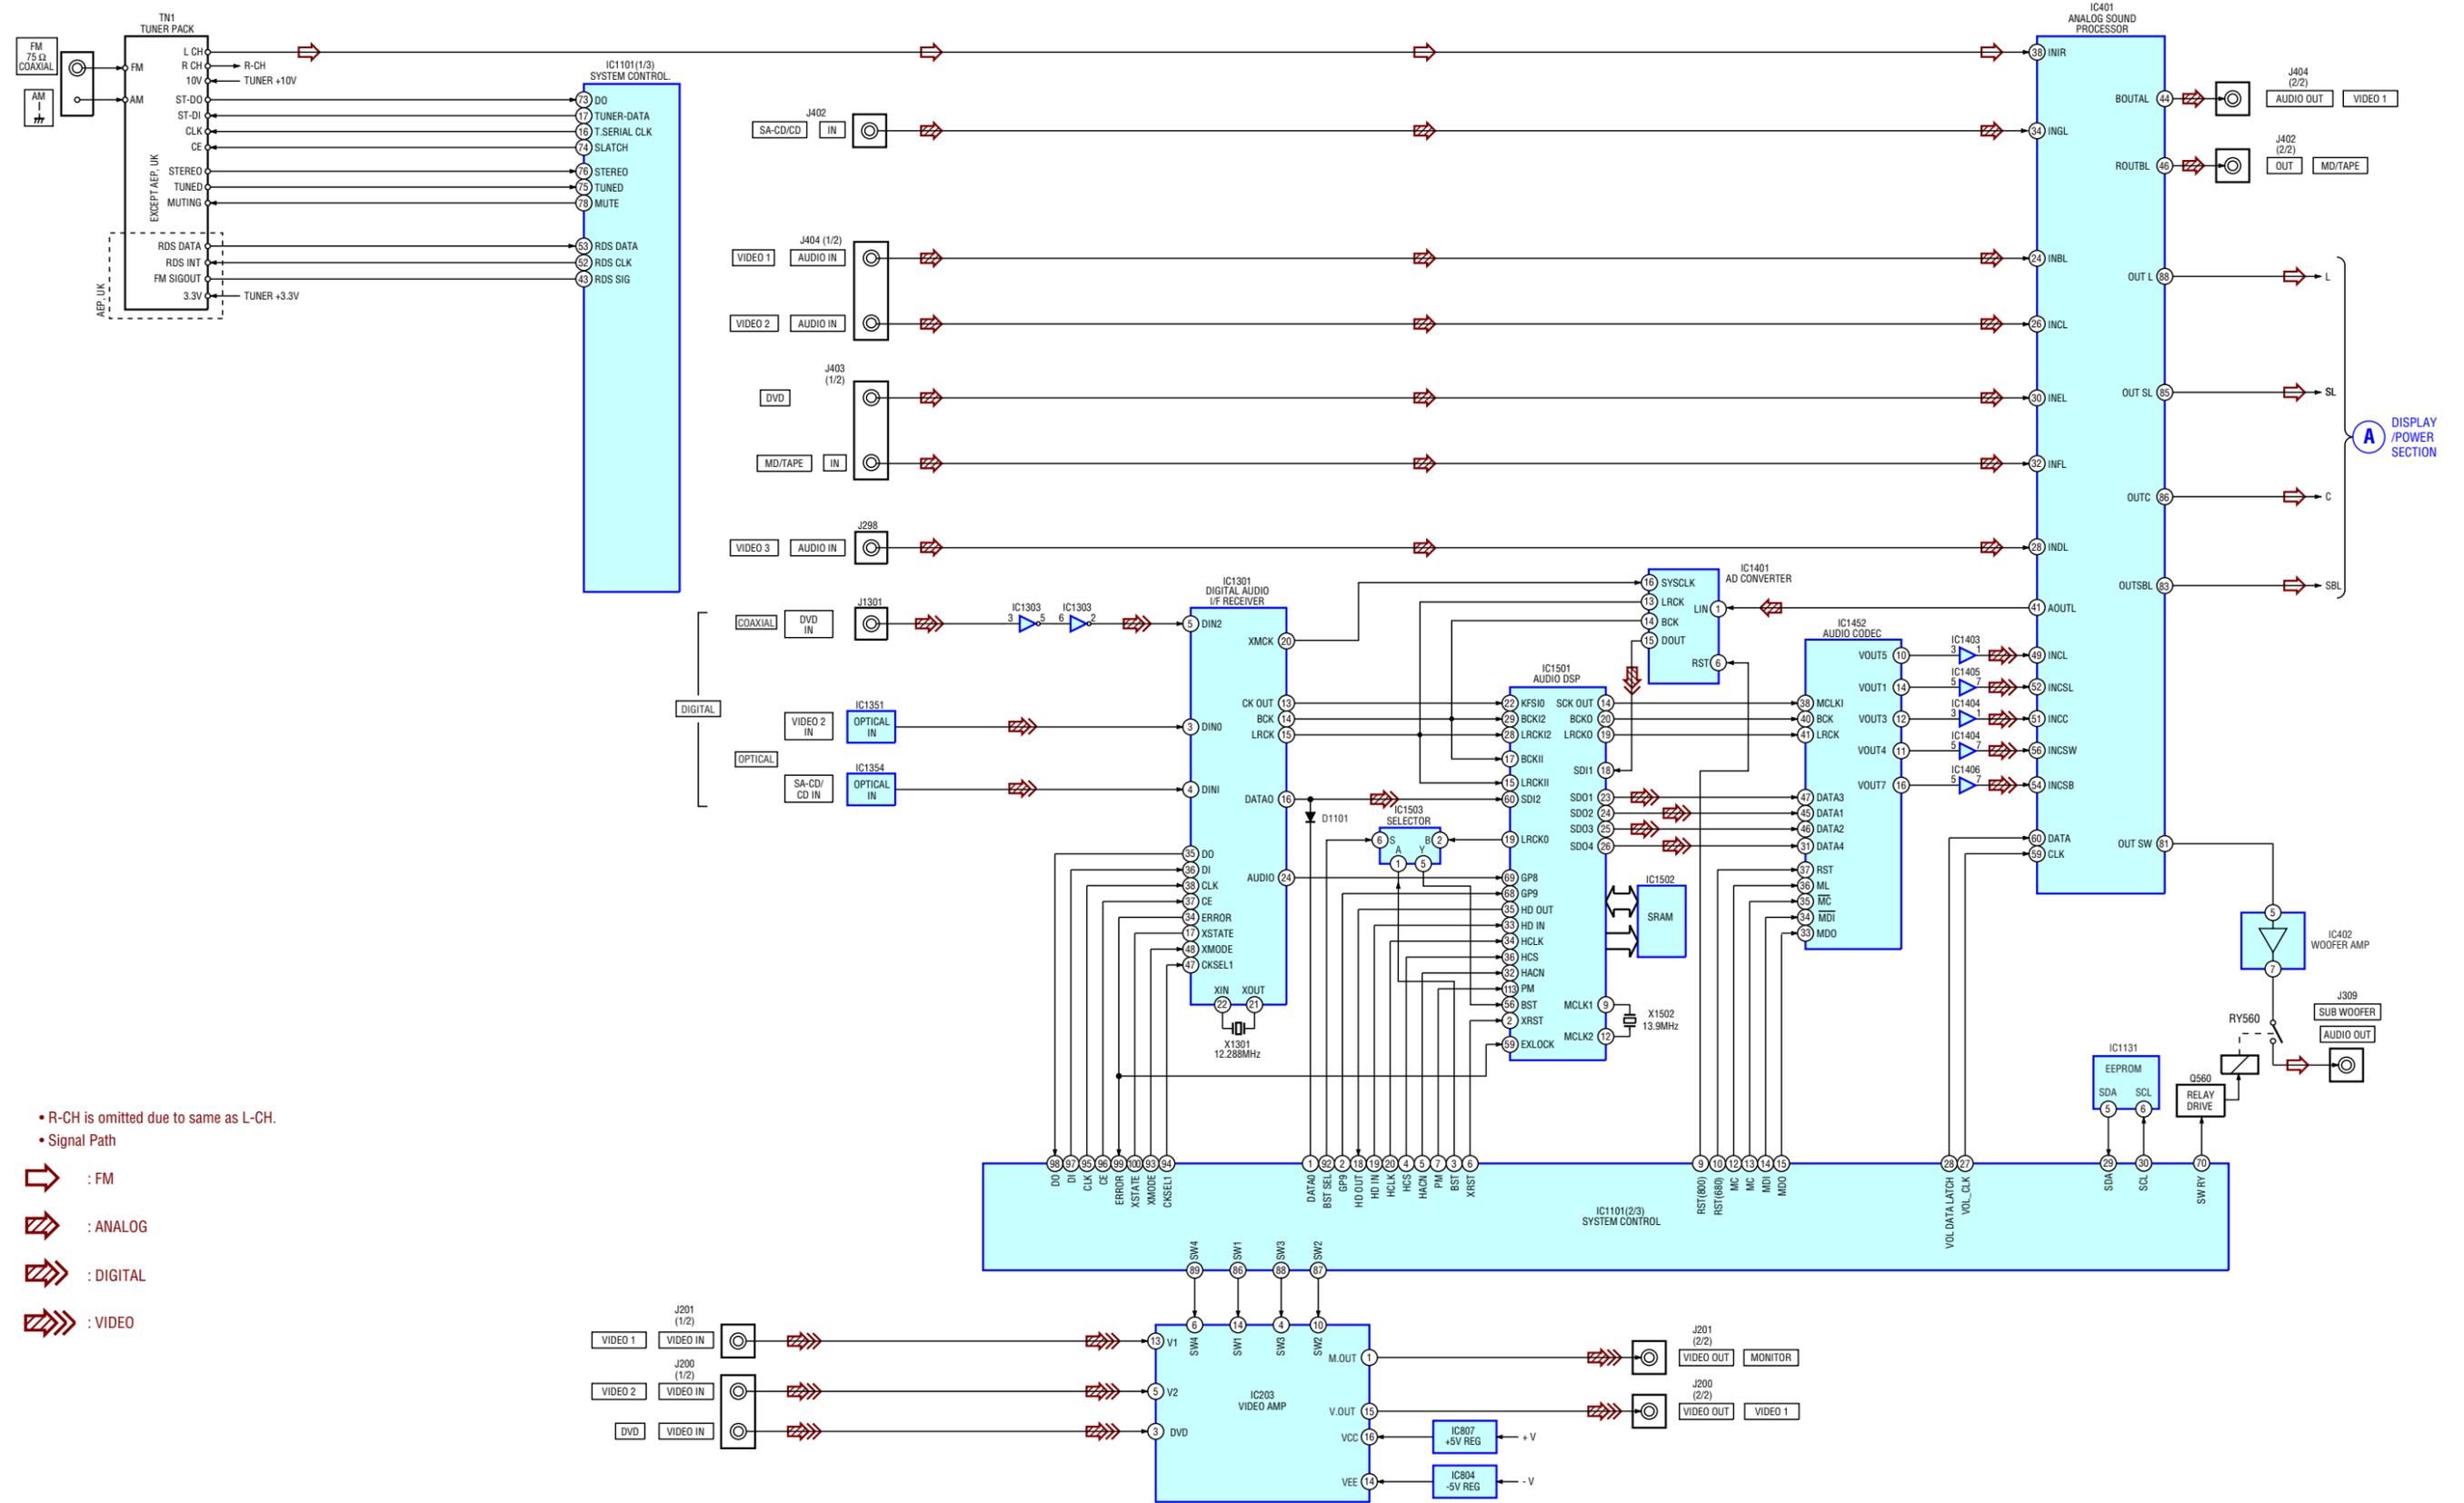


3-2. BLOCK DIAGRAM – DISPLAY/POWER SECTION –

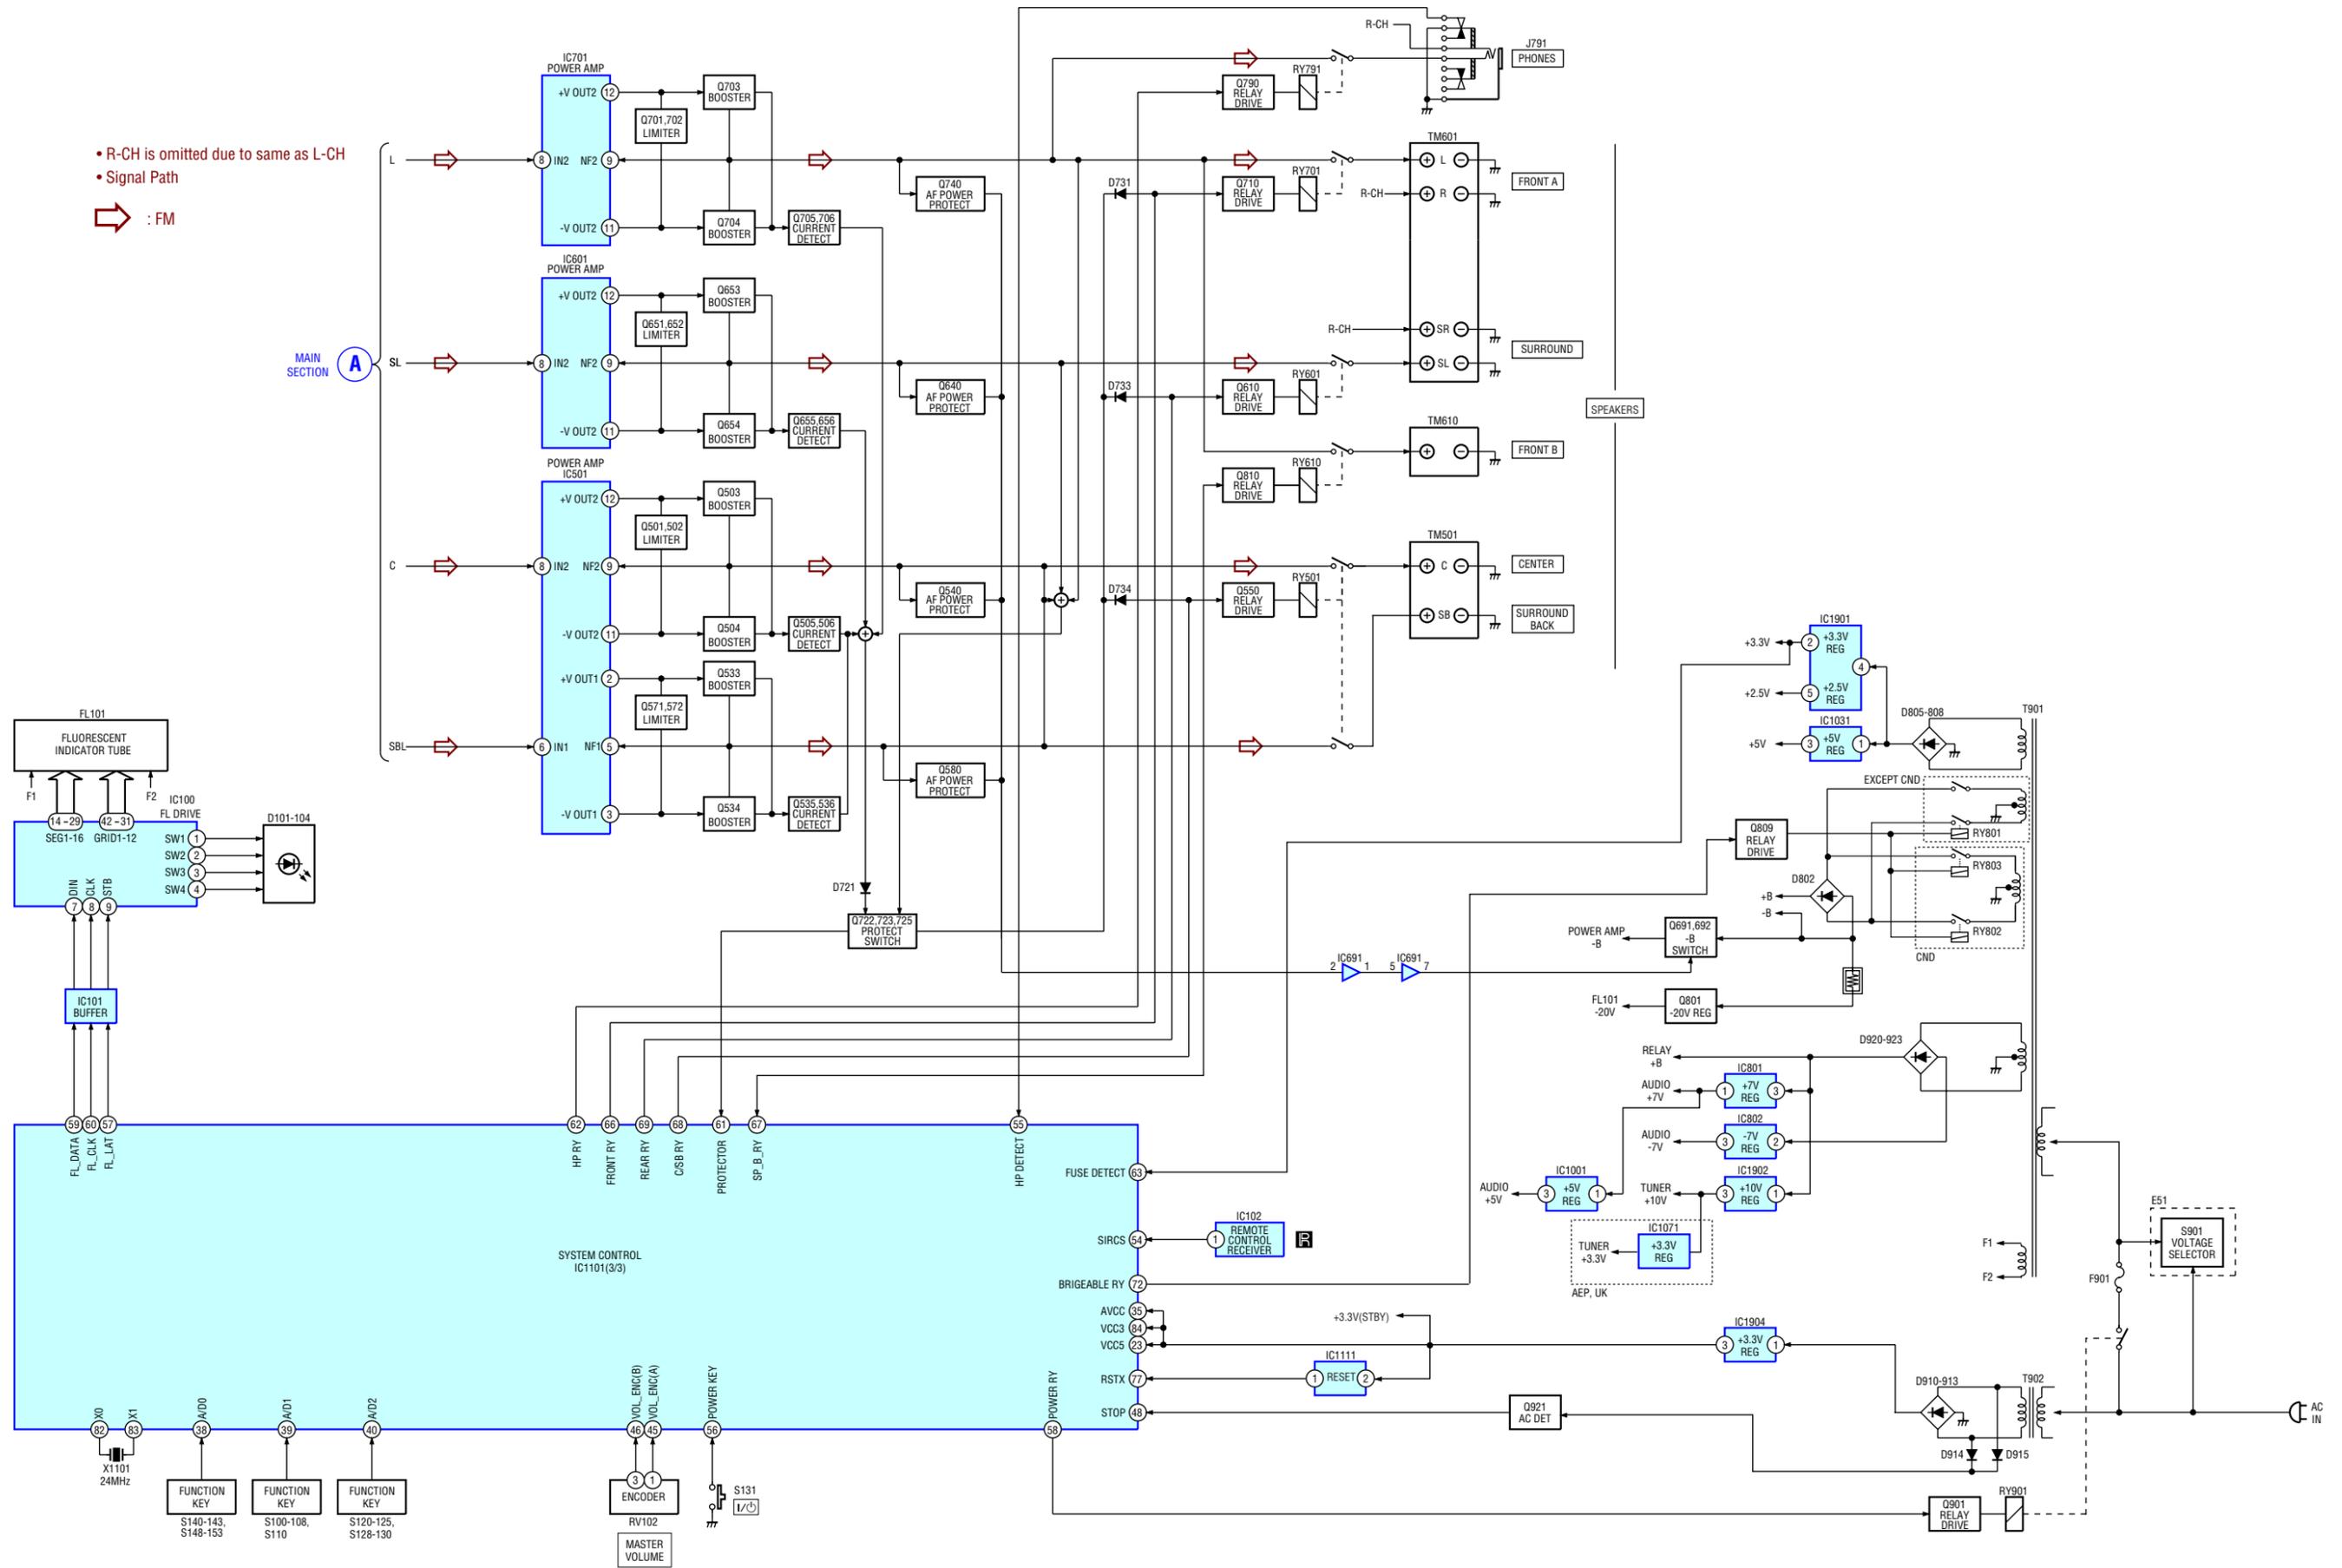




3-4. PRINTED WIRING BOARD – DIGITAL BOARD (SIDE B) – • See page 12 for Circuit Boards Location.  :Uses unleaded solder.

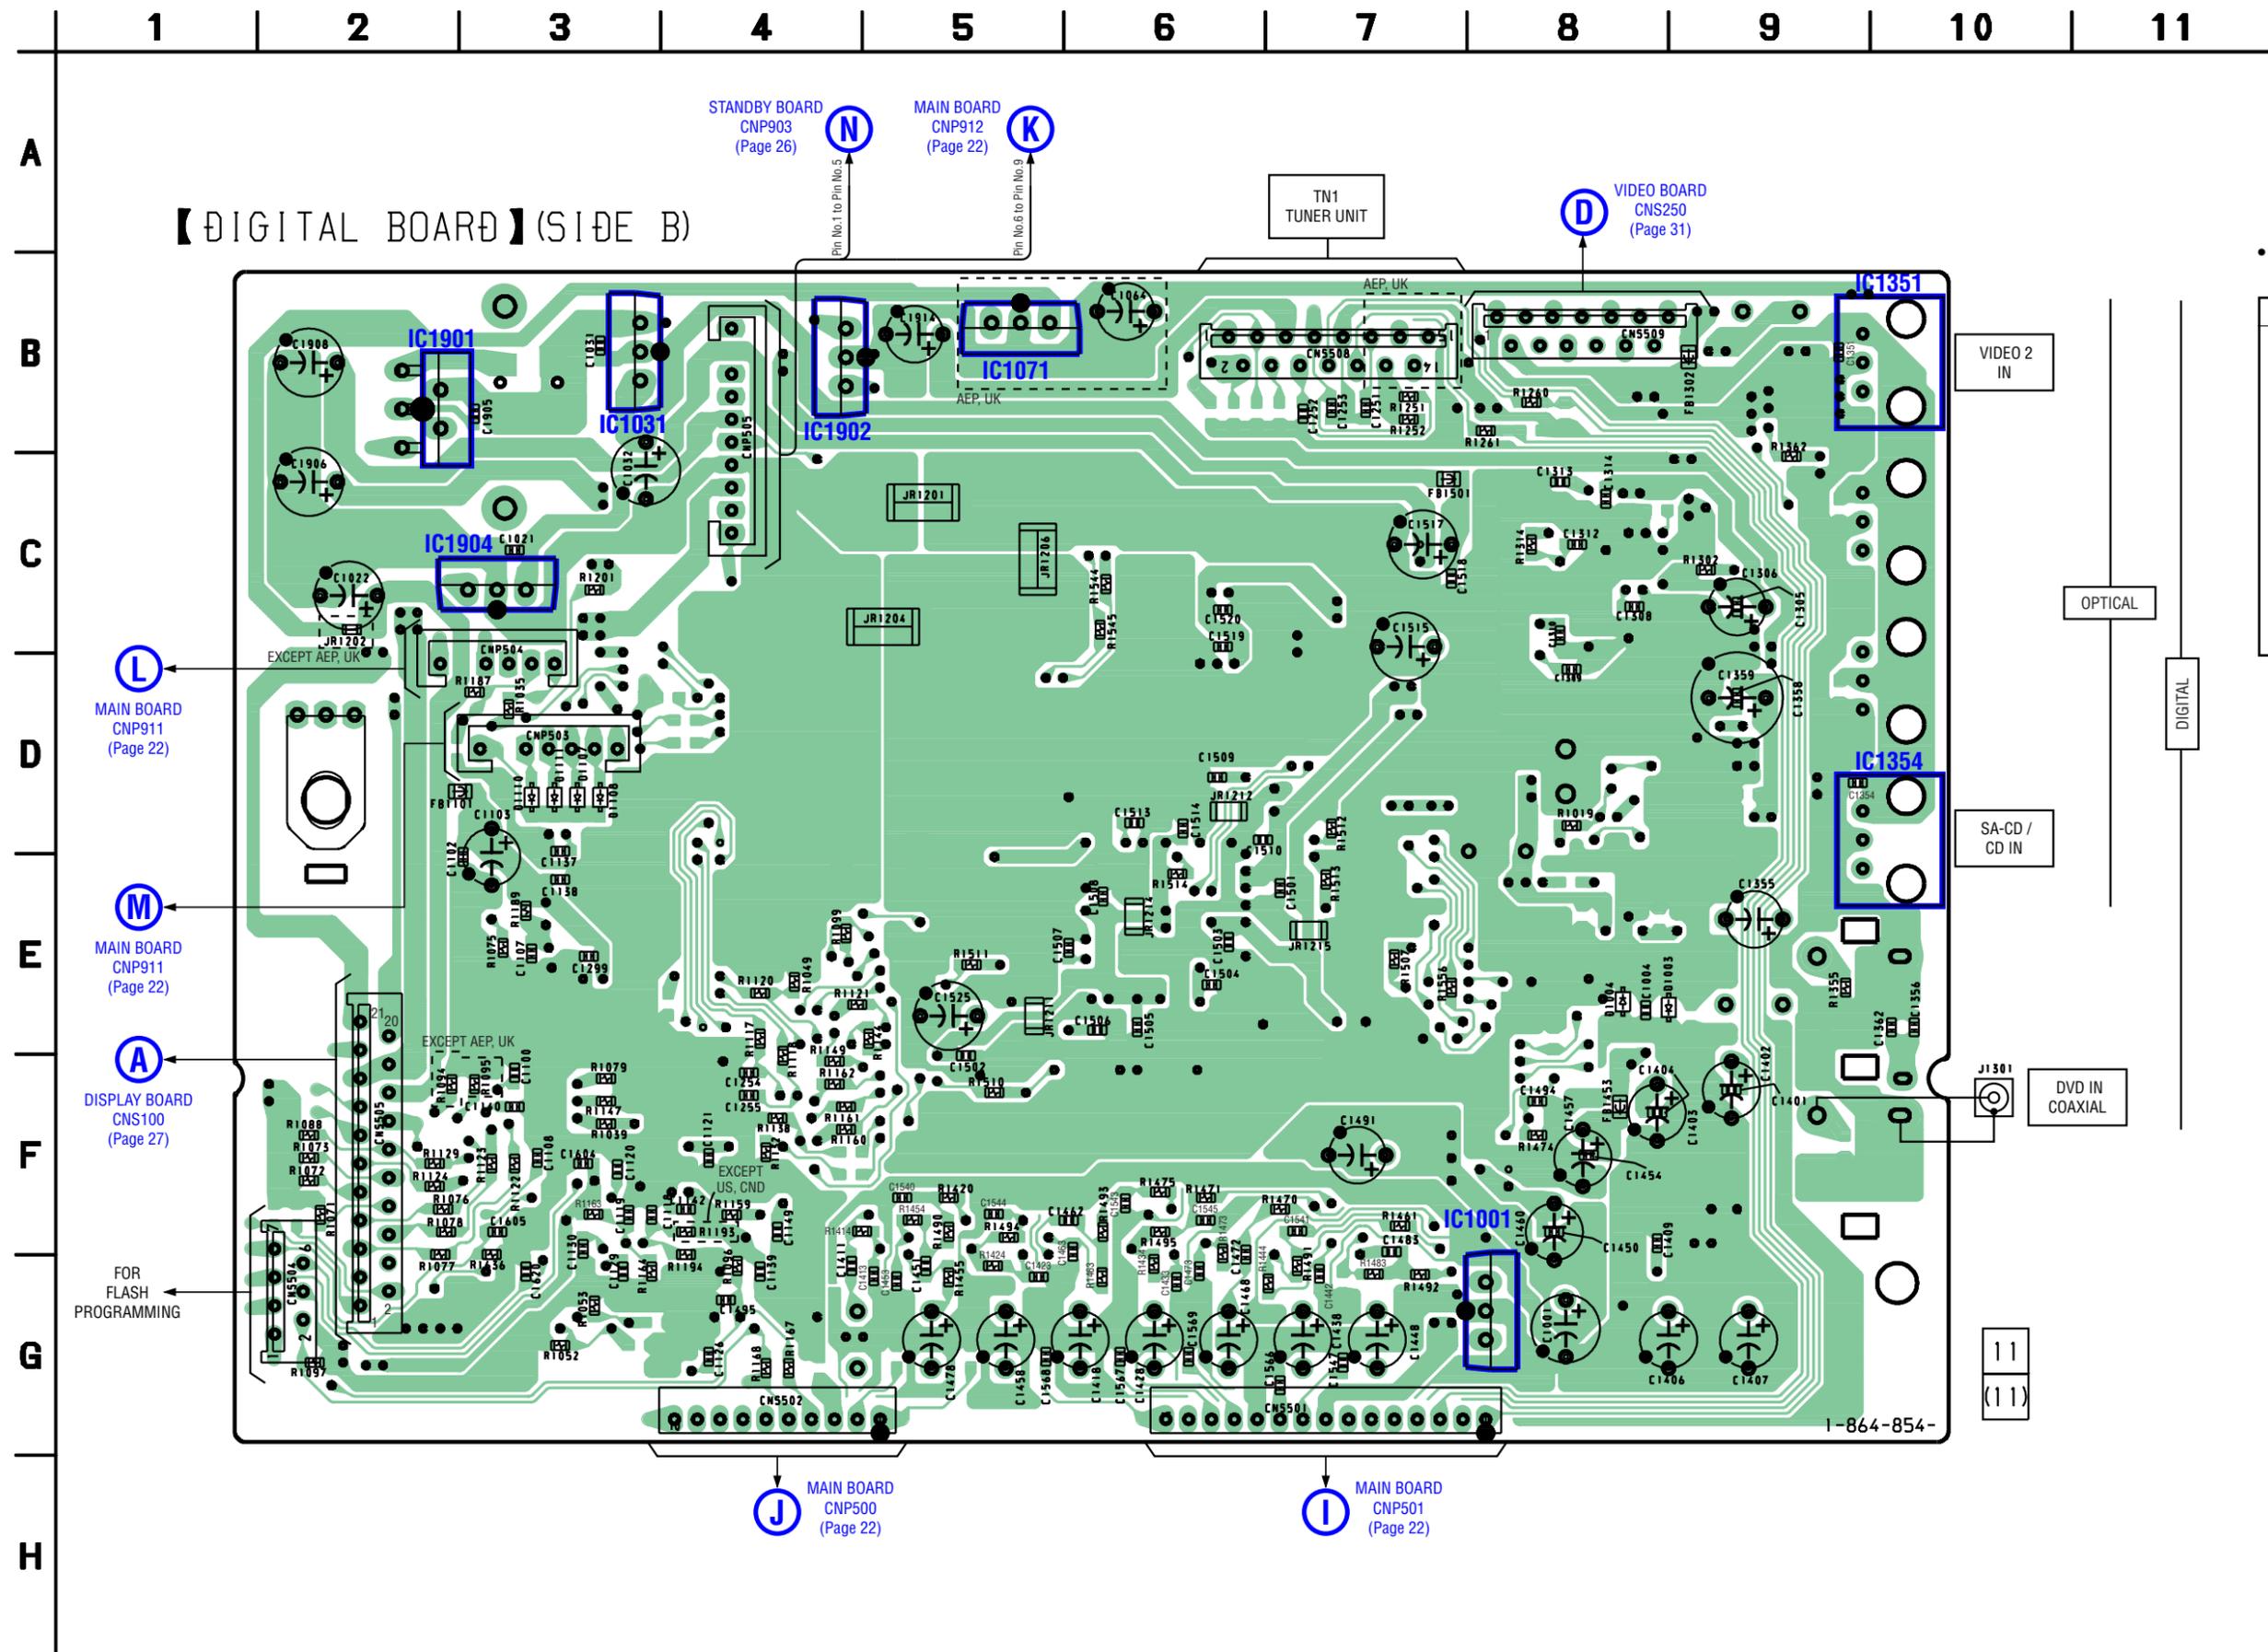


• Semiconductor Location

Ref. No.	Location
D1003	E-9
D1004	E-8
D1107	D-3
D1108	D-3
D1110	D-3
D1111	D-3
IC1001	F-8
IC1031	B-3
IC1071	B-5
IC1351	B-10
IC1354	D-10
IC1901	B-2
IC1902	B-4
IC1904	C-2


3-5. SCHEMATIC DIAGRAM – DIGITAL BOARD (1/4) – • See page 13 for Waveform. • See page 33 for IC Block Diagram.

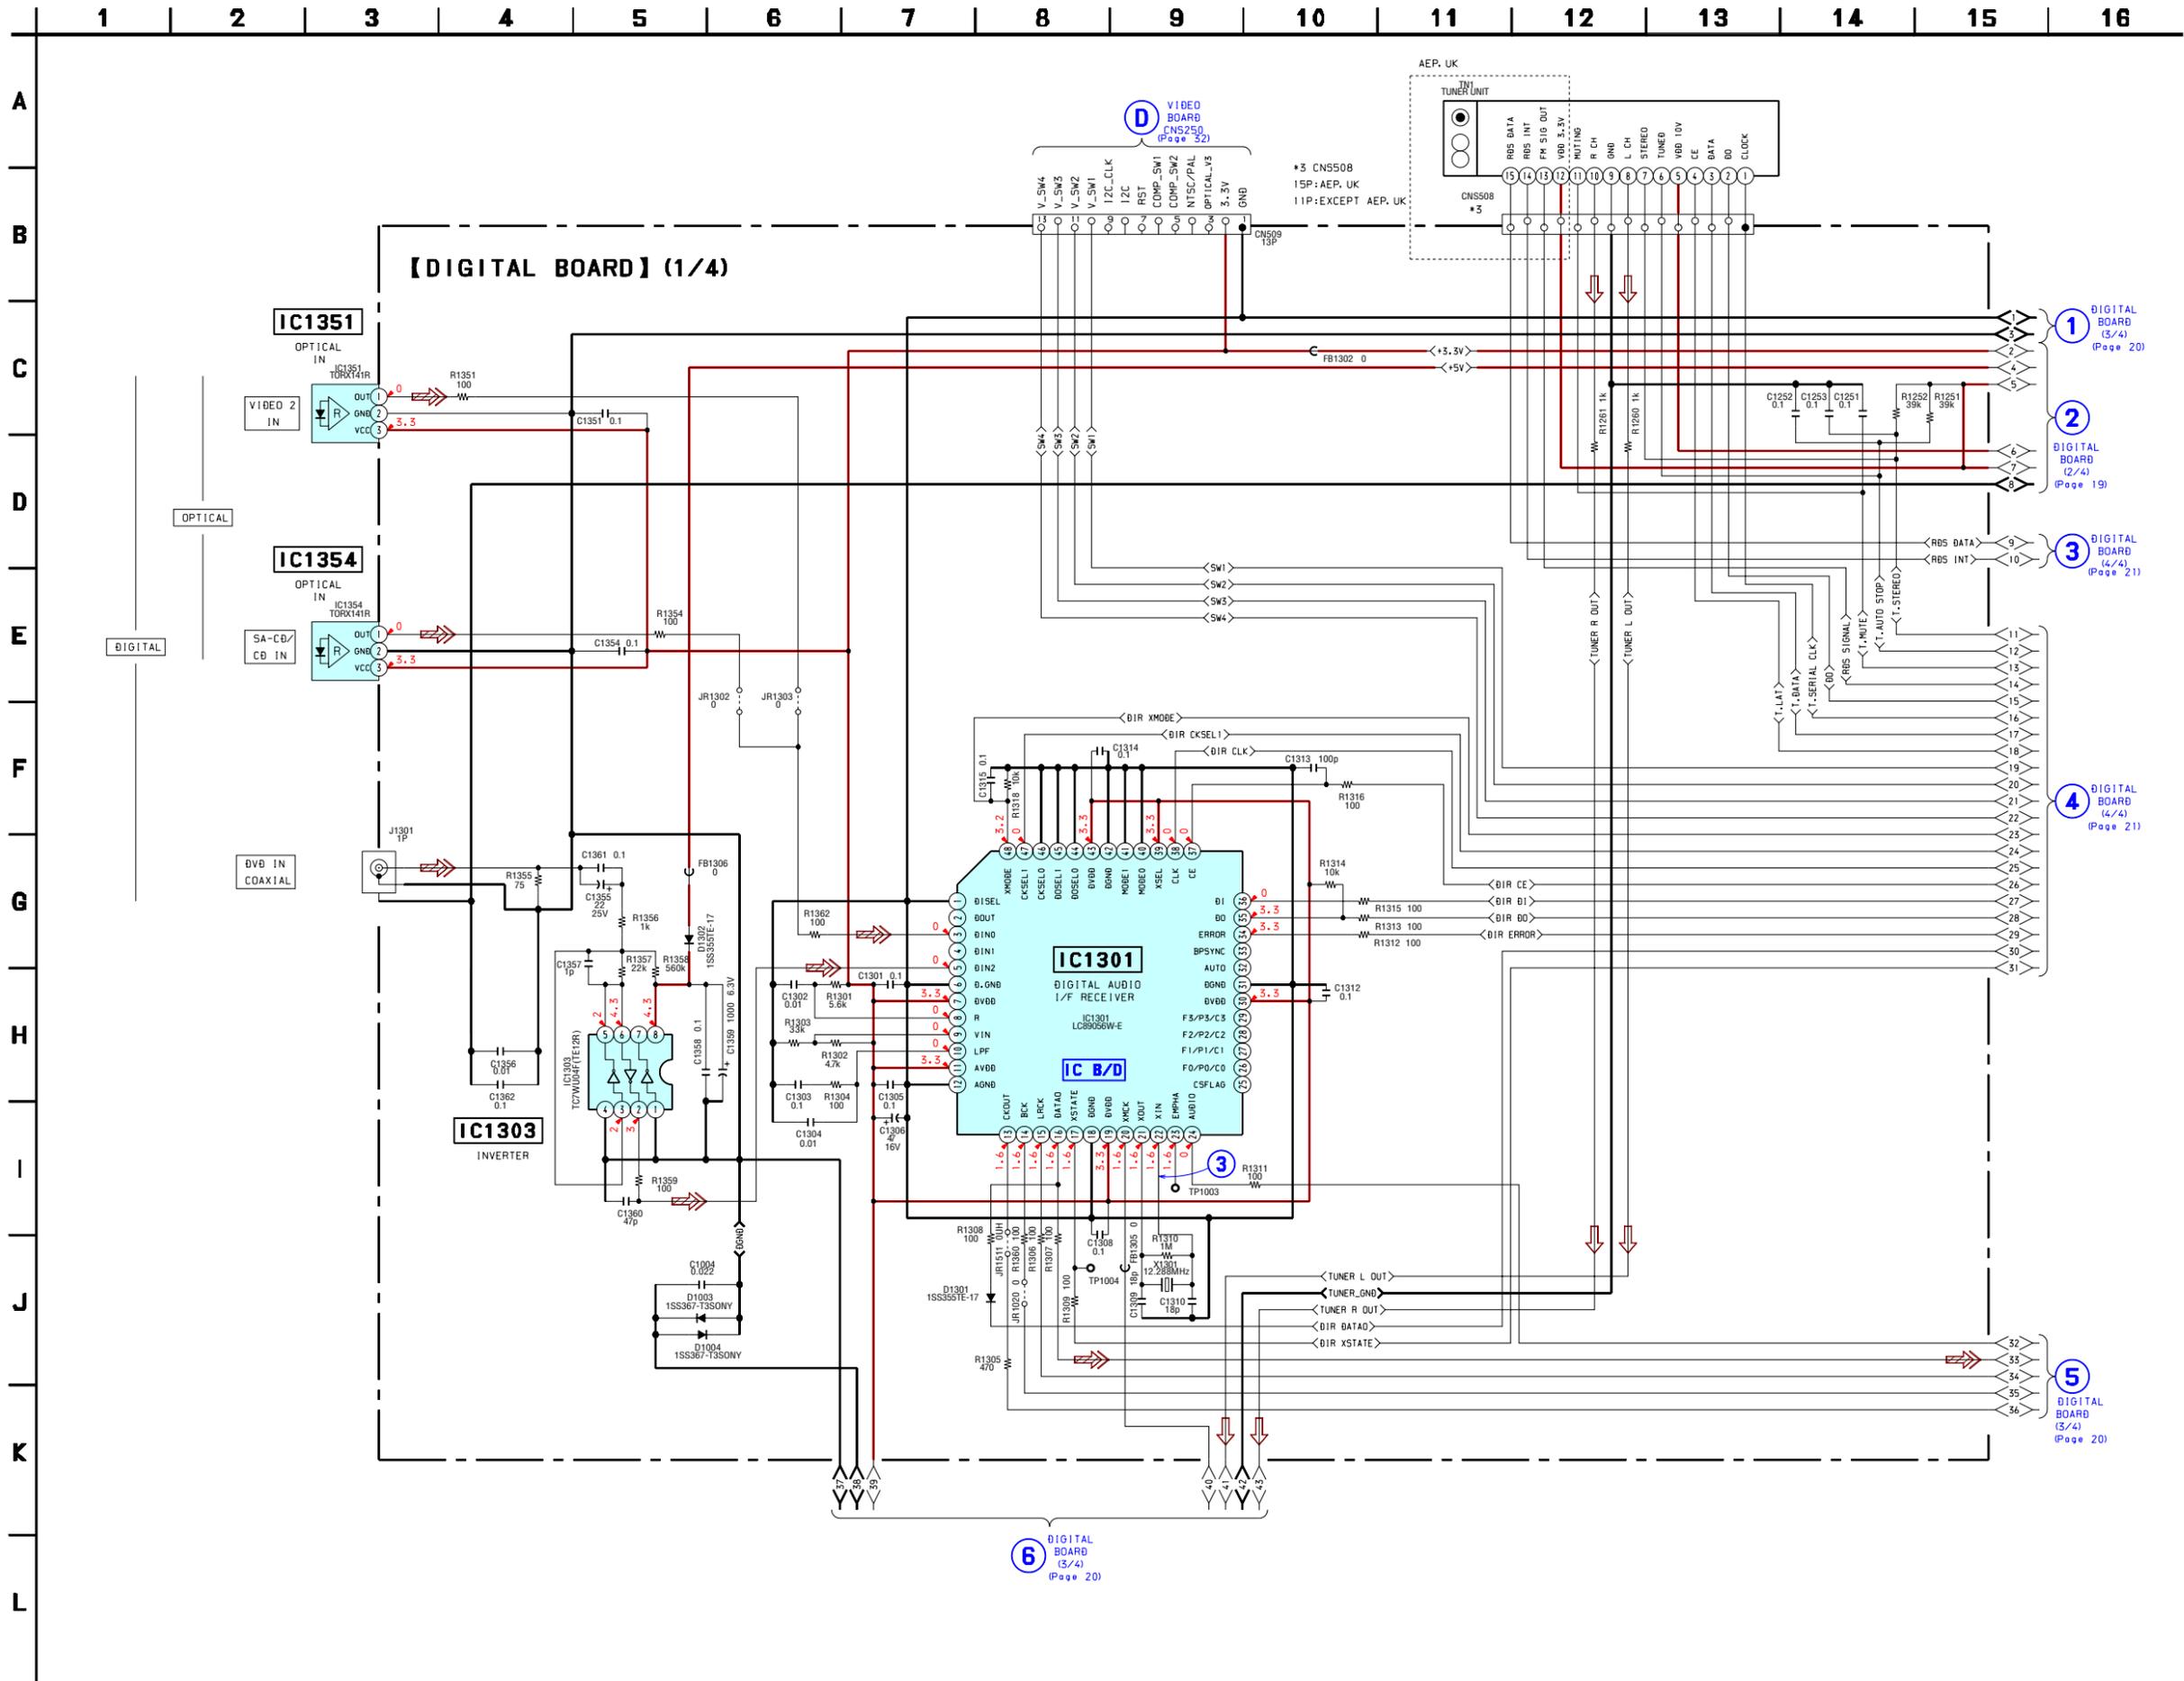




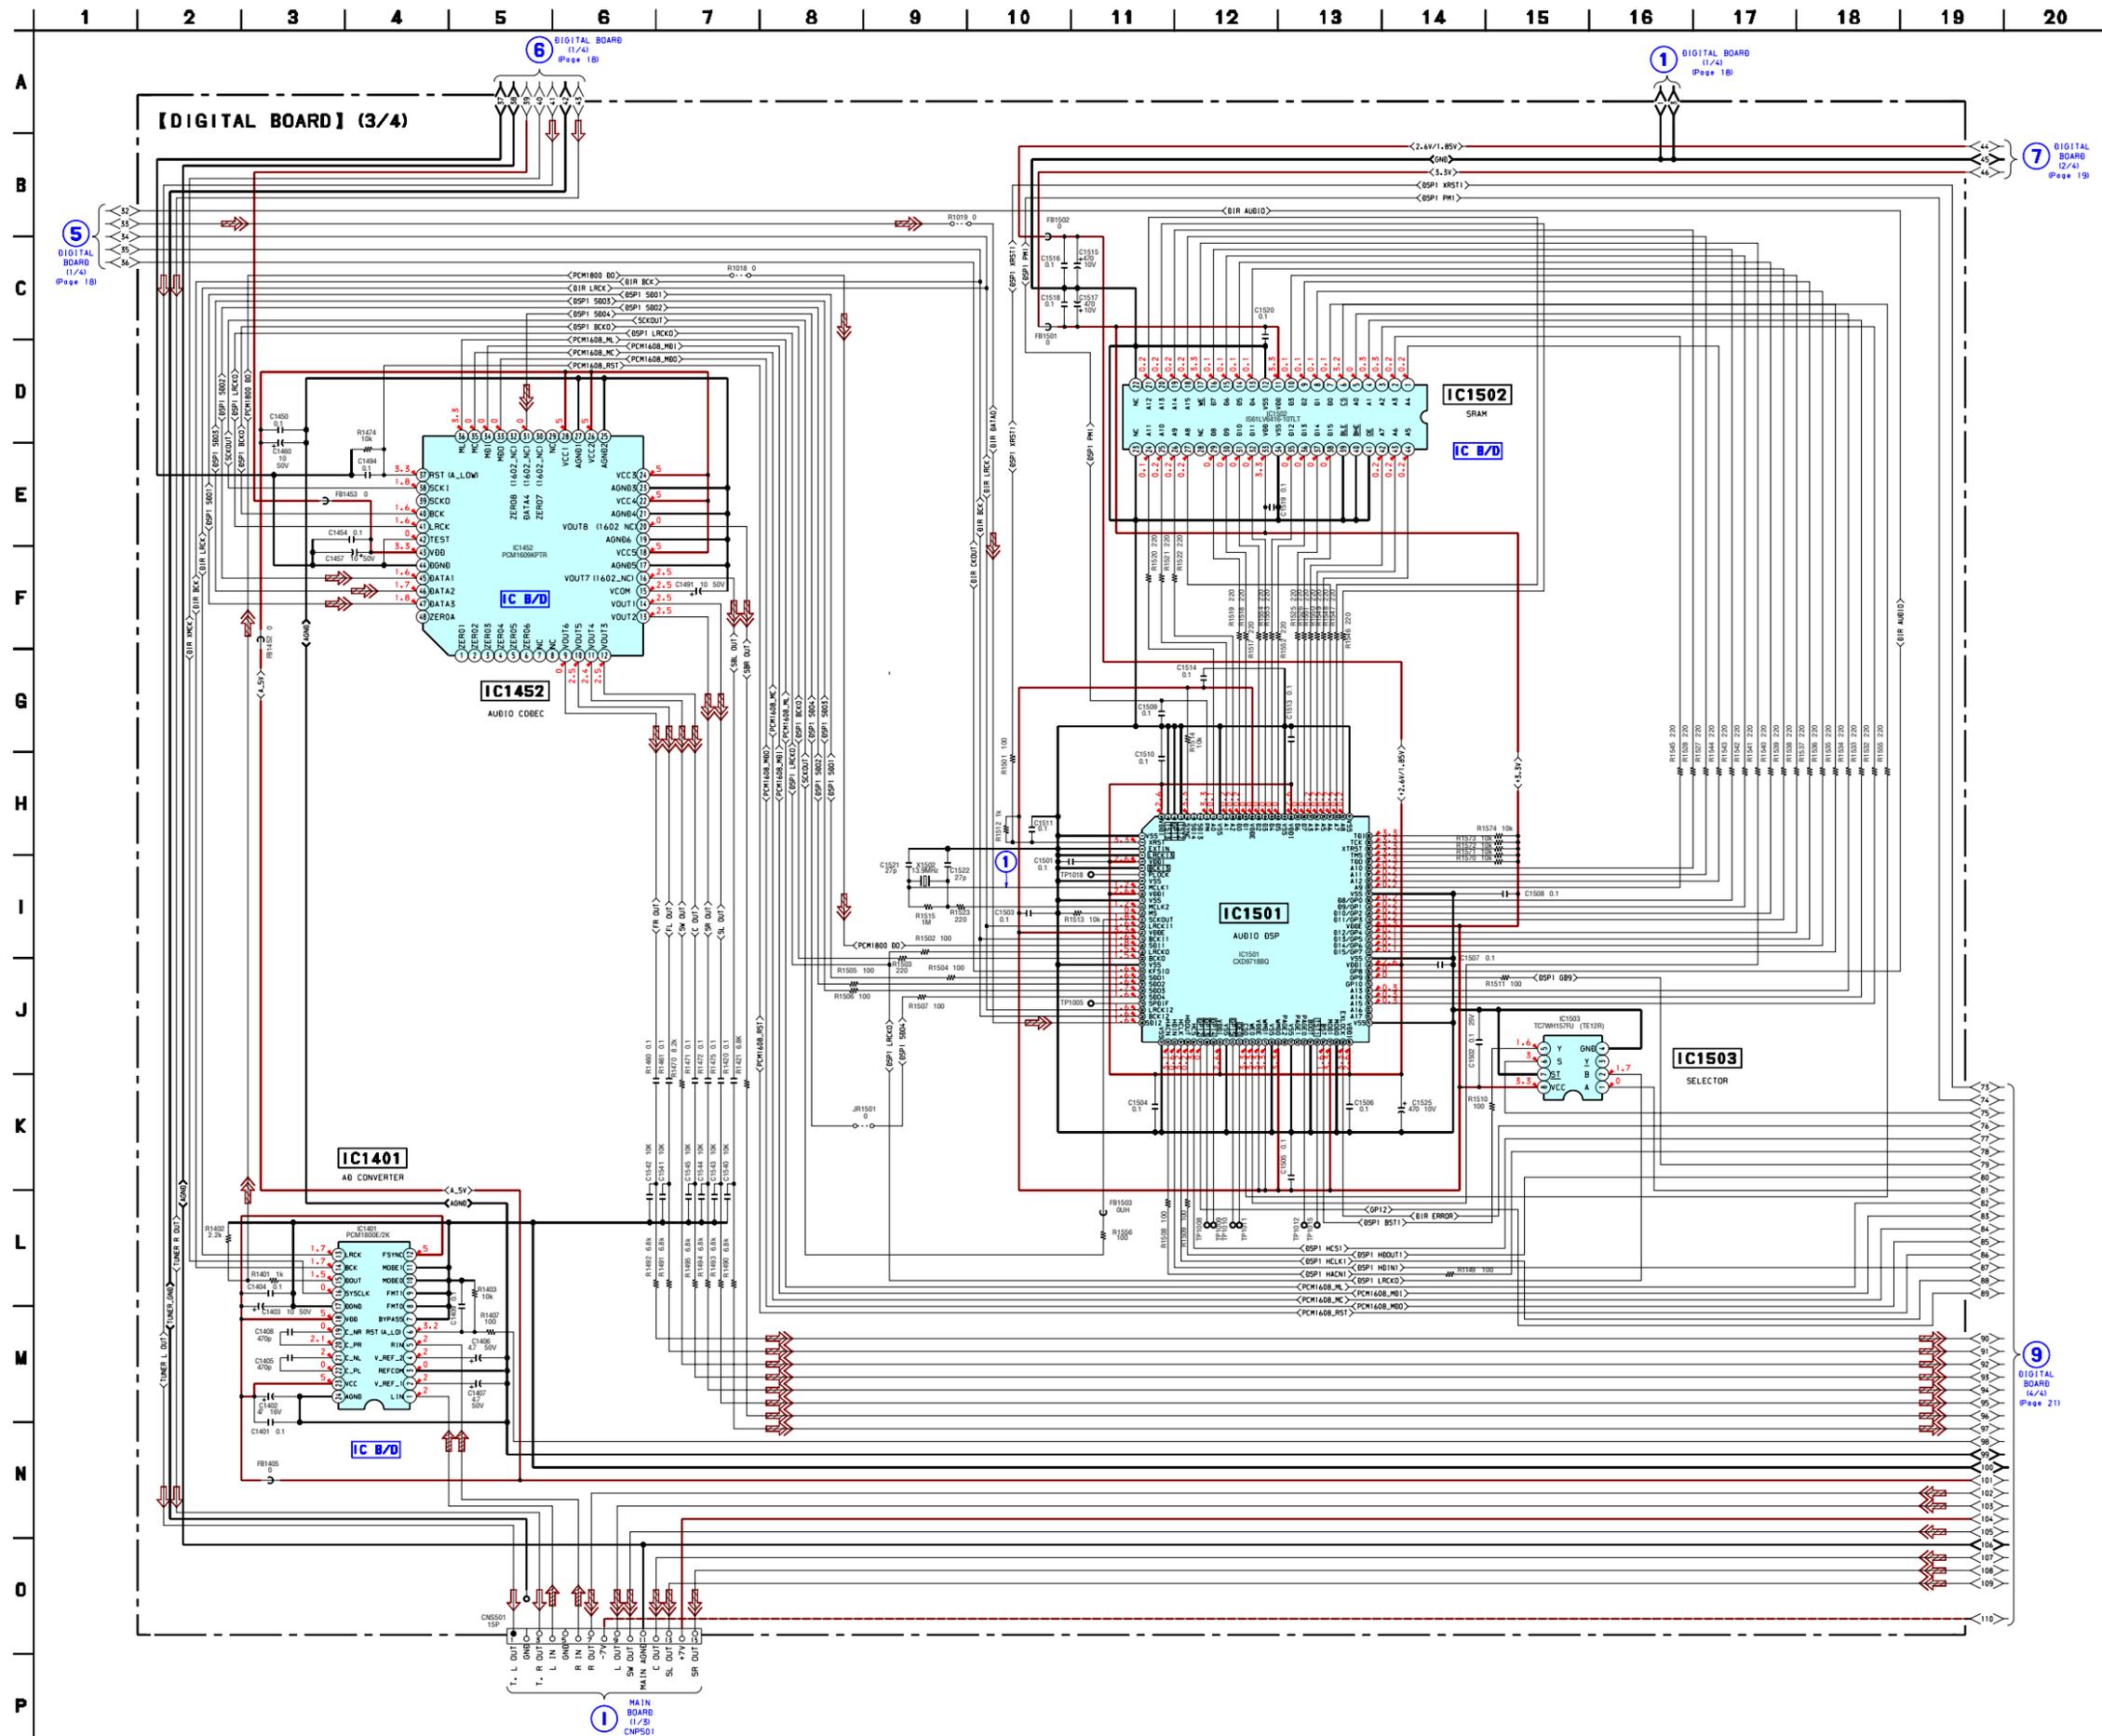

3-8. SCHEMATIC DIAGRAM – DIGITAL BOARD (4/4) – • See page 13 for Waveform. • See page 33 for IC Block Diagram. • See page 38 for IC Pin Function Description.

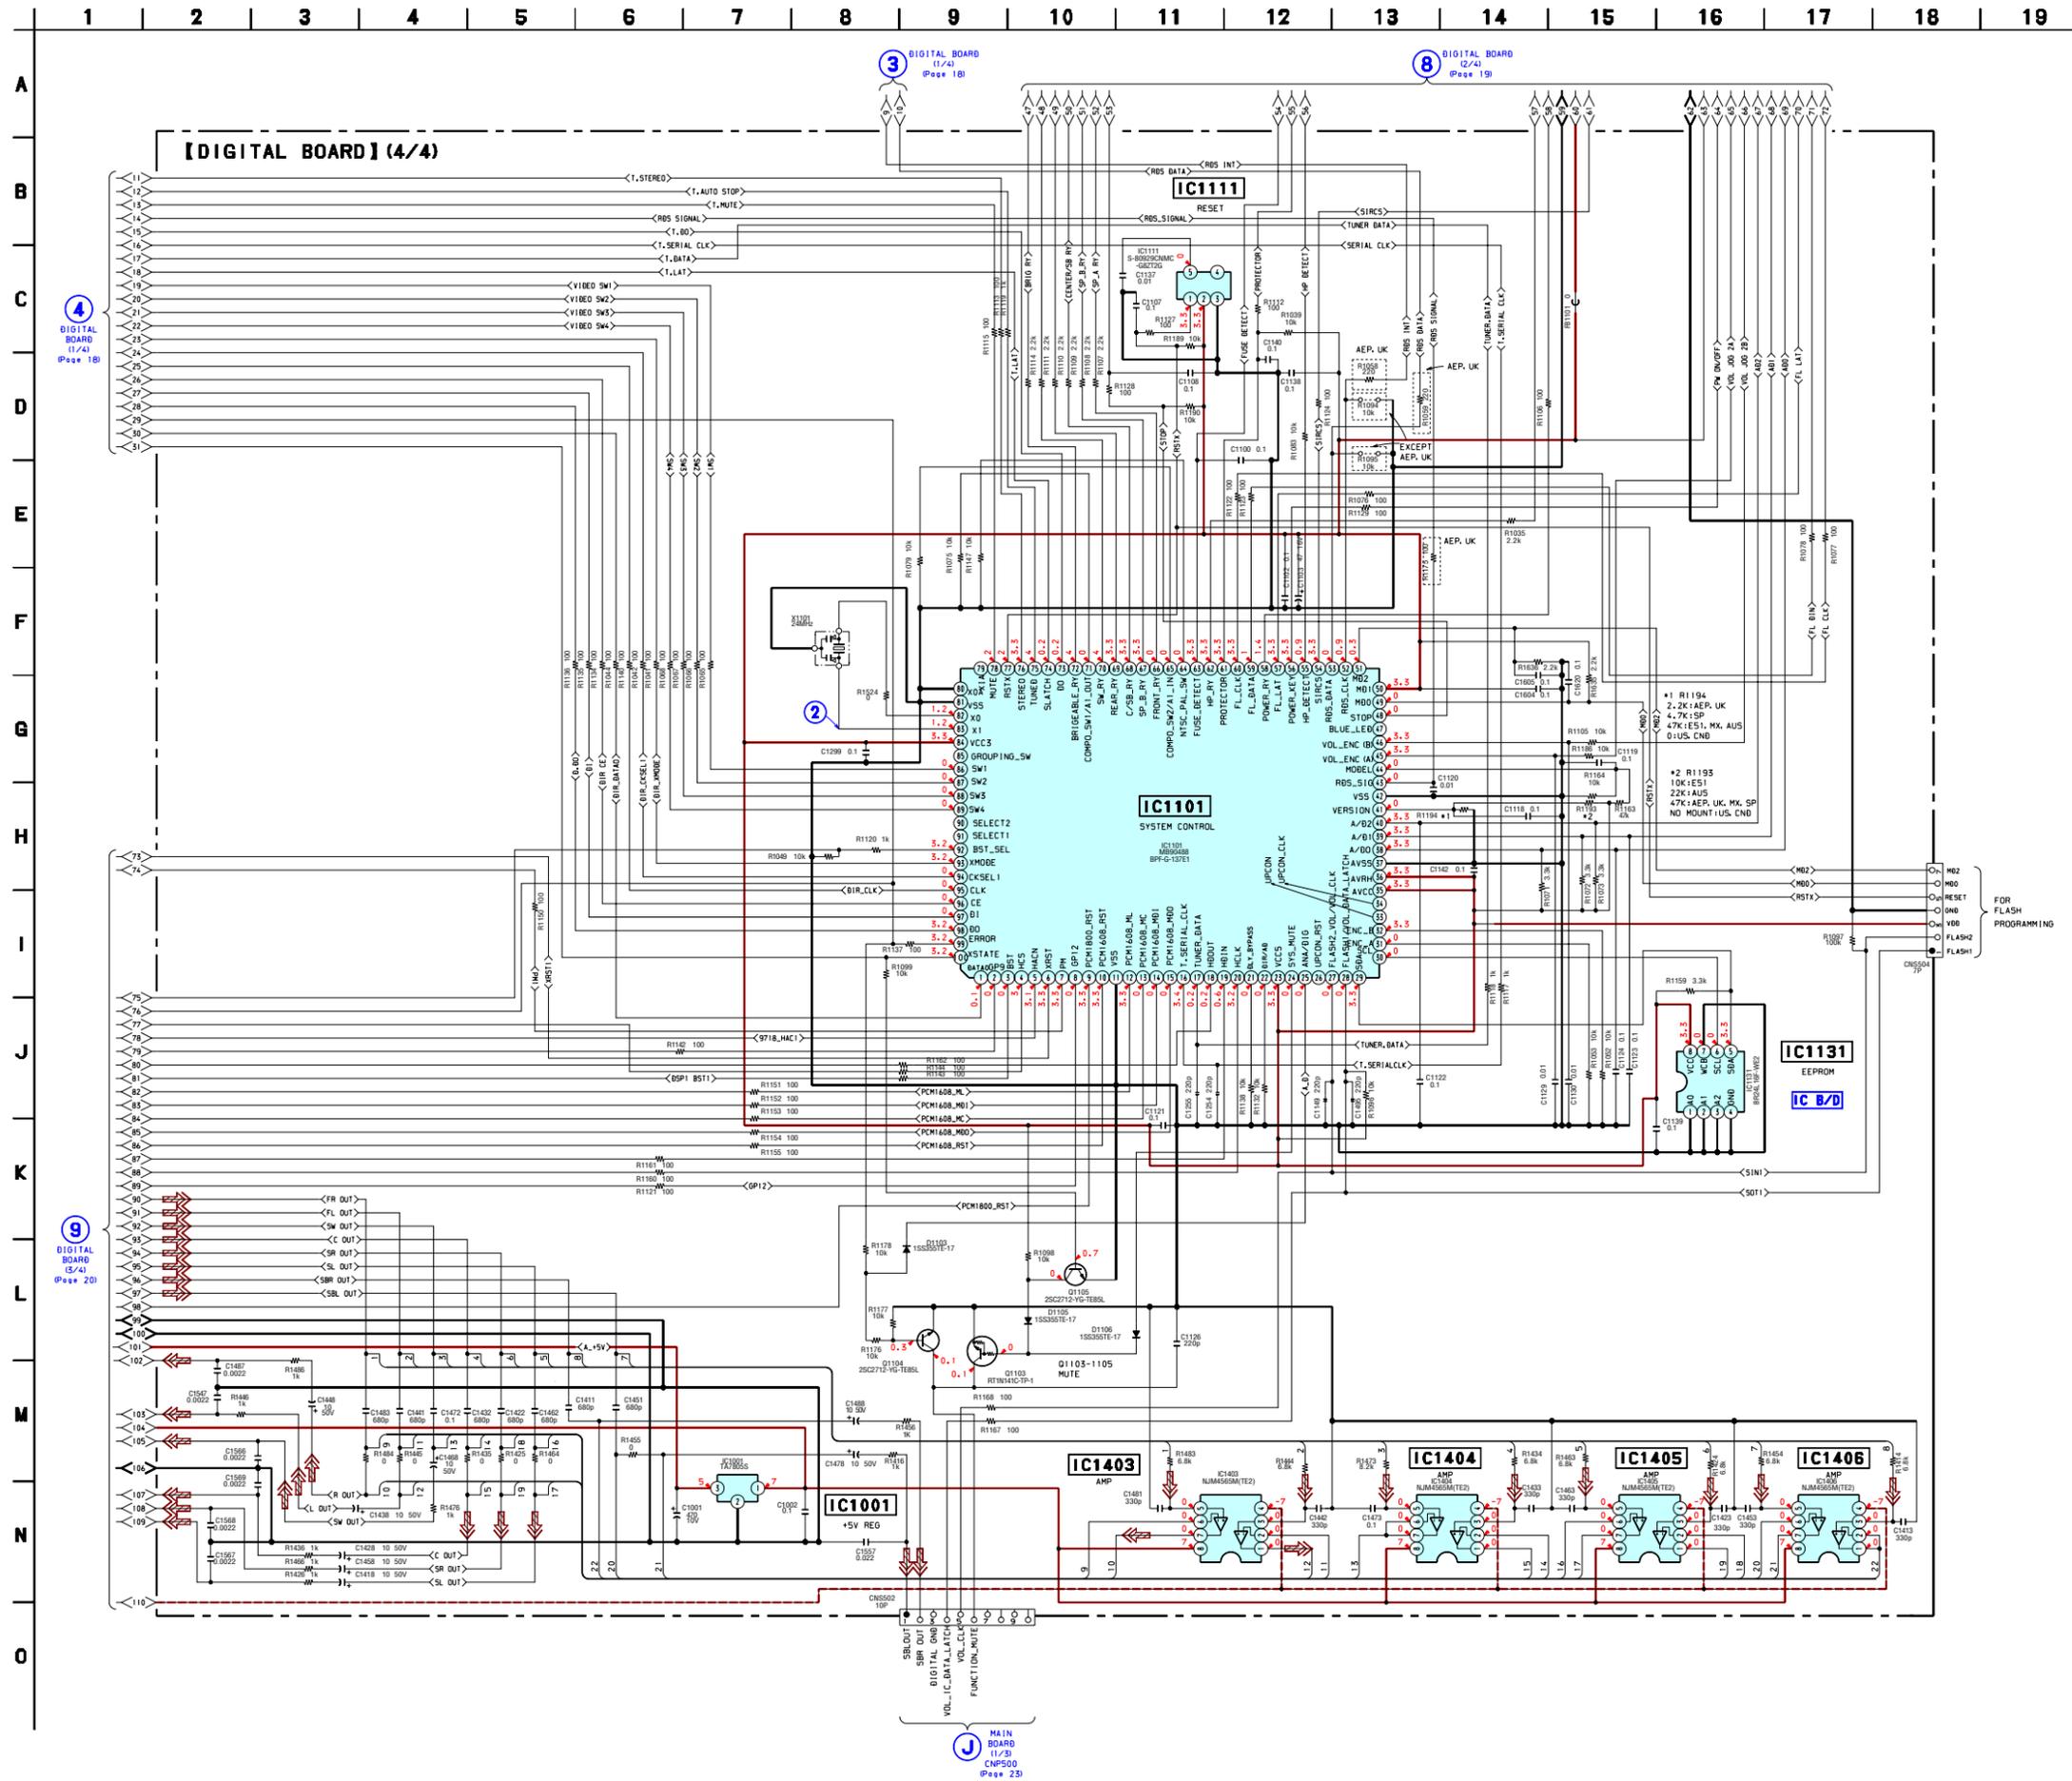


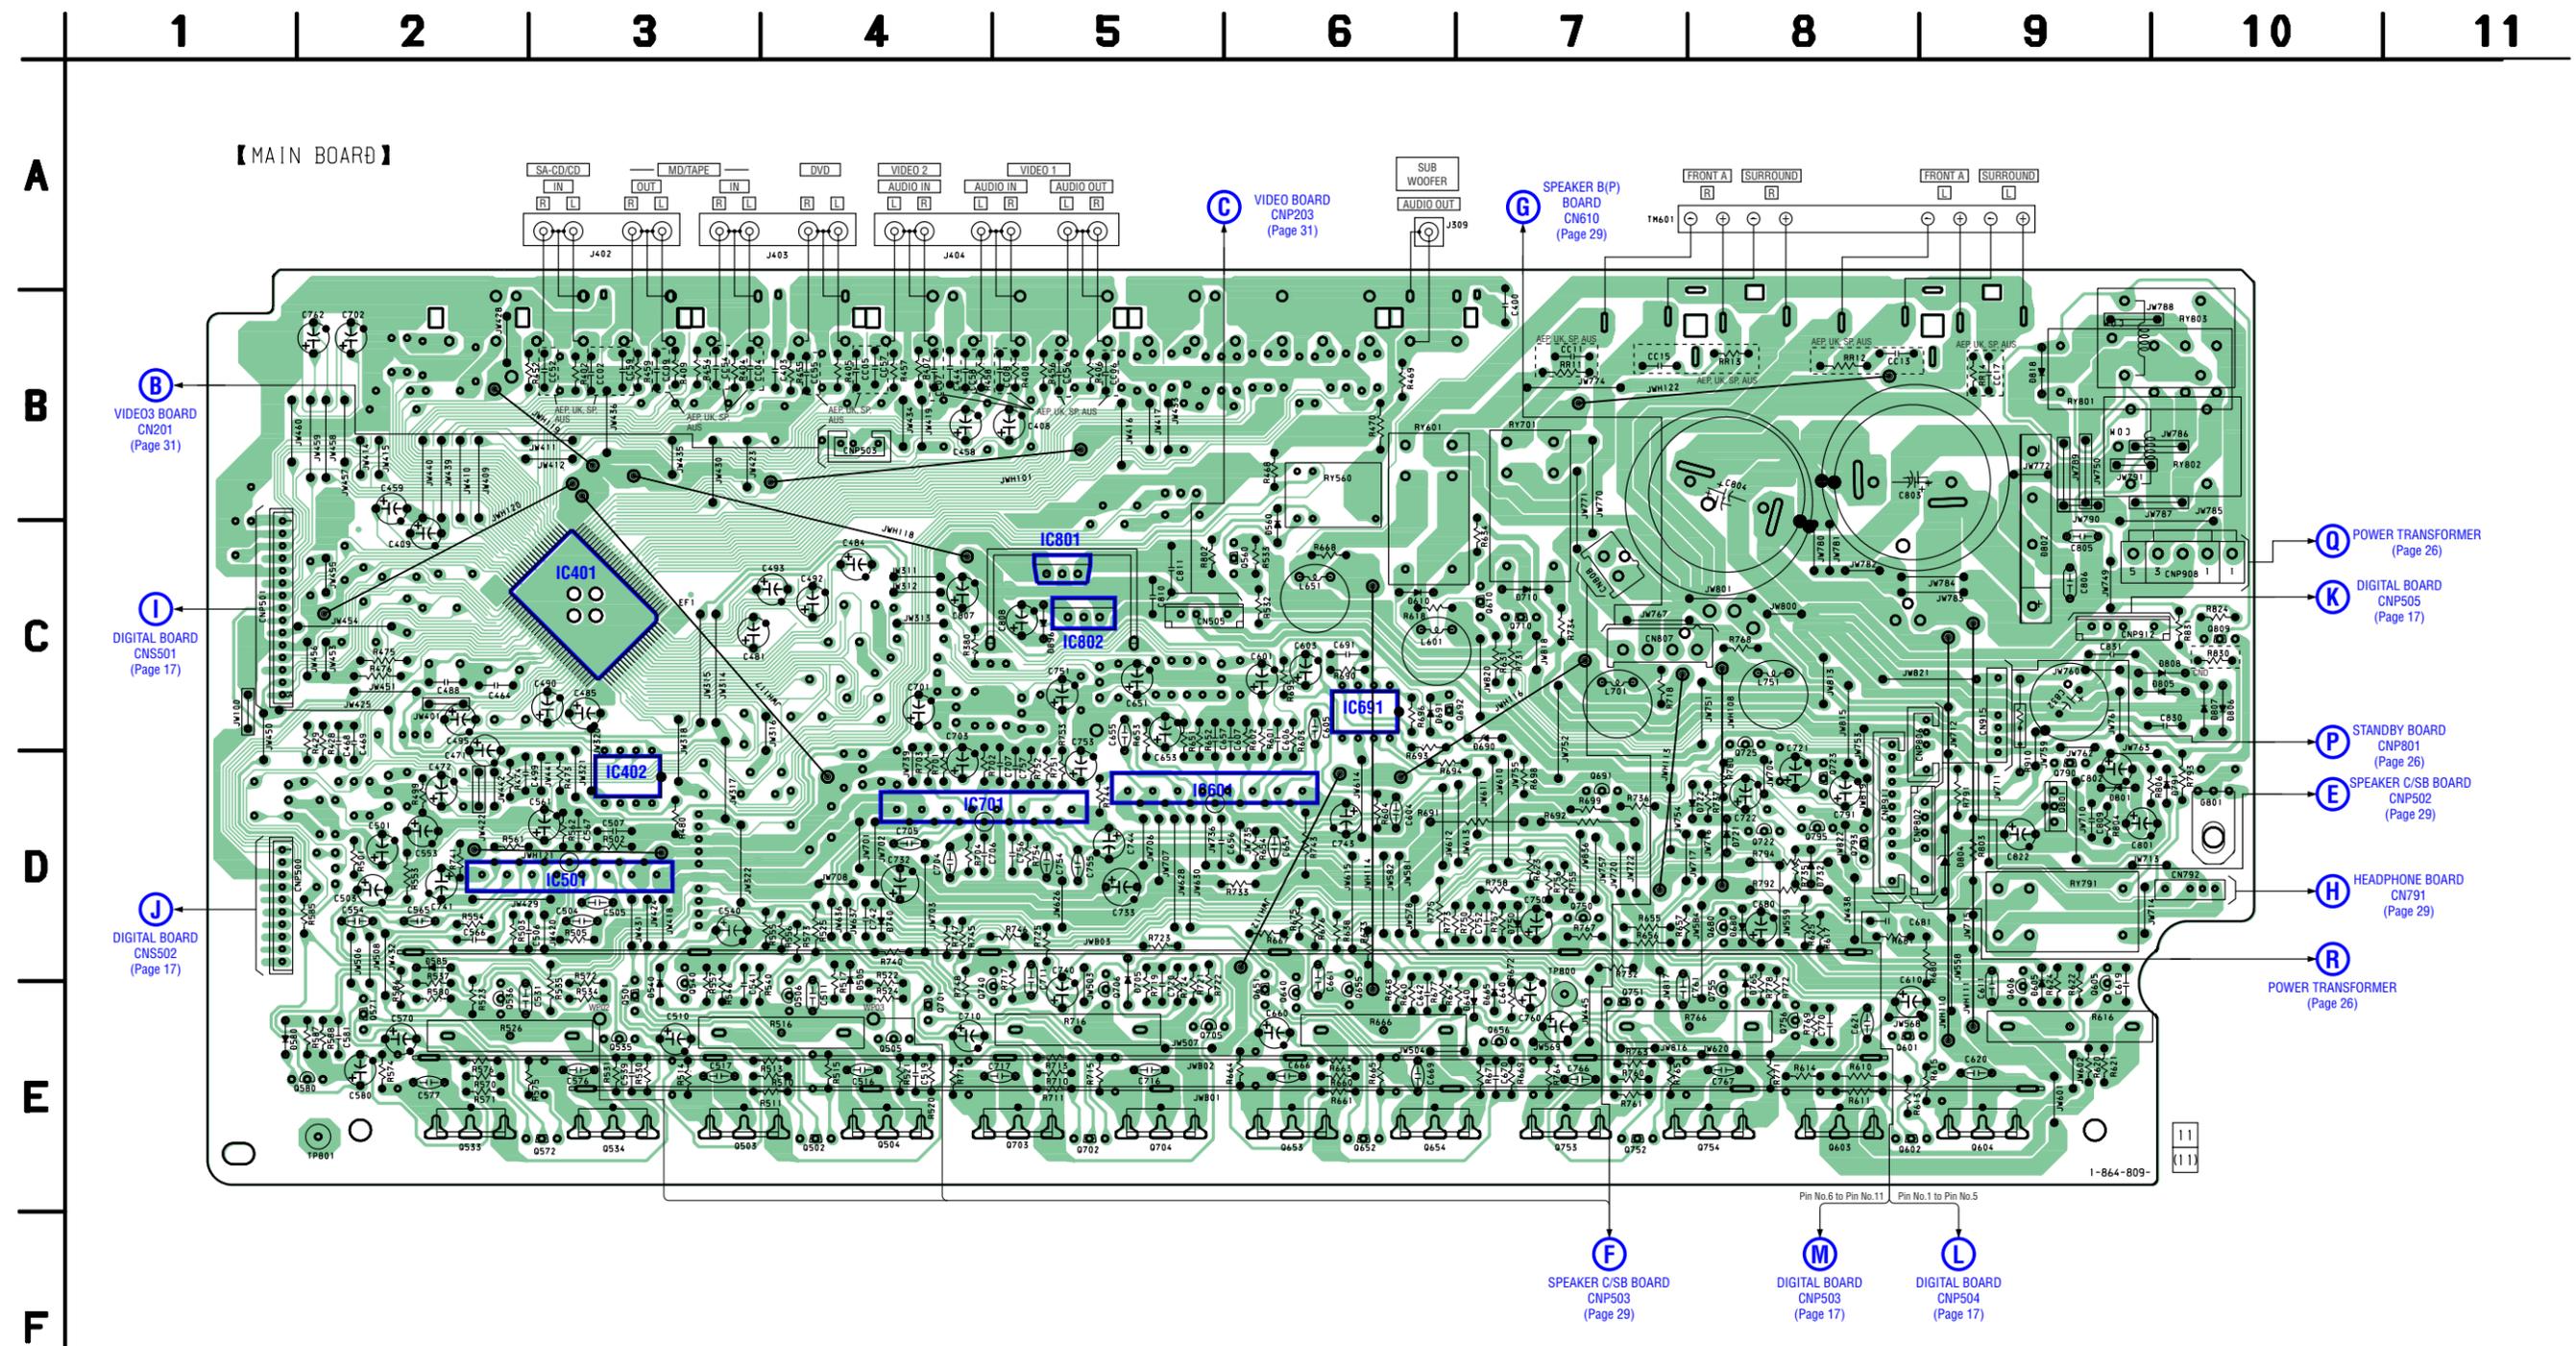


• Semiconductor Location


Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D505	E-4	D732	D-8	IC402	D-3	Q535	E-2	Q652	E-6	Q725	D-8
D540	E-3	D740	D-4	IC501	D-3	Q536	E-3	Q653	E-6	Q740	E-5
D560	B-6	D750	D-7	IC601	D-5	Q540	E-3	Q654	E-6	Q750	D-7
D580	E-1	D765	E-8	IC691	C-6	Q560	C-6	Q655	E-6	Q751	E-7
D585	D-2	D791	D-10	IC701	D-4	Q571	E-2	Q656	E-7	Q752	E-7
D605	E-9	D801	D-9	IC801	C-5	Q572	E-3	Q680	D-8	Q753	E-7
D610	C-6	D802	C-9	IC802	C-5	Q580	E-1	Q691	D-7	Q754	E-8
D640	E-7	D804	D-9			Q601	E-9	Q701	E-4	Q755	E-8
D665	E-7	D805	C-10	Q501	E-3	Q602	E-9	Q702	E-5	Q756	E-8
D680	D-8	D806	C-10	Q502	E-4	Q603	E-8	Q703	E-5	Q790	D-9
D690	C-7	D807	C-10	Q503	E-4	Q604	E-9	Q704	E-5	Q793	D-8
D691	C-6	D808	C-10	Q504	E-4	Q605	E-9	Q705	E-5	Q795	D-8
D705	E-5	D818	B-9	Q505	E-4	Q606	E-9	Q706	E-5	Q801	D-9
D710	C-7	D896	C-5	Q506	E-4	Q610	C-7	Q710	C-7	Q809	C-10
D721	D-8			Q533	E-2	Q640	E-6	Q722	D-8		
D722	D-8	IC401	C-3	Q534	E-3	Q651	E-6	Q723	D-8		



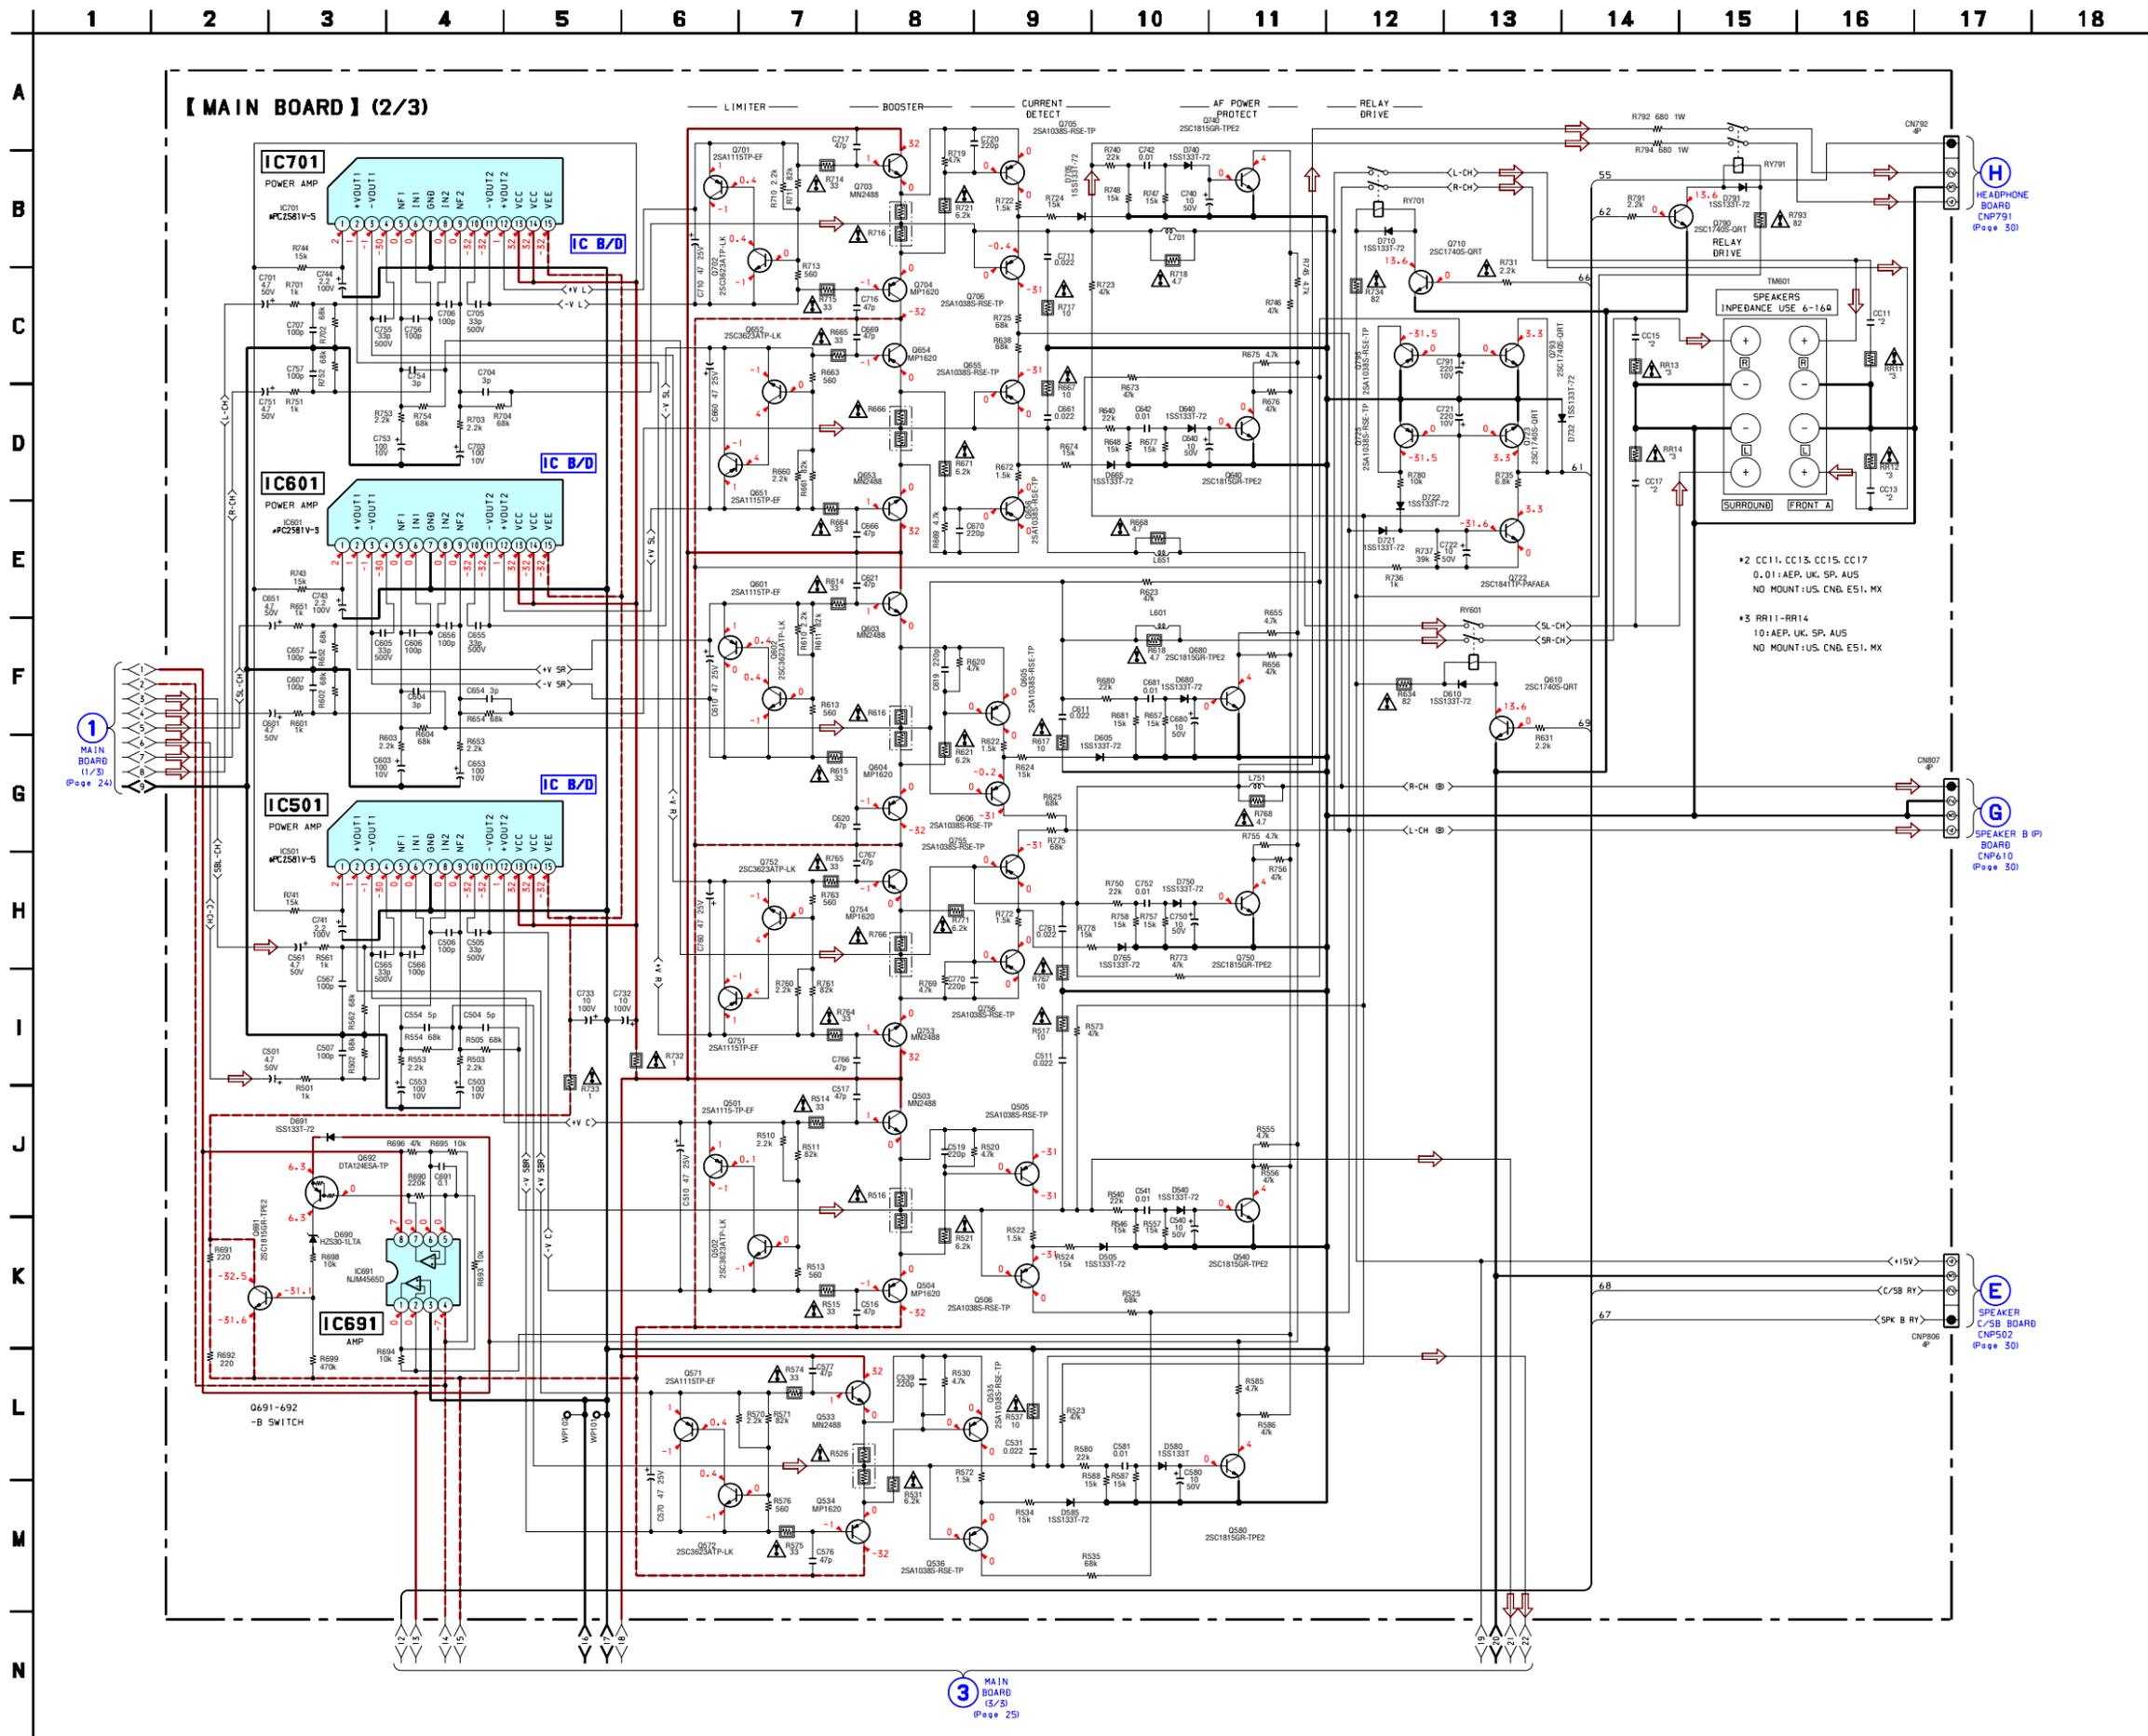

3-12. SCHEMATIC DIAGRAM – MAIN BOARD (3/3) –

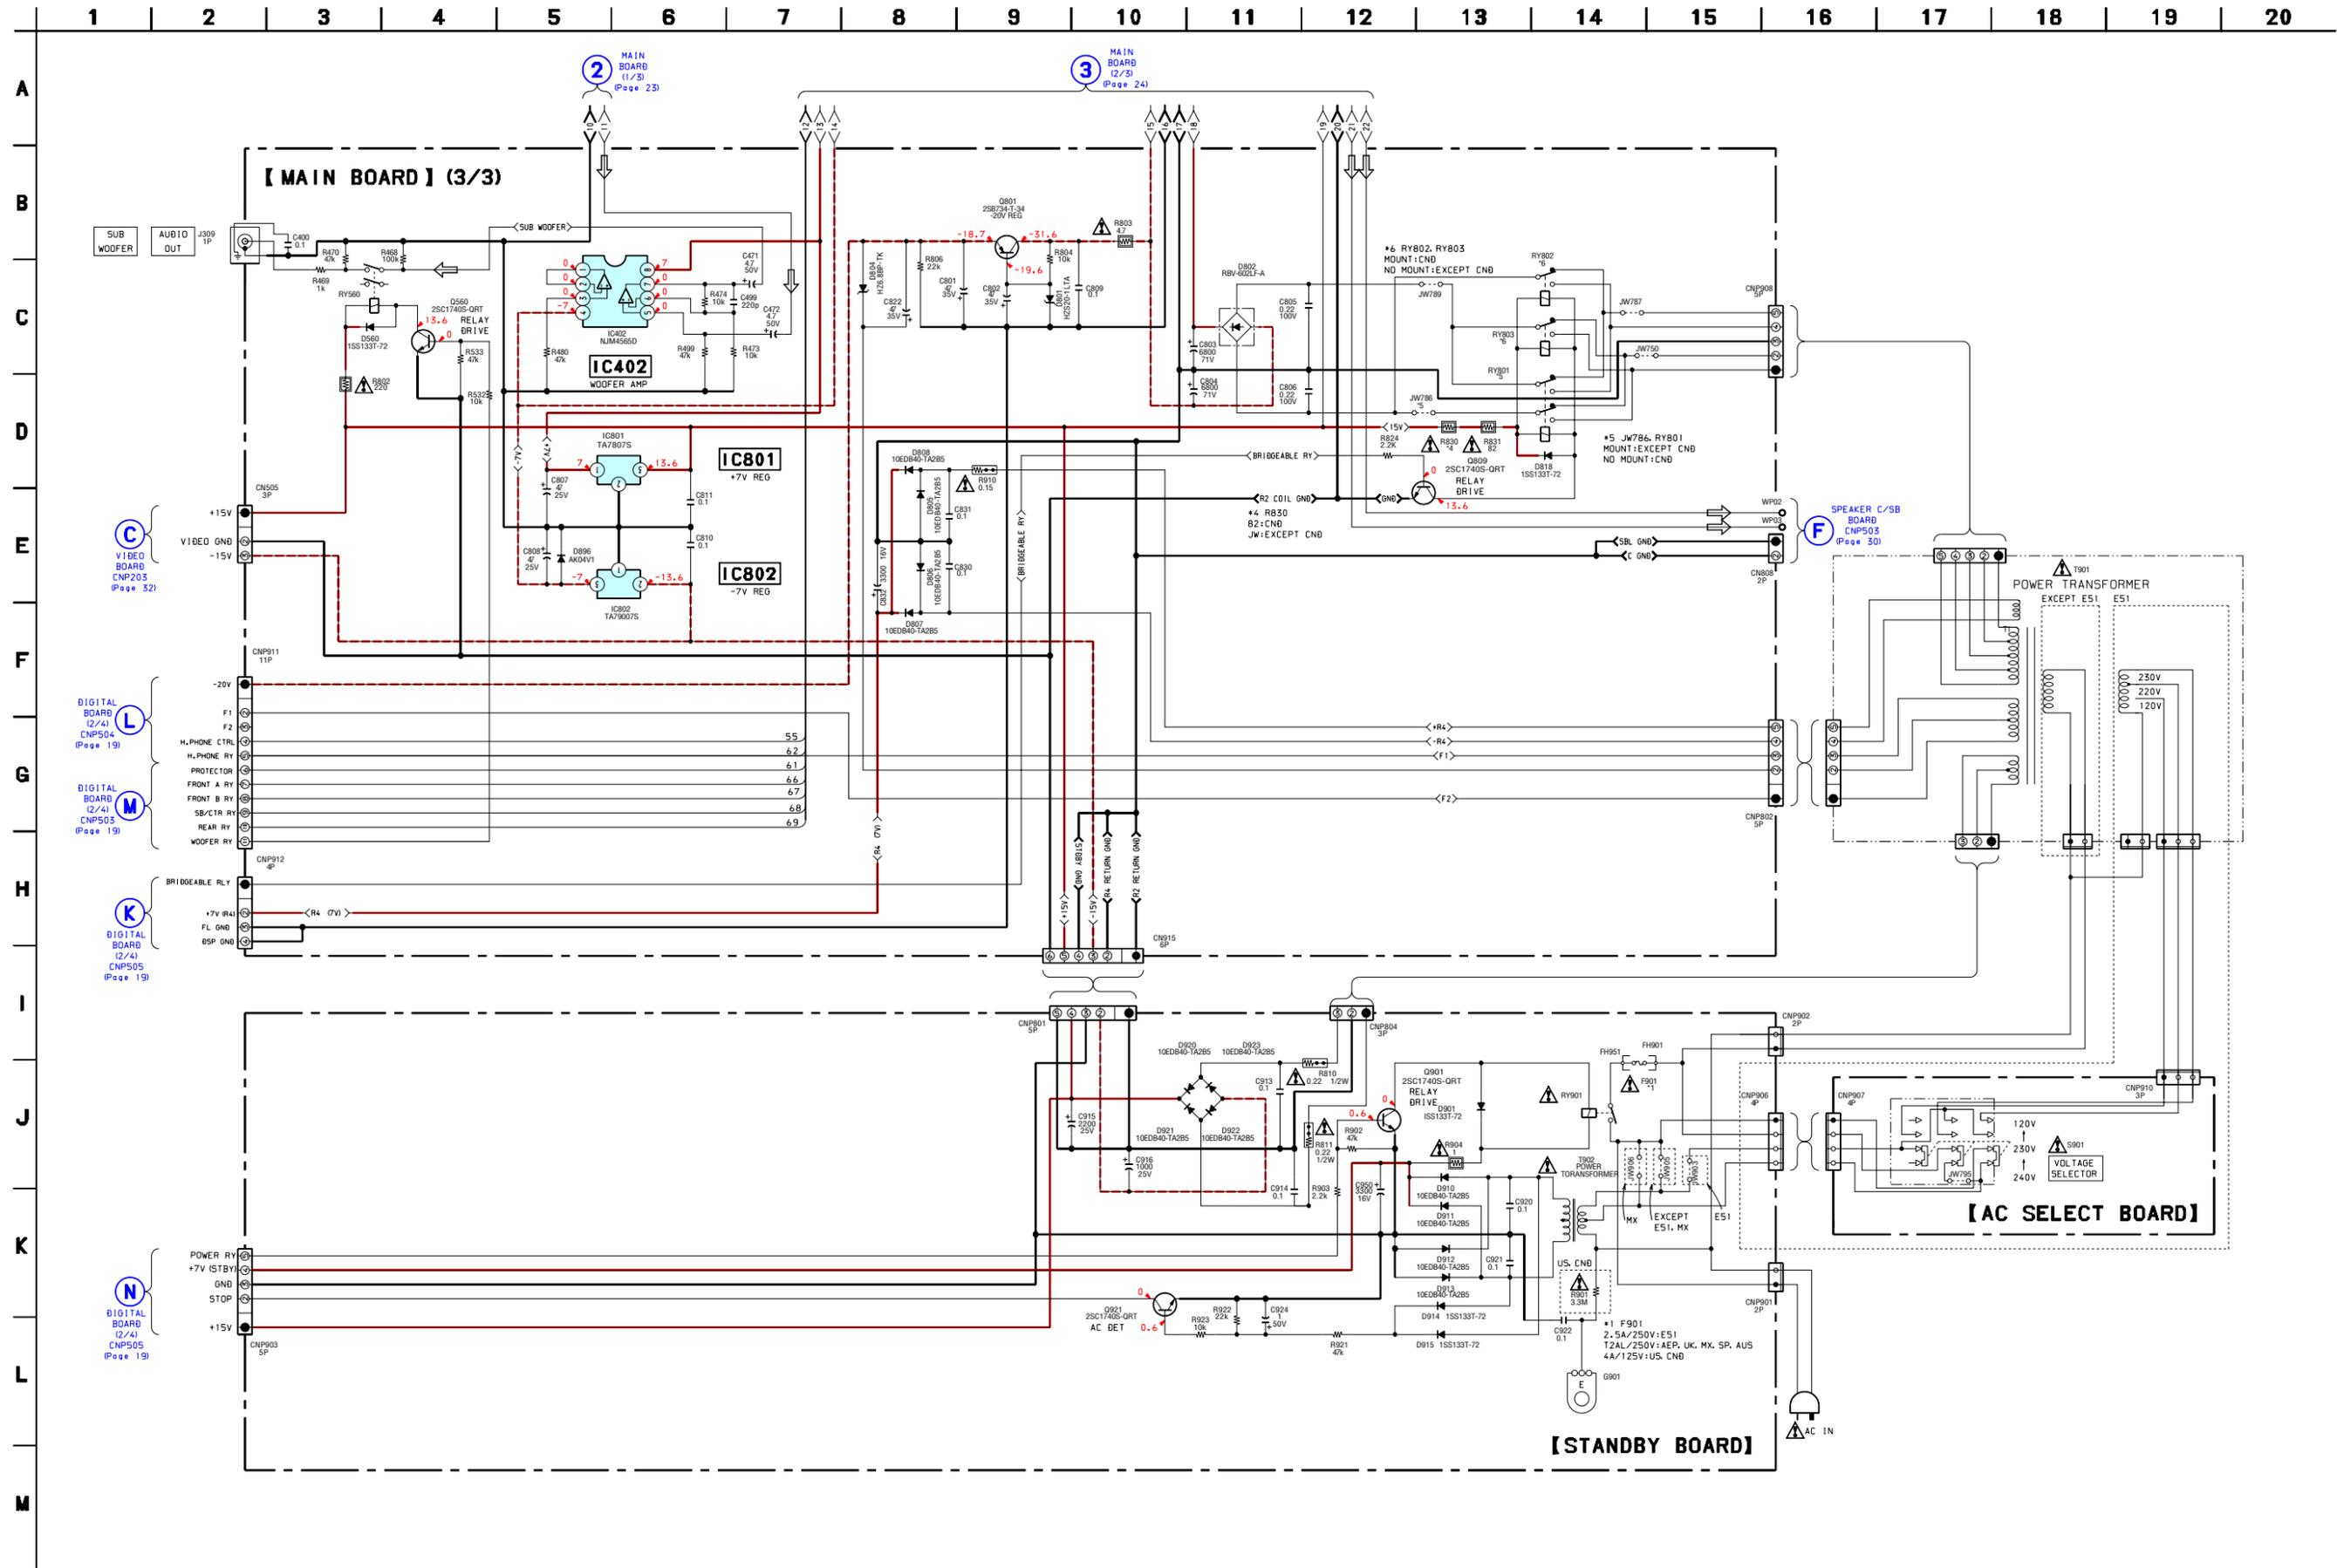


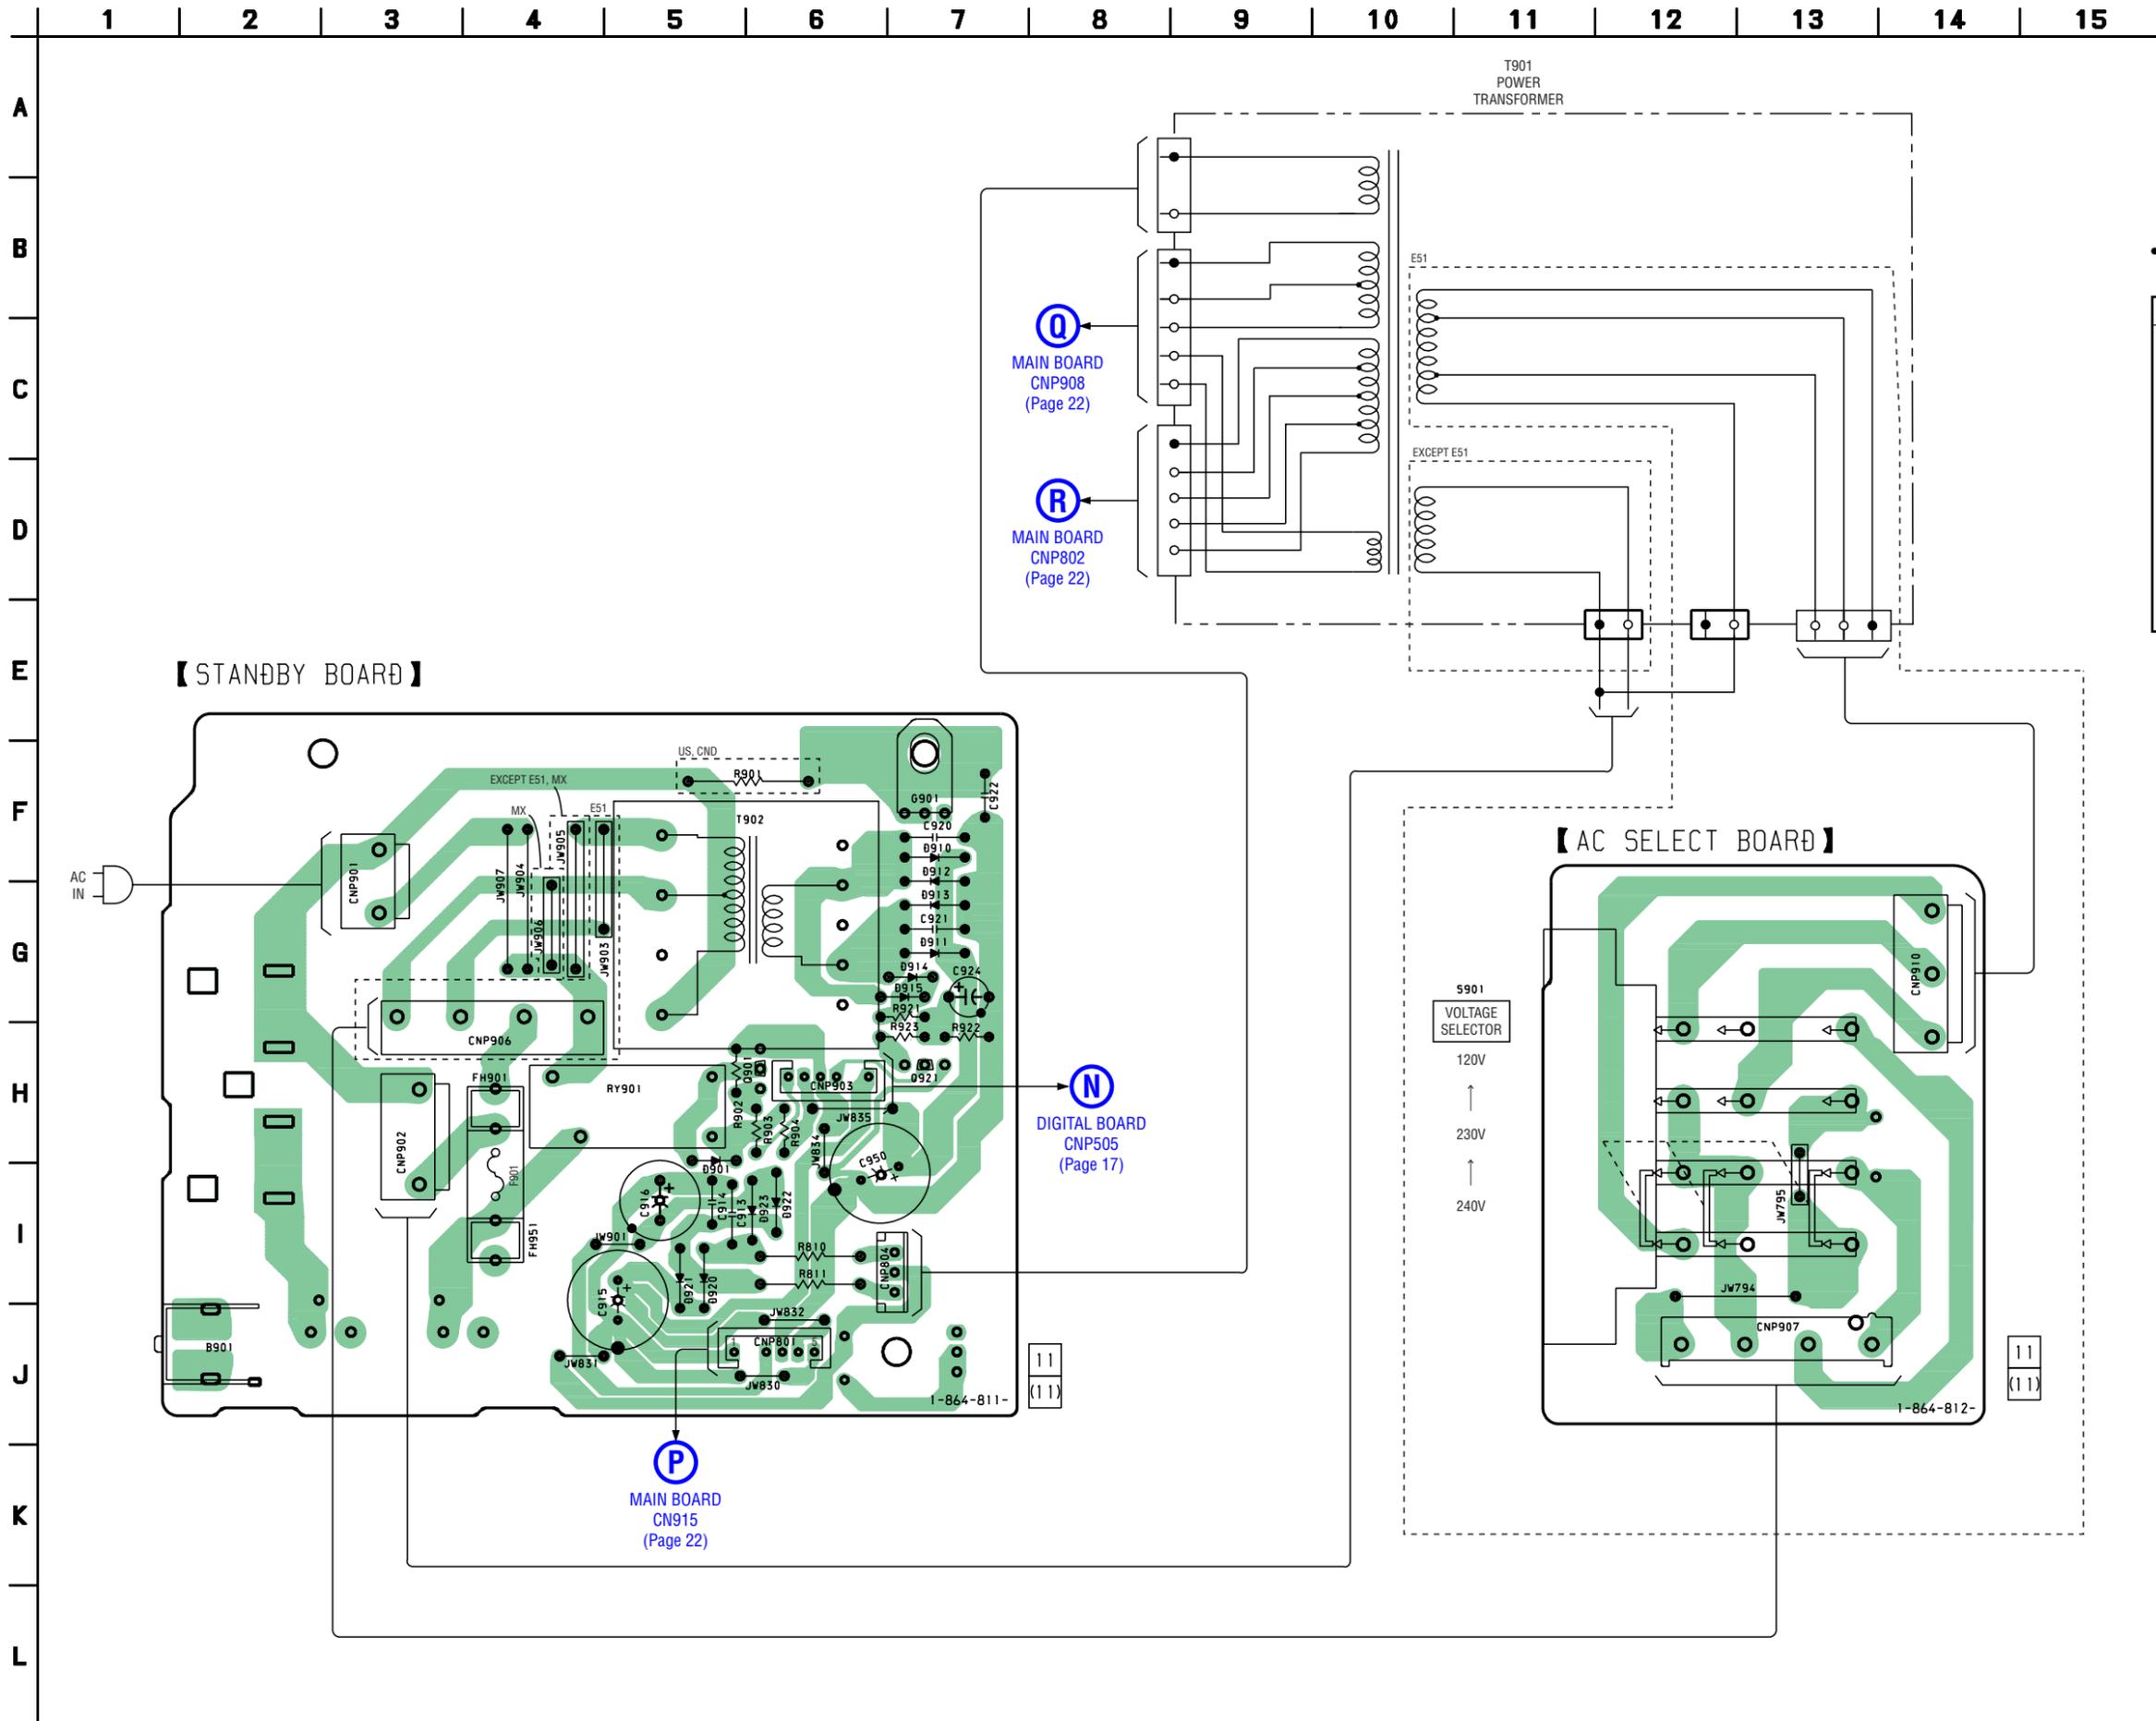

• Semiconductor Location


Ref. No.	Location
D901	H-5
D910	F-7
D911	G-7
D912	G-7
D913	G-7
D914	G-7
D915	G-7
D920	I-5
D921	I-5
D922	I-6
D923	I-6
Q901	H-6
Q921	H-7

3-14. PRINTED WIRING BOARD – DISPLAY SECTION – • See page 12 for Circuit Boards Location.  :Uses unleaded solder.

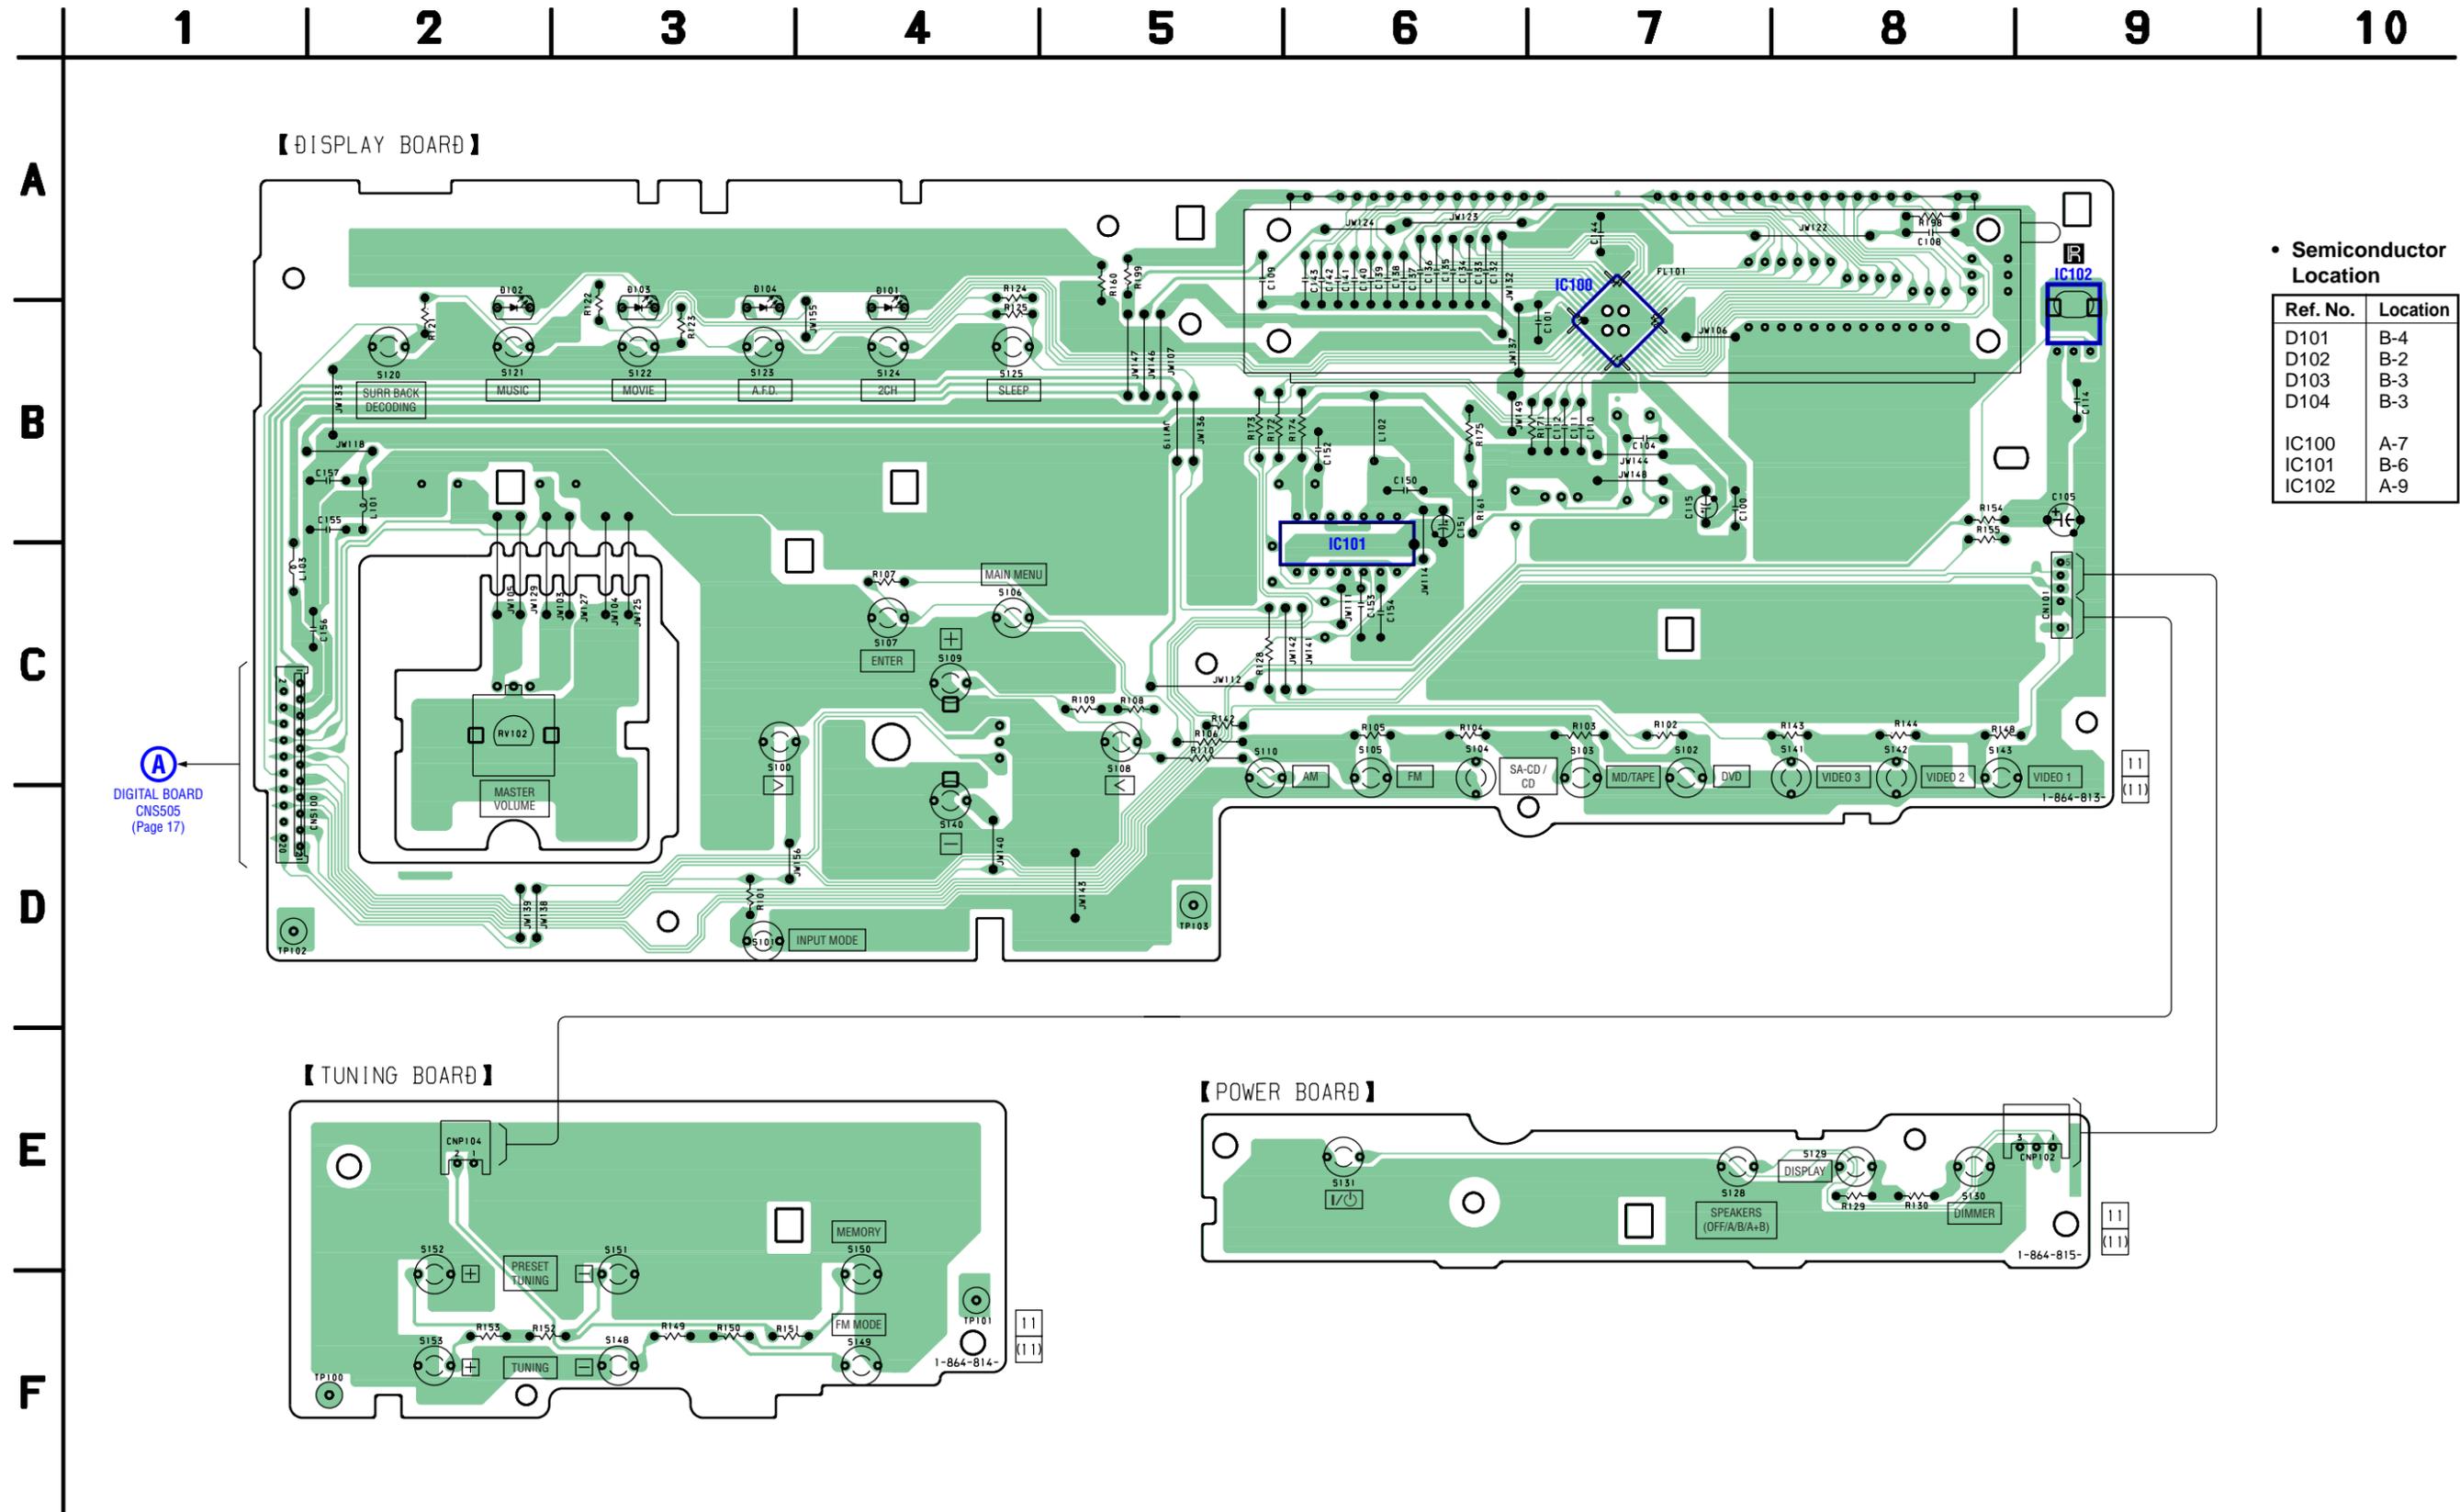


• Semiconductor Location

Ref. No.	Location
D101	B-4
D102	B-2
D103	B-3
D104	B-3
IC100	A-7
IC101	B-6
IC102	A-9

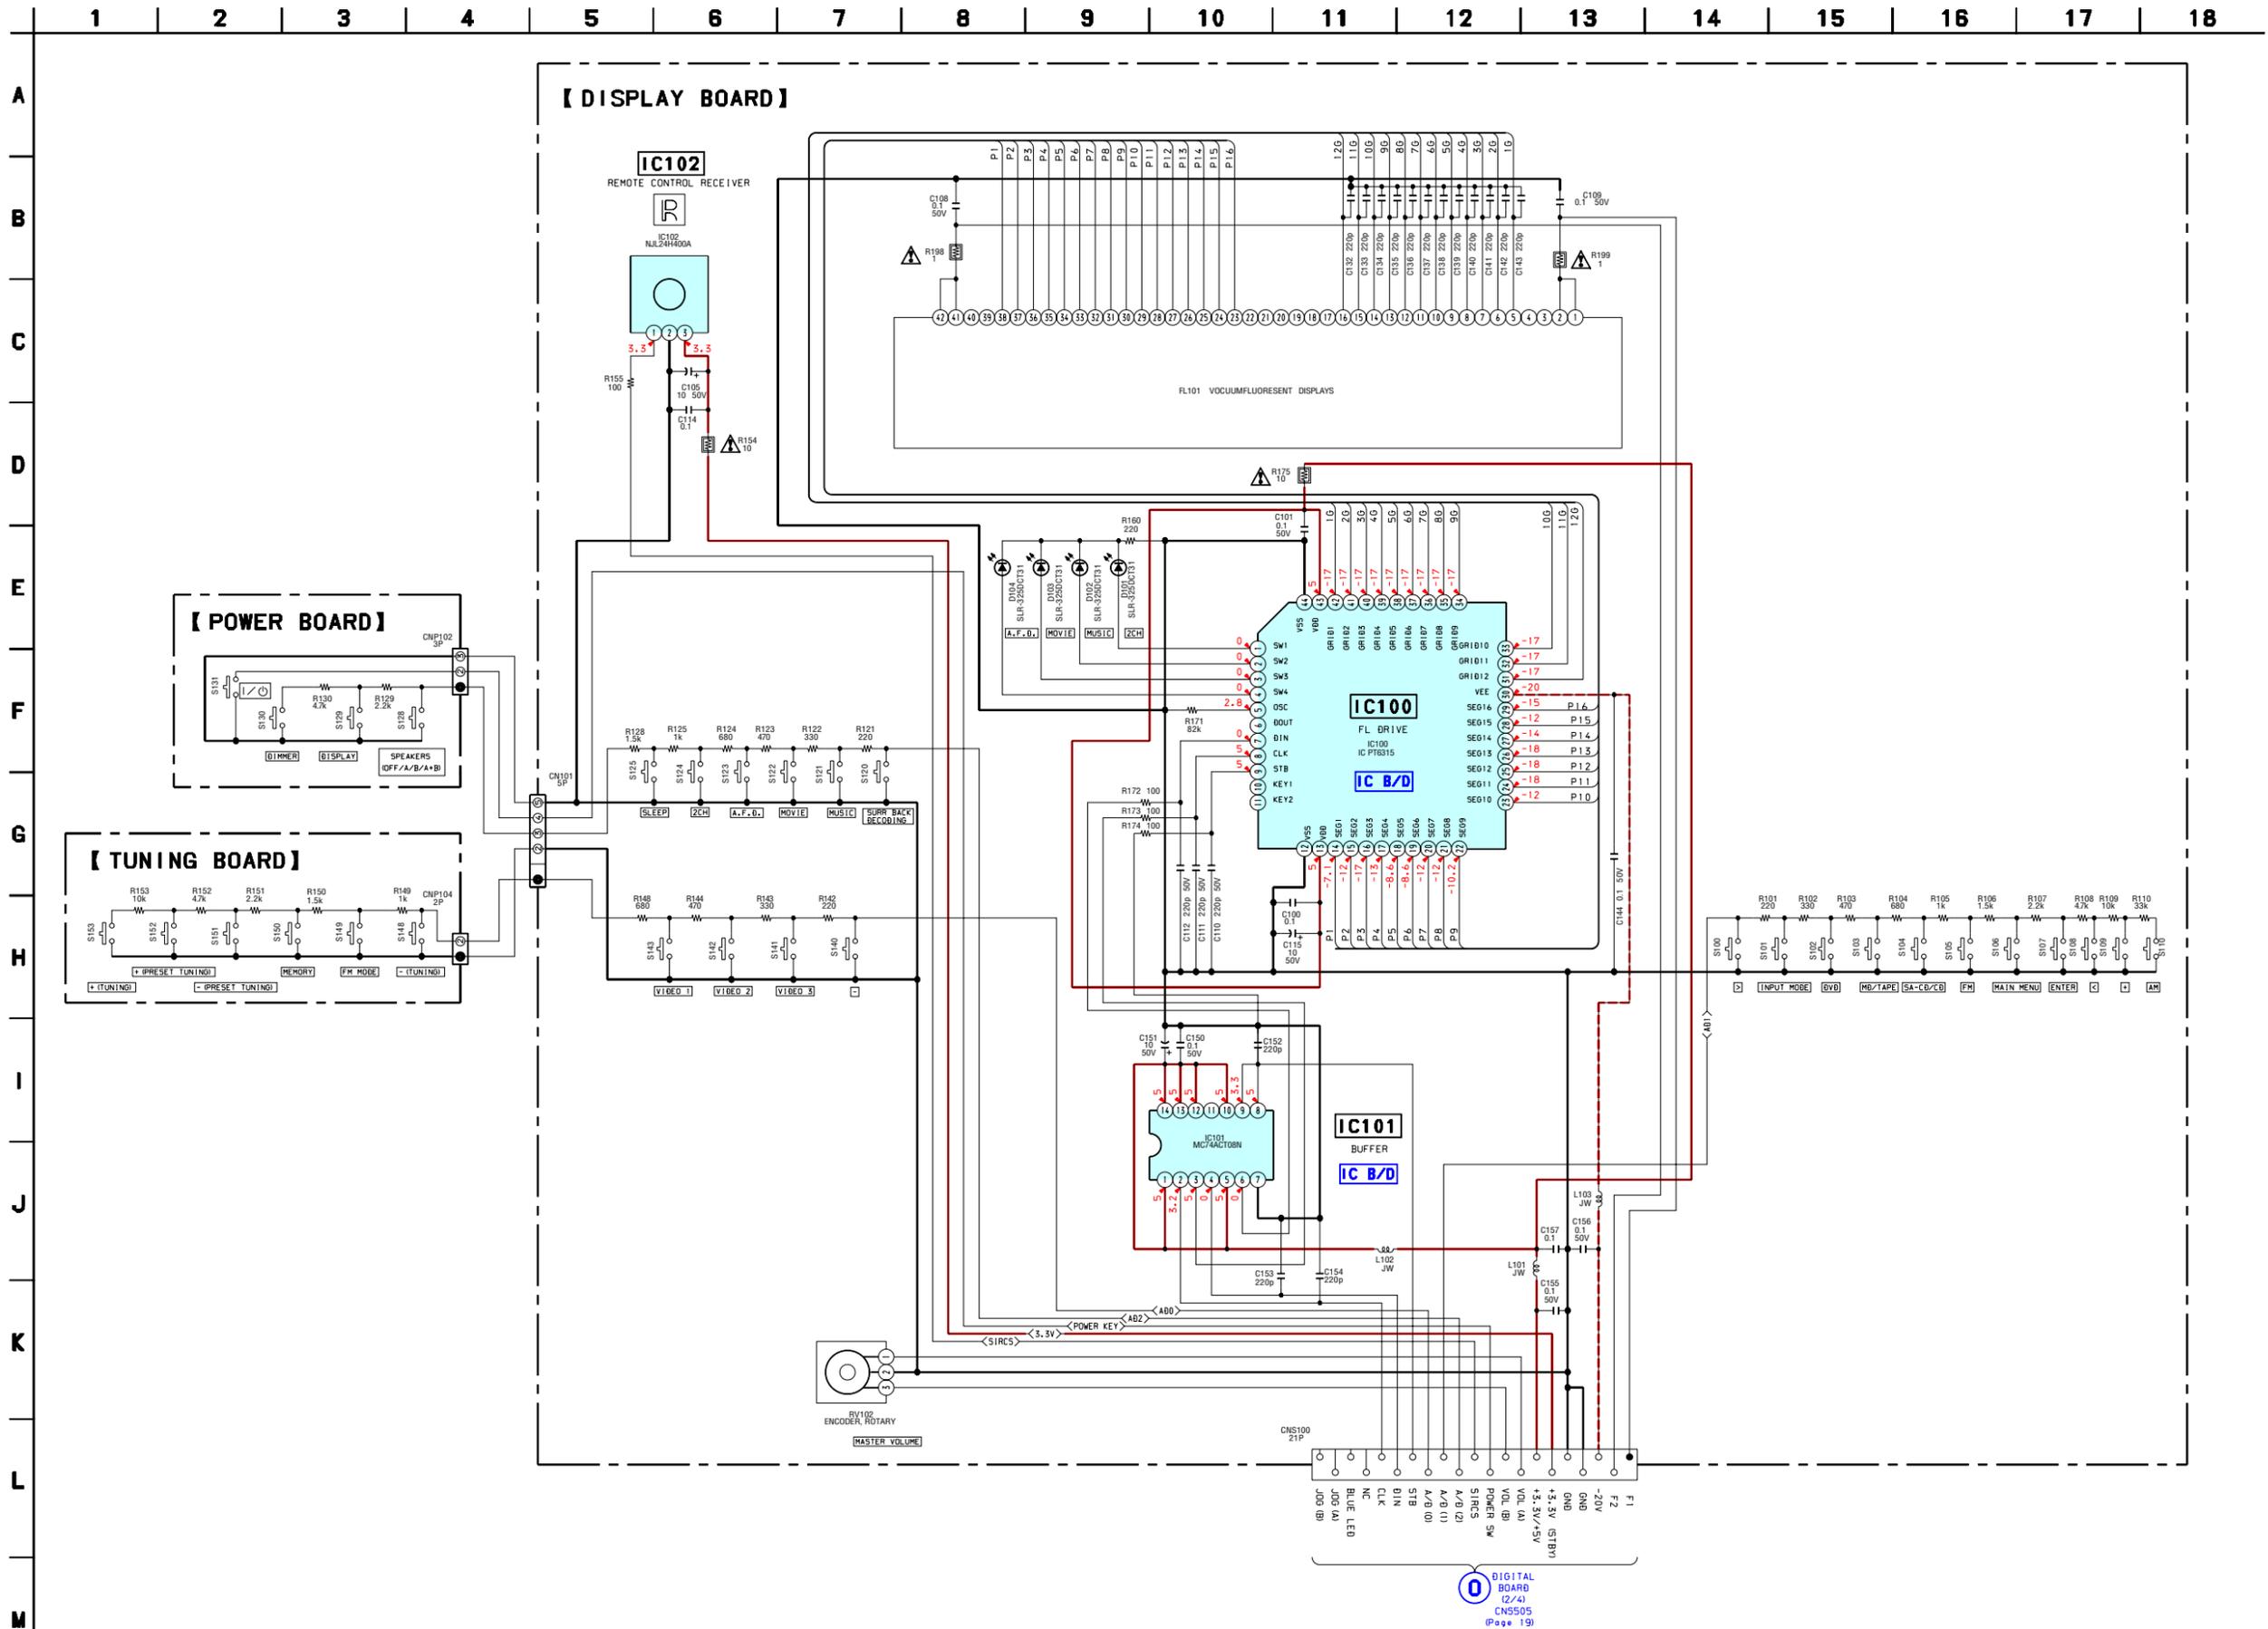

3-16. PRINTED WIRING BOARD – SPEAKER/HEADPHONE SECTION – • See page 12 for Circuit Boards Location.


 :Uses unleaded solder.

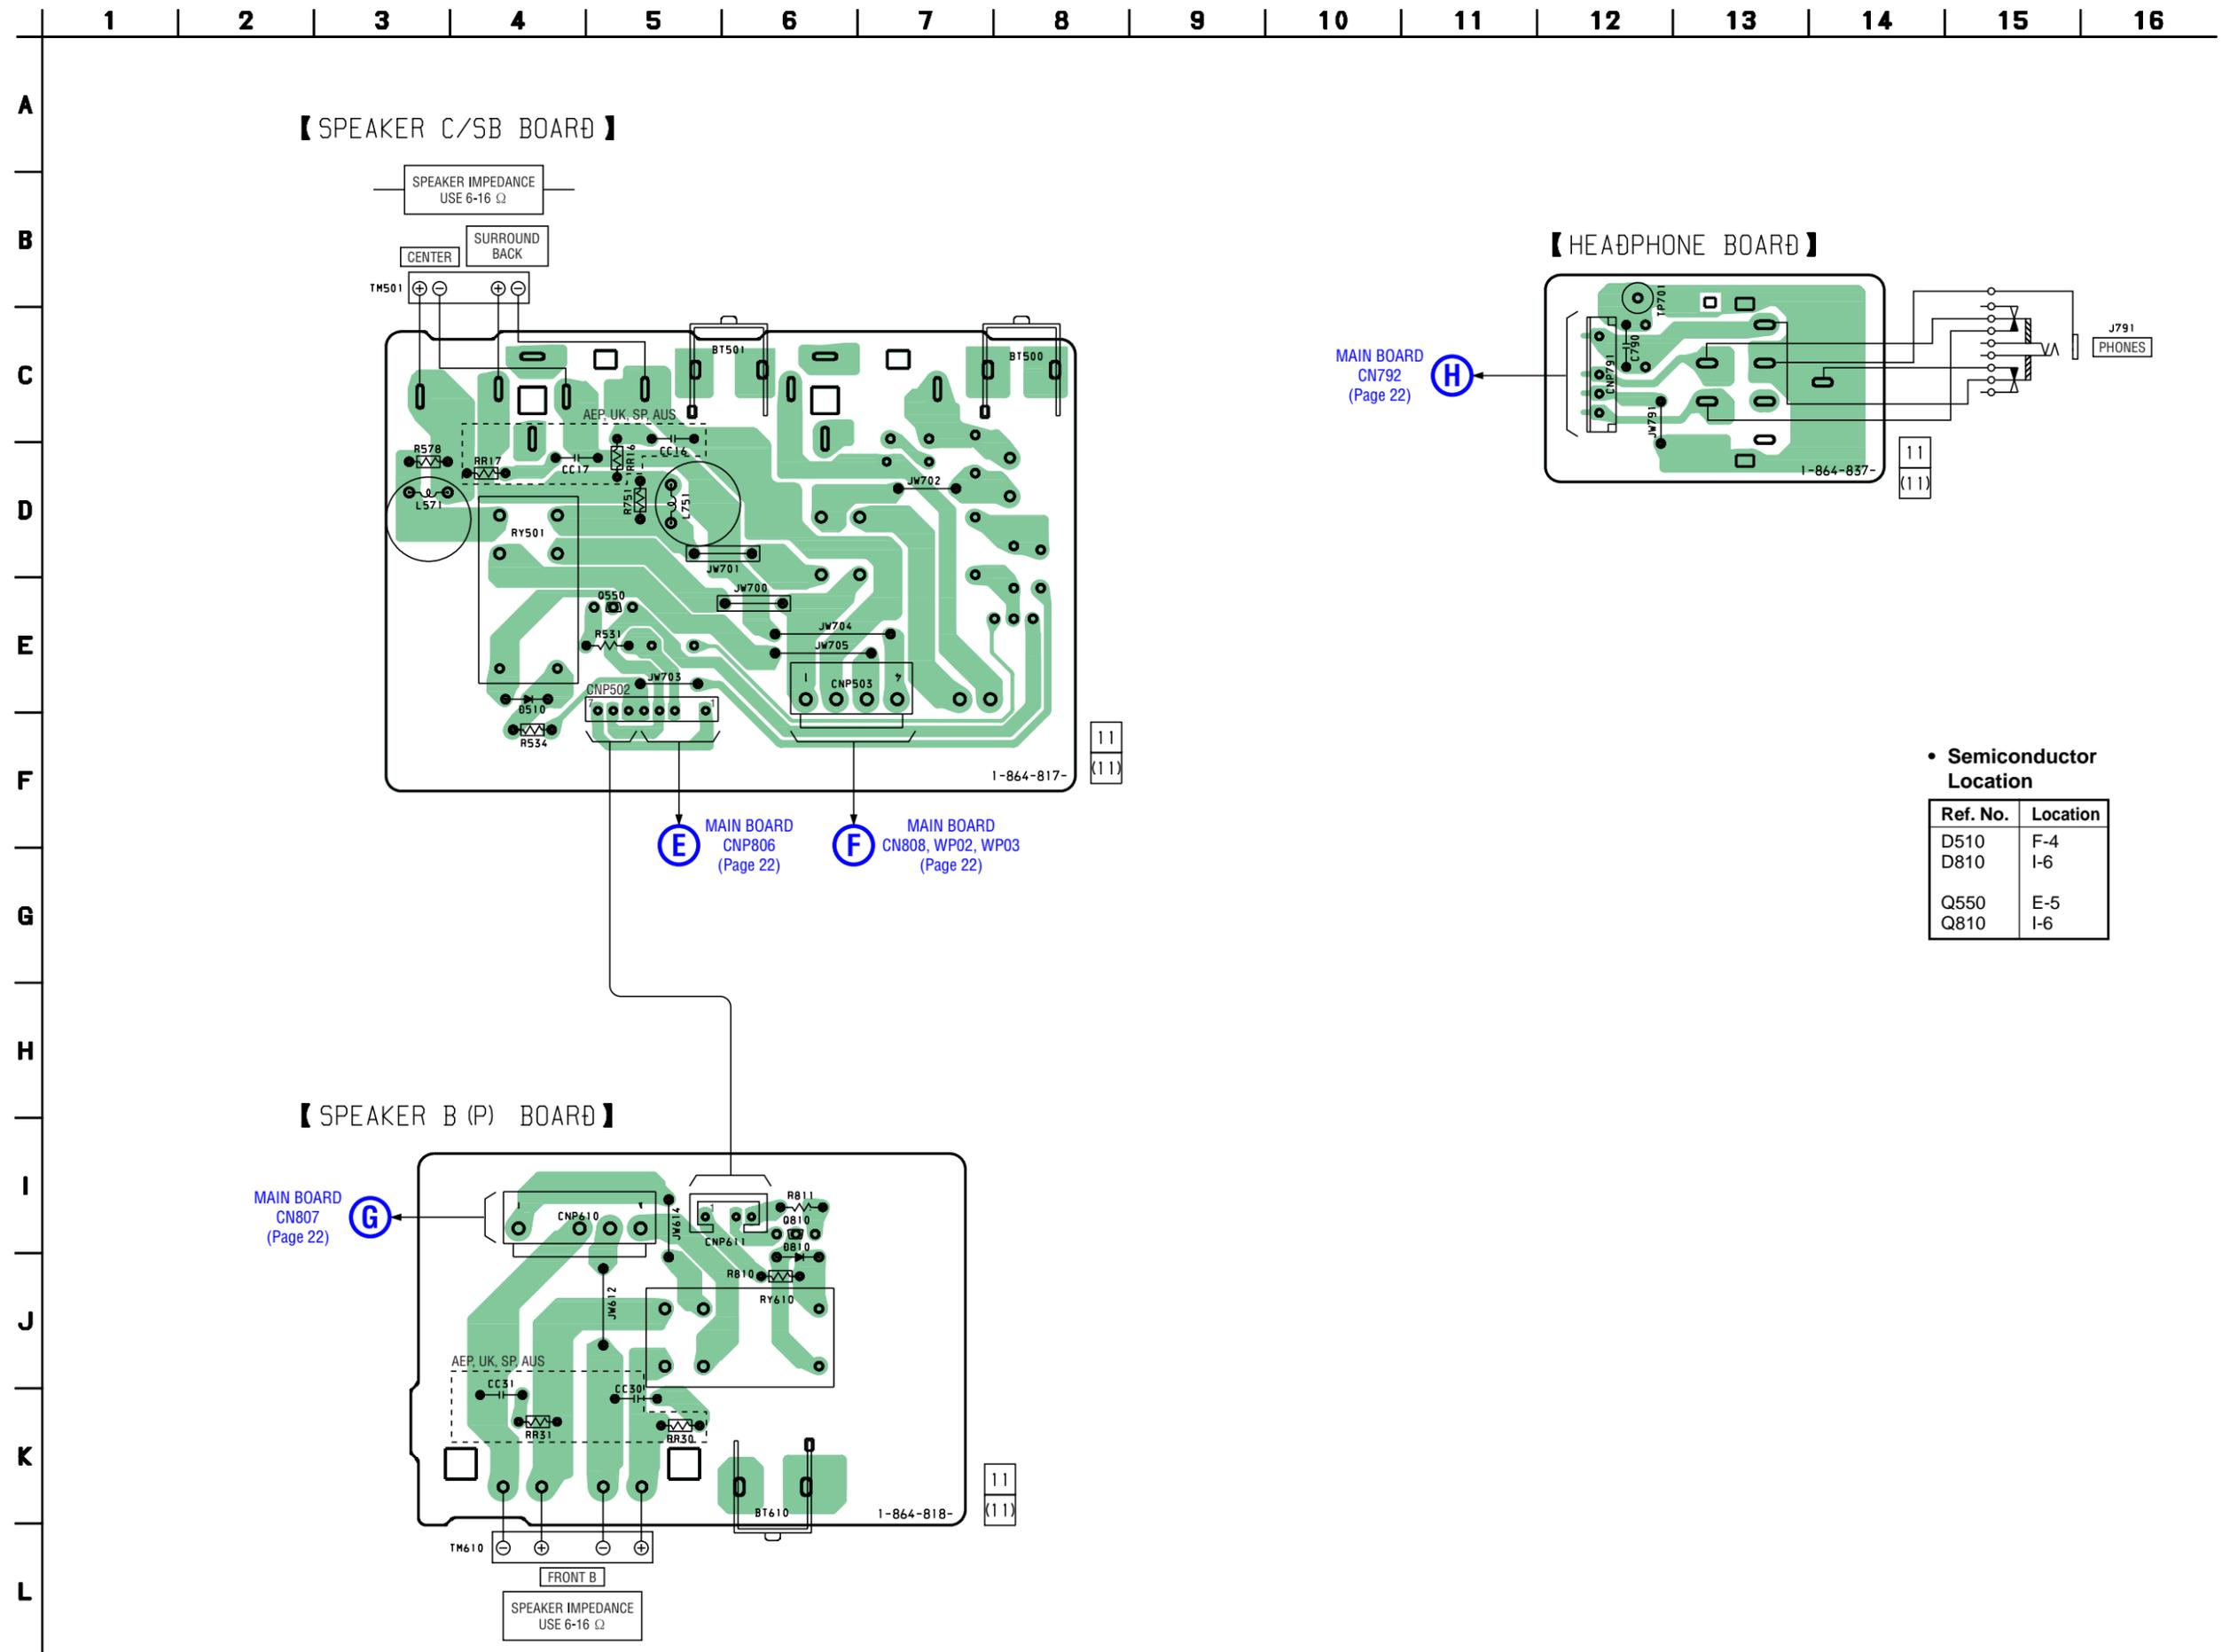


• Semiconductor Location

Ref. No.	Location
D510	F-4
D810	I-6
Q550	E-5
Q810	I-6

3-17. SCHEMATIC DIAGRAM – SPEAKER/HEADPHONE SECTION –

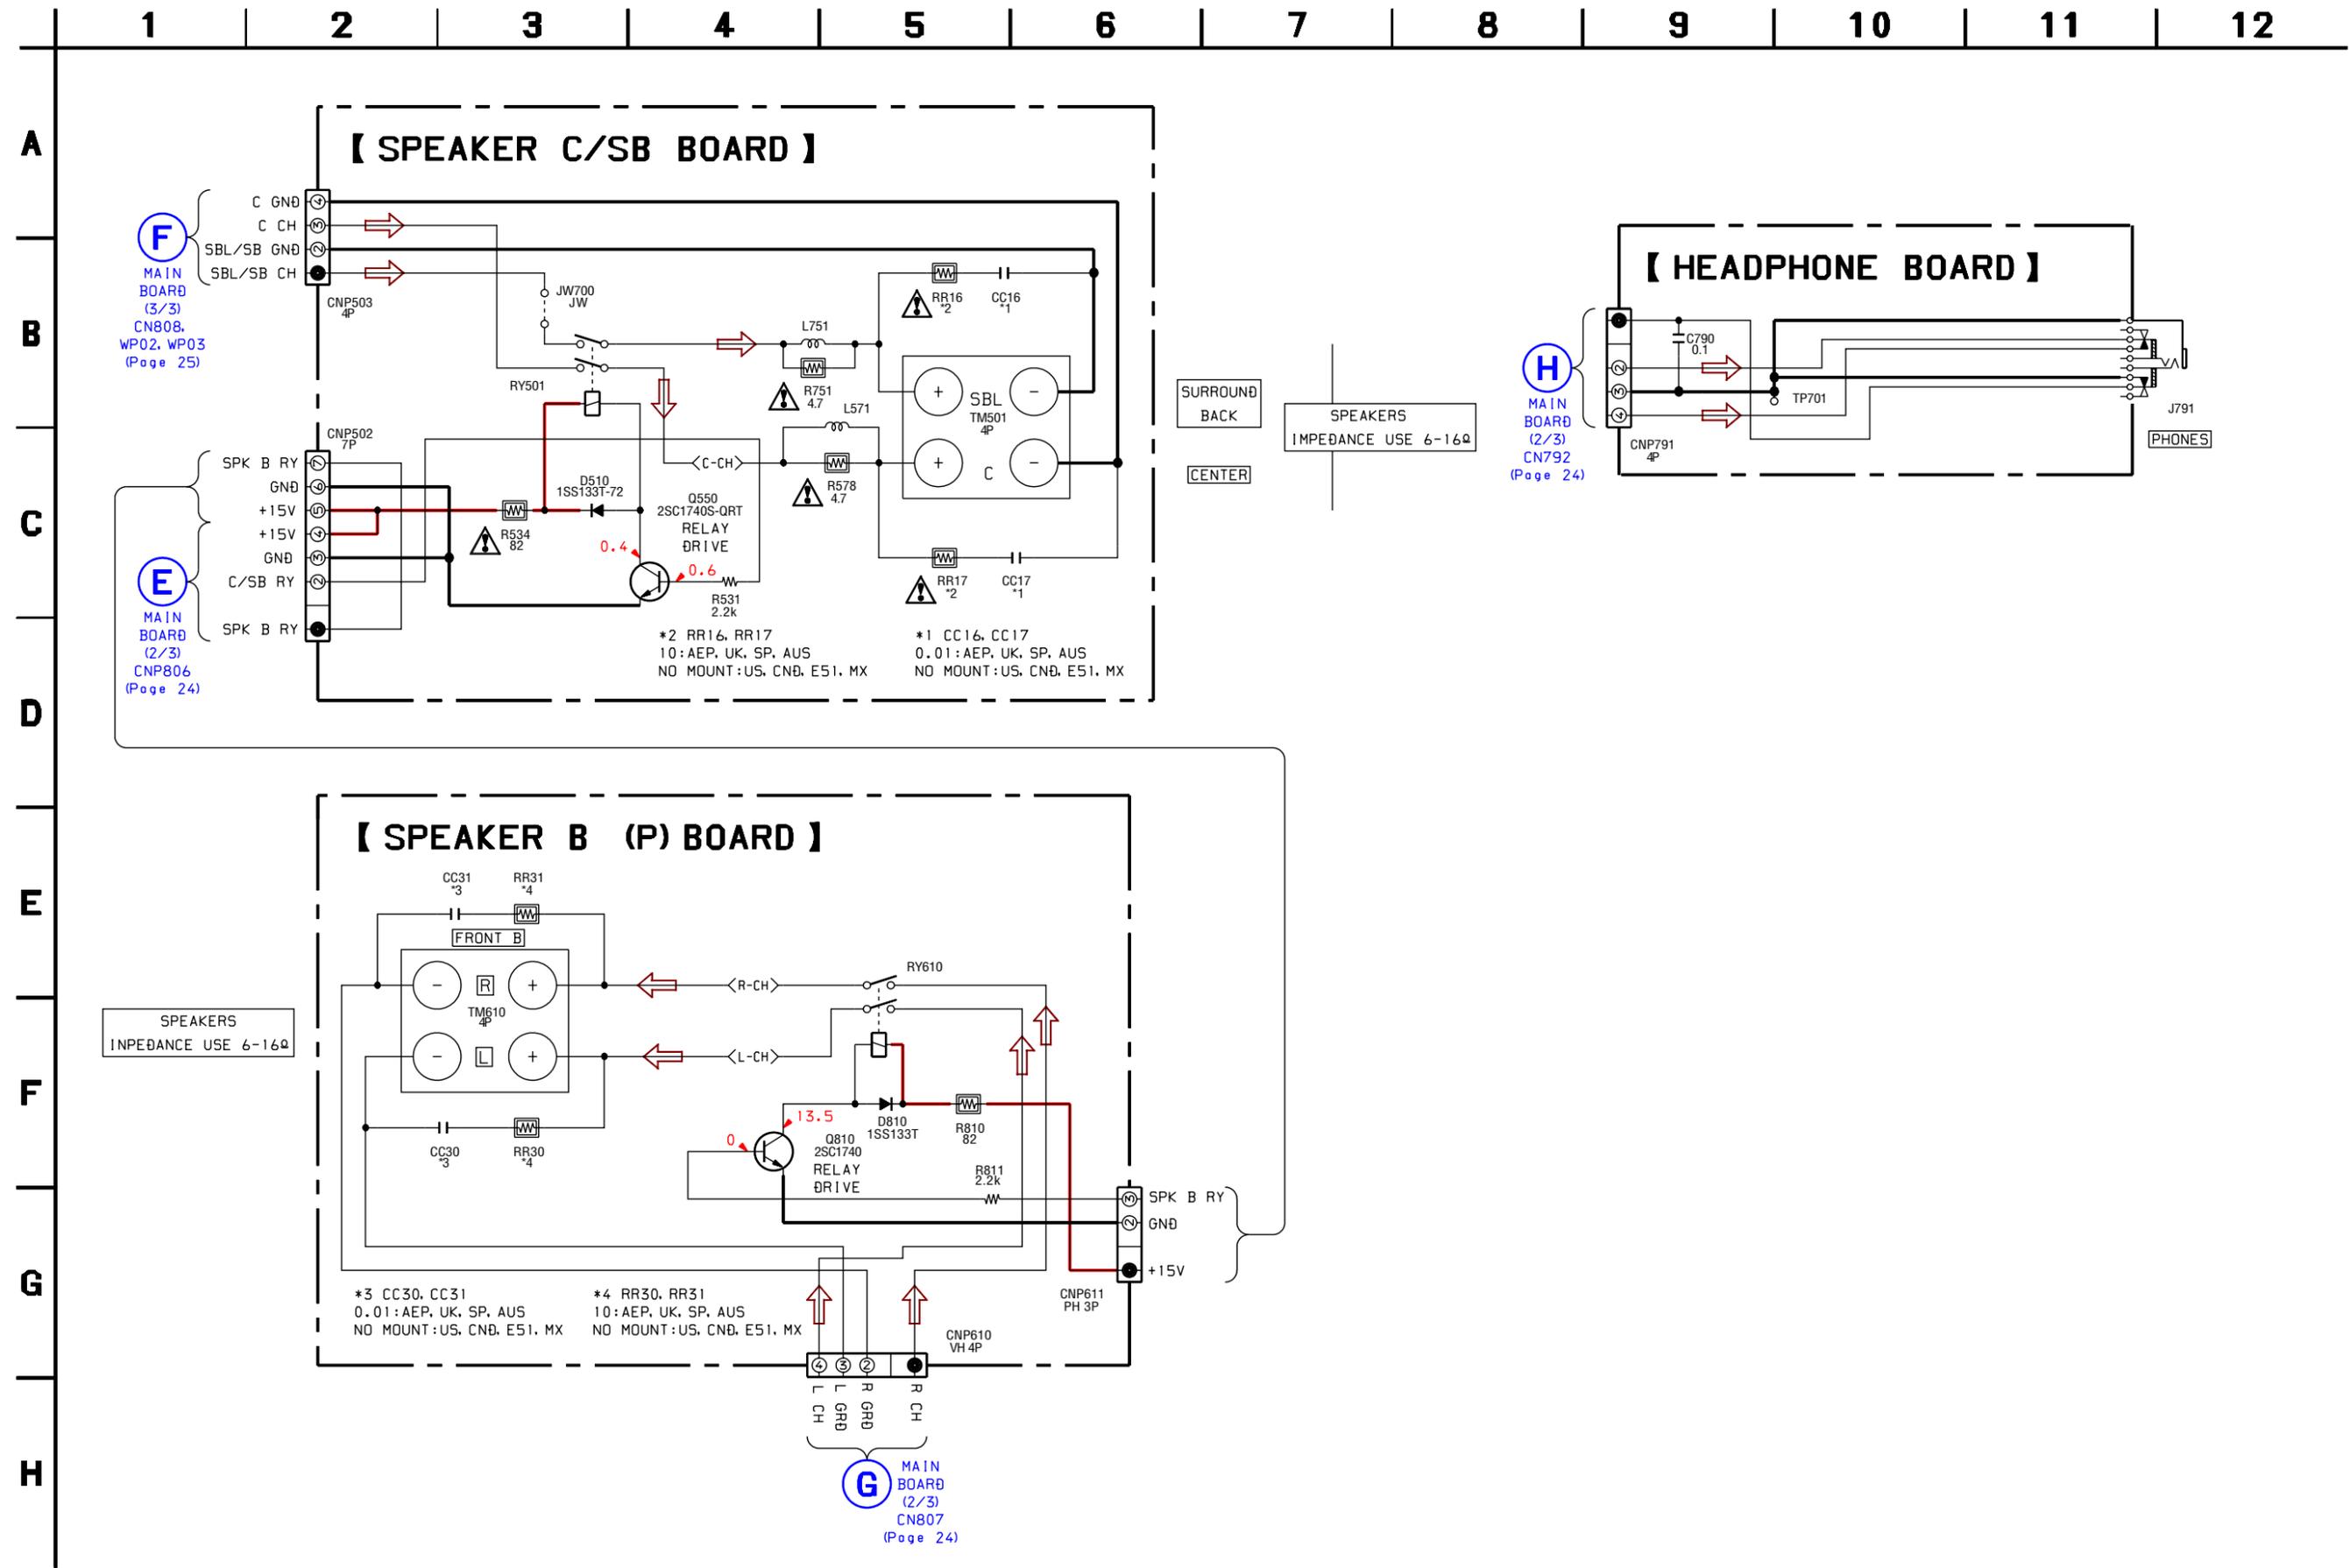


3-18. PRINTED WIRING BOARD – VIDEO IN/OUT SECTION – • See page 12 for Circuit Boards Location.  :Uses unleaded solder.

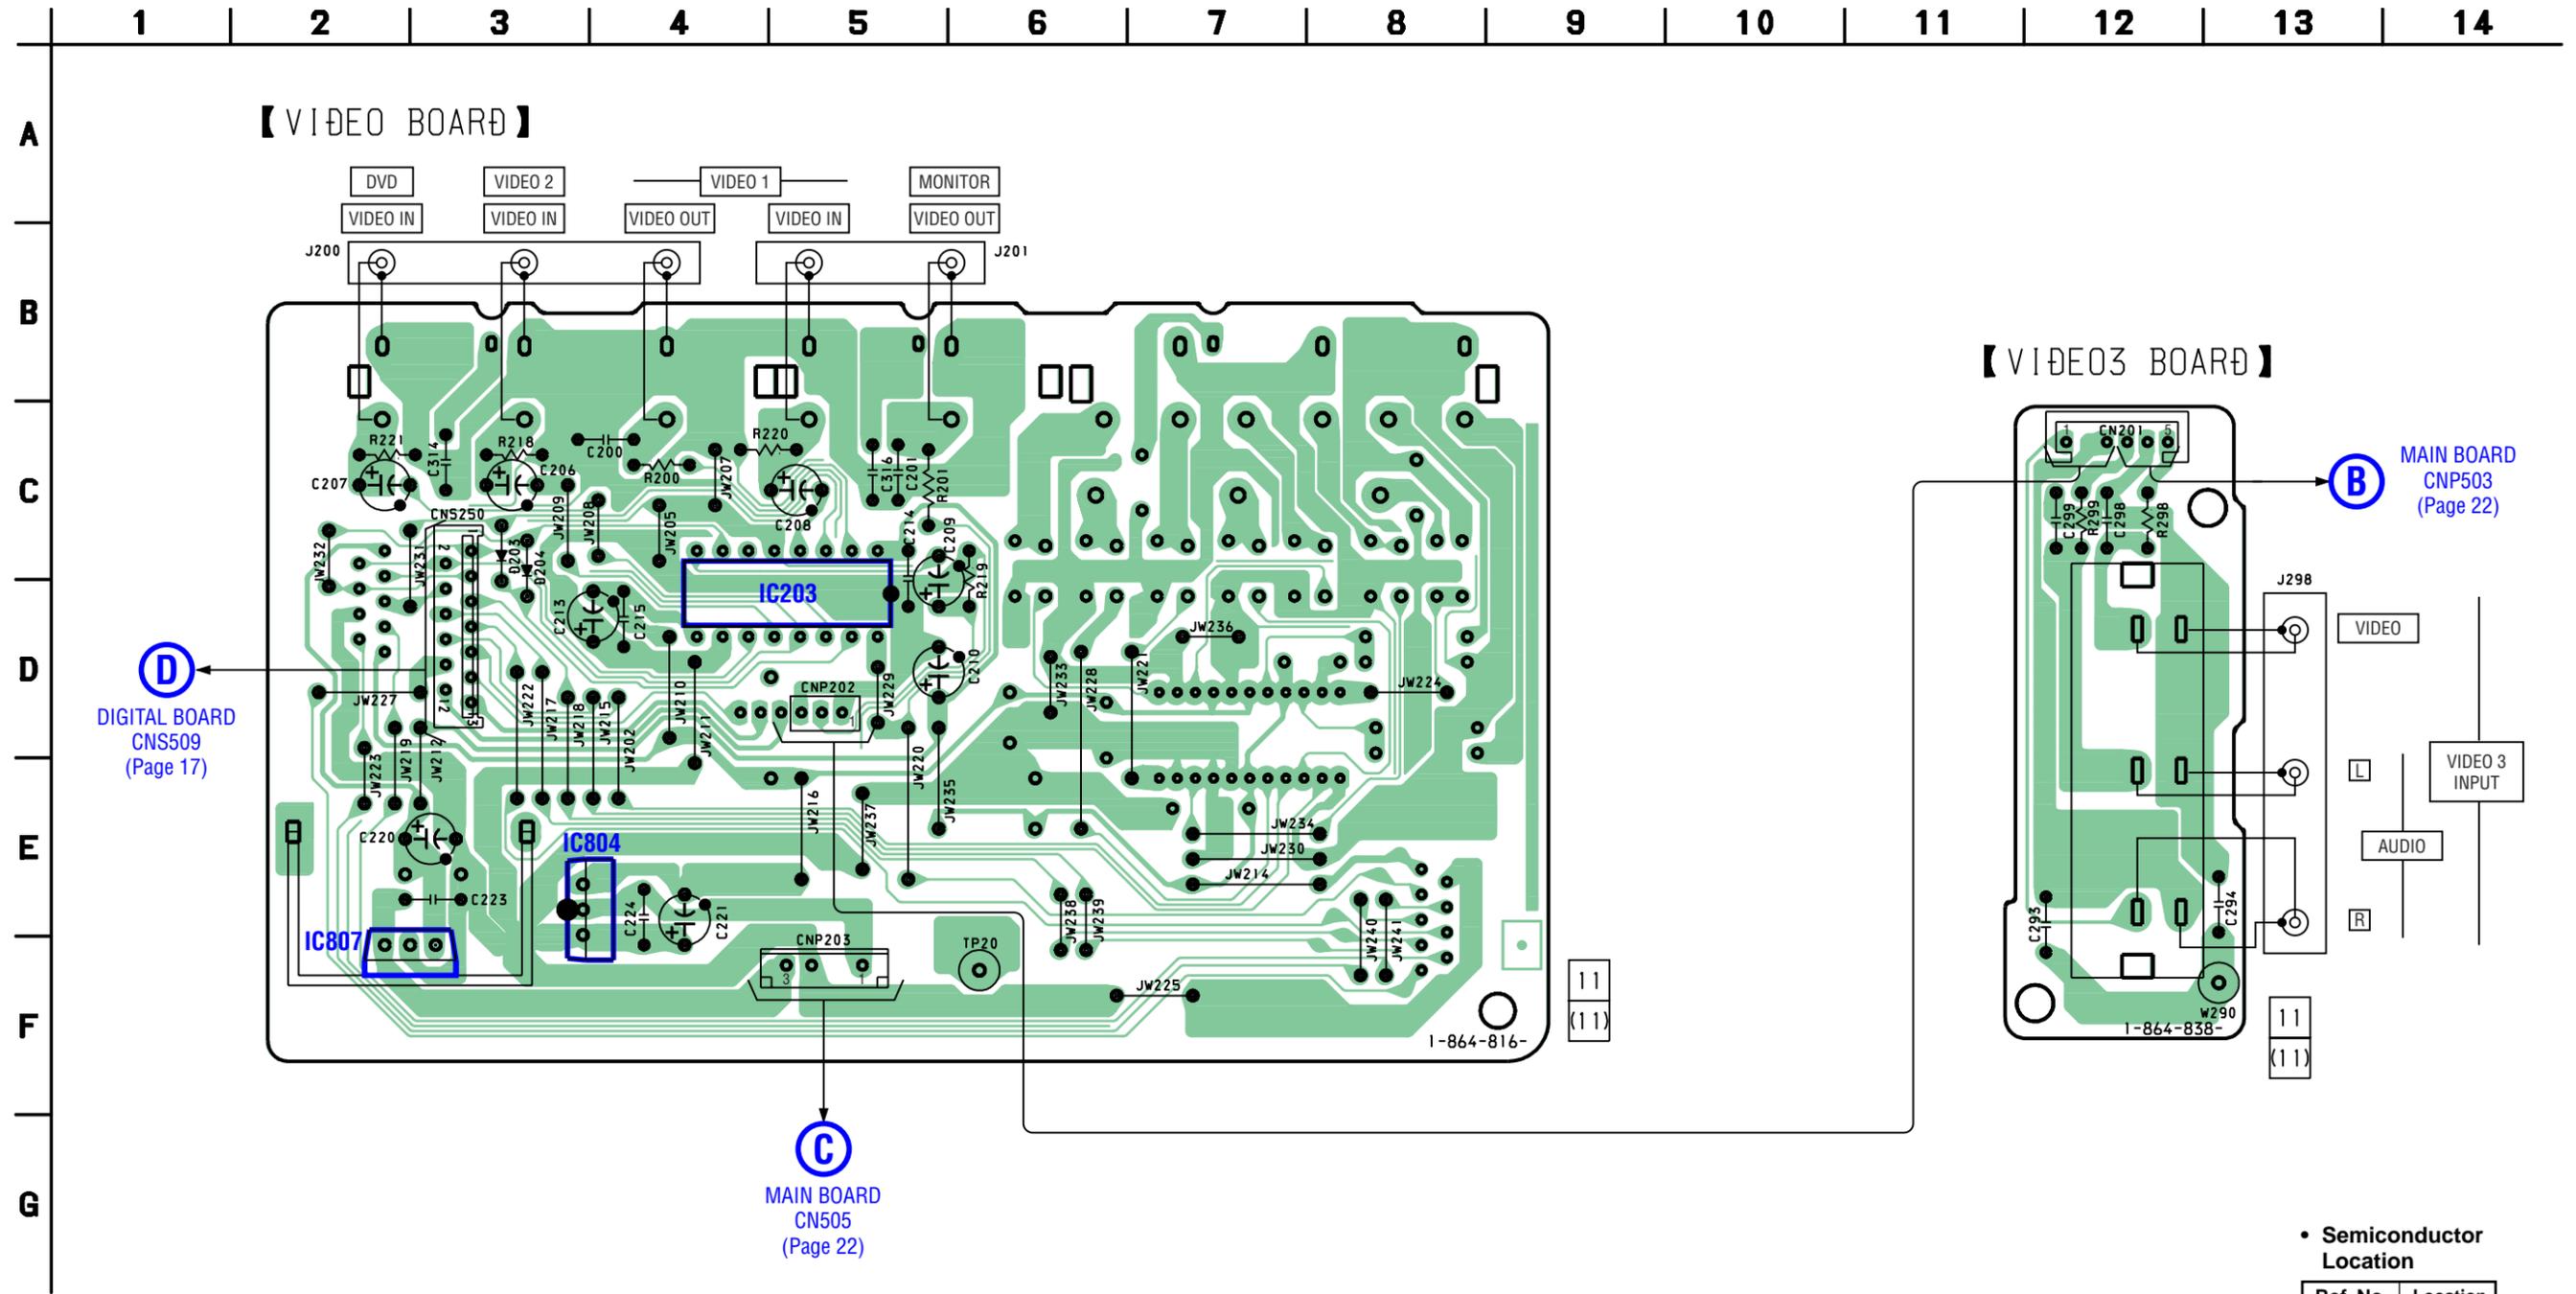

• Semiconductor Location


Ref. No.	Location
D203	D-3
D204	D-3
IC203	D-4
IC804	E-3
IC807	F-2

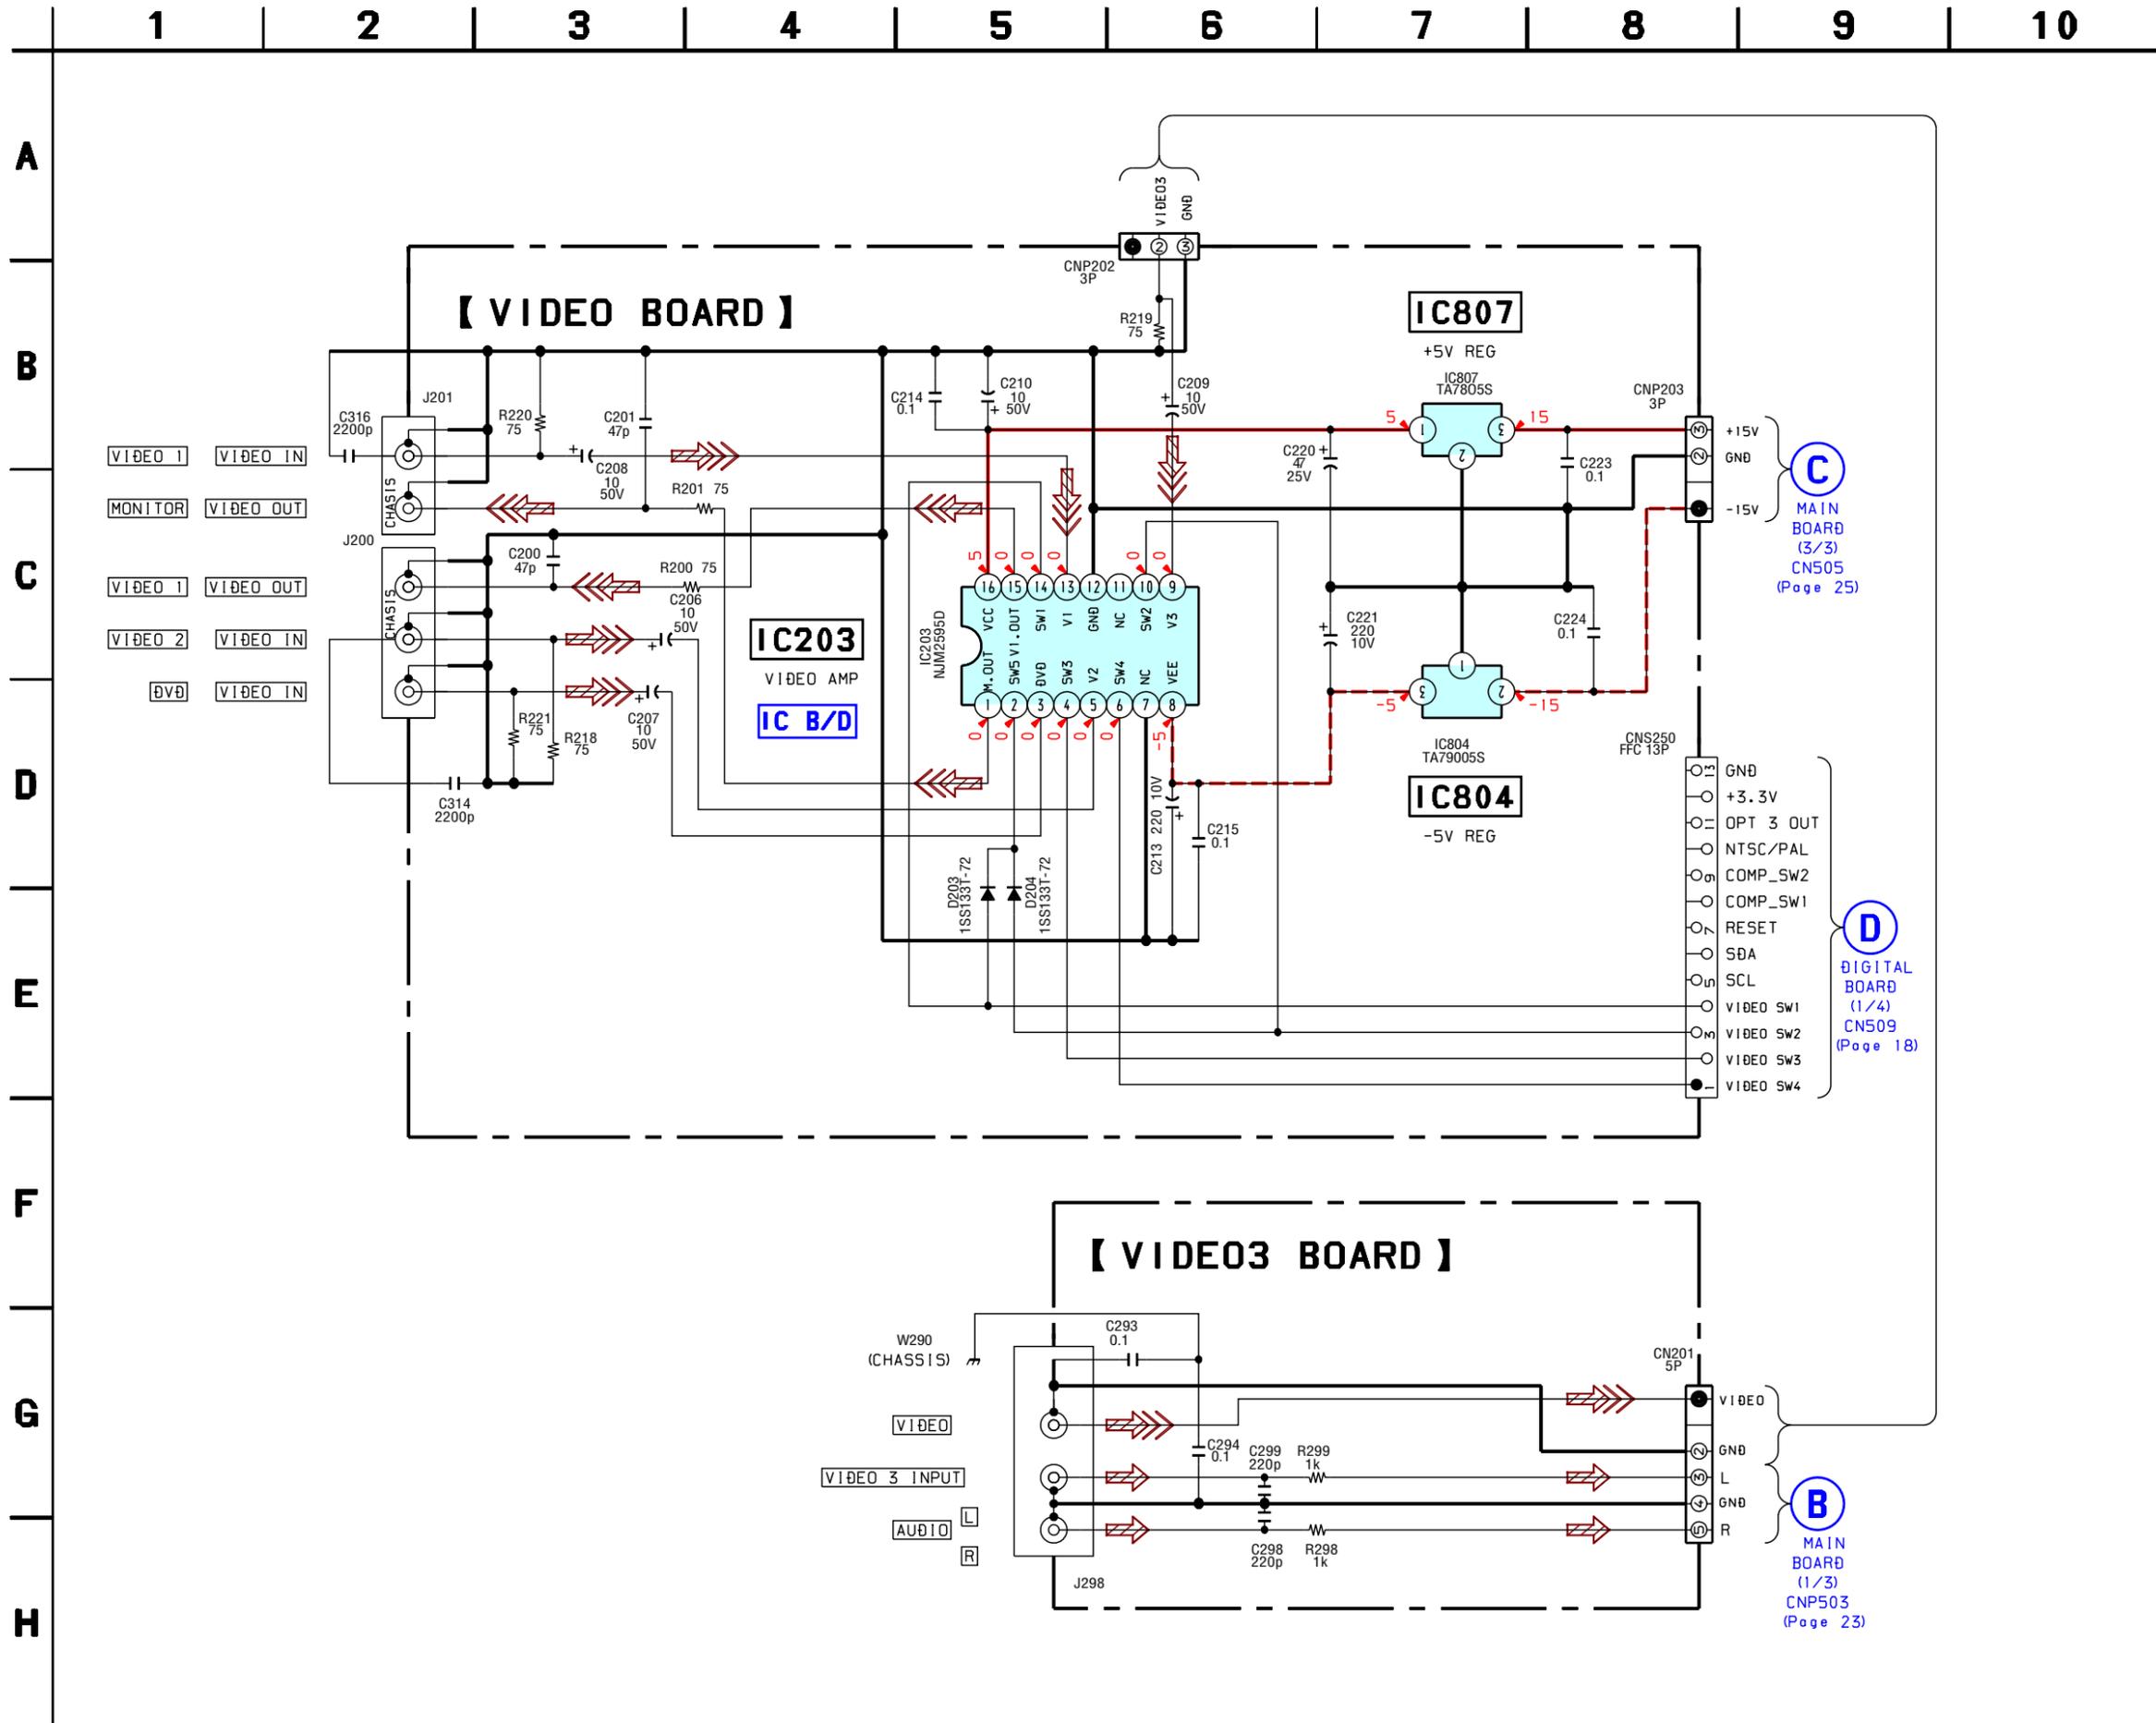


• IC Block Diagrams

– DIGITAL Board –


IC1131 BR24L16F-WE2

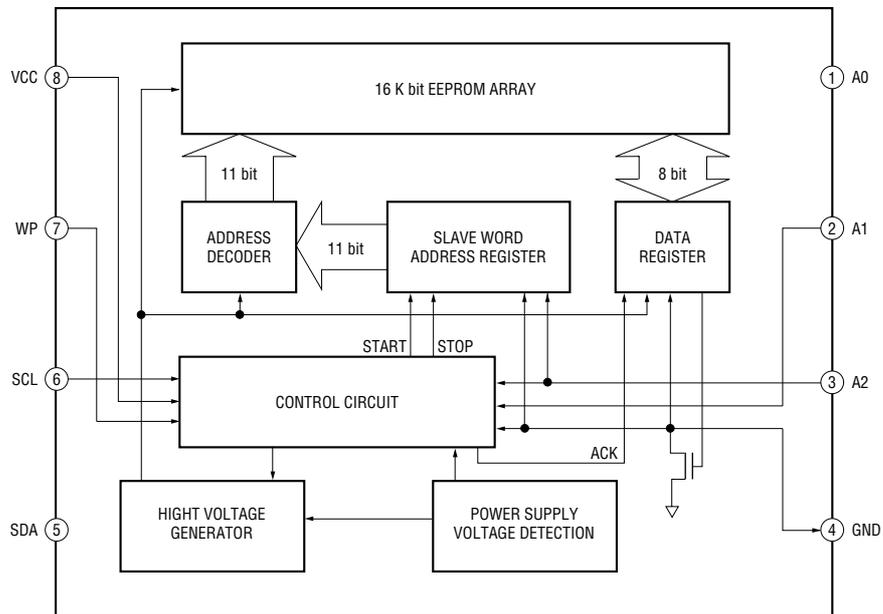


IC1301 LC89056W-E

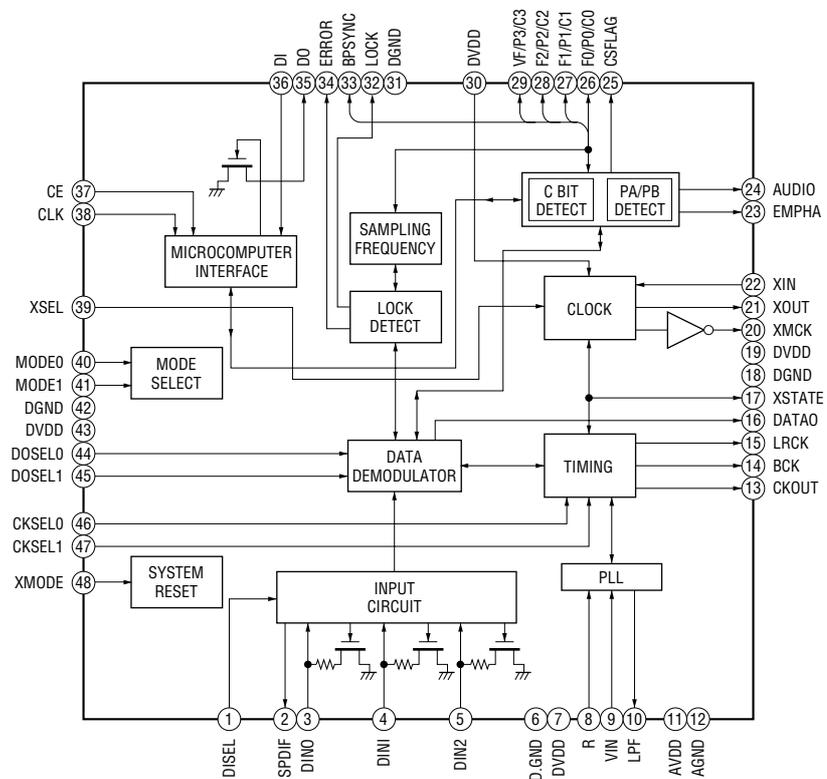


IC1401 PCM1800E/2K

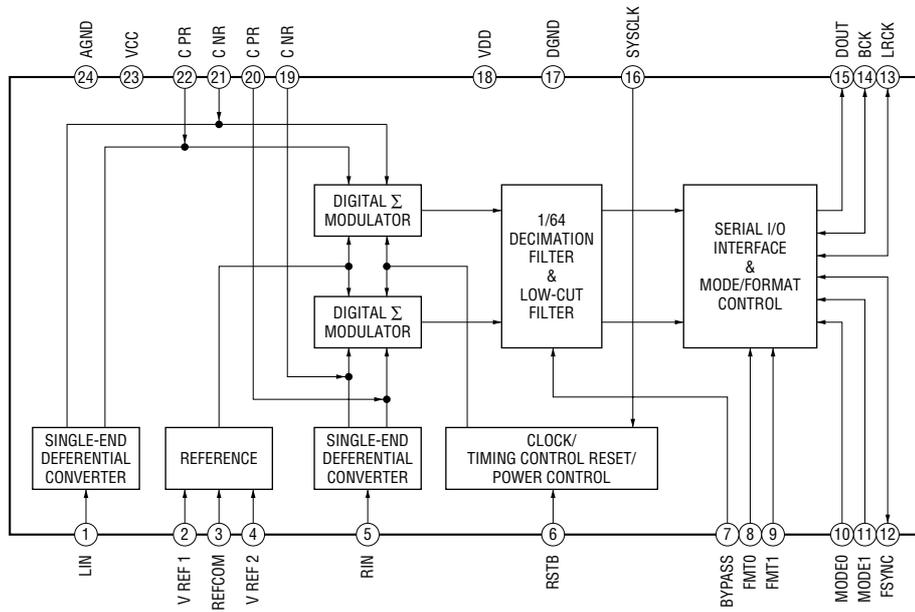

IC1452 PCM1609KPTR

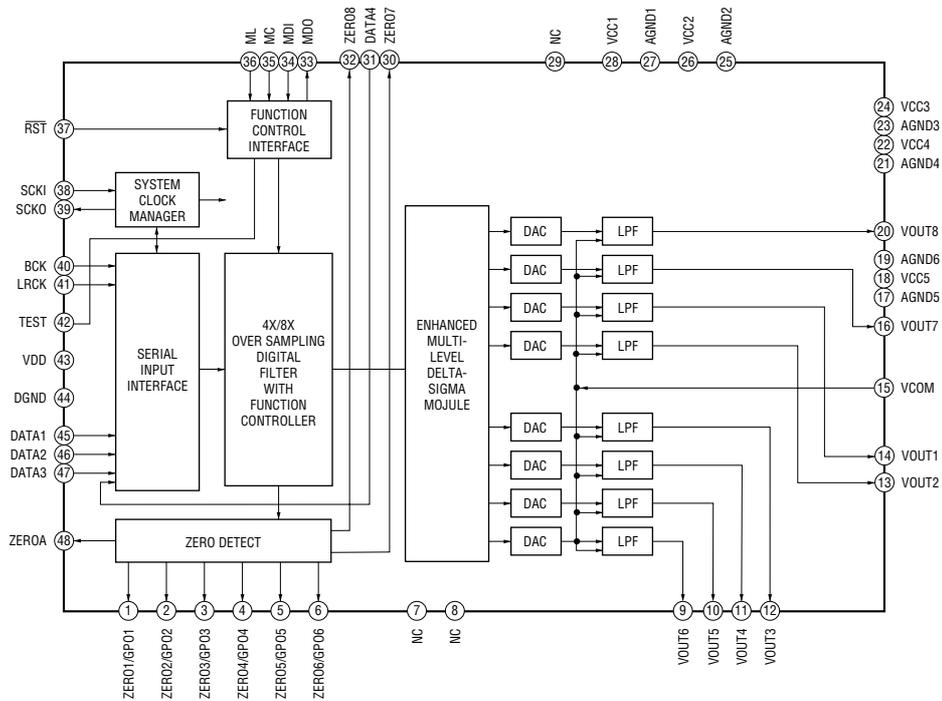


IC1502 IS61LV6416-10TLT

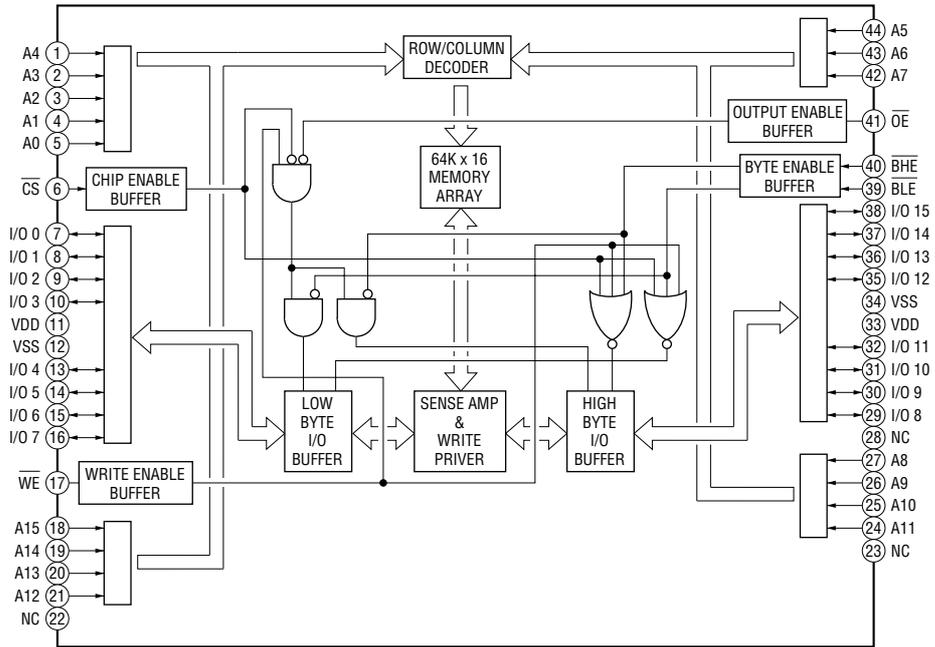


- MAIN Board -

IC501, IC601, IC701 uPC2581V-S

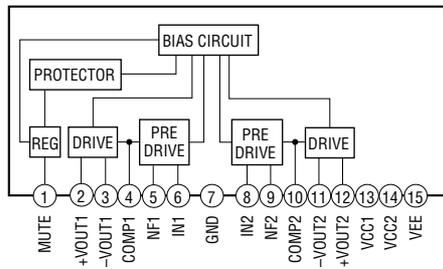


- DISPLAY Board -

IC100 PT6315

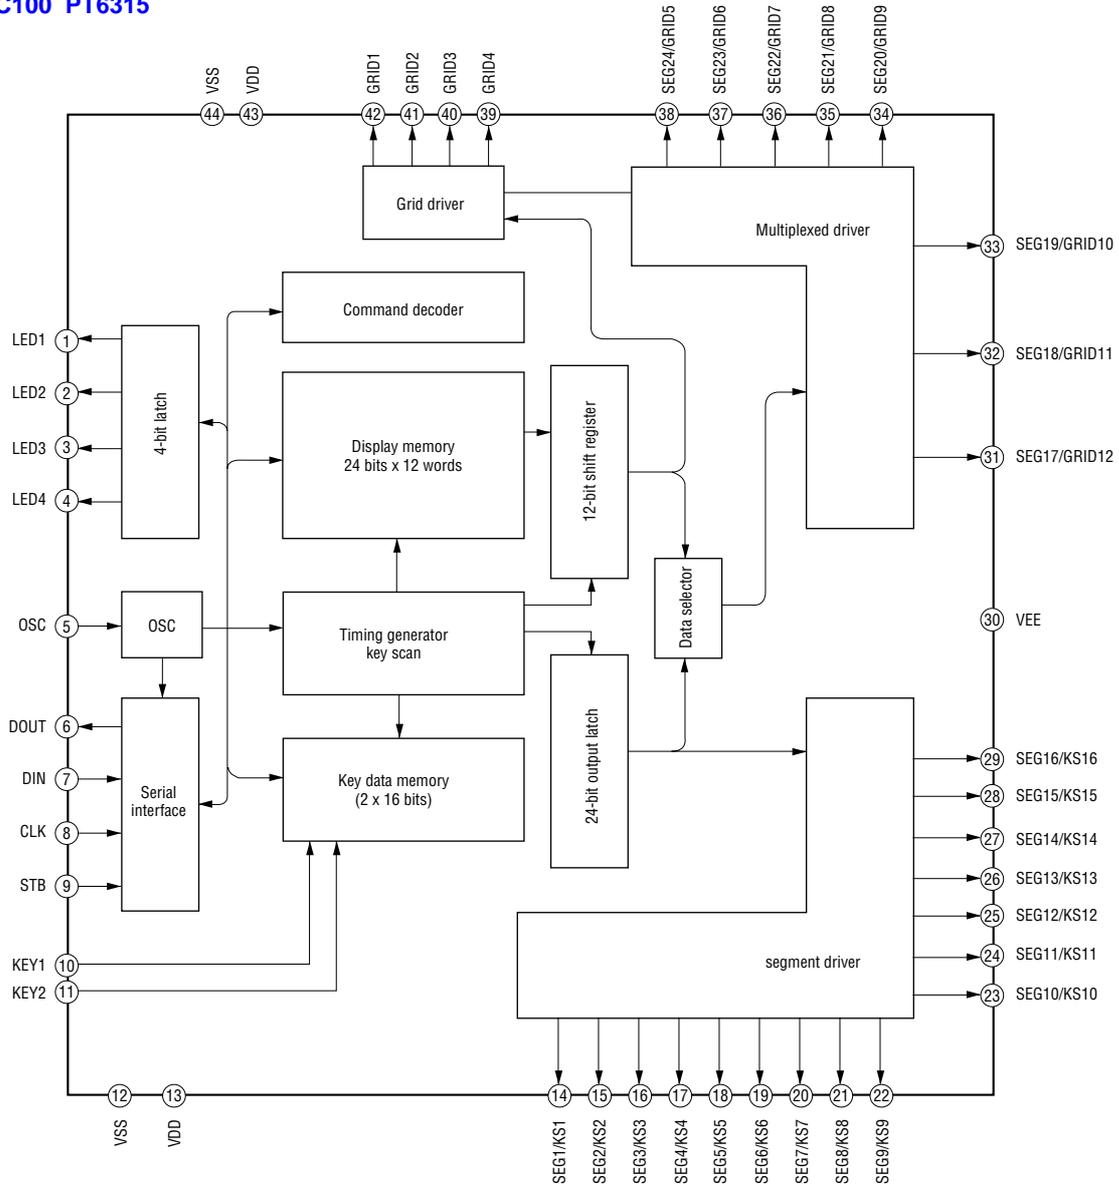


IC101 MC74ACT08N

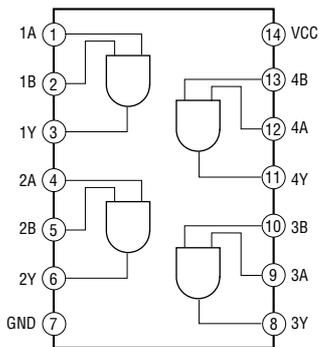

– VIDEO Board –

IC203 NJM2595D

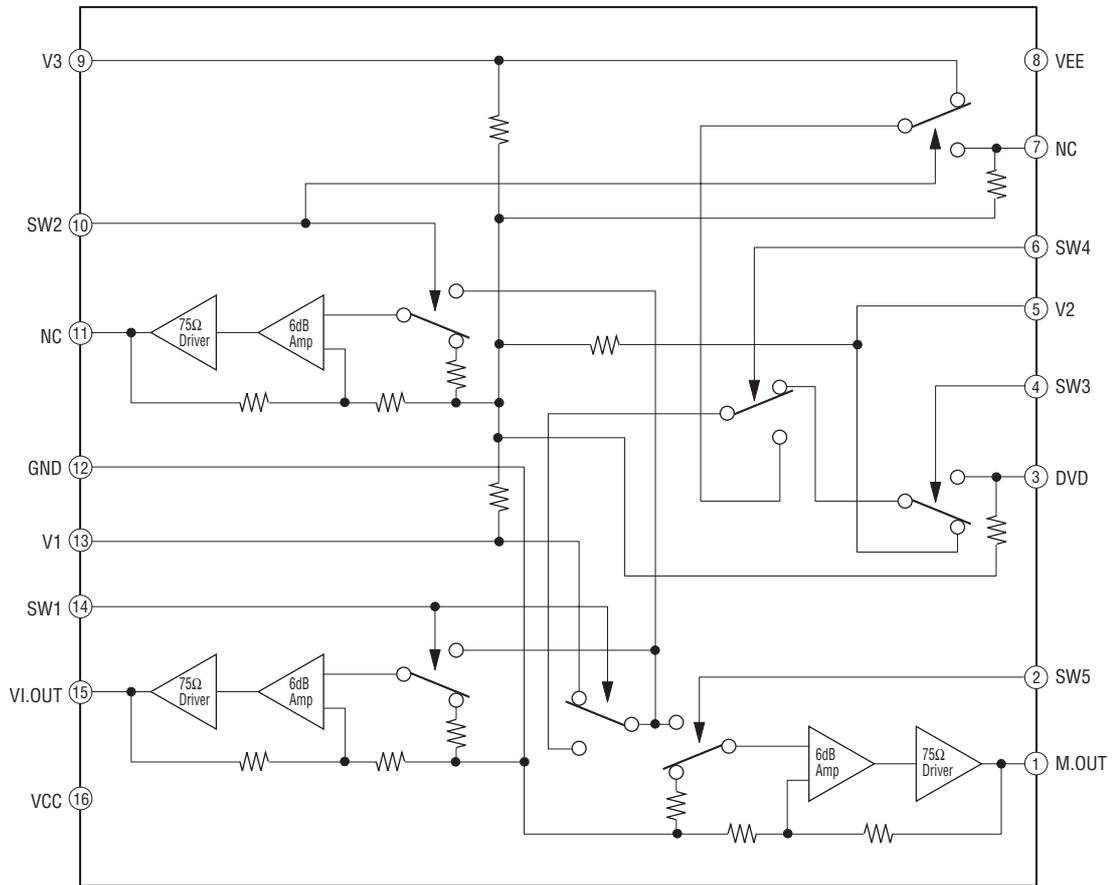

## • IC Pin Function Description

## DIGITAL BOARD IC1101 MB90488BPF-G-137E1 (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Description
1	DATAO	I	Audio data signal input from DIR
2	GP9	I	GP9 signal input from DSP
3	BST	O	BST signal output to DSP
4	HCS	O	HCS signal output to DSP
5	HACN	I	HACN signal input from DSP
6	XRST	O	Reset signal output to DSP
7	PM	O	PM signal output to DSP
8	GP12	O	GP12 signal output to DSP
9	PCM1800RST	O	IC reset signal output to ADC
10	PCM1608RST	O	IC reset signal output to DAC
11	VSS	—	Ground terminal
12	PCM1608ML	O	Latch signal output to DAC
13	PCM1608MC	O	Clock signal output to DAC
14	PCM1608MDI	O	IC data output to DAC
15	PCM1608MDO	I	IC data input to DAC
16	T_CLK	O	Tuner clock signal output terminal
17	T_DI	O	Tuner data signal output terminal
18	HDOUT	I	HDOUT signal input from DSP
19	HDIN	O	HDIN signal output to DSP
20	HCLK	O	Clock signal output to DSP
21	DLY_B PASS	—	Connected to ground terminal
22	DIR/AD	—	Connected to ground terminal
23	VCC5	—	Power supply
24	SYS_MUTE	O	Muting and error signal output
25	ANA/DIG	O	Analog signal or digital signal output terminal
26	UPCON_RST	—	Not used
27	FLASH2/VOL_CL	O	Volume IC clock signal output terminal
28	FLASH1/VOL_DA	O	Volume IC data and latch signal output terminal
29	SDA	I	EEPROM data signal input terminal
30	SCL	O	EEPROM clock signal output terminal
31	ENC_A	—	Short to ground terminal
32	ENC_B	—	Short to ground terminal
33	UPCON	—	Not used
34	UPCON_CLK	—	Not used
35	AVCC	—	Analog power supply
36	AVRH	I	Analog reference voltage input
37	AVSS	—	Analog ground terminal
38	A/D0	I	Function key push signal input
39	A/D1	I	Function key push signal input
40	A/D2	I	Function key push signal input
41	VERSION	I	Version setting input terminal (DESTINATION)
42	VSS	—	Ground terminal
43	RDS SIG	I	RDS signal detect input
44	MODEL	I	Version setting input (MODEL)
45	VOL ENCODER (A)	I	Volume signal input from rotary encoder
46	VOL ENCODER (B)	I	Volume signal input from rotary encoder
47	BLUE LED	—	Not used

Pin No.	Pin Name	I/O	Description
48	STOP	I	AC off detect signal input
49	MD0	I	Operation mode setting input
50	MD1	I	Operation mode setting input
51	MD2	I	Operation mode setting input
52	RDS CLOCK	I	RDS clock signal input (Not used)
53	RDS DATA	I	RDS data signal input (Not used)
54	SIRCS	I	Data signal input from the remote control sensor
55	HP DETECT	I	Headphone signal input
56	POWER KEY	I	Power switch key detect signal input
57	FL_LAT	O	FL driver latch signal output terminal
58	POWER RY	O	Power relay control signal output
59	FL_DATA	O	FL driver signal output terminal
60	FL_CLK	O	FL driver clock signal output terminal
61	PROTECTOR	I	Protector status detect signal input
62	HP_RY	O	Headphone relay control signal output
63	FUSE DETECT	I	Fuse detect signal input
64	NTSC_PAL_SW	—	Short to ground terminal
65	COMPO_SW2	—	Short to ground terminal
66	FRONT_RY	O	Front speaker relay control signal output
67	SP_B RY	O	Front speaker B relay control signal output
68	C/SW RY	O	Center speaker or Subwoofer control signal output
69	REAR RY	O	Rear speaker relay control signal output
70	SW_RY	—	Short to ground terminal
71	COMPO_SW1	—	Short to ground terminal
72	BRIGEABLE_RY	O	Bridgeable relay control
73	DO	I	Frequency data signal input from the tuner
74	SLATCH	O	Latch signal output to the tuner
75	TUNED	I	Tuning a frequency signal input from the tuner
76	STEREO	I	Stereo tuning signal input from the tuner
77	RSTX	I	System reset
78	MUTE	O	Muting signal output to the tuner
79	X1A	—	Not used
80	X0A	—	Ground terminal
81	VSS	—	Ground terminal
82	X0	—	Connection for a crystal resonator
83	X1	—	Connection for a crystal resonator
84	VCC3	—	Power supply
85	GROUPING_SW	—	Not used
86	SW1	O	Video select control signal output
87	SW2	O	Video select control signal output
88	SW3	O	Video select control signal output
89	SW4	O	Video select control signal output
90	SELECT2	—	Not used
91	SELECT1	—	Not used
92	BST_SEL	O	BST signal output terminal
93	XMODE	O	Reset signal output to DIR
94	CKSEL 1	O	CKSEL control signal to DIR
95	CLK	O	Clock signal output to DIR
96	CE	O	Chip enable signal output to DIR

## STR-K870P

Pin No.	Pin Name	I/O	Description
97	DI	O	Data signal output to DIR
98	DO	I	Data signal input from DIR
99	ERROR	I	PLL error muting signal input from DIR
100	XSTATE	I	XSTATE data signal input from DIR

## SECTION 4 EXPLODED VIEWS

**NOTE:**


- -XX and -X mean standardized parts, so they may have some difference from the original one.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Abbreviation  
 AUS : Australian model  
 CND: Canadian model  
 E51 : Chilean and Peruvian models  
 MX : Mexican model  
 SP : Singapore model

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

### 4-1. FRONT CABINET SECTION

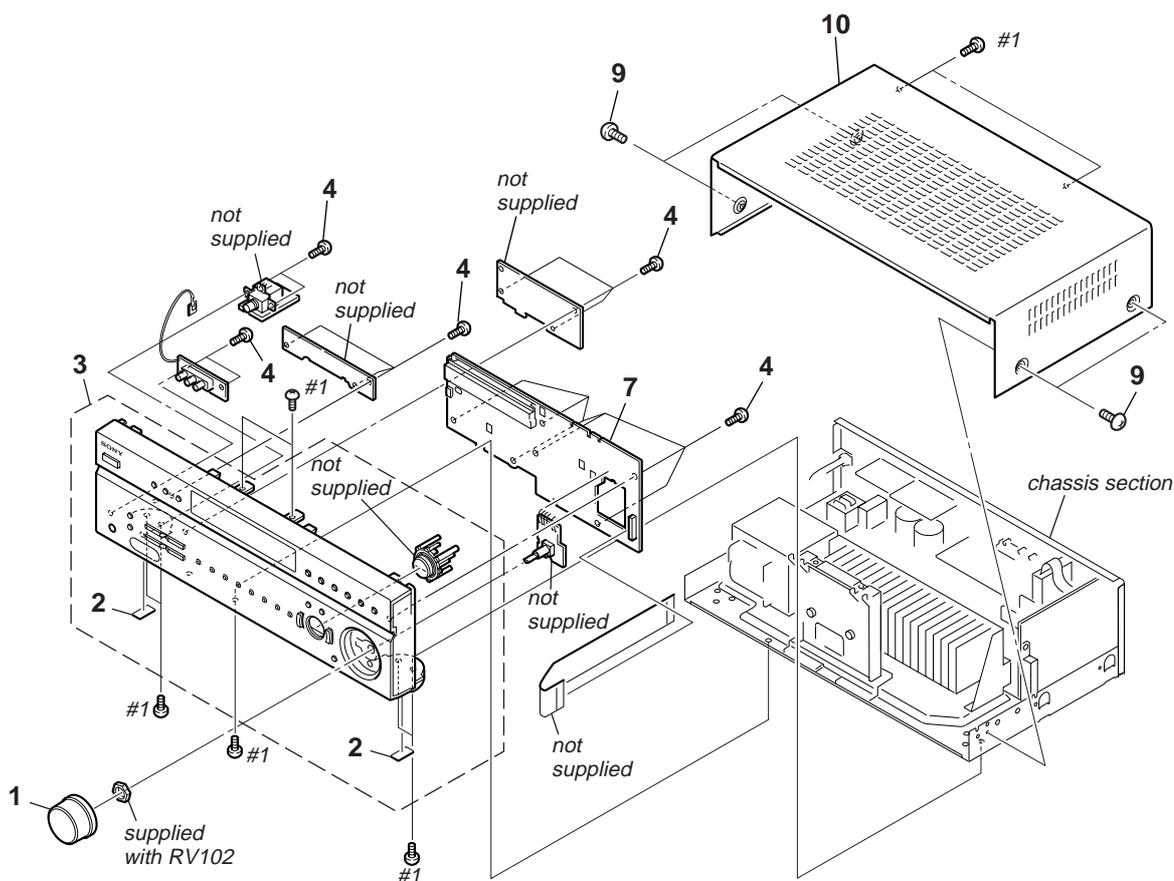

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-232-113-01	KNOB (VOL) (US)		7	A-1088-355-A	DISPLAY BOARD, COMPLETE	
1	4-232-113-31	KNOB (VOL) (EXCEPT US)		9	3-363-099-02	SCREW (CASE 3 TP2) (US)	
2	4-977-358-01	CUSHION		9	3-363-099-11	SCREW (CASE 3 TP2) (EXCEPT US)	
3	X-2025-263-1	FRONT PANEL ASSY (CND, E51, MX, SP, AUS)		10	4-232-418-03	CASE (US)	
3	X-2025-264-1	FRONT PANEL ASSY (AEP, UK)		10	4-232-418-61	CASE (EXCEPT US)	
3	X-2025-314-1	FRONT PANEL ASSY (US)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
4	3-087-053-01	+BVTP2.6 (3CR)					

4-2. CHASSIS SECTION-1

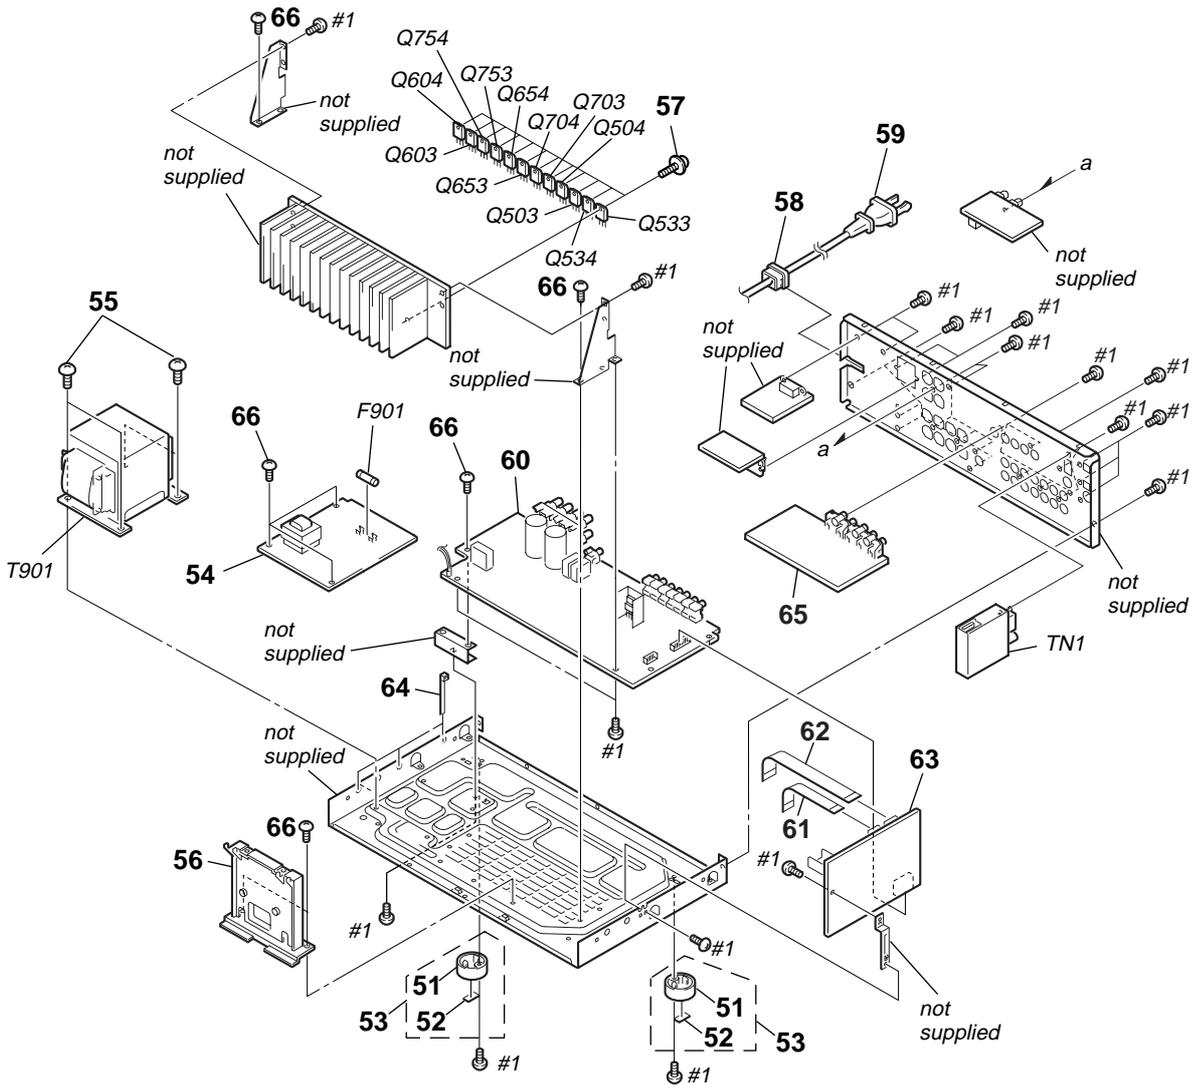


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-232-237-01	FOOT (DIA. 30)		61	1-828-963-11	WIRE (FLAT TYPE) (11 CORE)	
52	4-977-358-01	CUSHION					(EXCEPT AEP, UK)
53	X-4953-448-1	FOOT ASSY		61	1-828-980-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK)	
54	A-1084-334-A	STANDBY BOARD, COMPLETE (US, CND)		62	1-828-972-11	WIRE (FLAT TYPE) (13 CORE)	
54	A-1084-405-A	STANDBY BOARD, COMPLETE	(AEP, UK, SP, AUS)	63	A-1088-356-A	DIGITAL BOARD, COMPLETE (US, CND)	
				63	A-1088-419-A	DIGITAL BOARD, COMPLETE (AEP, UK)	
54	A-1084-975-A	STANDY BOARD, COMPLETE (E51)		63	A-1088-460-A	DIGITAL BOARD, COMPLETE (E51)	
54	A-1084-987-A	STANDY BOARD, COMPLETE (MX)		63	A-1088-464-A	DIGITAL BOARD, COMPLETE (SP)	
55	4-249-675-01	+BV SUMITITE S 4X6 ROUND		63	A-1088-475-A	DIGITAL BOARD, COMPLETE (AUS)	
56	4-233-263-01	SUB MOLD (DE9)		63	A-1088-498-A	DIGITAL BOARD, COMPLETE (MX)	
57	3-905-609-01	SCREW (TRANSISTOR)		64	3-701-748-00	CLAMP	
* 58	3-703-244-00	BUSHING (2104), CORD		65	A-1084-408-A	VIDEO BOARD, COMPLETE	
△ 59	1-696-847-22	CORD, POWER (AUS)		66	3-077-331-21	+BV3 (3-CR)	
△ 59	1-783-820-11	CORD, POWER (US, CND)		△ F901	1-532-388-32	FUSE T2AL/250V (AEP, UK, MX, SP, AUS)	
△ 59	1-823-767-12	CORD, POWER (AEP, UK)		△ F901	1-532-464-32	FUSE 2.5A/125V (E51)	
△ 59	1-823-767-22	CORD, POWER (E51, SP)		△ F901	1-533-420-11	FUSE, GLASS CYLINDRICAL (DIA.5) 4A/125V (US, CND)	
△ 59	1-829-627-11	POWER-SUPPLY CORD (MX)		Q503	6-702-390-01	IC MN2488-OPY-MK	
60	A-1088-353-A	MAIN BOARD, COMPLETE (US, E51, MX)		Q504	6-702-391-01	IC MP1620-OPY-MK	
60	A-1088-387-A	MAIN BOARD, COMPLETE (CND)					
60	A-1088-417-A	MAIN BOARD, COMPLETE (AEP, UK, SP, AUS)					

- Continued on page 43 -

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---

4-3. CHASSIS SECTION-2

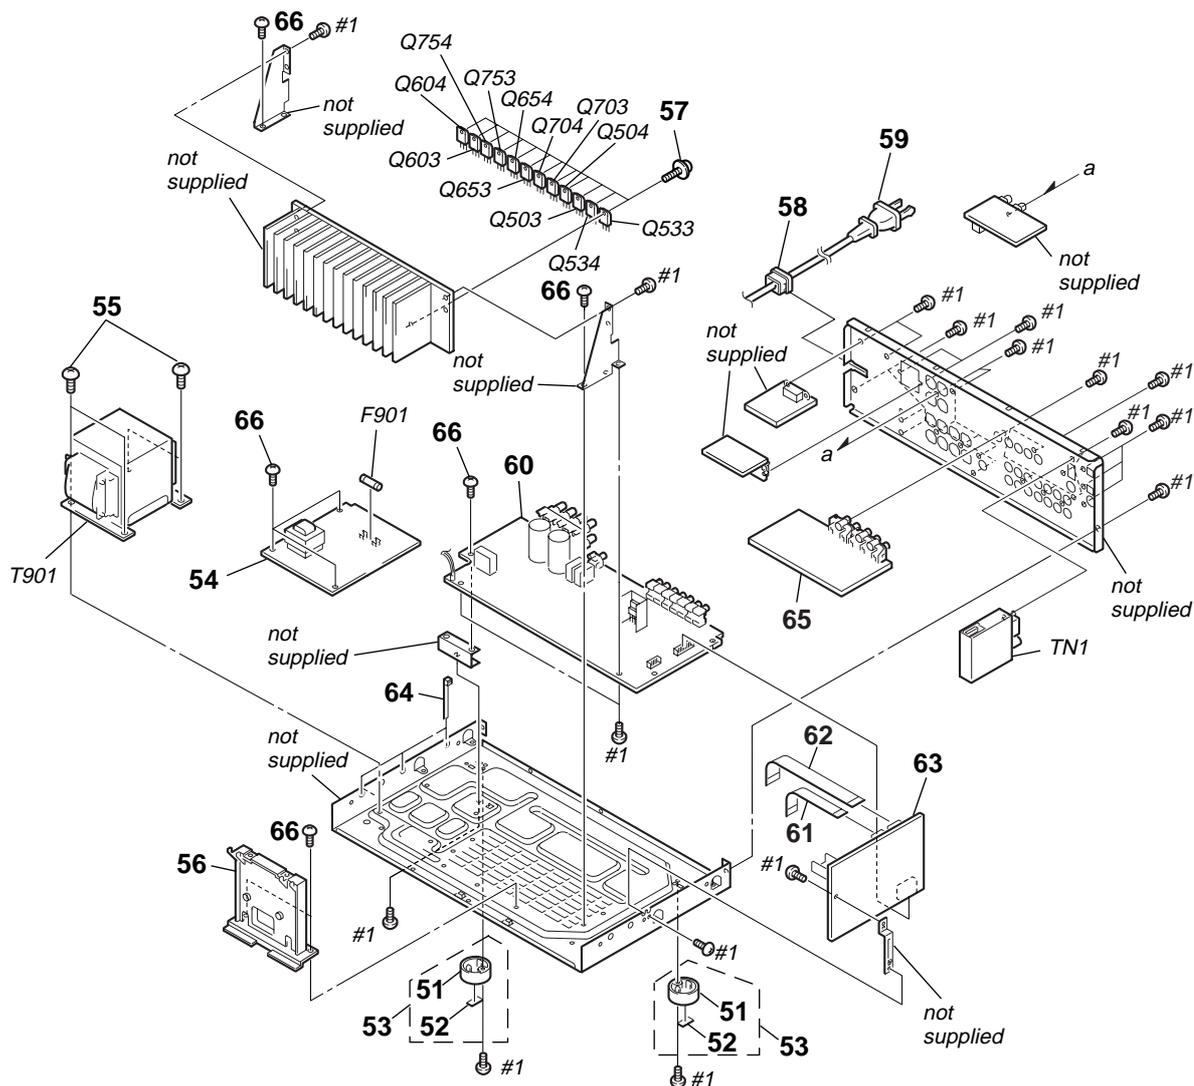

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
- Continued from page 42 -							
	Q533	6-702-390-01	IC MN2488-OPY-MK	△ T901	1-443-523-11	POWER TRANSFORMER (MX)	
	Q534	6-702-391-01	IC MP1620-OPY-MK	△ T901	1-443-524-11	POWER TRANSFORMER (US, CND)	
	Q603	6-702-390-01	IC MN2488-OPY-MK	△ T901	1-443-525-11	POWER TRANSFORMER (AEP, UK, SP, AUS)	
	Q604	6-702-391-01	IC MP1620-OPY-MK	△ T901	1-443-526-11	POWER TRANSFORMER (E51)	
	Q653	6-702-390-01	IC MN2488-OPY-MK	TN1	1-693-675-11	TUNER UNIT (E51, MX)	
	Q654	6-702-391-01	IC MP1620-OPY-MK	TN1	1-693-675-21	TUNER UNIT (US, CND)	
	Q703	6-702-390-01	IC MN2488-OPY-MK	TN1	1-693-676-21	TUNER UNIT (AEP, UK)	
	Q704	6-702-391-01	IC MP1620-OPY-MK	TN1	1-693-678-11	TUNER UNIT (SP, AUS)	
	Q753	6-702-390-01	IC MN2488-OPY-MK	#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
	Q754	6-702-391-01	IC MP1620-OPY-MK				

<p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p>	<p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p>
---	---

SECTION 5  
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- COILS  
uH:  $\mu$ H
- CAPACITORS  
uF:  $\mu$ F

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA. . :  $\mu$ A. .      uPA. . :  $\mu$ PA. .  
uPB. . :  $\mu$ PB. .      uPC. . :  $\mu$ PC. .  
uPD. . :  $\mu$ PD. .
- Abbreviation  
AUS : Australian model  
CND : Canadian model  
E51 : Chilean and Peruvian models  
MX : Mexican model  
SP : Singapore model

When indicating parts by reference number, please include the board name.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		AC SELECT BOARD (E51) *****		C1124	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
		< CONNECTOR >		C1126	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
* CNP910	1-564-687-11	PIN, CONNECTOR (3.96mm PITCH) 3P (E51)		C1129	1-162-974-11	CERAMIC CHIP 0.01uF	50V
		< SWITCH >		C1130	1-162-974-11	CERAMIC CHIP 0.01uF	50V
$\Delta$ S901	1-571-437-21	SWITCH, POWER VOLTAGE CHANGE (VOLTAGE SELECTOR)(E51)		C1137	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
		*****		C1138	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
	A-1088-356-A	DIGITAL BOARD, COMPLETE (US, GND)		C1139	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
	A-1088-419-A	DIGITAL BOARD, COMPLETE (AEP, UK)		C1140	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
	A-1088-460-A	DIGITAL BOARD, COMPLETE (E51)		C1142	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
	A-1088-464-A	DIGITAL BOARD, COMPLETE (SP)		C1149	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
	A-1088-475-A	DIGITAL BOARD, COMPLETE (AUS)		C1251	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
	A-1088-498-A	DIGITAL BOARD, COMPLETE (MX) *****		C1252	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3		C1253	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
		< CAPACITOR >		C1254	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
C1001	1-126-925-91	ELECT 470uF 20%	10V	C1255	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
C1002	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1299	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1004	1-164-227-11	CERAMIC CHIP 0.022uF 10%	16V	C1301	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1021	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1302	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C1022	1-126-925-91	ELECT 470uF 20%	10V	C1303	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1031	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1304	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C1032	1-126-925-91	ELECT 470uF 20%	10V	C1305	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1063	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1306	1-126-947-11	ELECT 47uF 20%	16V
		(AEP, UK)		C1308	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1064	1-126-947-11	ELECT 47uF 20%	16V	C1309	1-162-918-11	CERAMIC CHIP 18PF 5%	50V
		(AEP, UK)		C1310	1-162-918-11	CERAMIC CHIP 18PF 5%	50V
C1100	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1312	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1102	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1313	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C1103	1-126-947-11	ELECT 47uF 20%	16V	C1314	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1107	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1315	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1108	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1351	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1118	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1354	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1119	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1355	1-104-662-91	ELECT 22uF 20%	25V
C1120	1-162-974-11	CERAMIC CHIP 0.01uF	50V	C1356	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C1121	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1357	1-162-905-11	CERAMIC CHIP 1PF 0.25PF	50V
C1122	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1358	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C1123	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V	C1359	1-126-916-11	ELECT 1000uF 20%	6.3V
				C1360	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
				C1361	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
				C1362	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
				C1401	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
				C1402	1-126-947-11	ELECT 47uF 20%	16V
				C1403	1-126-964-11	ELECT 10uF 20%	50V
				C1404	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
				C1405	1-162-962-11	CERAMIC CHIP 470PF 10%	50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C1406	1-126-963-11	ELECT	4.7uF 20% 50V	C1525	1-126-925-91	ELECT	470uF 20% 10V
C1407	1-126-963-11	ELECT	4.7uF 20% 50V	C1540	1-216-833-11	METAL CHIP	10K 5% 1/10W
C1408	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C1541	1-216-833-11	METAL CHIP	10K 5% 1/10W
C1409	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	C1542	1-216-833-11	METAL CHIP	10K 5% 1/10W
C1411	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C1543	1-216-833-11	METAL CHIP	10K 5% 1/10W
C1413	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	C1544	1-216-833-11	METAL CHIP	10K 5% 1/10W
C1418	1-126-964-11	ELECT	10uF 20% 50V	C1545	1-216-833-11	METAL CHIP	10K 5% 1/10W
C1422	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C1547	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C1423	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	C1557	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C1428	1-126-964-11	ELECT	10uF 20% 50V	C1566	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C1432	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C1567	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C1433	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	C1568	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C1438	1-126-964-11	ELECT	10uF 20% 50V	C1569	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C1441	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C1604	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
C1442	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	C1605	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
C1448	1-126-964-11	ELECT	10uF 20% 50V	C1620	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
C1450	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	C1905	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
C1451	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C1906	1-126-925-91	ELECT	470uF 20% 10V
C1453	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	C1908	1-126-925-91	ELECT	470uF 20% 10V
C1454	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	C1913	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
C1457	1-126-964-11	ELECT	10uF 20% 50V	C1914	1-126-947-11	ELECT	47uF 20% 16V
C1458	1-126-964-11	ELECT	10uF 20% 50V	< CONNECTOR >			
C1460	1-126-964-11	ELECT	10uF 20% 50V	CNP503	1-779-977-11	PIN, CONNECTOR 6P	
C1462	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	CNP504	1-784-922-11	PIN, CONNECTOR 5P	
C1463	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	CNP505	1-779-799-11	PIN, CONNECTOR 9P	
C1468	1-126-964-11	ELECT	10uF 20% 50V	< CONNECTOR >			
C1472	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	CNS501	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P	
C1473	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	CNS502	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P	
C1478	1-126-964-11	ELECT	10uF 20% 50V	CNS504	1-568-826-11	CONNECTOR, FFC 7P	
C1481	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	CNS505	1-568-838-11	CONNECTOR, FFC 21P	
C1483	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	CNS508	1-568-830-11	CONNECTOR, FFC 11P (EXCEPT AEP, UK)	
C1487	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	CNS508	1-784-776-11	CONNECTOR, FFC 15P (AEP, UK)	
C1488	1-126-964-11	ELECT	10uF 20% 50V	CNS509	1-784-774-11	CONNECTOR, FFC 13P	
C1491	1-126-964-11	ELECT	10uF 20% 50V	< DIODE >			
C1494	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1001	8-719-053-18	DIODE 1SR154-400TE-25	
C1495	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	D1003	8-719-049-09	DIODE 1SS367-T3SONY	
C1501	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1004	8-719-049-09	DIODE 1SS367-T3SONY	
C1502	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1103	8-719-988-61	DIODE 1SS355TE-17	
C1503	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1105	8-719-988-61	DIODE 1SS355TE-17	
C1504	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1106	8-719-988-61	DIODE 1SS355TE-17	
C1505	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1107	8-719-988-61	DIODE 1SS355TE-17	
C1506	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1108	8-719-988-61	DIODE 1SS355TE-17	
C1507	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1110	8-719-988-61	DIODE 1SS355TE-17	
C1508	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1111	8-719-988-61	DIODE 1SS355TE-17	
C1509	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1301	8-719-988-61	DIODE 1SS355TE-17	
C1510	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D1302	8-719-988-61	DIODE 1SS355TE-17	
C1511	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	< FERRITE BEAD >			
C1513	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	FB1101	1-400-862-11	BEAD, FERRITE	
C1514	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	FB1302	1-400-862-11	BEAD, FERRITE	
C1515	1-126-925-91	ELECT	470uF 20% 10V	FB1305	1-400-862-11	BEAD, FERRITE	
C1516	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	FB1306	1-400-862-11	BEAD, FERRITE	
C1517	1-126-925-91	ELECT	470uF 20% 10V	FB1308	1-400-862-11	BEAD, FERRITE	
C1518	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	FB1405	1-400-862-11	BEAD, FERRITE	
C1519	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V				
C1520	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V				
C1521	1-162-920-11	CERAMIC CHIP	27PF 5% 50V				
C1522	1-162-920-11	CERAMIC CHIP	27PF 5% 50V				

# STR-K870P

## DIGITAL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
FB1452	1-400-862-11	BEAD, FERRITE		R1035	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
FB1453	1-400-862-11	BEAD, FERRITE		R1039	1-216-833-11	METAL CHIP	10K 5% 1/10W
FB1501	1-400-862-11	BEAD, FERRITE		R1041	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1502	1-400-862-11	BEAD, FERRITE					
FB1503	1-400-862-11	BEAD, FERRITE		R1042	1-216-809-11	METAL CHIP	100 5% 1/10W
		< IC >		R1044	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1001	8-759-231-53	IC TA7805S		R1049	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1031	6-705-464-01	IC BA50BC0T		R1052	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1071	6-702-771-01	IC TA78033LS (AEP, UK)		R1053	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1101	6-805-148-01	IC MB90488BPF-G-137E1					
IC1111	6-702-913-01	IC S-80929CNMC-G8ZT2G		R1058	1-216-813-11	METAL CHIP	220 5% 1/10W (AEP, UK)
				R1059	1-216-813-11	METAL CHIP	220 5% 1/10W (AEP, UK)
IC1131	6-704-004-01	IC BR24L16F-WE2		R1065	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1301	8-759-825-15	IC LC89056W-E		R1066	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1303	8-759-242-70	IC TC7WU04F (TE12R)		R1067	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1351	6-600-014-01	IC TORX141L (VIDEO 2 IN)		R1068	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1354	6-600-014-01	IC TORX141L (SA-CD/CD IN)		R1071	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
				R1072	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
IC1401	8-759-560-56	IC PCM1800E/2K		R1073	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
IC1403	8-759-710-97	IC NJM4565M (TE2)		R1075	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1404	8-759-710-97	IC NJM4565M (TE2)					
IC1405	8-759-710-97	IC NJM4565M (TE2)		R1076	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1406	8-759-710-97	IC NJM4565M (TE2)		R1077	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1078	1-216-809-11	METAL CHIP	100 5% 1/10W
IC1452	6-703-787-01	IC PCM1609KPTR		R1079	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1501	6-705-900-01	IC CXD9718BQ		R1083	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1502	6-704-037-01	IC IS61LV6416-10TLT					
IC1503	8-759-546-74	IC TC7WH157FU (TE12R)		R1088	1-216-833-11	METAL CHIP	10K 5% 1/10W
IC1901	6-701-887-02	IC SI-3004KWF		R1094	1-216-833-11	METAL CHIP	10K 5% 1/10W (EXCEPT AEP, UK)
IC1902	6-703-550-01	IC TA7809LS		R1095	1-216-833-11	METAL CHIP	10K 5% 1/10W (EXCEPT AEP, UK)
IC1904	6-705-463-01	IC BA33BC0T					
		< JACK >		R1096	1-216-833-11	METAL CHIP	10K 5% 1/10W
J1301	1-794-972-11	JACK, PIN 1P (DVD IN COAXIAL)		R1097	1-216-845-11	METAL CHIP	100K 5% 1/10W
		< SHORT >					
JR1020	1-216-864-11	SHORT CHIP	0	R1098	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR1201	1-211-950-11	SHORT CHIP	0	R1099	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR1202	1-216-864-11	SHORT CHIP	0 (EXCEPT AEP, UK)	R1105	1-216-833-11	METAL CHIP	10K 5% 1/10W
JR1203	1-216-296-11	SHORT CHIP	0	R1106	1-216-809-11	METAL CHIP	100 5% 1/10W
JR1204	1-211-950-11	SHORT CHIP	0	R1107	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
JR1206	1-211-950-11	SHORT CHIP	0				
JR1211	1-216-296-11	SHORT CHIP	0	R1108	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
JR1212	1-216-296-11	SHORT CHIP	0	R1109	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
JR1214	1-216-296-11	SHORT CHIP	0	R1110	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
JR1215	1-216-296-11	SHORT CHIP	0	R1111	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
JR1302	1-216-864-11	SHORT CHIP	0	R1112	1-216-809-11	METAL CHIP	100 5% 1/10W
JR1303	1-216-864-11	SHORT CHIP	0				
JR1501	1-216-864-11	SHORT CHIP	0	R1113	1-216-809-11	METAL CHIP	100 5% 1/10W
JR1511	1-400-862-11	BEAD, FERRITE		R1114	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
		< TRANSISTOR >		R1115	1-216-809-11	METAL CHIP	100 5% 1/10W
Q1103	8-729-027-43	TRANSISTOR	RT1N141C-TP-1	R1117	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q1104	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L	R1118	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q1105	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L				
		< RESISTOR >		R1119	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1018	1-216-864-11	SHORT CHIP	0	R1120	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1019	1-216-864-11	SHORT CHIP	0	R1121	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1122	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1123	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1124	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1127	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1128	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1129	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1132	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R1134	1-216-809-11	METAL CHIP	100 5% 1/10W

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R1135	1-216-809-11	METAL CHIP	100 5% 1/10W	R1307	1-216-809-11	METAL CHIP	100 5% 1/10W
R1136	1-216-809-11	METAL CHIP	100 5% 1/10W	R1308	1-216-809-11	METAL CHIP	100 5% 1/10W
R1137	1-216-809-11	METAL CHIP	100 5% 1/10W				
R1138	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1309	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1310	1-216-857-11	METAL CHIP	1M 5% 1/10W
R1140	1-216-809-11	METAL CHIP	100 5% 1/10W	R1311	1-216-809-11	METAL CHIP	100 5% 1/10W
R1142	1-216-809-11	METAL CHIP	100 5% 1/10W	R1312	1-216-809-11	METAL CHIP	100 5% 1/10W
R1143	1-216-809-11	METAL CHIP	100 5% 1/10W	R1313	1-216-809-11	METAL CHIP	100 5% 1/10W
R1144	1-216-809-11	METAL CHIP	100 5% 1/10W				
R1147	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1314	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R1315	1-216-809-11	METAL CHIP	100 5% 1/10W
R1149	1-216-809-11	METAL CHIP	100 5% 1/10W	R1316	1-216-809-11	METAL CHIP	100 5% 1/10W
R1150	1-216-809-11	METAL CHIP	100 5% 1/10W	R1318	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1151	1-216-809-11	METAL CHIP	100 5% 1/10W	R1351	1-216-809-11	METAL CHIP	100 5% 1/10W
R1152	1-216-809-11	METAL CHIP	100 5% 1/10W				
R1153	1-216-809-11	METAL CHIP	100 5% 1/10W	R1354	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1355	1-218-285-11	METAL CHIP	75 5% 1/10W
R1154	1-216-809-11	METAL CHIP	100 5% 1/10W	R1356	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1155	1-216-809-11	METAL CHIP	100 5% 1/10W	R1357	1-216-837-11	METAL CHIP	22K 5% 1/10W
R1159	1-216-827-11	METAL CHIP	3.3K 5% 1/10W	R1358	1-216-854-11	METAL CHIP	560K 5% 1/10W
R1160	1-216-809-11	METAL CHIP	100 5% 1/10W				
R1161	1-216-809-11	METAL CHIP	100 5% 1/10W	R1359	1-216-809-11	METAL CHIP	100 5% 1/10W
				R1360	1-216-809-11	METAL CHIP	100 5% 1/10W
R1162	1-216-809-11	METAL CHIP	100 5% 1/10W	R1362	1-216-809-11	METAL CHIP	100 5% 1/10W
R1163	1-216-841-11	METAL CHIP	47K 5% 1/10W	R1401	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1164	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1402	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R1167	1-216-809-11	METAL CHIP	100 5% 1/10W				
R1168	1-216-809-11	METAL CHIP	100 5% 1/10W	R1403	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R1407	1-216-809-11	METAL CHIP	100 5% 1/10W
R1175	1-216-809-11	METAL CHIP	100 5% 1/10W	R1414	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
				R1416	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1176	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1420	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
R1177	1-216-833-11	METAL CHIP	10K 5% 1/10W				
R1178	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1421	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1179	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1424	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
				R1425	1-216-864-11	SHORT CHIP	0
R1180	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1426	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1186	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1434	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1187	1-216-833-11	METAL CHIP	10K 5% 1/10W				
R1189	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1435	1-216-864-11	SHORT CHIP	0
R1190	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1436	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R1444	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1193	1-216-833-11	METAL CHIP	10K 5% 1/10W	R1445	1-216-864-11	SHORT CHIP	0
				R1446	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1193	1-216-837-11	METAL CHIP	22K 5% 1/10W				
				R1454	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1193	1-216-841-11	METAL CHIP	47K 5% 1/10W	R1455	1-216-864-11	SHORT CHIP	0
				R1456	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1194	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R1460	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
				R1461	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
R1194	1-216-829-11	METAL CHIP	4.7K 5% 1/10W				
				R1463	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
				R1464	1-216-864-11	SHORT CHIP	0
R1194	1-216-841-11	METAL CHIP	47K 5% 1/10W	R1466	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R1470	1-216-832-11	METAL CHIP	8.2K 5% 1/10W
				R1471	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
R1194	1-216-864-11	SHORT CHIP	0 (US, CND)				
R1201	1-216-837-11	METAL CHIP	22K 5% 1/10W	R1472	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
R1251	1-216-840-11	METAL CHIP	39K 5% 1/10W	R1473	1-216-832-11	METAL CHIP	8.2K 5% 1/10W
R1252	1-216-840-11	METAL CHIP	39K 5% 1/10W	R1474	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R1475	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V
R1260	1-216-821-11	METAL CHIP	1K 5% 1/10W	R1476	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1261	1-216-821-11	METAL CHIP	1K 5% 1/10W				
R1301	1-216-830-11	METAL CHIP	5.6K 5% 1/10W	R1483	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1302	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R1484	1-216-864-11	SHORT CHIP	0
R1303	1-216-839-11	METAL CHIP	33K 5% 1/10W	R1486	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R1490	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1304	1-216-809-11	METAL CHIP	100 5% 1/10W	R1491	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1305	1-216-817-11	METAL CHIP	470 5% 1/10W				
R1306	1-216-809-11	METAL CHIP	100 5% 1/10W				

# STR-K870P

**DIGITAL**   **DISPLAY**

Ref. No.	Part No.	Description	Remark
R1492	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1493	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1494	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1495	1-218-867-11	METAL CHIP	6.8K 5% 1/10W
R1501	1-216-809-11	METAL CHIP	100 5% 1/10W
R1502	1-216-809-11	METAL CHIP	100 5% 1/10W
R1503	1-216-813-11	METAL CHIP	220 5% 1/10W
R1504	1-216-809-11	METAL CHIP	100 5% 1/10W
R1505	1-216-809-11	METAL CHIP	100 5% 1/10W
R1506	1-216-809-11	METAL CHIP	100 5% 1/10W
R1507	1-216-809-11	METAL CHIP	100 5% 1/10W
R1508	1-216-809-11	METAL CHIP	100 5% 1/10W
R1509	1-216-809-11	METAL CHIP	100 5% 1/10W
R1510	1-216-809-11	METAL CHIP	100 5% 1/10W
R1511	1-216-809-11	METAL CHIP	100 5% 1/10W
R1512	1-216-821-11	METAL CHIP	1K 5% 1/10W
R1513	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1514	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1515	1-216-857-11	METAL CHIP	1M 5% 1/10W
R1517	1-216-813-11	METAL CHIP	220 5% 1/10W
R1518	1-216-813-11	METAL CHIP	220 5% 1/10W
R1519	1-216-813-11	METAL CHIP	220 5% 1/10W
R1520	1-216-813-11	METAL CHIP	220 5% 1/10W
R1521	1-216-813-11	METAL CHIP	220 5% 1/10W
R1522	1-216-813-11	METAL CHIP	220 5% 1/10W
R1523	1-216-813-11	METAL CHIP	220 5% 1/10W
R1524	1-216-864-11	SHORT CHIP	0
R1525	1-216-813-11	METAL CHIP	220 5% 1/10W
R1526	1-216-813-11	METAL CHIP	220 5% 1/10W
R1527	1-216-813-11	METAL CHIP	220 5% 1/10W
R1528	1-216-813-11	METAL CHIP	220 5% 1/10W
R1532	1-216-813-11	METAL CHIP	220 5% 1/10W
R1533	1-216-813-11	METAL CHIP	220 5% 1/10W
R1534	1-216-813-11	METAL CHIP	220 5% 1/10W
R1535	1-216-813-11	METAL CHIP	220 5% 1/10W
R1536	1-216-813-11	METAL CHIP	220 5% 1/10W
R1537	1-216-813-11	METAL CHIP	220 5% 1/10W
R1538	1-216-813-11	METAL CHIP	220 5% 1/10W
R1539	1-216-813-11	METAL CHIP	220 5% 1/10W
R1540	1-216-813-11	METAL CHIP	220 5% 1/10W
R1541	1-216-813-11	METAL CHIP	220 5% 1/10W
R1542	1-216-813-11	METAL CHIP	220 5% 1/10W
R1543	1-216-813-11	METAL CHIP	220 5% 1/10W
R1544	1-216-813-11	METAL CHIP	220 5% 1/10W
R1545	1-216-813-11	METAL CHIP	220 5% 1/10W
R1546	1-216-813-11	METAL CHIP	220 5% 1/10W
R1547	1-216-813-11	METAL CHIP	220 5% 1/10W
R1548	1-216-813-11	METAL CHIP	220 5% 1/10W
R1549	1-216-813-11	METAL CHIP	220 5% 1/10W
R1550	1-216-813-11	METAL CHIP	220 5% 1/10W
R1551	1-216-813-11	METAL CHIP	220 5% 1/10W
R1552	1-216-813-11	METAL CHIP	220 5% 1/10W
R1553	1-216-813-11	METAL CHIP	220 5% 1/10W
R1554	1-216-813-11	METAL CHIP	220 5% 1/10W
R1555	1-216-813-11	METAL CHIP	220 5% 1/10W
R1556	1-216-809-11	METAL CHIP	100 5% 1/10W
R1570	1-216-833-11	METAL CHIP	10K 5% 1/10W

Ref. No.	Part No.	Description	Remark
R1571	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1572	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1573	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1574	1-216-833-11	METAL CHIP	10K 5% 1/10W
R1635	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R1636	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
< VIBRATOR >			
X1101	1-813-448-21	PIEZOELECTRIC OSCILLATOR 24MHz	
X1301	1-795-126-21	VIBRATOR, CRYSTAL 12.288MHz	
X1502	1-813-276-21	QUARTZ CRYSTAL 13.9MHz	
*****			
A-1088-355-A DISPLAY BOARD, COMPLETE			
*****			
< CAPACITOR >			
C100	1-127-888-11	CERAMIC	0.1uF 10% 50V
C101	1-127-888-11	CERAMIC	0.1uF 10% 50V
C105	1-126-795-11	ELECT	10uF 20% 50V
C108	1-127-888-11	CERAMIC	0.1uF 10% 50V
C109	1-127-888-11	CERAMIC	0.1uF 10% 50V
C110	1-162-286-31	CERAMIC	220PF 10% 50V
C111	1-162-286-31	CERAMIC	220PF 10% 50V
C112	1-162-286-31	CERAMIC	220PF 10% 50V
C114	1-127-888-11	CERAMIC	0.1uF 10% 50V
C115	1-126-795-11	ELECT	10uF 20% 50V
C132	1-162-286-31	CERAMIC	220PF 10% 50V
C133	1-162-286-31	CERAMIC	220PF 10% 50V
C134	1-162-286-31	CERAMIC	220PF 10% 50V
C135	1-162-286-31	CERAMIC	220PF 10% 50V
C136	1-162-286-31	CERAMIC	220PF 10% 50V
C137	1-162-286-31	CERAMIC	220PF 10% 50V
C138	1-162-286-31	CERAMIC	220PF 10% 50V
C139	1-162-286-31	CERAMIC	220PF 10% 50V
C140	1-162-286-31	CERAMIC	220PF 10% 50V
C141	1-162-286-31	CERAMIC	220PF 10% 50V
C142	1-162-286-31	CERAMIC	220PF 10% 50V
C143	1-162-286-31	CERAMIC	220PF 10% 50V
C144	1-127-888-11	CERAMIC	0.1uF 10% 50V
C150	1-127-888-11	CERAMIC	0.1uF 10% 50V
C151	1-126-795-11	ELECT	10uF 20% 50V
C152	1-162-286-31	CERAMIC	220PF 10% 50V
C153	1-162-286-31	CERAMIC	220PF 10% 50V
C154	1-162-286-31	CERAMIC	220PF 10% 50V
C155	1-127-888-11	CERAMIC	0.1uF 10% 50V
C156	1-127-888-11	CERAMIC	0.1uF 10% 50V
C157	1-127-888-11	CERAMIC	0.1uF 10% 50V
< CONNECTOR >			
CNS100	1-568-838-11	CONNECTOR, FFC 21P	
< DIODE >			
D101	8-719-061-96	DIODE SLR-325DCT31 (2CH)	
D102	8-719-061-96	DIODE SLR-325DCT31 (MUSIC)	
D103	8-719-061-96	DIODE SLR-325DCT31 (MOVIE)	
D104	8-719-061-96	DIODE SLR-325DCT31 (A.F.D.)	

DISPLAY

HEADPHONE

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< FLUORESCENT INDICATOR >					
FL101	1-518-966-11	VOCUUM FLUORESENT DISPLAYS		S121	1-771-410-21	SWITCH, TACTILE (MUSIC)	
		< IC >		S122	1-771-410-21	SWITCH, TACTILE (MOVIE)	
IC100	8-759-643-83	IC PT6315		S123	1-771-410-21	SWITCH, TACTILE (A.F.D.)	
IC101	8-759-036-90	IC MC74ACT08N					
IC102	6-600-349-31	IC NJL24H400A (R)		S124	1-771-410-21	SWITCH, TACTILE (2CH)	
		< RESISTOR >		S125	1-771-410-21	SWITCH, TACTILE (SLEEP)	
R101	1-249-409-11	CARBON 220 5%	1/4W	S140	1-771-410-21	SWITCH, TACTILE (-)	
R102	1-249-411-11	CARBON 330 5%	1/4W	S141	1-771-410-21	SWITCH, TACTILE (VIDEO 3)	
R103	1-249-413-11	CARBON 470 5%	1/4W	S142	1-771-410-21	SWITCH, TACTILE (VIDEO 2)	
R104	1-249-415-11	CARBON 680 5%	1/4W				
R105	1-247-831-91	CARBON 1K 5%	1/4W	S143	1-771-410-21	SWITCH, TACTILE (VIDEO 1)	
				*****			
						HEADPHONE BOARD	
						*****	
						< CAPACITOR >	
R106	1-249-419-11	CARBON 1.5K 5%	1/4W	C790	1-127-888-11	CERAMIC 0.1uF 10% 50V	
R107	1-249-421-11	CARBON 2.2K 5%	1/4W				
R108	1-247-847-91	CARBON 4.7K 5%	1/4W			< CONNECTOR >	
R109	1-249-429-11	CARBON 10K 5%	1/4W	CNP791	1-691-766-11	PLUG (MICRO CONNECTOR) 4P	
R110	1-249-435-11	CARBON 33K 5%	1/4W			< JACK >	
R121	1-249-409-11	CARBON 220 5%	1/4W				
R122	1-249-411-11	CARBON 330 5%	1/4W	J791	1-815-314-21	JACK (PHONES)	
R123	1-249-413-11	CARBON 470 5%	1/4W	*****			
R124	1-249-415-11	CARBON 680 5%	1/4W			A-1088-353-A	MAIN BOARD, COMPLETE (US, E51, MX)
R125	1-247-831-91	CARBON 1K 5%	1/4W			A-1088-387-A	MAIN BOARD, COMPLETE (CND)
						A-1088-417-A	MAIN BOARD, COMPLETE (AEP, UK, SP, AUS)
R128	1-249-419-11	CARBON 1.5K 5%	1/4W			*****	
R142	1-249-409-11	CARBON 220 5%	1/4W			7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3
R143	1-249-411-11	CARBON 330 5%	1/4W			< CAPACITOR >	
R144	1-249-413-11	CARBON 470 5%	1/4W	C400	1-127-888-11	CERAMIC 0.1uF 10% 50V	
R148	1-249-415-11	CARBON 680 5%	1/4W	C403	1-127-888-11	CERAMIC 0.1uF 10% 50V	
△R154	1-249-393-11	CARBON 10 5%	1/4W	C408	1-126-963-11	ELECT 4.7uF 20% 50V	
R155	1-247-807-31	CARBON 100 5%	1/4W	C409	1-126-963-11	ELECT 4.7uF 20% 50V	
R160	1-249-409-11	CARBON 220 5%	1/4W	C444	1-127-868-11	CERAMIC 2200PF 10% 50V	
R171	1-249-440-11	CARBON 82K 5%	1/4W	C458	1-126-963-11	ELECT 4.7uF 20% 50V	
R172	1-247-807-31	CARBON 100 5%	1/4W	C459	1-126-963-11	ELECT 4.7uF 20% 50V	
R173	1-247-807-31	CARBON 100 5%	1/4W	C464	1-127-888-11	CERAMIC 0.1uF 10% 50V	
R174	1-247-807-31	CARBON 100 5%	1/4W	C468	1-162-282-31	CERAMIC 100PF 10% 50V	
△R175	1-249-393-11	CARBON 10 5%	1/4W	C469	1-162-282-31	CERAMIC 100PF 10% 50V	
△R198	1-249-381-11	CARBON 1 5%	1/4W			C471	1-126-963-11 ELECT 4.7uF 20% 50V
△R199	1-249-381-11	CARBON 1 5%	1/4W			C472	1-126-963-11 ELECT 4.7uF 20% 50V
		< VARIABLE RESISTOR >				C481	1-126-964-11 ELECT 10uF 20% 50V
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)				C484	1-126-964-11 ELECT 10uF 20% 50V
		< SWITCH >				C485	1-126-964-11 ELECT 10uF 20% 50V
S100	1-771-410-21	SWITCH, TACTILE (>)				C488	1-127-888-11 CERAMIC 0.1uF 10% 50V
S101	1-771-410-21	SWITCH, TACTILE (INPUT MODE)				C490	1-126-964-11 ELECT 10uF 20% 50V
S102	1-771-410-21	SWITCH, TACTILE (DVD)				C492	1-126-964-11 ELECT 10uF 20% 50V
S103	1-771-410-21	SWITCH, TACTILE (MD/TAPE)				C493	1-126-964-11 ELECT 10uF 20% 50V
S104	1-771-410-21	SWITCH, TACTILE (SA-CD/CD)				C495	1-126-964-11 ELECT 10uF 20% 50V
S105	1-771-410-21	SWITCH, TACTILE (FM)				C499	1-162-286-31 CERAMIC 220PF 10% 50V
S106	1-771-410-21	SWITCH, TACTILE (MAIN MENU)				C501	1-126-963-11 ELECT 4.7uF 20% 50V
S107	1-771-410-21	SWITCH, TACTILE (ENTER)				C503	1-104-658-91 ELECT 100uF 20% 10V
S108	1-771-410-21	SWITCH, TACTILE (<)				C504	1-107-585-11 CERAMIC 5PF 0.25PF 500V
S109	1-771-410-21	SWITCH, TACTILE (+)				C505	1-102-233-00 CERAMIC 33PF 10% 500V
S110	1-771-410-21	SWITCH, TACTILE (AM)				<div style="border: 1px solid black; padding: 5px;"> <p>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p> <p>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> </div>	
S120	1-771-410-21	SWITCH, TACTILE (SURR BACK DECODING)					

# STR-K870P

## MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C506	1-162-282-31	CERAMIC	100PF 10% 50V	C716	1-162-815-11	CERAMIC	47PF 5% 500V
C507	1-162-282-31	CERAMIC	100PF 10% 50V	C717	1-162-815-11	CERAMIC	47PF 5% 500V
C510	1-126-947-11	ELECT	47uF 20% 25V	C720	1-162-286-31	CERAMIC	220PF 10% 50V
C511	1-136-157-00	FILM	0.022uF 5% 50V	C721	1-126-923-91	ELECT	220uF 20% 10V
C516	1-162-815-11	CERAMIC	47PF 5% 500V	C722	1-126-964-11	ELECT	10uF 20% 50V
C517	1-162-815-11	CERAMIC	47PF 5% 500V	C732	1-128-582-11	ELECT	10uF 20% 100V
C519	1-162-286-31	CERAMIC	220PF 10% 50V	C733	1-128-582-11	ELECT	10uF 20% 100V
C531	1-136-157-00	FILM	0.022uF 5% 50V	C740	1-126-964-11	ELECT	10uF 20% 50V
C539	1-162-286-31	CERAMIC	220PF 10% 50V	C741	1-128-579-11	ELECT	2.2uF 20% 100V
C540	1-126-964-11	ELECT	10uF 20% 50V	C742	1-127-876-11	CERAMIC	0.01uF 10% 50V
C541	1-127-876-11	CERAMIC	0.01uF 10% 50V	C743	1-128-579-11	ELECT	2.2uF 20% 100V
C553	1-104-658-91	ELECT	100uF 20% 10V	C744	1-128-579-11	ELECT	2.2uF 20% 100V
C554	1-107-585-11	CERAMIC	5PF 0.25PF 500V	C750	1-126-964-11	ELECT	10uF 20% 50V
C561	1-126-963-11	ELECT	4.7uF 20% 50V	C751	1-126-963-11	ELECT	4.7uF 20% 50V
C565	1-102-233-00	CERAMIC	33PF 10% 500V	C752	1-127-876-11	CERAMIC	0.01uF 10% 50V
C566	1-162-282-31	CERAMIC	100PF 10% 50V	C753	1-104-658-91	ELECT	100uF 20% 10V
C567	1-162-282-31	CERAMIC	100PF 10% 50V	C754	1-107-583-11	CERAMIC	3PF 0.25PF 500V
C570	1-126-947-11	ELECT	47uF 20% 25V	C755	1-102-233-00	CERAMIC	33PF 10% 500V
C576	1-162-815-11	CERAMIC	47PF 5% 500V	C756	1-162-282-31	CERAMIC	100PF 10% 50V
C577	1-162-815-11	CERAMIC	47PF 5% 500V	C757	1-162-282-31	CERAMIC	100PF 10% 50V
C580	1-126-964-11	ELECT	10uF 20% 50V	C760	1-126-947-11	ELECT	47uF 20% 25V
C581	1-127-876-11	CERAMIC	0.01uF 10% 50V	C761	1-136-157-00	FILM	0.022uF 5% 50V
C601	1-126-963-11	ELECT	4.7uF 20% 50V	C762	1-126-964-11	ELECT	10uF 20% 50V
C603	1-104-658-91	ELECT	100uF 20% 10V	C766	1-162-815-11	CERAMIC	47PF 5% 500V
C604	1-107-583-11	CERAMIC	3PF 0.25PF 500V	C767	1-162-815-11	CERAMIC	47PF 5% 500V
C605	1-102-233-00	CERAMIC	33PF 10% 500V	C770	1-162-286-31	CERAMIC	220PF 10% 50V
C606	1-162-282-31	CERAMIC	100PF 10% 50V	C791	1-126-923-91	ELECT	220uF 20% 10V
C607	1-162-282-31	CERAMIC	100PF 10% 50V	C801	1-126-947-11	ELECT	47uF 20% 35V
C610	1-126-947-11	ELECT	47uF 20% 25V	C802	1-126-947-11	ELECT	47uF 20% 35V
C611	1-136-157-00	FILM	0.022uF 5% 50V	C803	1-165-946-11	ELECT	6800uF 20% 71V
C619	1-162-286-31	CERAMIC	220PF 10% 50V	C804	1-165-946-11	ELECT	6800uF 20% 71V
C620	1-162-815-11	CERAMIC	47PF 5% 500V	C805	1-135-851-21	MYLAR	0.22uF 100V
C621	1-162-815-11	CERAMIC	47PF 5% 500V	C806	1-135-851-21	MYLAR	0.22uF 100V
C640	1-126-964-11	ELECT	10uF 20% 50V	C807	1-126-947-11	ELECT	47uF 20% 25V
C642	1-127-876-11	CERAMIC	0.01uF 10% 50V	C808	1-126-947-11	ELECT	47uF 20% 25V
C651	1-126-963-11	ELECT	4.7uF 20% 50V	C809	1-127-888-11	CERAMIC	0.1uF 10% 50V
C653	1-104-658-91	ELECT	100uF 20% 10V	C810	1-127-888-11	CERAMIC	0.1uF 10% 50V
C654	1-107-583-11	CERAMIC	3PF 0.25PF 500V	C811	1-127-888-11	CERAMIC	0.1uF 10% 50V
C655	1-102-233-00	CERAMIC	33PF 10% 500V	C822	1-126-947-11	ELECT	47uF 20% 35V
C656	1-162-282-31	CERAMIC	100PF 10% 50V	C830	1-127-888-11	CERAMIC	0.1uF 10% 50V
C657	1-162-282-31	CERAMIC	100PF 10% 50V	C831	1-127-888-11	CERAMIC	0.1uF 10% 50V
C660	1-126-947-11	ELECT	47uF 20% 25V	C832	1-126-936-11	ELECT	3300uF 20% 16V
C661	1-136-157-00	FILM	0.022uF 5% 50V	< CAPACITOR >			
C666	1-162-815-11	CERAMIC	47PF 5% 500V	CC02	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C669	1-162-815-11	CERAMIC	47PF 5% 500V	CC04	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C670	1-162-286-31	CERAMIC	220PF 10% 50V	CC05	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C680	1-126-964-11	ELECT	10uF 20% 50V	CC06	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C681	1-127-876-11	CERAMIC	0.01uF 10% 50V	CC07	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C691	1-127-888-11	CERAMIC	0.1uF 10% 50V	CC08	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C701	1-126-963-11	ELECT	4.7uF 20% 50V	CC09	1-162-282-31	CERAMIC	100PF 10% 50V (AEP, UK, SP, AUS)
C702	1-126-964-11	ELECT	10uF 20% 50V				
C703	1-104-658-91	ELECT	100uF 20% 10V				
C704	1-107-583-11	CERAMIC	3PF 0.25PF 500V				
C705	1-102-233-00	CERAMIC	33PF 10% 500V				
C706	1-162-282-31	CERAMIC	100PF 10% 50V				
C707	1-162-282-31	CERAMIC	100PF 10% 50V				
C710	1-126-947-11	ELECT	47uF 20% 25V				
C711	1-136-157-00	FILM	0.022uF 5% 50V				



# STR-K870P

## MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q723	8-729-119-78	TRANSISTOR	2SC1740S-QRT	R530	1-247-847-91	CARBON	4.7K 5% 1/4W
Q725	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP	△ R531	1-240-855-81	CARBON	6.2K 5% 1/4W
Q740	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2	R532	1-249-429-11	CARBON	10K 5% 1/4W
Q750	8-729-281-53	TRANSISTOR	2SC1815GR-TPE2	R533	1-247-871-91	CARBON	47K 5% 1/4W
Q751	8-729-119-76	TRANSISTOR	2SA1115TP-EF	R534	1-249-431-11	CARBON	15K 5% 1/4W
Q752	8-729-141-30	TRANSISTOR	2SC3623ATP-LK	R535	1-249-439-11	CARBON	68K 5% 1/4W
Q755	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP	△ R537	1-249-393-11	CARBON	10 5% 1/4W
Q756	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP	R540	1-247-863-91	CARBON	22K 5% 1/4W
Q790	8-729-119-78	TRANSISTOR	2SC1740S-QRT	R546	1-249-431-11	CARBON	15K 5% 1/4W
Q793	8-729-119-78	TRANSISTOR	2SC1740S-QRT	R553	1-249-421-11	CARBON	2.2K 5% 1/4W
Q795	8-729-042-09	TRANSISTOR	2SA1038S-RSE-TP	R554	1-249-439-11	CARBON	68K 5% 1/4W
Q801	8-729-140-97	TRANSISTOR	2SB734-T-34	R555	1-247-847-91	CARBON	4.7K 5% 1/4W
Q809	8-729-119-78	TRANSISTOR	2SC1740S-QRT	R556	1-247-871-91	CARBON	47K 5% 1/4W
		< RESISTOR >		R557	1-249-431-11	CARBON	15K 5% 1/4W
R402	1-247-831-91	CARBON	1K 5% 1/4W	R561	1-247-831-91	CARBON	1K 5% 1/4W
R404	1-247-831-91	CARBON	1K 5% 1/4W	R562	1-249-439-11	CARBON	68K 5% 1/4W
R405	1-247-831-91	CARBON	1K 5% 1/4W	R570	1-249-421-11	CARBON	2.2K 5% 1/4W
R406	1-247-831-91	CARBON	1K 5% 1/4W	R571	1-249-440-11	CARBON	82K 5% 1/4W
R407	1-247-831-91	CARBON	1K 5% 1/4W	R572	1-249-419-11	CARBON	1.5K 5% 1/4W
R408	1-247-831-91	CARBON	1K 5% 1/4W	R573	1-247-871-91	CARBON	47K 5% 1/4W
R409	1-247-831-91	CARBON	1K 5% 1/4W	△ R574	1-249-399-11	CARBON	33 5% 1/4W
R428	1-247-831-91	CARBON	1K 5% 1/4W	△ R575	1-249-399-11	CARBON	33 5% 1/4W
R429	1-247-831-91	CARBON	1K 5% 1/4W	R576	1-249-414-11	CARBON	560 5% 1/4W
R452	1-247-831-91	CARBON	1K 5% 1/4W	R580	1-247-863-91	CARBON	22K 5% 1/4W
R454	1-247-831-91	CARBON	1K 5% 1/4W	R585	1-247-847-91	CARBON	4.7K 5% 1/4W
R455	1-247-831-91	CARBON	1K 5% 1/4W	R586	1-247-871-91	CARBON	47K 5% 1/4W
R456	1-247-831-91	CARBON	1K 5% 1/4W	R587	1-249-431-11	CARBON	15K 5% 1/4W
R457	1-247-831-91	CARBON	1K 5% 1/4W	R588	1-249-431-11	CARBON	15K 5% 1/4W
R458	1-247-831-91	CARBON	1K 5% 1/4W	R601	1-247-831-91	CARBON	1K 5% 1/4W
R459	1-247-831-91	CARBON	1K 5% 1/4W	R602	1-249-439-11	CARBON	68K 5% 1/4W
R468	1-247-879-91	CARBON	100K 5% 1/4W	R603	1-249-421-11	CARBON	2.2K 5% 1/4W
R469	1-247-831-91	CARBON	1K 5% 1/4W	R604	1-249-439-11	CARBON	68K 5% 1/4W
R470	1-247-871-91	CARBON	47K 5% 1/4W	R610	1-249-421-11	CARBON	2.2K 5% 1/4W
R473	1-249-429-11	CARBON	10K 5% 1/4W	R611	1-249-440-11	CARBON	82K 5% 1/4W
R474	1-249-429-11	CARBON	10K 5% 1/4W	R613	1-249-414-11	CARBON	560 5% 1/4W
R475	1-249-429-11	CARBON	10K 5% 1/4W	△ R614	1-249-399-11	CARBON	33 5% 1/4W
R476	1-249-429-11	CARBON	10K 5% 1/4W	△ R615	1-249-399-11	CARBON	33 5% 1/4W
R480	1-247-871-91	CARBON	47K 5% 1/4W	△ R616	1-234-182-11	ENCAPSULATED COMPONENT	
R499	1-247-871-91	CARBON	47K 5% 1/4W	△ R617	1-249-393-11	CARBON	10 5% 1/4W
R501	1-247-831-91	CARBON	1K 5% 1/4W	△ R618	1-249-389-11	CARBON	4.7 5% 1/4W
R502	1-249-439-11	CARBON	68K 5% 1/4W	R620	1-247-847-91	CARBON	4.7K 5% 1/4W
R503	1-249-421-11	CARBON	2.2K 5% 1/4W	△ R621	1-240-855-81	CARBON	6.2K 5% 1/4W
R505	1-249-439-11	CARBON	68K 5% 1/4W	R622	1-249-419-11	CARBON	1.5K 5% 1/4W
R510	1-249-421-11	CARBON	2.2K 5% 1/4W	R623	1-247-871-91	CARBON	47K 5% 1/4W
R511	1-249-440-11	CARBON	82K 5% 1/4W	R624	1-249-431-11	CARBON	15K 5% 1/4W
R513	1-249-414-11	CARBON	560 5% 1/4W	R625	1-249-439-11	CARBON	68K 5% 1/4W
△ R514	1-249-399-11	CARBON	33 5% 1/4W	R631	1-249-421-11	CARBON	2.2K 5% 1/4W
△ R515	1-249-399-11	CARBON	33 5% 1/4W	△ R634	1-249-404-00	CARBON	82 5% 1/4W
△ R516	1-234-182-11	ENCAPSULATED COMPONENT		R638	1-249-439-11	CARBON	68K 5% 1/4W
△ R517	1-249-393-11	CARBON	10 5% 1/4W	R640	1-247-863-91	CARBON	22K 5% 1/4W
R520	1-247-847-91	CARBON	4.7K 5% 1/4W	R648	1-249-431-11	CARBON	15K 5% 1/4W
R521	1-240-855-81	CARBON	6.2K 5% 1/4W	R651	1-247-831-91	CARBON	1K 5% 1/4W
R522	1-249-419-11	CARBON	1.5K 5% 1/4W	R652	1-249-439-11	CARBON	68K 5% 1/4W
R523	1-247-871-91	CARBON	47K 5% 1/4W	R653	1-249-421-11	CARBON	2.2K 5% 1/4W
R524	1-249-431-11	CARBON	15K 5% 1/4W	R654	1-249-439-11	CARBON	68K 5% 1/4W
R525	1-249-439-11	CARBON	68K 5% 1/4W	R655	1-247-847-91	CARBON	4.7K 5% 1/4W
△ R526	1-234-182-11	ENCAPSULATED COMPONENT					

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R656	1-247-871-91	CARBON	47K 5% 1/4W	R744	1-249-431-11	CARBON	15K 5% 1/4W
R657	1-249-431-11	CARBON	15K 5% 1/4W	R745	1-247-847-91	CARBON	4.7K 5% 1/4W
R660	1-249-421-11	CARBON	2.2K 5% 1/4W	R746	1-247-871-91	CARBON	47K 5% 1/4W
R661	1-249-440-11	CARBON	82K 5% 1/4W	R747	1-249-431-11	CARBON	15K 5% 1/4W
R663	1-249-414-11	CARBON	560 5% 1/4W	R748	1-249-431-11	CARBON	15K 5% 1/4W
△ R664	1-249-399-11	CARBON	33 5% 1/4W	R750	1-247-863-91	CARBON	22K 5% 1/4W
△ R665	1-249-399-11	CARBON	33 5% 1/4W	R751	1-247-831-91	CARBON	1K 5% 1/4W
△ R666	1-234-182-11	ENCAPSULATED COMPONENT		R752	1-249-439-11	CARBON	68K 5% 1/4W
△ R667	1-249-393-11	CARBON	10 5% 1/4W	R753	1-249-421-11	CARBON	2.2K 5% 1/4W
△ R668	1-249-389-11	CARBON	4.7 5% 1/4W	R754	1-249-439-11	CARBON	68K 5% 1/4W
R669	1-247-847-91	CARBON	4.7K 5% 1/4W	R755	1-247-847-91	CARBON	4.7K 5% 1/4W
△ R671	1-240-855-81	CARBON	6.2K 5% 1/4W	R756	1-247-871-91	CARBON	47K 5% 1/4W
R672	1-249-419-11	CARBON	1.5K 5% 1/4W	R757	1-249-431-11	CARBON	15K 5% 1/4W
R673	1-247-871-91	CARBON	47K 5% 1/4W	R758	1-249-431-11	CARBON	15K 5% 1/4W
R674	1-249-431-11	CARBON	15K 5% 1/4W	R760	1-249-421-11	CARBON	2.2K 5% 1/4W
R675	1-247-847-91	CARBON	4.7K 5% 1/4W	R761	1-249-440-11	CARBON	82K 5% 1/4W
R676	1-247-871-91	CARBON	47K 5% 1/4W	R763	1-249-414-11	CARBON	560 5% 1/4W
R677	1-249-431-11	CARBON	15K 5% 1/4W	△ R764	1-249-399-11	CARBON	33 5% 1/4W
R680	1-247-863-91	CARBON	22K 5% 1/4W	△ R765	1-249-399-11	CARBON	33 5% 1/4W
R681	1-249-431-11	CARBON	15K 5% 1/4W	△ R766	1-234-182-11	ENCAPSULATED COMPONENT	
R690	1-247-887-00	CARBON	220K 5% 1/4W	△ R767	1-249-393-11	CARBON	10 5% 1/4W
R691	1-215-888-00	METAL OXIDE	220 5% 2W	△ R768	1-249-389-11	CARBON	4.7 5% 1/4W
R692	1-215-888-00	METAL OXIDE	220 5% 2W	R769	1-247-847-91	CARBON	4.7K 5% 1/4W
R693	1-249-429-11	CARBON	10K 5% 1/4W	△ R771	1-240-855-81	CARBON	6.2K 5% 1/4W
R694	1-249-429-11	CARBON	10K 5% 1/4W	R772	1-249-419-11	CARBON	1.5K 5% 1/4W
R695	1-249-429-11	CARBON	10K 5% 1/4W	R773	1-247-871-91	CARBON	47K 5% 1/4W
R696	1-247-871-91	CARBON	47K 5% 1/4W	R775	1-249-439-11	CARBON	68K 5% 1/4W
R698	1-249-429-11	CARBON	10K 5% 1/4W	R778	1-249-431-11	CARBON	15K 5% 1/4W
R699	1-247-895-00	CARBON	470K 5% 1/4W	R780	1-249-429-11	CARBON	10K 5% 1/4W
R701	1-247-831-91	CARBON	1K 5% 1/4W	R791	1-249-421-11	CARBON	2.2K 5% 1/4W
R702	1-249-439-11	CARBON	68K 5% 1/4W	R792	1-215-868-00	METAL OXIDE	680 5% 1W
R703	1-249-421-11	CARBON	2.2K 5% 1/4W	R793	1-249-404-00	CARBON	82 5% 1/4W
R704	1-249-439-11	CARBON	68K 5% 1/4W	R794	1-215-868-00	METAL OXIDE	680 5% 1W
R710	1-249-421-11	CARBON	2.2K 5% 1/4W	△ R802	1-249-409-11	CARBON	220 5% 1/4W
R711	1-249-440-11	CARBON	82K 5% 1/4W	△ R803	1-249-389-11	CARBON	4.7 5% 1/4W
R713	1-249-414-11	CARBON	560 5% 1/4W	R804	1-249-429-11	CARBON	10K 5% 1/4W
△ R714	1-249-399-11	CARBON	33 5% 1/4W	R806	1-247-863-91	CARBON	22K 5% 1/4W
△ R715	1-249-399-11	CARBON	33 5% 1/4W	R824	1-249-421-11	CARBON	2.2K 5% 1/4W
△ R716	1-234-182-11	ENCAPSULATED COMPONENT		△ R830	1-249-404-00	CARBON	82 5% 1/4W
△ R717	1-249-393-11	CARBON	10 5% 1/4W				(CND)
△ R718	1-249-389-11	CARBON	4.7 5% 1/4W	△ R831	1-249-404-00	CARBON	82 5% 1/4W
R719	1-247-847-91	CARBON	4.7K 5% 1/4W	△ R910	1-240-877-11	FUSIBLE	0.15 5% 1/2W
△ R721	1-240-855-81	CARBON	6.2K 5% 1/4W			< RESISTOR >	
R722	1-249-419-11	CARBON	1.5K 5% 1/4W	△ RR11	1-249-393-11	CARBON	10 5% 1/4W
R723	1-247-871-91	CARBON	47K 5% 1/4W				(AEP, UK, SP, AUS)
R724	1-249-431-11	CARBON	15K 5% 1/4W	△ RR12	1-249-393-11	CARBON	10 5% 1/4W
R725	1-249-439-11	CARBON	68K 5% 1/4W				(AEP, UK, SP, AUS)
△ R731	1-249-421-11	CARBON	2.2K 5% 1/4W	△ RR13	1-249-393-11	CARBON	10 5% 1/4W
△ R732	1-249-381-11	CARBON	1 5% 1/4W				(AEP, UK, SP, AUS)
△ R733	1-249-381-11	CARBON	1 5% 1/4W	△ RR14	1-249-393-11	CARBON	10 5% 1/4W
△ R734	1-249-404-00	CARBON	82 5% 1/4W				(AEP, UK, SP, AUS)
R735	1-249-427-11	CARBON	6.8K 5% 1/4W			< RELAY >	
R736	1-247-831-91	CARBON	1K 5% 1/4W	RY560	1-755-267-11	RELAY	
R737	1-249-436-11	CARBON	39K 5% 1/4W	RY601	1-755-170-11	RELAY (12V)	
R740	1-247-863-91	CARBON	22K 5% 1/4W	RY701	1-755-170-11	RELAY (12V)	
R741	1-249-431-11	CARBON	15K 5% 1/4W				
R743	1-249-431-11	CARBON	15K 5% 1/4W				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

# STR-K870P

**MAIN**   **POWER**   **SPEAKER B (P)**   **SPEAKER C/SB**   **STANDBY**

Ref. No.	Part No.	Description	Remark
RY791	1-755-170-11	RELAY (12V)	
RY801	1-755-013-11	RELAY (EXCEPT CND)	
RY802	1-755-494-11	RELAY (CND)	
RY803	1-755-494-11	RELAY (CND)	
< TERMINAL >			
TM601	1-780-216-11	TERMINAL BOARD (SP) (8P) (SPEAKERS)	
*****			
POWER BOARD *****			
< CONNECTOR >			
* CNP102	1-564-518-11	PLUG, CONNECTOR 3P	
< RESISTOR >			
R129	1-249-421-11	CARBON	2.2K 5% 1/4W
R130	1-247-847-91	CARBON	4.7K 5% 1/4W
< SWITCH >			
S128	1-771-410-21	SWITCH, TACTILE (SPEAKERS (OFF/A/B/A+B))	
S129	1-771-410-21	SWITCH, TACTILE (DISPLAY)	
S130	1-771-410-21	SWITCH, TACTILE (DIMMER)	
S131	1-771-410-21	SWITCH, TACTILE (I/Ⓞ)	
*****			
SPEAKER B (P) BOARD *****			
< CAPACITOR >			
CC30	1-127-876-11	CERAMIC	0.01uF 10% 50V (AEP, UK, SP, AUS)
CC31	1-127-876-11	CERAMIC	0.01uF 10% 50V (AEP, UK, SP, AUS)
< CONNECTOR >			
CNP610	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P	
CNP611	1-779-978-11	PIN, CONNECTOR 3P	
< DIODE >			
D810	8-719-971-34	DIODE 1SS133T	
< TRANSISTOR >			
Q810	8-729-920-69	TRANSISTOR	2SC1740
< RESISTOR >			
R810	1-249-404-00	CARBON	82 5% 1/4W
R811	1-249-421-11	CARBON	2.2K 5% 1/4W
< RESISTOR >			
RR30	1-249-393-11	CARBON	10 5% 1/4W (AEP, UK, SP, AUS)
RR31	1-249-393-11	CARBON	10 5% 1/4W (AEP, UK, SP, AUS)
< RELAY >			
RY610	1-755-170-11	RELAY (12V)	

Ref. No.	Part No.	Description	Remark
< TERMINAL >			
* TM610	1-537-240-21	TERMINAL BOARD (CHECKER PIN)	(SPEAKERS)
*****			
SPEAKER C/SB BOARD *****			
< CAPACITOR >			
CC16	1-127-876-11	CERAMIC	0.01uF 10% 50V (AEP, UK, SP, AUS)
CC17	1-127-876-11	CERAMIC	0.01uF 10% 50V (AEP, UK, SP, AUS)
< CONNECTOR >			
* CNP503	1-564-241-11	PIN, CONNECTOR (3.96mm PITCH) 4P	
< DIODE >			
D510	8-719-991-33	DIODE 1SS133T-72	
< COIL >			
L571	1-420-872-52	COIL, AIR-CORE	
L751	1-420-872-52	COIL, AIR-CORE	
< TRANSISTOR >			
Q550	8-729-119-78	TRANSISTOR	2SC1740S-QRT
< RESISTOR >			
R531	1-249-421-11	CARBON	2.2K 5% 1/4W
△ R534	1-249-404-00	CARBON	82 5% 1/4W
△ R578	1-249-389-11	CARBON	4.7 5% 1/4W
△ R751	1-249-389-11	CARBON	4.7 5% 1/4W
< RESISTOR >			
△ RR16	1-249-393-11	CARBON	10 5% 1/4W (AEP, UK, SP, AUS)
△ RR17	1-249-393-11	CARBON	10 5% 1/4W (AEP, UK, SP, AUS)
< RELAY >			
RY501	1-755-170-11	RELAY (12V)	
< TERMINAL >			
TM501	1-780-215-11	TERMINAL BOARD (SP) (4P)	(SURROUND BACK / CENTER)
*****			
A-1084-334-A		STANDBY BOARD, COMPLETE (US, CND)	
A-1084-405-A		STANDBY BOARD, COMPLETE	(AEP, UK, SP, AUS)
A-1084-975-A		STANDBY BOARD, COMPLETE (E51)	
A-1084-987-A		STANDBY BOARD, COMPLETE (MX)	
*****			
< CAPACITOR >			
C913	1-127-888-11	CERAMIC	0.1uF 10% 50V

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--



# STR-K870P

**VIDEO**   **VIDEO3**

Ref. No.	Part No.	Description	Remark
		< DIODE >	
D203	8-719-991-33	DIODE 1SS133T-72	
D204	8-719-991-33	DIODE 1SS133T-72	
		< IC >	
IC203	6-701-890-01	IC NJM2595D	
IC804	8-759-245-79	IC TA79005S	
IC807	8-759-231-53	IC TA7805S	
		< JACK >	
J200	1-794-978-11	JACK, PIN 3P (VIDEO 1 / VIDEO 2 / DVD)	
J201	1-815-043-11	JACK, PIN 2P (VIDOE 1 / MONITOR)	
		< RESISTOR >	
R200	1-247-804-11	CARBON      75      5%      1/4W	
R201	1-247-804-11	CARBON      75      5%      1/4W	
R218	1-247-804-11	CARBON      75      5%      1/4W	
R219	1-247-804-11	CARBON      75      5%      1/4W	
R220	1-247-804-11	CARBON      75      5%      1/4W	
R221	1-247-804-11	CARBON      75      5%      1/4W	
*****			
		VIDEO3 BOARD	
		*****	
		< CAPACITOR >	
C293	1-127-888-11	CERAMIC      0.1uF      10%      50V	
C294	1-127-888-11	CERAMIC      0.1uF      10%      50V	
C298	1-162-286-31	CERAMIC      220PF      10%      50V	
C299	1-162-286-31	CERAMIC      220PF      10%      50V	
		< CONNECTOR >	
CN201	1-784-922-11	PIN, CONNECTOR 5P	
		< JACK >	
J298	1-819-187-11	PIN JACK 3P (VIDEO 3 INPUT)	
		< RESISTOR >	
R298	1-247-831-91	CARBON      1K      5%      1/4W	
R299	1-247-831-91	CARBON      1K      5%      1/4W	
		< FLAT CABLE >	
* W290	1-690-880-31	LEAD (WITH CONNECTOR)	
*****			
		MISCELLANEOUS	
		*****	
△ 59	1-696-847-22	CORD, POWER (AUS)	
△ 59	1-783-820-11	CORD, POWER (US, CND)	
△ 59	1-823-767-12	CORD, POWER (AEP, UK)	
△ 59	1-823-767-22	CORD, POWER (E51, SP)	
△ 59	1-829-627-11	POWER-SUPPLY CORD (MX)	
61	1-828-963-11	WIRE (FLAT TYPE) (11 CORE)	
		(EXCEPT AEP, UK)	
61	1-828-980-11	WIRE (FLAT TYPE) (15 CORE) (AEP, UK)	
62	1-828-972-11	WIRE (FLAT TYPE) (13 CORE)	
△ F901	1-532-388-32	FUSE T2AL/250V (AEP, UK, MX, SP, AUS)	

Ref. No.	Part No.	Description	Remark
△ F901	1-532-464-32	FUSE 2.5A/125V (E51)	
△ F901	1-533-420-11	FUSE, GLASS CYLINDRICAL (DIA.5) 4A/125V (US, CND)	
Q503	6-702-390-01	IC MN2488-OPY-MK	
Q504	6-702-391-01	IC MP1620-OPY-MK	
Q533	6-702-390-01	IC MN2488-OPY-MK	
Q534	6-702-391-01	IC MP1620-OPY-MK	
Q603	6-702-390-01	IC MN2488-OPY-MK	
Q604	6-702-391-01	IC MP1620-OPY-MK	
Q653	6-702-390-01	IC MN2488-OPY-MK	
Q654	6-702-391-01	IC MP1620-OPY-MK	
Q703	6-702-390-01	IC MN2488-OPY-MK	
Q704	6-702-391-01	IC MP1620-OPY-MK	
Q753	6-702-390-01	IC MN2488-OPY-MK	
Q754	6-702-391-01	IC MP1620-OPY-MK	
△ T901	1-443-523-11	POWER TRANSFORMER (MX)	
△ T901	1-443-524-11	POWER TRANSFORMER (US, CND)	
△ T901	1-443-525-11	POWER TRANSFORMER (AEP, UK, SP, AUS)	
△ T901	1-443-526-11	POWER TRANSFORMER (E51)	
TN1	1-693-675-11	TUNER UNIT (E51, MX)	
TN1	1-693-675-21	TUNER UNIT (US, CND)	
TN1	1-693-676-21	TUNER UNIT (AEP, UK)	
TN1	1-693-678-11	TUNER UNIT (SP, AUS)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

MEMO

